

2. The top must seal against the windshield frame Fig. 147 5 and door windows.

## ising and Lowering Convertible Top

30 BO

## Lowering

- 1. Roll down windows or open d
- 2. Release front hold down latch


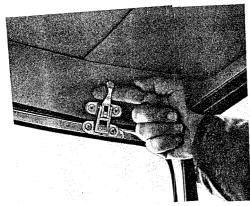


Fig. 149

3. Raise front portion of top and bo fold the top back.

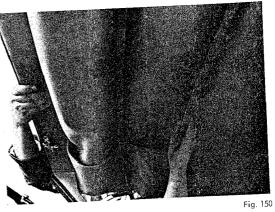

4. Raise the canvas between the first and second bow so that the two can come together. The canvas should hang smoothly between the front frame and first bow.