

Economy Rigid Wall Installation Manual



Safety and Handling

All items have been carefully packaged and inspected before crating. Please use caution when unpacking to prevent scratching or damage.

Before beginning installation, be sure to inspect all components and be sure everything is accounted for.

Use only proper tools for assembly and installation.

Tool List

Tape Measure	Step Ladder	Extension Cord	Hammer	Phillips Screw Driver
Vacuum	5/32 T-Handle Hex Wrench	Rags	Drill	Pencil
* 1/4 Masonry Bit	* Hammer Drill			
<i>* for installation into concrete floors</i>				

General Installation Tips and Tricks

Begin installation by putting together

- A corner section of Rigid Wall
- A Rigid Wall against a wall, beam, or post
- A Rigid Wall against a cabinet.

Then work outward or around the containment.

Mount the Rigid Walls to the cabinets or wall as needed to provide rigidity so Rigid Wall does not flex due to differential pressures of the ventilation system.

Parts List

Item	Part Number	Description
1	HDW-401415	Joining Strip
2	HDW-400121	Angled Economy Panel Bracket 2.25 inch
3	FAS-100094	Phillips Pan Head Sheet Metal Screw, #8 x 1/2
4	FAS-100097	1/4-20 x 1/2 Button Head Socket Cap Screw
5	NUT-000109	Drop-In Quarter Turn T-Nut, 1/4-20
6	VelcroH	Velcro Hook, Adhesive
7	VelcroL	Velcro Loop Adhesive
8	FAS-100093	Self Drilling Screw, #12 x 1
9	FAS-100084	Sheet Metal Screw, #10 x 1 1/2
10	FAS-100085	Anchor, #10 -12



Item 1




Item 2




Item 3



Item 4



Item 5



Items 6 & 7



Item 8



Item 9




Item 10

How to Install Drop-in Quarter Turn T-Nuts


1. Twist the screw a couple turns into the t-nut.
2. Insert the t-nut into the slot.

3. Turn screw clockwise to twist the t-nut into the slot.

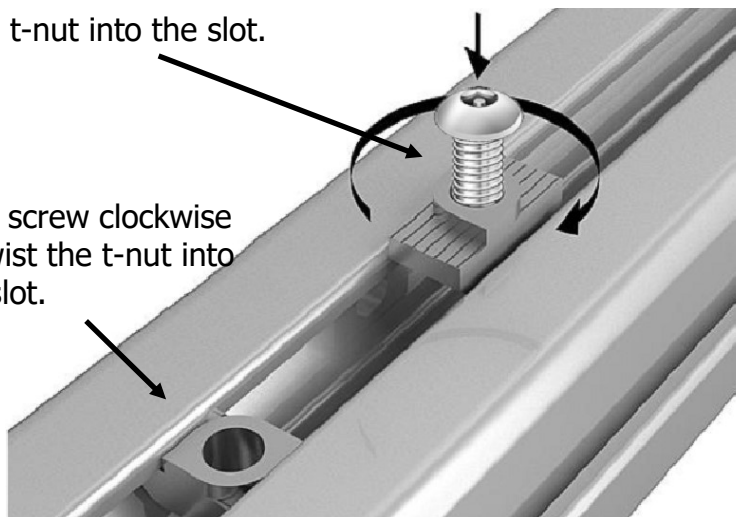


4. Make sure t-nut has fully turned 90 degrees in the slot.

Connecting with joining strips

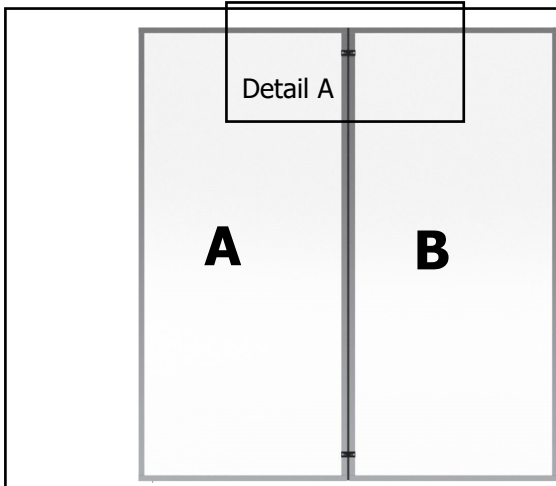


Detail A

A **B**

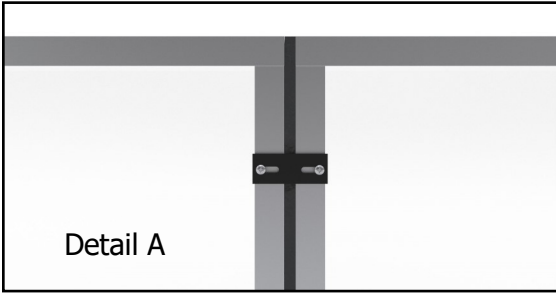


Detail A

Line the pre-drilled holes in the rigid wall up together. There should be a 3/8 inch gap between the rigid walls.

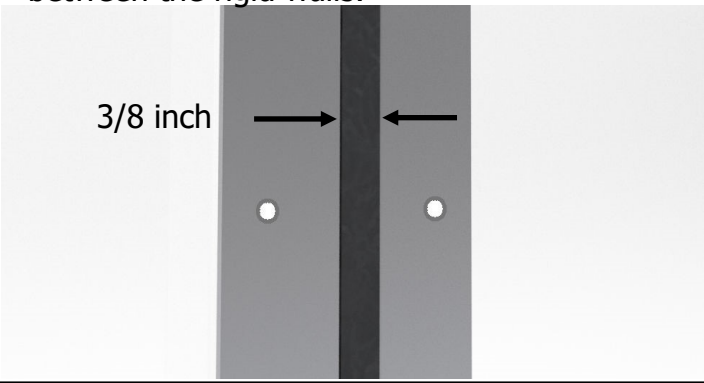


3/8 inch

Use one Joining Strip (item 1) and two sheet metal screws (item 4) to attach the rigid walls together. **Do not over tighten**

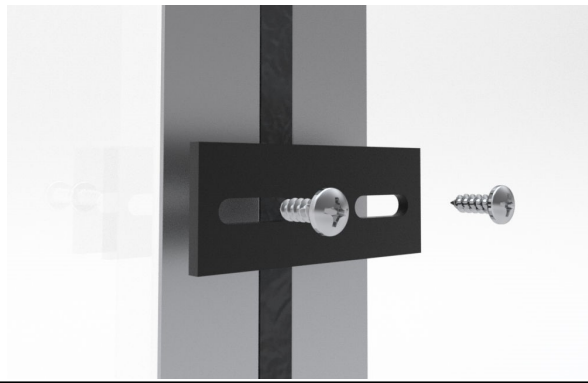

Connecting to overhead con-

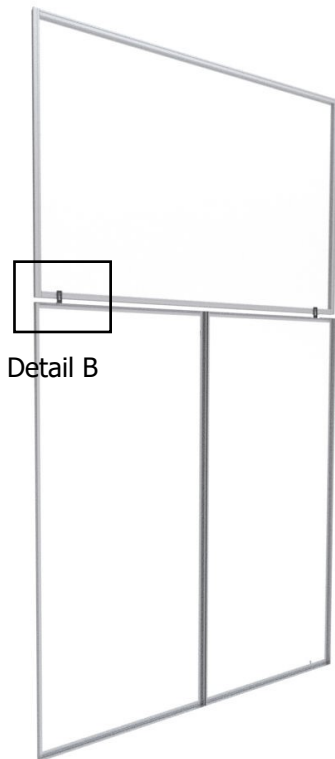

Attach the mounting bracket (item 2) through pre-drilled hole to the top of the rigid wall using a pane head screw (item 4). **Do not over tighten**

Connect to overhead containment using drop-in quarter turn t-nut (item 6) and 1/4-20 x 3/8 screw (item 5).



Attaching to the floor Option 1: Velcro

1. Attach the hook and loop Velcro pieces together.



2. Remove the backing from one side of the Velcro pieces




3. Attach the Velcro pieces to the bottom of the rigid wall.



4. Remove the backing from the Velcro on the bottom of the frame.




5. Carefully place rigid wall in place pressing sticky side of Velcro to the floor.

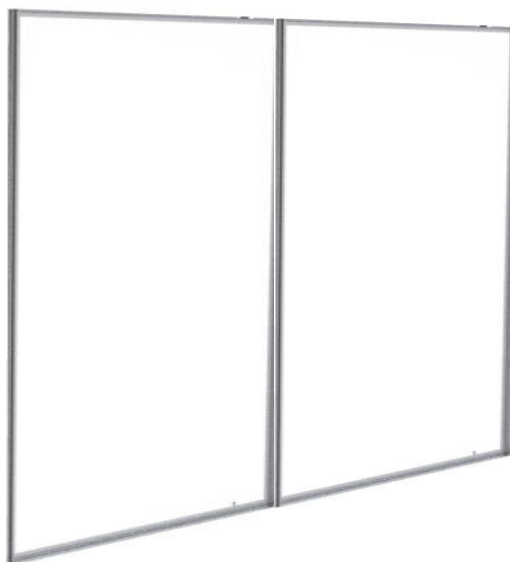


Attaching to the floor Option 2: Self Tapping Screw (raised floors)

Using the self tapping hex head screw (item 3), place the panel in its location and secure to floor through pre-drilled hole.

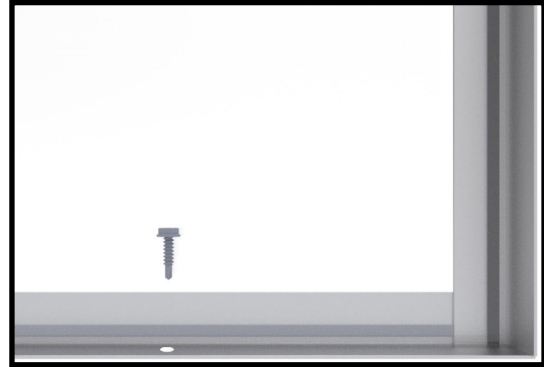


Attaching to the floor Option 2: Screw and anchor (concrete floors)


1. Mark the hole location on the floor.

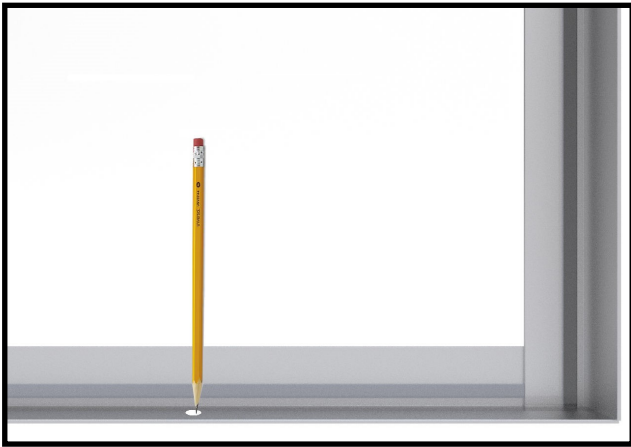


2. Slide the panel back and drill a 1/4 inch hole.

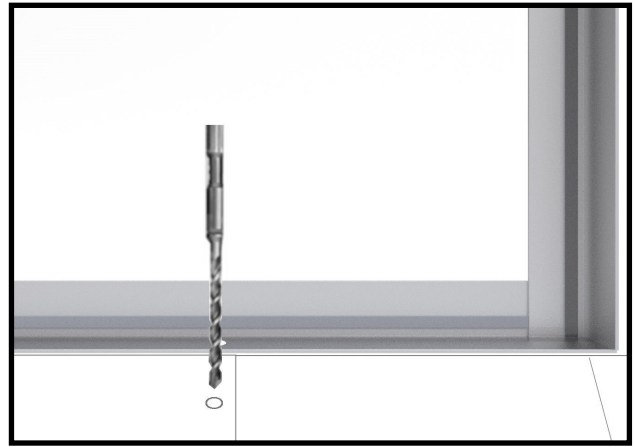

3. Insert the plastic anchor (item 8) into the hole.

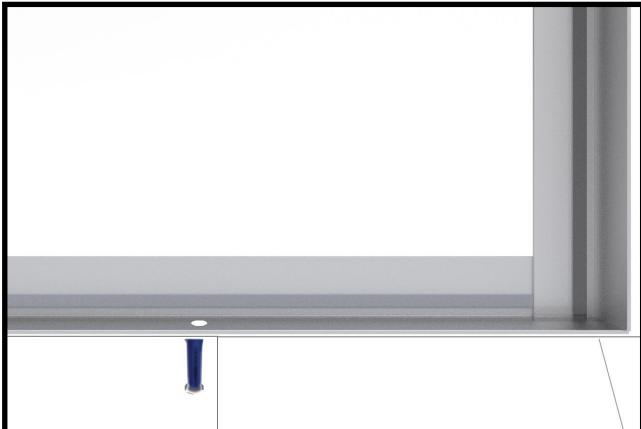

4. Slide the panel back into place and attach with #10 sheet metal screw (item 7).

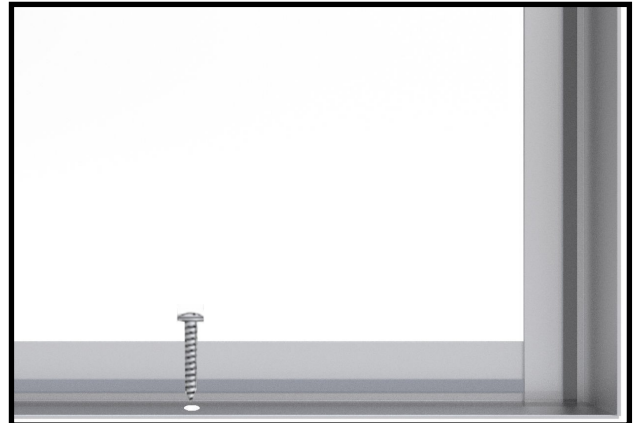

Maintenance

Polycarbonate Cleaning and Maintenance Instructions

1. Use Easyfix anti-static Spray to dispel static after removing the protective film.
2. Remove dust from panels using a damp clean microfiber cloth.
3. Clean smudges or dirt from polycarbonate panels with a mild soap or detergent in warm water using a clean microfiber cloth or sponge. Rinse area with warm water after cleaning and dry with a chamois to prevent spots.

DO NOT:

- Use harsh chemicals, sprays, or creams, including ammonia, alcohol, and bleach.
- Use dirty or dusty cloths.
- Use paper towels or other paper based products for cleaning.
- Scrape sheets with squeegees, razor blades, or other instruments.
- Use scrub brushes, scouring pads, or other rough materials for cleaning.

To Remove Scratches

Use a heat gun. Move the heat gun back and forth slowly over the scratch approximately 2 inches above the polycarbonate. After several passes the scratch will no longer be visible. As soon as the scratch can no longer be seen, remove the heat from the surface.