




SSD-6000 Auto Close Single Sliding Door

SDC Locking Install Guide Appendix

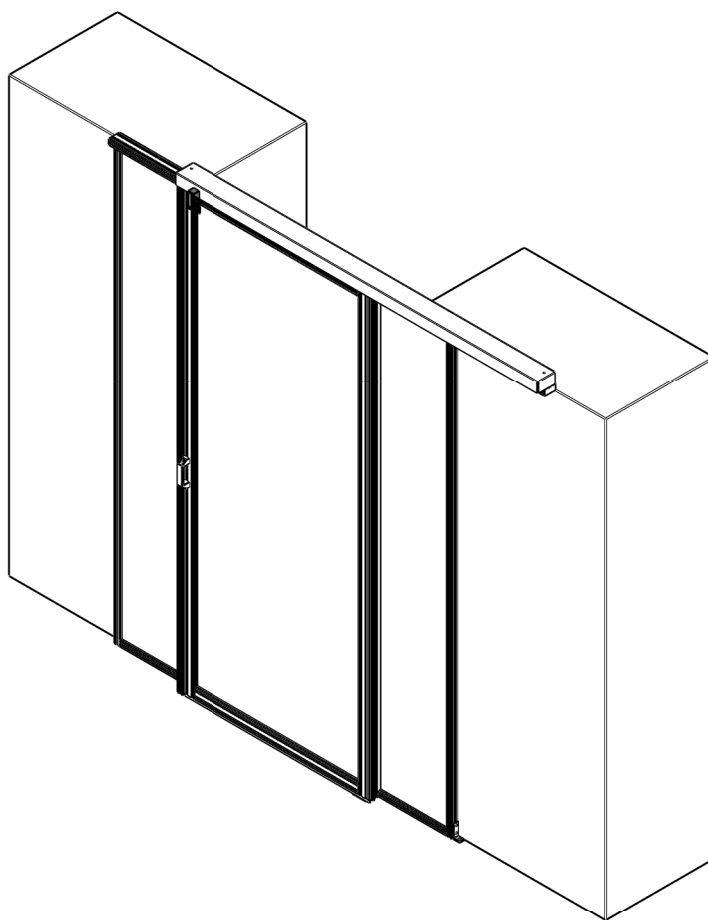


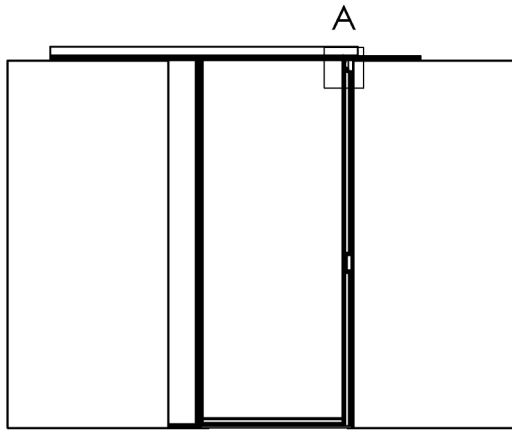

REAR VIEW




HDW-500227
(Attach to
Door Jamb)

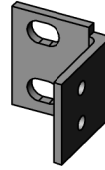

HDW-500228
(Attach to Door)


DO NOT PUT WIRES UNDER VALANCE

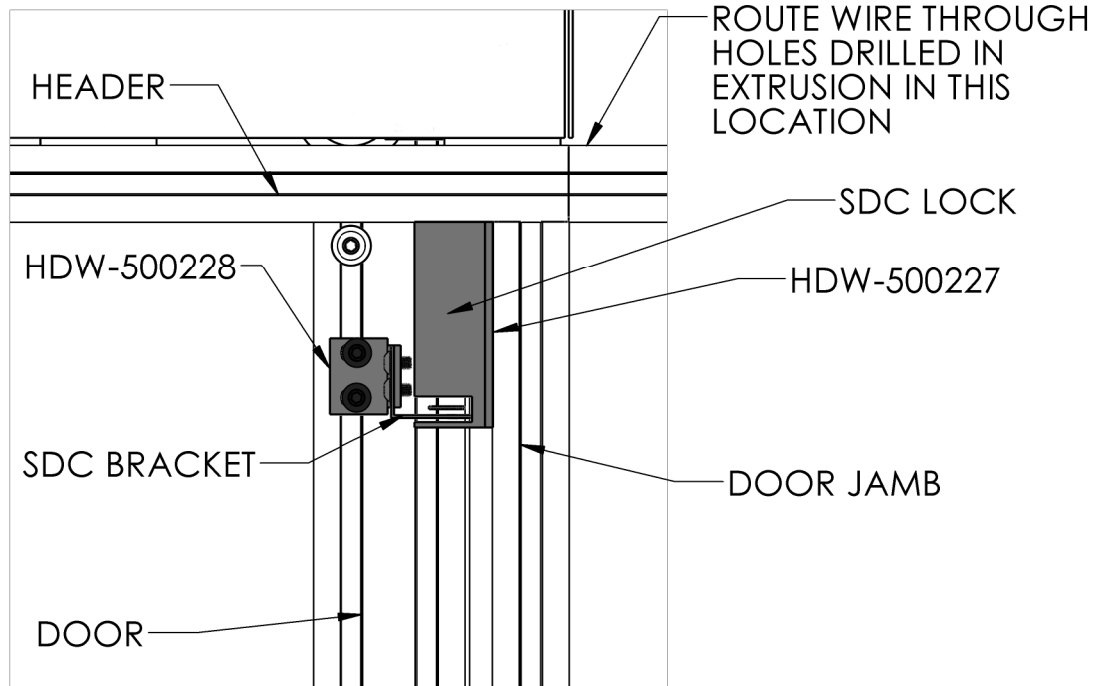


DETAIL A
REAR VIEW

NOTES:

1. DO NOT PLACE FIELD WIRING UNDER VALANCE
2. Unless specifically ordered, SDC Lock and SDC Bracket is not provided. Only the brackets and hardware for mounting SDC Lock to the Door is provided.
3. Attach SDC Lock to HDW-500227 and SDC bracket to HDW-500228. Reference page 3 for detailed view.
4. Route Field Wiring through holes drilled in Door Frame.

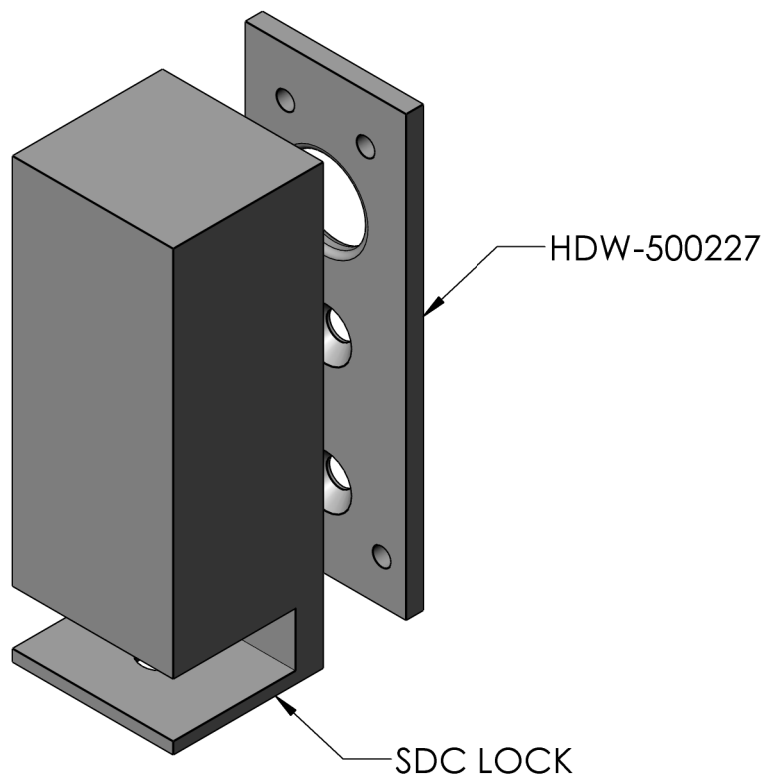

Attach HDW-500227 to the Door Frame and then secure the SDC lock to HDW-500227 using the flat head screws provided.

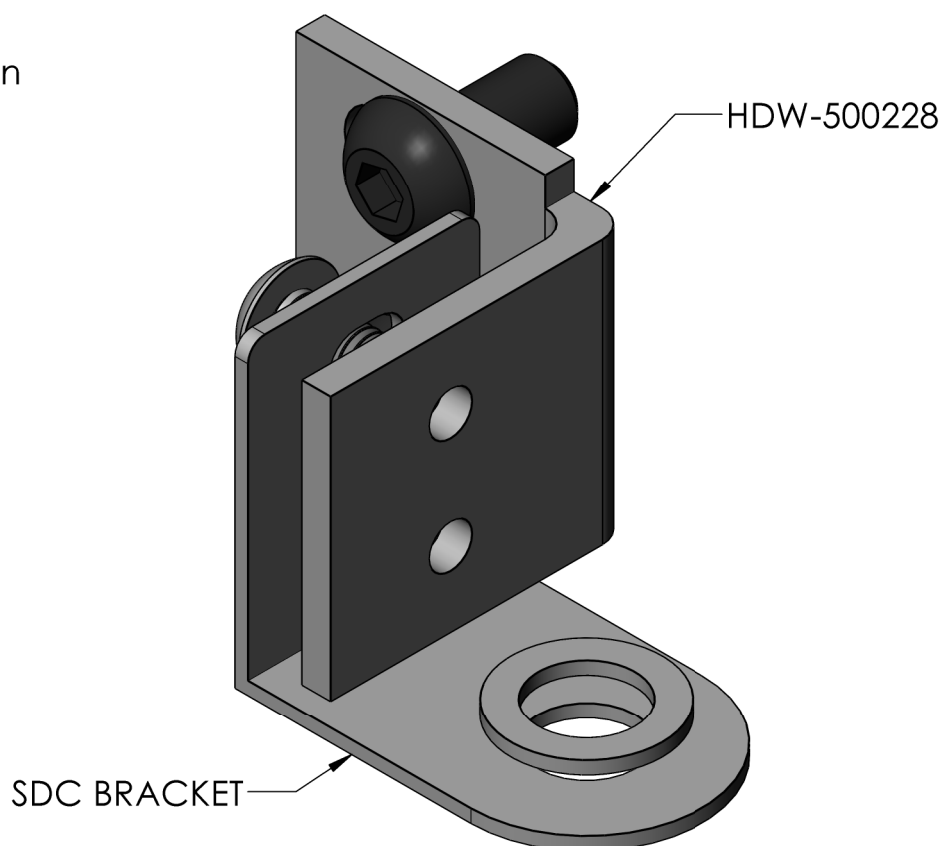

ATTACH SDC BRACKET TO HDW-500228 using the screws provided.