


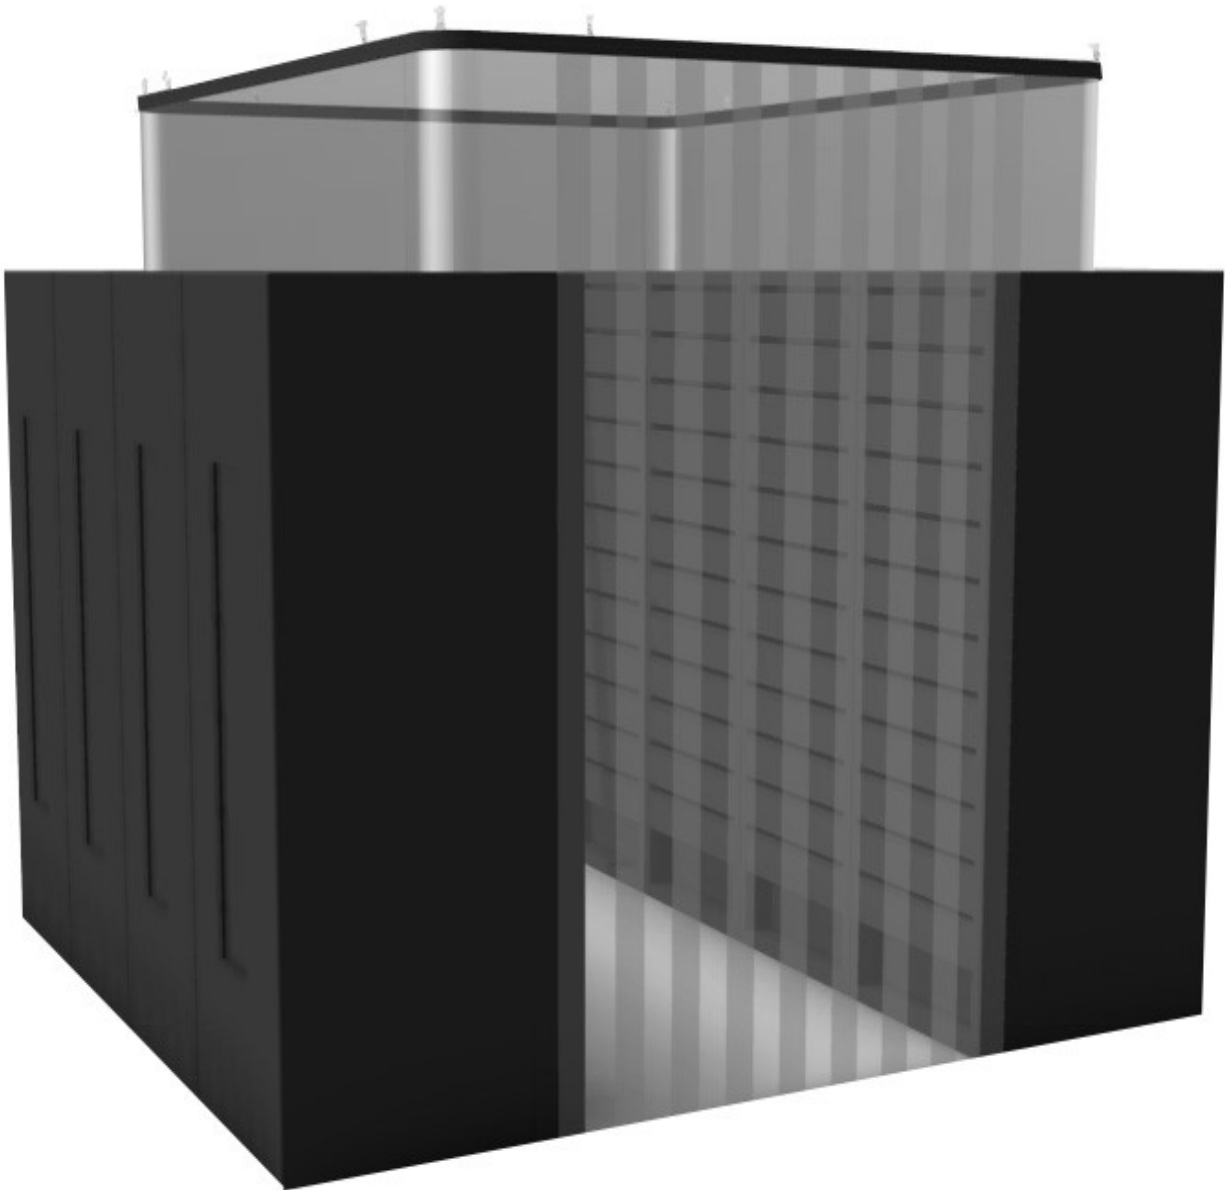


Thermal Wall and Door

Assembly and Installation Guide

Table of Contents

Safety and Handling	3
Tool List	3
Components List	3
Assembly and Installation Instructions	4-7
Care and Maintenance	8

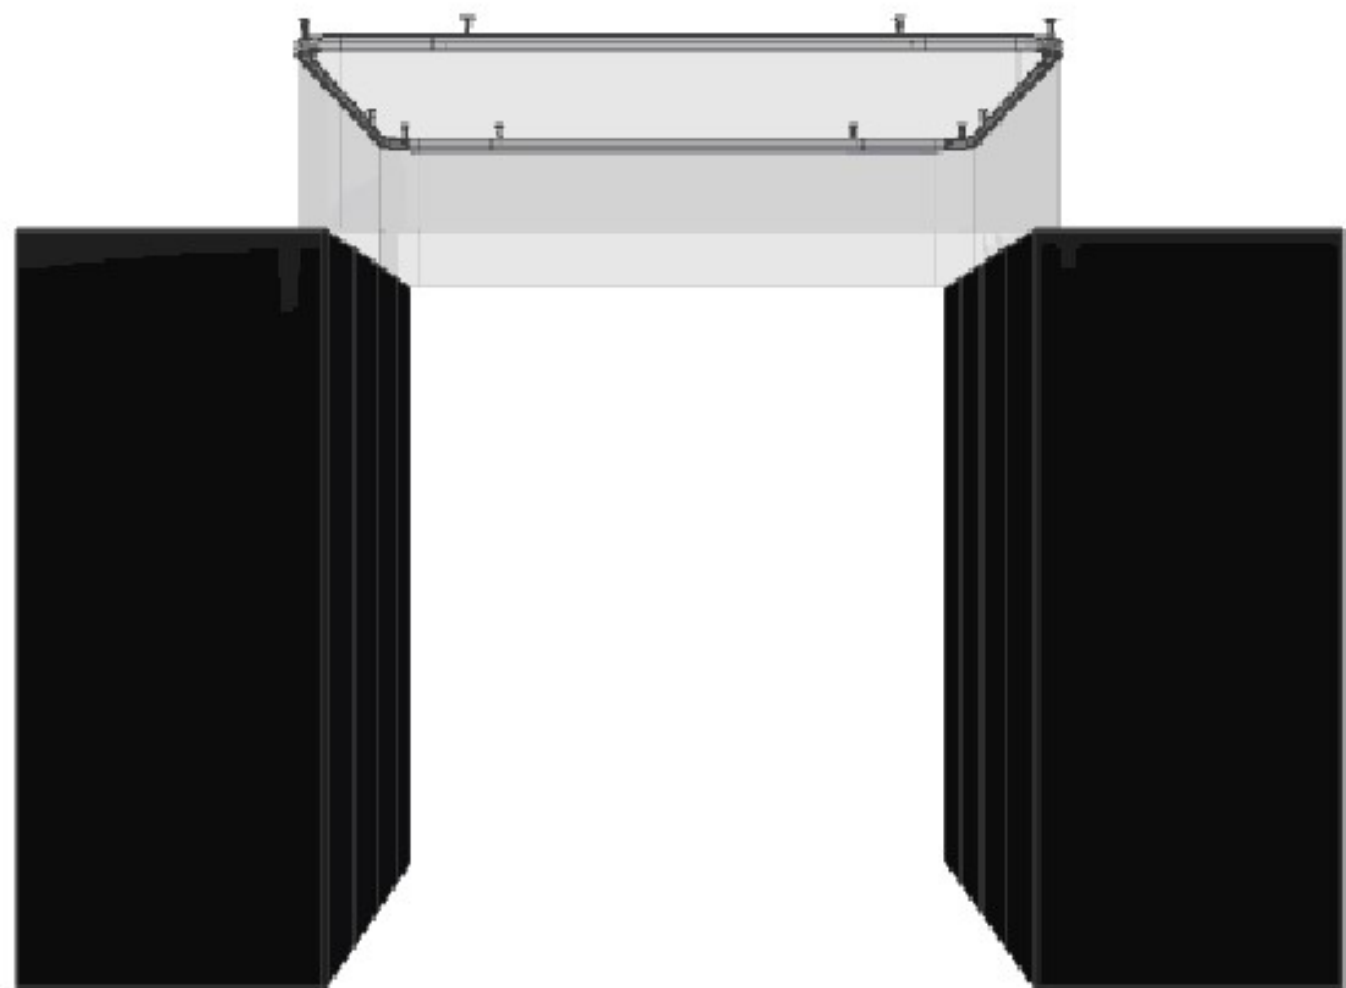

Safety & Handling

The Thermal Wall and Door kits have been carefully packaged and inspected before packaging. When unpacking the Thermal Walls and Doors, care should be taken as the vinyl curtains will scratch if laid on a rough or uneven surface. Inspect all components and be sure everything is included for assembly. Cotton gloves should be worn when handling the curtains to prevent finger prints and scratching.

Use only the proper and recommended tools for all assembly procedures.

All movement and assembly requires two persons for safety and protection of the vinyl curtains.

Tool List


Drill (corded/cordless)	extension cord	hammer
rubber mallet	4' level	tape measure
pencil or marker	utility knife	smooth file
cotton gloves	scissors	straight edge
level	plumb bulb	chalk line
hacksaw		

Component List

Each kit contains all the parts needed to hang one curtain (either Thermal Wall or Thermal Door).

2 - Fusible Link Assembly 	1 - Twin Wall Strip 	1 - Track splice 	2 - 8/32 Pan Head Sheet Metal Screw 
1 - Straight line track or radius corner track 	* track splice is typically pre-installed in one end of the track; sheet metal screws for attaching track splice to track are included separately in kits and hardware.		

Overview

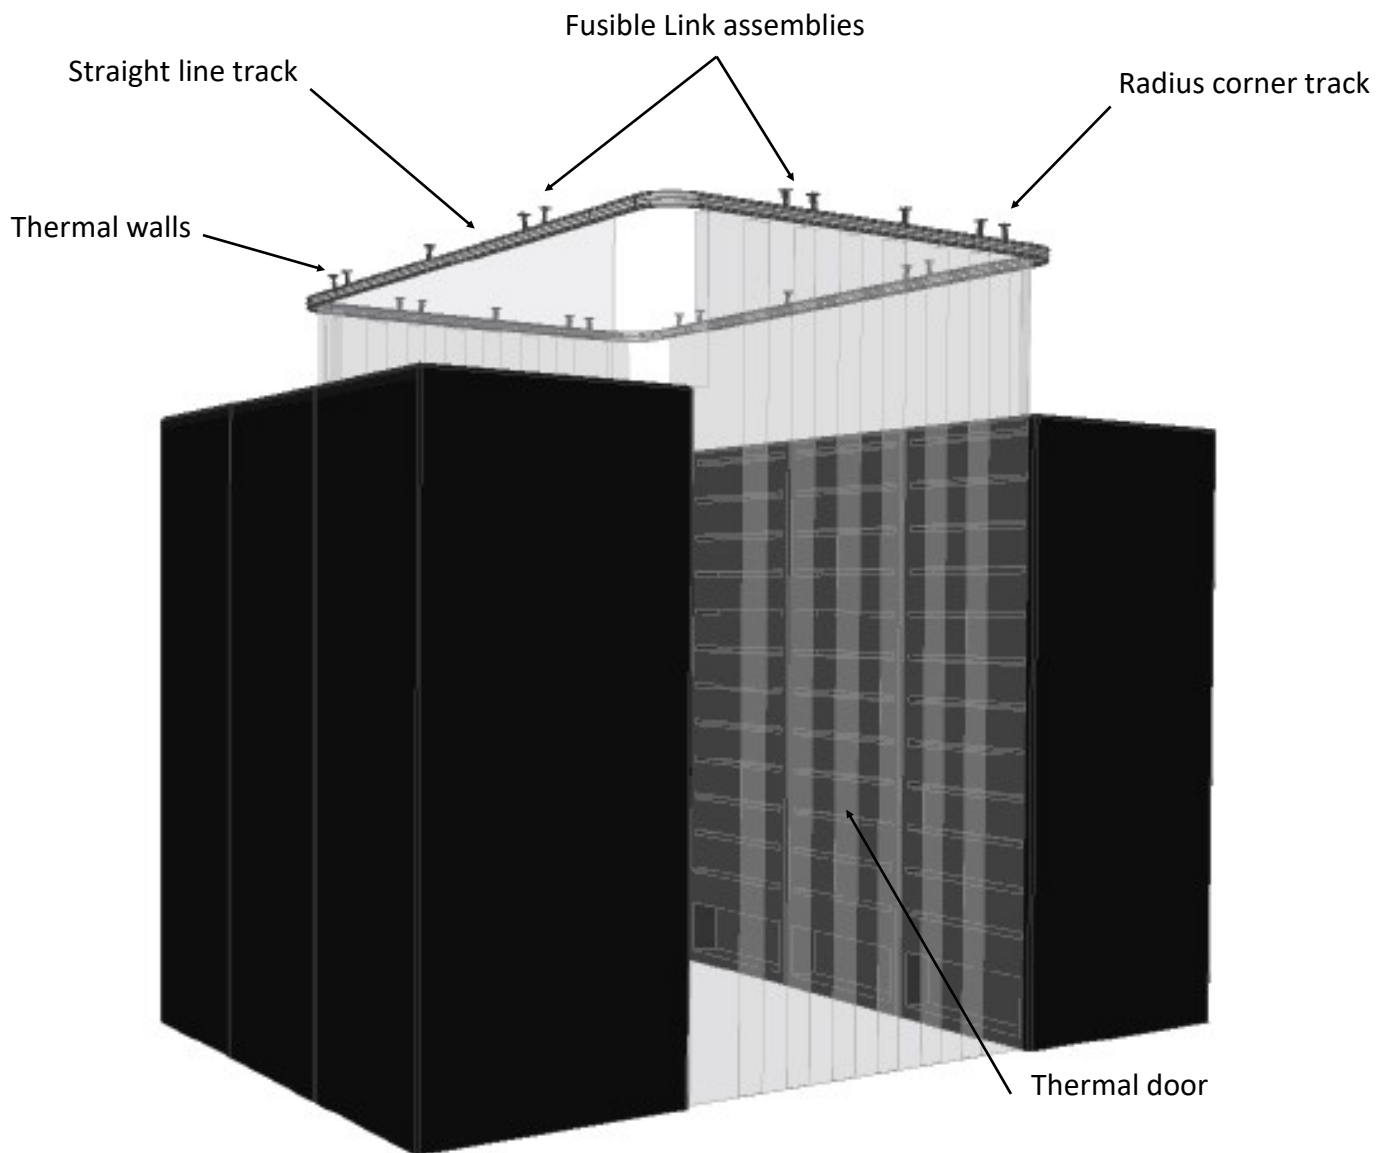


Getting Started

There are many methods of hanging the thermal walls and doors. These instructions detail how to hang the curtains and doors from a drop-in tile ceiling grid. The thermal walls and/or doors are manufactured in various sizes and lengths and have been configured to fill the space required to provide the desired air containment and separation. Curtains are typically hung above the server racks and Thermal Doors are hung in the aisles to fill the desired spaces between server racks, columns, and walls. During installation, completely hang each kit and then proceed to the next kit.


1. Install Fusible Links

The first step is to plumb between the ceiling and the desired position of the curtain and then install the Fusible Link Assemblies. It is best to start in a corner or against a wall and install one kit at a time (including the vinyl curtain). Then repeat the same procedure with the next curtain kit. Measure and determine the best place to begin working.

Fusible Link Assembly


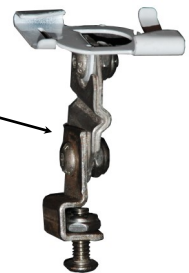


Attach the Fusible Link Assembly to the T-bar and twist into position. Determine the position for the next Fusible Link Assembly and repeat.

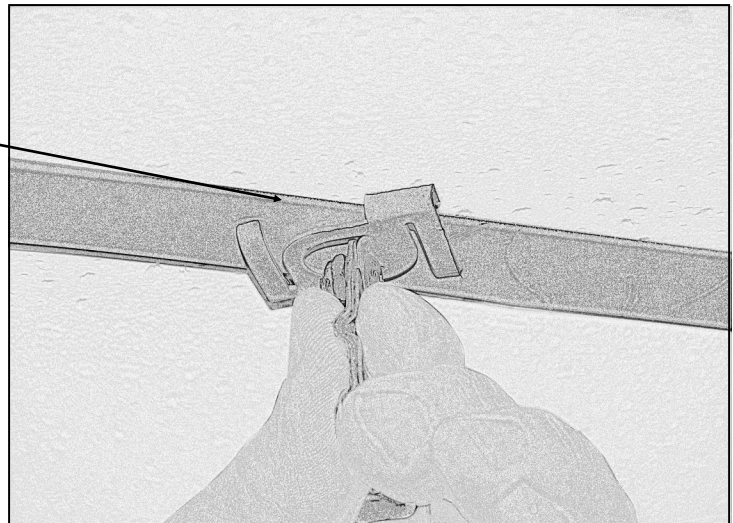


2. Install track onto fusible links

The top and bottom channel on the Tracks are identical. The bolt head on the Fusible Link Assembly slides into the top channel.

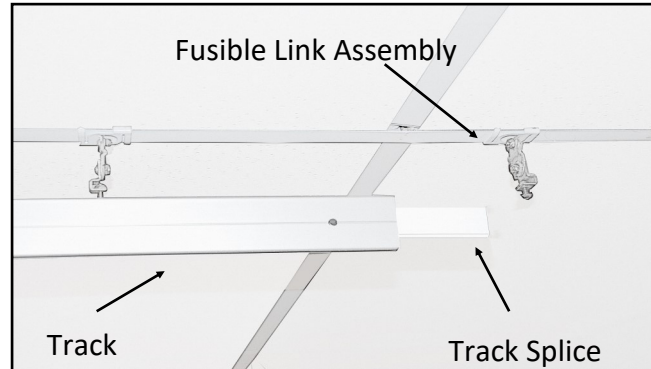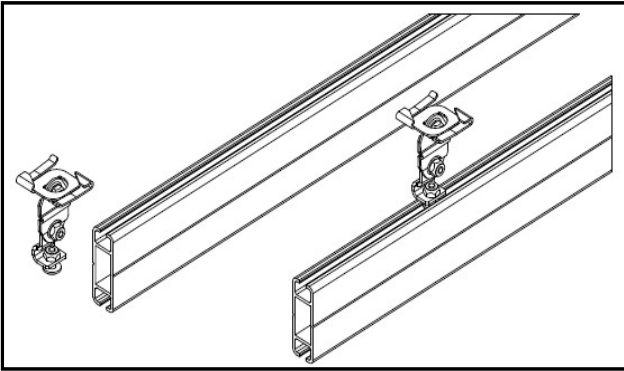

Connecting Track Together

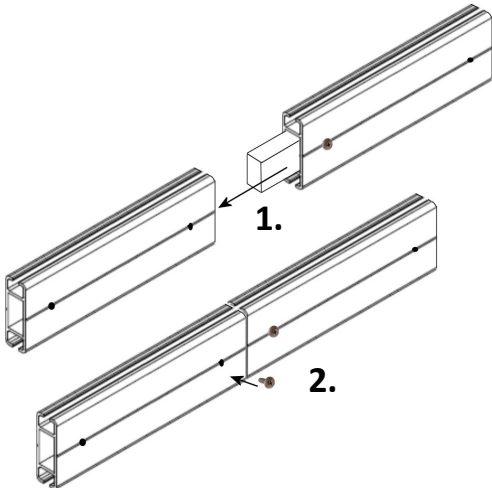

1. Insert track splice into track and slide together.
2. Screw 8/32 screw into track splice through pre-drilled hole


3. Slide curtain into track



Photo showing Vinyl Curtains in place on a radius corner

Note: It is recommended that one kit be installed at a time. After attaching the Fusible Link Assemblies and inserting the track into position, hang the curtain included with that kit. Then move on to the next kit and repeat the same procedure. Install the Corner Kit in the same manner.

4. Install the Twin-wall Polycarbonate Panels

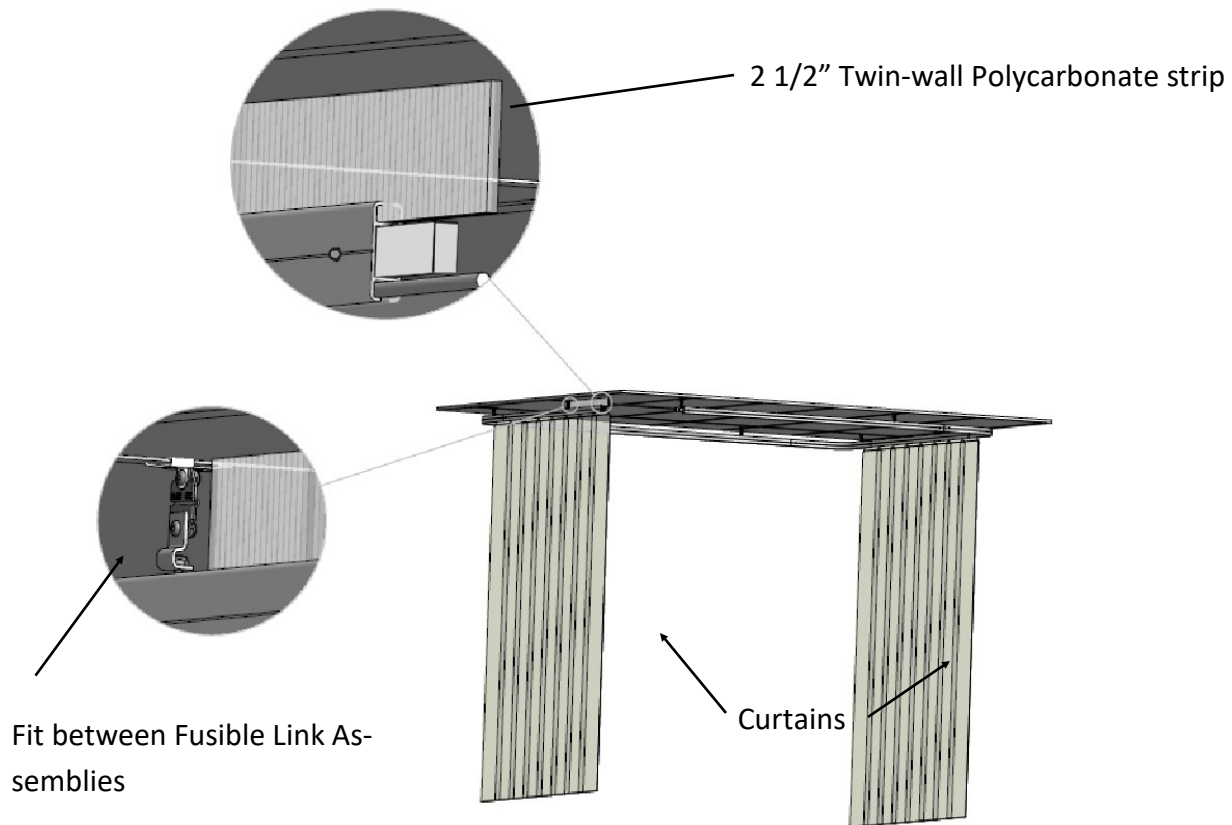

Installing the 2 1/2" twin-wall polycarbonate panels can be done as each curtain kit is installed or after the curtain installation is complete. The purpose of the 2 1/2" panels is to close off the air gap between the curtain track and the ceiling. One side of each 2 1/2" panel has been crimped for ease of installation. Cut the panel to the desired length, then set it on top of the track and press it into place. 2 1/2" panels for the radius have been factory cut to fit the curve in the radius track.

5. Cut and Trim the Vinyl Curtains

There are various methods for finishing the bottom of the curtains. They may be marked and cut flush to the top of the cabinet, cut two or three inches longer to lay on the cabinet or be attached mechanically to the cabinet. Sharp scissors should be used for all cutting. Use a chalk line or a straight edge and marker to mark cut line.

Care and Maintenance

The vinyl curtains should be cleaned with dish soap and water. No chemical products should be used as they draw the plasticizer to the surface. The aluminum frame should be cleaned likewise. Use of harsh chemicals or abrasive pads on the aluminum frame or the vinyl curtains will void any warranty on the product.

Revision Table

Change Description	Revision	Date
Complete re-write of document	1	16 Feb 20-16
Changed Care and Maintenance instruction to use dish soap and water	2	23 Feb 2016
Updated to include UHMW track splices	3	17 Mar 2022