

WEBENCH [®] Assembly Document

 $\begin{aligned} & \text{VinMin} = 12.0 \text{V} \\ & \text{VinMax} = 14.0 \text{V} \\ & \text{Vout} = 6.5 \text{V} \\ & \text{Iout} = 5.0 \text{A} \end{aligned}$

Device = TPS54622RHLR Topology = Buck Created = 3/27/17 6:06:45 AM BOM Cost = \$2.58 Total Pd = 2.14W Footprint = 277.0 mm² BOM Count = 15


Design: 957852/93 TPS54622RHLR TPS54622RHLR 12.0V-14.0V to 6.50V @ 5.0A

General Description


This is a WEBENCH assembly document for TPS54622RHLR to support the Build-It Lite feature offered by WEBENCH Power Designer Tool or the full Build-It feature that includes an orderable blank board from our distribution partners. This document serves as a basic guidance on mounting the Build-It kit components onto a blank board and provides the basic setups for testing the fully assembled evaluation module. For more information on the IC performance and other resource, please refer Design Assistance section below.

My Comments


No comments

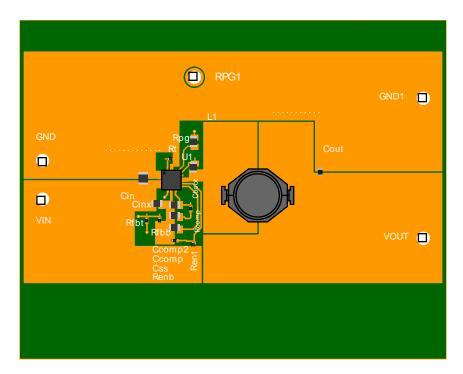

Top Layer

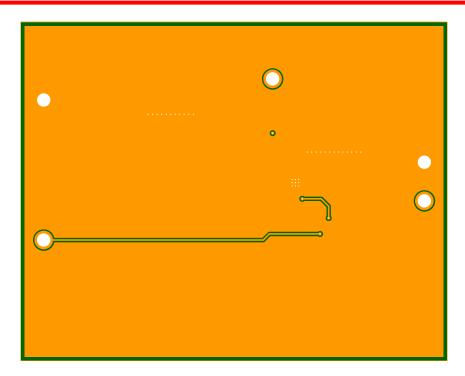

Bottom Layer

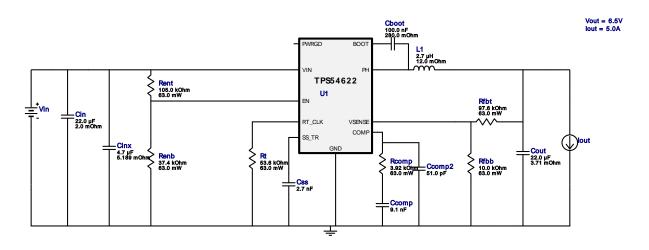

Mechanical BOM

#	WEBENCH Name	Altrium Comp Type	Part Name	FootPrint
1.	VIN		TP-1502	TP-1502
2.	GND		TP-1502	TP-1502
3.	RPG1		TP-1502	TP-1502
4.	GND1		TP-1502	TP-1502
5.	VOUT		TP-1502	TP-1502

Electrical BOM

#	Component Name(s)	Part Number	Part Number Manufacture		Unit Price	Top View	
1.	Rfbb	CRCW040210K0FKED	Vishay-Dale	1	\$0.1	0402 0.0	
2.	Ccomp	GRM2195C1H912JA01D	MuRata	1	\$0.36	0805 0.0	
3.	Css	CC0805KRX7R9BB272	Yageo America	1	\$0.1	0805 0.0	
4.	Cinx	GRM21BR61E475KA12L	MuRata	1	\$0.16		

#	Component Name(s)	Part Number	Manufacture	Qty	Unit Price	Top View
						0805 0.0
5.	Renb	CRCW040237K4FKED	Vishay-Dale	1	\$0.1	0402 0.0
6.	Ccomp2	CL21C510JBANNNC	Samsung Electro- Mechanics	1	\$0.1	0805 0.0
7.	Rt	CRCW040253K6FKED	Vishay-Dale	1	\$0.1	0402 0.0
8.	Cboot	08053C104KAT2A	AVX	1	\$0.1	0805 0.0
9.	U1	TPS54622RHLR	Texas Instruments	1	\$4.79	S-PVQFN-N14 0.0
10.	Cin	GRM32ER61E226KE15L	MuRata	1	\$0.67	1210 0.0
11.	Rcomp	CRCW04023K92FKED	Vishay-Dale	1	\$0.1	0402 0.0
12.	Rfbt	CRCW040297K6FKED	Vishay-Dale	1	\$0.1	0402 0.0
13.	L1	NPI31P2R7MTRF	NIC Components	1	\$0.0	
						IND_NPI31P 0.0
14.	Cout	C1608X5R1A226M080AC	TDK	1	\$0.49	0603 0.0
15.	Rent	CRCW0402105KFKED	Vishay-Dale	1	\$0.1	0402 0.0

Component Testing

Some published data on components in datasheets such as Capacitor ESR and Inductor DC resistance is based on conservative values that will guarantee that the components always exceed the specification. For design purposes it is usually better to work with typical values. Since this data is not always available it is a good practice to measure the Capacitance and ESR values of Cin and Cout, and the inductance and DC resistance of L1 before assembly of the board. Any large discrepancies in values should be electrically simulated in WEBENCH to check for instabilities and thermally simulated in WebTHERM to make sure critical temperatures are not exceeded.

Soldering Component to Board

If board assembly is done in house it is best to tack down one terminal of a component on the board then solder the other terminal. For surface mount parts with large tabs, such as the DPAK, the tab on the back of the package should be pre-tinned with solder, then tacked into place by one of the pins. To solder the tab town to the board place the iron down on the board while resting against the tab, heating both surfaces simultaneously. Apply light pressure to the top of the plastic case until the solder flows around the part and the part is flush with the PCB. If the solder is not flowing around the board you may need a higher wattage iron (generally 25W to 30W is enough).

Initial Startup of Circuit

It is best to initially power up the board by setting the input supply voltage to the lowest operating input voltage 12.0V and set the input supply's current limit to zero. With the input supply off connect up the input supply to Vin and GND. Connect a digital volt meter and a load if needed to set the minimum lout of the design from Vout and GND. Turn on the input supply and slowly turn up the current limit on the input supply. If the voltage starts to rise on the input supply continue increasing the input supply current limit while watching the output voltage. If the current increases on the input supply, but the voltage remains near zero, then there may be a short or a component misplaced on the board. Power down the board and visually inspect for solder bridges and recheck the diode and capacitor polarities. Once the power supply circuit is operational then more extensive testing may include full load testing, transient load and line tests to compare with simulation results.

Load Testing

The setup is the same as the initial startup, except that an additional digital voltmeter is connected between Vin and GND, a load is connected between Vout and GND and a current meter is connected in series between Vout and the load. The load must be able to handle at least rated output power + 50% (7.5 watts for this design). Ideally the load is supplied in the form of a variable load test unit. It can also be done in the form of suitably large power resistors. When using an oscilloscope to measure waveforms on the prototype board, the ground leads of the oscilloscope probes should be as short as possible and the area of the loop formed by the ground lead should be kept to a minimum. This will help reduce ground lead inductance and eliminate EMI noise that is not actually present in the circuit.



Design Inputs

	9 1 2 2 2		
#	Name	Value	Description
1.	lout	5.0 A	Maximum Output Current
2.	VinMax	14.0 V	Maximum input voltage
3.	VinMin	12.0 V	Minimum input voltage
4.	Vout	6.5 V	Output Voltage
5.	base_pn	TPS54622	Base Product Number
6.	source	DC	Input Source Type
7.	Та	30.0 degC	Ambient temperature

Design Assistance

1. **TPS54622** Product Folder: http://www.ti.com/product/TPS54622: contains the data sheet and other resources.

Texas Instruments' WEBENCH simulation tools attempt to recreate the performance of a substantially equivalent physical implementation of the design. Simulations are created using Texas Instruments' published specifications as well as the published specifications of other device manufacturers. While Texas Instruments does update this information periodically, this information may not be current at the time the simulation is built. Texas Instruments does not warrant the accuracy or completeness of the specifications or any information contained therein. Texas Instruments does not warrant that any designs or recommended parts will meet the specifications you entered, will be suitable for your application or fit for any particular purpose, or will operate as shown in the simulation in a physical implementation. Texas Instruments does not warrant that the designs are production worthy.

You should completely validate and test your design implementation to confirm the system functionality for your application prior to production.

Use of Texas Instruments' WEBENCH simulation tools is subject to Texas Instruments' Site Terms and Conditions of Use. Prototype boards based on WEBENCH created designs are provided AS IS without warranty of any kind for evaluation and testing purposes and are subject to the terms of the Evaluation License Agreement.