OSLO Doublet Optimization Tutorial

August 2010

A. Setting up the lens starting point


- 1. Make new lens using the file name Example_Doublet, custom lens, and 4 surfaces.
- 2. Open the surface spreadsheet editor.
- 3. Optional: enter lens name (such as "Doublet Set-Up Example").
- 4. Optional: set name for designer under general operating conditions ("Gen" button on lens editor spreadsheet).
- 5. Set lens entrance beam radius of 15 (default units are mm).
- 6. Set field angle of 1-degree (default units of degrees, this is the half field-of-view).
- 7. Click the wavelength button on the surface data spreadsheet and verify traditional visual wavelengths specified (d, F, C spectral lines). Note the order affects some calculations and should be in that order (central wavelength first).
- 8. Verify the object distance is set to infinity(> 1e+8), the object is in air, and that the first surface is the aperture stop (it is named AST and says AS under the aperture radius). This means we will have the aperture stop in front of the lens.
- 9. Enter the following information for the lens surfaces:

Surface 2 – radius 69, thickness 7, glass BK7;

Surface 3 – radius –40, thickness 3, glass SF2;

Surface 4 – radius –130, thickness solve for paraxial image location by clicking on the box to the right of the IMS (Surface 5) and set the axial ray height to zero, keep glass as air.

10. At this juncture, click on the lens drawing icon and select plan view (in the graphics window). The lens should look like the following figure (except for the DES field):

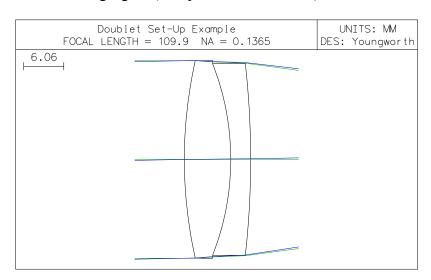

11. Clicking on the "Len", "Rin", and "Wav" button in the text window should yield

*LENS DATA
Doublet Example

SRF RADIUS THICKNESS APERTURE RADIUS GLASS SPE NOTE

OBJ -- 1.0000e+20 1.7455e+18 AIR

AST -- 15.000000 AS AIR

2 69.000000 7.000000 15.000000 S BK7 C 3 -40.000000 3.000000 14.562072 S SF2 C 4 -130.000000 105.208319 S 14.476056 S AIR

IMS -- 1.917831 S

*REFRACTIVE INDICES

SR	RF GLASS	CATALOG	RN1	RN2	RN3	VN.	BR	TCE
0	AIR	1.000000	1.000000	1.000000				
1	AIR	1.000000	1.000000	1.000000		236.0	00000	
2	BK7	1.516800	1.522376	1.514322	64.1	66410	71.000	0000
SCHOTT OLD								
3	SF2	1.647689	1.661232	1.642096	33.84	47676	84.000	000
	SCHOTT							
4	AIR	1.000000	1.000000	1.000000		236.0	00000	
5	5 IMAGE SURFACE							

*WAVELENGTHS

CURRENT WV1/WW1 WV2/WW2 WV3/WW3

1 0.587560 0.486130 0.656270 1.000000 1.000000 1.000000

12. Clicking on "Pxc" yields gives the following paraxial data

*PARAXIAL CONSTANTS

Effective focal length: 109.872475 Lateral magnification: -1.0987e-18 Numerical aperture: 0.136522 Gaussian image height: 1.917831 Working F-number: 3.662416 Petzval radius: -150.321801

Lagrange invariant: -0.261826

B. Setting up variables, the error function, and optimizing the design

13. We will now enter variables for optimization. Click on the variables button in the lens data entry spreadsheet. Enter the following data:

Variable 1: surf 2, cfg 0, type cv, keep rest default

Variable 2: surf 2, cfg 0, type th, minimum 6, maximum 8, keep rest default

Variable 3: surf 3, cfg 0, type cv, keep rest default

Variable 4: surf 3, cfg 0, type th, minimum 2, maximum 4, keep rest default

Variable 5: surf 5, cfg 0, type th, minimum 0, maximum 0, keep rest default

Use the green check mark to "accept" changes to this spreadsheet and exit.

(Also can use vary all curvatures, vary all thicknesses, or just use the buttons to the right of radius and thickness cells in the surface data sheet as wannted.)

14. Note we did not set the last surface thickness or curvature to be variables. Instead the last surface

thickness is going to remain the paraxial focus and the image surface will then hold the defocus from that position. Additionally, the last radius of curvature will now be set to fix the focal length or equivalently the f-number of the lens.

First, click on the blue window box in the upper corner of the text window and toggle on "aberrations". This will open some new buttons; click on "Pxs" which shows:

*PARAXIAL SETUP OF LENS

APERTURE

Entrance beam radius: * 15.000000 Image axial ray slope: -0.136522 Object num. aperture: 1.5000e-19 F-number: 3.662416 Image num. aperture: 0.136522 Working F-number: 3.662416

FIELD

Field angle: * 1.000000 Object height: -1.7455e+18 Gaussian image height: 1.917831 Chief ray ims height: 1.917831 CONJUGATES

 Object distance:
 1.0000e+20
 Srf 1 to prin. pt. 1:
 1.878806

 Gaussian image dist.:
 105.208319
 Srf 4 to prin. pt. 2:
 -4.664156

 Overall lens length:
 10.000000
 Total track length:
 1.0000e+20

 Paraxial magnification:
 -1.0987e-18
 Srf 4 to image srf:
 105.208319

OTHER DATA

Entrance pupil radius: 15.000000 Srf 1 to entrance pup.: -Exit pupil radius: 15.260961 Srf 4 to exit pupil: -6.575648
Lagrange invariant: -0.261826 Petzval radius: -150.321801

Effective focal length: 109.872475

SPOT DIAGRAMS

Aperture divisions: 17.030000 Gaussian apod. spec.: Off X 1/e^2 entr. irrad.: 1.000000 Y 1/e^2 entr. irrad.: 1.000000

The image axial ray slope is the number needed. If we set the axial ray angle after the last surface to this value, and keep the entrance beam radius fixed, it will effectively hold the EFL and consequently the f-number stationary as the system optimizes.

Click on the desired number (next to "Image axial ray slope", in this case -0.136522) in the text window and you will get a cell number that holds the data. Make a note of the cell number. Next, click on the box to the right of the radius number for surface 4, move to solves, and select "axial ray angle". A prompt box then opens; enter the cell number you noted (a letter followed by a number with no space). Now a solve is on the last physical lens surface radius of curvature that serves the purpose of holding the focal length and lens f-number.

- 15. We're now ready to set up an error function for optimization. In the menu, select Optimize>>Generate Error Function>>OSLO Spot Size/Wavefront. It pulls up a window with a number of options. Only change the color correction method to CHR/DMD and hit "ok". This has generated a spot size error function that includes chromatic aberration effects but no physical constraints or distortion (as this is the default). To view the operands, use the command "ose" or select the menu option Optimize>>Operands.
- 16. Use the green check marks to exit each spreadsheet capturing the changes. Save the lens as a

starting point. Use "Save As" under the file menu and save the lens with a new name, such as adding "_Opt" to the file to preserve the starting point file.

- 17. We can now optimize the lens using damped-least squares (DLS), which depends on the starting point of the lens design. Select Optimize>>Iterate (or type "ite" in the command line) to run 10 cycles of DLS, noting the marginal improvement (reduction) in the error function value. Running it a second time shows no improvement.
- 18. Assessing the lens by clicking on the "Graphics ray analysis" button on the graphics window, it is clear that it dominated by monochromatic spherical aberration. The only thing that can really be done with this form and constraints is to use defocus. Having the other variables active tends to bog down the effect of defocus in this case because the best focus is so far from the paraxial location. There are three options to alleviate this issue:
- delete the unwanted variables knowing we can add them back in later,
- adjust the damping on variables to effectively "freeze" them (advanced).

We'll opt for deleting variables this time. First, use the green check mark to accept the data in the surface data spreadsheet (and also this accepts data in the variables spreadsheet. Then, open the surface data spreadsheet again. Click on the variables button and delete all of the variables except the thickness of the last surface (Surface 5). Now accept the changes from this spreadsheet and use the menu Optimize>>Iteration again (no more than 2-3 times should be necessary). At this point, select "Len" in the text window which prints the values of lens data. Make a note of the cell that contains the image surface thickness (i.e. the defocus). Now hit the Red X button and Undo all the changes. Reopen the surface data spreadsheet, select the cell for the image surface thickness, and type in the cell name that contains the optimized value for the defocus. You now will have the variables all maintained in the variables spreadsheet and a defocused lens that is optimized.

(Alternatively in this step, you can just delete all of the variables, optimize, and add them back into the variables spreadsheet manually.)

19. Save this lens as a spherical solution. Next, use "Save As" under the file menu and save the lens with a new name, such as adding "_Asph" to the file to preserve the spherical solution file.

C. Making the doublet better

20. There are a few options to make the lens better. For the sake of showing more about OSLO, we will try an asphere to reduce the spherical aberration. Since the front surface of the doublet is coincidental with the stop (note the thickness of surface 1 is zero), we will use that surface.


First, so that the program recognizes that you want to make the first surface an asphere, open the surface data spreadsheet. Click the last box to the right (under special) for the first surface in the lens (SRF 2) and select Polynomial Asphere (A) >> Standard Symmetric Asphere. Then, enter a very small value into the 4th order deformation coefficient, such as 1e-20. This has no practical effect on the surface shape but now OSLO recognizes it is an asphere. Next, go to the variables spreadsheet and you will now be able to enter a new line 6 variable, the r⁴ aspheric deformation coefficient:

Variable 6: surf 2, cfg 0, type ad, minimum 0, maximum 0, keep rest default

21. With the new aspheric variable defined, reoptimize with Optimize>>Iterate (or ite). Note that in this case we again are bogged down, but we know we should be able to make progress. It turns out that the same challenges associated with defocus are problematic here. In this case we will alter the damping values of the variables to "freeze".

Open the variables spreadsheet using the variables button and increase the damping cell values for Variables 1-5 to 1e+8. Leave the aspheric coefficient damping value at 1. Close the variable spreadsheet and set the defocus value to zero (surface 5 thickness). Next, optimize with Optimize>>Iterate but be sure to change the last value in the pop up menu, "Reset variable damping factors to 1.0" to zero. Repeat (you can use the command history or the command "ite ful 10 std y n") until the optimizer settles on a value. To see the aspheric coefficient value in the text window, select Lens>>Show Surface Data, select special data, and use the pull-down menu to choose "Conic/aspheric data" in the pop-up menu and hit ok. Use the green check mark to exit out of the surface data spreadsheet.

22. Check the lens performance by clicking on the "Graphics ray analysis" button on the graphics window. If the lens is still defocused from the spherical solution, enter zero for the defocus (surface 5) and replot the ray analysis. You should see a lens with significant improvement. My result is below:

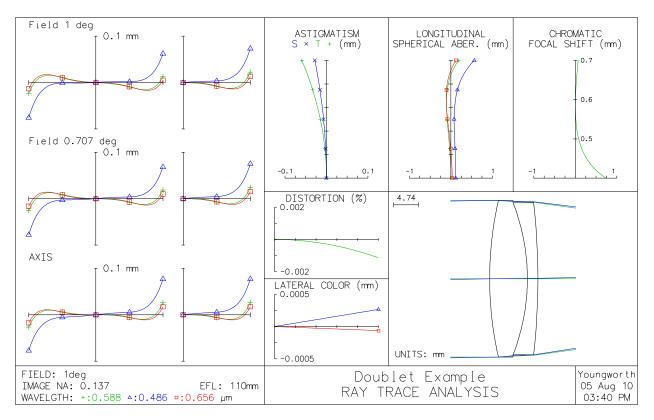

23. Run the DLS optimizer (Optimize>>Iterate or just the command "ite") to reset the variables' damping all to unity. Save the resulting system to conclude the tutorial.

Handy Tips

- Lenses are the document in OSLO. You can open them with a text editor in order to get a listing of commands in a script to generate the file. This is very handy to copy data from one file to another very quickly.
- For a "real" job, the apertures can be set to values larger than the bundle values and "checked" to block light that should not get through (vignetted bundles). Design values would be rounded off for drawings and limits to errors assessed, along with analysis and tolerancing of the lens.

- OSLO has preferences which apply to the entire program and operating conditions that are set for individual lens files. This tutorial only explicitly covered operating conditions.
- The program also includes many extra analysis and features to aid with optical engineering tasks. For a good user intro, see the OSLOUserGuide.pdf from the Lambda website (www.lambdares.com). This guide is very valuable for beginning users. The guide is found on the website under OSLO and Releases.
- Two examples are also on the website under OSLO and Examples. They are "First OSLO Session Example" and "Schmidt Camera Example". The user guide contains a lot of similar information but these are supplemental tutorials to this doublet tutorial and more explicitly show the interaction with the OSLO interface.

OSLO core checklist for setting up a lens from scratch for optimization

- 1. Enter lens system data (entrance beam radius or equivalent, field angle or equivalent, wavelengths)
- 2. Enter lens data as needed (if not using a pre-existing starting point)
- 3. Define variables
- 4. Define merit function (note built-in options under Optimize>>Generate Error Function)
 There are many other features and settings that can be adjusted as required. This is just a fundamental list.