

**AMENDMENT NO. 1 SEPTEMBER 1996
TO
IS 13432 (Part 1) : 1992 GAS LEAK DETECTOR
FOR USE WITH LOW PRESSURE LIQUEFIED
PETROLEUM GAS BURNING APPLIANCES —
SPECIFICATION**

PART 1 MECHANICAL TYPE

(*First cover page and page 1*) — Substitute the following for the existing title:

**‘GAS LEAK INDICATOR FOR USE WITH LOW
PRESSURE LIQUEFIED PETROLEUM GAS
BURNING APPLIANCES — SPECIFICATION**

PART 1 MECHANICAL TYPE ’

(*All pages, General*) — Substitute word ‘indicator’ for ‘detector’ wherever appears.

(*Second cover page, Foreword*) — Insert the following after fourth para:

‘At present the products covered under this standard shall be certified along with the appliance and individual product certification shall be considered later.’

(*Page 1, clause 3.5, last line*) — Substitute ‘3.5.5’ for ‘3.5.6’.

(*Page 2, clause 4.4*) — Delete.

(*Page 2, clause 5.2, first line*) — Delete the words ‘For integral fitment model’.

(*Page 2, clause 5.5*) — Substitute the following for the existing:

“5.5 Sensitivity of Leak Indicator

The indicator shall be capable of detecting a leak of one bubble per 25 seconds when tested according to Annex B at a pressure of 2.942 kN/m^2 (30 gf/cm^2) and with the appliance. The indicator shall show ‘Leak’ when the time taken between successive bubbles is less than 25 seconds. The indicator shall not show ‘Leak’ when the time taken between successive bubbles is more than 25 seconds.

Amend No. 1 to IS 13432 (Part 1) : 1992

5.6 The dial shall indicate the words ' Normal' and 'Leak' so that the consumer gets instant indication for preventive action. 'Normal' and 'Leak' indication may also be indicated by green and red colours respectively.

5.7 Each leak indicator shall be supplied with an user's manual giving all the details for installation, principle of working, method of operation for finding the leak and the following limitations:

- a) Does not locate the leak,
- b) Does not prevent the leak,
- c) Does not give audible alarm,
- d) Does not indicate leak when the appliance is in operation,
- e) Works only under the specified procedures,
- f) Calibration at a pressure of 2.942 kN/m^2 (30 gf/cm^2), and
- g) Leakage indication according to the time mentioned in this manual."

(Page 3, clause 7.2) — Delete.

(Page 4, Annex A) — Insert the following Annex at the end:

'ANNEX B
(Clause 5.5)

METHOD OF TEST FOR SENSITIVITY OF LEAK INDICATOR

B-1 Procedure

B-1.1 Test the Appliance for Sensitivity by the Following Method

B-1.1.1 Subject the appliance to be tested to an air supply at a pressure of 2.942 kN/m^2 (30 gf/cm^2) with the bubble leak indicator (see Fig. 1) in the air supply line. Adjust the time between two successive bubbles as 25 seconds by creating an artificial leak through needle valve or any other device. Cut off the air supply to the appliance to confine system pressure. Then observe the indication in the gas leak indicator.

Amend No. 1 to IS 13432 (Part 1) : 1992

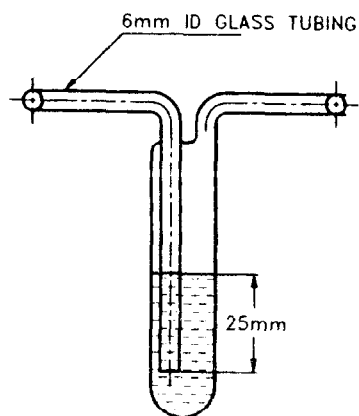


FIG. 1 BUBBEL LEAK INDICATOR

(HMD 23)