ETSI TS 138 413 V19.4.0 (2026-09)



TECHNICAL SPECIFICATION

5G;
NG-RAN;
NG Application Protocol (NGAP)
(3GPP TS 38.413 version 19.4.0 Release 19)

Reference
RTS/TSGR-0338413vj40

Keywords
5G

ETSI

650 Route des Lucioles
F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - APE 7112B
Association à but non lucratif enregistrée à la
Sous-Préfecture de Grasse (06) N° w061004871

Important notice

The present document can be downloaded from the
ETSI Search & Browse Standards application.

The present document may be made available in electronic versions and/or in print. The content of any electronic and/or print versions of the present document shall not be modified without the prior written authorization of ETSI. In case of any existing or perceived difference in contents between such versions and/or in print, the prevailing version of an ETSI deliverable is the one made publicly available in PDF format on ETSI deliver repository.

Users should be aware that the present document may be revised or have its status changed, this information is available in the Milestones listing.

If you find errors in the present document, please send your comments to the relevant service listed under Committee Support Staff.

If you find a security vulnerability in the present document, please report it through our Coordinated Vulnerability Disclosure (CVD) program.

Notice of disclaimer & limitation of liability

The information provided in the present deliverable is directed solely to professionals who have the appropriate degree of experience to understand and interpret its content in accordance with generally accepted engineering or other professional standard and applicable regulations.
No recommendation as to products and services or vendors is made or should be implied.
No representation or warranty is made that this deliverable is technically accurate or sufficient or conforms to any law and/or governmental rule and/or regulation and further, no representation or warranty is made of merchantability or fitness for any particular purpose or against infringement of intellectual property rights.
In no event shall ETSI be held liable for loss of profits or any other incidental or consequential damages.

Any software contained in this deliverable is provided "AS IS" with no warranties, express or implied, including but not limited to, the warranties of merchantability, fitness for a particular purpose and non-infringement of intellectual property rights and ETSI shall not be held liable in any event for any damages whatsoever (including, without limitation, damages for loss of profits, business interruption, loss of information, or any other pecuniary loss) arising out of or related to the use of or inability to use the software.

Copyright Notification

No part of this document may be reproduced in any form, by any means and in any media, without the prior written authorization of ETSI and except as expressly permitted below.
By way of exception and when the document is a normative deliverable (European Standard (EN), Technical Specification (TS), Group Specification (GS) or ETSI Standard (ES)), ETSI authorizes to reproduce and incorporate into products, services and technical documentation only those extracts (e.g. templates) that are strictly necessary for the technical implementation of the normative deliverable, to ensure compliance with the latter.
Nothing in this notice shall be construed as limiting any mandatory exceptions to copyright provided by applicable law.

© ETSI 2026.
All rights reserved.

Intellectual Property Rights

Essential patents

IPRs essential or potentially essential to normative deliverables (European Standard (EN), Technical Specification (TS), Group Specification (GS) or ETSI Standard (ES)) may have been declared to ETSI. The declarations pertaining to these essential IPRs, if any, are publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: *"Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards"*, which is available from the ETSI Secretariat. Latest updates are available on the ETSI IPR online database.

Pursuant to the ETSI Directives including the ETSI IPR Policy, no investigation regarding the essentiality of IPRs, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

Trademarks

The present document may include trademarks and/or tradenames which are asserted and/or registered by their owners. ETSI claims no ownership of these except for any which are indicated as being the property of ETSI, and conveys no right to use or reproduce any trademark and/or tradename. Mention of those trademarks in the present document does not constitute an endorsement by ETSI of products, services or organizations associated with those trademarks.

DECT™, **PLUGTESTS™**, **UMTS™** and the ETSI logo are trademarks of ETSI registered for the benefit of its Members. **3GPP™**, **LTE™** and **5G™** logo are trademarks of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners. **oneM2M™** logo is a trademark of ETSI registered for the benefit of its Members and of the oneM2M Partners. **GSM**® and the GSM logo are trademarks registered and owned by the GSM Association.

Legal Notice

This Technical Specification (TS) has been produced by ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities. These shall be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between 3GPP and ETSI identities can be found at 3GPP to ETSI numbering cross-referencing.

Modal verbs terminology

In the present document "**shall**", "**shall not**", "**should**", "**should not**", "**may**", "**need not**", "**will**", "**will not**", "**can**" and "**cannot**" are to be interpreted as described in clause 3.2 of the ETSI Drafting Rules (Verbal forms for the expression of provisions).

"**must**" and "**must not**" are **NOT** allowed in ETSI deliverables except when used in direct citation.

Contents

Intellectual Property Rights 2
Legal Notice 2
Modal verbs terminology 2
Foreword 21
1 Scope 22
2 References 22
3 Definitions and abbreviations 24
3.1 Definitions 24
3.2 Abbreviations 25
4 General 27
4.1 Procedure Specification Principles 27
4.2 Forwards and Backwards Compatibility 27
4.3 Specification Notations 27
5 NGAP Services 28
6 Services Expected from Signalling Transport 28
7 Functions of NGAP 28
8 NGAP Procedures 28
8.1 List of NGAP Elementary Procedures 28
8.2 PDU Session Management Procedures 32
8.2.1 PDU Session Resource Setup 32
8.2.1.1 General 32
8.2.1.2 Successful Operation 32
8.2.1.3 Unsuccessful Operation 37
8.2.1.4 Abnormal Conditions 37
8.2.2 PDU Session Resource Release 37
8.2.2.1 General 37
8.2.2.2 Successful Operation 37
8.2.2.3 Unsuccessful Operation 38
8.2.2.4 Abnormal Conditions 38
8.2.3 PDU Session Resource Modify 38
8.2.3.1 General 38
8.2.3.2 Successful Operation 39
8.2.3.3 Unsuccessful Operation 43
8.2.3.4 Abnormal Conditions 43
8.2.4 PDU Session Resource Notify 44
8.2.4.1 General 44
8.2.4.2 Successful Operation 44
8.2.4.3 Abnormal Conditions 45
8.2.5 PDU Session Resource Modify Indication 45
8.2.5.1 General 45
8.2.5.2 Successful Operation 46
8.2.5.3 Unsuccessful Operation 47
8.2.5.4 Abnormal Conditions 47
8.3 UE Context Management Procedures 48
8.3.1 Initial Context Setup 48
8.3.1.1 General 48
8.3.1.2 Successful Operation 48
8.3.1.3 Unsuccessful Operation 53
8.3.1.4 Abnormal Conditions 54
8.3.2 UE Context Release Request (NG-RAN node initiated) 54
8.3.2.1 General 54

8.3.2.2 Successful Operation....54
8.3.2.3 Abnormal Conditions....55
8.3.3 UE Context Release (AMF initiated)....55
8.3.3.1 General....55
8.3.3.2 Successful Operation....55
8.3.3.3 Unsuccessful Operation....56
8.3.3.4 Abnormal Conditions....56
8.3.4 UE Context Modification....56
8.3.4.1 General....56
8.3.4.2 Successful Operation....56
8.3.4.3 Unsuccessful Operation....60
8.3.4.4 Abnormal Conditions....61
8.3.5 RRC Inactive Transition Report....61
8.3.5.1 General....61
8.3.5.2 Successful Operation....61
8.3.5.3 Abnormal Conditions....61
8.3.6 Connection Establishment Indication....61
8.3.6.1 General....61
8.3.6.2 Successful Operation....62
8.3.6.3 Abnormal Conditions....63
8.3.7 AMF CP Relocation Indication....63
8.3.7.1 General....63
8.3.7.2 Successful Operation....63
8.3.7.3 Abnormal Conditions....63
8.3.8 RAN CP Relocation Indication....64
8.3.8.1 General....64
8.3.8.2 Successful Operation....64
8.3.8.3 Abnormal Conditions....64
8.3.9 Retrieve UE Information....64
8.3.9.1 General....64
8.3.9.2 Successful Operation....65
8.3.9.3 Abnormal Conditions....65
8.3.10 UE Information Transfer....65
8.3.10.1 General....65
8.3.10.2 Successful Operation....65
8.3.10.3 Abnormal Conditions....66
8.3.11 UE Context Suspend....66
8.3.11.1 General....66
8.3.11.2 Successful Operation....66
8.3.11.3 Unsuccessful Operation....67
8.3.11.4 Abnormal Conditions....67
8.3.12 UE Context Resume....67
8.3.12.1 General....67
8.3.12.2 Successful Operation....67
8.3.12.3 Unsuccessful Operation....68
8.3.12.4 Abnormal Conditions....68
8.3.13 MT Communication Handling....69
8.3.13.1 General....69
8.3.13.2 Successful Operation....69
8.3.13.3 Unsuccessful Operation....69
8.3.13.4 Abnormal Conditions....69
8.3.14 RAN Paging Request....70
8.3.14.1 General....70
8.3.14.2 Successful Operation....70
8.3.14.3 Abnormal Conditions....70
8.4 UE Mobility Management Procedures....70
8.4.1 Handover Preparation....70
8.4.1.1 General....70
8.4.1.2 Successful Operation....71
8.4.1.3 Unsuccessful Operation....73
8.4.1.4 Abnormal Conditions....73
8.4.2 Handover Resource Allocation....73

8.4.2.1 General 73
8.4.2.2 Successful Operation 74
8.4.2.3 Unsuccessful Operation 82
8.4.2.4 Abnormal Conditions 83
8.4.3 Handover Notification 83
8.4.3.1 General 83
8.4.3.2 Successful Operation 84
8.4.3.3 Abnormal Conditions 84
8.4.4 Path Switch Request 84
8.4.4.1 General 84
8.4.4.2 Successful Operation 84
8.4.4.3 Unsuccessful Operation 90
8.4.4.4 Abnormal Conditions 91
8.4.5 Handover Cancellation 91
8.4.5.1 General 91
8.4.5.2 Successful Operation 91
8.4.5.3 Unsuccessful Operation 91
8.4.5.4 Abnormal Conditions 91
8.4.6 Uplink RAN Status Transfer 91
8.4.6.1 General 91
8.4.6.2 Successful Operation 92
8.4.6.3 Abnormal Conditions 92
8.4.7 Downlink RAN Status Transfer 92
8.4.7.1 General 92
8.4.7.2 Successful Operation 92
8.4.7.3 Abnormal Conditions 93
8.4.8 Handover Success 93
8.4.8.1 General 93
8.4.8.2 Successful Operation 93
8.4.8.3 Abnormal Conditions 93
8.4.9 Uplink RAN Early Status Transfer 93
8.4.9.1 General 93
8.4.9.2 Successful Operation 94
8.4.9.3 Abnormal Conditions 94
8.4.10 Downlink RAN Early Status Transfer 94
8.4.10.1 General 94
8.4.10.2 Successful Operation 94
8.4.10.3 Abnormal Conditions 95
8.5 Paging Procedures 95
8.5.1 Paging 95
8.5.1.1 General 95
8.5.1.2 Successful Operation 95
8.5.1.3 Abnormal Conditions 96
8.5.2 Multicast Group Paging 96
8.5.2.1 General 96
8.5.2.2 Successful Operation 97
8.5.2.3 Abnormal Conditions 97
8.6 Transport of NAS Messages Procedures 97
8.6.1 Initial UE Message 97
8.6.1.1 General 97
8.6.1.2 Successful Operation 97
8.6.1.3 Abnormal Conditions 99
8.6.2 Downlink NAS Transport 99
8.6.2.1 General 99
8.6.2.2 Successful Operation 99
8.6.2.3 Abnormal Conditions 101
8.6.3 Uplink NAS Transport 101
8.6.3.1 General 101
8.6.3.2 Successful Operation 101
8.6.3.3 Abnormal Conditions 101
8.6.4 NAS Non Delivery Indication 101
8.6.4.1 General 101

8.6.4.2 Successful Operation 102
8.6.4.3 Abnormal Conditions 102
8.6.5 Reroute NAS Request 102
8.6.5.1 General 102
8.6.5.2 Successful Operation 102
8.6.5.3 Abnormal Conditions 103
8.7 Interface Management Procedures 103
8.7.1 NG Setup 103
8.7.1.1 General 103
8.7.1.2 Successful Operation 103
8.7.1.3 Unsuccessful Operation 105
8.7.1.4 Abnormal Conditions 105
8.7.2 RAN Configuration Update 106
8.7.2.1 General 106
8.7.2.2 Successful Operation 106
8.7.2.3 Unsuccessful Operation 108
8.7.2.4 Abnormal Conditions 108
8.7.3 AMF Configuration Update 108
8.7.3.1 General 108
8.7.3.2 Successful Operation 109
8.7.3.3 Unsuccessful Operation 110
8.7.3.4 Abnormal Conditions 110
8.7.4 NG Reset 111
8.7.4.1 General 111
8.7.4.2 Successful Operation 111
8.7.4.2.1 NG Reset initiated by the AMF 111
8.7.4.2.2 NG Reset initiated by the NG-RAN node 112
8.7.4.3 Unsuccessful Operation 113
8.7.4.4 Abnormal Conditions 113
8.7.4.4.1 Abnormal Condition at the 5GC 113
8.7.4.4.2 Abnormal Condition at the NG-RAN 113
8.7.4.4.3 Crossing of NG RESET Messages 114
8.7.5 Error Indication 114
8.7.5.1 General 114
8.7.5.2 Successful Operation 114
8.7.5.3 Abnormal Conditions 115
8.7.6 AMF Status Indication 115
8.7.6.1 General 115
8.7.6.2 Successful Operation 116
8.7.6.3 Abnormal Conditions 116
8.7.7 Overload Start 116
8.7.7.1 General 116
8.7.7.2 Successful Operation 116
8.7.7.3 Abnormal Conditions 117
8.7.8 Overload Stop 117
8.7.8.1 General 117
8.7.8.2 Successful Operation 118
8.7.8.3 Abnormal Conditions 118
8.7.9 NG Removal 118
8.7.9.1 General 118
8.7.9.2 Successful Operation 118
8.7.9.3 Unsuccessful Operation 119
8.7.9.4 Abnormal Conditions 119
8.8 Configuration Transfer Procedures 119
8.8.1 Uplink RAN Configuration Transfer 119
8.8.1.1 General 119
8.8.1.2 Successful Operation 119
8.8.1.3 Abnormal Conditions 120
8.8.2 Downlink RAN Configuration Transfer 120
8.8.2.1 General 120
8.8.2.2 Successful Operation 120
8.8.2.3 Abnormal Conditions 121

8.9 Warning Message Transmission Procedures 121
8.9.1 Write-Replace Warning 121
8.9.1.1 General 121
8.9.1.2 Successful Operation 121
8.9.1.3 Unsuccessful Operation 122
8.9.1.4 Abnormal Conditions 122
8.9.2 PWS Cancel 123
8.9.2.1 General 123
8.9.2.2 Successful Operation 123
8.9.2.3 Unsuccessful Operation 123
8.9.2.4 Abnormal Conditions 124
8.9.3 PWS Restart Indication 124
8.9.3.1 General 124
8.9.3.2 Successful Operation 124
8.9.3.3 Abnormal Conditions 124
8.9.4 PWS Failure Indication 124
8.9.4.1 General 124
8.9.4.2 Successful Operation 124
8.9.4.3 Abnormal Conditions 125
8.10 NRPPa Transport Procedures 125
8.10.1 General 125
8.10.2 Successful Operations 125
8.10.2.1 DOWNLINK UE ASSOCIATED NRPPA TRANSPORT 125
8.10.2.2 UPLINK UE ASSOCIATED NRPPA TRANSPORT 126
8.10.2.3 DOWNLINK NON UE ASSOCIATED NRPPA TRANSPORT 126
8.10.2.4 UPLINK NON UE ASSOCIATED NRPPA TRANSPORT 126
8.10.3 Unsuccessful Operations 126
8.10.4 Abnormal Conditions 127
8.11 Trace Procedures 127
8.11.1 Trace Start 127
8.11.1.1 General 127
8.11.1.2 Successful Operation 127
8.11.1.3 Abnormal Conditions 128
8.11.2 Trace Failure Indication 128
8.11.2.1 General 128
8.11.2.2 Successful Operation 128
8.11.2.3 Abnormal Conditions 129
8.11.3 Deactivate Trace 129
8.11.3.1 General 129
8.11.3.2 Successful Operation 129
8.11.3.3 Abnormal Conditions 129
8.11.4 Cell Traffic Trace 129
8.11.4.1 General 129
8.11.4.2 Successful Operation 130
8.11.4.3 Abnormal Conditions 130
8.12 Location Reporting Procedures 130
8.12.1 Location Reporting Control 130
8.12.1.1 General 130
8.12.1.2 Successful Operation 130
8.12.1.3 Abnormal Conditions 131
8.12.2 Location Reporting Failure Indication 131
8.12.2.1 General 131
8.12.2.2 Successful Operation 132
8.12.2.3 Abnormal Conditions 132
8.12.3 Location Report 132
8.12.3.1 General 132
8.12.3.2 Successful Operation 132
8.12.3.3 Abnormal Conditions 132
8.13 UE TNLA Binding Procedures 133
8.13.1 UE TNLA Binding Release 133
8.13.1.1 General 133
8.13.1.2 Successful Operation 133

8.13.1.3 Abnormal Conditions 133
8.14 UE Radio Capability Management Procedures 133
8.14.1 UE Radio Capability Info Indication 133
8.14.1.1 General 133
8.14.1.2 Successful Operation 134
8.14.1.3 Abnormal Conditions 134
8.14.2 UE Radio Capability Check 134
8.14.2.1 General 134
8.14.2.2 Successful Operation 134
8.14.2.3 Unsuccessful Operation 135
8.14.2.4 Abnormal Conditions 135
8.14.3 UE Radio Capability ID Mapping 135
8.14.3.1 General 135
8.14.3.2 Successful Operation 135
8.14.3.3 Unsuccessful Operation 136
8.14.3.4 Abnormal Conditions 136
8.15 Data Usage Reporting Procedures 136
8.15.1 Secondary RAT Data Usage Report 136
8.15.1.1 General 136
8.15.1.2 Successful Operation 136
8.15.1.3 Abnormal Conditions 136
8.16 RIM Information Transfer Procedures 137
8.16.1 Uplink RIM Information Transfer 137
8.16.1.1 General 137
8.16.1.2 Successful Operation 137
8.16.1.3 Abnormal Conditions 137
8.16.2 Downlink RIM Information Transfer 137
8.16.2.1 General 137
8.16.2.2 Successful Operation 137
8.16.2.3 Abnormal Conditions 138
8.17 Broadcast Session Management Procedures 138
8.17.1 Broadcast Session Setup 138
8.17.1.1 General 138
8.17.1.2 Successful Operation 138
8.17.1.3 Unsuccessful Operation 139
8.17.1.4 Abnormal Conditions 139
8.17.2 Broadcast Session Modification 139
8.17.2.1 General 139
8.17.2.2 Successful Operation 139
8.17.2.3 Unsuccessful Operation 140
8.17.2.4 Abnormal Conditions 140
8.17.3 Broadcast Session Release 140
8.17.3.1 General 140
8.17.3.2 Successful Operation 140
8.17.3.3 Unsuccessful Operation 141
8.17.3.4 Abnormal Conditions 141
8.17.4 Broadcast Session Release Required 141
8.17.4.1 General 141
8.17.4.2 Successful Operation 141
8.17.4.3 Abnormal Conditions 141
8.17.5 Broadcast Session Transport 141
8.17.5.1 General 141
8.17.5.2 Successful Operation 142
8.17.5.3 Unsuccessful Operation 142
8.17.5.4 Abnormal Conditions 142
8.18 Multicast Session Management Procedures 142
8.18.1 Distribution Setup 142
8.18.1.1 General 142
8.18.1.2 Successful Operation 143
8.18.1.3 Unsuccessful Operation 143
8.18.1.4 Abnormal Conditions 143
8.18.2 Distribution Release 144

8.18.2.1 General 144
8.18.2.2 Successful Operation 144
8.18.2.3 Unsuccessful Operation 144
8.18.2.4 Abnormal Conditions 144
8.18.3 Multicast Session Activation 144
8.18.3.1 General 144
8.18.3.2 Successful Operation 145
8.18.3.3 Unsuccessful Operation 145
8.18.3.4 Abnormal Conditions 145
8.18.4 Multicast Session Deactivation 146
8.18.4.1 General 146
8.18.4.2 Successful Operation 146
8.18.4.3 Unsuccessful Operation 146
8.18.4.4 Abnormal Conditions 146
8.18.5 Multicast Session Update 146
8.18.5.1 General 146
8.18.5.2 Successful Operation 147
8.18.5.3 Unsuccessful Operation 148
8.18.5.4 Abnormal Conditions 148
8.19 Timing Synchronisation Status Reporting Procedures 148
8.19.1 Timing Synchronisation Status 148
8.19.1.1 General 148
8.19.1.2 Successful Operation 148
8.19.1.3 Unsuccessful Operation 149
8.19.1.4 Abnormal Conditions 149
8.19.2 Timing Synchronisation Status Report 149
8.19.2.1 General 149
8.19.2.2 Successful Operation 149
8.19.2.3 Abnormal Conditions 149
8.20 Ambient IoT Procedures 150
8.20.1 Inventory Request 150
8.20.1.1 General 150
8.20.1.2 Successful Operation 150
8.20.1.3 Unsuccessful Operation 151
8.20.1.4 Abnormal Conditions 151
8.20.2 Inventory Report 151
8.20.2.1 General 151
8.20.2.2 Successful Operation 151
8.20.2.3 Abnormal Conditions 152
8.20.3 Command Request 152
8.20.3.1 General 152
8.20.3.2 Successful Operation 152
8.20.3.3 Unsuccessful Operation 153
8.20.3.4 Abnormal Conditions 153
8.20.4 A-IoT Session Release 153
8.20.4.1 General 153
8.20.4.2 Successful Operation 153
8.20.4.3 Unsuccessful Operation 154
8.20.4.4 Abnormal Conditions 154
8.20.5 A-IoT Session Release Request 154
8.20.5.1 General 154
8.20.5.2 Successful Operation 154
8.20.5.3 Abnormal Conditions 154

9 Elements for NGAP Communication 154
9.0 General 154
9.1 Tabular Format Contents 155
9.1.1 Presence 155
9.1.2 Criticality 155
9.1.3 Range 155
9.1.4 Assigned Criticality 155
9.2 Message Functional Definition and Content 156

9.2.1 PDU Session Management Messages 156
9.2.1.1 PDU SESSION RESOURCE SETUP REQUEST 156
9.2.1.2 PDU SESSION RESOURCE SETUP RESPONSE 156
9.2.1.3 PDU SESSION RESOURCE RELEASE COMMAND 157
9.2.1.4 PDU SESSION RESOURCE RELEASE RESPONSE 158
9.2.1.5 PDU SESSION RESOURCE MODIFY REQUEST 158
9.2.1.6 PDU SESSION RESOURCE MODIFY RESPONSE 160
9.2.1.7 PDU SESSION RESOURCE NOTIFY 160
9.2.1.8 PDU SESSION RESOURCE MODIFY INDICATION 161
9.2.1.9 PDU SESSION RESOURCE MODIFY CONFIRM 162
9.2.2 UE Context Management Messages 162
9.2.2.1 INITIAL CONTEXT SETUP REQUEST 162
9.2.2.2 INITIAL CONTEXT SETUP RESPONSE 165
9.2.2.3 INITIAL CONTEXT SETUP FAILURE 166
9.2.2.4 UE CONTEXT RELEASE REQUEST 167
9.2.2.5 UE CONTEXT RELEASE COMMAND 167
9.2.2.6 UE CONTEXT RELEASE COMPLETE 167
9.2.2.7 UE CONTEXT MODIFICATION REQUEST 168
9.2.2.8 UE CONTEXT MODIFICATION RESPONSE 170
9.2.2.9 UE CONTEXT MODIFICATION FAILURE 170
9.2.2.10 RRC INACTIVE TRANSITION REPORT 171
9.2.2.11 CONNECTION ESTABLISHMENT INDICATION 171
9.2.2.12 AMF CP RELOCATION INDICATION 172
9.2.2.13 RAN CP RELOCATION INDICATION 172
9.2.2.14 RETRIEVE UE INFORMATION 172
9.2.2.15 UE INFORMATION TRANSFER 173
9.2.2.16 UE CONTEXT SUSPEND REQUEST 173
9.2.2.17 UE CONTEXT SUSPEND RESPONSE 174
9.2.2.18 UE CONTEXT SUSPEND FAILURE 174
9.2.2.19 UE CONTEXT RESUME REQUEST 175
9.2.2.20 UE CONTEXT RESUME RESPONSE 175
9.2.2.21 UE CONTEXT RESUME FAILURE 176
9.2.2.22 MT COMMUNICATION HANDLING REQUEST 176
9.2.2.23 MT COMMUNICATION HANDLING RESPONSE 177
9.2.2.24 MT COMMUNICATION HANDLING FAILURE 177
9.2.2.25 RAN PAGING REQUEST 177
9.2.3 UE Mobility Management Messages 178
9.2.3.1 HANDOVER REQUIRED 178
9.2.3.2 HANDOVER COMMAND 178
9.2.3.3 HANDOVER PREPARATION FAILURE 179
9.2.3.4 HANDOVER REQUEST 180
9.2.3.5 HANDOVER REQUEST ACKNOWLEDGE 183
9.2.3.6 HANDOVER FAILURE 184
9.2.3.7 HANDOVER NOTIFY 185
9.2.3.8 PATH SWITCH REQUEST 186
9.2.3.9 PATH SWITCH REQUEST ACKNOWLEDGE 187
9.2.3.10 PATH SWITCH REQUEST FAILURE 190
9.2.3.11 HANDOVER CANCEL 190
9.2.3.12 HANDOVER CANCEL ACKNOWLEDGE 190
9.2.3.13 UPLINK RAN STATUS TRANSFER 191
9.2.3.14 DOWNLINK RAN STATUS TRANSFER 191
9.2.3.15 HANDOVER SUCCESS 191
9.2.3.16 UPLINK RAN EARLY STATUS TRANSFER 191
9.2.3.17 DOWNLINK RAN EARLY STATUS TRANSFER 192
9.2.4 Paging Messages 192
9.2.4.1 PAGING 192
9.2.4.2 MULTICAST GROUP PAGING 193
9.2.5 NAS Transport Messages 195
9.2.5.1 INITIAL UE MESSAGE 195
9.2.5.2 DOWNLINK NAS TRANSPORT 196
9.2.5.3 UPLINK NAS TRANSPORT 196
9.2.5.4 NAS NON DELIVERY INDICATION 197

9.2.5.5 REROUTE NAS REQUEST 197
9.2.6 Interface Management Messages 198
9.2.6.1 NG SETUP REQUEST 198
9.2.6.2 NG SETUP RESPONSE 200
9.2.6.3 NG SETUP FAILURE 202
9.2.6.4 RAN CONFIGURATION UPDATE 202
9.2.6.5 RAN CONFIGURATION UPDATE ACKNOWLEDGE 204
9.2.6.6 RAN CONFIGURATION UPDATE FAILURE 204
9.2.6.7 AMF CONFIGURATION UPDATE 204
9.2.6.8 AMF CONFIGURATION UPDATE ACKNOWLEDGE 206
9.2.6.9 AMF CONFIGURATION UPDATE FAILURE 207
9.2.6.10 AMF STATUS INDICATION 207
9.2.6.11 NG RESET 207
9.2.6.12 NG RESET ACKNOWLEDGE 208
9.2.6.13 ERROR INDICATION 208
9.2.6.14 OVERLOAD START 208
9.2.6.15 OVERLOAD STOP 209
9.2.6.16 NG REMOVAL REQUEST 209
9.2.6.17 NG REMOVAL RESPONSE 210
9.2.6.18 NG REMOVAL FAILURE 210
9.2.7 Configuration Transfer Messages 210
9.2.7.1 UPLINK RAN CONFIGURATION TRANSFER 210
9.2.7.2 DOWNLINK RAN CONFIGURATION TRANSFER 210
9.2.8 Warning Message Transmission Messages 211
9.2.8.1 WRITE-REPLACE WARNING REQUEST 211
9.2.8.2 WRITE-REPLACE WARNING RESPONSE 211
9.2.8.3 PWS CANCEL REQUEST 212
9.2.8.4 PWS CANCEL RESPONSE 212
9.2.8.5 PWS RESTART INDICATION 212
9.2.8.6 PWS FAILURE INDICATION 213
9.2.9 NRPPa Transport Messages 214
9.2.9.1 DOWNLINK UE ASSOCIATED NRPPA TRANSPORT 214
9.2.9.2 UPLINK UE ASSOCIATED NRPPA TRANSPORT 214
9.2.9.3 DOWNLINK NON UE ASSOCIATED NRPPA TRANSPORT 214
9.2.9.4 UPLINK NON UE ASSOCIATED NRPPA TRANSPORT 214
9.2.10 Trace Messages 215
9.2.10.1 TRACE START 215
9.2.10.2 TRACE FAILURE INDICATION 215
9.2.10.3 DEACTIVATE TRACE 215
9.2.10.4 CELL TRAFFIC TRACE 215
9.2.11 Location Reporting Messages 216
9.2.11.1 LOCATION REPORTING CONTROL 216
9.2.11.2 LOCATION REPORTING FAILURE INDICATION 216
9.2.11.3 LOCATION REPORT 217
9.2.12 UE TNLA Binding Messages 217
9.2.12.1 UE TNLA BINDING RELEASE REQUEST 217
9.2.13 UE Radio Capability Management Messages 217
9.2.13.1 UE RADIO CAPABILITY INFO INDICATION 217
9.2.13.2 UE RADIO CAPABILITY CHECK REQUEST 218
9.2.13.3 UE RADIO CAPABILITY CHECK RESPONSE 218
9.2.13.4 UE RADIO CAPABILITY ID MAPPING REQUEST 218
9.2.13.5 UE RADIO CAPABILITY ID MAPPING RESPONSE 219
9.2.14 Data Usage Reporting Messages 219
9.2.14.1 SECONDARY RAT DATA USAGE REPORT 219
9.2.15 RIM Information Transfer Messages 219
9.2.15.1 UPLINK RIM INFORMATION TRANSFER 219
9.2.15.2 DOWNLINK RIM INFORMATION TRANSFER 220
9.2.16 Broadcast Session Management Messages 220
9.2.16.1 BROADCAST SESSION SETUP REQUEST 220
9.2.16.2 BROADCAST SESSION SETUP RESPONSE 220
9.2.16.3 BROADCAST SESSION SETUP FAILURE 221
9.2.16.4 BROADCAST SESSION MODIFICATION REQUEST 221

9.2.16.5 BROADCAST SESSION MODIFICATION RESPONSE 221
9.2.16.6 BROADCAST SESSION MODIFICATION FAILURE 222
9.2.16.7 BROADCAST SESSION RELEASE REQUEST 222
9.2.16.8 BROADCAST SESSION RELEASE RESPONSE 222
9.2.16.9 BROADCAST SESSION RELEASE REQUIRED 222
9.2.16.10 BROADCAST SESSION TRANSPORT REQUEST 223
9.2.16.11 BROADCAST SESSION TRANSPORT RESPONSE 223
9.2.16.12 BROADCAST SESSION TRANSPORT FAILURE 223
9.2.17 Multicast Session Management Messages 224
9.2.17.1 DISTRIBUTION SETUP REQUEST 224
9.2.17.2 DISTRIBUTION SETUP RESPONSE 224
9.2.17.3 DISTRIBUTION SETUP FAILURE 224
9.2.17.4 DISTRIBUTION RELEASE REQUEST 225
9.2.17.5 DISTRIBUTION RELEASE RESPONSE 225
9.2.17.6 MULTICAST SESSION ACTIVATION REQUEST 225
9.2.17.7 MULTICAST SESSION ACTIVATION RESPONSE 225
9.2.17.8 MULTICAST SESSION ACTIVATION FAILURE 226
9.2.17.9 MULTICAST SESSION DEACTIVATION REQUEST 226
9.2.17.10 MULTICAST SESSION DEACTIVATION RESPONSE 226
9.2.17.11 MULTICAST SESSION UPDATE REQUEST 226
9.2.17.12 MULTICAST SESSION UPDATE RESPONSE 227
9.2.17.13 MULTICAST SESSION UPDATE FAILURE 227
9.2.18 Timing Synchronisation Status Reporting Messages 227
9.2.18.1 TIMING SYNCHRONISATION STATUS REQUEST 227
9.2.18.2 TIMING SYNCHRONISATION STATUS RESPONSE 228
9.2.18.3 TIMING SYNCHRONISATION STATUS FAILURE 228
9.2.18.4 TIMING SYNCHRONISATION STATUS REPORT 228
9.2.19 A-IoT Messages 228
9.2.19.1 INVENTORY REQUEST 228
9.2.19.2 INVENTORY RESPONSE 229
9.2.19.3 INVENTORY FAILURE 229
9.2.19.4 INVENTORY REPORT 229
9.2.19.5 COMMAND REQUEST 230
9.2.19.6 COMMAND RESPONSE 230
9.2.19.7 COMMAND FAILURE 230
9.2.19.8 AIOT SESSION RELEASE COMMAND 231
9.2.19.9 AIOT SESSION RELEASE COMPLETE 231
9.2.19.10 AIOT SESSION RELEASE REQUEST 231
9.3 Information Element Definitions 232
9.3.1 Radio Network Layer Related IEs 232
9.3.1.1 Message Type 232
9.3.1.2 Cause 232
9.3.1.3 Criticality Diagnostics 238
9.3.1.4 Bit Rate 239
9.3.1.5 Global RAN Node ID 239
9.3.1.6 Global gNB ID 240
9.3.1.7 NR CGI 240
9.3.1.8 Global ng-eNB ID 240
9.3.1.9 E-UTRA CGI 241
9.3.1.10 GBR QoS Flow Information 241
9.3.1.11 Void 243
9.3.1.12 QoS Flow Level QoS Parameters 243
9.3.1.13 QoS Flow List with Cause 245
9.3.1.14 Trace Activation 245
9.3.1.15 Core Network Assistance Information for RRC INACTIVE 247
9.3.1.16 User Location Information 248
9.3.1.17 Slice Support List 250
9.3.1.18 Dynamic 5QI Descriptor 250
9.3.1.19 Allocation and Retention Priority 252
9.3.1.20 Source to Target Transparent Container 252
9.3.1.21 Target to Source Transparent Container 253
9.3.1.22 Handover Type 253

9.3.1.23 MICO Mode Indication 254
9.3.1.24 S-NSSAI 254
9.3.1.25 Target ID 254
9.3.1.26 Emergency Fallback Indicator 255
9.3.1.27 Security Indication 255
9.3.1.28 Non Dynamic 5QI Descriptor 256
9.3.1.29 Source NG-RAN Node to Target NG-RAN Node Transparent Container 257
9.3.1.30 Target NG-RAN Node to Source NG-RAN Node Transparent Container 261
9.3.1.31 Allowed NSSAI 263
9.3.1.32 Relative AMF Capacity 263
9.3.1.33 DL Forwarding 263
9.3.1.34 DRBs to QoS Flows Mapping List 263
9.3.1.35 Message Identifier 264
9.3.1.36 Serial Number 264
9.3.1.37 Warning Area List 264
9.3.1.38 Number of Broadcasts Requested 264
9.3.1.39 Warning Type 265
9.3.1.40 Void 265
9.3.1.41 Data Coding Scheme 265
9.3.1.42 Warning Message Contents 265
9.3.1.43 Broadcast Completed Area List 265
9.3.1.44 Broadcast Cancelled Area List 266
9.3.1.45 Number of Broadcasts 268
9.3.1.46 Concurrent Warning Message Indicator 268
9.3.1.47 Cancel-All Warning Messages Indicator 268
9.3.1.48 Emergency Area ID 268
9.3.1.49 Repetition Period 268
9.3.1.50 PDU Session ID 269
9.3.1.51 QoS Flow Identifier 269
9.3.1.52 PDU Session Type 269
9.3.1.53 DRB ID 269
9.3.1.54 Masked IMEISV 269
9.3.1.55 New Security Context Indicator 270
9.3.1.56 Time to Wait 270
9.3.1.57 Global N3IWF ID 270
9.3.1.58 UE Aggregate Maximum Bit Rate 270
9.3.1.59 Security Result 271
9.3.1.60 User Plane Security Information 271
9.3.1.61 Index to RAT/Frequency Selection Priority 271
9.3.1.62 Data Forwarding Accepted 271
9.3.1.63 Data Forwarding Not Possible 271
9.3.1.64 Direct Forwarding Path Availability 272
9.3.1.65 Location Reporting Request Type 272
9.3.1.66 Area of Interest 274
9.3.1.67 UE Presence in Area of Interest List 274
9.3.1.68 UE Radio Capability for Paging 275
9.3.1.69 Assistance Data for Paging 275
9.3.1.70 Assistance Data for Recommended Cells 275
9.3.1.71 Recommended Cells for Paging 275
9.3.1.72 Paging Attempt Information 276
9.3.1.73 NG-RAN CGI 276
9.3.1.74 UE Radio Capability 276
9.3.1.74a UE Radio Capability – E-UTRA Format 277
9.3.1.75 Time Stamp 277
9.3.1.76 Location Reporting Reference ID 277
9.3.1.77 Data Forwarding Response DRB List 277
9.3.1.78 Paging Priority 278
9.3.1.79 Packet Loss Rate 278
9.3.1.80 Packet Delay Budget 278
9.3.1.81 Packet Error Rate 278
9.3.1.82 Averaging Window 278
9.3.1.83 Maximum Data Burst Volume 279

9.3.1.84 Priority Level 279
9.3.1.85 Mobility Restriction List 279
9.3.1.86 UE Security Capabilities 281
9.3.1.87 Security Key 283
9.3.1.88 Security Context 283
9.3.1.89 IMS Voice Support Indicator 283
9.3.1.90 Paging DRX 283
9.3.1.91 RRC Inactive Transition Report Request 284
9.3.1.92 RRC State 284
9.3.1.93 Expected UE Behaviour 284
9.3.1.94 Expected UE Activity Behaviour 285
9.3.1.95 UE History Information 286
9.3.1.96 Last Visited Cell Information 286
9.3.1.97 Last Visited NG-RAN Cell Information 287
9.3.1.98 Cell Type 288
9.3.1.99 Associated QoS Flow List 288
9.3.1.100 Information on Recommended Cells and RAN Nodes for Paging 288
9.3.1.101 Recommended RAN Nodes for Paging 288
9.3.1.102 PDU Session Aggregate Maximum Bit Rate 289
9.3.1.103 Maximum Integrity Protected Data Rate 289
9.3.1.104 Overload Response 289
9.3.1.105 Overload Action 290
9.3.1.106 Traffic Load Reduction Indication 290
9.3.1.107 Slice Overload List 290
9.3.1.108 RAN Status Transfer Transparent Container 290
9.3.1.109 COUNT Value for PDCP SN Length 12 292
9.3.1.110 COUNT Value for PDCP SN Length 18 292
9.3.1.111 RRC Establishment Cause 292
9.3.1.112 Warning Area Coordinates 293
9.3.1.113 Network Instance 293
9.3.1.114 Secondary RAT Usage Information 293
9.3.1.115 Volume Timed Report List 294
9.3.1.116 Redirection for Voice EPS Fallback 294
9.3.1.117 UE Retention Information 295
9.3.1.118 UL Forwarding 295
9.3.1.119 CN Assisted RAN Parameters Tuning 295
9.3.1.120 Common Network Instance 295
9.3.1.121 Data Forwarding Response E-RAB List 295
9.3.1.122 gNB Set ID 296
9.3.1.123 RNC-ID 296
9.3.1.124 Extended RNC-ID 296
9.3.1.125 RAT Information 296
9.3.1.126 Extended RAT Restriction Information 296
9.3.1.127 SgNB UE X2AP ID 297
9.3.1.128 SRVCC Operation Possible 297
9.3.1.129 IAB Authorized 297
9.3.1.130 TSC Traffic Characteristics 297
9.3.1.131 TSC Assistance Information 298
9.3.1.132 Periodicity 298
9.3.1.133 Burst Arrival Time 298
9.3.1.134 Redundant QoS Flow Indicator 298
9.3.1.135 Extended Packet Delay Budget 299
9.3.1.136 Redundant PDU Session Information 299
9.3.1.137 NB-IoT Default Paging DRX 299
9.3.1.138 NB-IoT Paging eDRX Information 299
9.3.1.139 NB-IoT Paging DRX 300
9.3.1.140 Enhanced Coverage Restriction 300
9.3.1.141 Paging Assistance Data for CE Capable UE 300
9.3.1.142 UE Radio Capability ID 300
9.3.1.143 WUS Assistance Information 301
9.3.1.144 UE Differentiation Information 301
9.3.1.145 NB-IoT UE Priority 303

9.3.1.146 NR V2X Services Authorized 303
9.3.1.147 LTE V2X Services Authorized 303
9.3.1.148 NR UE Sidelink Aggregate Maximum Bit Rate 303
9.3.1.149 LTE UE Sidelink Aggregate Maximum Bit Rate 303
9.3.1.150 PC5 QoS Parameters 304
9.3.1.151 Alternative QoS Parameters Set List 304
9.3.1.152 Alternative QoS Parameters Set Index 306
9.3.1.153 Alternative QoS Parameters Set Notify Index 306
9.3.1.154 E-UTRA Paging eDRX Information 306
9.3.1.155 CE-mode-B Restricted 306
9.3.1.156 CE-mode-B Support Indicator 307
9.3.1.157 LTE-M Indication 307
9.3.1.158 Suspend Request Indication 307
9.3.1.159 Suspend Response Indication 307
9.3.1.160 UE User Plane CIoT Support Indicator 307
9.3.1.161 Global TNGF ID 308
9.3.1.162 Global W-AGF ID 308
9.3.1.163 Global TWIF ID 308
9.3.1.164 W-AGF User Location Information 309
9.3.1.165 Global eNB ID 310
9.3.1.166 UE History Information from UE 310
9.3.1.167 MDT Configuration 310
9.3.1.168 MDT PLMN List 311
9.3.1.169 MDT Configuration-NR 311
9.3.1.170 MDT Configuration-EUTRA 315
9.3.1.171 M1 Configuration 315
9.3.1.172 M4 Configuration 317
9.3.1.173 M5 Configuration 317
9.3.1.174 M6 Configuration 318
9.3.1.175 M7 Configuration 318
9.3.1.176 MDT Location Information 318
9.3.1.177 Bluetooth Measurement Configuration 319
9.3.1.178 WLAN Measurement Configuration 319
9.3.1.179 Sensor Measurement Configuration 319
9.3.1.180 Event Trigger Logged MDT Configuration 320
9.3.1.181 NR Frequency Info 321
9.3.1.182 Area Scope of Neighbour Cells 321
9.3.1.183 NPN Paging Assistance Information 321
9.3.1.184 NPN Mobility Information 322
9.3.1.185 Cell CAG Information 322
9.3.1.186 Target to Source Failure Transparent Container 323
9.3.1.187 Target NG-RAN Node to Source NG-RAN Node Failure Transparent Container 323
9.3.1.188 DAPS Request Information 323
9.3.1.189 DAPS Response Information 323
9.3.1.190 Early Status Transfer Transparent Container 324
9.3.1.191 Extended Slice Support List 325
9.3.1.192 UE Capability Info Request 325
9.3.1.193 Extended RAN Node Name 325
9.3.1.194 MICO All PLMN 325
9.3.1.195 Source Node ID 326
9.3.1.196 E-UTRAN Composite Available Capacity Group 326
9.3.1.197 E-UTRAN Composite Available Capacity 326
9.3.1.198 E-UTRAN Cell Capacity Class Value 326
9.3.1.199 E-UTRAN Capacity Value 326
9.3.1.200 E-UTRAN Radio Resource Status 327
9.3.1.201 Void 327
9.3.1.202 Void 327
9.3.1.203 Void 327
9.3.1.204 Void 327
9.3.1.205 NR Radio Resource Status 327
9.3.1.206 MBS Session ID 328
9.3.1.207 MBS Area Session ID 328

9.3.1.208 MBS Service Area 328
9.3.1.209 MBS Service Area Information....329
9.3.1.210 MBS Support Indicator 329
9.3.1.211 MBS Session Setup Request List 330
9.3.1.212 MBS Session Setup or Modify Request List....330
9.3.1.213 MBS Session Setup Response List....331
9.3.1.214 MBS Session Failed to Setup List....331
9.3.1.215 MBS Session To Release List 332
9.3.1.216 Multicast Group Paging Area....332
9.3.1.217 MBS Session Status 332
9.3.1.218 MRB ID 333
9.3.1.219 MRB Progress Information 333
9.3.1.220 Time Synchronisation Assistance Information 333
9.3.1.221 Survival Time....333
9.3.1.222 QMC Deactivation 333
9.3.1.223 QMC Configuration Information 334
9.3.1.224 UE Application Layer Measurement Configuration Information 334
9.3.1.225 Available RAN Visible QoE Metrics....337
9.3.1.226 Void....338
9.3.1.227 NR Paging eDRX Information....338
9.3.1.228 RedCap Indication....338
9.3.1.229 Target NSSAI Information....338
9.3.1.230 Target NSSAI....338
9.3.1.231 UE Slice Maximum Bit Rate List 339
9.3.1.232 PEIPS Assistance Information 339
9.3.1.233 5G ProSe Authorized 339
9.3.1.234 5G ProSe PC5 QoS Parameters....341
9.3.1.235 Last Visited PSCell Information 341
9.3.1.236 MBS QoS Flows To Be Setup List 342
9.3.1.237 Reporting System....342
9.3.1.238 TAI NSAG Support List 343
9.3.1.239 NGAP Protocol IE-Id....343
9.3.1.240 NGAP Protocol IE Support Information....343
9.3.1.241 NGAP Protocol IE Presence Information 344
9.3.1.242 NGAP IE Support Information Response List 344
9.3.1.243 MDT PLMN Modification List....344
9.3.1.244 Excess Packet Delay Threshold Configuration 344
9.3.1.245 Network Controlled Repeater Authorized....345
9.3.1.246 Aerial UE Subscription Information 345
9.3.1.247 NR A2X Services Authorized....345
9.3.1.248 LTE A2X Services Authorized 345
9.3.1.249 A2X PC5 QoS Parameters 346
9.3.1.250 Clock Quality Reporting Control Information 346
9.3.1.251 Clock Quality Acceptance Criteria 346
9.3.1.252 RAN Timing Synchronisation Status Information 347
9.3.1.253 Clock Accuracy....347
9.3.1.254 RAN TSS Scope....348
9.3.1.255 Burst Arrival Time Window 348
9.3.1.256 Periodicity Range....348
9.3.1.257 TSC Traffic Characteristics Feedback 349
9.3.1.258 TSC Feedback Information....349
9.3.1.259 Mobile IAB Authorized 349
9.3.1.260 Mobile IAB-MT User Location Information 349
9.3.1.261 Partially Allowed NSSAI....350
9.3.1.262 Associated Session ID....350
9.3.1.263 MBS Assistance Information 350
9.3.1.264 PDU Set QoS Information 350
9.3.1.265 N6 Jitter Information....351
9.3.1.266 ECN Marking or Congestion Information Reporting Request....351
9.3.1.267 ECN Marking or Congestion Information Reporting Status....351
9.3.1.268 PDU Set based Handling Indicator 352
9.3.1.269 Ranging and Sidelink Positioning Service Information 352

9.3.1.270 RSPP Transport QoS Parameters 352
9.3.1.271 User Plane Failure Indication 353
9.3.1.272 QoE and RVQoE Reporting Paths 353
9.3.1.273 Intended Service Area Coordinates 353
9.3.1.274 GW Context Release Indication 353
9.3.1.275 Requested NSSAI 354
9.3.1.276 Reader Index 354
9.3.1.277 A-IoT Area ID 354
9.3.1.278 A-IoT Support 354
9.3.1.279 LP-WUSPS Assistance Information 354
9.3.1.280 Additional ULI 354
9.3.1.281 Available Bitrate Report Threshold List 355
9.3.1.282 Aerial UE Flight information Reporting 355
9.3.1.283 Aerial UE Flight Information Reporting Control 355
9.3.1.284 Altitude 356
9.3.2 Transport Network Layer Related IEs 356
9.3.2.1 QoS Flow per TNL Information List 356
9.3.2.2 UP Transport Layer Information 356
9.3.2.3 E-RAB ID 356
9.3.2.4 Transport Layer Address 357
9.3.2.5 GTP-TEID 357
9.3.2.6 CP Transport Layer Information 357
9.3.2.7 TNL Association List 357
9.3.2.8 QoS Flow per TNL Information 358
9.3.2.9 TNL Association Usage 358
9.3.2.10 TNL Address Weight Factor 358
9.3.2.11 UP Transport Layer Information Pair List 358
9.3.2.12 UP Transport Layer Information List 358
9.3.2.13 QoS Flow List with Data Forwarding 359
9.3.2.14 URI 359
9.3.2.15 MBS Session TNL Information 5GC 360
9.3.2.16 Shared NG-U Multicast TNL Information 360
9.3.2.17 MBS Session TNL Information NG-RAN 360
9.3.2.18 MBS NG-U Failure Indication 361
9.3.2.19 MBS User Plane Failure Indication 361
9.3.3 NAS Related IEs 362
9.3.3.1 AMF UE NGAP ID 362
9.3.3.2 RAN UE NGAP ID 362
9.3.3.3 GUAMI 362
9.3.3.4 NAS-PDU 362
9.3.3.5 PLMN Identity 362
9.3.3.6 SON Configuration Transfer 363
9.3.3.7 SON Information 364
9.3.3.8 SON Information Reply 365
9.3.3.9 Xn TNL Configuration Info 365
9.3.3.10 TAC 366
9.3.3.11 TAI 366
9.3.3.12 AMF Set ID 366
9.3.3.13 Routing ID 366
9.3.3.14 NRPPa-PDU 366
9.3.3.15 RAN Paging Priority 367
9.3.3.16 EPS TAC 367
9.3.3.17 EPS TAI 367
9.3.3.18 UE Paging Identity 367
9.3.3.19 AMF Pointer 367
9.3.3.20 5G-S-TMSI 367
9.3.3.21 AMF Name 368
9.3.3.22 Paging Origin 368
9.3.3.23 UE Identity Index Value 368
9.3.3.24 Periodic Registration Update Timer 369
9.3.3.25 UE-associated Logical NG-connection List 369
9.3.3.26 NAS Security Parameters from NG-RAN 369

9.3.3.27 Source to Target AMF Information Reroute 370
9.3.3.28 RIM Information Transfer 370
9.3.3.29 RIM Information 370
9.3.3.30 LAI 371
9.3.3.31 Extended Connected Time 371
9.3.3.32 End Indication 371
9.3.3.33 Inter-system SON Configuration Transfer 371
9.3.3.34 Inter-system SON Information 372
9.3.3.35 SON Information Report 372
9.3.3.36 Inter-system SON Information Report 373
9.3.3.37 Failure Indication 374
9.3.3.38 Inter-system Failure Indication 374
9.3.3.39 HO Report 374
9.3.3.40 Inter-system HO Report 376
9.3.3.41 UE RLF Report Container 378
9.3.3.42 NID 378
9.3.3.43 CAG ID 378
9.3.3.44 NPN Support 379
9.3.3.45 Allowed PNI-NPN List 379
9.3.3.46 NPN Access Information 379
9.3.3.47 Cell CAG List 380
9.3.3.48 UL CP Security Information 380
9.3.3.49 DL CP Security Information 380
9.3.3.50 Configured TAC Indication 380
9.3.3.51 Extended AMF Name 380
9.3.3.52 Extended UE Identity Index Value 381
9.3.3.53 NR NTN TAI Information 381
9.3.3.54 Inter-system SON Information Request 381
9.3.3.55 Inter-system SON Information Reply 381
9.3.3.56 Inter-system Cell Activation Request 382
9.3.3.57 Inter-system Cell State Indication 382
9.3.3.58 Inter-system Cell Activation Reply 382
9.3.3.59 Inter-system Resource Status Request 382
9.3.3.60 Inter-system Resource Status Report 384
9.3.3.61 Inter-system Resource Status Reply 384
9.3.3.62 Hashed UE Identity Index Value 384
9.3.3.63 Paging Policy Differentiation 385
9.3.3.64 NR Paging Long eDRX Information for RRC INACTIVE 385
9.3.3.65 CAG List for MDT 385
9.3.3.66 AUN3 Device Access Information 386
9.3.3.67 Network Slice Area Scope of MDT 386
9.3.3.68 Geographical Area 386
9.3.3.69 A-IoT Correlation Identifier 387
9.3.3.70 AIOTF Identifier 387
9.3.3.71 Requested Service Area Information 387
9.3.3.72 Inventory Assistance Information 388
9.3.3.73 A-IoT Device Identification Requested 388
9.3.3.74 RAN A-IoT Device NGAP ID 388
9.3.3.75 Command Assistance Information 388
9.3.3.76 AIOTF Name 388
9.3.3.77 Further Extended UE Identity Index Value 389
9.3.3.78 A-IoT Security Information 389
9.3.4 SMF Related IEs 389
9.3.4.1 PDU Session Resource Setup Request Transfer 389
9.3.4.2 PDU Session Resource Setup Response Transfer 391
9.3.4.3 PDU Session Resource Modify Request Transfer 393
9.3.4.4 PDU Session Resource Modify Response Transfer 395
9.3.4.5 PDU Session Resource Notify Transfer 398
9.3.4.6 PDU Session Resource Modify Indication Transfer 400
9.3.4.7 PDU Session Resource Modify Confirm Transfer 400
9.3.4.8 Path Switch Request Transfer 401
9.3.4.9 Path Switch Request Acknowledge Transfer 403

9.3.4.10 Handover Command Transfer 405
9.3.4.11 Handover Request Acknowledge Transfer 406
9.3.4.12 PDU Session Resource Release Command Transfer 408
9.3.4.13 PDU Session Resource Notify Released Transfer 408
9.3.4.14 Handover Required Transfer 409
9.3.4.15 Path Switch Request Setup Failed Transfer 409
9.3.4.16 PDU Session Resource Setup Unsuccessful Transfer 409
9.3.4.17 PDU Session Resource Modify Unsuccessful Transfer 409
9.3.4.18 Handover Preparation Unsuccessful Transfer 409
9.3.4.19 Handover Resource Allocation Unsuccessful Transfer 409
9.3.4.20 Path Switch Request Unsuccessful Transfer 410
9.3.4.21 PDU Session Resource Release Response Transfer 410
9.3.4.22 PDU Session Resource Modify Indication Unsuccessful Transfer 410
9.3.4.23 Secondary RAT Data Usage Report Transfer 410
9.3.4.24 UE Context Resume Request Transfer 410
9.3.4.25 UE Context Resume Response Transfer 411
9.3.4.26 UE Context Suspend Request Transfer 411
9.3.5 MB-SMF Related IEs 411
9.3.5.1 Void 411
9.3.5.2 Void 411
9.3.5.3 MBS Session Setup or Modification Request Transfer 411
9.3.5.4 Void 412
9.3.5.5 MBS Session Setup or Modification Response Transfer 412
9.3.5.6 MBS Session Setup or Modification Failure Transfer 412
9.3.5.7 MBS Distribution Setup Request Transfer 412
9.3.5.8 MBS Distribution Setup Response Transfer 413
9.3.5.9 MBS Distribution Setup Unsuccessful Transfer 413
9.3.5.10 MBS Distribution Release Request Transfer 413
9.3.5.11 Multicast Session Activation Request Transfer 413
9.3.5.12 Multicast Session Deactivation Request Transfer 413
9.3.5.13 Multicast Session Update Request Transfer 414
9.3.5.14 MBS Session Release Response Transfer 414
9.3.5.15 Broadcast Transport Request Transfer 414
9.3.5.16 Broadcast Transport Response Transfer 414
9.3.5.17 Broadcast Transport Failure Transfer 414
9.3.6 AIOTF Related IEs 415
9.3.6.1 Inventory Request Transfer 415
9.3.6.2 Inventory Response Transfer 415
9.3.6.3 Inventory Failure Transfer 415
9.3.6.4 Inventory Report Transfer 416
9.3.6.5 Command Request Transfer 416
9.3.6.6 Command Response Transfer 416
9.3.6.7 Command Failure Transfer 417
9.3.6.8 AIOT Session Release Command Transfer 417
9.3.6.9 AIOT Session Release Complete Transfer 417
9.3.6.10 AIOT Session Release Request Transfer 417
9.4 Message and Information Element Abstract Syntax (with ASN.1) 418
9.4.1 General 418
9.4.2 Usage of private message mechanism for non-standard use 418
9.4.3 Elementary Procedure Definitions 419
9.4.4 PDU Definitions 437
9.4.5 Information Element Definitions 513
9.4.6 Common Definitions 675
9.4.7 Constant Definitions 676
9.4.8 Container Definitions 690
9.5 Message Transfer Syntax 695
9.6 Timers 695

10 Handling of Unknown, Unforeseen and Erroneous Protocol Data 696
10.1 General 696
10.2 Transfer Syntax Error 696
10.3 Abstract Syntax Error 696

10.3.1 General 696
10.3.2 Criticality Information 697
10.3.3 Presence Information 697
10.3.4 Not comprehended IE/IE group 698
10.3.4.1 Procedure Code 698
10.3.4.1A Type of Message 698
10.3.4.2 IEs other than the Procedure Code and Type of Message 698
10.3.5 Missing IE or IE group 699
10.3.6 IEs or IE groups received in wrong order or with too many occurrences or erroneously present 700
10.4 Logical Error 701
10.5 Exceptions 701
10.6 Handling of AP ID 702

Annex A (informative): Change history 703

History 711

Foreword

This Technical Specification has been produced by the 3rd Generation Partnership Project (3GPP).

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

where:

- x the first digit:
  - 1 presented to TSG for information;
  - 2 presented to TSG for approval;
  - 3 or greater indicates TSG approved document under change control.
- Y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

1 Scope

The present document specifies the radio network layer signalling protocol for the NG interface. The NG Application Protocol (NGAP) supports the functions of the NG interface by signalling procedures defined in this document. NGAP is developed in accordance to the general principles stated in TS 38.401 [2] and TS 38.410 [3].

2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document.*

[1] 3GPP TR 21.905: "Vocabulary for 3GPP Specifications".

[2] 3GPP TS 38.401: "NG-RAN; Architecture description".

[3] 3GPP TS 38.410: "NG-RAN; NG general aspects and principles".

[4] ITU-T Recommendation X.691 (07/2002): "Information technology – ASN.1 encoding rules: Specification of Packed Encoding Rules (PER)".

[5] ITU-T Recommendation X.680 (07/2002): "Information technology – Abstract Syntax Notation One (ASN.1): Specification of basic notation".

[6] ITU-T Recommendation X.681 (07/2002): "Information technology – Abstract Syntax Notation One (ASN.1): Information object specification".

[7] 3GPP TR 25.921 (version.7.0.0): "Guidelines and principles for protocol description and error handling".

[8] 3GPP TS 38.300: "NR; NR and NG-RAN Overall Description; Stage 2".

[9] 3GPP TS 23.501: "System Architecture for the 5G System; Stage 2".

[10] 3GPP TS 23.502: "Procedures for the 5G System; Stage 2".

[11] 3GPP TS 32.422: "Trace control and configuration management".

[12] 3GPP TS 38.304: "NR; User Equipment (UE) procedures in idle mode and in RRC inactive state".

[13] 3GPP TS 33.501: "Security architecture and procedures for 5G System".

[14] 3GPP TS 38.414: "NG-RAN; NG data transport".

[15] 3GPP TS 29.281: "General Packet Radio System (GPRS); Tunnelling Protocol User Plane (GTPv1-U)".

[16] 3GPP TS 36.413: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN); S1 Application Protocol (S1AP)".

[17] 3GPP TS 36.300: "Evolved Universal Terrestrial Radio Access (E-UTRA) and Evolved Universal Terrestrial Radio Access Network (E-UTRAN); Overall description; Stage 2".

[18] 3GPP TS 38.331: "NG-RAN; Radio Resource Control (RRC) Protocol Specification".

[19] 3GPP TS 38.455: "NG-RAN; NR Positioning Protocol A (NRPPa)".

[20] Void

[21] 3GPP TS 36.331: "Evolved Universal Terrestrial Radio Access (E-UTRA) Radio Resource Control (RRC); Protocol specification".

[22] 3GPP TS 23.041: "Technical realization of Cell Broadcast Service (CBS)".

[23] 3GPP TS 23.003: "Numbering, addressing and identification".

[24] 3GPP TS 38.423: "NG-RAN; Xn Application Protocol (XnAP)".

[25] IETF RFC 5905 (2010-06): "Network Time Protocol Version 4: Protocol and Algorithms Specification".

[26] 3GPP TS 24.501: "Non-Access-Stratum (NAS) protocol for 5G System (5GS); Stage 3".

[27] 3GPP TS 33.401: "3GPP System Architecture Evolution (SAE); Security architecture".

[28] 3GPP TS 25.413: "UTRAN Iu interface RANAP signalling".

[29] 3GPP TS 36.304: "Evolved Universal Terrestrial Radio Access (E-UTRA); User Equipment (UE) procedures in idle mode".

[30] 3GPP TS 29.531: "5G System; Network Slice Selection Services; Stage 3".

[31] 3GPP TS 23.216: "Single Radio Voice Call Continuity (SRVCC); Stage 2".

[32] 3GPP TS 37.340: " Evolved Universal Terrestrial Radio Access (E-UTRA) and NR; Multi-connectivity; Stage 2".

[33] 3GPP TS 23.287: "Architecture enhancements for 5G System (5GS) to support Vehicle-to-Everything (V2X) services".

[34] 3GPP TS 23.316: "Wireless and wireline convergence access support for the 5G System (5GS)".

[35] 3GPP TS 29.571: "5G System; Common Data Types for Service Based Interfaces; Stage 3".

[36] 3GPP TS 29.510: "5G System; Network Function Repository Services; Stage 3".

[37] CableLabs WR-TR-5WWC-ARCH: "5G Wireless Wireline Converged Core Architecture".

[38] 3GPP TS 36.401: "E-UTRAN Architecture Description".

[39] 3GPP TS 38.104: "NR; Base Station (BS) radio transmission and reception".

[40] 3GPP TS 36.423: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN); X2 Application Protocol (X2AP) ".

[41] 3GPP TS 37.320: "Universal Terrestrial Radio Access (UTRA), Evolved Universal Terrestrial Radio Access (E-UTRA) and NR; Radio measurement collection for Minimization of Drive Tests (MDT); Overall description; Stage 2".

[42] 3GPP TS 36.306: "Evolved Universal Terrestrial Radio Access (E-UTRA); User Equipment (UE) radio access capabilities".

[43] 3GPP TS 29.244: "Interface between the Control Plane and the User Plane Nodes; Stage 3".

[44] 3GPP TS 23.247: "Architectural enhancements for 5G multicast-broadcast services; Stage 2".

[45] 3GPP TS 28.405: "Telecommunication management; Quality of Experience (QoE) measurement collection; Control and configuration".

[46] 3GPP TS 26.247: "Transparent end-to-end Packet-switched Streaming Service (PSS); Progressive Download and Dynamic Adaptive Streaming over HTTP (3GP-DASH)".

[47] 3GPP TS 23.304: "Proximity based Services (ProSe) in the 5G System (5GS)".

[48] 3GPP TS 38.314: "NR; Layer 2 Measurements".

[49] 3GPP TS 36.314: "Evolved Universal Terrestrial Radio Access (E-UTRA); Layer 2 - Measurements".

[50] 3GPP TS 23.203: "Policy and charging control architecture".

[51] 3GPP TS 26.114: "IP Multimedia Subsystem (IMS); Multimedia Telephony; Media handling and interaction".

[52] 3GPP TS 26.118: "Virtual Reality (VR) profiles for streaming applications".

[53] IETF RFC 4122: "A Universally Unique IDentifier (UUID) URN Namespace".

[54] 3GPP TS 23.256: "Support of Uncrewed Aerial Systems (UAS) connectivity, identification and tracking; Stage 2".

[55] IEEE Std 1588: "IEEE Standard for a Precision Clock Synchronization Protocol for Networked Measurement and Control Systems", Edition 2019.

[56] 3GPP TS 29.585: "5G System (5GS); Session Management Function (SMF) / Centralized User Configuration (CUC) to Access Network Talker Listener (AN-TL) and Core Network Talker Listener (CN-TL) protocol aspects; Stage 3".

[57] 3GPP TS 23.527: "5G System; Restoration procedures".

[58] 3GPP TS 24.007: "Mobile radio interface signalling layer 3; General aspects".

[59] 3GPP TS 37.355: "LTE Positioning Protocol (LPP)".

[60] 3GPP TS 23.369: "Architecture support for Ambient power-enabled Internet of Things; Stage 2".

[61] 3GPP TS 33.369: "Security aspects of Ambient Internet of Things (AIoT) services for isolated private networks".

[62] 3GPP TS 33.545: "Security aspects of NR Femto".

3 Definitions and abbreviations

3.1 Definitions

For the purposes of the present document, the terms and definitions given in TR 21.905 [1] and the following apply. A term defined in the present document takes precedence over the definition of the same term, if any, in TR 21.905 [1].

ACL functionality: as defined in TS 36.413 [16].

A-IoT CN node: as defined in TS 38.300 [8].

A-IoT NAS: as defined in TS 23.369 [60].

CAG cell: as defined in TS 38.300 [8].

DAPS Handover: as defined in TS 38.300 [8].

Elementary Procedure: NGAP consists of Elementary Procedures (EPs). An Elementary Procedure is a unit of interaction between the NG-RAN node and the AMF. These Elementary Procedures are defined separately and are intended to be used to build up complete sequences in a flexible manner. If the independence between some EPs is restricted, it is described under the relevant EP description. Unless otherwise stated by the restrictions, the EPs may be invoked independently of each other as standalone procedures, which can be active in parallel. The usage of several NGAP EPs together or together with EPs from other interfaces is specified in stage 2 specifications (e.g., TS 38.401 [2], TS 38.410 [3] and TS 38.300 [8]).

An EP consists of an initiating message and possibly a response message. Two kinds of EPs are used:

- **Class 1:** Elementary Procedures with response (success and/or failure).

- **Class 2:** Elementary Procedures without response.

For Class 1 EPs, the types of responses can be as follows:

Successful:

- A signalling message explicitly indicates that the elementary procedure successfully completed with the receipt of the response.

Unsuccessful:

- A signalling message explicitly indicates that the EP failed.
- On time supervision expiry (i.e., absence of expected response).

Successful and Unsuccessful:

- One signalling message reports both successful and unsuccessful outcome for the different included requests. The response message used is the one defined for successful outcome.

Class 2 EPs are considered always successful.

en-gNB: as defined in TS 37.340 [32].

gNB: as defined in TS 38.300 [8].

MBS session resource: as defined in TS 38.401 [2].

Mobile IAB-MT: as defined in TS 38.300 [8].

Mobile IAB-node: as defined in TS 38.300 [8].

NB-IoT: as defined in TS 36.300 [17].

ng-eNB: as defined in TS 38.300 [8].

NG-RAN node: as defined in TS 38.300 [8].

Non-CAG cell: as defined in TS 38.300 [8].

PDU session resource: as defined in TS 38.401 [2].

Public Network Integrated NPN: as defined in TS 23.501 [9].

Stand-alone Non-Public Network: as defined in TS 23.501 [9].

WAB-gNB: as defined in TS 38.401 [2].

WAB-node: as defined in TS 38.401 [2].

3.2 Abbreviations

For the purposes of the present document, the abbreviations given in TR 21.905 [1] and the following apply. An abbreviation defined in the present document takes precedence over the definition of the same abbreviation, if any, in TR 21.905 [1].

5GC	5G Core Network
5QI	5G QoS Identifier
ACL	Access Control List
A-IoT	Ambient IoT
AIOTF	Ambient IoT Function
AMF	Access and Mobility Management Function
AUN3	Authenticable Non-3GPP
CAG	Closed Access Group
CGI	Cell Global Identifier
CP	Control Plane

DAPS	Dual Active Protocol Stacks
DC	Dual Connectivity
DL	Downlink
EPC	Evolved Packet Core
FN-RG	Fixed Network Residential Gateway
GUAMI	Globally Unique AMF Identifier
HFC	Hybrid Fiber-Coax
IAB	Integrated Access and Backhaul
IoT	Internet of Things
IMEISV	International Mobile station Equipment Identity and Software Version number
LMF	Location Management Function
LP-WUSPS	Low Power Wake Up Signal with Paging Subgrouping
MBS	Multicast/Broadcast Service
MT	Mobile Terminated
N3IWF	Non 3GPP InterWorking Function
NB-IoT	Narrow Band Internet of Things
NGAP	NG Application Protocol
NID	Network Identifier
NPN	Non-Public Network
NRPPa	NR Positioning Protocol Annex
NSAG	Network Slice AS Group
NSCI	New Security Context Indicator
NSSAI	Network Slice Selection Assistance Information
OTDOA	Observed Time Difference of Arrival
PEIPS	Paging Early Indication with Paging Subgrouping
PNI-NPN	Public Network Integrated Non-Public Network
ProSe	Proximity Services
PSCell	Primary SCG Cell
PTM	Point to Multipoint
PTP	Point to Point
QMC	QoE Measurement Collection
QoE	Quality of Experience
RedCap	Reduced Capability
RIM	Remote Interference Management
RIM-RS	RIM Reference Signal
RSN	Redundancy Sequence Number
RSPP	Ranging/SL Positioning Protocol
SCG	Secondary Cell Group
SCTP	Stream Control Transmission Protocol
SgNB	Secondary gNB
SMF	Session Management Function
S-NG-RAN node	Secondary NG-RAN node
SNPN	Stand-alone Non-Public Network
S-NSSAI	Single Network Slice Selection Assistance Information
TAC	Tracking Area Code
TAI	Tracking Area Identity
TNAP	Trusted Non-3GPP Access Point
TNGF	Trusted Non-3GPP Gateway Function
TNLA	Transport Network Layer Association
TSS	Timing Synchronisation Status
TWAP	Trusted WLAN Access Point
TWIF	Trusted WLAN Interworking Function
UE	User Equipment
UL	Uplink
ULI	User Location Information
UP	User Plane
UPF	User Plane Function
V2X	Vehicle-to-Everything
W-AGF	Wireline Access Gateway Function
WUS	Wake Up Signal
WAB	Wireless Access Backhaul

4 General

4.1 Procedure Specification Principles

The principle for specifying the procedure logic is to specify the functional behaviour of the terminating node exactly and completely. Any rule that specifies the behaviour of the originating node shall be possible to be verified with information that is visible within the system.

The following specification principles have been applied for the procedure text in clause 8:

- The procedure text discriminates between:

  1) Functionality which "shall" be executed

     The procedure text indicates that the receiving node "shall" perform a certain function Y under a certain condition. If the receiving node supports procedure X but cannot perform functionality Y requested in the REQUEST message of a Class 1 EP, the receiving node shall respond with the message used to report unsuccessful outcome for this procedure, containing an appropriate cause value.

  2) Functionality which "shall, if supported" be executed

     The procedure text indicates that the receiving node "shall, if supported," perform a certain function Y under a certain condition. If the receiving node supports procedure X, but does not support functionality Y, the receiving node shall proceed with the execution of the EP, possibly informing the requesting node about the not supported functionality.

- Any required inclusion of an optional IE in a response message is explicitly indicated in the procedure text. If the procedure text does not explicitly indicate that an optional IE shall be included in a response message, the optional IE shall not be included. For requirements on including *Criticality Diagnostics* IE, see clause 10.

4.2 Forwards and Backwards Compatibility

The forwards and backwards compatibility of the protocol is assured by mechanism where all current and future messages, and IEs or groups of related IEs, include ID and criticality fields that are coded in a standard format that will not be changed in the future. These parts can always be decoded regardless of the standard version.

4.3 Specification Notations

For the purposes of the present document, the following notations apply:

Procedure	When referring to an elementary procedure in the specification the Procedure Name is written with the first letters in each word in upper case characters followed by the word "procedure", e.g., Procedure Name procedure.
Message	When referring to a message in the specification the MESSAGE NAME is written with all letters in upper case characters followed by the word "message", e.g., MESSAGE NAME message.
IE	When referring to an information element (IE) in the specification the *Information Element Name* is written with the first letters in each word in upper case characters and all letters in Italic font followed by the abbreviation "IE", e.g., *Information Element* IE.
Value of an IE	When referring to the value of an information element (IE) in the specification the "Value" is written as it is specified in clause 9.2 enclosed by quotation marks, e.g., "Value".

5 NGAP Services

NGAP provides the signalling service between the NG-RAN node and the AMF or between the NG-RAN node and the AIOTF that is required to fulfil the NGAP functions described in TS 38.410 [3]. NGAP services are divided into two groups:

Non UE-associated services: They are related to the whole NG interface instance between the NG-RAN node and AMF or between the NG-RAN node and the AIOTF utilising a non UE-associated signalling connection.

UE-associated services: They are related to one UE. NGAP functions that provide these services are associated with a UE-associated signalling connection that is maintained for the UE in question.

6 Services Expected from Signalling Transport

The signalling connection shall provide in sequence delivery of NGAP messages. NGAP shall be notified if the signalling connection breaks.

7 Functions of NGAP

The functions of NGAP are described in TS 38.410 [3].

8 NGAP Procedures

8.1 List of NGAP Elementary Procedures

In the following tables, all EPs are divided into Class 1 and Class 2 EPs (see clause 3.1 for explanation of the different classes):

Table 8.1-1: Class 1 procedures

Elementary Procedure	Initiating Message	Successful Outcome	Unsuccessful Outcome
		Response message	Response message
AMF Configuration Update	AMF CONFIGURATION UPDATE	AMF CONFIGURATION UPDATE ACKNOWLEDGE	AMF CONFIGURATION UPDATE FAILURE
RAN Configuration Update	RAN CONFIGURATION UPDATE	RAN CONFIGURATION UPDATE ACKNOWLEDGE	RAN CONFIGURATION UPDATE FAILURE
Handover Cancellation	HANDOVER CANCEL	HANDOVER CANCEL ACKNOWLEDGE	
Handover Preparation	HANDOVER REQUIRED	HANDOVER COMMAND	HANDOVER PREPARATION FAILURE
Handover Resource Allocation	HANDOVER REQUEST	HANDOVER REQUEST ACKNOWLEDGE	HANDOVER FAILURE
Initial Context Setup	INITIAL CONTEXT SETUP REQUEST	INITIAL CONTEXT SETUP RESPONSE	INITIAL CONTEXT SETUP FAILURE
NG Reset	NG RESET	NG RESET ACKNOWLEDGE	
NG Setup	NG SETUP REQUEST	NG SETUP RESPONSE	NG SETUP FAILURE
Path Switch Request	PATH SWITCH REQUEST	PATH SWITCH REQUEST ACKNOWLEDGE	PATH SWITCH REQUEST FAILURE

Elementary Procedure	Initiating Message	Successful Outcome	Unsuccessful Outcome
		Response message	Response message
PDU Session Resource Modify	PDU SESSION RESOURCE MODIFY REQUEST	PDU SESSION RESOURCE MODIFY RESPONSE	
PDU Session Resource Modify Indication	PDU SESSION RESOURCE MODIFY INDICATION	PDU SESSION RESOURCE MODIFY CONFIRM	
PDU Session Resource Release	PDU SESSION RESOURCE RELEASE COMMAND	PDU SESSION RESOURCE RELEASE RESPONSE	
PDU Session Resource Setup	PDU SESSION RESOURCE SETUP REQUEST	PDU SESSION RESOURCE SETUP RESPONSE	
UE Context Modification	UE CONTEXT MODIFICATION REQUEST	UE CONTEXT MODIFICATION RESPONSE	UE CONTEXT MODIFICATION FAILURE
UE Context Release	UE CONTEXT RELEASE COMMAND	UE CONTEXT RELEASE COMPLETE	
Write-Replace Warning	WRITE-REPLACE WARNING REQUEST	WRITE-REPLACE WARNING RESPONSE	
PWS Cancel	PWS CANCEL REQUEST	PWS CANCEL RESPONSE	
UE Radio Capability Check	UE RADIO CAPABILITY CHECK REQUEST	UE RADIO CAPABILITY CHECK RESPONSE	
UE Context Suspend	UE CONTEXT SUSPEND REQUEST	UE CONTEXT SUSPEND RESPONSE	UE CONTEXT SUSPEND FAILURE
UE Context Resume	UE CONTEXT RESUME REQUEST	UE CONTEXT RESUME RESPONSE	UE CONTEXT RESUME FAILURE
UE Radio Capability ID Mapping	UE RADIO CAPABILITY ID MAPPING REQUEST	UE RADIO CAPABILITY ID MAPPING RESPONSE	
Broadcast Session Setup	BROADCAST SESSION SETUP REQUEST	BROADCAST SESSION SETUP RESPONSE	BROADCAST SESSION SETUP FAILURE
Broadcast Session Modification	BROADCAST SESSION MODIFICATION REQUEST	BROADCAST SESSION MODIFICATION RESPONSE	BROADCAST SESSION MODIFICATION FAILURE
Broadcast Session Release	BROADCAST SESSION RELEASE REQUEST	BROADCAST SESSION RELEASE RESPONSE	
Distribution Setup	DISTRIBUTION SETUP REQUEST	DISTRIBUTION SETUP RESPONSE	DISTRIBUTION SETUP FAILURE
Distribution Release	DISTRIBUTION RELEASE REQUEST	DISTRIBUTION RELEASE RESPONSE	
Multicast Session Activation	MULTICAST SESSION ACTIVATION REQUEST	MULTICAST SESSION ACTIVATION RESPONSE	MULTICAST SESSION ACTIVATION FAILURE
Multicast Session Deactivation	MULTICAST SESSION DEACTIVATION REQUEST	MULTICAST SESSION DEACTIVATION RESPONSE	
Multicast Session Update	MULTICAST SESSION UPDATE REQUEST	MULTICAST SESSION UPDATE RESPONSE	MULTICAST SESSION UPDATE FAILURE
Timing Synchronisation Status	TIMING SYNCHRONISATION STATUS REQUEST	TIMING SYNCHRONISATION STATUS RESPONSE	TIMING SYNCHRONISATION STATUS FAILURE
MT Communication Handling	MT COMMUNICATION HANDLING REQUEST	MT COMMUNICATION HANDLING RESPONSE	MT COMMUNICATION HANDLING FAILURE
Broadcast Session Transport	BROADCAST SESSION TRANSPORT REQUEST	BROADCAST SESSION TRANSPORT RESPONSE	BROADCAST SESSION TRANSPORT FAILURE

Elementary Procedure	Initiating Message	Successful Outcome	Unsuccessful Outcome
		Response message	Response message
NG Removal	NG REMOVAL REQUEST	NG REMOVAL RESPONSE	NG REMOVAL FAILURE
Inventory Request	INVENTORY REQUEST	INVENTORY RESPONSE	INVENTORY FAILURE
Command Request	COMMAND REQUEST	COMMAND RESPONSE	COMMAND FAILURE
A-IoT Session Release	AIOT SESSION RELEASE COMMAND	AIOT SESSION RELEASE COMPLETE	

Table 8.1-2: Class 2 procedures

Elementary Procedure	Message
Downlink RAN Configuration Transfer	DOWNLINK RAN CONFIGURATION TRANSFER
Downlink RAN Status Transfer	DOWNLINK RAN STATUS TRANSFER
Downlink NAS Transport	DOWNLINK NAS TRANSPORT
Error Indication	ERROR INDICATION
Uplink RAN Configuration Transfer	UPLINK RAN CONFIGURATION TRANSFER
Uplink RAN Status Transfer	UPLINK RAN STATUS TRANSFER
Handover Notification	HANDOVER NOTIFY
Initial UE Message	INITIAL UE MESSAGE
NAS Non Delivery Indication	NAS NON DELIVERY INDICATION
Paging	PAGING
PDU Session Resource Notify	PDU SESSION RESOURCE NOTIFY
Reroute NAS Request	REROUTE NAS REQUEST
UE Context Release Request	UE CONTEXT RELEASE REQUEST
Uplink NAS Transport	UPLINK NAS TRANSPORT
AMF Status Indication	AMF STATUS INDICATION
PWS Restart Indication	PWS RESTART INDICATION
PWS Failure Indication	PWS FAILURE INDICATION
Downlink UE Associated NRPPa Transport	DOWNLINK UE ASSOCIATED NRPPA TRANSPORT
Uplink UE Associated NRPPa Transport	UPLINK UE ASSOCIATED NRPPA TRANSPORT
Downlink Non UE Associated NRPPa Transport	DOWNLINK NON UE ASSOCIATED NRPPA TRANSPORT
Uplink Non UE Associated NRPPa Transport	UPLINK NON UE ASSOCIATED NRPPA TRANSPORT
Trace Start	TRACE START
Trace Failure Indication	TRACE FAILURE INDICATION
Deactivate Trace	DEACTIVATE TRACE
Cell Traffic Trace	CELL TRAFFIC TRACE
Location Reporting Control	LOCATION REPORTING CONTROL
Location Reporting Failure Indication	LOCATION REPORTING FAILURE INDICATION
Location Report	LOCATION REPORT
UE TNLA Binding Release	UE TNLA BINDING RELEASE REQUEST
UE Radio Capability Info Indication	UE RADIO CAPABILITY INFO INDICATION
RRC Inactive Transition Report	RRC INACTIVE TRANSITION REPORT
Overload Start	OVERLOAD START
Overload Stop	OVERLOAD STOP
Secondary RAT Data Usage Report	SECONDARY RAT DATA USAGE REPORT
Uplink RIM Information Transfer	UPLINK RIM INFORMATION TRANSFER
Downlink RIM Information Transfer	DOWNLINK RIM INFORMATION TRANSFER
Retrieve UE Information	RETRIEVE UE INFORMATION
UE Information Transfer	UE INFORMATION TRANSFER
RAN CP Relocation Indication	RAN CP RELOCATION INDICATION
Connection Establishment Indication	CONNECTION ESTABLISHMENT INDICATION
AMF CP Relocation Indication	AMF CP RELOCATION INDICATION
Handover Success	HANDOVER SUCCESS
Uplink RAN Early Status Transfer	UPLINK RAN EARLY STATUS TRANSFER
Downlink RAN Early Status Transfer	DOWNLINK RAN EARLY STATUS TRANSFER
Multicast Group Paging	MULTICAST GROUP PAGING
Broadcast Session Release Required	BROADCAST SESSION RELEASE REQUIRED
Timing Synchronisation Status Report	TIMING SYNCHRONISATION STATUS REPORT
RAN Paging Request	RAN PAGING REQUEST
Inventory Report	INVENTORY REPORT
A-IoT Session Release Request	AIOT SESSION RELEASE REQUEST

8.2 PDU Session Management Procedures

8.2.1 PDU Session Resource Setup

8.2.1.1 General

The purpose of the PDU Session Resource Setup procedure is to assign resources on Uu and NG-U for one or several PDU sessions and the corresponding QoS flows, and to setup corresponding DRBs for a given UE. The procedure uses UE-associated signalling.

8.2.1.2 Successful Operation

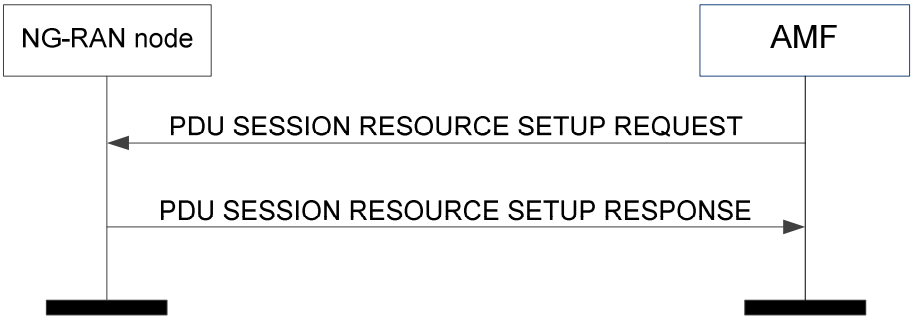


Figure 8.2.1.2-1: PDU session resource setup: successful operation

The AMF initiates the procedure by sending a PDU SESSION RESOURCE SETUP REQUEST message to the NG-RAN node.

The PDU SESSION RESOURCE SETUP REQUEST message shall contain the information required by the NG-RAN node to setup the PDU session related NG-RAN configuration consisting of at least one PDU session resource and include each PDU session resource to setup in the *PDU Session Resource Setup Request List* IE.

Upon reception of the PDU SESSION RESOURCE SETUP REQUEST message, if resources are available for the requested configuration, the NG-RAN node shall execute the requested NG-RAN configuration and allocate associated resources over NG and over Uu for each PDU session listed in the *PDU Session Resource Setup Request List* IE.

If the *RAN Paging Priority* IE is included in the PDU SESSION RESOURCE SETUP REQUEST message, the NG-RAN node may use it to determine a priority for paging the UE in RRC_INACTIVE state.

For each requested PDU session, if resources are available for the requested configuration, the NG-RAN node shall establish at least one DRB and associate each accepted QoS flow of the PDU session which is not associated with an MBS QoS flow to a DRB established.

For each PDU session successfully established the NG-RAN node shall pass to the UE the *PDU Session NAS-PDU* IE, if included. The NG-RAN node shall not send to the UE the PDU Session NAS PDUs associated to the failed PDU sessions.

If the *NAS-PDU* IE is included in the PDU SESSION RESOURCE SETUP REQUEST message, the NG-RAN node shall pass it to the UE.

For each PDU session the NG-RAN node shall store the *UL NG-U UP TNL Information* IE included in the *PDU Session Resource Setup Request Transfer* IE contained in the PDU SESSION RESOURCE SETUP REQUEST message and use it as the uplink termination point for the user plane data for this PDU session.

For each PDU session, if the *Additional UL NG-U UP TNL Information* IE is included in the *PDU Session Resource Setup Request Transfer* IE contained in the PDU SESSION RESOURCE SETUP REQUEST message, the NG-RAN node may allocate for this split PDU session resources for an additional NG-U transport bearer for some or all of the QoS flows present in the *QoS Flow Setup Request List* IE and it shall indicate these QoS flows in the *Additional DL QoS Flow per TNL Information* IE in the *PDU Session Resource Setup Response Transfer* IE. In case the *Additional DL QoS Flow per TNL Information* IE is not included the SMF shall consider the proposed additional UL NG-U UP TNL information as available again.

For each PDU session, if the *Network Instance* IE is included in the *PDU Session Resource Setup Request Transfer* IE contained in the PDU SESSION RESOURCE SETUP REQUEST message and the *Common Network Instance* IE is not present, the NG-RAN node shall, if supported, use it when selecting transport network resource as specified in TS 23.501 [9].

For each PDU session, if the *Common Network Instance* IE is included in the *PDU Session Resource Setup Request Transfer* IE or in the *Additional UL NG-U UP TNL Information* IE, or in the *Additional Redundant UL NG-U UP TNL Information* IE contained in the PDU SESSION RESOURCE SETUP REQUEST message, the NG-RAN node shall, if supported, use it when selecting transport network resource for the concerned NG-U transport bearer as specified in TS 23.501 [9].

For each PDU session, if the *Redundant UL NG-U UP TNL Information* IE is included in the *PDU Session Resource Setup Request Transfer* IE of the PDU SESSION RESOURCE SETUP REQUEST message, the NG-RAN node shall, if supported, use it as the uplink termination point for the user plane data for this PDU session for the redundant transmission and it shall include the *Redundant QoS Flow per TNL Information* IE in the *PDU Session Resource Setup Response Transfer* IE as described in TS 23.501 [9].

For each PDU session, if the *Additional Redundant UL NG-U UP TNL Information* IE is included in the *PDU Session Resource Setup Request Transfer* IE contained in the PDU SESSION RESOURCE SETUP REQUEST message, the NG-RAN node may allocate for this split PDU session resources for an additional redundant NG-U transport bearer for some or all of the QoS flows present in the *QoS Flow Setup Request List* IE and it shall indicate these QoS flows in the *Additional Redundant DL QoS Flow per TNL Information* IE in the *PDU Session Resource Setup Response Transfer* IE. In case the *Additional Redundant DL QoS Flow per TNL Information* IE is not included the SMF shall consider the proposed additional Redundant UL NG-U UP TNL information as available again.

For each PDU session, if the *Redundant Common Network Instance* IE is included in the *PDU Session Resource Setup Request Transfer* IE contained in the PDU SESSION RESOURCE SETUP REQUEST message, the NG-RAN node shall, if supported, use it when selecting transport network resource for the redundant transmission as specified in TS 23.501 [9].

For each PDU session, if the *TSC Traffic Characteristics* IE is included in the *PDU Session Resource Setup Request Transfer* IE contained in the PDU SESSION RESOURCE SETUP REQUEST message, the NG-RAN node shall, if supported, store it and use it as specified in TS 23.501 [9]. For each QoS flow which has been successfully established, if the *Burst Arrival Time* IE is included in the *TSC Assistance Information Uplink* IE of the *TSC Traffic Characteristics* IE, the NG-RAN node may include the *AN Packet Delay Budget Uplink* IE for the same QoS flow within the PDU SESSION RESOURCE SETUP RESPONSE message as specified in TS 23.501 [9]. If the *RAN Feedback Type* IE is included in the *TSC Traffic Characteristics* IE, the NG-RAN node shall, if supported, take this information into account when determining the feedback to provide in the *TSC Traffic Characteristics Feedback* IE in the *PDU Session Resource Setup Response Transfer* IE in the PDU SESSION RESOURCE SETUP RESPONSE message as specified in TS 23.501 [9].

For each PDU session, if the *PDU Session Type* IE included in the *PDU Session Resource Setup Request Transfer* IE of the PDU SESSION RESOURCE SETUP REQUEST message is set to "ethernet", the NG-RAN node may perform appropriate header compression for the concerned PDU session, or if it is set to "unstructured", the NG-RAN node shall not perform header compression for the concerned PDU session.

For each PDU session for which the *Security Indication* IE is included in the *PDU Session Resource Setup Request Transfer* IE of the PDU SESSION RESOURCE SETUP REQUEST message, and the *Integrity Protection Indication* IE or *Confidentiality Protection Indication* IE is set to "required", then the NG-RAN node shall perform user plane integrity protection or ciphering, respectively, for the concerned PDU session. If the NG-RAN node cannot perform the user plane integrity protection or ciphering, it shall reject the setup of the PDU session resources with an appropriate cause value. If the NG-RAN node is an ng-eNB, it shall behave as specified in TS 33.501 [13].

For each PDU session for which the *Security Indication* IE is included in the *PDU Session Resource Setup Request Transfer* IE of the PDU SESSION RESOURCE SETUP REQUEST message, and the *Integrity Protection Indication* IE or *Confidentiality Protection Indication* IE is set to "preferred", then the NG-RAN node should, if supported, perform user plane integrity protection or ciphering, respectively, for the concerned PDU session and shall notify whether it performed the user plane integrity protection or ciphering by including the *Integrity Protection Result* IE or *Confidentiality Protection Result* IE, respectively, in the *PDU Session Resource Setup Response Transfer* IE of the PDU SESSION RESOURCE SETUP RESPONSE message.

For each PDU session for which the *Maximum Integrity Protected Data Rate Downlink* IE or the *Maximum Integrity Protected Data Rate Uplink* IE are included in the *Security Indication* IE in the *PDU Session Resource Setup Request Transfer* IE of the PDU SESSION RESOURCE SETUP REQUEST message, the NG-RAN node shall store the

respective information and, if integrity protection is to be performed for the PDU session, it shall enforce the traffic limits corresponding to the received values, for the concerned PDU session and concerned UE, as specified in TS 23.501 [9].

For each PDU session for which the *Security Indication* IE is included in the *PDU Session Resource Setup Request Transfer* IE of the PDU SESSION RESOURCE SETUP REQUEST message:

- if the *Integrity Protection Indication* IE is set to "not needed", then the NG-RAN node shall not perform user plane integrity protection for the concerned PDU session;

- if the *Confidentiality Protection Indication* IE is set to "not needed", then the NG-RAN node shall not perform user plane ciphering for the concerned PDU session.

For each PDU session for which the *PDU Session Aggregate Maximum Bit Rate* IE is included in the *PDU Session Resource Setup Request Transfer* IE of the PDU SESSION RESOURCE SETUP REQUEST message, the NG-RAN node shall store the received value in the UE context and use it when enforcing traffic policing for Non-GBR QoS flows for the concerned UE as specified in TS 23.501 [9].

For each PDU session in the PDU SESSION RESOURCE SETUP REQUEST message, if the *Additional QoS Flow Information* IE is included in the *QoS Flow Level QoS Parameters* IE in the *PDU Session Resource Setup Request Transfer* IE of the PDU SESSION RESOURCE SETUP REQUEST message, the NG-RAN node may consider it for the DRB allocation process. It is up to NG-RAN node implementation to decide whether and how to use it.

For each PDU session in the PDU SESSION RESOURCE SETUP REQUEST message, if the *Alternative QoS Parameters Set List* IE is included in the *GBR QoS Flow Information* IE in the *PDU Session Resource Setup Request Transfer* IE of the PDU SESSION RESOURCE SETUP REQUEST message, the NG-RAN node may accept the setup of the QoS flow when notification control has been enabled if the requested QoS parameters or at least one of the alternative QoS parameters sets can be fulfilled at the time of setup. In case the NG-RAN node accepts the setup fulfilling one of the alternative QoS parameters it shall indicate the alternative QoS parameters set which it currently fulfils in the *Current QoS Parameters Set Index* IE within the *PDU Session Resource Setup Response Transfer* IE of the PDU SESSION RESOURCE SETUP RESPONSE message, as specified in TS 23.501 [9]. If the NG-RAN node receives a PDU SESSION RESOURCE SETUP REQUEST message containing the *Delay Critical* IE in the *Dynamic 5QI Descriptor* IE of the *QoS Flow Level QoS Parameters* IE of the *PDU Session Resource Setup Request Transfer* IE set to the value "delay critical" but the *Maximum Data Burst Volume* IE is not present in the *Alternative QoS Parameters Set List* IE, the NG-RAN node shall use the *Maximum Data Burst Volume* IE included in the *Dynamic 5QI Descriptor* IE.

For each QoS flow which has been successfully established, the NG-RAN node shall, if supported, store the *Redundant QoS Flow Indicator* IE if included in the *PDU Session Resource Setup Request Transfer* IE contained in the PDU SESSION RESOURCE SETUP REQUEST message and consider it for the redundant transmission as specified in TS 23.501 [9].

For each QoS flow which has been successfully established, if the *QoS Monitoring Request* IE was included in the *QoS Flow Level QoS Parameters* IE contained in the PDU SESSION RESOURCE SETUP REQUEST message, the NG-RAN node shall store this information, and, if supported, perform delay measurement and QoS monitoring, as specified in TS 23.501 [9]. If the *QoS Monitoring Reporting Frequency* IE was included in the *QoS Flow Level QoS Parameters* IE contained in the PDU SESSION RESOURCE SETUP REQUEST message, the NG-RAN node shall store this information and, if supported, use it for RAN part delay reporting.

For each GBR QoS flow which has been successfully established, if the *Monitoring Request on Available Bitrate* IE was included in the *GBR QoS Flow Information* IE in the *PDU Session Resource Setup Request Transfer* IE of the PDU SESSION RESOURCE SETUP REQUEST message, the NG-RAN node shall, if supported, store this information and perform available bitrate monitoring, as specified in TS 23.501 [9].

For each QoS flow requested to be setup, if the *PDU Set QoS Parameters* IE is included in the *QoS Flow Level QoS Parameters* IE contained in the PDU SESSION RESOURCE SETUP REQUEST message, the NG-RAN node shall, if supported, store the received PDU Set QoS Parameters in the UE context and use it as specified in TS 23.501 [9]. If the *ECN Marking or Congestion Information Reporting Request* IE is included in the *PDU Session Resource Setup Request Transfer* IE contained in the PDU SESSION RESOURCE SETUP REQUEST message, the NG-RAN node shall, if supported, use it accordingly for the specific QoS flow. If the *ECN Marking or Congestion Information Reporting Status* IE is included in the *PDU Session Resource Setup Response Transfer* IE, the SMF shall, if supported, use it to deduce if ECN marking at NG-RAN or ECN marking at UPF or congestion information reporting is active or not active.

For each QoS flow requested to be setup the NG-RAN node shall take into account the received *QoS Flow Level QoS Parameters* IE. For each QoS flow the NG-RAN node shall establish or modify the resources according to the values of the *Allocation and Retention Priority* IE (priority level and pre-emption indicators) and the resource situation as follows:

- The NG-RAN node shall consider the priority level of the requested QoS flow, when deciding on the resource allocation.
- The priority levels and the pre-emption indicators may (individually or in combination) be used to determine whether the QoS flow setup has to be performed unconditionally and immediately. If the requested QoS flow is marked as "may trigger pre-emption" and the resource situation requires so, the NG-RAN node may trigger the pre-emption procedure which may then cause the forced release of a lower priority QoS flow which is marked as "pre-emptable". Whilst the process and the extent of the pre-emption procedure are operator-dependent, the pre-emption indicators shall be treated as follows:

  1. The values of the last received *Pre-emption Vulnerability* IE and *Priority Level* IE shall prevail.
  2. If the *Pre-emption Capability* IE is set to "may trigger pre-emption", then this allocation request may trigger the pre-emption procedure.
  3. If the *Pre-emption Capability* IE is set to "shall not trigger pre-emption", then this allocation request shall not trigger the pre-emption procedure.
  4. If the *Pre-emption Vulnerability* IE is set to "pre-emptable", then this QoS flow shall be included in the pre-emption process.
  5. If the *Pre-emption Vulnerability* IE is set to "not pre-emptable", then this QoS flow shall not be included in the pre-emption process.

- The NG-RAN node pre-emption process shall keep the following rules:

  1. The NG-RAN node shall only pre-empt QoS flows with lower priority, in ascending order of priority.
  2. The pre-emption may be done for QoS flows belonging to the same UE or to other UEs.

For each QoS flow which has been successfully established, the NG-RAN node shall store the mapped E-RAB ID if included in the *PDU Session Resource Setup Request Transfer* IE contained in the PDU SESSION RESOURCE SETUP REQUEST message and use it as specified in TS 38.300 [8].

For each PDU session, if the *Redundant PDU Session Information* IE is included in the *PDU Session Resource Setup Request Transfer* IE contained in the PDU SESSION RESOURCE SETUP REQUEST message, the NG-RAN node shall, if supported, store the received information in the UE context and setup the redundant user plane for the redundant PDU session as specified in TS38.300 [8] and TS 23.501 [9]. If the *PDU Session Type* IE is set to "ethernet" and the redundancy requirement is fulfilled using a secondary NG-RAN node, the NG-RAN node shall, if supported, include the *Global RAN Node ID of Secondary NG-RAN Node* IE in the *PDU Session Resource Setup Response Transfer* IE of the PDU SESSION RESOURCE SETUP RESPONSE message. If the *PDU Session Pair ID* IE is included in the *Redundant PDU Session Information* IE, the NG-RAN node may use it to identify the paired PDU sessions.

The NG-RAN node shall report to the AMF in the PDU SESSION RESOURCE SETUP RESPONSE message the result for each PDU session resource requested to be setup:

- For each PDU session resource successfully setup, the *PDU Session Resource Setup Response Transfer* IE shall be included containing:

  1. The NG-U UP transport layer information to be used for the PDU session and associated list of QoS flows which have been successfully established, in the *QoS Flow per TNL Information* IE.
  2. The list of QoS flows which failed to be established, if any, in the *QoS Flow Failed to Setup List* IE. When the NG-RAN node reports unsuccessful establishment of a QoS flow, the cause value should be precise enough to enable the SMF to know the reason for the unsuccessful establishment.

- For each PDU session resource which failed to be setup, the *PDU Session Resource Setup Unsuccessful Transfer* IE shall be included containing a cause value that should be precise enough to enable the SMF to know the reason for the unsuccessful establishment.

Upon reception of the PDU SESSION RESOURCE SETUP RESPONSE message the AMF shall, for each PDU session indicated in the *PDU Session ID* IE, transfer transparently the *PDU Session Resource Setup Response Transfer* IE or *PDU Session Resource Setup Unsuccessful Transfer* IE to the SMF associated with the concerned PDU session.

Upon reception of the PDU SESSION RESOURCE SETUP REQUEST message to setup a QoS flow for IMS voice, if the NG-RAN node is not able to support IMS voice, the NG-RAN node shall initiate EPS fallback or RAT fallback for IMS voice procedure as specified in TS 23.501 [9] and report unsuccessful establishment of the QoS flow in the *PDU Session Resource Setup Response Transfer* IE or in the *PDU Session Resource Setup Unsuccessful Transfer* IE with cause value "IMS voice EPS fallback or RAT fallback triggered".

For each PDU session for which the *Global RAN Node ID of Secondary NG-RAN Node* IE is included in the *PDU Session Resource Setup Response Transfer* IE of the PDU SESSION RESOURCE SETUP RESPONSE message, the SMF shall, if supported, handle this information as specified in TS 23.501 [9].

The *UE Aggregate Maximum Bit Rate* IE should be sent to the NG-RAN node if the AMF has not sent it previously. If it is included in the PDU SESSION RESOURCE SETUP REQUEST message, the NG-RAN node shall store the UE Aggregate Maximum Bit Rate in the UE context, and use the received UE Aggregate Maximum Bit Rate for all Non-GBR QoS flows for the concerned UE as specified in TS 23.501 [9].

For each PDU session, if the *PDU Session Expected UE Activity Behaviour* IE is included in the PDU SESSION RESOURCE SETUP REQUEST message, the NG-RAN node shall, if supported, handle this information as specified in TS 23.501 [9].

If the *UE Slice Maximum Bit Rate List* IE is included in the PDU SESSION RESOURCE SETUP REQUEST message, the NG-RAN node shall, if supported, store the UE Slice Maximum Bit Rate List in the UE context, and use it for each S-NSSAI for the concerned UE as specified in TS 23.501 [9].

For each PDU session, if the *Downlink TL Container* IE is included in the *PDU Session Resource Setup Request Transfer* IE of the PDU SESSION RESOURCE SETUP REQUEST message, the NG-RAN node shall, if supported, handle it as specified in TS 29.585 [56] and shall include the *Uplink TL Container* IE in the *PDU Session Resource Setup Response Transfer* IE as specified in TS 29.585 [56].

If the *PDU Set QoS Parameters* IE or the *DL PDU Set Information Marking Support Indication* IE set to "true" is included in the PDU SESSION RESOURCE SETUP REQUEST message, the NG-RAN node shall, if supported, report in the PDU SESSION RESOURCE SETUP RESPONSE message the *PDU Set based Handling Indicator* IE in the *PDU Session Resource Setup Response Transfer* IE. If the *PDU Set based Handling Indicator* IE is included in the *PDU Session Resource Setup Response Transfer* IE in the PDU SESSION RESOURCE SETUP RESPONSE message, the SMF shall, if supported, handle this information as specified in TS 23.501 [9].

For each QoS flow requested to be setup, if the *MMSID* IE is included in the *QoS Flow Level QoS Parameters* IE contained in the PDU SESSION RESOURCE SETUP REQUEST message, the NG-RAN node shall, if supported, consider that the QoS flow is related to a multi-modal service, as described in TS 23.501 [9] and TS 38.300 [8].

For each QoS flow requested to be setup, if the *Indication of Bitrate Adaptation* IE is included in the *QoS Flow Level QoS Parameters* IE contained in the PDU SESSION RESOURCE SETUP REQUEST message, the NG-RAN node shall, if supported, store the received indication and use it for uplink rate control, as described in TS 23.501 [9] and TS 38.300 [8].

The NG-RAN node shall, if supported, report in the PDU SESSION RESOURCE SETUP RESPONSE message location information of the UE in the *User Location Information* IE.

If the *User Location Information* IE is included in the PDU SESSION RESOURCE SETUP RESPONSE message, the AMF shall handle this information as specified in TS 23.501 [9].

If the *MBS Support Indicator* IE is included in the *PDU Session Resource Setup Response Transfer* IE in the PDU SESSION RESOURCE SETUP RESPONSE message, the SMF shall, if supported, handle this information as specified in TS 23.247 [44].

Interactions with Handover Preparation procedure:

If a handover becomes necessary during the PDU Session Resource Setup procedure, the NG-RAN node may interrupt the ongoing PDU Session Resource Setup procedure and initiate the Handover Preparation procedure as follows:

1. The NG-RAN node shall send the PDU SESSION RESOURCE SETUP RESPONSE message in which the NG-RAN node shall indicate, if necessary, all the PDU session resources which failed to be setup with an appropriate

cause value, e.g. "NG intra-system handover triggered", "NG inter-system handover triggered" or "Xn handover triggered".

2. The NG-RAN node shall trigger the handover procedure.

8.2.1.3 Unsuccessful Operation

The unsuccessful operation is specified in the successful operation section.

8.2.1.4 Abnormal Conditions

If the NG-RAN node receives a PDU SESSION RESOURCE SETUP REQUEST message containing several *PDU Session ID* IEs (in the *PDU Session Resource Setup Request List* IE) set to the same value, the NG-RAN node shall report the establishment of the corresponding PDU sessions as failed in the PDU SESSION RESOURCE SETUP RESPONSE message with an appropriate cause value.

If the NG-RAN node receives a PDU SESSION RESOURCE SETUP REQUEST message containing a *PDU Session ID* IE (in the *PDU Session Resource Setup Request List* IE) set to a value that identifies an active PDU session (established before the PDU SESSION RESOURCE SETUP REQUEST message was received), the NG-RAN node shall report the establishment of the new PDU session as failed in the PDU SESSION RESOURCE SETUP RESPONSE message with an appropriate cause value.

If the NG-RAN node receives a PDU SESSION RESOURCE SETUP REQUEST message containing a *QoS Flow Setup Request List* IE in the *PDU Session Resource Setup Request Transfer* IE including at least one Non-GBR QoS flow but the *PDU Session Aggregate Maximum Bit Rate* IE is not present, the NG-RAN node shall report the establishment of the corresponding PDU session as failed in the PDU SESSION RESOURCE SETUP RESPONSE message with an appropriate cause value.

If the NG-RAN node receives a PDU SESSION RESOURCE SETUP REQUEST message containing a *QoS Flow Level QoS Parameters* IE in the *PDU Session Resource Setup Request Transfer* IE for a GBR QoS flow but the *GBR QoS Flow Information* IE is not present, the NG-RAN node shall report the establishment of the corresponding QoS flow as failed in the *PDU Session Resource Setup Response Transfer* IE of the PDU SESSION RESOURCE SETUP RESPONSE message with an appropriate cause value.If the NG-RAN node receives a PDU SESSION RESOURCE SETUP REQUEST message containing the *Delay Critical* IE in the *Dynamic 5QI Descriptor* IE of the *QoS Flow Level QoS Parameters* IE of the *PDU Session Resource Setup Request Transfer* IE set to the value "delay critical" but the *Maximum Data Burst Volume* IE is not present, the NG-RAN node shall report the establishment of the corresponding QoS flow as failed in the *PDU Session Resource Setup Response Transfer* IE of the PDU SESSION RESOURCE SETUP RESPONSE message with an appropriate cause value.

8.2.2 PDU Session Resource Release

8.2.2.1 General

The purpose of the PDU Session Resource Release procedure is to enable the release of already established PDU session resources for a given UE. The procedure uses UE-associated signalling.

8.2.2.2 Successful Operation

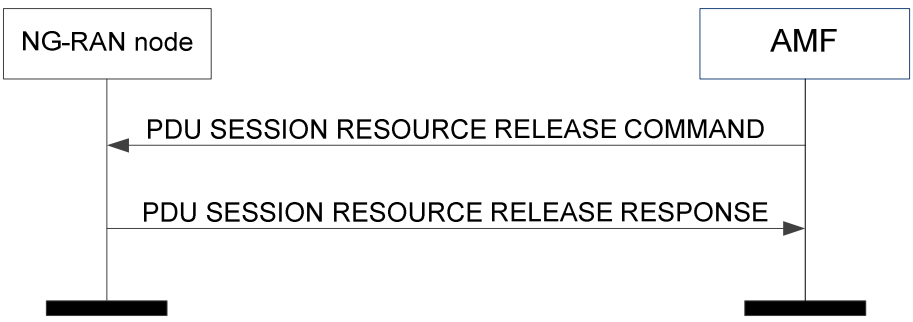


Figure 8.2.2.2-1: PDU session resource release: successful operation

The AMF initiates the procedure by sending a PDU SESSION RESOURCE RELEASE COMMAND message.

The PDU SESSION RESOURCE RELEASE COMMAND message shall contain the information required by the NG-RAN node to release at least one PDU session resource, and include each PDU session resource to release in the *PDU Session Resource to Release List* IE.

If a *NAS-PDU* IE is contained in the PDU SESSION RESOURCE RELEASE COMMAND message, the NG-RAN node shall pass it to the UE.

Upon reception of the PDU SESSION RESOURCE RELEASE COMMAND message the NG-RAN node shall execute the release of the requested PDU sessions. For each PDU session to be released the NG-RAN node shall release the corresponding resources over Uu and over NG, if any.

If the *RAN Paging Priority* IE is included in the PDU SESSION RESOURCE RELEASE COMMAND message, the NG-RAN node may use it to determine a priority for paging the UE in RRC_INACTIVE state.

The NG-RAN node shall, if supported, report in the PDU SESSION RESOURCE RELEASE RESPONSE message location information of the UE in the *User Location Information* IE.

After sending a PDU SESSION RESOURCE RELEASE RESPONSE message, the NG-RAN node shall be prepared to receive a PDU SESSION RESOURCE SETUP REQUEST message requesting establishment of a PDU session with a PDU Session ID corresponding to one of the PDU Session IDs that was present in the *PDU Session Resource to Release List* IE of the PDU SESSION RESOURCE RELEASE COMMAND message.

If the *User Location Information* IE is included in the PDU SESSION RESOURCE RELEASE RESPONSE message, the AMF shall handle this information as specified in TS 23.501 [9].

For each PDU session for which the *Secondary RAT Usage Information* IE is included in the *PDU Session Resource Release Response Transfer* IE, the SMF shall handle this information as specified in TS 23.502 [10].

For each PDU session, if the *Downlink TL Container* IE for a QoS flow is included in the *PDU Session Resource Release Command Transfer* IE of the PDU SESSION RESOURCE RELEASE COMMAND message, the NG-RAN node shall, if supported, handle it as specified in TS 29.585 [56] and shall include the *Uplink TL Container* IE for the indicated QoS flow in the *PDU Session Resource Release Response Transfer* IE as specified in TS 29.585 [56].

8.2.2.3 Unsuccessful Operation

The unsuccessful operation is specified in the successful operation section.

8.2.2.4 Abnormal Conditions

If the NG-RAN node receives a PDU SESSION RESOURCE RELEASE COMMAND message containing multiple *PDU Session ID* IEs (in the *PDU Session Resource to Release List* IE) set to the same value, the NG-RAN node shall initiate the release of one corresponding PDU session and ignore the duplication of the instances of the selected corresponding PDU sessions.

8.2.3 PDU Session Resource Modify

8.2.3.1 General

The purpose of the PDU Session Resource Modify procedure is to enable configuration modifications of already established PDU session(s) for a given UE. It is also to enable the setup, modification and release of the QoS flow for already established PDU session(s). The procedure uses UE-associated signalling.

8.2.3.2 Successful Operation

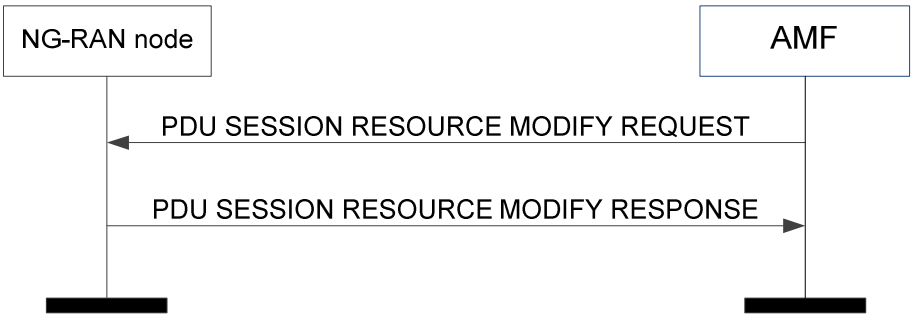


Figure 8.2.3.2-1: PDU session resource modify: successful operation

The AMF initiates the procedure by sending a PDU SESSION RESOURCE MODIFY REQUEST message to the NG-RAN node.

The PDU SESSION RESOURCE MODIFY REQUEST message shall contain the information required by the NG-RAN node, which may trigger the NG-RAN configuration modification for the existing PDU sessions listed in the *PDU Session Resource Modify Request List* IE.

Upon reception of the PDU SESSION RESOURCE MODIFY REQUEST message, if the NG-RAN configuration is triggered to be modified and if resources are available for the modified NG-RAN configuration, the NG-RAN node shall execute the configuration modification for the requested PDU session.

If the *RAN Paging Priority* IE is included in the PDU SESSION RESOURCE MODIFY REQUEST message, the NG-RAN node may use it to determine a priority for paging the UE in RRC_INACTIVE state.

For each PDU session, if the *S-NSSAI* IE is included in the *PDU Session Resource Modify Request Item* IE contained in the PDU SESSION RESOURCE MODIFY REQUEST message, the NG-RAN node shall replace the previously provided S-NSSAI by the received S-NSSAI for the concerned PDU session and use it as specified in TS 23.502 [10].

For each PDU session, if the *Network Instance* IE is included in the *PDU Session Resource Modify Request Transfer* IE contained in the PDU SESSION RESOURCE MODIFY REQUEST message and the *Common Network Instance* IE is not present, the NG-RAN node shall, if supported, use it as specified in TS 23.501 [9].

For each PDU session, if the *Common Network Instance* IE is included in the *PDU Session Resource Modify Request Transfer* IE or in the *Additional UL NG-U UP TNL Information* IE, or in the *Additional Redundant UL NG-U UP TNL Information* IE contained in the PDU SESSION RESOURCE MODIFY REQUEST message, the NG-RAN node shall, if supported, use it when selecting transport network resource for the concerned NG-U transport bearer as specified in TS 23.501 [9].

For each PDU session, if the *Redundant Common Network Instance* IE is included in the *PDU Session Resource Modify Request Transfer* IE contained in the PDU SESSION RESOURCE MODIFY REQUEST message, the NG-RAN node shall, if supported, use it for the redundant transmission as specified in TS 23.501 [9].

For each PDU session, if the *TSC Traffic Characteristics* IE is included in the *PDU Session Resource Modify Request Transfer* IE contained in the PDU SESSION RESOURCE MODIFY REQUEST message, the NG-RAN node shall, if supported, store it and use it as specified in TS 23.501 [9]. If the *RAN Feedback Type* IE is included in the *TSC Traffic Characteristics* IE, the NG-RAN node shall, if supported, take this information into account when determining the feedback to provide in the *TSC Traffic Characteristics Feedback* IE in the *PDU Session Resource Modify Response Transfer* IE in the PDU SESSION RESOURCE MODIFY RESPONSE message as specified in TS 23.501 [9].

For each PDU session, if the *Redundant QoS Flow Indicator* IE is included and set to "false" for all QoS flows, the NG-RAN node shall, if supported, stop the redundant transmission and release the redundant tunnel for the concerned PDU session as specified in TS 23.501 [9].

For each PDU session, if the *Downlink TL Container* IE for a QoS flow is included in the *PDU Session Resource Modify Request Transfer* IE contained in the PDU SESSION RESOURCE MODIFY REQUEST message, the NG-RAN node shall, if supported, handle it as specified in TS 29.585 [56] and shall include the *Uplink TL Container* IE for the indicated QoS flow in the *PDU Session Resource Modify Response Transfer* IE as specified in TS 29.585 [56].

For each PDU session in the PDU SESSION RESOURCE MODIFY REQUEST message, if the *Alternative QoS Parameters Set List* IE is included in the *GBR QoS Flow Information* IE in the *PDU Session Resource Modify Request Transfer* IE of the PDU SESSION RESOURCE MODIFY REQUEST message, the NG-RAN node may accept the setup of the QoS flow when notification control has been enabled if the requested QoS parameters or at least one of the alternative QoS parameters sets can be fulfilled at the time of setup. In case the NG-RAN node accepts the setup fulfilling one of the alternative QoS parameters it shall indicate the alternative QoS parameters set which it currently fulfils in the *Current QoS Parameters Set Index* IE within the *PDU Session Resource Modify Response Transfer* IE of the PDU SESSION RESOURCE MODIFY RESPONSE message, as specified in TS 23.501 [9]. If the NG-RAN node receives a PDU SESSION RESOURCE MODIFY REQUEST message containing the *Delay Critical* IE in the *Dynamic 5QI Descriptor* IE of the *QoS Flow Level QoS Parameters* IE of the *PDU Session Resource Modify Request Transfer* IE set to the value "delay critical" but the *Maximum Data Burst Volume* IE is not present in the *Alternative QoS Parameters Set List* IE, the NG-RAN node shall use the *Maximum Data Burst Volume* IE included in the *Dynamic 5QI Descriptor* IE.

For each PDU session included in the *PDU Session Resource Modify Request List* IE:

- For each QoS flow included in the *QoS Flow Add or Modify Request List* IE, based on the *QoS Flow Level QoS Parameters* IE, the NG-RAN node may establish, modify or release the DRB configuration and may change allocation of resources on NG or Uu accordingly. The NG-RAN node shall associate each QoS flow accepted to setup or modify which is not associated with an MBS QoS flow with a DRB of the PDU session. The associated DRB for the QoS flow accepted to modify may not change. If the *PDU Set QoS Parameters* IE is received, the NG-RAN node shall, if supported, store the received PDU Set QoS Parameters in the UE context and use it as specified in TS 23.501 [9]. If the *ECN Marking or Congestion Information Reporting Request* IE is included in the *PDU Session Resource Modify Request Transfer* IE contained in the PDU SESSION RESOURCE MODIFY REQUEST message, the NG-RAN node shall, if supported, use it accordingly for the specific QoS flow. If the *ECN Marking or Congestion Information Reporting Status* IE is included in the *PDU Session Resource Modify Response Transfer* IE, the SMF shall, if supported, use it to deduce if ECN marking at NG-RAN or ECN marking at UPF or congestion information reporting is active or not active.

- For each QoS flow, if the *Redundant QoS Flow Indicator* IE is included, the NG-RAN node shall, if supported, store it and consider it for the redundant transmission as specified in TS 23.501 [9].

- For each QoS flow included in the *QoS Flow Add or Modify Request List* IE, if the *QoS Flow Add or Modify Request Item* IE is included for an existing *QoS Flow Identifier* IE, the NG-RAN node shall overwrite the content of the full *QoS Flow Add or Modify Request Item* IE.

- For each QoS flow included in the *QoS Flow to Release List* IE, the NG-RAN node shall de-associate the QoS flow with the previously associated DRB.

- For each QoS flow included in the *QoS Flow Add or Modify Request List* IE, if the *UL NG-U UP TNL Information* IE is included, the NG-RAN node shall, if supported, include the *DL NG-U UP TNL Information* IE in the *QoS Flow Add or Modify Response Item* IE for the QoS flow within the PDU SESSION RESOURCE MODIFY RESPONSE message as specified in TS 23.501 [9].

- For each QoS flow, if the *Burst Arrival Time* IE is included in the *TSC Assistance Information Uplink* IE of the *TSC Traffic Characteristics* IE, the NG-RAN node may include the *AN Packet Delay Budget Uplink* IE for the same QoS flow within the PDU SESSION RESOURCE MODIFY RESPONSE message as specified in TS 23.501 [9].

- If the *NAS-PDU* IE is received for the PDU session, the NG-RAN node shall pass it to the UE only if at least one of the requests included in the *PDU Session Resource Modify Request Transfer* IE is successful (i.e. the PDU session is included in the *PDU Session Resource Modify Response Item* IE of the PDU SESSION RESOURCE MODIFY RESPONSE message).

- The NG-RAN node may change allocation of resources on NG according to the requested target configuration.

- If the *PDU Session Aggregate Maximum Bit Rate* IE is included in the *PDU Session Resource Modify Request Transfer* IE, the NG-RAN node shall store and use the received PDU Session Aggregate Maximum Bit Rate value when enforcing traffic policing for Non-GBR QoS flows for the concerned UE as specified in TS 23.501 [9].

- If the *UL NG-U UP TNL Information* IE in the *UL NG-U UP TNL Modify List* IE is included in the *PDU Session Resource Modify Request Transfer* IE, the NG-RAN node shall update the transport layer information for the

uplink data accordingly for the concerned transport bearers identified by the *DL NG-U UP TNL Information* IE included in the *PDU Session Resource Modify Request Transfer* IE for the concerned PDU session.

- If the *Additional UL NG-U UP TNL Information* IE is included in the *PDU Session Resource Modify Request Transfer* IE, the NG-RAN node may allocate resources for an additional NG-U transport bearer for some or all of the QoS flows present in the *QoS Flow Add or Modify Request List* IE and it shall indicate these QoS flows in the *Additional DL QoS Flow per TNL Information* IE in the *PDU Session Resource Modify Response Transfer* IE. In case the *Additional DL QoS Flow per TNL Information* IE is not included the SMF shall consider the proposed additional UL NG-U UP TNL information as available again.

- In case more than one NG-U transport bearers have been set up for the PDU session, if all the QoS flows associated to one existing NG-U transport bearer are included in the *QoS Flow to Release List* IE in the *PDU Session Resource Modify Request Transfer* IE, the NG-RAN node and 5GC shall consider that the concerned NG-U transport bearer is removed for the PDU session, and both NG-RAN node and 5GC shall therefore consider the related NG-U UP TNL information as available again.

- If the *Redundant UL NG-U UP TNL Information* IE within the *UL NG-U UP TNL Modify List* IE is included in the *PDU Session Resource Modify Request Transfer* IE, the NG-RAN node shall, if supported, update the transport layer information for the uplink data accordingly for the concerned transport bearer identified by the *Redundant DL NG-U UP TNL Information* IE included in the *PDU Session Resource Modify Request Transfer* IE for the concerned PDU session.

- If the *Additional Redundant UL NG-U UP TNL Information* IE is included in the *PDU Session Resource Modify Request Transfer* IE, the NG-RAN node may allocate resources for an additional redundant NG-U transport bearer for some or all of the QoS flows present in the *QoS Flow Add or Modify Request List* IE and it shall, if supported, indicate these QoS flows in the *Additional Redundant DL QoS Flow per TNL Information* IE in the *PDU Session Resource Modify Response Transfer* IE. In case the *Additional Redundant DL QoS Flow per TNL Information* IE is not included the SMF shall consider the proposed additional Redundant UL NG-U UP TNL information as available again.

- If the *Redundant UL NG-U UP TNL Information* IE is included in the *PDU Session Resource Modify Request Transfer* IE, the NG-RAN node may allocate resources for a redundant NG-U transport bearer for some or all of the QoS flows present in the *QoS Flow Add or Modify Request List* IE and it shall, if supported, indicate the corresponding NG-RAN endpoint of this NG-U transport bearer in the *Redundant DL NG-U UP TNL Information* IE in the *PDU Session Resource Modify Response Transfer* IE.

- If the *Security Indication* IE is included in the *PDU Session Resource Modify Request Transfer* IE, the NG-RAN node shall, if supported, only update the maximum integrity protected data rate uplink and/or the maximum integrity protected data rate downlink, and take them into account as defined in the PDU Session Resource Setup procedure.

- If the *User Plane Failure Indication* IE is included in the *PDU Session Resource Modify Request Transfer* IE, the NG-RAN node shall, if supported, consider that the NG-U tunnel established for the PDU session experienced a user plane failure, and perform one of the below actions:

  - trigger the PDU Session Resource Notify procedure to release the tunnel and the associated QoS flows.

  - trigger the PDU Session Resource Modify Indication procedure to move the associated QoS flows to the other existing tunnel.

  - decide to establish a new NG-U tunnel to replace the failed one, in which case it shall include, as applicable, either the new *DL NG-U UP TNL Information* IE or the *Additional DL NG-U UP TNL Information* IE, and set the *User Plane Failure Indication Report* IE in the *PDU Session Resource Modify Response Transfer* IE to "new transport address allocated" and use the *UL NG-U UP TNL Information* IE in the *User Plane Failure Indication* IE for the uplink data.

For each QoS flow which has been successfully added or modified, if the *QoS Monitoring Request* IE was included in the *QoS Flow Level QoS Parameters* IE contained in the PDU SESSION RESOURCE MODIFY REQUEST message, the NG-RAN node shall store this information, and, if supported, perform delay measurement and QoS monitoring, as specified in TS 23.501 [9]. If the *QoS Monitoring Reporting Frequency* IE was included in the *QoS Flow Level QoS Parameters* IE contained in the PDU SESSION RESOURCE MODIFY REQUEST message, the NG-RAN node shall store this information and, if supported, use it for RAN part delay reporting.

For each GBR QoS flow which has been successfully added or modified, if the *Monitoring Request on Available Bitrate* IE was included in the *GBR QoS Flow Information* IE in the *PDU Session Resource Modify Request Transfer* IE of the PDU SESSION RESOURCE MODIFY REQUEST message, the NG-RAN node shall, if supported, store this information and perform available bitrate monitoring, as specified in TS 23.501 [9].

The NG-RAN node shall report to the AMF, in the PDU SESSION RESOURCE MODIFY RESPONSE message, the result for each PDU session requested to be modified listed in the PDU SESSION RESOURCE MODIFY REQUEST message:

- For each PDU session which is successfully modified, the *PDU Session Resource Modify Response Transfer* IE shall be included containing:

  1. The list of QoS flows which have been successfully setup or modified, if any, in the *QoS Flow Add or Modify Response List* IE in case the PDU Session Resource Modify procedure is triggered by QoS flow setup or modification.

  2. The list of QoS flows which have failed to be setup or modified, if any, in the *QoS Flow Failed to Add or Modify List* IE in case the PDU Session Resource Modify procedure is triggered by QoS flow setup or modification.

- For each PDU session which failed to be modified, the *PDU Session Resource Modify Unsuccessful Transfer* IE shall be included containing the failure cause.

- For each PDU session, if the *DL NG-U UP TNL Information* IE is included in the *PDU Session Resource Modify Response Transfer* IE in the PDU SESSION RESOURCE MODIFY RESPONSE message, it shall be considered by the SMF as the new DL transport layer address for the PDU session. The NG-RAN also may indicate the mapping between each new DL transport layer address and the corresponding UL transport layer address assigned by the 5GC.

- For each PDU session, if the *Additional NG-U UP TNL Information* IE is included in the *PDU Session Resource Modify Response Transfer* IE in the PDU SESSION RESOURCE MODIFY RESPONSE message, it shall, if supported, be considered by the SMF as the new DL transport layer address(es) for the PDU session. The NG-RAN also may indicate the mapping between each new DL transport layer address and the corresponding UL transport layer address assigned by the 5GC.

- For each PDU session, if the *Additional Redundant NG-U UP TNL Information* IE is included in the *PDU Session Resource Modify Response Transfer* IE in the PDU SESSION RESOURCE MODIFY RESPONSE message, it shall, if supported, be considered by the SMF as the new DL transport layer address(es) for the PDU session for the redundant transmission. The NG-RAN also may indicate the mapping between each new redundant DL transport layer address and the corresponding redundant UL transport layer address assigned by the 5GC.

- For each PDU session, if the *User Plan Failure Indication Report* IE is included in the *PDU Session Resource Modify Response Transfer* IE in the PDU SESSION RESOURCE MODIFY RESPONSE message, it shall, if supported, take it into account as specified in TS 23.527 [57].

Upon reception of the PDU SESSION RESOURCE MODIFY RESPONSE message the AMF shall, for each PDU session indicated in the *PDU Session ID* IE, transfer transparently the *PDU Session Resource Modify Response Transfer* IE or *PDU Session Resource Modify Unsuccessful Transfer* IE to each SMF associated with the concerned PDU session.

The NG-RAN node shall, if supported, report in the PDU SESSION RESOURCE MODIFY RESPONSE message location information of the UE in the *User Location Information* IE.

For a PDU session or a QoS flow which failed to be modified, the NG-RAN node shall fall back to the configuration of the PDU session or the QoS flow as it was configured prior to the reception of the PDU SESSION RESOURCE MODIFY REQUEST message.

Upon reception of the PDU SESSION RESOURCE MODIFY REQUEST message to setup a QoS flow for IMS voice, if the NG-RAN node is not able to support IMS voice, the NG-RAN node shall initiate EPS fallback or RAT fallback for IMS voice procedure as specified in TS 23.501 [9] and report unsuccessful establishment of the QoS flow in the *PDU Session Resource Modify Response Transfer* IE or in the *PDU Session Resource Modify Unsuccessful Transfer* IE with cause value "IMS voice EPS fallback or RAT fallback triggered".

For each PDU session, if the *PDU Session Expected UE Activity Behaviour* IE is included in the PDU SESSION RESOURCE MODIFY REQUEST message, the NG-RAN node shall, if supported, handle this information as specified in TS 23.501 [9].

If the *PDU Set QoS Parameters* IE or the *DL PDU Set Information Marking Support Indication* IE set to "true" is included in the PDU SESSION RESOURCE MODIFY REQUEST message, the NG-RAN node shall, if supported, report in the PDU SESSION RESOURCE MODIFY RESPONSE message the *PDU Set based Handling Indicator* IE in the *PDU Session Resource Modify Response Transfer* IE. If the *PDU Set based Handling Indicator* IE is included in the *PDU Session Resource Modify Response Transfer* IE in the PDU SESSION RESOURCE MODIFY RESPONSE message, the SMF shall, if supported, handle this information as specified in TS 23.501 [9].

For each QoS flow to be added or modified, if the *MMSID* IE is included in the *QoS Flow Level QoS Parameters* IE contained in the PDU SESSION RESOURCE MODIFY REQUEST message, the NG-RAN node shall, if supported, consider that the QoS flow is related to a multi-modal service, as described in TS 23.501 [9] and TS 38.300 [8].

For each QoS flow to be added or modified, if the *Indication of Bitrate Adaptation* IE is included in the *QoS Flow Level QoS Parameters* IE contained in the PDU SESSION RESOURCE MODIFY REQUEST message, the NG-RAN node shall, if supported, store the received indication and use it for uplink rate control, as described in TS 23.501 [9] and TS 38.300 [8].

If the *User Location Information* IE is included in the PDU SESSION RESOURCE MODIFY RESPONSE message, the AMF shall handle this information as specified in TS 23.501 [9].

For each PDU session for which the *Secondary RAT Usage Information* IE is included in the *PDU Session Resource Modify Response Transfer* IE, the SMF shall handle this information as specified in TS 23.502 [10].

If the *MBS Support Indicator* IE is included in the *PDU Session Resource Modify Response Transfer* IE in the PDU SESSION RESOURCE MODIFY RESPONSE message, the SMF shall, if supported, handle this information as specified in TS 23.247 [44].

Interactions with Handover Preparation procedure:

If a handover becomes necessary during the PDU Session Resource Modify procedure, the NG-RAN node may interrupt the ongoing PDU Session Resource Modify procedure and initiate the Handover Preparation procedure as follows:

1. The NG-RAN node shall send the PDU SESSION RESOURCE MODIFY RESPONSE message in which the NG-RAN node shall indicate, if necessary, all the PDU sessions failed with an appropriate cause value, e.g. "NG intra-system handover triggered", "NG inter-system handover triggered" or "Xn handover triggered".

2. The NG-RAN node shall trigger the handover procedure.

Interactions with PDU Session Resource Notify procedure:

If the *User Plane Failure Indication* IE is included in the *PDU Session Resource Modify Request Transfer* IE and the NG-RAN node triggers the PDU Session Resource Notify procedure, the NG-RAN node shall set the *User Plane Failure Indication Report* IE in the *PDU Session Resource Modify Response Transfer* IE to "QoS flows and tunnel to be released".

Interactions with PDU Session Resource Modify Indication procedure:

If the *User Plane Failure Indication* IE is included in the *PDU Session Resource Modify Request Transfer* IE and the NG-RAN node triggers the PDU Session Resource Modify Indication procedure, the NG-RAN node shall set the *User Plane Failure Indication Report* IE in the *PDU Session Resource Modify Response Transfer* IE to "QoS flows to be moved".

8.2.3.3 Unsuccessful Operation

The unsuccessful operation is specified in the successful operation section.

8.2.3.4 Abnormal Conditions

If the NG-RAN node receives a PDU SESSION RESOURCE MODIFY REQUEST message containing several *PDU Session ID* IEs (in the *PDU Session Resource Modify Request List* IE) set to the same value, the NG-RAN node shall

report the modification of the corresponding PDU sessions as failed in the PDU SESSION RESOURCE MODIFY RESPONSE message with an appropriate cause value.

If the NG-RAN node receives a PDU SESSION RESOURCE MODIFY REQUEST message containing some *PDU Session ID* IEs (in the *PDU Session Resource Modify Request List* IE) that the NG-RAN node does not recognize, the NG-RAN node shall report the corresponding invalid PDU sessions as failed in the PDU SESSION RESOURCE MODIFY RESPONSE message with an appropriate cause value.

If the NG-RAN node receives a PDU SESSION RESOURCE MODIFY REQUEST message containing a *QoS Flow Level QoS Parameters* IE in the *PDU Session Resource Modify Request Transfer* IE for a GBR QoS flow but the *GBR QoS Flow Information* IE is not present, the NG-RAN node shall report the addition or modification of the corresponding QoS flow as failed in the *PDU Session Resource Modify Response Transfer* IE of the PDU SESSION RESOURCE MODIFY RESPONSE message with an appropriate cause value.

If the NG-RAN node receives a PDU SESSION RESOURCE MODIFY REQUEST message containing the *Delay Critical* IE in the *Dynamic 5QI Descriptor* IE of the *QoS Flow Level QoS Parameters* IE of the *PDU Session Resource Modify Request Transfer* IE set to the value "delay critical" but the *Maximum Data Burst Volume* IE is not present, the NG-RAN node shall report the addition or modification of the corresponding QoS flow as failed in the *PDU Session Resource Modify Response Transfer* IE of the PDU SESSION RESOURCE MODIFY RESPONSE message with an appropriate cause value.

If the NG-RAN node receives a PDU SESSION RESOURCE MODIFY REQUEST message containing a PDU session in the *PDU Session Resource Modify Request List* IE with the same QoS flow included both in the *QoS Flow Add or Modify Request List* IE and the *QoS Flow to Release List* IE, the NG-RAN node shall report the corresponding QoS flow as failed in the *QoS Flow Failed to Add or Modify List* IE in the *PDU Session Resource Modify Response Transfer* IE of the PDU SESSION RESOURCE MODIFY RESPONSE message with an appropriate cause value if the PDU session is modified successfully. The NG-RAN node shall not release the QoS flow when the corresponding QoS flow already exists.

8.2.4 PDU Session Resource Notify

8.2.4.1 General

The purpose of the PDU Session Resource Notify procedure is to notify that the already established QoS flow(s) or PDU session(s) for a given UE are released or not fulfilled anymore or fulfilled again by the NG-RAN node for which notification control is requested. It is also used to notify that the updated QoS parameters during the Path Switch Request procedure are not successfully accepted by the NG-RAN node. The procedure uses UE-associated signalling.

8.2.4.2 Successful Operation



Figure 8.2.4.2-1: PDU session resource notify

The NG-RAN node initiates the procedure by sending a PDU SESSION RESOURCE NOTIFY message.

The PDU SESSION RESOURCE NOTIFY message shall contain the information of PDU session resources or QoS flows which are released or not fulfilled anymore or fulfilled again by the NG-RAN node.

- For each PDU session for which some QoS flows are released or not fulfilled anymore or fulfilled again by the NG-RAN node, the *PDU Session Resource Notify Transfer* IE shall be included containing:

1. The list of QoS flows which are released by the NG-RAN node, if any, in the *QoS Flow Released List* IE. If no more QoS flow is associated to an existing bearer after the release (e.g. split PDU session), the NG-RAN node and 5GC shall consider that the concerned NG-U transport bearer is removed and the related NG-U UP TNL information is available again.

2. The list of GBR QoS flows which are not fulfilled anymore or fulfilled again by the NG-RAN node, if any, in the *QoS Flow Notify List* IE together with the *Notification Cause* IE. For a QoS flow indicated as not fulfilled anymore the NG-RAN node may also indicate an alternative QoS parameters set which it can currently fulfil in the *Current QoS Parameters Set Index* IE, as specified in TS 23.501 [9]. For a QoS flow indicated as not fulfilled anymore the NG-RAN node may also indicate the RAN feedback in the *TSC Traffic Characteristics Feedback* IE.

3. The list of QoS flows for which the QoS parameters were updated but could not be successfully accepted by the NG-RAN node during the Path Switch Request procedure, if any, in the *QoS Flow Feedback List* IE which may be associated with a value it could offer.

- For each PDU session resource which is released by the NG-RAN node, the *PDU Session Resource Notify Released Transfer* IE shall be included containing the release cause in the *Cause* IE. If the *User Plane Error Indicator* IE is set to "GTP-U Error Indication Received", the SMF shall, if supported, consider that the PDU session is released due to GTP-U Error Indication received over the NG-U tunnel, as specified in TS 23.527 [57].

The NG-RAN node shall, if supported, report in the PDU SESSION RESOURCE NOTIFY message location information of the UE in the *User Location Information* IE.

Upon reception of the PDU SESSION RESOURCE NOTIFY message, the AMF shall, for each PDU session indicated in the *PDU Session ID* IE, transfer transparently the *PDU Session Resource Notify Transfer* IE or *PDU Session Resource Notify Released Transfer* IE to the SMF associated with the concerned PDU session. Upon reception of *PDU Session Resource Notify Transfer* IE, the SMF normally initiate the appropriate release or modify procedure on the core network side for the PDU session(s) or QoS flow(s) identified as not fulfilled anymore.

For each PDU session for which the *Secondary RAT Usage Information* IE is included in the *PDU Session Resource Notify Transfer* IE or the *PDU Session Resource Notify Released Transfer* IE, the SMF shall handle this information as specified in TS 23.502 [10].

If the *User Location Information* IE is included in the PDU SESSION RESOURCE NOTIFY message, the AMF shall handle this information as specified in TS 23.501 [9].

8.2.4.3 Abnormal Conditions

Void.

8.2.5 PDU Session Resource Modify Indication

8.2.5.1 General

The purpose of the PDU Session Resource Modify Indication procedure is for the NG-RAN node to request modification of the established PDU session(s). The procedure uses UE-associated signalling.

8.2.5.2 Successful Operation

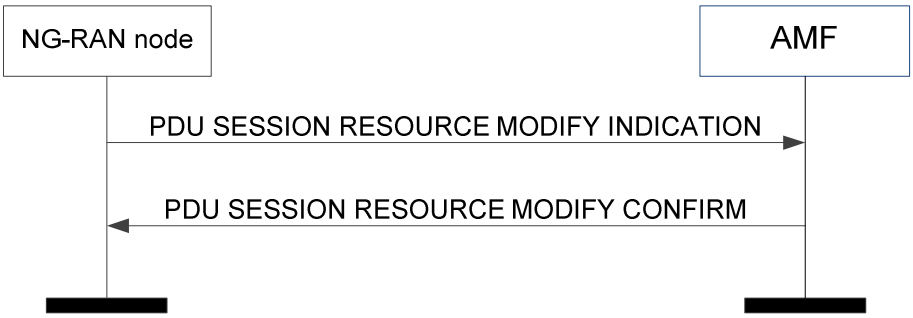


Figure 8.2.5.2-1: PDU session resource modify indication: successful operation

The NG-RAN node initiates the procedure by sending a PDU SESSION RESOURCE MODIFY INDICATION message. Upon reception of the PDU SESSION RESOURCE MODIFY INDICATION message, the AMF shall, for each PDU session indicated in the *PDU Session ID* IE, transparently transfer the *PDU Session Resource Modify Indication Transfer* IE to the SMF associated with the concerned PDU session.

For each PDU session for which the *DL QoS Flow per TNL Information* IE is included in the *PDU Session Resource Modify Indication Transfer* IE in the PDU SESSION RESOURCE MODIFY INDICATION message, the SMF shall, if the request is accepted, consider the included DL transport layer address as the DL transport layer address for the included associated QoS flows and provide the associated UL transport layer address in the *UL NG-U UP TNL Information* IE in the *PDU Session Resource Modify Confirm Transfer* IE in the PDU SESSION RESOURCE MODIFY CONFIRM message.

For each PDU session for which the *Additional DL QoS Flow per TNL Information* IE is included in the *PDU Session Resource Modify Indication Transfer* IE in the PDU SESSION RESOURCE MODIFY INDICATION message, the SMF shall, if supported, consider for this split PDU session each included DL transport layer address(es) as the DL transport layer address(s) for the included associated QoS flows and it may provide the associated UL transport layer address(s) in the *Additional NG-U UP TNL Information* IE in the *PDU Session Resource Modify Confirm Transfer* IE in the PDU SESSION RESOURCE MODIFY CONFIRM message.

In case more than one NG-U transport bearers have been set up for the PDU session, the *DL QoS Flow per TNL Information* IE and the *Additional DL QoS Flow per TNL Information* IE in the *PDU Session Resource Modify Indication Transfer* IE in the PDU SESSION RESOURCE MODIFY INDICATION message shall be included if at least one QoS flow is associated to their respective NG-U transport bearer; if no QoS flow is associated to one existing NG-U transport bearer after the modification, the NG-RAN node and 5GC shall consider that the concerned NG-U transport bearer is removed for the PDU session, and both NG-RAN node and 5GC shall therefore consider the related NG-U UP TNL information as available again.

For each PDU session for which the *Redundant DL QoS Flow per TNL Information* IE is included in the *PDU Session Resource Modify Indication Transfer* IE in the PDU SESSION RESOURCE MODIFY INDICATION message, the SMF shall, if supported, consider the included DL transport layer address as the new DL transport layer address for the included associated QoS flows for redundant transmission and it may provide the associated UL transport layer address in the *Redundant UL NG-U UP TNL Information* IE in the *PDU Session Resource Modify Confirm Transfer* IE in the PDU SESSION RESOURCE MODIFY CONFIRM message.

For each PDU session for which the *Additional Redundant DL QoS Flow per TNL Information* IE is included in the *PDU Session Resource Modify Indication Transfer* IE in the PDU SESSION RESOURCE MODIFY INDICATION message, the SMF shall, if supported, consider for this split PDU session each included DL transport layer address(es) as the new downlink termination point(s) for the included associated QoS flows and it may provide the associated UL transport layer address(s) in the *Additional Redundant NG-U UP TNL Information* IE in the *PDU Session Resource Modify Confirm Transfer* IE in the PDU SESSION RESOURCE MODIFY CONFIRM message for the redundant transmission.

For each PDU session for which the *Global RAN Node ID of Secondary NG-RAN Node* IE is included in the *PDU Session Resource Modify Indication Transfer* IE of the PDU SESSION RESOURCE MODIFY INDICATION message, the SMF shall, if supported, handle this information as specified in TS 23.501 [9].

If the *Security Result* IE is included in the *PDU Session Resource Modify Indication Transfer* IE in the PDU SESSION RESOURCE MODIFY INDICATION message, it shall be considered by the SMF as the new security status of the PDU session.

If the *ECN Marking or Congestion Information Reporting Status* IE is included in the *PDU Session Resource Modify Indication Transfer* IE in the PDU SESSION RESOURCE MODIFY INDICATION message, the SMF shall, if supported, use it to deduce if ECN marking at NG-RAN or ECN marking at UPF or congestion information reporting is active or not active as described in TS 23.501 [9].

For each PDU session for which the *Secondary RAT Usage Information* IE is included in the *PDU Session Resource Modify Indication Transfer* IE, the SMF shall handle this information as specified in TS 23.502 [10].

The AMF shall report to the NG-RAN node in the PDU SESSION MODIFY RESOURCE CONFIRM message the result for each PDU session listed in PDU SESSION RESOURCE MODIFY INDICATION message:

- For each PDU session which is successfully modified, the *PDU Session Resource Modify Confirm Transfer* IE shall be included containing:

  1. The list of QoS flows which have been successfully modified in the *QoS Flow Modify Confirm List* IE.

  2. The list of QoS flows which have failed to be modified, if any, in the *QoS Flow Failed to Modify List* IE.

- For each PDU session which failed to be modified, the *PDU Session Resource Modify Indication Unsuccessful Transfer* IE shall be included to report the failure cause.

Upon reception of the *PDU Session Resource Modify Confirm Transfer* IE for each PDU session listed in the PDU SESSION RESOURCE MODIFY CONFIRM message:

- If the *QoS Flow Failed To Modify List* IE is included, the NG-RAN node shall either

  1. de-associate the corresponding DRB for the concerned QoS flow, or

  2. keep the previous transport layer information before sending the PDU SESSION RESOURCE MODIFY INDICATION unchanged for the concerned QoS flow.

Upon reception of the *PDU Session Resource Modify Indication Unsuccessful Transfer* IE for each PDU session listed in the PDU SESSION RESOURCE MODIFY CONFIRM message, the NG-RAN node shall either:

1. release all corresponding NG-RAN configuration and resources for the concerned PDU session, or

2. keep the previous transport layer information before sending the PDU SESSION RESOURCE MODIFY INDICATION unchanged for the concerned PDU session.

The NG-RAN node shall, if supported, report in the PDU SESSION RESOURCE MODIFY INDICATION message location information of the UE in the *User Location Information* IE.

Interactions with PDU Session Resource Setup procedure or PDU Session Resource Modification procedure:

If the PDU SESSION RESOURCE MODIFY INDICATION message is received by the AMF during an ongoing PDU Session Resource Setup procedure or an ongoing PDU Session Resource Modification procedure, the AMF shall proceed with the PDU Session Resource Modify Indication procedure.

If the *PDU Session Resource Modify Indication Transfer* IE is received by the SMF during an ongoing PDU Session Resource Setup procedure or an ongoing PDU Session Resource Modification procedure, the SMF shall process the *PDU Session Resource Modify Indication Transfer* IE.

8.2.5.3 Unsuccessful Operation

The unsuccessful operation is specified in the successful operation section.

8.2.5.4 Abnormal Conditions

Void.

8.3 UE Context Management Procedures

8.3.1 Initial Context Setup

8.3.1.1 General

The purpose of the Initial Context Setup procedure is to establish the necessary overall initial UE context at the NG-RAN node, when required, including PDU session context, the Security Key, Mobility Restriction List, UE Radio Capability and UE Security Capabilities, etc. The AMF may initiate the Initial Context Setup procedure if a UE-associated logical NG-connection exists for the UE or if the AMF has received the *RAN UE NGAP ID* IE in an INITIAL UE MESSAGE message or if the NG-RAN node has already initiated a UE-associated logical NG-connection by sending an INITIAL UE MESSAGE message via another NG interface instance. The procedure uses UE-associated signalling.

For signalling only connections and if the *UE Context Request* IE is not received in the Initial UE Message, the AMF may be configured to trigger the procedure for all NAS procedures or on a per NAS procedure basis depending on operator's configuration.

8.3.1.2 Successful Operation

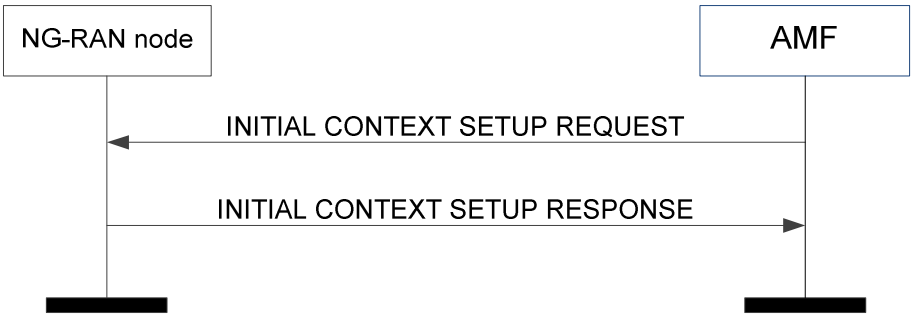


Figure 8.3.1.2-1: Initial context setup: successful operation

In case of the establishment of a PDU session the 5GC shall be prepared to receive user data before the INITIAL CONTEXT SETUP RESPONSE message has been received by the AMF. If no UE-associated logical NG-connection exists, the UE-associated logical NG-connection shall be established at reception of the INITIAL CONTEXT SETUP REQUEST message.

The INITIAL CONTEXT SETUP REQUEST message shall contain the *Index to RAT/Frequency Selection Priority* IE, if available in the AMF.

If the *NAS-PDU* IE is included in the INITIAL CONTEXT SETUP REQUEST message, the NG-RAN node shall pass it transparently towards the UE.

If the *Masked IMEISV* IE is contained in the INITIAL CONTEXT SETUP REQUEST message the target NG-RAN node shall, if supported, use it to determine the characteristics of the UE for subsequent handling.

Upon receipt of the INITIAL CONTEXT SETUP REQUEST message the NG-RAN node shall

- attempt to execute the requested PDU session configuration;
- store the received UE Aggregate Maximum Bit Rate in the UE context, and use the received UE Aggregate Maximum Bit Rate for Non-GBR QoS flows for the concerned UE as specified in TS 23.501 [9];
- store the received Mobility Restriction List in the UE context;
- store the received UE Radio Capability in the UE context;
- store the received Index to RAT/Frequency Selection Priority in the UE context and use it as defined in TS 23.501 [9];
- store the received UE Security Capabilities in the UE context;

- store the received Security Key in the UE context and, if the NG-RAN node is required to activate security for the UE, take this security key into use;
- if supported, store the received SRVCC Operation Possible in the UE context and use it as defined in TS 23.216 [31];
- store the received NR V2X Services Authorization information, if supported, in the UE context;
- store the received LTE V2X Services Authorization information, if supported, in the UE context;
- store the received NR A2X Services Authorization information, if supported, in the UE context;
- store the received LTE A2X Services Authorization information, if supported, in the UE context;
- store the received NR UE Sidelink Aggregate Maximum Bit Rate, if supported, in the UE context, and use it for the concerned UE's sidelink communication in network scheduled mode for NR V2X services;
- store the received LTE UE Sidelink Aggregate Maximum Bit Rate, if supported, in the UE context, and use it for the concerned UE's sidelink communication in network scheduled mode for LTE V2X services;
- store the received NR A2X UE PC5 Aggregate Maximum Bit Rate, if supported, in the UE context, and use it for the concerned UE's sidelink communication in network scheduled mode for NR A2X services;
- store the received LTE A2X UE PC5 Aggregate Maximum Bit Rate, if supported, in the UE context, and use it for the concerned UE's sidelink communication in network scheduled mode for LTE A2X services;
- store the received PC5 QoS Parameters, if supported, in the UE context and use it as defined in TS 23.287 [33];
- store the received A2X PC5 QoS Parameters, if supported, in the UE context and use it as defined in TS 23.256 [54].
- store the received Management Based MDT PLMN List information, if supported, in the UE context;
- if supported, store the received IAB Authorization information in the UE context, and use it accordingly for the IAB-MT as specified in TS 38.401 [2];
- store the received 5G ProSe Authorization information in the UE context, if supported, and use it for the concerned UE's sidelink communication in network scheduled mode for 5G ProSe services;
- store the received 5G ProSe UE PC5 Aggregate Maximum Bit Rate in the UE context, if supported, and use it for the concerned UE's sidelink communication in network scheduled mode for 5G ProSe services;
- store the received 5G ProSe PC5 QoS Parameters, if supported, in the UE context and use it as defined in TS 23.304 [47];
- store the received Ranging and Sidelink Positioning service information, if supported, in the UE context;
- store the received Network Controlled Repeater Authorization, if supported, in the UE context;
- if supported, store the received Mobile IAB Authorization information in the UE context, and use it accordingly for the mobile IAB-MT;
- store the received PDU Set QoS parameters, if supported, in the UE context and use it as specified in TS 23.501 [9].

For the Initial Context Setup an initial value for the Next Hop Chaining Count is stored in the UE context.

If the *PDU Session Resource Setup Request List* IE is contained in the INITIAL CONTEXT SETUP REQUEST message, the NG-RAN node shall behave the same as defined in the PDU Session Resource Setup procedure. The NG-RAN node shall report to the AMF in the INITIAL CONTEXT SETUP RESPONSE message the result for each PDU session resource requested to be setup as defined in the PDU Session Resource Setup procedure.

Upon reception of the INITIAL CONTEXT SETUP RESPONSE message the AMF shall, for each PDU session indicated in the *PDU Session ID* IE, transfer transparently the *PDU Session Resource Setup Response Transfer* IE or *PDU Session Resource Setup Unsuccessful Transfer* IE to the SMF associated with the concerned PDU session. In case the splitting PDU session is not used by the NG-RAN node, the SMF should remove the Additional Transport Layer Information, if any.

The NG-RAN node shall use the information in the *Mobility Restriction List* IE if present in the INITIAL CONTEXT SETUP REQUEST message to

- determine a target for subsequent mobility action for which the NG-RAN node provides information about the target of the mobility action towards the UE;
- select a proper SCG during dual connectivity operation;
- assign proper RNA(s) for the UE when moving the UE to RRC_INACTIVE state.

If the *Mobility Restriction List* IE is not contained in the INITIAL CONTEXT SETUP REQUEST message, the NG-RAN node shall consider that no roaming and no access restriction apply to the UE except for the PNI NPN mobility as described in TS 23.501 [9]. The NG-RAN node shall also consider that no roaming and no access restriction apply to the UE when:

- one of the QoS flows includes a particular ARP value (TS 23.501 [9]).

The NG-RAN node shall consider that roaming or access to CAG cells is only allowed if the *Allowed PNI-NPN List* IE is contained in the INITIAL CONTEXT SETUP REQUEST message, as described in TS 23.501 [9].

If the *Trace Activation* IE is included in the INITIAL CONTEXT SETUP REQUEST message the NG-RAN node shall, if supported, initiate the requested trace function as described in TS 32.422 [11]. In particular, the NG-RAN node shall, if supported:

- if the *Trace Activation* IE includes the *MDT Activation* IE set to "Immediate MDT and Trace", initiate the requested trace session and MDT session as described in TS 32.422 [11];
- if the *Trace Activation* IE includes the *MDT Activation* IE set to "Immediate MDT Only", "Logged MDT only", initiate the requested MDT session as described in TS 32.422 [11] and the NG-RAN node shall ignore the *Interfaces To Trace* IE and the *Trace Depth* IE;
- if the *Trace Activation* IE includes the *MDT Location Information* IE within the *MDT Configuration* IE, store this information and take it into account in the requested MDT session;
- if the *Trace Activation* IE includes the *Signalling Based MDT PLMN List* IE within the *MDT Configuration* IE, the NG-RAN node may use it to propagate the MDT Configuration as described in TS 37.320 [41].
- if the *Trace Activation* IE includes the *Bluetooth Measurement Configuration* IE within the *MDT Configuration* IE, take it into account for MDT Configuration as described in TS 37.320 [41].
- if the *Trace Activation* IE includes the *WLAN Measurement Configuration* IE within the *MDT Configuration* IE, take it into account for MDT Configuration as described in TS 37.320 [41].
- if the *Trace Activation* IE includes the *Sensor Measurement Configuration* IE within the *MDT Configuration* IE, take it into account for MDT Configuration as described in TS 37.320 [41].
- if the *Trace Activation* IE includes the *MDT Configuration* IE and if the NG-RAN node is a gNB at least the *MDT Configuration-NR* IE shall be present, while if the NG-RAN node is an ng-eNB at least the *MDT Configuration-EUTRA* IE shall be present.
- if the *Trace Activation* IE includes the *MN Only MDT Collection* IE and the *MN Only MDT Collection* IE is set to "MN only", consider that the *MDT Configuration-NR* IE or the *MDT Configuration-EUTRA* IE is only applicable for the MN if the UE is configured with MR-DC.

If the *UE Security Capabilities* IE included in the INITIAL CONTEXT SETUP REQUEST message only contains the EIA0 or NIA0 algorithm as defined in TS 33.501 [13] and if the EIA0 or NIA0 algorithm is defined in the configured list of allowed integrity protection algorithms in the NG-RAN node (TS 33.501 [13]), the NG-RAN node shall take it into use and ignore the keys received in the *Security Key* IE.

If the *QMC Configuration Information* IE is included in the INITIAL CONTEXT SETUP REQUEST message, the NG-RAN node shall, if supported, use it for QoE management, as described in TS 38.300 [8]. If the *Assistance Information for QoE Measurement* IE is included in the *UE Application Layer Measurement Configuration Information* IE within the *QMC Configuration Information* IE, the NG-RAN node may take it into account for controlling the reporting of application layer measurement when the NG-RAN node is overloaded, as described in TS 38.300 [8].

If the *Core Network Assistance Information for RRC INACTIVE* IE is included in the INITIAL CONTEXT SETUP REQUEST message, the NG-RAN node shall, if supported, store this information in the UE context and use it for the RRC_INACTIVE state decision and RNA configuration for the UE, and RAN paging, if any, for a UE in RRC_INACTIVE state, as specified in TS 38.300 [8]. In particular,

- if the *UE Specific DRX* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, use it for RAN paging.

- if the *MICO Mode Indication* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, consider that the UE is configured with MICO mode by the AMF as specified in TS 23.501 [9].

- if the *Expected UE Behaviour* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, use it to assist the UE RRC state transition decision.

- if the *E-UTRA Paging eDRX Information* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, take it into account to configure the RAN Paging when the UE is in RRC_INACTIVE as specified in TS 36.300 [17].

- if the *Extended UE Identity Index Value* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, use it for RAN Paging.

- if the *UE Radio Capability for Paging* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, check and update it with all the UE radio capabilities for paging of all the RAT(s) the UE supports in the serving PLMN according to the received *UE Radio Capability* IE, and use it for subsequent RAN paging.

- if the *MICO All PLMN* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE the NG-RAN node shall, if supported, consider that the registration area for the UE is the full PLMN and ignore the *TAI List for RRC Inactive* IE.

- if the *NR Paging eDRX Information* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, take it into account to configure the RAN Paging when the UE is in RRC_INACTIVE as described in TS 38.300 [8].

- if the *Paging Cause Indication for Voice Service* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, store and use it as specified in TS 38.300 [8].

- if the *PEIPS Assistance Information* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, store it and use it for paging subgrouping the UE in RRC_INACTIVE state, as specified in TS 38.300 [8].

- if the *Hashed UE Identity Index Value* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, use it to determine the start point of PTW.

- if the *CN MT Communication Handling* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, store it and may subsequently request, based on implementation, the CN for MT communication handling as described in TS 23.502 [10].

- if the *LP-WUSPS Assistance Information* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, store it and use it for LP-WUS paging subgrouping the UE in RRC_INACTIVE state, as specified in TS 38.300 [8].

- if the *Further Extended UE Identity Index Value* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, store it and use it as specified in TS 38.304 [12].

- If the *LP-WUS Disable Indication* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, store it and use it to disable LP-WUS as described in TS 38.300 [8].

If the *CN Assisted RAN Parameters Tuning* IE is included in the INITIAL CONTEXT SETUP REQUEST message, the NG-RAN node may use it as described in TS 23.501 [9].

If the *RRC Inactive Transition Report Request* IE is included in the INITIAL CONTEXT SETUP REQUEST message, the NG-RAN node shall, if supported, store this information in the UE context.

If the *Emergency Fallback Indicator* IE is included in the INITIAL CONTEXT SETUP REQUEST message, it indicates that the UE context to be set up is subject to emergency service fallback as described in TS 23.501 [9] and the NG-RAN node may, if supported, take the appropriate mobility actions.

If the *Old AMF* IE is included in the INITIAL CONTEXT SETUP REQUEST message, the NG-RAN node shall consider that this UE-associated logical NG-connection was redirected to this AMF from another AMF identified by the *Old AMF* IE. If the *Extended Old AMF* IE is included in the INITIAL CONTEXT SETUP REQUEST message, the NG-RAN node shall, if supported, consider that this UE-associated logical NG-connection was redirected to this AMF from another AMF identified by the *Extended Old AMF* IE.

If the *Redirection for Voice EPS Fallback* IE is included in the INITIAL CONTEXT SETUP REQUEST message, the NG-RAN node shall, if supported, store it and use it in a subsequent decision of EPS fallback for voice as specified in TS 23.502 [10].

If the *Location Reporting Request Type* IE is included in the INITIAL CONTEXT SETUP REQUEST message, the NG-RAN node should perform the requested location reporting functionality for the UE as described in clause 8.12.

If the *Enhanced Coverage Restriction* IE is included in the INITIAL CONTEXT SETUP REQUEST message, the NG-RAN node shall, if supported, store this information in the UE context and use it as defined in TS 23.501 [9].

If the *Extended Connected Time* IE is included in the INITIAL CONTEXT SETUP REQUEST message, the NG-RAN node shall, if supported, use it as described in TS 23.501 [9].

If the *UE Differentiation Information* IE is included in the INITIAL CONTEXT SETUP REQUEST message, the NG-RAN node shall, if supported, store this information in the UE context for further use according to TS 23.501 [9].

If the *CE-mode-B Restricted* IE is included in the INITIAL CONTEXT SETUP REQUEST message and the *Enhanced Coverage Restriction* IE is not set to "restricted" and the Enhanced Coverage Restriction information stored in the UE context is not set to "restricted", the NG-RAN node shall, if supported, store this information in the UE context and use it as defined in TS 23.501 [9].

If the *UE User Plane CIoT Support Indicator* IE is included in the INITIAL CONTEXT SETUP REQUEST message the NG-RAN node shall, if supported, store this information in the UE context and consider that User Plane CIoT 5GS Optimisation as specified in TS 23.501 [9] is supported for the UE.

If the *Management Based MDT PLMN List* IE is contained in the INITIAL CONTEXT SETUP REQUEST message, the NG-RAN node shall, if supported, use it to allow subsequent selection of the UE for management based MDT defined in TS 32.422 [11].

If the INITIAL CONTEXT SETUP REQUEST message contains the *UE Radio Capability ID* IE, the NG-RAN node shall, if supported, use it as specified in TS 23.501 [9] and TS 23.502 [10].

For each PDU session, if the *PDU Session Expected UE Activity Behaviour* IE is included in the INTIAL CONTEXT SETUP REQUEST message, the NG-RAN node shall, if supported, handle this information as specified in TS 23.501 [9].

If the *Time Synchronisation Assistance Information* IE is included in the INITIAL CONTEXT SETUP REQUEST message, the NG-RAN node shall, if supported, store the information in the UE context and use it as defined in TS 23.501 [9].

If the *Target NSSAI Information* IE is contained in the INITIAL CONTEXT SETUP REQUEST message, the NG-RAN node may use this information as specified in TS 23.501 [9].

If the *Partially Allowed NSSAI* IE is contained in the INITIAL CONTEXT SETUP REQUEST message, the NG-RAN node shall, if supported, deduce from it the partially allowed network slices for the UE, store and replace any previously received Partially Allowed NSSAI and use it as specified in TS 23.501 [9].

If the *UE Slice Maximum Bit Rate List* IE is included in the INITIAL CONTEXT SETUP REQUEST message, the NG-RAN node shall, if supported, store the received UE Slice Maximum Bit Rate List in the UE context, and use it for each S-NSSAI for the concerned UE as specified in TS 23.501 [9].

If the *Aerial UE Subscription Information* IE is included in the INITIAL CONTEXT SETUP REQUEST message, the NG-RAN node shall, if supported, store this information in the UE context and use it as defined in TS 38.300 [8].

If the *PNI-NPN Area Scope of MDT* IE is included in the *MDT Configuration-NR* IE included in the INITIAL CONTEXT SETUP REQUEST message, the NG-RAN node shall, if supported, use it to derive the MDT area scope for MDT measurement collection in PNI-NPN areas. Upon reception of the *PNI-NPN Area Scope of MDT* IE, the NG-RAN node shall consider that the area scope for MDT measurement collection in PNI-NPN areas is defined only by the areas included in the *PNI-NPN Area Scope of MDT* IE.

If the *UE Radio Capability for Paging* IE is included in the INITIAL CONTEXT SETUP REQUEST message, the NG-RAN node shall, if supported, use it as specified in TS 23.501 [9].

If the *Network Slice Area Scope of MDT* IE is included in the *MDT Configuration-NR* IE included in the INITIAL CONTEXT SETUP REQUEST message, the NG-RAN node shall, if supported, use it to derive the MDT area scope for MDT measurement collection. Upon reception of the *Network Slice Area Scope of MDT* IE, the NG-RAN node shall consider that the area scope for MDT measurement collection is defined only by the *Network Slice Area Scope of MDT* IE and the *Area Scope of MDT* IE.

If the *AMF UE NGAP ID 2* IE is contained in the INITIAL CONTEXT SETUP REQUEST message, the NG-RAN node shall, if supported, store this information in the UE context and use it for subsequent Xn handovers.

Interactions with Initial UE Message procedure:

The NG-RAN node shall use the *AMF UE NGAP ID* IE and *RAN UE NGAP ID* IE received in the INITIAL CONTEXT SETUP REQUEST message as identification of the logical connection even if the *RAN UE NGAP ID* IE had been allocated in an INITIAL UE MESSAGE message sent over a different NG interface instance.

Interactions with RRC Inactive Transition Report procedure:

If the *RRC Inactive Transition Report Request* IE is included in the INITIAL CONTEXT SETUP REQUEST message and set to "subsequent state transition report", the NG-RAN node shall, if supported, send the RRC INACTIVE TRANSITION REPORT message to the AMF to report the RRC state of the UE when the UE enters or leaves RRC_INACTIVE state.

Interactions with UE Radio Capability Info Indication procedure:

If the *UE Radio Capability for Paging* IE is included in the INITIAL CONTEXT SETUP REQUEST message, which does not include all the UE radio capability for paging of all the NG-RAN RAT(s) that the UE supports according to the received *UE Radio Capability* IE, the NG-RAN node shall, if supported, send the UE RADIO CAPABILITY INFO INDICATION message to the AMF containing all the UE radio capability for paging of all the NG-RAN RAT(s) the UE supports in the serving PLMN.

If the INITIAL CONTEXT SETUP REQUEST message is received with neither the *UE Radio Capability* IE nor the *UE Radio Capability ID* IE, the NG-RAN node shall, if supported, request the UE Radio Capability information from the UE and send it to the AMF via the UE RADIO CAPABILITY INFO INDICATION message, as specified in TS 23.501 [9].

8.3.1.3 Unsuccessful Operation

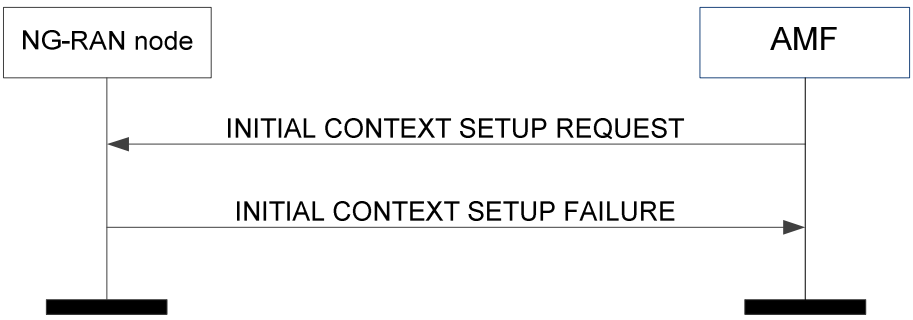


Figure 8.3.1.3-1: Initial context setup: unsuccessful operation

If the NG-RAN node is not able to establish an NG UE context, it shall consider the procedure as failed and reply with the INITIAL CONTEXT SETUP FAILURE message.

If the *PDU Session Resource Setup Request List* IE is contained in the INITIAL CONTEXT SETUP REQUEST message, the NG-RAN node shall report to the AMF, in the INITIAL CONTEXT SETUP FAILURE message, the unsuccessful establishment result for each PDU session resource requested to be setup as defined in the PDU Session Resource Setup procedure.

Upon reception of the INITIAL CONTEXT SETUP FAILURE message the AMF shall, for each PDU session indicated in the *PDU Session ID* IE, transfer transparently the *PDU Session Resource Setup Unsuccessful Transfer* IE to the SMF associated with the concerned PDU session and may consider that the NAS PDU included in the INITIAL CONTEXT SETUP REQUEST message was not delivered.

8.3.1.4 Abnormal Conditions

If the supported algorithms for encryption defined in the *Encryption Algorithms* IE in the *UE Security Capabilities* IE, plus the mandated support of EEA0 and NEA0 in all UEs (TS 33.501 [13]), do not match any allowed algorithms defined in the configured list of allowed encryption algorithms in the NG-RAN node (TS 33.501 [13]), the NG-RAN node shall reject the procedure using the INITIAL CONTEXT SETUP FAILURE message.

If the *Partially Allowed NSSAI* IE is received in the INITIAL CONTEXT SETUP REQUEST message and the total number of S-NSSAIs included in the Allowed NSSAI and Partially Allowed NSSAI exceeds eight, the NG-RAN node shall consider the procedure as failed.

If any of the S-NSSAI which is present in the *Partially Allowed NSSAI* IE is also present in the *Allowed NSSAI* IE, the NG-RAN node shall consider the procedure as failed.

If the supported algorithms for integrity defined in the *Integrity Protection Algorithms* IE in the *UE Security Capabilities* IE, plus the mandated support of the EIA0 and NIA0 algorithm in all UEs (TS 33.501 [13]), do not match any allowed algorithms defined in the configured list of allowed integrity protection algorithms in the NG-RAN node (TS 33.501 [13]), the NG-RAN node shall reject the procedure using the INITIAL CONTEXT SETUP FAILURE message.

If the *PNI-NPN Area Scope of MDT* IE is included in the *MDT Configuration-NR* IE in the INITIAL CONTEXT SETUP REQUEST message, and the *Area Scope of MDT* IE is set to "PNI-NPN Based MDT", the NG-RAN node shall, if supported, use the *Area Scope of MDT* IE to derive the MDT area scope for MDT measurement collection in PNI-NPN areas, and ignore the *PNI-NPN Area Scope of MDT*.

If the *Network Slice Area Scope of MDT* IE is included in the *MDT Configuration-NR* IE in the INITIAL CONTEXT SETUP REQUEST message, and the *MDT Activation* IE is set to "Logged MDT only", the NG-RAN node shall ignore the *Network Slice Area Scope of MDT* IE.

8.3.2 UE Context Release Request (NG-RAN node initiated)

8.3.2.1 General

The purpose of the UE Context Release Request procedure is to enable the NG-RAN node to request the AMF to release the UE-associated logical NG-connection due to NG-RAN node generated reasons. The procedure uses UE-associated signalling.

8.3.2.2 Successful Operation



Figure 8.3.2.2-1: UE context release request

The NG-RAN node controlling a UE-associated logical NG-connection initiates the procedure by sending a UE CONTEXT RELEASE REQUEST message towards the affected AMF.

The UE CONTEXT RELEASE REQUEST message shall indicate the appropriate cause value, e.g., "$TXn_{RELOCOverall}$ Expiry", "Redirection", for the requested UE-associated logical NG-connection release.

If the *PDU Session Resource List* IE is included in the UE CONTEXT RELEASE REQUEST message, the AMF shall handle this information as specified in TS 23.502 [10].

If the *GW Context Release Indication* IE is included in the UE CONTEXT RELEASE REQUEST message, the AMF shall, if supported, consider that the UE context may be released as specified in TS 38.300 [8].

Interactions with UE Context Release procedure:

The UE Context Release procedure should be initiated upon reception of a UE CONTEXT RELEASE REQUEST message with the *Cause* IE set to a value different than "User inactivity". The UE Context Release procedure should be initiated upon reception of a UE CONTEXT RELEASE REQUEST message with the *Cause* IE set to "User inactivity" and there is no downlink signaling, as specified in TS 23.502 [10]. If the UE was configured with DC radio resources at the time UE Context Release Request procedure was triggered, and the PSCell information was available, the NG-RAN node shall store the PSCell information in the UE context.

8.3.2.3 Abnormal Conditions

Void.

8.3.3 UE Context Release (AMF initiated)

8.3.3.1 General

The purpose of the UE Context Release procedure is to enable the AMF to order the release of the UE-associated logical NG-connection due to various reasons, e.g., completion of a transaction between the UE and the 5GC, or release of the old UE-associated logical NG-connection when the UE has initiated the establishment of a new UE-associated logical NG-connection, etc. The procedure uses UE-associated signalling.

8.3.3.2 Successful Operation

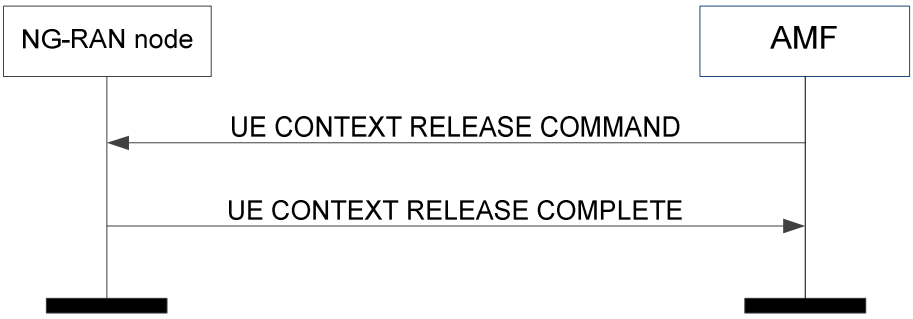


Figure 8.3.3.2-1: UE context release: successful operation

The AMF initiates the procedure by sending the UE CONTEXT RELEASE COMMAND message to the NG-RAN node.

The UE CONTEXT RELEASE COMMAND message shall contain both the AMF UE NGAP ID IE and the *RAN UE NGAP ID* IE if available, otherwise the message shall contain the *AMF UE NGAP ID* IE.

Upon reception of the UE CONTEXT RELEASE COMMAND message, the NG-RAN node shall release all related signalling and user data transport resources and reply with the UE CONTEXT RELEASE COMPLETE message.

If the *PDU Session Resource List* IE is included in the UE CONTEXT RELEASE COMPLETE message, the AMF shall handle this information as specified in TS 23.502 [10].

If the *User Location Information* IE is included in the UE CONTEXT RELEASE COMPLETE message, the AMF shall handle this information as specified in TS 23.502 [10].

If the *Information on Recommended Cells and RAN Nodes for Paging* IE is included in the UE CONTEXT RELEASE COMPLETE message, the AMF shall, if supported, store it and may use it for subsequent paging.

For each PDU session for which the *Secondary RAT Usage Information* IE is included in the *PDU Session Resource Release Response Transfer* IE, the SMF shall handle this information as specified in TS 23.502 [10].

If the *Paging Assistance Data for CE Capable UE* IE is included in the UE CONTEXT RELEASE COMPLETE message, the AMF shall, if supported, store it and use it for subsequent paging, as specified in TS 23.502 [10].

8.3.3.3 Unsuccessful Operation

Not applicable.

8.3.3.4 Abnormal Conditions

If the UE Context Release procedure is not initiated towards the NG-RAN node before the expiry of the timer $TNG_{RELOCOverall}$, the NG-RAN node shall request the AMF to release the UE context.

If the UE returns to the NG-RAN node before the reception of the UE CONTEXT RELEASE COMMAND message or the expiry of the timer $TNG_{RELOCOverall}$, the NG-RAN node shall stop the timer $TNG_{RELOCOverall}$ and continue to serve the UE.

8.3.4 UE Context Modification

8.3.4.1 General

The purpose of the UE Context Modification procedure is to partly modify the established UE context. The procedure uses UE-associated signalling.

8.3.4.2 Successful Operation

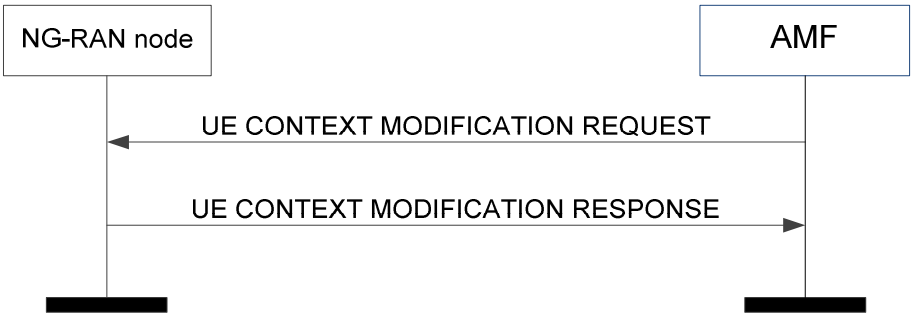


Figure 8.3.4.2-1: UE context modification: successful operation

Upon receipt of the UE CONTEXT MODIFICATION REQUEST message the NG-RAN node shall

- if supported, store the received IAB Authorization information in the UE context and use it as specified in TS 38.401 [2].
- if supported, store the received Mobile IAB Authorization information in the UE context. If the *Mobile IAB Authorized* IE is set to "not authorized" for a mobile IAB-MT, the NG-RAN node shall, if supported, initiate actions to ensure that the mobile IAB-node will not serve any UE(s).

If the *Security Key* IE is included in the UE CONTEXT MODIFICATION REQUEST message, the NG-RAN node shall store it and perform AS key re-keying according to TS 33.501 [13].

If the *UE Security Capabilities* IE is included in the UE CONTEXT MODIFICATION REQUEST message, the NG-RAN node shall store them and take them into use together with the received keys according to TS 33.501 [13].

If the *Index to RAT/Frequency Selection Priority* IE is included in the UE CONTEXT MODIFICATION REQUEST message, the NG-RAN node shall, if supported, use it as defined in TS 23.501 [9].

If the *RAN Paging Priority* IE is included in the UE CONTEXT MODIFICATION REQUEST message, the NG-RAN node may use it to determine a priority for paging the UE in RRC_INACTIVE state.

If the *UE Aggregate Maximum Bit Rate* IE is included in the UE CONTEXT MODIFICATION REQUEST message, the NG-RAN node shall

- replace the previously provided UE Aggregate Maximum Bit Rate by the received UE Aggregate Maximum Bit Rate in the UE context;
- use the received UE Aggregate Maximum Bit Rate for all Non-GBR QoS flows for the concerned UE as specified in TS 23.501 [9].

If the *Core Network Assistance Information for RRC INACTIVE* IE is included in the UE CONTEXT MODIFICATION REQUEST message, the NG-RAN node shall, if supported, replace the previously provided Core Network Assistance Information for RRC INACTIVE and use it for the RRC_INACTIVE state decision and RNA configuration for the UE, and RAN paging, if any, for a UE in RRC_INACTIVE state, as specified in TS 38.300 [8]. In particular,

- if the *UE Specific DRX* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, use it for RAN paging.
- if the *MICO Mode Indication* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, consider that the UE is configured with MICO mode by the AMF as specified in TS 23.501 [9].
- if the *Expected UE Behaviour* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, use it to assist the UE RRC state transition decision.
- if the *E-UTRA Paging eDRX Information* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, take it into account to configure the RAN Paging when the UE is in RRC_INACTIVE as specified in TS 36.300 [17].
- if the *Extended UE Identity Index Value* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, use it for RAN Paging.
- if the *UE Radio Capability for Paging* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, use it for subsequent RAN paging.
- if the *MICO All PLMN* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE the NG-RAN node shall, if supported, consider that the registration area for the UE is the full PLMN and ignore the *TAI List for RRC Inactive* IE.
- if the *NR Paging eDRX Information* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, take it into account to configure the RAN Paging when the UE is in RRC_INACTIVE as described in TS 38.300 [8].
- if the *Paging Cause Indication for Voice Service* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, store and use it as specified in TS 38.300 [8].
- if the *PEIPS Assistance Information* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, store it and use it for paging subgrouping the UE in RRC_INACTIVE state, as specified in TS 38.300 [8].
- if the *Hashed UE Identity Index Value* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, use it to determine the start point of PTW.
- if the *CN MT Communication Handling* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, store it and may subsequently request, based on implementation, the CN for MT communication handling as described in TS 23.502 [10].
- if the *LP-WUSPS Assistance Information* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, store it and use it for LP-WUS paging subgrouping the UE in RRC_INACTIVE state, as specified in TS 38.300 [8].

- if the *Further Extended UE Identity Index Value* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, store it and use it as specified in TS 38.304 [12].

- If the *LP-WUS Disable Indication* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, store it and use it to disable LP-WUS as described in TS 38.300 [8].

If the *CN Assisted RAN Parameters Tuning* IE is included in the UE CONTEXT MODIFICATION REQUEST message, the NG-RAN node may use it as described in TS 23.501 [9].

If the *RRC Inactive Transition Report Request* IE is included in the UE CONTEXT MODIFICATION REQUEST message, the NG-RAN node shall, if supported, store this information in the UE context and report to the AMF the *User Location Information* IE and the *RRC State* IE in the UE CONTEXT MODIFICATION RESPONSE message.

If the *RRC Inactive Transition Report Request* IE is included in the UE CONTEXT MODIFICATION REQUEST message and set to "cancel report", the NG-RAN node shall, if supported, stop reporting to the AMF the RRC state of the UE.

The NG-RAN node shall report, in the UE CONTEXT MODIFICATION RESPONSE message to the AMF, the successful update of the UE context.

If the *Emergency Fallback Indicator* IE is included in the UE CONTEXT MODIFICATION REQUEST message, it indicates that the concerned UE context is subject to emergency service fallback as described in TS 23.501 [9] and the NG-RAN node may, if supported, take the appropriate mobility actions taking into account the *Emergency Service Target CN* IE if provided.

If the *New AMF UE NGAP ID* IE is included in the UE CONTEXT MODIFICATION REQUEST message, the NG-RAN node shall use the received value for future signalling with the AMF.

If the *New GUAMI* IE is included in the UE CONTEXT MODIFICATION REQUEST message, the NG-RAN node shall replace the previously stored GUAMI as specified in TS 23.501 [9].

If the *SRVCC Operation Possible* IE is included in UE CONTEXT MODIFICATION REQUEST message, the NG-RAN node shall, if supported, store the content of the received *SRVCC Operation Possible* IE in the UE context and use it as defined in TS 23.216 [31].

If the *NR V2X Services Authorized* IE is contained in the UE CONTEXT MODIFICATION REQUEST message, the NG-RAN node shall, if supported, update its V2X services authorization information for the UE accordingly. If the *NR V2X Services Authorized* IE includes one or more IEs set to "not authorized", the NG-RAN node shall, if supported, initiate actions to ensure that the UE is no longer accessing the relevant service(s).

If the *LTE V2X Services Authorized* IE is contained in the UE CONTEXT MODIFICATION REQUEST message, the NG-RAN node shall, if supported, update its V2X services authorization information for the UE accordingly. If the *LTE V2X Services Authorized* IE includes one or more IEs set to "not authorized", the NG-RAN node shall, if supported, initiate actions to ensure that the UE is no longer accessing the relevant service(s).

If the *NR A2X Services Authorized* IE is contained in the UE CONTEXT MODIFICATION REQUEST message, the NG-RAN node shall, if supported, update its A2X services authorization information for the UE accordingly. If the *NR A2X Services Authorized* IE includes one or more IEs set to "not authorized", the NG-RAN node shall, if supported, initiate actions to ensure that the UE is no longer accessing the relevant service(s).

If the *LTE A2X Services Authorized* IE is contained in the UE CONTEXT MODIFICATION REQUEST message, the NG-RAN node shall, if supported, update its A2X services authorization information for the UE accordingly. If the *LTE A2X Services Authorized* IE includes one or more IEs set to "not authorized", the NG-RAN node shall, if supported, initiate actions to ensure that the UE is no longer accessing the relevant service(s).

If the *NR UE Sidelink Aggregate Maximum Bit Rate* IE is included in the UE CONTEXT MODIFICATION REQUEST message, the NG-RAN node shall, if supported:

- replace the previously provided NR UE Sidelink Aggregate Maximum Bit Rate, if available in the UE context, with the received value;

- use the received value for the concerned UE's sidelink communication in network scheduled mode for NR V2X services.

If the *LTE UE Sidelink Aggregate Maximum Bit Rate* IE is included in the UE CONTEXT MODIFICATION REQUEST message, the NG-RAN node shall, if supported:

- replace the previously provided LTE UE Sidelink Aggregate Maximum Bit Rate, if available in the UE context, with the received value;
- use the received value for the concerned UE's sidelink communication in network scheduled mode for LTE V2X services.

If the *NR A2X UE PC5 Aggregate Maximum Bit Rate* IE is included in the UE CONTEXT MODIFICATION REQUEST message, the NG-RAN node shall, if supported:

- replace the previously provided NR A2X UE PC5 Aggregate Maximum Bit Rate, if available in the UE context, with the received value;
- use the received value for the concerned UE's sidelink communication in network scheduled mode for NR A2X services.

If the *LTE A2X UE PC5 Aggregate Maximum Bit Rate* IE is included in the UE CONTEXT MODIFICATION REQUEST message, the NG-RAN node shall, if supported:

- replace the previously provided LTE A2X UE PC5 Aggregate Maximum Bit Rate, if available in the UE context, with the received value;
- use the received value for the concerned UE's sidelink communication in network scheduled mode for LTE A2X services.

If the *PC5 QoS Parameters* IE is included in the UE CONTEXT MODIFICATION REQUEST message, the NG-RAN node shall, if supported, use it as defined in TS 23.287 [33].

If the *A2X PC5 QoS Parameters* IE is included in the UE CONTEXT MODIFICATION REQUEST message, the NG-RAN node shall, if supported, use it as defined in TS 23.256 [54].

If the UE CONTEXT MODIFICATION REQUEST message contains the *UE Radio Capability ID* IE, the NG-RAN node shall, if supported, use it as specified in TS 23.501 [9] and TS 23.502 [10].

If the *Time Synchronisation Assistance Information* IE is included in the UE CONTEXT MODIFICATION REQUEST message, the NG-RAN node shall, if supported, store the information in the UE context and use it as defined in TS 23.501 [9].

If the *QMC Configuration Information* IE is included in the UE CONTEXT MODIFICATION REQUEST message, the NG-RAN node shall, if supported, use it for QoE management, as described in TS 38.300 [8]. If the *Assistance Information for QoE Measurement* IE is included in the *UE Application Layer Measurement Configuration Information* IE within the *QMC Configuration Information* IE, the NG-RAN node may take it into account for controlling the reporting of application layer measurement when the NG-RAN node is overloaded, as described in TS 38.300 [8].

If the *QMC Deactivation* IE is included in the UE CONTEXT MODIFICATION REQUEST message, the NG-RAN node shall, if supported, deactivate the QMC configurations therein.

If the *UE Slice Maximum Bit Rate List* IE is included in the UE CONTEXT MODIFICATION REQUEST message, the NG-RAN node shall, if supported:

- store and replace the previously provided UE Slice Maximum Bit Rate List, if any, by the received UE Slice Maximum Bit Rate List in the UE context;
- use the received UE Slice Maximum Bit Rate List for each S-NSSAI for the concerned UE as specified in TS 23.501 [9].

If the *Management Based MDT PLMN Modification List* IE is contained in the UE CONTEXT MODIFICATION REQUEST message, the NG-RAN node shall, if supported, overwrite any previously stored Management Based MDT PLMN List information in the UE context and use the received information to determine subsequent selection of the UE for management based MDT defined in TS 32.422 [11].

If the *5G ProSe Authorized* IE is included in UE CONTEXT MODIFICATION REQUEST message, the NG-RAN node shall, if supported, update the 5G ProSe authorization information for the UE accordingly. If the *5G ProSe*

Authorized IE includes one or more IEs set to "not authorized", the NG-RAN node shall, if supported, initiate actions to ensure that the UE is no longer accessing the relevant 5G ProSe service(s).

If the *5G ProSe UE PC5 Aggregate Maximum Bit Rate* IE is included in the UE CONTEXT MODIFICATION REQUEST message, the NG-RAN node shall, if supported:

- replace the previously provided 5G ProSe UE PC5 Aggregate Maximum Bit Rate, if available in the UE context, with the received value;
- use the received value for the concerned UE's sidelink communication in network scheduled mode for 5G ProSe services.

If the *5G ProSe PC5 QoS Parameters* IE is included in the UE CONTEXT MODIFICATION REQUEST message, the NG-RAN node shall, if supported, use it as defined in TS 23.304 [47].

If the *Network Controlled Repeater Authorized* IE is included in the UE CONTEXT MODIFICATION REQUEST message, the NG-RAN node shall, if supported, update its Network Controlled Repeater Authorization information for the UE accordingly and take it into account when configuring UE information.

If the *Aerial UE Subscription Information* IE is included in the UE CONTEXT MODIFICATION REQUEST message, the NG-RAN node shall, if supported, store the information or overwrite any previously stored information in the UE context and use it as defined in TS 38.300 [8].

If the *Ranging and Sidelink Positioning Service Information* IE is included in the UE CONTEXT MODIFICATION REQUEST message, the NG-RAN node shall, if supported, update the Ranging and Sidelink Positioning service information for the UE accordingly. If the *Ranging and Sidelink Positioning Authorized* IE within the *Ranging and Sidelink Positioning Service Information* IE is set to "not authorized", the NG-RAN node shall, if supported, initiate actions to ensure that the UE is no longer accessing the Ranging and Sidelink Positioning service.

Interactions with RRC Inactive Transition Report procedure:

If the *RRC Inactive Transition Report Request* IE is included in the UE CONTEXT MODIFICATION REQUEST message and set to "single RRC connected state report", the NG-RAN node shall, if supported and if the UE is in RRC_INACTIVE state, send one subsequent RRC INACTIVE TRANSITION REPORT message to the AMF when the RRC state transitions to RRC_CONNECTED state.

If the *RRC Inactive Transition Report Request* IE is included in the UE CONTEXT MODIFICATION REQUEST message and set to "subsequent state transition report", the NG-RAN node shall, if supported, send the RRC INACTIVE TRANSITION REPORT message to the AMF to report the RRC state of the UE when the UE enters or leaves RRC_INACTIVE state.

8.3.4.3 Unsuccessful Operation

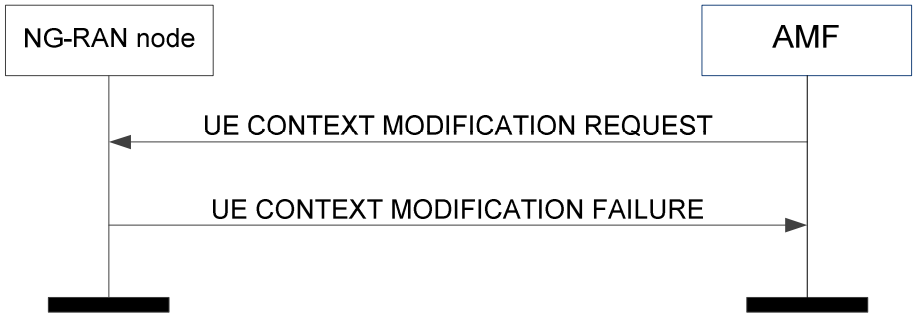


Figure 8.3.4.3-1: UE context modification: unsuccessful operation

In case the UE context update cannot be performed successfully, the NG-RAN node shall respond with the UE CONTEXT MODIFICATION FAILURE message to the AMF with an appropriate cause value in the *Cause* IE.

If the *New AMF UE NGAP ID* IE is included in the UE CONTEXT MODIFICATION REQUEST message, the NG-RAN node may use the received *New AMF UE NGAP ID* IE or *Old AMF UE NGAP ID* IE in the UE CONTEXT MODIFICATION FAILURE message.

8.3.4.4 Abnormal Conditions

If the UE CONTEXT MODIFICATION REQUEST message including the *New AMF UE NGAP ID* IE is received after the NG-RAN node has initiated another class 1 NGAP EP, the NG-RAN node shall be prepared to receive the response message containing an AMF UE NGAP ID with the value received in the *New AMF UE NGAP ID* IE.

NOTE: If the *Emergency Fallback Indicator* IE and the *Security Key* IE are both included in the UE CONTEXT MODIFICATION REQUEST message, the NG-RAN node may handle only the *Emergency Fallback Indicator* IE.

8.3.5 RRC Inactive Transition Report

8.3.5.1 General

The purpose of the RRC Inactive Transition Report procedure is to notify the AMF when the UE enters or leaves RRC_INACTIVE state. The procedure uses UE-associated signalling.

8.3.5.2 Successful Operation



Figure 8.3.5.2-1: RRC Inactive transition report

The NG-RAN node initiates the procedure by sending an RRC INACTIVE TRANSITION REPORT message to the AMF. Upon reception of the RRC INACTIVE TRANSITION REPORT message, the AMF shall take appropriate actions based on the information indicated by the *RRC State* IE.

8.3.5.3 Abnormal Conditions

Void.

8.3.6 Connection Establishment Indication

8.3.6.1 General

The purpose of the Connection Establishment Indication procedure is to enable the AMF to complete the establishment of the UE-associated logical NG-connection. The procedure uses UE-associated signalling. This procedure applies only if the NG-RAN node is an ng-eNB.

8.3.6.2 Successful Operation

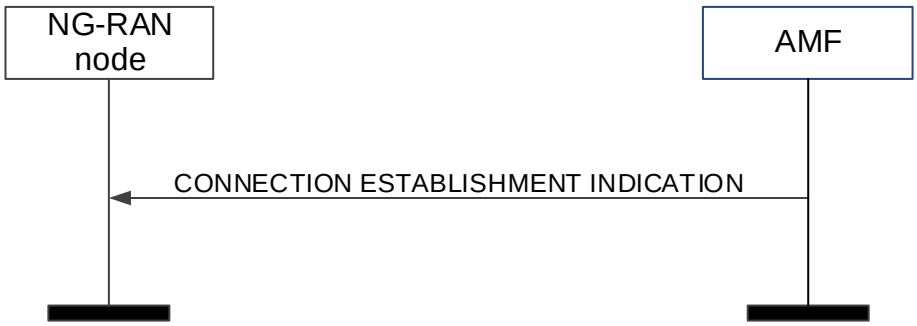


Figure 8.3.6.2-1: Connection Establishment Indication procedure. Successful operation.

The AMF initiates the procedure by sending a CONNECTION ESTABLISHMENT INDICATION message to the NG-RAN node.

If the UE-associated logical NG-connection is not established, the AMF shall allocate a unique AMF UE NGAP ID to be used for the UE and include it in the CONNECTION ESTABLISHMENT INDICATION message.

If the *UE Radio Capability* IE is included in the CONNECTION ESTABLISHMENT INDICATION message, the NG-RAN node shall store this information in the UE context, and use it as defined in TS 38.300 [8].

If the *End Indication* IE is included in the CONNECTION ESTABLISHMENT INDICATION message and set to "no further data", the NG-RAN node shall consider that there are no further NAS PDUs to be transmitted for this UE.

If the *S-NSSAI* IE is contained in the CONNECTION ESTABLISHMENT INDICATION message, the NG-RAN node shall store this information in the UE context, and use it as specified in TS 23.501 [9].

If the *Allowed NSSAI* IE is contained in the CONNECTION ESTABLISHMENT INDICATION message, the NG-RAN node shall store this information in the UE context, and use it as specified in TS 23.501 [9].

If the *Partially Allowed NSSAI* IE is contained in the CONNECTION ESTABLISHMENT INDICATION message, the NG-RAN node shall, if supported, deduce from it the partially allowed network slices for the UE, store and replace any previously received Partially Allowed NSSAI and use it as specified in TS 23.501 [9].

If the *Ranging and Sidelink Positioning Service Information* IE is contained in the HANDOVER REQUEST message, the NG-RAN node shall, if supported, take it into account for the Ranging and Sidelink Positioning service.

If the *UE Differentiation Information* IE is included in the CONNECTION ESTABLISHMENT INDICATION message, the NG-RAN node shall, if supported, store this information in the UE context for further use according to TS 23.501 [9].

If the *DL CP Security Information* IE is included in the CONNECTION ESTABLISHMENT INDICATION message, the NG-RAN node shall forward this information to the UE as described in TS 36.300 [17].

If the NB-IoT UE Priority IE is contained in the CONNECTION ESTABLISHMENT INDICATION message, the NG-RAN node shall, if supported, store this information in the UE context, and use it as specified in TS 23.501 [9].

If the *Enhanced Coverage Restriction* IE is included in the CONNECTION ESTABLISHMENT INDICATION message, the NG-RAN node shall, if supported, store this information in the UE context and use it as defined in TS 23.501 [9].

If the *CE-mode-B Restricted* IE is included in the CONNECTION ESTABLISHMENT INDICATION message and the *Enhanced Coverage Restriction* IE is not set to "restricted" and the Enhanced Coverage Restricted information stored in the UE context is not set to "restricted", the NG-RAN node shall, if supported, store this information in the UE context and use it as defined in TS 23.501 [9].

If the *UE Radio Capability ID* IE is contained in the CONNECTION ESTABLISHMENT INDICATION message, the NG-RAN node shall, if supported, use it as specified in TS 23.501 [9] and TS 23.502 [10].

If the *Masked IMEISV* IE is contained in the CONNECTION ESTABLISHMENT INDICATION message, the NG-RAN node shall, if supported, use it to determine the characteristics of the UE for subsequent handling.

If the *Old AMF* IE is included in the CONNECTION ESTABLISHMENT INDICATION message, the NG-RAN node shall consider that this UE-associated logical NG-connection was redirected to this AMF from another AMF identified by the *Old AMF* IE. If the *Extended Old AMF* IE is included in the CONNECTION ESTABLISHMENT INDICATION message, the NG-RAN node shall, if supported, consider that this UE-associated logical NG-connection was redirected to this AMF from another AMF identified by the *Extended Old AMF* IE.

Interactions with UE Radio Capability Info Indication procedure:

If the CONNECTION ESTABLISHMENT INDICATION message is received with neither the *UE Radio Capability* IE nor the *UE Radio Capability ID* IE, the NG-RAN node shall, if supported, request the UE Radio Capability information from the UE, and send it to the AMF via the UE RADIO CAPABILITY INFO INDICATION message, as specified in TS 23.501 [9].

8.3.6.3 Abnormal Conditions

If the *Partially Allowed NSSAI* IE is received in the CONNECTION ESTABLISHMENT INDICATION message and the total number of S-NSSAIs included in the Allowed NSSAI and Partially Allowed NSSAI exceeds eight, the NG-RAN node shall consider the procedure as failed.

If any of the S-NSSAI which is present in the *Partially Allowed NSSAI* IE is also present in the *Allowed NSSAI* IE, the NG-RAN node shall consider the procedure as failed.

8.3.7 AMF CP Relocation Indication

8.3.7.1 General

The purpose of the AMF CP Relocation Indication procedure is to inform the NG-RAN node that the UE's connection is to be relocated to another NG-RAN node as described in TS 38.300 [8], for a UE using Control Plane CIoT 5GS Optimisation. This procedure applies only if the NG-RAN node is an ng-eNB.

The procedure uses UE-associated signalling.

8.3.7.2 Successful Operation

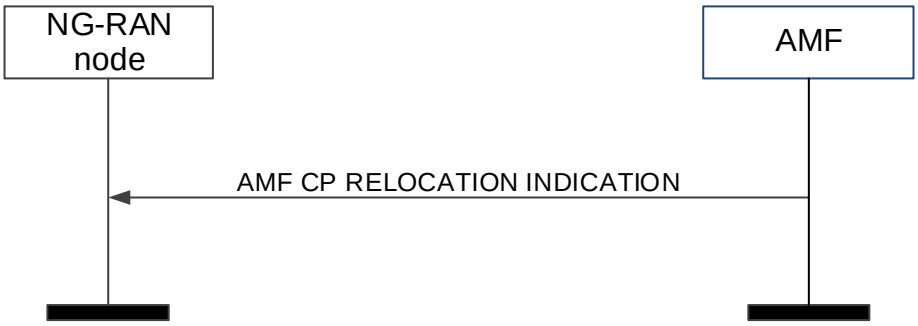


Figure 8.3.7.2-1: AMF CP Relocation Indication. Successful operation.

The AMF initiates the procedure by sending an AMF CP RELOCATION INDICATION message to the NG-RAN node.

Upon reception of the AMF CP RELOCATION INDICATION message, the NG-RAN node shall terminate the delivery of NAS messages that have been received from the AMF.

Interactions with NAS Non Delivery Indication procedure:

On reception of the AMF CP RELOCATION INDICATION message, the NG-RAN node may initiate NAS Non Delivery Indication procedure(s) to report the non-delivery of any NAS PDUs previously received from the AMF.

8.3.7.3 Abnormal Conditions

Void.

8.3.8 RAN CP Relocation Indication

8.3.8.1 General

The purpose of the RAN CP Relocation Indication procedure is to request the AMF to authenticate the UE's re-establishment request, and trigger the establishment of the respective UE-associated logical NG-connection, for a NB-IoT UE using Control Plane CIoT 5GS Optimisation. This procedure applies only if the NG-RAN node is an ng-eNB.

The procedure uses UE-associated signalling.

8.3.8.2 Successful Operation

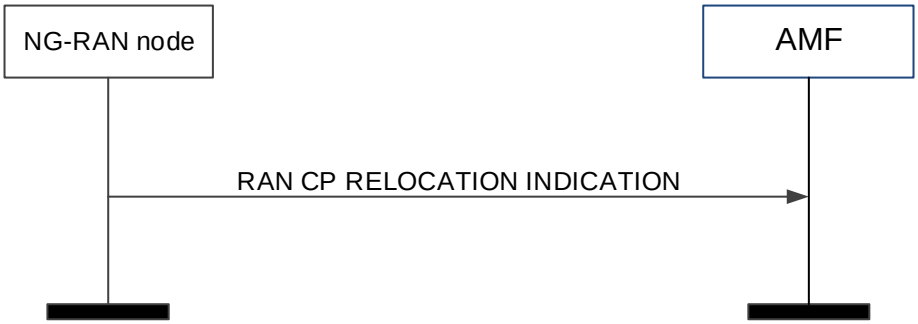


Figure 8.3.8.2-1: RAN CP Relocation Indication.

The NG-RAN node initiates the procedure by sending a RAN CP RELOCATION INDICATION message to the AMF.

The NG-RAN node shall allocate a unique RAN UE NGAP ID to be used for the UE and the NG-RAN node shall include this identity in the RAN CP RELOCATION INDICATION message.

Upon receiving the RAN CP RELOCATION INDICATION message, the AMF shall authenticate the request using the NAS-level security information received in the *UL CP Security Information* IE and if the authentication is successful initiate the Connection Establishment Indication procedure including NAS-level security information in the *DL CP Security Information* IE.

In case the AMF cannot authenticate the UE's request, the CONNECTION ESTABLISHMENT INDICATION message does not contain security information, and the NG-RAN node shall fail the RRC Re-establishment.

In case of authentication failure, the NG-RAN node and the AMF should locally release the allocated NG resources, if any.

Interactions with the AMF CP Relocation and UE Context Release procedures:

In case of successful UE authentication, the AMF initiates the UE Context Release procedure to release the UE's NG-connection in the old NG-RAN node. The AMF may initiate the AMF CP Relocation procedure before the release procedure in order to trigger the old NG-RAN node to return non-delivered NAS PDUs to the AMF.

8.3.8.3 Abnormal Conditions

Void.

8.3.9 Retrieve UE Information

8.3.9.1 General

The purpose of the Retrieve UE Information procedure is for the NG-RAN node to request the UE information including NB-IoT UE Priority and UE Radio Capability from the AMF, for a NB-IoT UE using Control Plane CIoT 5GS Optimisation. The procedure uses non UE-associated signalling. This procedure applies only if the NG-RAN node is an ng-eNB.

8.3.9.2 Successful Operation

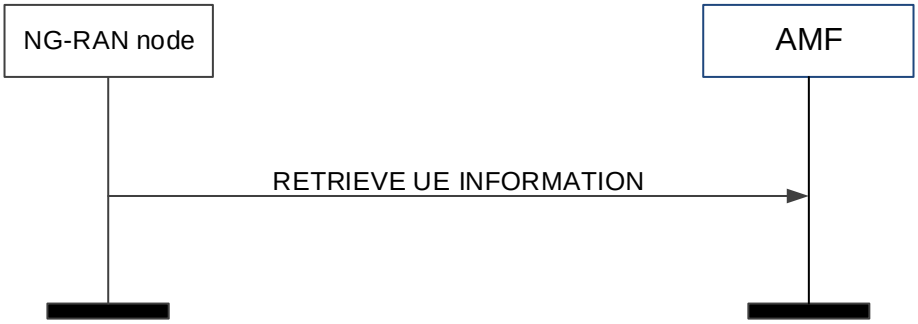


Figure 8.3.9.2-1: Retrieve UE Information

The NG-RAN node initiates the procedure by sending the RETRIEVE UE INFORMATION message to the AMF.

8.3.9.3 Abnormal Conditions

Void.

8.3.10 UE Information Transfer

8.3.10.1 General

The purpose of the UE Information Transfer procedure is for the AMF to send the UE information including NB-IoT UE Priority and UE Radio Capability to the NG-RAN node, for a NB-IoT UE using Control Plane CIoT 5GS Optimisation. The procedure uses non UE-associated signalling. This procedure applies only if the NG-RAN node is an ng-eNB.

8.3.10.2 Successful Operation

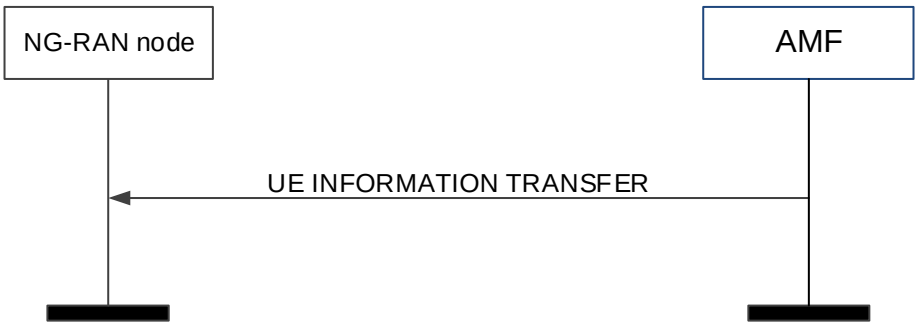


Figure 8.3.10.2-1: UE Information Transfer

The AMF initiates the procedure by sending the UE INFORMATION TRANSFER message to the NG-RAN node.

If the *NB-IoT UE Priority* IE is contained in the UE INFORMATION TRANSFER message, the NG-RAN node shall store this information in the UE context, and use it as specified in TS 23.501 [9].

If the *UE Radio Capability* IE is contained in the UE INFORMATION TRANSFER message, the NG-RAN node shall store this information in the UE context, and use it as specified in TS 23.501 [9].

If the *S-NSSAI* IE is contained in the UE INFORMATION TRANSFER message, the NG-RAN node shall store this information in the UE context, and use it as specified in TS 23.501 [9].

If the *Allowed NSSAI* IE is contained in the UE INFORMATION TRANSFER message, the NG-RAN node shall store this information in the UE context, and use it as specified in TS 23.501 [9].

If the *Partially Allowed NSSAI* IE is contained in the UE INFORMATION TRANSFER message, the NG-RAN node shall, if supported, deduce from it the partially allowed network slices for the UE, store and replace any previously received Partially Allowed NSSAI and use it as specified in TS 23.501 [9].

If the *UE Differentiation Information* IE is included in the UE INFORMATION TRANSFER message, the NG-RAN node shall, if supported, store this information in the UE context for further use according to TS 23.501 [9].

If the *Masked IMEISV* IE is contained in the UE INFORMATION TRANSFER message, the NG-RAN node shall, if supported, use it to determine the characteristics of the UE for subsequent handling.

8.3.10.3 Abnormal Conditions

If the *Partially Allowed NSSAI* IE is received in the UE INFORMATION TRANSFER message and the total number of S-NSSAIs included in the Allowed NSSAI and Partially Allowed NSSAI exceeds eight, the NG-RAN node shall consider the procedure as failed.

If any of the S-NSSAI which is present in the *Partially Allowed NSSAI* IE is also present in the *Allowed NSSAI* IE, the NG-RAN node shall consider the procedure as failed.

8.3.11 UE Context Suspend

8.3.11.1 General

The purpose of the UE Context Suspend procedure is to suspend the UE-associated logical NG-connection and the NG-U transport bearer with the 5GC while keeping the UE context in the NG-RAN node. The procedure uses UE-associated signalling.

In this version of the specification, this procedure applies only if the NG-RAN node is an ng-eNB.

8.3.11.2 Successful Operation

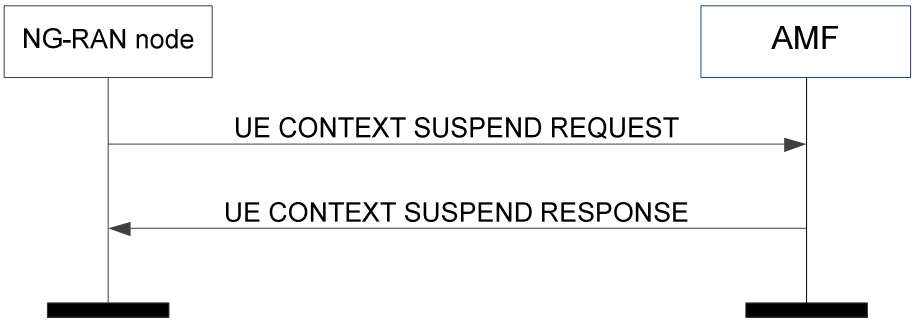


Figure 8.3.11.2-1: UE Context Suspend: Successful operation.

The NG-RAN node initiates the procedure by sending the UE CONTEXT SUSPEND REQUEST message to the AMF.

Upon receipt of the UE CONTEXT SUSPEND REQUEST message the AMF shall act as defined in TS 23.502 [10].

Upon receipt of the UE CONTEXT SUSPEND RESPONSE message the NG-RAN node shall suspend the UE context, the UE-associated logical NG-connection and the related PDU session contexts and send the UE to RRC_IDLE.

If the *Information on Recommended Cells and RAN Nodes for Paging* IE is included in the UE CONTEXT SUSPEND REQUEST message, the AMF shall, if supported, store it and may use it for subsequent paging.

If the *Paging Assistance Data for CE Capable UE* IE is included in the UE CONTEXT SUSPEND REQUEST message, the AMF shall, if supported, store it and use it for subsequent paging, as specified in TS 23.502 [10].

If the *Security Context* IE is included in the UE CONTEXT SUSPEND RESPONSE message, the NG-RAN node shall store the received *Security Context* IE in the UE context and remove any existing unused stored {NH, NCC} as specified in TS 33.501 [13].

If the *Suspend Indicator* IE is included in the UE CONTEXT SUSPEND REQUEST message, the SMF shall, if supported, consider the associated PDU session as suspended.

If the *User Location Information* IE is included in the UE CONTEXT SUSPEND REQUEST message, the AMF shall, if supported, handle this information as specified in TS 23.501 [9].

8.3.11.3 Unsuccessful Operation

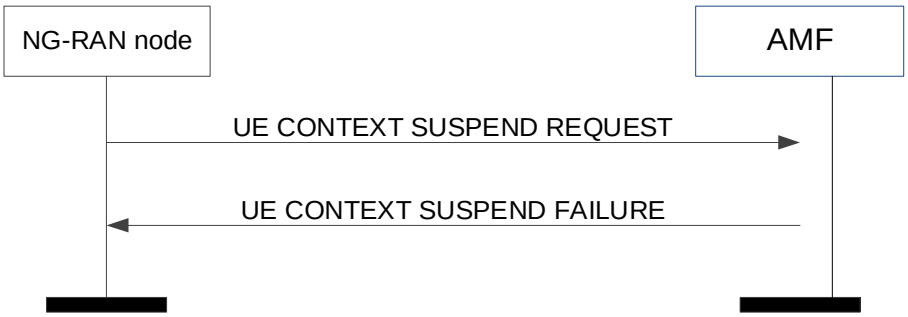


Figure 8.3.11.3-1: UE Context Suspend: unsuccessful operation.

If the AMF decides to not suspend the connection e.g. due to pending downlink data to be sent, it shall send the UE CONTEXT SUSPEND FAILURE message to the NG-RAN node.

8.3.11.4 Abnormal Conditions

Void.

8.3.12 UE Context Resume

8.3.12.1 General

The purpose of the UE Context Resume procedure is to resume the UE context, the suspended UE-associated logical NG-connection and the related NG-U transport bearer in the 5GC for this UE. The procedure uses UE-associated signalling.

In this version of the specification, this procedure applies only if the NG-RAN node is an ng-eNB.

8.3.12.2 Successful Operation

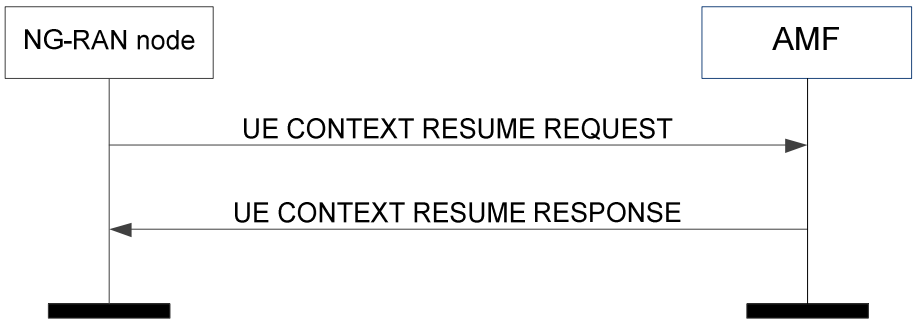


Figure 8.3.12.2-1: UE Context Resume procedure. Successful operation.

The NG-RAN node initiates the procedure by sending the UE CONTEXT RESUME REQUEST message to the AMF. If the NG-RAN node is not able to admit any suspended PDU sessions, the NG-RAN node shall indicate this in the *PDU Session Resource Failed to Resume List* IE. If the NG-RAN node is not able to admit certain QoS flows for a PDU session, the NG-RAN node shall indicate this in the *QoS Flow Failed to Resume List* IE included in the *UE Context Resume Request Transfer* IE for that PDU session.

Upon receipt of the UE CONTEXT RESUME REQUEST message the AMF shall act as defined in TS 23.502 [10] and respond with the UE CONTEXT RESUME RESPONSE message. If the AMF is not able to admit any suspended PDU sessions, the AMF shall indicate this in the *PDU Session Resource Failed to Resume List* IE. If the SMF is not able to admit certain QoS flows for a PDU session, the SMF shall indicate this in the *QoS Flow Failed to Resume List* IE included in the *UE Context Resume Response Transfer* IE for that PDU session.

The NG-RAN node shall release resources for each PDU session or QoS flow failed to resume and shall assume that the 5GC has released respective resources as well.

If the *Security Context* IE is included in the UE CONTEXT RESUME RESPONSE message, the NG-RAN node shall store the received *Security Context* IE in the UE context and the NG-RAN node shall use it for the next suspend/resume or Xn handover or Intra NG-RAN node handovers as specified in TS 33.501 [13].

If the *Suspend Request Indication* IE is included in the UE CONTEXT RESUME REQUEST message, the AMF shall, if supported, consider that the NG-RAN node is requesting immediate transition to RRC IDLE with Suspend as specified in TS 23.502 [10]. If the *Suspend Response Indication* IE is included in the UE CONTEXT RESUME RESPONSE message, the NG-RAN node shall suspend the UE context, the UE-associated logical NG-connection and the related PDU session contexts and send the UE to RRC_IDLE.

If the *Information on Recommended Cells and RAN Nodes for Paging* IE is included in the UE CONTEXT RESUME REQUEST message, the AMF shall, if supported, store it and may use it for subsequent paging.

If the *Paging Assistance Data for CE Capable UE* IE is included in the UE CONTEXT RESUME REQUEST message, the AMF shall, if supported, store it and use it for subsequent paging, as specified in TS 23.502 [10].

If the *Extended Connected Time* IE is included in the UE CONTEXT RESUME RESPONSE message, the NG-RAN node shall, if supported, use it as described in TS 23.501 [9].

If the *User Location Information* IE is included in the UE CONTEXT RESUME REQUEST message, the AMF shall, if supported, handle this information as specified in TS 23.501 [9].

8.3.12.3 Unsuccessful Operation

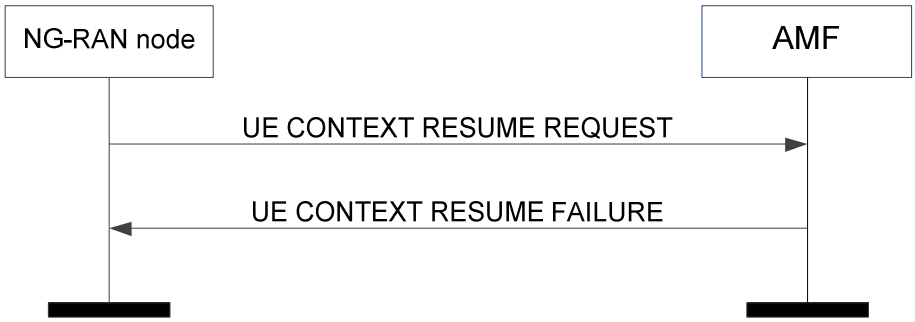


Figure 8.3.12.3-1: UE Context resume: unsuccessful operation.

If the AMF is not able to resume a single PDU session, it releases the UE-associated logical NG-connection by sending the UE CONTEXT RESUME FAILURE message to the NG-RAN node. Upon reception of the UE CONTEXT RESUME FAILURE message the NG-RAN node shall release the RRC connection as specified in TS 36.331 [21] and release all related signalling and user data transport resources.

8.3.12.4 Abnormal Conditions

Void.

8.3.13 MT Communication Handling

8.3.13.1 General

The purpose of the MT Communication Handling procedure is to request the AMF to activate or deactivate the CN based MT communication handling for a UE in RRC_INACTIVE state with eDRX beyond 10.24 seconds as specified in TS 23.501 [9]. The procedure uses UE-associated signalling.

8.3.13.2 Successful Operation

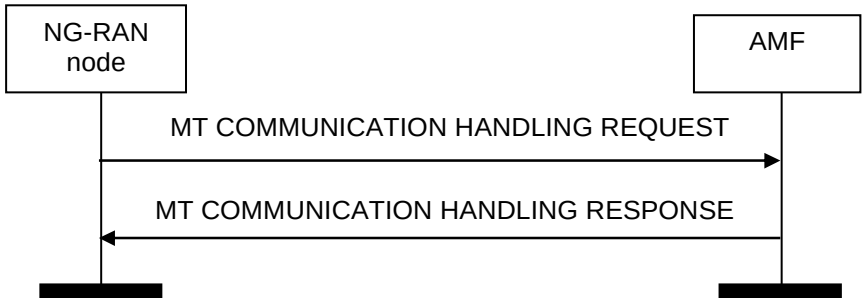


Figure 8.3.13.2-1: MT Communication Handling procedure. Successful operation.

The NG-RAN node initiates the procedure by sending the MT COMMUNICATION HANDLING REQUEST message to the AMF.

If the *5GC Action* IE included in the MT COMMUNICATION HANDLING REQUEST message is set to "HLCom Activate", the AMF shall activate MT communication handling for the PDU session(s) indicated in the *PDU Session Resource List* IE as specified in TS 23.501 [9] and take into account the *NR Paging Long eDRX Information for RRC INACTIVE* IE when applying MT communication handling as specified in TS 38.304 [12] and TS 23.502 [10].

If the *5GC Action* IE included in the MT COMMUNICATION HANDLING REQUEST message is set to "HLCom Deactivate", the AMF shall deactivate MT communication handling for the PDU session(s) indicated in the *PDU Session Resource List* IE as specified in TS 23.501 [9].

8.3.13.3 Unsuccessful Operation

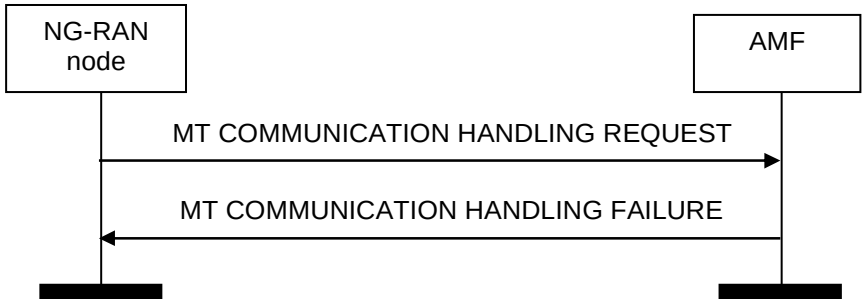


Figure 8.3.13.3-1: MT Communication Handling: unsuccessful operation.

If the AMF is not able to activate CN based MT communication handling for the UE configured with eDRX cycle value longer than 10.24 seconds in RRC_INACTIVE state, it shall send a MT COMMUNICATION HANDLING FAILURE message to the NG-RAN node.

8.3.13.4 Abnormal Conditions

Void.

8.3.14 RAN Paging Request

8.3.14.1 General

This procedure is initiated by the AMF to indicate that there is DL data buffered in 5GC or DL signalling arrives for the UE. The procedure uses UE-associated signalling.

8.3.14.2 Successful Operation

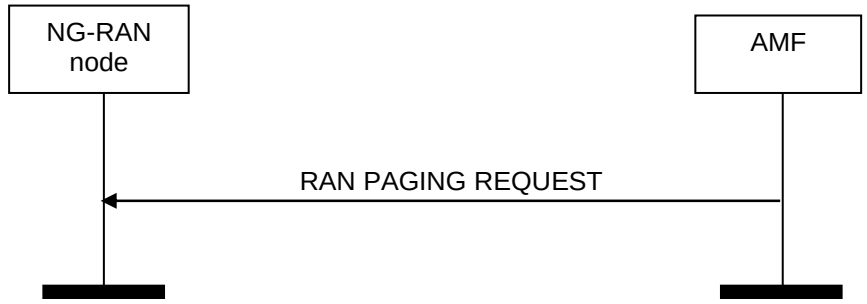


Figure 8.3.14.2-1: RAN Paging Request

The AMF initiates the RAN Paging Request procedure by sending the RAN PAGING REQUEST message to the NG-RAN node.

Upon reception of the RAN PAGING REQUEST message, the NG-RAN node shall perform RAN Paging for the UE in RRC_INACTIVE state.

If the *Paging Policy Differentiation* IE is included in the RAN PAGING REQUEST message, the NG-RAN node shall, if supported, take it into account when performing RAN Paging for the UE in RRC_INACTIVE state.

If the *DL Signalling* IE is included in the RAN PAGING REQUEST message, the NG-RAN node shall, if supported, take it into account when performing RAN Paging for the UE in RRC_INACTIVE state.

8.3.14.3 Abnormal Conditions

Void.

8.4 UE Mobility Management Procedures

8.4.1 Handover Preparation

8.4.1.1 General

The purpose of the Handover Preparation procedure is to request the preparation of resources at the target side via the 5GC. There is only one Handover Preparation procedure ongoing at the same time for a certain UE. The procedure uses UE-associated signalling.

8.4.1.2 Successful Operation

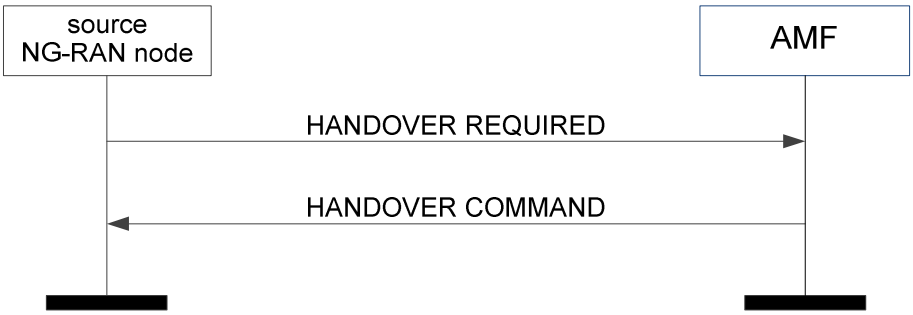


Figure 8.4.1.2-1: Handover preparation: successful operation

The source NG-RAN node initiates the handover preparation by sending the HANDOVER REQUIRED message to the serving AMF. When the source NG-RAN node sends the HANDOVER REQUIRED message, it shall start the timer $TNG_{RELOCprep.}$ The source NG-RAN node shall indicate the appropriate cause value for the handover in the *Cause* IE.

Upon reception of the HANDOVER REQUIRED message the AMF shall, for each PDU session indicated in the *PDU Session ID* IE, transparently transfer the *Handover Required Transfer* IE to the SMF associated with the concerned PDU session. If the UE is a mobile IAB-MT and the *PDU Session ID* IE contained in the HANDOVER REQUIRED message indicates no PDU session identity assigned as defined in TS 24.007 [58], the AMF shall, if supported, consider the mobile IAB-MT has no PDU session, ignore the *PDU Session Resource List* IE, and behave as specified in TS 23.501 [9].

In case of intra-system handover, the information in the *Source to Target Transparent Container* IE shall be encoded according to the definition of the *Source NG-RAN Node to Target NG-RAN Node Transparent Container* IE.

If the *DL Forwarding* IE is included for a given QoS flow in the *PDU Session Resource Information Item* IE within the *Source NG-RAN Node to Target NG-RAN Node Transparent Container* IE of the HANDOVER REQUIRED message and it is set to "DL forwarding proposed", it indicates that the source NG-RAN node proposes forwarding of downlink data for that QoS flow.

If the *UL Forwarding* IE is included for a given QoS flow in the *PDU Session Resource Information Item* IE within the *Source NG-RAN Node to Target NG-RAN Node Transparent Container* IE of the HANDOVER REQUIRED message and it is set to "UL forwarding proposed", it indicates that the source NG-RAN node proposes forwarding of uplink data for that QoS flow.

If the *DRBs to QoS Flows Mapping List* IE is included in the *PDU Session Resource Information Item* IE within the *Source NG-RAN Node to Target NG-RAN Node Transparent Container* IE of the HANDOVER REQUIRED message, it implicitly indicates that the source NG-RAN node proposes forwarding of downlink data for those DRBs.

If the *QoS Flow Mapping Indication* IE for a QoS flow is included in the *Associated QoS Flow List* IE within the *DRBs to QoS Flows Mapping List* IE within the *Source NG-RAN Node to Target NG-RAN Node Transparent Container* IE of the HANDOVER REQUIRED message, it indicates that the source NG-RAN node has mapped only the uplink or downlink of the QoS flow to the DRB.

The source NG-RAN node shall, for each MRB of each MBS session contained in the *MBS Session Information Target to Source List* IE, start data forwarding to the TNL address contained in the *DL Forwarding UP TNL Information* IE. If the *MRB Progress Information* IE is contained for an MRB in the *Data Forwarding Response MRB List* IE in the *MBS Session Information Target to Source List* IE, the source NG-RAN node may use this information to determine when to stop data forwarding.

In case of intra-system handover, if the HANDOVER COMMAND message contains the *DL Forwarding UP TNL Information* IE for a given DRB within the *Data Forwarding Response DRB List* IE in the *Handover Command Transfer* IE, the source NG-RAN node shall consider that the forwarding of downlink data for this DRB is accepted by the target NG-RAN node. If the HANDOVER COMMAND message contains the *UL Forwarding UP TNL Information* IE for a given DRB in the *Data Forwarding Response DRB List* IE within the *Handover Command Transfer* IE, it means the target NG-RAN node has requested the forwarding of uplink data for this DRB.

In case direct data forwarding is applied for inter-system handover, if the *Data Forwarding Response E-RAB List* IE in the *Handover Command Transfer* IE is included in the HANDOVER COMMAND message, the source NG-RAN node shall consider that forwarding of downlink data for this E-RAB is accepted by the target eNB.

If the HANDOVER COMMAND message contains the *UL Forwarding UP TNL Information* IE for a given PDU session within the *Handover Command Transfer* IE, the source NG-RAN node shall consider that the forwarding of uplink data of the QoS flows is accepted by the target NG-RAN node.

In case of inter-system handover to LTE, the information in the *Source to Target Transparent Container* IE shall be encoded according to the *Source eNB to Target eNB Transparent Container* IE definition as specified in TS 36.413 [16].

If the *Direct Forwarding Path Availability* IE is included in the HANDOVER REQUIRED message the AMF shall handle it as specified in TS 23.502 [10].

If the *Direct Forwarding Path Availability* IE is included within the *Handover Required Transfer* IE of the HANDOVER REQUIRED message the SMF shall handle it as specified in TS 23.502 [10].

When the preparation, including the reservation of resources at the target side is ready, the AMF responds with the HANDOVER COMMAND message to the source NG-RAN node. In case of intra-system handover, the AMF shall include the *PDU Session Resource Handover List* IE in the HANDOVER COMMAND message.

Upon reception of the HANDOVER COMMAND message the source NG-RAN node shall stop the timer $TNG_{RELOCprep}$ and start the timer $TNG_{RELOCoverall}$.

If there are any PDU sessions that could not be admitted in the target, they shall be indicated in the *PDU Session Resource to Release List* IE.

NOTE: As an exception in case of inter-system handover to LTE, the AMF generates the *Handover Preparation Unsuccessful Transfer* IE in the *PDU Session Resource to Release List* IE.

If the HANDOVER COMMAND message contains the *QoS Flow to be Forwarded List* IE and/or *Data Forwarding Response DRB List* IE within the *Handover Command Transfer* IE for a given PDU session, then the source NG-RAN node should initiate data forwarding for the QoS flows as specified in TS 38.300 [8].

If the HANDOVER COMMAND message contains the *Additional DL Forwarding UP TNL Information* IE within the *Handover Command Transfer* IE, the source NG-RAN node should initiate data forwarding of the PDU session split in different tunnel and shall use the received UP transport layer information for the forwarding QoS flows associated to it.

If the HANDOVER COMMAND message contains the *Additional UL Forwarding UP TNL Information* IE within the *Handover Command Transfer* IE, the source NG-RAN node should initiate data forwarding of the PDU session split in different tunnels using the received UP transport layer information.

If the *NAS Security Parameters from NG-RAN* IE is included in the HANDOVER COMMAND message the NG-RAN node shall use it as specified in TS 33.501 [13].

If the *Target to Source Transparent Container* IE has been received by the AMF from the handover target then the transparent container shall be included in the HANDOVER COMMAND message.

If the HANDOVER COMMAND message contains the *QoS Flow Failed to Setup List* IE within the *Handover Command Transfer* IE, the source NG-RAN node shall consider that the listed QoS flows are failed to be handed over.

In case of inter-system handover to LTE, the information in the *Target to Source Transparent Container* IE shall be encoded according to the definition of the *Target eNB to Source eNB Transparent Container* IE as specified in TS 36.413 [16].

If the *Index to RAT/Frequency Selection Priority* IE is contained in the *Source NG-RAN Node to Target NG-RAN Node Transparent Container* IE, the target NG-RAN node shall store the content of the received *Index to RAT/Frequency Selection Priority* IE in the UE context and use it as defined in TS 23.501 [9].

If the *DAPS Request Information* IE is included for a DRB in the *Source NG-RAN Node to Target NG-RAN Node Transparent Container* IE within the HANDOVER REQUIRED message, it indicates that the request concerns a DAPS Handover for that DRB, as described in TS 38.300 [8].

Interactions with other NGAP procedures:

If, after a HANDOVER REQUIRED message is sent and before the Handover Preparation procedure is terminated, the source NG-RAN node receives an AMF initiated PDU Session Management procedure on the same UE-associated signalling connection, the source NG-RAN node shall either:

1. Cancel the Handover Preparation procedure by executing the Handover Cancellation procedure with an appropriate cause value. After successful completion of the Handover Cancellation procedure, the source NG-RAN node shall continue the AMF initiated PDU Session Management procedure.

or

2. Terminate the AMF initiated PDU Session Management procedure by sending the appropriate response message with an appropriate cause value, e.g. "NG intra-system handover triggered" or "NG inter-system handover triggered" to the AMF and then the source NG-RAN node shall continue with the handover procedure.

8.4.1.3 Unsuccessful Operation

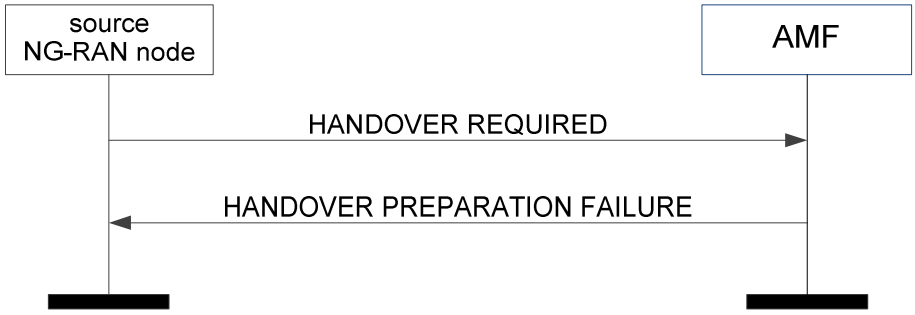


Figure 8.4.1.3-1: Handover preparation: unsuccessful operation

If the 5GC or the target side is not able to accept any of the PDU session resources or a failure occurs during the Handover Preparation, the AMF sends the HANDOVER PREPARATION FAILURE message with an appropriate cause value to the source NG-RAN node.

If the *Target to Source Failure Transparent Container* IE has been received by the AMF from the handover target then the transparent container shall be included in the HANDOVER PREPARATION FAILURE message.

If the *Target to Source Failure Transparent Container* IE is received in the HANDOVER PREPARATION FAILURE message including the *Cell CAG Information* IE, the source NG-RAN node shall, if supported, store and replace the PNI-NPN information associated with the indicated cell.

Interaction with Handover Cancel procedure:

If there is no response from the AMF to the HANDOVER REQUIRED message before timer $TNG_{RELOCprep}$ expires in the source NG-RAN node, the source NG-RAN node should cancel the Handover Preparation procedure by initiating the Handover Cancel procedure with the appropriate value for the *Cause* IE. The source NG-RAN node shall ignore any HANDOVER COMMAND message or HANDOVER PREPARATION FAILURE message received after the initiation of the Handover Cancel procedure.

8.4.1.4 Abnormal Conditions

In case of inter-system handover, if the NG-RAN node receives at least one PDU Session ID included in the *PDU Session Resource Handover List* IE without at least one valid associated GTP tunnel address pair (in either UL or DL), then the NG-RAN node shall consider it as a logical error and act as described in clause 10.4. A GTP tunnel address pair is considered valid if both the *GTP-TEID* IE and the *Endpoint IP Address* IE are present.

8.4.2 Handover Resource Allocation

8.4.2.1 General

The purpose of the Handover Resource Allocation procedure is to reserve resources at the target NG-RAN node for the handover of a UE. The procedure uses UE-associated signalling.

8.4.2.2 Successful Operation



Figure 8.4.2.2-1: Handover resource allocation: successful operation

The AMF initiates the procedure by sending the HANDOVER REQUEST message to the target NG-RAN node.

If the *Masked IMEISV* IE is contained in the HANDOVER REQUEST message the target NG-RAN node shall, if supported, use it to determine the characteristics of the UE for subsequent handling.

Upon receipt of the HANDOVER REQUEST message the target NG-RAN node shall

- attempt to execute the requested PDU session configuration and associated security;
- store the received UE Aggregate Maximum Bit Rate in the UE context, and use the received UE Aggregate Maximum Bit Rate for all Non-GBR QoS flows for the concerned UE as specified in TS 23.501 [9];
- store the received Mobility Restriction List in the UE context;
- store the received UE Security Capabilities in the UE context;
- store the received Security Context in the UE context and take it into use as defined in TS 33.501 [13];
- if supported, store the received UE Slice Maximum Bit Rate List in the UE context and use the received UE Slice Maximum Bit Rate List for each S-NSSAI for the concerned UE as specified in TS 23.501 [9].
- if supported, store the received PDU Set QoS parameters in the UE context and use it as specified in TS 23.501 [9].

Upon reception of the *UE History Information* IE, which is included within the *Source to Target Transparent Container* IE of the HANDOVER REQUEST message, the target NG-RAN node shall collect the information defined as mandatory in the *UE History Information* IE and shall, if supported, collect the information defined as optional in the *UE History Information* IE, for as long as the UE stays in one of its cells, and store the collected information to be used for future handover preparations.

Upon receiving the *PDU Session Resource Setup List* IE contained in the HANDOVER REQUEST message and the HANDOVER REQUEST message does not contain the *No PDU Session Indication* IE, the target NG-RAN node shall behave the same as defined in the PDU Session Resource Setup procedure. The target NG-RAN node shall report to the AMF in the HANDOVER REQUEST ACKNOWLEDGE message the result for each PDU session resource requested to be setup. In particular, for each PDU session resource successfully setup, it shall include the *Handover Request Acknowledge Transfer* IE containing the following information:

- The list of QoS flows which have been successfully established in the *QoS Flow Setup Response List* IE.
- The *Data Forwarding Accepted* IE if the data forwarding for the QoS flow is accepted.
- The list of QoS flows which have failed to be established, if any, in the *QoS Flow Failed to Setup List* IE.
- The UP transport layer information to be used for the PDU session.
- The security result associated to the PDU session.
- The redundant UP transport layer information to be used for the redundant transmission for the PDU session.
- The PDU Set based Handling Indicator, if supported.

- The ECN Marking or Congestion Information Reporting Status if the HANDOVER REQUEST message includes the *ECN Marking or Congestion Information Reporting Request* IE.

For each PDU session resource which failed to be setup, the *Handover Resource Allocation Unsuccessful Transfer* IE shall be included in the HANDOVER REQUEST ACKNOWLEDGE message containing a cause value that should be precise enough to enable the SMF to know the reason for the unsuccessful establishment.

For each PDU session included in the HANDOVER REQUEST ACKNOWLEDGE message, if the *Current QoS Parameters Set Index* IE is included for a QoS flow in the *QoS Flow Setup Response List* IE within the *Handover Request Acknowledge Transfer* IE the SMF shall consider it as the currently fulfilled QoS parameters set among the alternative QoS parameters for the involved QoS flow.

Upon reception of the HANDOVER REQUEST ACKNOWLEDGE message the AMF shall, for each PDU session indicated in the *PDU Session ID* IE, transfer transparently the *Handover Request Acknowledge Transfer* IE or *Handover Resource Allocation Unsuccessful Transfer* IE to the SMF associated with the concerned PDU session.

If the HANDOVER REQUEST message contains the *Data Forwarding Not Possible* IE associated with a given PDU session within the *Handover Request Transfer* IE set to "data forwarding not possible", the target NG-RAN node may not include the *DL Forwarding UP TNL Information* IE and for intra-system handover the *Data Forwarding Response DRB List* IE within the *Handover Request Acknowledge Transfer* IE in the HANDOVER REQUEST ACKNOWLEDGE message for that PDU session.

If the HANDOVER REQUEST message contains the *Redundant PDU Session Information* IE associated with a given PDU session within the *Handover Request Transfer* IE, the target NG-RAN node shall, if supported, store the received information in the UE context and use it for redundant PDU session setup as specified in TS38.300 [8] and TS 23.501 [9]. If the *PDU Session Type* IE is set to "ethernet" and the redundancy requirement is fulfilled using a secondary NG-RAN node, the NG-RAN node shall, if supported, include the *Global RAN Node ID of Secondary NG-RAN Node* IE in the *Handover Request Acknowledge Transfer* IE of the HANDOVER REQUEST ACKNOWLEDGE message. If the *PDU Session Pair ID* IE is included in the *Redundant PDU Session Information* IE, the NG-RAN node may use it to identify the paired PDU sessions.

For each PDU session for which the *Global RAN Node ID of Secondary NG-RAN Node* IE is included in the *Handover Request Acknowledge Transfer* IE of the HANDOVER REQUEST ACKNOWLEDGE message, the SMF shall, if supported, handle this information as specified in TS 23.501 [9].

In case of intra-system handover, if the target NG-RAN node accepts the downlink data forwarding for at least one QoS flow for which the *DL Forwarding* IE is set to "DL forwarding proposed", it may include the *DL Forwarding UP TNL Information* IE in the *Handover Request Acknowledge Transfer* IE as forwarding tunnel for the QoS flows listed in the *QoS Flow Setup Response List* IE of the HANDOVER REQUEST ACKNOWLEDGE message.

In case of intra-system handover, if the target NG-RAN node accepts the uplink data forwarding for at least one QoS flow for which the *UL Forwarding* IE is set to "UL forwarding proposed", it may include the *UL Forwarding UP TNL Information* IE in the *Handover Request Acknowledge Transfer* IE for the PDU session within the *PDU Session Resource Admitted List* IE of the HANDOVER REQUEST ACKNOWLEDGE message.

In case of intra-system handover, for each PDU session for which the *Additional DL UP TNL Information for HO List* IE is included in the *Handover Request Acknowledge Transfer* IE of the HANDOVER REQUEST ACKNOWLEDGE message, the SMF shall consider the included *Additional DL NG-U UP TNL Information* IE as the downlink termination point for the associated flows indicated in the *Additional QoS Flow Setup Response List* IE for this PDU session split in different tunnels and shall consider the *Additional DL Forwarding UP TNL Information* IE, if included, as the forwarding tunnel associated to these QoS flows.

In case of intra-system handover, for each PDU session for which the *Additional UL Forwarding UP TNL Information* IE is included in the *Handover Request Acknowledge Transfer* IE of the HANDOVER REQUEST ACKNOWLEDGE message, the SMF shall consider it as the termination points for the uplink forwarding tunnels for this PDU session split in different tunnels.

In case of intra-system handover, if the target NG-RAN node accepts the data forwarding for a successfully configured DRB, the target NG-RAN node may include the *DL Forwarding UP TNL Information* IE for the DRB within the *Data Forwarding Response DRB List* IE within *Handover Request Acknowledge Transfer* IE of the HANDOVER REQUEST ACKNOWLEDGE message.

In case of intra-system handover, if the target NG-RAN node receives the *Direct Forwarding Path Availability* IE set to "direct path available" within the *PDU Session Resource Setup Request Transfer* IE, the target NG-RAN node shall, if

supported, assign the UP transport layer information for intra-system direct data forwarding from the appropriate address space, if applicable.

If the HANDOVER REQUEST ACKNOWLEDGE message contains the *UL Forwarding UP TNL Information* IE for a given DRB in the *Data Forwarding Response DRB List* IE within the *Handover Request Acknowledge Transfer* IE, it indicates the target NG-RAN node has requested the forwarding of uplink data for the DRB.

In case of inter-system handover from E-UTRAN, if the *PDU Session Resource Setup Request Transfer* IE contains the *Direct Forwarding Path Availability* IE set to "direct path available", the target NG-RAN node shall, if supported, and if it accepts downlink data forwarding for the QoS flows mapped to an E-RAB of an admitted PDU session, include the *DL Forwarding UP TNL Information* IE in the *Data Forwarding Response E-RAB List* IE in the *Handover Request Acknowledge Transfer* IE in the HANDOVER REQUEST ACKNOWLEDGE message for that mapped E-RAB.

In case of inter-system handover from E-UTRAN, the target NG-RAN node includes the *Data Forwarding Accepted* IE for each QoS flow that the *DL Forwarding* IE is set to "DL forwarding proposed" for the corresponding E-RAB in the *Source NG-RAN Node to Target NG-RAN Node Transparent Container* IE and that the target NG-RAN node has admitted the proposed forwarding of downlink data for the QoS flow. If indirect data forwarding is applied for inter-system handover, if the target NG-RAN node accepts the downlink data forwarding for at least one QoS flow of an admitted PDU session it shall include the *DL Forwarding UP TNL Information* IE in the *PDU Session Resource Setup Response Transfer* IE for that PDU session within the *PDU Session Resources Admitted List* IE of the HANDOVER REQUEST ACKNOWLEDGE message.

In case of inter-system handover from E-UTRAN with direct forwarding, if the target NG-RAN node receives the *SgNB UE X2AP ID* IE in the *Source NG-RAN Node to Target NG-RAN Node Transparent Container* IE, it may use it for internal forwarding as described in TS 37.340 [32].

In case of inter-system handover from E-UTRAN, if the target cell is a CAG cell, the target NG-RAN node shall include the *NPN Access Information* IE in the HANDOVER REQUEST ACKNOWLEDGE message, and the AMF shall consider that the included information is associated to the target cell and to the UE's serving PLMN Identity, and use it as specified in TS 23.501 [9].

The target NG-RAN node shall use the information in the *Mobility Restriction List* IE if present in the HANDOVER REQUEST message to

- determine a target for subsequent mobility action for which the target NG-RAN node provides information about the target of the mobility action towards the UE;
- select a proper SCG during dual connectivity operation;
- assign proper RNA(s) for the UE when moving the UE to RRC_INACTIVE state.

If the *Mobility Restriction List* IE is not contained in the HANDOVER REQUEST message, the target NG-RAN node shall consider that no roaming and no access restriction apply to the UE except for the PNI NPN mobility as described in TS 23.501 [9]. The target NG-RAN node shall also consider that no roaming and no access restriction apply to the UE when:

- one of the QoS flows includes a particular ARP value (TS 23.501 [9]).

The NG-RAN node shall consider that roaming or access to CAG cells is only allowed if the *Allowed PNI-NPN List* IE is contained in the HANDOVER REQUEST message, as described in TS 23.501 [9].

If the *Trace Activation* IE is included in the HANDOVER REQUEST message the target NG-RAN node shall, if supported, initiate the requested trace function as described in TS 32.422 [11]. In particular, the NG-RAN node shall, if supported:

- if the *Trace Activation* IE includes the *MDT Activation* IE set to "Immediate MDT and Trace", initiate the requested trace session and MDT session as described in TS 32.422 [11];
- if the *Trace Activation* IE includes the *MDT Activation* IE set to "Immediate MDT Only", "Logged MDT only", initiate the requested MDT session as described in TS 32.422 [11] and the target NG-RAN node shall ignore the *Interfaces To Trace* IE and the *Trace Depth* IE;
- if the *Trace Activation* IE includes the *MDT Location Information* IE within the *MDT Configuration* IE, store this information and take it into account in the requested MDT session;

- if the *Trace Activation* IE includes the *Signalling Based MDT PLMN List* IE within the *MDT Configuration* IE, the NG-RAN node may use it to propagate the MDT Configuration as described in TS 37.320 [41];

- if the *Trace Activation* IE includes the *Bluetooth Measurement Configuration* IE within the *MDT Configuration* IE, take it into account for MDT Configuration as described in TS 37.320 [41];

- if the *Trace Activation* IE includes the *WLAN Measurement Configuration* IE within the *MDT Configuration* IE, take it into account for MDT Configuration as described in TS 37.320 [41];

- if the *Trace Activation* IE includes the *Sensor Measurement Configuration* IE within the *MDT Configuration* IE, take it into account for MDT Configuration as described in TS 37.320 [41];

- if the *Trace Activation* IE includes the *MDT Configuration* IE and if the NG-RAN node is a gNB at least the *MDT Configuration-NR* IE shall be present, while if the NG-RAN node is an ng-eNB at least the *MDT Configuration-EUTRA* IE shall be present;

- if the *Trace Activation* IE includes the *MN Only MDT Collection* IE and the *MN Only MDT Collection* IE is set to "MN only", consider that the *MDT Configuration-NR* IE or the *MDT Configuration-EUTRA* IE is only applicable for the MN if the UE is configured with MR-DC.

If the *Location Reporting Request Type* IE is included in the HANDOVER REQUEST message, the target NG-RAN node should perform the requested location reporting functionality for the UE as described in clause 8.12.

If the *Core Network Assistance Information for RRC INACTIVE* IE is included in the HANDOVER REQUEST message, the target NG-RAN node shall, if supported, store this information in the UE context and use it for the RRC_INACTIVE state decision and RNA configuration for the UE, and RAN paging, if any, for a UE in RRC_INACTIVE state, as specified in TS 38.300 [8]. In particular,

- if the *UE Specific DRX* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, use it for RAN paging.

- if the *MICO Mode Indication* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, consider that the UE is configured with MICO mode by the AMF as specified in TS 23.501 [9].

- if the *Expected UE Behaviour* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, use it to assist the UE RRC state transition decision.

- if the *E-UTRA Paging eDRX Information* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, take it into account to configure the RAN Paging when the UE is in RRC_INACTIVE as specified in TS 36.300 [17].

- if the *Extended UE Identity Index Value* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, use it for RAN Paging.

- if the *UE Radio Capability for Paging* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, use it for subsequent RAN paging.

- if the *MICO All PLMN* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE the NG-RAN node shall, if supported, consider that the registration area for the UE is the full PLMN and ignore the *TAI List for RRC Inactive* IE.

- if the *NR Paging eDRX Information* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, take it into account to configure the RAN Paging when the UE is in RRC_INACTIVE as described in TS 38.300 [8].

- if the *Paging Cause Indication for Voice Service* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, store and use it as specified in TS 38.300 [8].

- if the *PEIPS Assistance Information* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, store it and use it for paging subgrouping the UE in RRC_INACTIVE state, as specified in TS 38.300 [8].

- if the *Hashed UE Identity Index Value* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, use it to determine the start point of PTW.

- if the *CN MT Communication Handling* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, store it and may subsequently request, based on implementation, the CN for MT communication handling as described in TS 23.502 [10].

- if the *LP-WUSPS Assistance Information* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, store it and use it for LP-WUS paging subgrouping the UE in RRC_INACTIVE state, as specified in TS 38.300 [8].

- if the *Further Extended UE Identity Index Value* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, store it and use it as specified in TS 38.304 [12].

- If the *LP-WUS Disable Indication* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, store it and use it to disable LP-WUS as described in TS 38.300 [8].

If the *CN Assisted RAN Parameters Tuning* IE is included in the HANDOVER REQUEST message, the NG-RAN node may use it as described in TS 23.501 [9].

If the *New Security Context Indicator* IE is included in the HANDOVER REQUEST message, the target NG-RAN node shall use the information as specified in TS 33.501 [13].

If the *NASC* IE is included in the HANDOVER REQUEST message, the target NG-RAN node shall use it towards the UE as specified in TS 33.501 [13].

If the *RRC Inactive Transition Report Request* IE is included in the HANDOVER REQUEST message, the NG-RAN node shall, if supported, store this information in the UE context.

If the *Redirection for Voice EPS Fallback* IE is included in the HANDOVER REQUEST message, the NG-RAN node shall, if supported, store it and use it in a subsequent decision of EPS fallback for voice as specified in TS 23.502 [10].

If the *SRVCC Operation Possible* IE is included in the HANDOVER REQUEST message, the target NG-RAN node shall, if supported, store the content of the received *SRVCC Operation Possible* IE in the UE context and use it as defined in TS 23.216 [31].

If the *IAB Authorized* IE is contained in the HANDOVER REQUEST message, the NG-RAN node shall, if supported, consider that the handover is for an IAB node and use it as specified in TS 38.401 [2].

If the *Mobile IAB Authorized* IE is contained in the HANDOVER REQUEST message, the NG-RAN node shall, if supported, consider that the handover is for a mobile IAB-node. In addition, if the *No PDU Session Indication* IE is contained in the HANDOVER REQUEST message, the NG-RAN node shall, if supported, consider the mobile IAB-MT does not have any PDU sessions, ignore the *PDU Session Resource Setup List* IE, and it shall not take any action with respect to PDU session setup. Subsequently, the AMF shall, if supported, ignore the *PDU Session Resources Admitted List* IE in the HANDOVER REQUEST ACKNOWLEDGE message.

If the *Enhanced Coverage Restriction* IE is included in the HANDOVER REQUEST message, the NG-RAN node shall, if supported, store this information in the UE context and use it as defined in TS 23.501 [9].

If the *UE Differentiation Information* IE is included in the HANDOVER REQUEST message, the NG-RAN node shall, if supported, store this information in the UE context for further use according to TS 23.501 [9].

If the *UE User Plane CIoT Support Indicator* IE is included in the HANDOVER REQUEST message the NG-RAN node shall, if supported, store this information in the UE context and consider that User Plane CIoT 5GS Optimisation as specified in TS 23.501 [9] is supported for the UE.

Upon reception of the *UE History Information from UE* IE, which is included within the *Source to Target Transparent Container* IE of the HANDOVER REQUEST message, the target NG-RAN node shall, if supported, store the collected information and use it for future handover preparations.

After all necessary resources for the admitted PDU session resources have been allocated, the target NG-RAN node shall generate the HANDOVER REQUEST ACKNOWLEDGE message.

If the *RedCap Indication* IE or the *eRedCap Indication* IE is included in the HANDOVER REQUEST ACKNOWLEDGE message, the AMF shall, if supported, consider the UE respectively as a RedCap UE or an eRedCap UE that was previously served by a E-UTRA cell, and use the IE according to TS 23.501 [9].

For each QoS flow which has been established in the target NG-RAN node, if the *QoS Monitoring Request* IE was included in the *QoS Flow Level QoS Parameters* IE contained in the HANDOVER REQUEST message, the target NG-RAN node shall store this information, and, if supported, perform delay measurement and QoS monitoring, as specified in TS 23.501 [9]. If the *QoS Monitoring Reporting Frequency* IE was included in the *QoS Flow Level QoS Parameters* IE contained in the HANDOVER REQUEST message, the target NG-RAN node shall store this information and, if supported, use it for RAN part delay reporting.

If the *NR V2X Services Authorized* IE is contained in the HANDOVER REQUEST message and it contains one or more IEs set to "authorized", the NG-RAN node shall, if supported, consider that the UE is authorized for the relevant service(s).

If the *LTE V2X Services Authorized* IE is contained in the HANDOVER REQUEST message and it contains one or more IEs set to "authorized", the NG-RAN node shall, if supported, consider that the UE is authorized for the relevant service(s).

If the *NR A2X Services Authorized* IE is contained in the HANDOVER REQUEST message and it contains one or more IEs set to "authorized", the NG-RAN node shall, if supported, consider that the UE is authorized for the relevant service(s).

If the *LTE A2X Services Authorized* IE is contained in the HANDOVER REQUEST message and it contains one or more IEs set to "authorized", the NG-RAN node shall, if supported, consider that the UE is authorized for the relevant service(s).

If the *NR UE Sidelink Aggregate Maximum Bit Rate* IE is included in the HANDOVER REQUEST message, the NG-RAN node shall, if supported, use the received value for the concerned UE's sidelink communication in network scheduled mode for NR V2X services.

If the *LTE UE Sidelink Aggregate Maximum Bit Rate* IE is included in the HANDOVER REQUEST message, the NG-RAN node shall, if supported, use the received value for the concerned UE's sidelink communication in network scheduled mode for LTE V2X services.

If the *NR A2X UE PC5Aggregate Maximum Bit Rate* IE is included in the HANDOVER REQUEST message, the NG-RAN node shall, if supported, use the received value for the concerned UE's sidelink communication in network scheduled mode for NR A2X services.

If the *LTE A2X UE PC5 Aggregate Maximum Bit Rate* IE is included in the HANDOVER REQUEST message, the NG-RAN node shall, if supported, use the received value for the concerned UE's sidelink communication in network scheduled mode for LTE A2X services.

If the *PC5 QoS Parameters* IE is included in the HANDOVER REQUEST message, the NG-RAN node shall, if supported, use it as defined in TS 23.287 [33].

If the *A2X PC5 QoS Parameters* IE is included in the HANDOVER REQUEST message, the NG-RAN node shall, if supported, use it as defined in TS 23.256 [54].

If the *CE-mode-B Restricted* IE is included in the HANDOVER REQUEST message and the *Enhanced Coverage Restriction* IE is not set to "restricted" and the Enhanced Coverage Restriction information stored in the UE context is not set to "restricted", the NG-RAN node shall, if supported, store this information in the UE context and use it as defined in TS 23.501 [9].

If the *Management Based MDT PLMN List* IE is contained in the HANDOVER REQUEST message, the target NG-RAN node shall, if supported, store the received information in the UE context, and use this information to allow subsequent selections of the UE for management based MDT defined in TS 32.422 [11].

If the HANDOVER REQUEST message contains the *UE Radio Capability ID* IE, the NG-RAN node shall, if supported, use it as specified in TS 23.501 [9] and TS 23.502 [10].

If the *DAPS Request Information* IE is included for a DRB in the *Source NG-RAN Node to Target NG-RAN Node Transparent Container* IE within the HANDOVER REQUEST message, the target NG-RAN node shall consider that the request concerns a DAPS Handover for that DRB, as described in TS 38.300 [8]. The target NG-RAN node shall include the *DAPS Response information List* IE in the *Target NG-RAN Node to Source NG-RAN Node Transparent Container* IE within the HANDOVER REQUEST ACKNOWLEDGE message, containing the *DAPS Response Information* IE for each DRB requested to be configured with DAPS Handover.

If the *Extended Connected Time* IE is included in the HANDOVER REQUEST message, the NG-RAN node shall, if supported, use it as described in TS 23.501 [9].

If the target NG-RAN node receives the *UE Context Reference at Source* IE in the *Source NG-RAN Node to Target NG-RAN Node Transparent Container* IE within the HANDOVER REQUEST message, it may use it to identify an existing UE.

If the *Source Node ID* IE is included in the *Source NG-RAN Node to Target NG-RAN Node Transparent Container* IE within the HANDOVER REQUEST message, the target NG-RAN node shall, if supported, use it to decide whether direct forwarding path is available between the target NG-RAN node and this source RAN node. If the direct forwarding path is available, the target NG-RAN node shall include the *Direct Forwarding Path Availability* IE in the *Target NG-RAN Node to Source NG-RAN Node Transparent Container* IE within the HANDOVER REQUEST ACKNOWLEDGE message.

In case there are MBS sessions the UE has joined, for all the MBS sessions the UE has joined, the SMF shall, if supported, include the *MBS Session Setup Request List* IE within the *PDU Session Resource Setup Request Transfer* IE in the HANDOVER REQUEST message.

If the HANDOVER REQUEST message contains the *MBS Session Setup Request List* IE in a *PDU Session Resource Setup Request Transfer* IE the NG-RAN node shall, if supported, use it as specified in TS 23.247 [44] and TS 38.300 [8].

If the *MBS Active Session Information Source to Target List* IE is contained in the *Source NG-RAN Node to Target NG-RAN Node Transparent Container* IE within the HANDOVER REQUEST message, the target NG-RAN node shall, if supported, assume the indicated MBS sessions to be active and establish MBS session resources as specified in TS 23.247 [44] and TS 38.300 [8], if applicable. The target NG-RAN node shall, if supported, consider that the MBS sessions the UE has joined which are not included in the *MBS Active Session Information Source to Target List* IE are inactive.

If the *MBS Area Session ID* IE is included in the *MBS Active Session Information Source to Target List* IE in the *Source NG-RAN Node to Target NG-RAN Node Transparent Container* IE within the HANDOVER REQUEST message, the target NG-RAN shall use this information as indication from which MBS Area Session ID the UE is handed over.

If the *MBS Service Area* IE is included in the *MBS Active Session Information Source to Target List* IE in the *Source NG-RAN Node to Target NG-RAN Node Transparent Container* IE within the HANDOVER REQUEST message, the target NG-RAN shall use this information to setup respective MBS session resources, if applicable.

If the target NG-RAN node decides to allocate resource for data forwarding for an active MBS session, respective information is provided for that MBS session within the *Data Forwarding Response MRB List* IE in the *MBS Active Session Information Target to Source List* IE in the *Target NG-RAN Node to Source NG-RAN Node Transparent Container* IE.

If the *Time Synchronisation Assistance Information* IE is included in the HANDOVER REQUEST message, the NG-RAN node shall, if supported, store the information in the UE context and use it as defined in TS 23.501 [9].

If the *5G ProSe Authorized* IE is contained in the HANDOVER REQUEST message and it contains one or more IEs set to "authorized", the NG-RAN node shall, if supported, consider that the UE is authorized for the relevant service(s).

If the *5G ProSe UE PC5 Aggregate Maximum Bit Rate* IE is included in the HANDOVER REQUEST message, the NG-RAN node shall, if supported, use the received value for the concerned UE's sidelink communication in network scheduled mode for 5G ProSe services.

If the *5G ProSe PC5 QoS Parameters* IE is included in the HANDOVER REQUEST message, the NG-RAN node shall, if supported, use it as defined in TS 23.304 [47].

If for a given QoS flow the *Source Transport Layer Address* IE is included within the *Source NG-RAN Node to Target NG-RAN Node Transparent Container* IE of the HANDOVER REQUEST message, the target NG-RAN node shall, if supported, store this information and use it as part of its ACL functionality configuration actions for direct data forwarding, if such ACL functionality is deployed and if direct forwarding path is available between the target NG-RAN node and this source RAN node.

If for a given QoS flow the *Source Node Transport Layer Address* IE is included within the *Source NG-RAN Node to Target NG-RAN Node Transparent Container* IE of the HANDOVER REQUEST message, the target NG-RAN node shall, if supported, store this information and use it as part of its ACL functionality configuration actions for direct data

forwarding, if such ACL functionality is deployed and if direct forwarding path is available between the target NG-RAN node and this source RAN node.

If for a given E-RAB the *Source Transport Layer Address* IE is included within the *Source NG-RAN Node to Target NG-RAN Node Transparent Container* IE of the HANDOVER REQUEST message, the target NG-RAN node shall, if supported, store this information and use it as part of its ACL functionality configuration actions for direct data forwarding, if such ACL functionality is deployed and if direct forwarding path is available between the target NG-RAN node and this source RAN node.

If for a given E-RAB the *Source Node Transport Layer Address* IE is included within the *Source NG-RAN Node to Target NG-RAN Node Transparent Container* IE of the HANDOVER REQUEST message, the target NG-RAN node shall, if supported, store this information and use it as part of its ACL functionality configuration actions for direct data forwarding, if such ACL functionality is deployed and if direct forwarding path is available between the target NG-RAN node and this source RAN node.

If the HANDOVER REQUEST message contains within the *Source NG-RAN Node to Target NG-RAN Node Transparent Container* IE the *NGAP IE Support Information Request List* IE, the target NG-RAN node shall, if supported and the target NG-RAN node accepts the request for handover, for each included NGAP Protocol IE-Id provided within the *Target NG-RAN Node to Source NG-RAN Node Transparent Container* IE in the HANDOVER REQUEST ACKNOWLEDGE message

- set the *NGAP Protocol IE Support Information* IE to "supported" if the target NG-RAN node has information that the functionality associated with the indicated IE is supported
- set the *NGAP Protocol IE Support Information* IE to "not-supported" if the target NG-RAN node has information that the functionality associated with the indicated IE is not supported

on the interface instance via which the HANDOVER REQUEST message has been received, and

- set the *NGAP Protocol IE Presence Information* IE to "present" if the target NG-RAN node has received the respective NGAP Protocol IE-Id in the HANDOVER REQUEST message, and "not-present" otherwise.

If the HANDOVER REQUEST message contains within the *Source NG-RAN Node to Target NG-RAN Node Transparent Container* IE the *Time Based Handover Information* IE, the target NG-RAN node may use this information to allocate necessary resources for the incoming handover.

If the *Candidate Relay UE Information List* IE is included in the *Source NG-RAN Node to Target NG-RAN Node Transparent Container* IE within the HANDOVER REQUEST message, the target NG-RAN node shall, if supported, use it to configure the path switch to indirect path as specified in TS 38.300 [8].

If the *QMC Configuration Information* IE is included in the *Source NG-RAN Node to Target NG-RAN Node Transparent Container* IE within the HANDOVER REQUEST message, the target NG-RAN node shall, if supported, take it into account for QoE management handling, as described in TS 38.300 [8].

If the *Source SN to Target SN QMC Information* IE is included in the *Source NG-RAN Node to Target NG-RAN Node Transparent Container* IE within the HANDOVER REQUEST message, the target NG-RAN node shall, if supported, take it into account for QoE management handling, as described in TS 37.340 [32].

If the *Aerial UE Subscription Information* IE is included in the HANDOVER REQUEST message, the NG-RAN node shall, if supported, store this information in the UE context and use it as defined in TS 38.300 [8].

If the *PNI-NPN Area Scope of MDT* IE is included in the *MDT Configuration-NR* IE included in the HANDOVER REQUEST message, the NG-RAN node shall, if supported, use it to derive the MDT area scope for MDT measurement collection in PNI-NPN areas. Upon reception of the *PNI-NPN Area Scope of MDT* IE, the NG-RAN node shall consider that the area scope for MDT measurement collection in PNI-NPN areas is defined only by the areas included in the *PNI-NPN Area Scope of MDT* IE.

If the *Partially Allowed NSSAI* IE is contained in the HANDOVER REQUEST message, the NG-RAN node shall, if supported, deduce from it the partially allowed network slices for the UE, store and replace any previously received Partially Allowed NSSAI and use it as specified in TS 23.501 [9].

If the *AMF UE NGAP ID 2* IE is included in the HANDOVER REQUEST message, the target NG-RAN node shall, if supported, store this information in the UE context and use it for subsequent Xn handovers.

If the *Target RAN Node ID* IE is included in the HANDOVER REQUEST message, the target NG-RAN node shall, if supported, use it for routing the HANDOVER REQUEST message, as specified in TS 38.300 [8].

If the *Network Slice Area Scope of MDT* IE is included in the *MDT Configuration-NR* IE included in the HANDOVER REQUEST message, the NG-RAN node shall, if supported, use it to derive the MDT area scope for MDT measurement collection. Upon reception of the *Network Slice Area Scope of MDT* IE, the NG-RAN node shall consider that the area scope for MDT measurement collection is defined only by the *Network Slice Area Scope of MDT* IE and the *Area Scope of MDT* IE.

If the *MBS Support Indicator* IE is included in the *Handover Request Acknowledge Transfer* IE in the HANDOVER REQUEST ACKNOWLEDGE message, the SMF shall, if supported, handle this information as specified in TS 23.247 [44].

If the *ECN Marking or Congestion Information Reporting Status* IE is included in the *Handover Request Acknowledge Transfer* IE, the SMF shall, if supported, use it to deduce if ECN marking at NG-RAN or ECN marking at UPF or congestion information reporting is active or not active as described in TS 23.501 [9].

If the S-NSSAI dedicated to WAB-MT's backhaul PDU session(s) is included in the *PDU Session Resource Setup List* IE in the HANDOVER REQUEST message, the target NG-RAN node shall act as defined in TS 38.401 [2].

Interactions with RRC Inactive Transition Report procedure:

If the *RRC Inactive Transition Report Request* IE is included in the HANDOVER REQUEST message and set to "subsequent state transition report", the NG-RAN node shall, if supported, send the RRC INACTIVE TRANSITION REPORT message to the AMF to report the RRC state of the UE when the UE enters or leaves RRC_INACTIVE state.

8.4.2.3 Unsuccessful Operation



Figure 8.4.2.3-1: Handover resource allocation: unsuccessful operation

If the target NG-RAN node does not admit any of the PDU session resources, or a failure occurs during the Handover Preparation, it shall send the HANDOVER FAILURE message to the AMF with an appropriate cause value.

If the HANDOVER REQUEST message contains within the *Source NG-RAN Node to Target NG-RAN Node Transparent Container* IE the *NGAP IE Support Information Request List* IE, the target NG-RAN node shall, if supported and the target NG-RAN node does not accept the request for handover, for each included NGAP Protocol IE-Id provided within the *Target NG-RAN Node to Source NG-RAN Node Failure Transparent Container* IE in the HANDOVER FAILURE message

- set the *NGAP Protocol IE Support Information* IE to "supported" if the target NG-RAN node has information that the functionality associated with the indicated IE is supported
- set the *NGAP Protocol IE Support Information* IE to "not-supported" if the target NG-RAN node has information that the functionality associated with the indicated IE is not supported

on the interface instance via which the HANDOVER REQUEST message has been received, and

- set the *NGAP Protocol IE Presence Information* IE to "present" if the target NG-RAN node has received the respective NGAP Protocol IE-Id in the HANDOVER REQUEST message, and "not-present" otherwise.

8.4.2.4 Abnormal Conditions

If the supported algorithms for encryption defined in the *Encryption Algorithms* IE in the *UE Security Capabilities* IE, plus the mandated support of EEA0 and NEA0 in all UEs (TS 33.501 [13]), do not match any allowed algorithms defined in the configured list of allowed encryption algorithms in the NG-RAN node (TS 33.501 [13]), the target NG-RAN node shall reject the procedure using the HANDOVER FAILURE message.

If the supported algorithms for integrity defined in the *Integrity Protection Algorithms* IE in the *UE Security Capabilities* IE, plus the mandated support of the EIA0 and NIA0 algorithm in all UEs (TS 33.501 [13]), do not match any allowed algorithms defined in the configured list of allowed integrity protection algorithms in the NG-RAN node (TS 33.501 [13]), the target NG-RAN node shall reject the procedure using the HANDOVER FAILURE message.

If the target NG-RAN node receives a HANDOVER REQUEST message which does not contain the *Mobility Restriction List* IE, and the serving PLMN cannot be determined otherwise by the NG-RAN node, the target NG-RAN node shall reject the procedure using the HANDOVER FAILURE message.

If the target NG-RAN node receives a HANDOVER REQUEST message containing the *Mobility Restriction List* IE, and the serving PLMN indicated is not supported by the target cell, the target NG-RAN node shall reject the procedure using the HANDOVER FAILURE message.

If the target NG-RAN node receives a HANDOVER REQUEST message containing an *Allowed PNI-NPN List* IE in the *Mobility Restriction List* IE which does not allow access to the cell indicated in the *Target Cell ID* IE, the target NG-RAN node shall reject the procedure using the HANDOVER FAILURE message with an appropriate cause value and may include the *Cell CAG Information* IE corresponding to this cell and the selected PLMN.

If the target NG-RAN node receives a HANDOVER REQUEST message containing a *Serving PLMN* IE and *Serving NID* IE in the *Mobility Restriction List* IE which does not allow access to the cell indicated in the *Target Cell ID* IE, the target NG-RAN node shall reject the procedure using the HANDOVER FAILURE message with an appropriate cause value.

If the *PNI-NPN Area Scope of MDT* IE is included in the *MDT Configuration-NR* IE in the HANDOVER REQUEST message, and the *Area Scope of MDT* IE is set to "PNI-NPN Based MDT", the NG-RAN node shall, if supported, use the *Area Scope of MDT* IE to derive the MDT area scope for MDT measurement collection in PNI-NPN areas, and ignore the *PNI-NPN Area Scope of MDT* IE.

If the *Partially Allowed NSSAI* IE is received in the HANDOVER REQUEST message and the total number of S-NSSAIs included in the Allowed NSSAI and Partially Allowed NSSAI exceeds eight, the NG-RAN node shall consider the procedure as failed.

If any of the S-NSSAI which is present in the *Partially Allowed NSSAI* IE is also present in the *Allowed NSSAI* IE, the NG-RAN node shall consider the procedure as failed.

If the *Network Slice Area Scope of MDT* IE is included in the *MDT Configuration-NR* IE in the HANDOVER REQUEST message, and the *MDT Activation* IE is set to "Logged MDT only", the NG-RAN node shall ignore the *Network Slice Area Scope of MDT* IE.

8.4.3 Handover Notification

8.4.3.1 General

The purpose of the Handover Notification procedure is to indicate to the AMF that the UE has arrived to the target cell and the NG-based handover has been successfully completed. The procedure uses UE-associated signalling.

8.4.3.2 Successful Operation



Figure 8.4.3.2-1: Handover notification

The target NG-RAN node shall send the HANDOVER NOTIFY message to the AMF when the UE has been identified in the target cell and the NG-based handover has been successfully completed.

Interactions with Handover Success procedure:

If the *Notify Source NG-RAN Node* IE is included in the HANDOVER NOTIFY message, the AMF shall, if supported, notify the source NG-RAN node that the UE has successfully accessed the target NG-RAN node by sending the HANDOVER SUCCESS message.

8.4.3.3 Abnormal Conditions

Void.

8.4.4 Path Switch Request

8.4.4.1 General

The purpose of the Path Switch Request procedure is to establish a UE associated signalling connection to the 5GC and, if applicable, to request the switch of the downlink termination point of the NG-U transport bearer towards a new termination point. The procedure uses UE-associated signalling.

8.4.4.2 Successful Operation

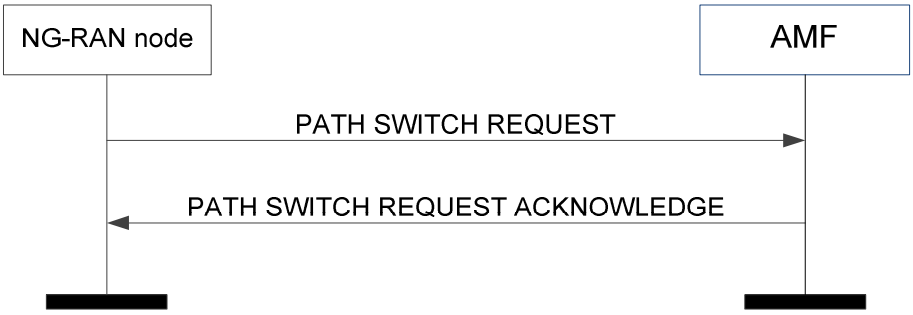


Figure 8.4.4.2-1: Path switch request: successful operation

The NG-RAN node initiates the procedure by sending the PATH SWITCH REQUEST message to the AMF. Upon reception of the PATH SWITCH REQUEST message the AMF shall, for each PDU session indicated in the *PDU Session ID* IE, transparently transfer the *Path Switch Request Transfer* IE to the SMF associated with the concerned PDU session.

Upon reception of the PATH SWITCH REQUEST message the AMF shall deactivate MT communication handling if already activated, as specified in TS 23.502 [10].

If the *RRC Resume Cause* IE is included in the PATH SWITCH REQUEST message, the AMF shall, if supported, use it as described in TS 23.502 [10] for User Plane CIoT 5GS Optimisation when the NG-RAN node is an ng-eNB.

If the *RedCap Indication* IE or the *eRedCap Indication* IE is included in the PATH SWITCH REQUEST message, the AMF shall, if supported, consider the UE respectively as a RedCap UE or an eRedCap UE that was previously served by a E-UTRA cell, and use the IE according to TS 23.501 [9].

After all necessary updates including the UP path switch have been successfully completed in the 5GC for at least one of the PDU session resources included in the PATH SWITCH REQUEST, the AMF shall send the PATH SWITCH REQUEST ACKNOWLEDGE message to the NG-RAN node and the procedure ends.

The list of accepted QoS flows shall be included in the PATH SWITCH REQUEST message within the *Path Switch Request Transfer* IE. The SMF shall handle this information as specified in TS 23.502 [10].

If the GUAMI of the AMF currently serving the UE is available at the gNB (see TS 38.300 [8]), the NG-RAN node shall, if supported, include the *Source AMF GUAMI* IE within the PATH SWITCH REQUEST message.

For an IAB-MT or a mobile IAB-MT for which the *PDU Session ID* IE contained in the PATH SWITCH REQUEST message indicates no PDU session identity assigned as defined in TS 24.007 [58], the AMF shall, if supported, consider that the IAB-MT or the mobile IAB-MT, respectively, has no PDU session, and behave as specified in TS 23.501 [9]. Subsequently, the NG-RAN node shall, if supported, ignore the *PDU Session Resource Switched List* IE in the PATH SWITCH REQUEST ACKNOWLEDGE message.

For each PDU session for which the *Additional DL QoS Flow per TNL Information* IE is included in the *Path Switch Request Transfer* IE of the PATH SWITCH REQUEST message, the SMF may use each included UP transport layer information as the downlink termination point for the included associated QoS flows for this PDU session split in different tunnels.

The list of PDU sessions which failed to be setup, if any, shall be included in the PATH SWITCH REQUEST message within the *Path Switch Request Setup Failed Transfer* IE. The AMF shall handle this information as specified in TS 23.502 [10].

For each PDU session for which the *User Plane Security Information* IE is included in the *Path Switch Request Transfer* IE of the PATH SWITCH REQUEST message, the SMF shall behave as specified in TS 33.501 [13] and may send back the *Security Indication* IE within the *Path Switch Request Acknowledge Transfer* IE of the PATH SWITCH REQUEST ACKNOWLEDGE message.

For each PDU session for which the *DL NG-U TNL Information Reused* IE set to "true" is included in the *Path Switch Request Transfer* IE of the PATH SWITCH REQUEST message, the SMF shall, if supported, consider that the DL TNL information contained in the *DL NG-U UP TNL Information* IE has been reused.

For each PDU session for which the *Additional Redundant DL QoS Flow per TNL Information* IE is included in the *Path Switch Request Transfer* IE of the PATH SWITCH REQUEST message, the SMF may use each included UP transport layer information as the downlink termination point for the included associated QoS flows for this PDU session split in different tunnels for the redundant transmission.

For each PDU session for which the *Redundant DL NG-U TNL Information Reused* IE is included in the *Path Switch Request Transfer* IE of the PATH SWITCH REQUEST message, the SMF shall, if supported, consider the included DL transport layer address as the DL transport layer address for the redundant transmission as specified in TS 23.501 [9].

For each PDU session for which the *Global RAN Node ID of Secondary NG-RAN Node* IE is included in the *Path Switch Request Transfer* IE of the PATH SWITCH REQUEST message, the SMF shall, if supported, handle this information as specified in TS 23.501 [9].

For each PDU session included in the PATH SWITCH REQUEST message, if the *Current QoS Parameters Set Index* IE is included in the *Path Switch Request Transfer* IE the SMF shall consider it as the currently fulfilled QoS parameters set among the alternative QoS parameters for the involved QoS flow.

The NG-RAN node shall, if supported, report in the PATH SWITCH REQUEST message the *PDU Set based Handling Indicator* IE in the *Path Switch Request Transfer* IE. If the *PDU Set based Handling Indicator* IE is included in the *Path Switch Request Transfer* IE in the PATH SWITCH REQUEST message, the SMF shall, if supported, handle this information as specified in TS 23.501 [9].

If the *MBS Support Indicator* IE is included in the *Path Switch Request Transfer* IE in the PATH SWITCH REQUEST message, the SMF shall, if supported, handle this information as specified in TS 23.247 [44].

The NG-RAN node shall, if supported, report in the PATH SWITCH REQUEST message the *ECN Marking or Congestion Information Reporting Status* IE in the *Path Switch Request Transfer* IE. If the *ECN Marking or Congestion Information Reporting Status* IE is included in the *Path Switch Request Transfer* IE in the PATH SWITCH REQUEST message, the SMF shall, if supported, use it to deduce if ECN marking at NG-RAN or ECN marking at UPF or congestion information reporting is active or not active as described in TS 23.501 [9].

If the *Security Indication* IE is included within the *Path Switch Request Acknowledge Transfer* IE of the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall behave as specified in TS 33.501 [13].

If the *UL NG-U UP TNL Information* IE is included within the *Path Switch Request Acknowledge Transfer* IE of the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall store this information and use it as the uplink termination point for the user plane data for this PDU session.

If the *Additional NG-U UP TNL Information* IE is included within the *Path Switch Request Acknowledge Transfer* IE of the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall store this information and use the included *UL NG-U UP TNL Information* IE(s) as the uplink termination point(s) of the user plane data for this PDU session split in different tunnel.

If the *Redundant UL NG-U UP TNL Information* IE is included within the *Path Switch Request Acknowledge Transfer* IE of the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall, if supported, store this information and use it as the uplink termination point for the user plane data for the redundant transmission for this PDU session as specified in TS 23.501 [9].

If the *Additional Redundant NG-U UP TNL Information* IE is included within the *Path Switch Request Acknowledge Transfer* IE of the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall, if supported, store this information and use the included *UL NG-U UP TNL Information* IE(s) as the uplink termination point(s) of the user plane data for this PDU session split in different tunnel.

If the *CN Packet Delay Budget Downlink* IE is included within the *Path Switch Request Acknowledge Transfer* IE of the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall, if supported, replace the previously provided CN Packet Delay Budget Downlink if any and use it as specified in TS 23.502 [10].

If the *CN Packet Delay Budget Uplink* IE is included within the *Path Switch Request Acknowledge Transfer* IE of the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall, if supported, replace the previously provided CN Packet Delay Budget Uplink if any and use it as specified in TS 23.502 [10].

If the *Burst Arrival Time Downlink* IE is included within the *Path Switch Request Acknowledge Transfer* IE of the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall, if supported, replace the previously provided value if any and use it as specified in TS 23.502 [10].

If the *Core Network Assistance Information for RRC INACTIVE* IE is included in the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall, if supported, store this information in the UE context and use it for the RRC_INACTIVE state decision and RNA configuration for the UE, and RAN paging, if any, for a UE in RRC_INACTIVE state, as specified in TS 38.300 [8]. In particular,

- if the *UE Specific DRX* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, use it for RAN paging.

- if the *MICO Mode Indication* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, consider that the UE is configured with MICO mode by the AMF as specified in TS 23.501 [9].

- if the *Expected UE Behaviour* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, use it to assist the UE RRC state transition decision.

- if the *E-UTRA Paging eDRX Information* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, take it into account to configure the RAN Paging when the UE is in RRC_INACTIVE as specified in TS 36.300 [17].

- if the *Extended UE Identity Index Value* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, use it for RAN Paging.

- if the *UE Radio Capability for Paging* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, use it for subsequent RAN paging.

- if the *MICO All PLMN* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE the NG-RAN node shall, if supported, consider that the registration area for the UE is the full PLMN and ignore the *TAI List for RRC Inactive* IE.

- if the *NR Paging eDRX Information* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, take it into account to configure the RAN Paging when the UE is in RRC_INACTIVE as described in TS 38.300 [8].

- if the *Paging Cause Indication for Voice Service* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, store and use it as specified in TS 38.300 [8]. If the *PEIPS Assistance Information* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, store it and use it for paging subgrouping the UE in RRC_INACTIVE state, as specified in TS 38.300 [8].

- if the *PEIPS Assistance Information* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, store it and use it for paging subgrouping the UE in RRC_INACTIVE state, as specified in TS 38.300 [8].

- if the *Hashed UE Identity Index Value* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, use it to determine the start point of PTW.

- if the *CN MT Communication Handling* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, store it and may subsequently request, based on implementation, the CN for MT communication handling as described in TS 23.502 [10].

- if the *LP-WUSPS Assistance Information* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, store it and use it for LP-WUS paging subgrouping the UE in RRC_INACTIVE state, as specified in TS 38.300 [8].

- if the *Further Extended UE Identity Index Value* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, store it and use it as specified in TS 38.304 [12].

- If the *LP-WUS Disable Indication* IE is included in the *Core Network Assistance Information for RRC INACTIVE* IE, the NG-RAN node shall, if supported, store it and use it to disable LP-WUS as described in TS 38.300 [8].

If the *CN Assisted RAN Parameters Tuning* IE is included in the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node may use it as described in TS 23.501 [9].

If the *RRC Inactive Transition Report Request* IE is included in the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall, if supported, store this information in the UE context.

If the *New Security Context Indicator* IE is included in the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall use the information as specified in TS 33.501 [13].

Upon reception of the PATH SWITCH REQUEST ACKNOWLEDGE message the NG-RAN node shall store the received *Security Context* IE in the UE context and the NG-RAN node shall use it as specified in TS 33.501 [13].

If the *UE Security Capabilities* IE is included in the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall handle it accordingly (TS 33.501 [13]).

If the *Redirection for Voice EPS Fallback* IE is included in the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall, if supported, store it and use it in a subsequent decision of EPS fallback for voice as specified in TS 23.502 [10].

If the *PDU Session Resource Released List* IE is included in the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall release the corresponding QoS flows and regard the PDU session(s) indicated in the *PDU Session Resource Released List* IE as being released. The appropriate cause value for each PDU session released is included in the *Path Switch Request Unsuccessful Transfer* IE contained in the PATH SWITCH REQUEST ACKNOWLEDGE message.

If the *SRVCC Operation Possible* IE is included in the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall, if supported, store the content of the received *SRVCC Operation Possible* IE in the UE context and use it as defined in TS 23.216 [31].

If the *Enhanced Coverage Restriction* IE is included in the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall, if supported, store this information in the UE context and use it as defined in TS 23.501 [9].

If the *Extended Connected Time* IE is included in the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall, if supported, use it as described in TS 23.501 [9].

If the *UE Differentiation Information* IE is included in the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall, if supported, store this information in the UE context for further use according to TS 23.501 [9].

If the *NR V2X Services Authorized* IE is contained in the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall, if supported, update its NR V2X services authorization information for the UE accordingly. If the *NR V2X Services Authorized* IE includes one or more IEs set to "not authorized", the NG-RAN node shall, if supported, initiate actions to ensure that the UE is no longer accessing the relevant service(s).

If the *LTE V2X Services Authorized* IE is contained in the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall, if supported, update its LTE V2X services authorization information for the UE accordingly. If the *LTE V2X Services Authorized* IE includes one or more IEs set to "not authorized", the NG-RAN node shall, if supported, initiate actions to ensure that the UE is no longer accessing the relevant service(s).

If the *NR A2X Services Authorized* IE is contained in the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall, if supported, update its NR A2X services authorization information for the UE accordingly. If the *NR A2X Services Authorized* IE includes one or more IEs set to "not authorized", the NG-RAN node shall, if supported, initiate actions to ensure that the UE is no longer accessing the relevant service(s).

If the *LTE A2X Services Authorized* IE is contained in the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall, if supported, update its LTE A2X services authorization information for the UE accordingly. If the *LTE A2X Services Authorized* IE includes one or more IEs set to "not authorized", the NG-RAN node shall, if supported, initiate actions to ensure that the UE is no longer accessing the relevant service(s).

If the *NR UE Sidelink Aggregate Maximum Bit Rate* IE is included in the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall, if supported:

- replace the previously provided UE Sidelink Aggregate Maximum Bit Rate, if available in the UE context, with the received value;
- use the received value for the concerned UE's sidelink communication in network scheduled mode for NR V2X services.

If the *LTE UE Sidelink Aggregate Maximum Bit Rate* IE is included in the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall, if supported:

- replace the previously provided UE Sidelink Aggregate Maximum Bit Rate, if available in the UE context, with the received value;
- use the received value for the concerned UE's sidelink communication in network scheduled mode for LTE V2X services.

If the *NR A2X UE PC5 Aggregate Maximum Bit Rate* IE is included in the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall, if supported:

- replace the previously provided NR A2X UE PC5 Aggregate Maximum Bit Rate, if available in the UE context, with the received value;
- use the received value for the concerned UE's sidelink communication in network scheduled mode for NR A2X services.

If the *LTE A2X UE PC5 Aggregate Maximum Bit Rate* IE is included in the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall, if supported:

- replace the previously provided LTE A2X UE PC5 Aggregate Maximum Bit Rate, if available in the UE context, with the received value;
- use the received value for the concerned UE's sidelink communication in network scheduled mode for LTE A2X services.

If the *PC5 QoS Parameters* IE is included in the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall, if supported, use it as defined in TS 23.287 [33].

If the *A2X PC5 QoS Parameters* IE is included in the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall, if supported, use it as defined in TS 23.256 [54].

If the *CE-mode-B Restricted* IE is included in the PATH SWITCH REQUEST ACKNOWLEDGE message and the *Enhanced Coverage Restriction* IE is not set to "restricted" and the Enhanced Coverage Restriction information stored in the UE context is not set to "restricted", the NG-RAN node shall, if supported, store this information in the UE context and use it as defined in TS 23.501 [9].

If the *UE User Plane CIoT Support Indicator* IE is included in the PATH SWITCH REQUEST ACKNOWLEDGE message the NG-RAN node shall, if supported, store this information in the UE context and consider that User Plane CIoT 5GS Optimisation as specified in TS 23.501 [9] is supported for the UE.

If the PATH SWITCH REQUEST ACKNOWLEDGE message contains the *UE Radio Capability ID* IE, the NG-RAN node shall, if supported, use it as specified in TS 23.501 [9] and TS 23.502 [10].

If the PATH SWITCH REQUEST ACKNOWLEDGE message contains the *Alternative QoS Parameters Set List* IE, the NG-RAN node shall, if supported, use it as specified in TS 23.501 [9].

For each PDU session, if the *PDU Session Expected UE Activity Behaviour* IE is included in the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall, if supported, handle this information as specified in TS 23.501 [9].

If the PATH SWITCH REQUEST ACKNOWLEDGE message contains the *Management Based MDT PLMN List* IE, the NG-RAN node shall store it in the UE context, and if supported, use it to allow subsequent selection of the UE for management based MDT defined in TS 32.422 [11].

If the PATH SWITCH REQUEST ACKNOWLEDGE message contains the *Management Based MDT PLMN Modification List* IE, the NG-RAN node shall, if supported, use it to overwrite any previously stored management based MDT PLMN list information in the UE context and use the received information to allow subsequent selection of the UE for management based MDT defined in TS 32.422 [11].

If the *Time Synchronisation Assistance Information* IE is included in the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall, if supported, store the information in the UE context and use it as defined in TS 23.501 [9].

If the *5G ProSe Authorized* IE is contained in the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall, if supported, update its ProSe authorization information for the UE accordingly. If the *5G ProSe Authorized* IE includes one and more IEs set to "not authorized", the NG-RAN node shall, if supported, initiate actions to ensure that the UE is no longer accessing the relevant 5G ProSe service(s).

If the *5G ProSe UE PC5 Aggregate Maximum Bit Rate* IE is included in the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall, if supported:

- replace the previously provided 5G ProSe UE PC5 Aggregate Maximum Bit Rate, if available in the UE context, with the received value;
- use the received value for the concerned UE's sidelink communication in network scheduled mode for 5G ProSe services.

If the *5G ProSe PC5 QoS Parameters* IE is included in the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall, if supported, use it as defined in TS 23.304 [47].

If the *Aerial UE Subscription Information* IE is included in the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall, if supported, store the information or overwrite any previously stored information in the UE context and use it as defined in TS 38.300 [8].

If the *IAB Authorized* IE is contained in the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall, if supported, store the received IAB Authorization information in the UE context and use it as specified in TS 38.401 [2].

If the *Mobile IAB Authorized* IE is included in the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall, if supported, store the received mobile IAB Authorization status in the UE context of the mobile IAB-

MT. If the *Mobile IAB Authorized* IE for a mobile IAB-MT is set to "not authorized", the NG-RAN node shall, if supported, ensure that the mobile IAB-node will not serve any UE(s).

If the *Partially Allowed NSSAI* IE is contained in the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall, if supported, deduce from it the partially allowed network slices for the UE, store and replace any previously received Partially Allowed NSSAI and use it as specified in TS 23.501 [9].

If the *Ranging and Sidelink Positioning Service Information* IE is contained in the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall, if supported, update the Ranging and Sidelink Positioning service information for the UE accordingly. If the *Ranging and Sidelink Positioning Authorized* IE within the *Ranging and Sidelink Positioning Service Information* IE is set to "not authorized", the NG-RAN node shall, if supported, initiate actions to ensure that the UE is no longer accessing the Ranging and Sidelink Positioning service.

If the *AMF UE NGAP ID 2* IE is contained in the PATH SWITCH REQUEST ACKNOWLEDGE message, the NG-RAN node shall, if supported, store this information in the UE context and use it for subsequent Xn handovers.

Interactions with RRC Inactive Transition Report procedure:

If the *RRC Inactive Transition Report Request* IE is included in the PATH SWITCH REQUEST ACKNOWLEDGE message and set to "single RRC connected state report" and the UE is in RRC_CONNECTED state, the NG-RAN node shall, if supported, send one RRC INACTIVE TRANSITION REPORT message to the AMF to report the RRC state of the UE.

If the *RRC Inactive Transition Report Request* IE is included in the PATH SWITCH REQUEST ACKNOWLEDGE message and set to "single RRC connected state report" and the UE is in RRC_INACTIVE state, the NG-RAN node shall, if supported, send to the AMF one RRC INACTIVE TRANSITION REPORT message plus one subsequent RRC INACTIVE TRANSITION REPORT message when the RRC state transitions to RRC_CONNECTED state.

If the *RRC Inactive Transition Report Request* IE is included in the PATH SWITCH REQUEST ACKNOWLEDGE message and set to "subsequent state transition report", the NG-RAN node shall, if supported, send one RRC INACTIVE TRANSITION REPORT message to the AMF to report the RRC state of the UE and subsequent RRC INACTIVE TRANSITION REPORT messages to report the RRC state of the UE when the UE enters or leaves RRC_INACTIVE state.

Interactions with PDU Session Resource Notify procedure:

If the QoS related parameters (e.g. the *CN Packet Delay Budget Downlink* IE or the *CN Packet Delay Budget Uplink* IE) are included in the *Path Switch Request Acknowledge Transfer* IE of the PATH SWITCH REQUEST ACKNOWLEDGE message, but cannot be succesfully accepted by the NG-RAN node, the NG-RAN node should continue to use the old values received from the source NG-RAN node, if any. The NG-RAN node shall, if supported, send the PDU SESSION RESOURCE NOTIFY message to notify the AMF.

8.4.4.3 Unsuccessful Operation

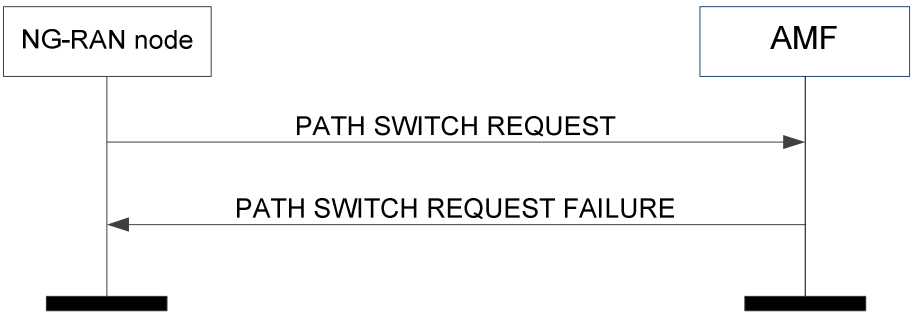


Figure 8.4.4.3-1: Path switch request: unsuccessful operation

If the 5GC fails to switch the downlink termination point of the NG-U transport bearer towards a new termination point for all PDU session resources, the AMF shall send the PATH SWITCH REQUEST FAILURE message to the NG-RAN node.

The NG-RAN node shall release the corresponding QoS flows and regard the PDU session(s) indicated in the *PDU Session Resource Released List* IE included in the PATH SWITCH REQUEST FAILURE message as being released.

The appropriate cause value for each PDU session released is included in the *Path Switch Request Unsuccessful Transfer* IE contained in the PATH SWITCH REQUEST FAILURE message.

8.4.4.4 Abnormal Conditions

If the AMF receives a PATH SWITCH REQUEST message containing several *PDU Session ID* IEs (in the *PDU Session Resource to be Switched in Downlink List* IE) set to the same value, the AMF shall send the PATH SWITCH REQUEST FAILURE message to the NG-RAN node.

NOTE: As an exception, the AMF generates the *Path Switch Request Unsuccessful Transfer* IE.

If the *Partially Allowed NSSAI* IE is received in the PATH SWITCH REQUEST ACKNOWLEDGE message and the total number of S-NSSAIs included in the Allowed NSSAI and Partially Allowed NSSAI exceeds eight, the NG-RAN node shall consider the procedure as failed.

If any of the S-NSSAI which is present in the *Partially Allowed NSSAI* IE is also present in the *Allowed NSSAI* IE, the NG-RAN node shall consider the procedure as failed.

8.4.5 Handover Cancellation

8.4.5.1 General

The purpose of the Handover Cancellation procedure is to enable a source NG-RAN node to cancel an ongoing handover preparation or an already prepared handover. The procedure uses UE-associated signalling.

8.4.5.2 Successful Operation

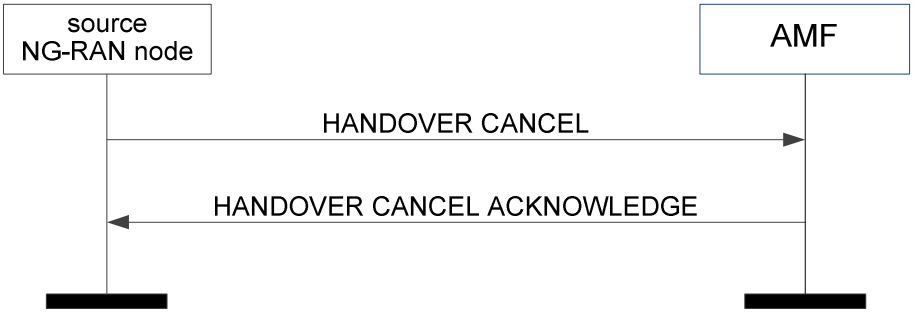


Figure 8.4.5.2-1: Handover cancel: successful operation

The source NG-RAN node initiates the procedure by sending a HANDOVER CANCEL message to the AMF.

8.4.5.3 Unsuccessful Operation

Not applicable.

8.4.5.4 Abnormal Conditions

If the source NG-RAN node becomes aware of the fact that an expected HANDOVER CANCEL ACKNOWLEDGE message is missing, the source NG-RAN node shall consider the Handover Cancellation procedure as successfully terminated.

8.4.6 Uplink RAN Status Transfer

8.4.6.1 General

The purpose of the Uplink RAN Status Transfer procedure is to enable lossless NG-based handover. The procedure uses UE-associated signalling.

8.4.6.2 Successful Operation

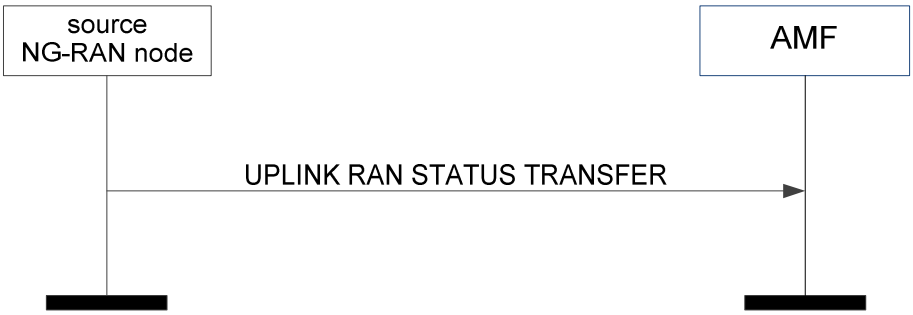


Figure 8.4.6.2-1: Uplink RAN status transfer

The source NG-RAN node initiates the procedure by stopping the assigning of PDCP-SNs to downlink SDUs and sending the UPLINK RAN STATUS TRANSFER message to the AMF at the point in time when it considers the transmitter/receiver status to be frozen.

For each DRB for which PDCP-SN and HFN status preservation applies, the source NG-RAN node shall include the *DRB ID* IE, the *UL COUNT Value* IE and the *DL COUNT Value* IE within the *DRBs Subject to Status Transfer List* IE in the *RAN Status Transfer Transparent Container* IE of the UPLINK RAN STATUS TRANSFER message.

The source NG-RAN node may also include in the UPLINK RAN STATUS TRANSFER message the missing and the received uplink SDUs in the *Receive Status of UL PDCP SDUs* IE for each DRB for which the source NG-RAN node has accepted the request from the target NG-RAN node for uplink forwarding.

8.4.6.3 Abnormal Conditions

Void.

8.4.7 Downlink RAN Status Transfer

8.4.7.1 General

The purpose of the Downlink RAN Status Transfer procedure is to enable lossless NG-based handover. The procedure uses UE-associated signalling.

8.4.7.2 Successful Operation



Figure 8.4.7.2-1: Downlink RAN status transfer

The AMF initiates the procedure by sending the DOWNLINK RAN STATUS TRANSFER message to the target NG-RAN node. The target NG-RAN node using Full Configuration for this handover as per TS 38.300 [8] shall ignore the information received in this message.

For each DRB in the *DRBs Subject to Status Transfer List* IE within the *RAN Status Transfer Transparent Container* IE, the target NG-RAN node shall not deliver any uplink packet which has a PDCP-SN lower than the value of the *UL Count Value* IE.

For each DRB in the *DRBs Subject to Status Transfer List* IE within the *RAN Status Transfer Transparent Container* IE, the target NG-RAN node shall use the value of the *DL COUNT Value* IE for the first downlink packet for which there is no PDCP-SN yet assigned.

If the *Receive Status of UL PDCP SDUs* IE is included for at least one DRB in the *RAN Status Transfer Transparent Container* IE of the DOWNLINK RAN STATUS TRANSFER message, the target NG-RAN node may use it in a Status Report message sent to the UE over the radio interface.

8.4.7.3 Abnormal Conditions

If the target NG-RAN node receives this message for a UE for which no prepared handover exists at the target NG-RAN node, the target NG-RAN node shall ignore the message.

8.4.8 Handover Success

8.4.8.1 General

The Handover Success procedure is used during a DAPS Handover, to inform the source NG-RAN node that the UE has successfully accessed the target NG-RAN node. The procedure uses UE-associated signalling.

8.4.8.2 Successful Operation



Figure 8.4.8.2-1: Handover Success

The AMF initiates the procedure by sending the HANDOVER SUCCESS message to the source NG-RAN node.

8.4.8.3 Abnormal Conditions

If the HANDOVER SUCCESS message refers to a context that does not exist, the source NG-RAN node shall ignore the message.

8.4.9 Uplink RAN Early Status Transfer

8.4.9.1 General

The purpose of the Uplink RAN Early Status Transfer procedure is to transfer the COUNT of the first downlink SDU that the source NG-RAN node forwards to the target NG-RAN node, from the source NG-RAN node to the target NG-RAN node via the AMF during NG DAPS Handover, or the COUNT for discarding of already forwarded downlink SDUs for respective DRB(s) during NG-based handover with time-based trigger condition. The procedure uses UE-associated signalling.

8.4.9.2 Successful Operation



Figure 8.4.9.2-1: Uplink RAN Early Status Transfer

The source NG-RAN node initiates the procedure by sending the UPLINK RAN EARLY STATUS TRANSFER message to the AMF when it considers at least a DRB to be simultaneously served by the source and the target NG-RAN nodes during NG DAPS Handover or sending the UPLINK RAN EARLY STATUS TRANSFER message to the AMF after it initiated a handover preparation with time-based trigger condition.

For each DRB for which DAPS Handover applies, the source NG-RAN node shall include the *DRB ID* IE and the *FIRST DL COUNT Value* IE within the *DRBs Subject To Early Status Transfer Item* IE in the *Early Status Transfer Transparent Container* IE of the UPLINK RAN EARLY STATUS TRANSFER message.

8.4.9.3 Abnormal Conditions

Void.

8.4.10 Downlink RAN Early Status Transfer

8.4.10.1 General

The purpose of the Downlink RAN Early Status Transfer procedure is to transfer the COUNT of the first downlink SDU that the source NG-RAN node forwards to the target NG-RAN node, from the source NG-RAN node to the target NG-RAN node via the AMF during NG DAPS Handover, or the COUNT for discarding of already forwarded downlink SDUs for respective DRB during NG-based handover with time-based trigger condition. The procedure uses UE-associated signalling.

8.4.10.2 Successful Operation

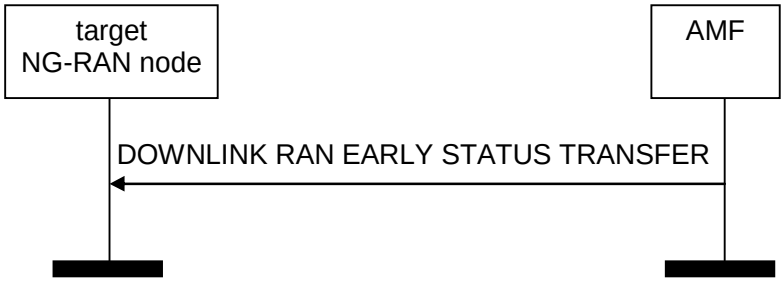


Figure 8.4.10.2-1: Downlink RAN Early Status Transfer

The AMF initiates the procedure by sending the DOWNLINK RAN EARLY STATUS TRANSFER message to the target NG-RAN node.

For each DRB for which the *FIRST DL COUNT Value* IE is received in the DOWNLINK RAN EARLY STATUS TRANSFER message, the target NG-RAN node shall use it as the COUNT of the first downlink SDU that the source NG-RAN node forwards to the target NG-RAN node.

For each DRB for which the *DISCARD DL COUNT Value* IE is received in the DOWNLINK RAN EARLY STATUS TRANSFER message, the target NG-RAN node does not transmit forwarded downlink SDUs to the UE whose COUNT is less than the provided *DISCARD DL COUNT Value* IE and discards them if transmission has not been attempted.

8.4.10.3 Abnormal Conditions

If the target NG-RAN node receives this message for a UE for which no prepared handover exists at the target NG-RAN node, the target NG-RAN node shall ignore the message.

8.5 Paging Procedures

8.5.1 Paging

8.5.1.1 General

The purpose of the Paging procedure is to enable the AMF to page a UE in the specific NG-RAN node.

8.5.1.2 Successful Operation

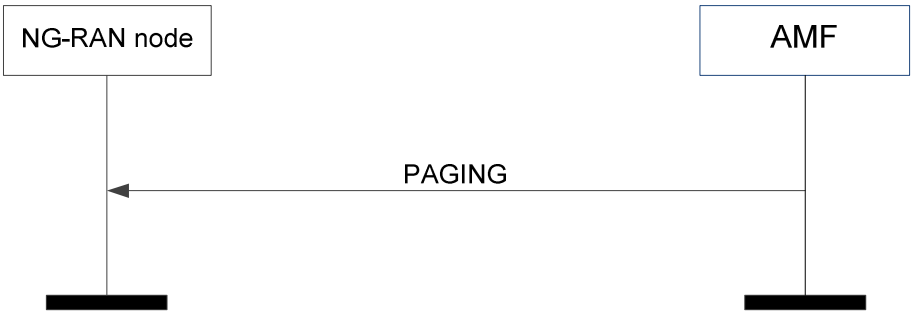


Figure 8.5.1.2-1: Paging

The AMF initiates the Paging procedure by sending the PAGING message to the NG-RAN node.

At the reception of the PAGING message, the NG-RAN node shall perform paging of the UE in cells which belong to tracking areas as indicated in the *TAI List for Paging* IE.

If the *Paging DRX* IE is included in the PAGING message, the NG-RAN node shall use it according to TS 38.304 [12] and TS 36.304 [29].

For each cell that belongs to any of the tracking areas indicated in the *TAI List for Paging* IE, the NG-RAN node shall generate one page on the radio interface.

If the *Paging Priority* IE is included in the PAGING message, the NG-RAN node may use it according to TS 23.501 [9].

If the *UE Radio Capability for Paging* IE is included in the PAGING message, the NG-RAN node may use it to apply specific paging schemes.

If the *Assistance Data for Recommended Cells* IE is included in the *Assistance Data for Paging* IE it may be used, together with the *Paging Attempt Information* IE if also present, according to TS 38.300 [8].

If the *Next Paging Area Scope* IE is included in the *Paging Attempt Information* IE it may be used for paging the UE according to TS 38.300 [8].

If the *Paging Origin* IE is included in the PAGING message, the NG-RAN node shall transfer it to the UE according to TS 38.331 [18] and TS 36.331 [21].

If the *NB-IoT Paging eDRX Information* IE is included in the PAGING message, the NG-RAN node shall, if supported, use it according to TS 36.304 [29]. If the *NB-IoT Paging Time Window* IE is included in the *NB-IoT Paging eDRX Information* IE, the NG-RAN node shall take this information into account to determine the UE's paging occasion according to TS 36.304 [29]. The NG-RAN node should take into account the reception time of the PAGING message on the NG interface to determine when to page the UE.

If the *NB-IoT Paging DRX* IE is included in the PAGING message, the NG-RAN node shall use it according to TS 36.304 [29].

If the *Enhanced Coverage Restriction* IE is included in the PAGING message, the NG-RAN node shall, if supported, use it as defined in TS 23.501 [9].

If the *Paging Assistance Data for CE Capable UE* IE is included in the *Assistance Data for Paging* IE in the PAGING message, it may be used for paging the indicated CE capable UE, according to TS 36.300 [17].

If the *WUS Assistance Information* IE is included in the PAGING message, the NG-RAN node shall, if supported, use it to determine the WUS group for the UE, as specified in TS 36.304 [29].

If the *E-UTRA Paging eDRX Information* IE is included in the PAGING message, the NG-RAN node shall, if supported, use it according to TS 36.304 [29]. If the *E-UTRA Paging Time Window* IE is included in the *E-UTRA Paging eDRX Information* IE, the NG-RAN node shall take this information into account to determine the UE's paging occasion according to TS 36.304 [29]. The NG-RAN node should take into account the reception time of the PAGING message on the NGAP interface to determine when to page the UE.

If the *CE-mode-B Restricted* IE is included in the PAGING message and the *Enhanced Coverage Restriction* IE is not set to "restricted", the NG-RAN node shall, if supported, use it as defined in TS 23.501 [9].

If the *NPN Paging Assistance Information* IE is included in the *Assistance Data for Paging* IE, the NG-RAN node may take it into account when determining the cells where paging will be performed.

If the *NR Paging eDRX Information* IE is included in the PAGING message, the NG-RAN node shall, if supported, use it according to TS 38.304 [12] and TS 23.501 [9]. If the *NR Paging Time Window* IE is included in the *NR Paging eDRX Information* IE, the NG-RAN node shall take this information into account to determine the UE's paging occasion according to TS 38.304 [12].

If the *Paging Cause* IE is included in the PAGING message, the NG-RAN node shall, if supported, transfer it to the UE according to TS 38.331 [18] and TS 36.331 [21].

If the *PEIPS Assistance Information* IE is included in the PAGING message, the NG-RAN node shall, if supported, use it for paging subgrouping of the UE, as specified in TS 38.300 [8].

If the *LP-WUSPS Assistance Information* IE is included in the PAGING message, the NG-RAN node shall, if supported, use it for LP-WUS paging subgrouping of the UE, as specified in TS 38.300 [8].

If the *LP-WUS Disable Indication* IE is included in the PAGING message, the NG-RAN node shall, if supported, store it and use it to disable LP-WUS as described in TS 38.300 [8].

8.5.1.3 Abnormal Conditions

Void.

8.5.2 Multicast Group Paging

8.5.2.1 General

The purpose of the Multicast Group Paging procedure is to enable the AMF to notify CM-IDLE UEs which have joined a multicast MBS session about its activation. The procedure uses non-UE associated signalling.

8.5.2.2 Successful Operation



Figure 8.5.2.2-1: Multicast Group Paging

The AMF initiates the Multicast Group Paging procedure by sending the MULTICAST GROUP PAGING message to the NG-RAN node.

At the reception of the MULTICAST GROUP PAGING message, the NG-RAN node shall perform multicast group paging of the MBS session identified by the *MBS Session ID* IE utilising information provided by the AMF.

If the *Paging DRX* IE is included in the MULTICAST GROUP PAGING message, the NG-RAN node shall use it according to TS 38.304 [12].

If the *MBS Service Area* IE is included in the MULTICAST GROUP PAGING message, the NG-RAN node shall take it into account during multicast group paging, as specified in TS 23.247 [44].

If the *UE Paging List* IE is included in the MULTICAST GROUP PAGING message, the NG-RAN node shall, if supported, use it according to TS 38.304 [12]. If absent, the NG-RAN node shall perform multicast group paging of the MBS session in all paging occasions within at least one default paging cycle, as specified in TS 38.304 [12].

8.5.2.3 Abnormal Conditions

Void.

8.6 Transport of NAS Messages Procedures

8.6.1 Initial UE Message

8.6.1.1 General

The Initial UE Message procedure is used when the NG-RAN node has received from the radio interface the first uplink NAS message to be forwarded to an AMF.

8.6.1.2 Successful Operation



Figure 8.6.1.2-1: Initial UE message

The NG-RAN node initiates the procedure by sending an INITIAL UE MESSAGE message to the AMF. The NG-RAN node shall allocate a unique RAN UE NGAP ID to be used for the UE and the NG-RAN node shall include this identity in the INITIAL UE MESSAGE message.

The *NAS-PDU* IE contains a UE – AMF message that is transferred without interpretation in the NG-RAN node.

In case of network sharing, the selected PLMN is indicated by the *PLMN Identity* IE within the *TAI* IE included in the INITIAL UE MESSAGE message, or by the *Serving PLMN* IE within the *NR NTN TAI Information* IE included in the same message for NTN.

When the NG-RAN node has received from the radio interface the *5G-S-TMSI* IE, it shall include it in the INITIAL UE MESSAGE message.

If the *AMF Set ID* IE is included in the INITIAL UE MESSAGE message this indicates that the message is a rerouted message and the AMF shall, if supported, use the IE as described in TS 23.502 [10].

If the NG-RAN node does not support the NAS Node Selection Function:

- If the NG-RAN node has received from the radio interface the *GUAMI* IE, the NG-RAN node shall include it in the INITIAL UE MESSAGE message.
- If the NG-RAN node has received from the radio interface the *GUAMI Type* IE, the NG-RAN node shall include it in the INITIAL UE MESSAGE message.
- If the NG-RAN node has received from the radio interface the *Requested NSSAI* IE, the NG-RAN node shall include it in the INITIAL UE MESSAGE message.

If the *UE Context Request* IE is included in the INITIAL UE MESSAGE message the AMF shall trigger an Initial Context Setup procedure towards the NG-RAN node.

If the *Allowed NSSAI* IE is included in the INITIAL UE MESSAGE message the AMF shall use the IE as defined in TS 23.502 [10].

If the *Partially Allowed NSSAI* IE is contained in the INITIAL UE MESSAGE message, the AMF shall, if supported, use the IE as defined in TS 23.502 [10].

If the *Source to Target AMF Information Reroute* IE is included in the INITIAL UE MESSAGE message the AMF shall use the IE as defined in TS 23.502 [10].

If the *IAB Node Indication* IE is included in the INITIAL UE MESSAGE message, the AMF shall consider that the message is related to an IAB node.

If the *CE-mode-B Support Indicator* IE is included in the INITIAL UE MESSAGE message and set to "supported", the AMF shall, if supported, use the extended NAS timer settings for the UE as specified in TS 23.501 [9].

If the *LTE-M indication* IE is included in the INITIAL UE MESSAGE message the AMF shall, if supported, use it according to TS 23.501 [9].

If the *EDT Session* IE set to "true" is included in the INITIAL UE MESSAGE message and the NG-RAN node is an ng-eNB, the AMF shall, if supported, consider that the message has been received as a result of an EDT session initiated by the UE.

If PNI-NPN related information within the *NPN Access Information* IE is received in the INITIAL UE MESSAGE message, the AMF shall, if supported, consider that the included information is associated to the cell via which the UE has sent the first NAS message, and to the PLMN Identity which is indicated within the *TAI* IE, and use the included information as specified in TS 23.501 [9].

In case of network sharing for SNPNs, the selected SNPN is indicated within the *User Location Information* IE included in the INITIAL UE MESSAGE message by the *PLMN Identity* IE within the *TAI* IE and the *NID* IE.

If the *RedCap Indication* IE or the *eRedCap Indication* IE is included in the INITIAL UE MESSAGE message, the AMF shall, if supported, use it according to TS 23.501 [9].

If the *Mobile IAB Node Indication* IE is included in the INITIAL UE MESSAGE message, the AMF shall consider that the message is related to a mobile IAB-node.

8.6.1.3 Abnormal Conditions

If the 5G-S-TMSI is not received by the AMF in the INITIAL UE MESSAGE message whereas expected, the AMF shall consider the procedure as failed.

If the *Partially Allowed NSSAI* IE is received in the INITIAL UE MESSAGE message and the total number of S-NSSAIs included in the Allowed NSSAI and Partially Allowed NSSAI exceeds eight, the AMF shall consider the procedure as failed.

If any of the S-NSSAI which is present in the *Partially Allowed NSSAI* IE is also present in the *Allowed NSSAI* IE, the AMF shall consider the procedure as failed.

8.6.2 Downlink NAS Transport

8.6.2.1 General

The Downlink NAS Transport procedure is used when the AMF only needs to send a NAS message transparently via the NG-RAN node to the UE, and a UE-associated logical NG-connection exists for the UE or the AMF has received the *RAN UE NGAP ID* IE in an INITIAL UE MESSAGE message or if the NG-RAN node has already initiated a UE-associated logical NG-connection by sending an INITIAL UE MESSAGE message via another NG interface instance.

8.6.2.2 Successful Operation



Figure 8.6.2.2-1: Downlink NAS transport

The AMF initiates the procedure by sending a DOWNLINK NAS TRANSPORT message to the NG-RAN node. If the UE-associated logical NG-connection is not established, the AMF shall allocate a unique AMF UE NGAP ID to be used for the UE and include that in the DOWNLINK NAS TRANSPORT message; by receiving the *AMF UE NGAP ID* IE in the DOWNLINK NAS TRANSPORT message, the NG-RAN node establishes the UE-associated logical NG-connection.

If the *RAN Paging Priority* IE is included in the DOWNLINK NAS TRANSPORT message, the NG-RAN node may use it to determine a priority for paging the UE in RRC_INACTIVE state.

The *NAS-PDU* IE contains an AMF – UE message that is transferred without interpretation in the NG-RAN node.

If the *Mobility Restriction List* IE is contained in the DOWNLINK NAS TRANSPORT message, the NG-RAN node shall overwrite any previously stored mobility restriction information in the UE context. The NG-RAN node shall use the information in the *Mobility Restriction List* IE if present in the DOWNLINK NAS TRANSPORT message to:

- determine a target for subsequent mobility action for which the NG-RAN node provides information about the target of the mobility action towards the UE;
- select a proper SCG during dual connectivity operation;
- assign proper RNA(s) for the UE when moving the UE to RRC_INACTIVE state.

If the *Mobility Restriction List* IE is not contained in the DOWNLINK NAS TRANSPORT message and there is no previously stored mobility restriction information, the NG-RAN node shall consider that no roaming and no access restriction apply to the UE except for the PNI NPN mobility as described in TS 23.501 [9].

The NG-RAN node shall consider that roaming or access to CAG cells is only allowed if the *Allowed PNI-NPN List* IE is contained in the DOWNLINK NAS TRANSPORT message, as described in TS 23.501 [9].

If the *Index to RAT/Frequency Selection Priority* IE is included in the DOWNLINK NAS TRANSPORT message, the NG-RAN node shall, if supported, use it as defined in TS 23.501 [9].

The *UE Aggregate Maximum Bit Rate* IE should be sent to the NG-RAN node if the AMF has not sent it previously. If it is included in the DOWNLINK NAS TRANSPORT message, the NG-RAN node shall store the UE Aggregate Maximum Bit Rate in the UE context, and use the received UE Aggregate Maximum Bit Rate for all Non-GBR QoS flows for the concerned UE as specified in TS 23.501 [9].

If the *Old AMF* IE is included in the DOWNLINK NAS TRANSPORT message, the NG-RAN node shall consider that this UE-associated logical NG-connection was redirected to this AMF from another AMF identified by the *Old AMF* IE. If the *Extended Old AMF* IE is included in the DOWNLINK NAS TRANSPORT message, the NG-RAN node shall, if supported, consider that this UE-associated logical NG-connection was redirected to this AMF from another AMF identified by the *Extended Old AMF* IE.

If the *SRVCC Operation Possible* IE is included in the DOWNLINK NAS TRANSPORT message, the NG-RAN node shall, if supported, store the content of the received *SRVCC Operation Possible* IE in the UE context and use it as defined in TS 23.216 [31].

If the *Extended Connected Time* IE is included in the DOWNLINK NAS TRANSPORT message, the NG-RAN node shall, if supported, use it as described in TS 23.501 [9].

If the *Enhanced Coverage Restriction* IE is included in the DOWNLINK NAS TRANSPORT message, the NG-RAN node shall, if supported, store this information in the UE context and use it as defined in TS 23.501 [9].

If the *UE Differentiation Information* IE is included in the DOWNLINK NAS TRANSPORT message, the NG-RAN node shall, if supported, store this information in the UE context for further use according to TS 23.501 [9].

If the *CE-mode-B Restricted* IE is included in the DOWNLINK NAS TRANSPORT message and the *Enhanced Coverage Restriction* IE is not set to "restricted" and the Enhanced Coverage Restricted information stored in the UE context is not set to "restricted", the NG-RAN node shall, if supported, store this information in the UE context and use it as defined in TS 23.501 [9].

If the *UE Radio Capability* IE is included in the DOWNLINK NAS TRANSPORT message, the NG-RAN node shall store this information in the UE context, and use it as defined in TS 38.300 [8].

If the *End Indication* IE is included in the DOWNLINK NAS TRANSPORT message and set to "no further data", the NG-RAN node shall consider that besides the included NAS PDU in this message, there are no further NAS PDUs to be transmitted for this UE.

If the DOWNLINK NAS TRANSPORT message contains the *UE Radio Capability ID* IE, the NG-RAN node shall, if supported, use it as specified in TS 23.501 [9] and TS 23.502 [10].

If the *Target NSSAI Information* IE is contained in the DOWNLINK NAS TRANSPORT message, the NG-RAN node may use this information as specified in TS 23.501 [9].

If the *Partially Allowed NSSAI* IE is contained in the DOWNLINK NAS TRANSPORT message, the NG-RAN node shall, if supported, deduce from it the partially allowed network slices for the UE, store and replace any previously received Partially Allowed NSSAI and use it as specified in TS 23.501 [9].

If the *Masked IMEISV* IE is included in the DOWNLINK NAS TRANSPORT message, the NG-RAN node shall, if supported, use it to determine the characteristics of the UE for subsequent handling.

If the *Mobile IAB Authorized* IE is included in the DOWNLINK NAS TRANSPORT message, the NG-RAN node shall, if supported, store the received Mobile IAB Authorization status in the UE context. If the *Mobile IAB Authorized* IE is set to "not authorized" for a mobile IAB-MT, the NG-RAN node shall, if supported, ensure that the mobile IAB node will not serve any UE(s).

Interactions with Initial UE Message procedure:

The NG-RAN node shall use the *AMF UE NGAP ID* IE and *RAN UE NGAP ID* IE received in the DOWNLINK NAS TRANSPORT message as identification of the logical connection even if the *RAN UE NGAP ID* IE had been allocated in an INITIAL UE MESSAGE message sent over a different NG interface instance.

Interaction with the UE Radio Capability Info Indication procedure:

If the *UE Capability Info Request* IE set to "requested" is included in the DOWNLINK NAS TRANSPORT message, the NG-RAN node shall trigger the UE Radio Capability Info Indication procedure if UE capability related information was successfully retrieved from the UE.

8.6.2.3 Abnormal Conditions

If the *Partially Allowed NSSAI* IE is received in the DOWNLINK NAS TRANSPORT message and the total number of S-NSSAIs included in the Allowed NSSAI and Partially Allowed NSSAI exceeds eight, the NG-RAN node shall consider the procedure as failed.

If any of the S-NSSAI which is present in the *Partially Allowed NSSAI* IE is also present in the *Allowed NSSAI* IE, the NG-RAN node shall consider the procedure as failed.

8.6.3 Uplink NAS Transport

8.6.3.1 General

The Uplink NAS Transport procedure is used when the NG-RAN node has received from the radio interface a NAS message to be forwarded to the AMF to which a UE-associated logical NG-connection for the UE exists.

8.6.3.2 Successful Operation



Figure 8.6.3.2-1: Uplink NAS transport

The NG-RAN node initiates the procedure by sending an UPLINK NAS TRANSPORT message to the AMF.

The *NAS-PDU* IE contains a UE – AMF message that is transferred without interpretation in the NG-RAN node.

8.6.3.3 Abnormal Conditions

Void.

8.6.4 NAS Non Delivery Indication

8.6.4.1 General

The NAS Non Delivery Indication procedure is used when the NG-RAN node decides not to start the delivery of a NAS message that has been received over a UE-associated logical NG-connection or the NG-RAN node is unable to ensure that the message has been received by the UE.

8.6.4.2 Successful Operation



Figure 8.6.4.2-1: NAS non delivery indication

The NG-RAN node initiates the procedure by sending a NAS NON DELIVERY INDICATION message to the AMF. The NG-RAN node shall report the non-delivery of a NAS message by including the non-delivered NAS message within the *NAS-PDU* IE and an appropriate cause value within the *Cause* IE, e.g., "NG intra system handover triggered", "NG inter system handover triggered" or "Xn handover triggered".

8.6.4.3 Abnormal Conditions

Void.

8.6.5 Reroute NAS Request

8.6.5.1 General

The purpose of the Reroute NAS Request procedure is to enable the AMF to request for a rerouting of the INITIAL UE MESSAGE message to another AMF.

8.6.5.2 Successful Operation

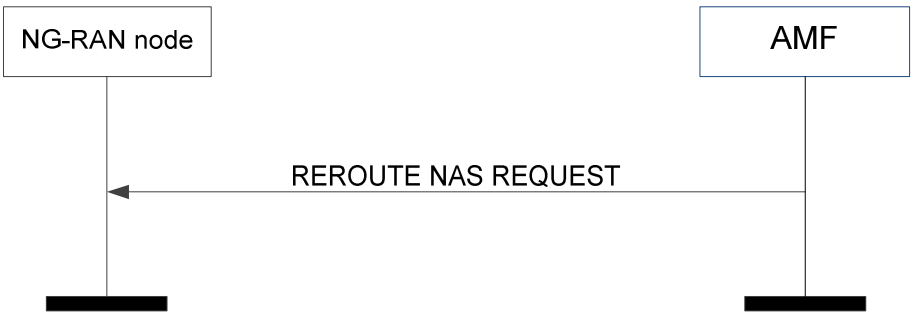


Figure 8.6.5.2-1: Reroute NAS request

The AMF initiates the procedure by sending a REROUTE NAS REQUEST message to the NG-RAN node. The NG-RAN node shall, if supported, reroute the INITIAL UE MESSAGE message to an AMF indicated by the *AMF Set ID* IE as described in TS 23.501 [9].

If the *Allowed NSSAI* IE is included in the REROUTE NAS REQUEST message, then the NG-RAN node shall propagate it in the rerouted INITIAL UE MESSAGE message as defined in TS 23.502 [10].

If the *Partially Allowed NSSAI* IE is contained in the REROUTE NAS REQUEST message, the NG-RAN node shall, if supported, propagate it in the rerouted INITIAL UE MESSAGE message as defined in TS 23.502 [10].

If the *Source to Target AMF Information Reroute* IE is included in the REROUTE NAS REQUEST message, then the NG-RAN node shall propagate it in the rerouted INITIAL UE MESSAGE message as defined in TS 23.502 [10].

8.6.5.3 Abnormal Conditions

If the *Partially Allowed NSSAI* IE is received in the REROUTE NAS REQUEST message and the total number of S-NSSAIs included in the Allowed NSSAI and Partially Allowed NSSAI exceeds eight, the NG-RAN node shall consider the procedure as failed.

If any of the S-NSSAI which is present in the *Partially Allowed NSSAI* IE is also present in the *Allowed NSSAI* IE, the NG-RAN node shall consider the procedure as failed.

8.7 Interface Management Procedures

8.7.1 NG Setup

8.7.1.1 General

The purpose of the NG Setup procedure is to exchange application level data needed for the NG-RAN node and the AMF to correctly interoperate on the NG-C interface. This procedure shall be the first NGAP procedure triggered after the TNL association has become operational. The procedure uses non-UE associated signalling.

This procedure erases any existing application level configuration data in the two nodes, replaces it by the one received and clears AMF overload state information at the NG-RAN node. If the NG-RAN node and AMF do not agree on retaining the UE contexts this procedure also re-initialises the NGAP UE-related contexts (if any) and erases all related signalling connections in the two nodes like an NG Reset procedure would do.

If the NG-RAN node supports A-IoT and is communicating directly with the AIOTF, as specified in TS 23.369 [60], the NG Setup procedure, as depicted in Figures 8.7.1.2-2 and 8.7.1.3-2 and specified in the respective sections, is executed between the NG-RAN node and the AIOTF.

8.7.1.2 Successful Operation

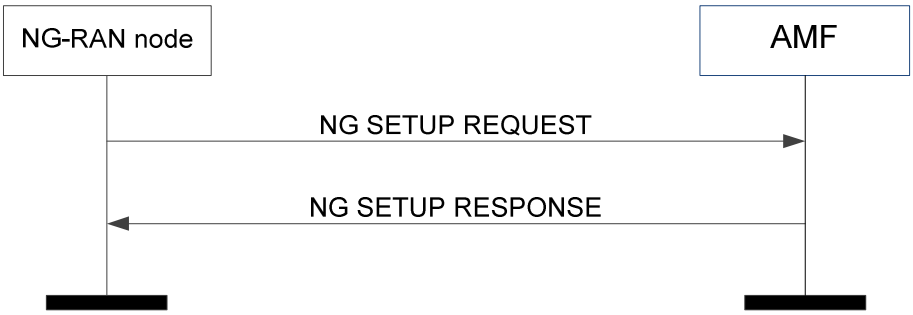


Figure 8.7.1.2-1: NG setup: successful operation with the AMF

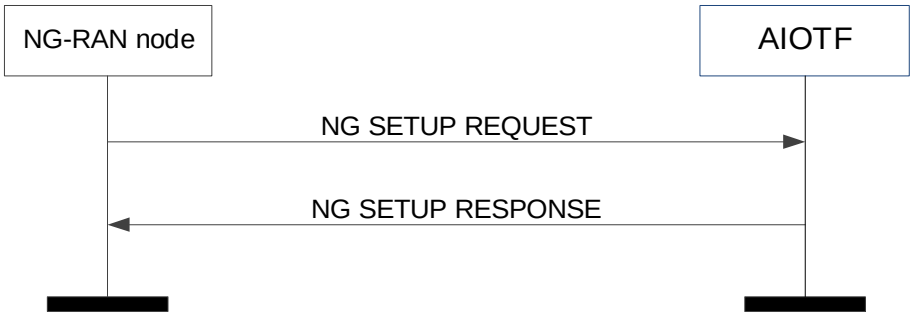


Figure 8.7.1.2-2: NG setup: successful operation with the AIOTF

If the NG Setup procedure is executed between the NG-RAN node and the AMF:

- The NG-RAN node initiates the procedure by sending an NG SETUP REQUEST message including the appropriate data to the AMF. The AMF responds with an NG SETUP RESPONSE message including the appropriate data.

- If the *Configured TAC Indication* IE set to "true" is included for a Tracking Area contained in the *Supported TA List* IE in the NG SETUP REQUEST message, the AMF may take it into account to optimise NG-C signalling towards this NG-RAN node.

- If the *UE Retention Information* IE set to "ues-retained" is included in the NG SETUP REQUEST message, the AMF may accept the proposal to retain the existing UE related contexts and signalling connections by including the *UE Retention Information* IE set to "ues-retained" in the NG SETUP RESPONSE message.

- If the AMF supports IAB, the AMF shall include the *IAB Supported* IE in the NG SETUP RESPONSE message. If the *IAB Supported* IE is included in the NG SETUP RESPONSE message, the NG-RAN node shall, if supported, store this information and use it for further AMF selection for the IAB-MT.

- The AMF shall include the *Backup AMF Name* IE, if available, in the *Served GUAMI List* IE in the NG SETUP RESPONSE message. The NG-RAN node shall, if supported, consider the AMF as indicated by the *Backup AMF Name* IE when performing AMF reselection, as specified in TS 23.501 [9]. If the *Extended Backup AMF Name* IE is included in the *Served GUAMI List* IE in the NG SETUP RESPONSE message, the NG-RAN node shall, if supported, consider the AMF as indicated by the *Extended Backup AMF Name* IE when performing AMF reselection, as specified in TS 23.501 [9].

- If the *GUAMI Type* IE is included in the NG SETUP RESPONSE message, the NG-RAN node shall store the received value and use it for further AMF selection as defined in TS 23.501 [9].

- If the *RAN Node Name* IE is included in the NG SETUP REQUEST message, the AMF may use this IE as a human readable name of the NG-RAN node. If the *Extended RAN Node Name* IE is included in the NG SETUP REQUEST message, the AMF may use this IE as a human readable name of the NG-RAN node and shall ignore the *RAN Node Name* IE if also included.

- If the *Extended AMF Name* IE is included in the NG SETUP RESPONSE message, the NG-RAN node may use this IE as a human readable name of the AMF and shall ignore the *AMF Name* IE.

- If the *NB-IoT Default Paging DRX* IE is included in the NG SETUP REQUEST message, the AMF shall take it into account for paging.

- If the *RAT Information* IE is included in the NG SETUP REQUEST message, the AMF shall handle this information as specified in TS 23.502 [10].

- If the *NID* IE within the *NPN Support* IE is included within a *Broadcast PLMN Item* IE in the NG SETUP REQUEST message, the AMF shall consider that the NG-RAN node supports the indicated S-NSSAI(s) for the corresponding tracking area code for the SNPN identified by the *PLMN Identity* IE and the *NID* IE.

- If the *NID* IE within the *NPN Support* IE is included within a *PLMN Support Item* IE in the NG SETUP RESPONSE message, the NG-RAN node shall consider that the AMF supports the SNPN identified by the *PLMN Identity* IE and the *NID* IE.

- If the *Onboarding Support* IE is also included within the same *PLMN Support Item* IE, the NG-RAN node shall, if supported, consider that the AMF supports UE onboarding for the identified SNPN, as specified in TS 23.501 [9].

- If the *TAI NSAG Support List* IE is included in the *Broadcast PLMN Item* IE in the NG SETUP REQUEST message, the AMF shall, if supported, use this information as specified in TS 23.501 [9].

- If the AMF supports mobile IAB, the AMF shall include the *Mobile IAB Supported* IE in the NG SETUP RESPONSE message. If the *Mobile IAB Supported* IE is included in the NG SETUP RESPONSE message, the NG-RAN node shall, if supported, store this information and further use it for AMF selection for the mobile IAB-MT.

- If the *Additional ULI* IE is included in the NG SETUP REQUEST message, the AMF shall, if supported, store this information, consider that this transmitting NG-RAN node supports the WAB-gNB functionality, and take this information into account for determining the location of the UEs served by the NG-RAN node, as specified in TS 23.501 [9].

If the NG Setup procedure is executed between the NG-RAN node and the AIOTF:

- The NG-RAN node initiates the procedure by sending an NG SETUP REQUEST message including the appropriate data to the AIOTF. The AIOTF responds with an NG SETUP RESPONSE message including the *AIOTF Name* IE and the *AIOTF Identifier* IE. The NG-RAN node shall ignore the not applicable IEs in the NG SETUP RESPONSE message as specified in clause 9.2.6.2.

If the NG Setup procedure is triggered by an NG-RAN node supporting A-IoT:

- If the *A-IoT Support* IE is included in the NG SETUP REQUEST message and set to "A-IoT only", the receiving node shall, if supported, consider that the NG-RAN node only supports A-IoT radio, and ignores the not applicable IEs as specified in clause 9.2.6.1.

- If the *A-IoT Support* IE is included in the NG SETUP REQUEST message and set to "A-IoT and NR Uu", the receiving node shall, if supported, consider that the NG-RAN node supports both A-IoT radio and NR Uu radio.

8.7.1.3 Unsuccessful Operation

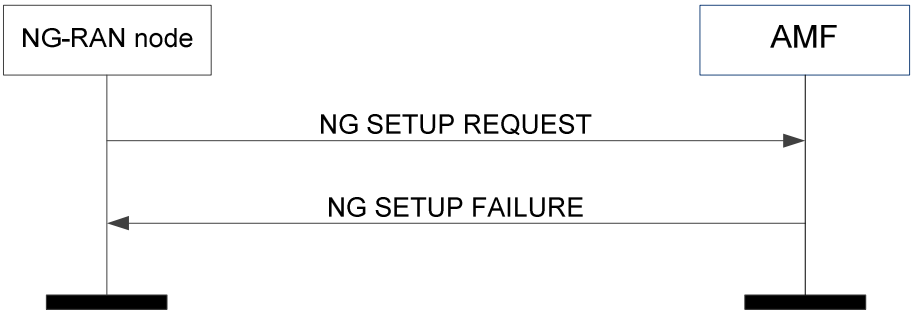


Figure 8.7.1.3-1: NG setup: unsuccessful operation with the AMF

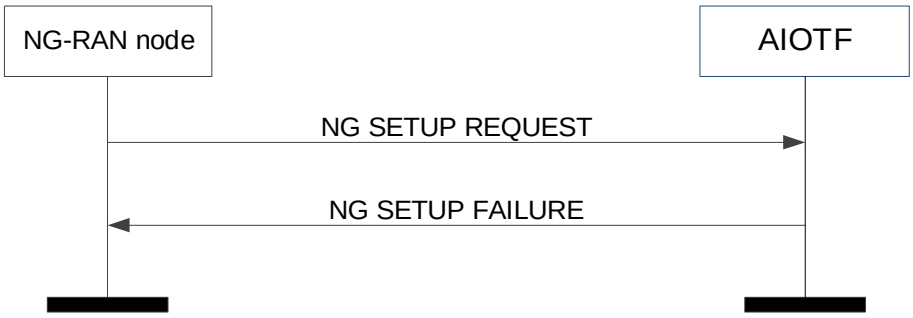


Figure 8.7.1.3-2: NG setup: unsuccessful operation with the AIOTF

If the AMF cannot accept the setup, it should respond with an NG SETUP FAILURE message and appropriate cause value.

If the NG SETUP FAILURE message includes the *Time to Wait* IE, the NG-RAN node shall wait at least for the indicated time before reinitiating the NG Setup procedure towards the same AMF.

If the NG Setup procedure is executed between the NG-RAN node and the AIOTF, the specification text above concerning the AMF applies for the AIOTF.

8.7.1.4 Abnormal Conditions

If the AMF does not identify any of the PLMNs/SNPNs indicated in the NG SETUP REQUEST message, it shall reject the NG Setup procedure with an appropriate cause value.

If none of the RATs indicated by the NG-RAN node in the NG SETUP REQUEST message is supported by the AMF, then the AMF shall fail the NG Setup procedure with an appropriate cause value.

If the NG Setup procedure is executed between the NG-RAN node and the AIOTF, the specification text above concerning the AMF applies for the AIOTF.

8.7.2 RAN Configuration Update

8.7.2.1 General

The purpose of the RAN Configuration Update procedure is to update application level configuration data needed for the NG-RAN node and the AMF to interoperate correctly on the NG-C interface. This procedure does not affect existing UE-related contexts, if any. The procedure uses non UE-associated signalling.

If the NG-RAN node supports A-IoT and is communicating directly with an AIOTF, as specified in TS 23.369 [60], the RAN Configuration Update procedure, as depicted in Figures 8.7.2.2-2 and 8.7.2.3-2 and specified in the respective sections, is executed between the NG-RAN node and the AIOTF.

8.7.2.2 Successful Operation

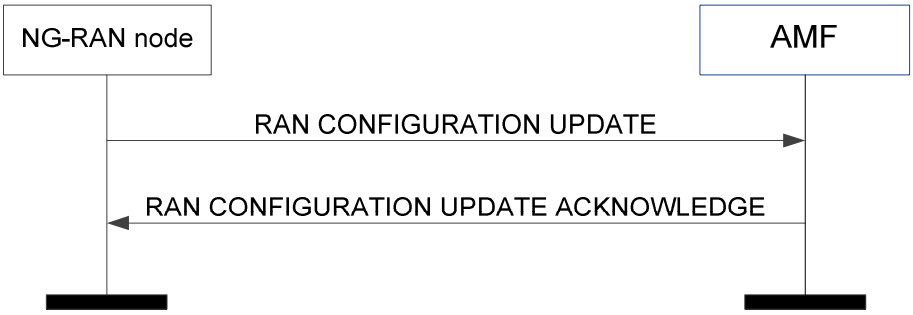


Figure 8.7.2.2-1: RAN configuration update: successful operation with the AMF

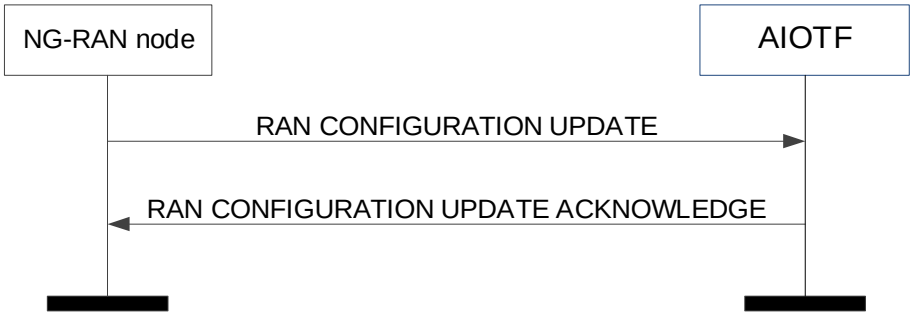


Figure 8.7.2.2-2: RAN configuration update: successful operation with the AIOTF

If the RAN Configuration Update procedure is executed between the NG-RAN node and the AMF:

- The NG-RAN node initiates the procedure by sending a RAN CONFIGURATION UPDATE message to the AMF including an appropriate set of updated configuration data that it has just taken into operational use. The AMF responds with a RAN CONFIGURATION UPDATE ACKNOWLEDGE message to acknowledge that it successfully updated the configuration data. If an information element is not included in the RAN CONFIGURATION UPDATE message, the AMF shall interpret that the corresponding configuration data is not changed and shall continue to operate the NG-C interface with the existing related configuration data.

- If the *Supported TA List* IE is included in the RAN CONFIGURATION UPDATE message, the AMF shall overwrite the whole list of supported TAs and the corresponding list of supported slices for each TA, and use them for subsequent registration area management of the UE.

- If the *Configured TAC Indication* IE set to "true" is included for a Tracking Area contained in the *Supported TA List* IE in the RAN CONFIGURATION UPDATE message, the AMF may take it into account to optimise NG-C signalling towards this NG-RAN node.

- If the *Global RAN Node ID* IE is included in the RAN CONFIGURATION UPDATE message, the AMF shall associate the TNLA to the NG-C interface instance using the Global RAN Node ID.

- If the RAN CONFIGURATION UPDATE message includes the *NG-RAN TNL Association to Remove List* IE, the AMF shall, if supported, initiate removal of the TNL association(s) indicated by NG-RAN TNL endpoint(s) and AMF TNL endpoint(s) if the *TNL Association Transport Layer Address at AMF* IE is present, or the TNL association(s) indicated by NG-RAN TNL endpoint(s) if the *TNL Association Transport Layer Address at AMF* IE is absent:

  - if the received *TNL Association Transport Layer Address* IE includes the *Port Number* IE, the NG-RAN TNL endpoint is identified by the *Endpoint IP Address* IE and the *Port Number* IE. Otherwise, the NG-RAN TNL endpoints correspond to all NG-RAN TNL endpoints identified by the *Endpoint IP Address* IE and any port number(s).

  - if the received *TNL Association Transport Layer Address at AMF* IE includes the *Port Number* IE, the AMF TNL endpoint is identified by the *Endpoint IP Address* IE and the *Port Number* IE. Otherwise, the AMF TNL endpoints correspond to all AMF TNL endpoints identified by the *Endpoint IP Address* IE and any port number(s).

- If the RAN CONFIGURATION UPDATE message includes the *RAN Node Name* IE, the AMF may store it or update this IE value if already stored, and use it as a human readable name of the NG-RAN node. If the RAN CONFIGURATION UPDATE message includes the *Extended RAN Node Name* IE, the AMF may store it or update this IE value if already stored, and use it as a human readable name of the NG-RAN node and shall ignore the *RAN Node Name* IE if also included.

- If the *NB-IoT Default Paging DRX* IE is included in the RAN CONFIGURATION UPDATE message, the AMF shall overwrite any previously stored NB-IoT default paging DRX value for the NG-RAN node.

- If the *RAT Information* IE is included in the RAN CONFIGURATION UPDATE message, the AMF shall handle this information as specified in TS 23.502 [10].

- If the *NID* IE within the *NPN Support* IE is included within a *Broadcast PLMN Item* IE in the RAN CONFIGURATION UPDATE message, the AMF shall consider that the NG-RAN node supports the indicated S-NSSAI(s) for the corresponding tracking area code for the SNPN identified by the *PLMN Identity* IE and the *NID* IE.

- If the *TAI NSAG Support List* IE is included in the *Broadcast PLMN Item* IE in the RAN CONFIGURATION UPDATE message, the AMF shall, if supported, use this information as specified in TS 23.501 [9].

If the RAN Configuration Update procedure is executed between the NG-RAN node and the AIOTF:

- The NG-RAN node initiates the procedure by sending a RAN CONFIGURATION UPDATE message to the AIOTF including an appropriate set of updated configuration data that it has just taken into operational use. The AIOTF responds with a RAN CONFIGURATION UPDATE ACKNOWLEDGE message to acknowledge that it successfully updated the configuration data. If an information element is not included in the RAN CONFIGURATION UPDATE message, the AIOTF shall interpret that the corresponding configuration data is not changed and shall continue to operate the NG-C interface with the existing related configuration data.

If the RAN Configuration Update procedure is triggered by an NG-RAN node supporting A-IoT:

- If the *A-IoT Support* IE is included in the RAN CONFIGURATION UPDATE message and set to "A-IoT only", the receiving node shall, if supported, consider that the NG-RAN node only supports A-IoT radio.

- If the *A-IoT Support* IE is included in the RAN CONFIGURATION UPDATE message and set to "A-IoT and NR Uu", the receiving node shall, if supported, consider that the NG-RAN node supports both A-IoT radio and NR Uu radio.

If the *Additional ULI* IE is included in the RAN CONFIGURATION UPDATE message, the AMF shall, if supported, store this information, and take it into account for determining the location of UEs served by the NG-RAN node, as specified in TS 23.501 [9].

8.7.2.3 Unsuccessful Operation

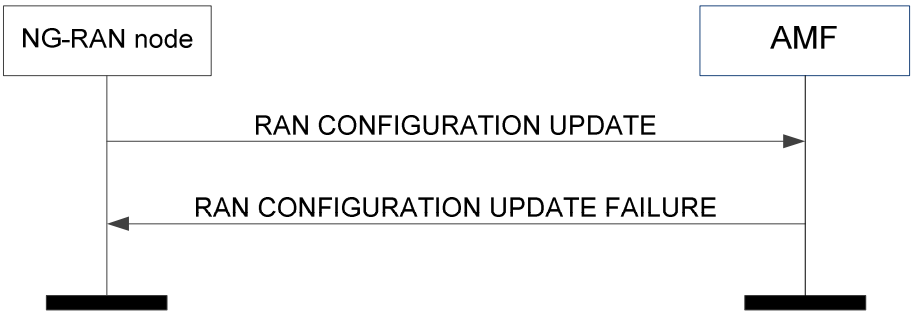


Figure 8.7.2.3-1: RAN configuration update: unsuccessful operation with the AMF

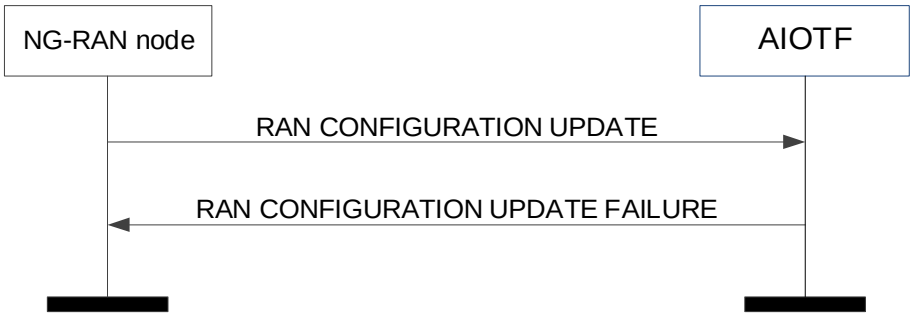


Figure 8.7.2.3-2: RAN configuration update: unsuccessful operation with the AIOTF

If the AMF cannot accept the update, it shall respond with a RAN CONFIGURATION UPDATE FAILURE message and appropriate cause value.

If the *Time to Wait* IE is included in the RAN CONFIGURATION UPDATE FAILURE message, the NG-RAN node shall wait at least for the indicated time before reinitiating the RAN Configuration Update procedure towards the same AMF.

If the RAN Configuration Update procedure is executed between the NG-RAN node and the AIOTF, the specification text above concerning the AMF applies for the AIOTF.

8.7.2.4 Abnormal Conditions

If the NG-RAN node, after initiating the RAN Configuration Update procedure, receives neither a RAN CONFIGURATION UPDATE ACKOWLEDGE nor a RAN CONFIGURATION UPDATE FAILURE message, the NG-RAN node may reinitiate a further RAN Configuration Update procedure towards the same AMF, provided that the content of the new RAN CONFIGURATION UPDATE message is identical to the content of the previously unacknowledged RAN CONFIGURATION UPDATE message.

If the RAN Configuration Update procedure is executed between the NG-RAN node and the AIOTF, the specification text above concerning the AMF applies for the AIOTF.

8.7.3 AMF Configuration Update

8.7.3.1 General

The purpose of the AMF Configuration Update procedure is to update application level configuration data needed for the NG-RAN node and AMF to interoperate correctly on the NG-C interface. This procedure does not affect existing UE-related contexts, if any. The procedure uses non UE-associated signalling.

8.7.3.2 Successful Operation

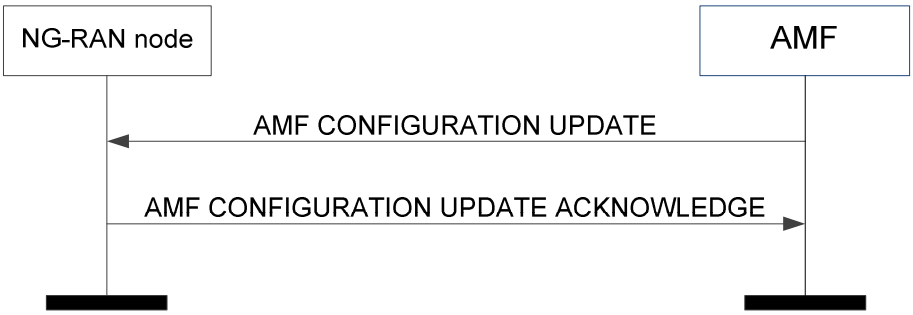


Figure 8.7.3.2-1: AMF configuration update: successful operation

The AMF initiates the procedure by sending an AMF CONFIGURATION UPDATE message including the appropriate updated configuration data to the NG-RAN node. The NG-RAN node responds with an AMF CONFIGURATION UPDATE ACKNOWLEDGE message to acknowledge that it successfully updated the configuration data. Unless stated otherwise, if an information element is not included in the AMF CONFIGURATION UPDATE message, the NG-RAN node shall interpret that the corresponding configuration data is not changed and shall continue to operate the NG-C interface with the existing related configuration data.

If the *PLMN Support List* IE is included in the AMF CONFIGURATION UPDATE message, the NG-RAN node shall overwrite the whole list of supported PLMN/SNPN Identities and the corresponding list of AMF slices and, if present, other associated information for each PLMN/SNPN Identity and use the received values for further network slice selection and AMF selection.

If the *AMF TNL Association to Add List* IE is included in the AMF CONFIGURATION UPDATE message, the NG-RAN node shall, if supported, use it to establish the TNL association(s) with the AMF. If the *AMF TNL Association to Add List* IE is included in the AMF CONFIGURATION UPDATE message, and if the *AMF TNL Association Address* IE does not include the *Port Number* IE, the NG-RAN node shall assume that port number value 38412 is used for the endpoint. The NG-RAN node shall report to the AMF, in the AMF CONFIGURATION UPDATE ACKNOWLEDGE message, the successful establishment of the TNL association(s) with the AMF as follows:

- A list of successfully established TNL associations shall be included in the *AMF TNL Association Setup List* IE;
- A list of TNL associations that failed to be established shall be included in the *AMF TNL Association Failed to Setup List* IE.

If the AMF CONFIGURATION UPDATE message includes the *AMF TNL Association to Remove List* IE, the NG-RAN node shall, if supported, initiate removal of the TNL association(s) indicated by AMF TNL endpoint(s) and NG-RAN node TNL endpoint(s) if the *TNL Association Transport Layer Address NG-RAN* IE is present, or the TNL association(s) indicated by AMF TNL endpoint(s) if the *TNL Association Transport Layer Address NG-RAN IE* is absent:

- if the received *AMF TNL Association Address* IE includes the *Port Number* IE, the AMF TNL endpoint is identified by the *Endpoint IP Address* IE and the *Port Number* IE. Otherwise, the AMF TNL endpoints correspond to all AMF TNL endpoints identified by the *Endpoint IP Address* IE and any port number(s).
- if the received *TNL Association Transport Layer Address NG-RAN* IE includes the *Port Number* IE, the NG-RAN node TNL endpoint is identified by the *Endpoint IP Address* IE and the *Port Number* IE. Otherwise, the NG-RAN node TNL endpoints correspond to all NG-RAN node TNL endpoints identified by the *Endpoint IP Address* IE and any port number(s).

If the *AMF Name* IE is included in the AMF CONFIGURATION UPDATE message, the NG-RAN node shall overwrite the previously stored AMF name and use it to identify the AMF.

If the AMF CONFIGURATION UPDATE message includes the *AMF Name* IE, the NG-RAN node may store it or update this IE value if already stored, and use it as a human readable name of the AMF. If the AMF CONFIGURATION UPDATE message includes the *Extended AMF Name* IE, the NG-RAN node may store it or update this IE value if already stored, and use it as a human readable name of the AMF and shall ignore the *AMF Name* IE if also included.

If the *Served GUAMI List* IE is included in the AMF CONFIGURATION UPDATE message, the NG-RAN node shall overwrite the whole list of GUAMIs served by the AMF by the new list and use the received values for further AMF management and AMF selection as defined in TS 23.501 [9].

If the *Relative AMF Capacity* IE is included in the AMF CONFIGURATION UPDATE message, the NG-RAN node may use it as defined in TS 23.501 [9].

If the *AMF TNL Association to Update List* IE is included in the AMF CONFIGURATION UPDATE message the NG-RAN node shall, if supported, update the TNL association(s) indicated by the received AMF Transport Layer information towards the AMF:

- if the received *AMF TNL Association Address* IE includes the *Port Number* IE, the AMF TNL endpoint is identified by the *Endpoint IP Address* IE and the *Port Number* IE. Otherwise, the AMF TNL endpoints correspond to all AMF TNL endpoints identified by the *Endpoint IP Address* IE and any port number(s).

If the *TNL Association Usage* IE or the *TNL Address Weight Factor* IE is included in the *AMF TNL Association to Add List* IE or the *AMF TNL Association to Update List* IE, the NG-RAN node shall, if supported, consider it as defined in TS 23.502 [10].

If the *NID* IE within the *NPN Support* IE is included within a *PLMN Support Item* IE in the AMF CONFIGURATION UPDATE message, the NG-RAN node shall consider that the AMF supports the SNPN identified by the *PLMN Identity* IE and the *NID* IE.

If the *Onboarding Support* IE is also included within the same *PLMN Support Item* IE, the NG-RAN node shall, if supported, consider that the AMF supports UE onboarding for the identified SNPN, as specified in TS 23.501 [9].

8.7.3.3 Unsuccessful Operation

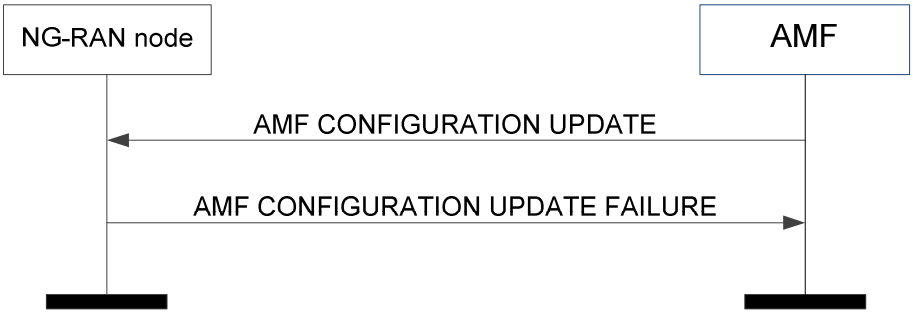


Figure 8.7.3.3-1: AMF configuration update: unsuccessful operation

If the NG-RAN node cannot accept the update, it shall respond with an AMF CONFIGURATION UPDATE FAILURE message and appropriate cause value.

If the *Time to Wait* IE is included in the AMF CONFIGURATION UPDATE FAILURE message, the AMF shall wait at least for the indicated time before reinitiating the AMF Configuration Update procedure towards the same NG-RAN node.

8.7.3.4 Abnormal Conditions

If the AMF receives neither an AMF CONFIGURATION UPDATE ACKOWLEDGE nor an AMF CONFIGURATION UPDATE FAILURE message, the AMF may reinitiate the AMF Configuration Update procedure towards the same NG-RAN node provided that the content of the new AMF CONFIGURATION UPDATE message is identical to the content of the previously unacknowledged AMF CONFIGURATION UPDATE message.

8.7.4 NG Reset

8.7.4.1 General

The purpose of the NG Reset procedure is to initialise or re-initialise the RAN, or part of RAN NGAP UE-related contexts, in the event of a failure in the 5GC or vice versa. This procedure does not affect the application level configuration data exchanged during, e.g., the NG Setup procedure. The procedure uses non-UE associated signalling.

If the NG-RAN node supports A-IoT and is communicating directly with an AIOTF, as specified in TS 23.369 [60], the NG Reset procedure, as depicted in Figures 8.7.4.2.1-2 and 8.7.4.2.2-2 and specified in the respective sections, is executed between the NG-RAN node and the AIOTF.

8.7.4.2 Successful Operation

8.7.4.2.1 NG Reset initiated by the AMF

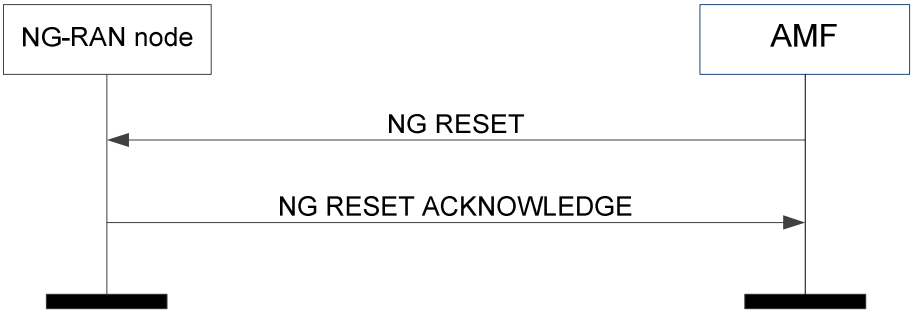


Figure 8.7.4.2.1-1: NG reset initiated by the AMF: successful operation

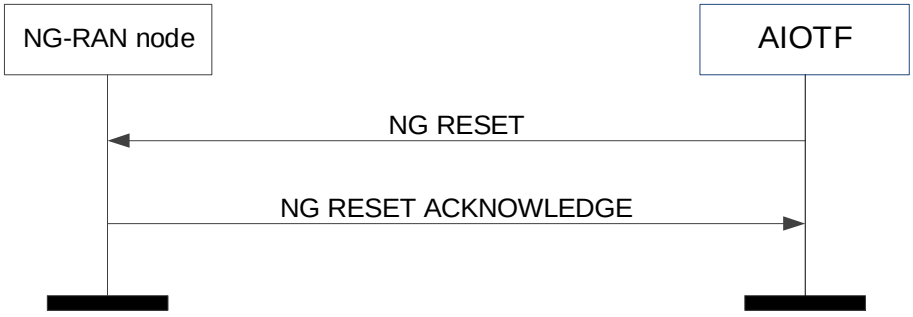


Figure 8.7.4.2.1-2: NG reset initiated by the AIOTF: successful operation

If the NG Reset procedure is executed between the NG-RAN node and the AMF:

- In the event of a failure at the AMF which has resulted in the loss of some or all transaction reference information, an NG RESET message shall be sent to the NG-RAN node.

If the NG Reset procedure is executed between the NG-RAN node and the AIOTF:

- In the event of a failure at the AIOTF which has resulted in the loss of some or all transaction reference information, an NG RESET message shall be sent to the NG-RAN node.

At reception of the NG RESET message the NG-RAN node shall release all allocated resources on NG and Uu related to the UE association(s) indicated explicitly or implicitly in the NG RESET message and remove the indicated UE contexts including NGAP ID, and if applicable, release all the related allocated A-IoT radio resources.

After the NG-RAN node has released all assigned NG resources and the UE NGAP IDs for all indicated UE associations which can be used for new UE-associated logical NG-connections over the NG interface, the NG-RAN node shall respond with the NG RESET ACKNOWLEDGE message. The NG-RAN node does not need to wait for the release of radio resources to be completed before returning the NG RESET ACKNOWLEDGE message.

If the NG RESET message contains the *UE-associated Logical NG-connection List* IE, then:

- The NG-RAN node shall use the *AMF UE NGAP ID* IE and/or the *RAN UE NGAP ID* IE to explicitly identify the UE association(s) to be reset.
- The NG-RAN node shall include in the NG RESET ACKNOWLEDGE message, for each UE association to be reset, the *UE-associated Logical NG-connection Item* IE in the *UE-associated Logical NG-connection List* IE. The *UE-associated Logical NG-connection Item* IEs shall be in the same order as received in the NG RESET message and shall include also unknown UE-associated logical NG-connections. Empty *UE-associated Logical NG-connection Item* IEs, received in the NG RESET message, may be omitted in the NG RESET ACKNOWLEDGE message.
- If the *AMF UE NGAP ID* IE is included in the *UE-associated Logical NG-connection Item* IE for a UE association, the NG-RAN node shall include the *AMF UE NGAP ID* IE in the corresponding *UE-associated Logical NG-connection Item* IE in the NG RESET ACKNOWLEDGE message.
- If the *RAN UE NGAP ID* IE is included in the *UE-associated Logical NG-connection Item* IE for a UE association, the NG-RAN node shall include the *RAN UE NGAP ID* IE in the corresponding *UE-associated Logical NG-connection Item* IE in the NG RESET ACKNOWLEDGE message.

Interactions with other procedures:

If the NG RESET message is received, any other ongoing procedure (except for another NG Reset procedure) on the same NG interface related to a UE association, indicated explicitly or implicitly in the NG RESET message, shall be aborted.

8.7.4.2.2 NG Reset initiated by the NG-RAN node

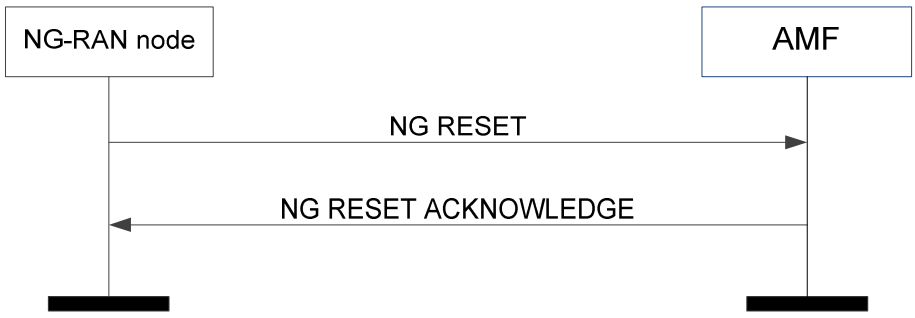


Figure 8.7.4.2.2-1: NG reset initiated by the NG-RAN node: successful operation with the AMF

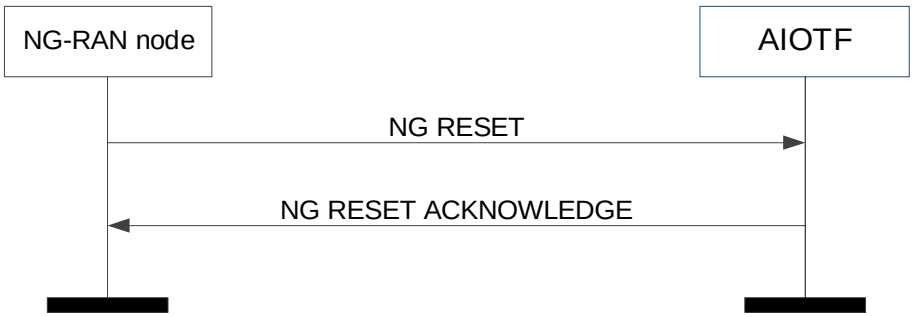


Figure 8.7.4.2.2-2: NG reset initiated by the NG-RAN node: successful operation with the AIOTF

If the NG Reset procedure is executed between the NG-RAN node and the AMF:

- In the event of a failure at the NG-RAN node which has resulted in the loss of some or all transaction reference information, an NG RESET message shall be sent to the AMF.
- At reception of the NG RESET message the AMF shall release all allocated resources on NG related to the UE association(s) indicated explicitly or implicitly in the NG RESET message and remove the NGAP ID for the indicated UE associations.

If the NG Reset procedure is executed between the NG-RAN node and the AIOTF:

- At reception of the NG RESET message the AIOTF shall release all allocated NG resources.

After the AMF has released all assigned NG resources and the UE NGAP IDs for all indicated UE associations which can be used for new UE-associated logical NG-connections over the NG interface, the AMF shall respond with the NG RESET ACKNOWLEDGE message.

After the AIOTF has released all allocated NG resources, the AIOTF shall respond with the NG RESET ACKNOWLEDGE message.

If the NG RESET message contains the *UE-associated Logical NG-connection List* IE, then:

- The AMF shall use the *AMF UE NGAP ID* IE and/or the *RAN UE NGAP ID* IE to explicitly identify the UE association(s) to be reset.
- The AMF shall include in the NG RESET ACKNOWLEDGE message, for each UE association to be reset, the *UE-associated Logical NG-connection Item* IE in the *UE-associated Logical NG-connection List* IE. The *UE-associated Logical NG-connection Item* IEs shall be in the same order as received in the NG RESET message and shall include also unknown UE-associated logical NG-connections. Empty *UE-associated Logical NG-connection Item* IEs, received in the NG RESET message, may be omitted in the NG RESET ACKNOWLEDGE message.
- If the *AMF UE NGAP ID* IE is included in the *UE-associated Logical NG-connection Item* IE for a UE association, the AMF shall include the *AMF UE NGAP ID* IE in the corresponding *UE-associated Logical NG-connection Item* IE in the NG RESET ACKNOWLEDGE message.
- If the *RAN UE NGAP ID* IE is included in a *UE-associated Logical NG-connection Item* IE for a UE association, the AMF shall include the *RAN UE NGAP ID* IE in the corresponding *UE-associated Logical NG-connection Item* IE in the NG RESET ACKNOWLEDGE message.

Interactions with other procedures:

If the NG RESET message is received, any other ongoing procedure (except for another NG Reset procedure) on the same NG interface related to a UE association, indicated explicitly or implicitly in the NG RESET message, shall be aborted.

8.7.4.3 Unsuccessful Operation

Not applicable.

8.7.4.4 Abnormal Conditions

8.7.4.4.1 Abnormal Condition at the 5GC

If the NG RESET message includes the *UE-associated Logical NG-connection List* IE, but neither the *AMF UE NGAP ID* IE nor the *RAN UE NGAP ID* IE is present for a *UE-associated Logical NG-connection Item* IE, then the AMF shall ignore the *UE-associated Logical NG-connection Item* IE. The AMF may return the empty *UE-associated Logical NG-connection Item* IE in the *UE-associated Logical NG-connection List* IE in the NG RESET ACKNOWLEDGE message.

8.7.4.4.2 Abnormal Condition at the NG-RAN

If the NG RESET message includes the *UE-associated Logical NG-connection List* IE, but neither the *AMF UE NGAP ID* IE nor the *RAN UE NGAP ID* IE is present for a *UE-associated Logical NG-connection Item* IE, then the NG-RAN node shall ignore the *UE-associated Logical NG-connection Item* IE. The NG-RAN node may return the empty *UE-associated Logical NG-connection Item* IE in the *UE-associated Logical NG-connection List* IE in the NG RESET ACKNOWLEDGE message.

8.7.4.4.3 Crossing of NG RESET Messages

If an NG Reset procedure is ongoing in the NG-RAN node and the NG-RAN node receives an NG RESET message from the peer entity on the same NG interface related to one or several UE associations previously requested to be reset, indicated explicitly or implicitly in the received NG RESET message, the NG-RAN node shall respond with the NG RESET ACKNOWLEDGE message as described in 8.7.4.2.1.

If an NG Reset procedure is ongoing in the AMF and the AMF receives an NG RESET message from the peer entity on the same NG interface related to one or several UE associations previously requested to be reset, indicated explicitly or implicitly in the received NG RESET message, the AMF shall respond with the NG RESET ACKNOWLEDGE message as described in 8.7.4.2.2.

If the NG-RAN node supports A-IoT and is communicating directly with an AIOTF and if an NG Reset procedure is ongoing in the NG-RAN node and the NG-RAN node receives an NG RESET message from the peer entity on the same NG interface, the NG-RAN node shall respond with the NG RESET ACKNOWLEDGE message as described in 8.7.4.2.1.

If the NG-RAN node supports A-IoT and is communicating directly with an AIOTF and if an NG Reset procedure is ongoing in the AIOTF and the AIOTF receives an NG RESET message from the NG-RAN node on the same NG interface, the AIOTF shall respond with the NG RESET ACKNOWLEDGE message as described in 8.7.4.2.2.

8.7.5 Error Indication

8.7.5.1 General

The Error Indication procedure is initiated by a node in order to report detected errors in one incoming message, provided they cannot be reported by an appropriate failure message.

If the error situation arises due to reception of a message utilising UE-associated signalling, then the Error Indication procedure uses UE-associated signalling. Otherwise the procedure uses non-UE associated signalling.

If the NG-RAN node supports A-IoT and is communicating directly with an AIOTF, as specified in TS 23.369 [60], the Error Indication procedure, as depicted in Figures 8.7.5.2-3 and 8.7.5.2-4 is executed between the NG-RAN node and the AIOTF.

8.7.5.2 Successful Operation

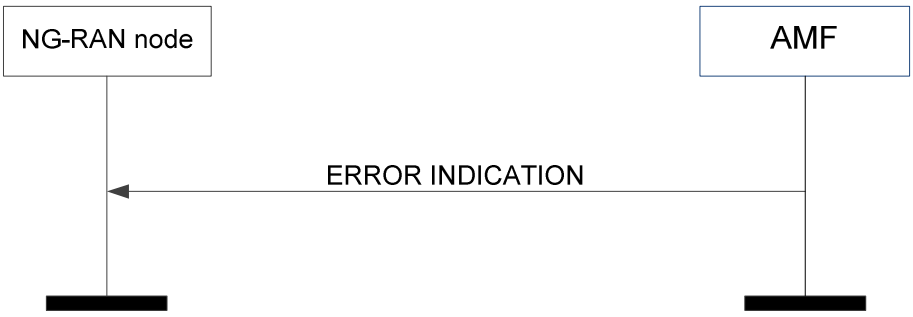


Figure 8.7.5.2-1: Error indication initiated by the AMF

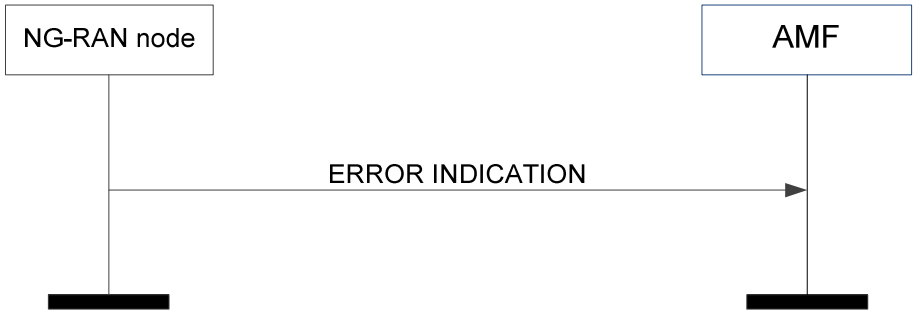


Figure 8.7.5.2-2: Error indication initiated by the NG-RAN node to the AMF



Figure 8.7.5.2-3: Error indication initiated by the AIOTF



Figure 8.7.5.2-4: Error indication initiated by the NG-RAN node to the AIOTF

When the conditions defined in clause 10 are fulfilled, the Error Indication procedure is initiated by an ERROR INDICATION message sent from the receiving node.

The ERROR INDICATION message shall contain at least either the *Cause* IE or the *Criticality Diagnostics* IE. In case the Error Indication procedure is triggered by utilising UE-associated signalling the *AMF UE NGAP ID* IE and the *RAN UE NGAP ID* IE shall be included in the ERROR INDICATION message. In the case of NB-IoT UE using Control Plane CIoT 5GS Optimisation, upon receiving the *5G-S-TMSI* IE in the ERROR INDICATION message, the receiving node shall use the 5G-S-TMSI to identify the UE. If one or both of the *AMF UE NGAP ID* IE and the *RAN UE NGAP ID* IE are not correct, the cause shall be set to an appropriate value, e.g., "Unknown local UE NGAP ID" or "Inconsistent remote UE NGAP ID".

8.7.5.3 Abnormal Conditions

Void.

8.7.6 AMF Status Indication

8.7.6.1 General

The purpose of the AMF Status Indication procedure is to support AMF management functions. The procedure uses non UE-associated signalling.

8.7.6.2 Successful Operation

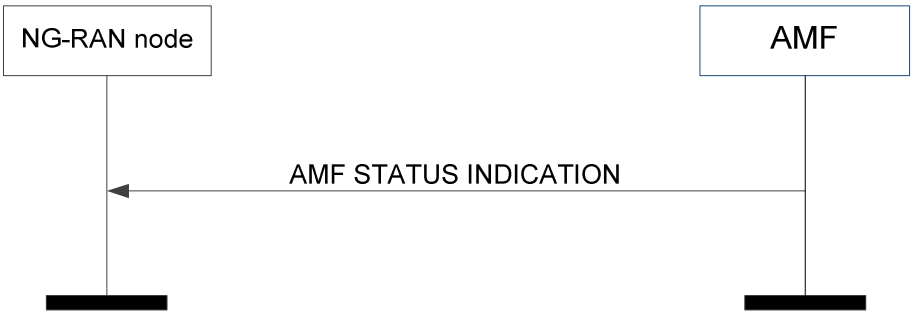


Figure 8.7.6.2-1: AMF status indication

The AMF initiates the procedure by sending an AMF STATUS INDICATION message to the NG-RAN node.

Upon receipt of the AMF STATUS INDICATION message, the NG-RAN node shall consider the indicated GUAMI(s) will be unavailable and perform AMF reselection as defined in TS 23.501 [9].

The NG-RAN node shall, if supported, act accordingly as specified in TS 23.501 [9], based on the presence or absence of the *Timer Approach for GUAMI Removal* IE.

If the *Backup AMF Name* IE is included in the AMF STATUS INDICATION message, the NG-RAN node shall, if supported, perform AMF reselection considering the AMF as indicated by the *Backup AMF Name* IE as specified in TS 23.501 [9]. If the *Extended Backup AMF Name* IE is included in the AMF STATUS INDICATION message, the NG-RAN node shall, if supported, perform AMF reselection considering the AMF as indicated by the *Extended Backup AMF Name* IE as specified in TS 23.501 [9].

8.7.6.3 Abnormal Conditions

Void.

8.7.7 Overload Start

8.7.7.1 General

The purpose of the Overload Start procedure is to inform an NG-RAN node to reduce the signalling load towards the concerned AMF. The procedure uses non-UE associated signalling.

8.7.7.2 Successful Operation



Figure 8.7.7.2-1: Overload start

The NG-RAN node receiving the OVERLOAD START message shall assume the AMF from which it receives the message as being in an overloaded state.

If the *Overload Action* IE is included the *AMF Overload Response* IE within the OVERLOAD START message, the NG-RAN node shall use it to identify the related signalling traffic. When the *Overload Action* IE is set to

- "reject RRC connection establishments for non-emergency mobile originated data transfer" (i.e., reject traffic corresponding to RRC cause "mo-data", "mo-SMS", "mo-VideoCall" and "mo-VoiceCall" in TS 38.331 [18] or "mo-data" and "mo-VoiceCall" in TS 36.331 [21]), or

- "reject RRC connection establishments for signalling" (i.e., reject traffic corresponding to RRC cause "mo-data", "mo-SMS", "mo-signalling", "mo-VideoCall" and "mo-VoiceCall" in TS 38.331 [18] or "mo-data", "mo-signalling" and "mo-VoiceCall" in TS 36.331 [21]), or

- "only permit RRC connection establishments for emergency sessions and mobile terminated services" (i.e., only permit traffic corresponding to RRC cause "emergency" and "mt-Access" in TS 38.331 [18] or in TS 36.331 [21]), or

- "only permit RRC connection establishments for high priority sessions and mobile terminated services" (i.e., only permit traffic corresponding to RRC cause "highPriorityAccess", "mps-PriorityAccess", "mcs-PriorityAccess" and "mt-Access" in TS 38.331 [18] or "highPriorityAccess", "mo-ExceptionData" and "mt-Access" in TS 36.331 [21]),

the NG-RAN node shall:

- if the *AMF Traffic Load Reduction Indication* IE is included in the OVERLOAD START message, reduce the signalling traffic by the indicated percentage,

- otherwise ensure that only the signalling traffic not indicated as to be rejected is sent to the AMF.

If the *Overload Start NSSAI List* IE is included in the OVERLOAD START message, the NG-RAN node shall:

- if the *Slice Traffic Load Reduction Indication* IE is present, reduce the signalling traffic by the indicated percentage for the UE(s) whose requested NSSAI only include S-NSSAI(s) contained in the *Overload Start NSSAI List* IE, and the signalling traffic indicated as to be reduced by the *Overload Action* IE in the *Slice Overload Response* IE if the IE is present,

- otherwise ensure that only the signalling traffic from UE(s) whose requested NSSAI includes S-NSSAI(s) other than the ones contained in the *Overload Start NSSAI List* IE, or the signalling traffic not indicated as to be reduced by the *Overload Action* IE in the *Slice Overload Response* IE for the UE(s) if the requested NSSAI matched, is sent to the AMF.

If the *GUAMI List* IE is present, the NG-RAN node shall, if supported, use this information to identify to which traffic the above defined rejections shall be applied.

If an overload action is ongoing and the NG-RAN node receives a further OVERLOAD START message, the NG-RAN node shall replace the ongoing overload action with the newly requested one. If the *GUAMI List* IE is present, the NG-RAN node replaces applicable ongoing actions according to TS 38.300 [8], clause 4.10.2.

If an overload control is ongoing and the NG-RAN node receives a further OVERLOAD START message, the NG-RAN node shall replace the contents of the previously received information with the new one.

8.7.7.3 Abnormal Conditions

Void.

8.7.8 Overload Stop

8.7.8.1 General

The purpose of the Overload Stop procedure is to signal to an NG-RAN node the AMF is connected to that the overload situation at the AMF has ended and normal operation shall resume. The procedure uses non-UE associated signalling.

8.7.8.2 Successful Operation



Figure 8.7.8.2-1: Overload stop

The NG-RAN node receiving the OVERLOAD STOP message shall assume that the overload situation at the AMF from which it receives the message has ended and shall resume normal operation for the applicable traffic towards this AMF.

If the *GUAMI List* IE is present, the NG-RAN node shall, if supported, use this information to identify which traffic to cease rejecting, and proceed according to TS 38.300 [8], clause 4.10.2. If no overload action is ongoing for a specific GUAMI value, the NG-RAN node shall ignore this value.

8.7.8.3 Abnormal Conditions

Void.

8.7.9 NG Removal

8.7.9.1 General

The purpose of the NG Removal procedure is to remove the interface between the NG-RAN node and the AMF in a controlled manner. If successful, this procedure erases any existing application level configuration data in the two nodes.

The procedure uses non-UE associated signaling.

8.7.9.2 Successful Operation

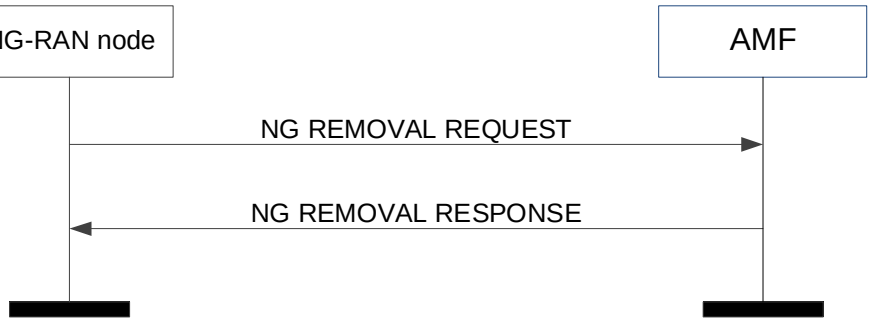


Figure 8.7.9.2-1: NG Removal, successful operation

The NG-RAN node initiates the procedure by sending the NG REMOVAL REQUEST message to the AMF. Upon reception of the NG REMOVAL REQUEST message, the AMF shall reply with the NG REMOVAL RESPONSE message. After receiving the NG REMOVAL RESPONSE message, the NG-RAN node shall initiate removal of the TNL association towards the AMF and may remove all resources associated with that interface. The AMF may then remove all resources associated with the NG-RAN node.

If the *Extended AMF Name* IE is included in the NG REMOVAL RESPONSE message, the NG-RAN node may use this IE as a human readable name of the AMF and shall ignore the *AMF Name* IE.

8.7.9.3 Unsuccessful Operation

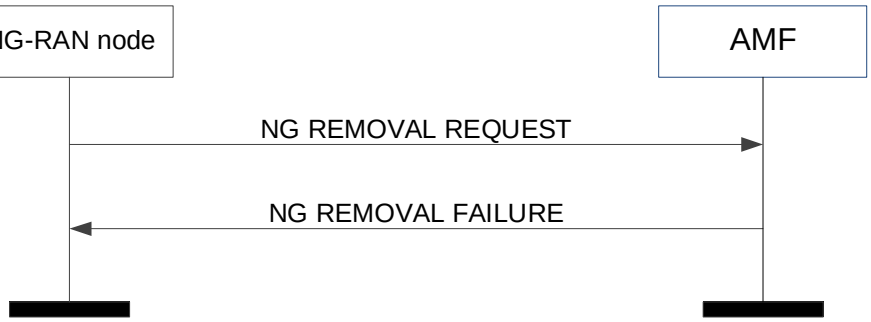


Figure 8.7.9.3-1: NG Removal, unsuccessful operation

If the AMF cannot accept to remove the interface with NG-RAN node, it shall respond with an NG REMOVAL FAILURE message with an appropriate cause value.

8.7.9.4 Abnormal Conditions

Void.

8.8 Configuration Transfer Procedures

8.8.1 Uplink RAN Configuration Transfer

8.8.1.1 General

The purpose of the Uplink RAN Configuration Transfer procedure is to transfer RAN configuration information from the NG-RAN node to the AMF. The AMF does not interpret the transferred RAN configuration information. This procedure uses non-UE associated signalling.

8.8.1.2 Successful Operation

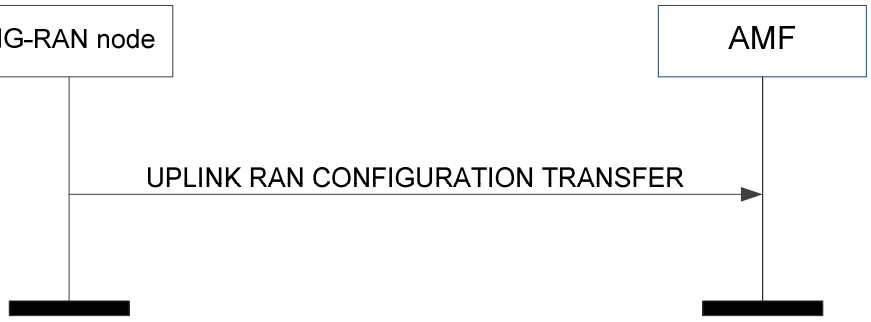


Figure 8.8.1.2-1: Uplink RAN configuration transfer

The NG-RAN node initiates the procedure by sending the UPLINK RAN CONFIGURATION TRANSFER message to the AMF.

If the AMF receives the *SON Configuration Transfer* IE, it shall transparently transfer the *SON Configuration Transfer* IE towards the NG-RAN node indicated in the *Target RAN Node ID* IE which is included in the *SON Configuration Transfer* IE. If the *NR CGI* IE is included within the *Target RAN Node ID* IE, the AMF shall, if supported, ignore the *Global RAN Node ID* IE within the *Target RAN Node ID* IE, and use it to identify the target gNB as described in TS 38.300 [8].

If the AMF receives the *EN-DC SON Configuration Transfer* IE, it shall transparently transfer the *EN-DC SON Configuration Transfer* IE towards an MME serving the eNB indicated in the *Target eNB-ID* IE which is included in the *EN-DC SON Configuration Transfer* IE.

If the AMF receives the *Inter-system SON Configuration Transfer* IE, it shall transparently transfer the *Inter-system SON Configuration Transfer* IE towards an MME serving the eNB indicated in the *Target eNB-ID* IE which is included in the *Inter-system SON Configuration Transfer* IE.

8.8.1.3 Abnormal Conditions

Void.

8.8.2 Downlink RAN Configuration Transfer

8.8.2.1 General

The purpose of the Downlink RAN Configuration Transfer procedure is to transfer RAN configuration information from the AMF to the NG-RAN node. This procedure uses non-UE associated signalling.

8.8.2.2 Successful Operation

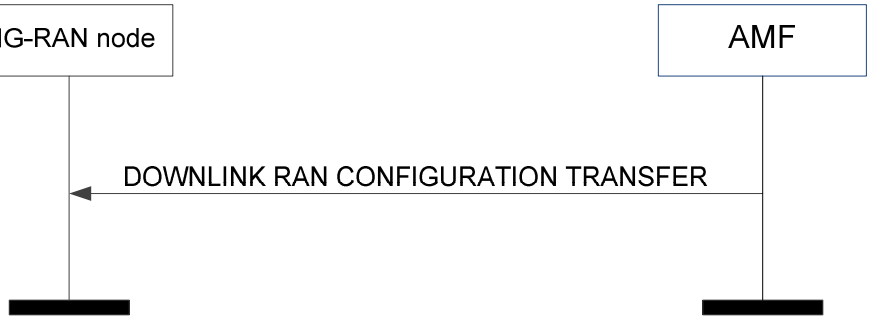


Figure 8.8.2.2-1: Downlink RAN configuration transfer

The procedure is initiated with an DOWNLINK RAN CONFIGURATION TRANSFER message sent from the AMF to the NG-RAN node.

If the NG-RAN node receives, in the *SON Configuration Transfer* IE or in the *EN-DC SON Configuration Transfer* IE, the *SON Information* IE containing the *SON Information Request* IE, it may transfer back the requested information either towards the NG-RAN node indicated in the *Source RAN Node ID* IE of the *SON Configuration Transfer* IE or towards an eNB indicated in the *Source eNB-ID* IE of the *EN-DC SON Configuration Transfer* IE by initiating the Uplink RAN Configuration Transfer procedure.

If the NG-RAN node receives, in the *SON Configuration Transfer* IE, the *Xn TNL Configuration Info* IE containing the *Xn Extended Transport Layer Addresses* IE, it may use it as part of its ACL functionality configuration actions, if such ACL functionality is deployed.

If the NG-RAN node receives, in the *SON Configuration Transfer* IE, the *SON Information* IE containing the *SON Information Reply* IE including the *Xn TNL Configuration Info* IE as an answer to a former request, it may use it to initiate the Xn TNL establishment.

In case the *IP-Sec Transport Layer Address* IE is present and the *GTP Transport Layer Addresses* IE within the *Xn Extended Transport Layer Addresses* IE is not empty, GTP traffic is conveyed within an IP-Sec tunnel terminated at the IP-Sec tunnel endpoint given in the *IP-Sec Transport Layer Address* IE.

In case the *IP-Sec Transport Layer Address* IE is not present, GTP traffic is terminated at the endpoints given by the list of addresses in the *Xn GTP Transport Layer Addresses* IE within the *Xn Extended Transport Layer Addresses* IE.

In case the *Xn GTP Transport Layer Addresses* IE is empty and the *IP-Sec Transport Layer Address* IE is present, SCTP traffic is conveyed within an IP-Sec tunnel terminated at the IP-Sec tunnel endpoint given in the *IP-Sec Transport Layer Address* IE, within the *Xn Extended Transport Layer Addresses* IE.

In case the *Xn SCTP Transport Layer Addresses* IE is present and the *IP-Sec Transport Layer Address* IE is also present, the concerned SCTP traffic is conveyed within an IP-Sec tunnel terminated at the IP-Sec tunnel endpoint given in this *IP-Sec Transport Layer Address* IE, within the *Xn Extended Transport Layer Addresses* IE.

If the NG-RAN node receives the *SON Information* IE containing the *SON Information Report* IE it may use it as specified in TS 38.300 [8].

If the NG-RAN node receives the *Inter-system SON Information* IE containing the *Inter-system SON Information Report* IE it may use it as specified in TS 38.300 [8].

If the NG-RAN node receives the *Inter-system SON Information* IE containing the *Inter-system SON Information Request* IE or the *Inter-system SON Information Reply* IE, it may use it as specified in TS 38.300 [8]. If the *Reporting System* IE in the *Inter-system SON Information Request* IE is set to "No Reporting", the DOWNLINK RAN CONFIGURATION TRANSFER message shall be ignored.

If the NG-RAN node is configured to use one IPsec tunnel for all NG and Xn traffic (IPsec star topology) then the traffic to the peer NG-RAN node shall be routed through this IPsec tunnel and the *IP-Sec Transport Layer Address* IE shall be ignored.

Interaction with the Uplink RAN Configuration Transfer procedure:

If the NG-RAN node receives the *SON Configuration Transfer* IE containing the *Requested TNL Information* IE and the *SON Information Request* IE set to "Xn TNL Configuration Info", the NG-RAN node shall, if supported, take the PLMN ID contained in the *Requested TNL Information* IE into account and include Xn TNL configuration information within the UPLINK RAN CONFIGURATION TRANSFER message associated with this PLMN.

8.8.2.3 Abnormal Conditions

If the NG-RAN node receives the *SON Configuration Transfer* IE containing the *Requested TNL Information* IE and the *SON Information Request* IE set to "Xn TNL Configuration Info", and If the PLMN ID within the *Requested TNL Information* IE neither matches the PLMN ID included in the Selected TAI in the *Target RAN Node ID SON* IE in the *SON Configuration Transfer* IE nor the PLMN ID included in the Selected TAI in the *Source RAN Node-ID* IE in the *SON Configuration Transfer* IE, the behaviour of the receiving NG-RAN node is not specified.

8.9 Warning Message Transmission Procedures

8.9.1 Write-Replace Warning

8.9.1.1 General

The purpose of Write-Replace Warning procedure is to start or overwrite the broadcasting of warning messages. The procedure uses non UE-associated signalling.

8.9.1.2 Successful Operation

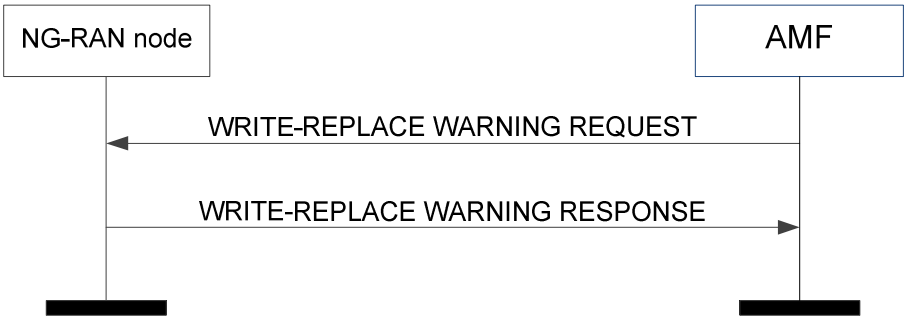


Figure 8.9.1.2-1: Write-Replace Warning procedure: successful operation

The AMF initiates the procedure by sending a WRITE-REPLACE WARNING REQUEST message to the NG-RAN node.

Upon receipt of the WRITE-REPLACE WARNING REQUEST message, the NG-RAN node shall prioritise its resources to process the warning message.

If, in a certain area, broadcast of a warning message is already ongoing and the NG-RAN node receives a WRITE-REPLACE WARNING REQUEST message with *Message Identifier* IE and/or *Serial Number* IE which are different from those in the warning message being broadcast, and if the *Concurrent Warning Message Indicator* IE is not present, the NG-RAN node shall replace the warning message being broadcast with the newly received one for that area.

If the NG-RAN node receives a WRITE-REPLACE WARNING REQUEST message with a warning message identified by the *Message Identifier* IE and *Serial Number* IE and if there are no prior warning messages being broadcast in any of the warning areas indicated in the *Warning Area List* IE, the NG-RAN node shall broadcast the received warning message for those area(s).

If, in a certain area, broadcast of one or more warning messages are already ongoing and the NG-RAN node receives a WRITE-REPLACE WARNING REQUEST message with a *Message Identifier* IE and/or *Serial Number* IE which are different from those in any of the warning messages being broadcast, and if the *Concurrent Warning Message Indictor* IE is present, the NG-RAN node shall schedule the received warning message for broadcast, for that area.

If the *Concurrent Warning Message Indicator* IE is present and if a value "0" is received in the *Number of Broadcasts Requested* IE, the NG-RAN node shall broadcast the received warning message indefinitely until requested otherwise to stop broadcasting, except if the *Repetition Period* IE is set to "0".

If, in a certain area, broadcast of one or more warning messages are already ongoing and the NG-RAN node receives a WRITE-REPLACE WARNING REQUEST message with *Message Identifier* IE and *Serial Number* IE which correspond to one of the warning messages already being broadcast in that area, the NG-RAN node shall not start a new broadcast or replace an existing one but it shall still reply by sending a WRITE-REPLACE WARNING RESPONSE message which includes the *Broadcast Completed Area List* IE set according to the ongoing broadcast.

If the *Warning Area List* IE is not included in the WRITE-REPLACE WARNING REQUEST message, the NG-RAN node shall broadcast the indicated message in all of the cells within the NG-RAN node.

If the *Warning Type* IE is included in the WRITE-REPLACE WARNING REQUEST message, the NG-RAN node shall broadcast the Primary Notification irrespective of the setting of the *Repetition Period* IE and the *Number of Broadcasts Requested* IE, and process the Primary Notification according to TS 36.331 [21] and TS 38.331 [18].

If the *Data Coding Scheme* IE and the *Warning Message Contents* IE are both included in the WRITE-REPLACE WARNING REQUEST message, the NG-RAN node shall schedule a broadcast of the warning message according to the value of the *Repetition Period* IE and the *Number of Broadcasts Requested* IE and process the warning message according to TS 36.331 [21] and TS 38.331 [18].

If the *Warning Area Coordinates* IE is included in the WRITE-REPLACE WARNING REQUEST message, the NG-RAN node shall include this information together with the warning message being broadcast according to TS 36.331 [21] and TS 38.331 [18].

The NG-RAN node acknowledges the WRITE-REPLACE WARNING REQUEST message by sending a WRITE-REPLACE WARNING RESPONSE message to the AMF.

If the *Broadcast Completed Area List* IE is not included in the WRITE-REPLACE WARNING RESPONSE message, the AMF shall consider that the broadcast is unsuccessful in all the cells within the NG-RAN node.

8.9.1.3 Unsuccessful Operation

Not applicable.

8.9.1.4 Abnormal Conditions

If the *Concurrent Warning Message Indicator* IE is not present and if a value "0" is received in the *Number of Broadcasts Requested* IE, the NG-RAN node shall not broadcast the received secondary notification.

If the *Concurrent Warning Message Indicator* IE is included and if a value "0" is received in the *Repetition Period* IE, the NG-RAN node shall not broadcast the received warning message except if the *Number of Broadcasts Requested* IE is set to "1".

If the *Concurrent Warning Message Indicator* IE is not included and if a value "0" is received in the *Repetition Period* IE, the NG-RAN node shall not broadcast the received secondary notification except if the *Number of Broadcasts Requested* IE is set to "1".

8.9.2 PWS Cancel

8.9.2.1 General

The purpose of the PWS Cancel procedure is to cancel an already ongoing broadcast of a warning message. The procedure uses non UE-associated signalling.

8.9.2.2 Successful Operation

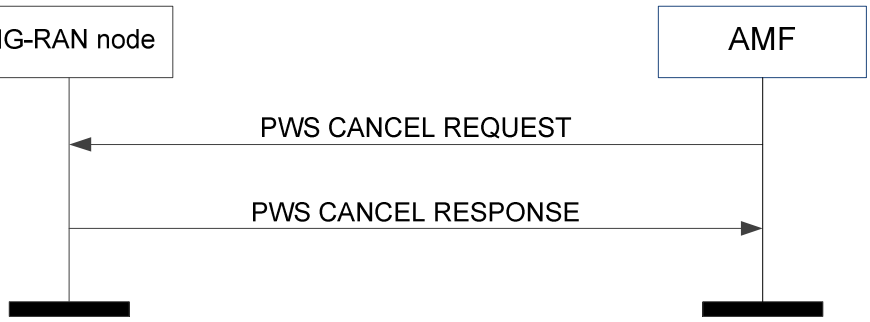


Figure 8.9.2.2-1: PWS Cancel procedure: successful operation

The AMF initiates the procedure by sending a PWS CANCEL REQUEST message to the NG-RAN node.

If the NG-RAN node receives a PWS CANCEL REQUEST message and broadcast of the warning message identified by the *Message Identifier* and *Serial Number* IE is ongoing in an area indicated within the *Warning Area List* IE, the NG-RAN node shall stop broadcasting the warning message within that area and discard the warning message for that area.

If the *Warning Area List* IE is not included in the PWS CANCEL REQUEST message, the NG-RAN node shall stop broadcasting and discard the warning message identified by the *Message Identifier* IE and the *Serial Number* IE in all of the cells in the NG-RAN node.

The NG-RAN node shall acknowledge the PWS CANCEL REQUEST message by sending the PWS CANCEL RESPONSE message, with the *Message Identifier* IE and the *Serial Number* IE copied from the PWS CANCEL REQUEST message and shall, if there is an area to report where an ongoing broadcast was stopped successfully, include the *Broadcast Cancelled Area List* IE.

If an area included in the *Warning Area List* IE in the PWS CANCEL REQUEST message does not appear in the *Broadcast Cancelled Area List* IE, the AMF shall consider that the NG-RAN node had no ongoing broadcast to stop for the same Message Identifier and Serial Number in that area.

If the *Broadcast Cancelled Area List* IE is not included in the PWS CANCEL RESPONSE message, the AMF shall consider that the NG-RAN node had no ongoing broadcast to stop for the same Message Identifier and Serial Number.

If the *Cancel-All Warning Messages Indicator* IE is present in the PWS CANCEL REQUEST message, then the NG-RAN node shall stop broadcasting and discard all warning messages for the area as indicated in the *Warning Area List* IE or in all the cells of the NG-RAN node if the *Warning Area List* IE is not included. The NG-RAN node shall acknowledge the PWS CANCEL REQUEST message by sending the PWS CANCEL RESPONSE message, with the *Message Identifier* IE and the *Serial Number* IE copied from the PWS CANCEL REQUEST message and shall, if there is area to report where an ongoing broadcast was stopped successfully, include the *Broadcast Cancelled Area List* IE with the *Number of Broadcasts* IE set to 0.

8.9.2.3 Unsuccessful Operation

Not applicable.

8.9.2.4 Abnormal Conditions

Void.

8.9.3 PWS Restart Indication

8.9.3.1 General

The purpose of the PWS Restart Indication procedure is to inform the AMF that PWS information for some or all cells of the NG-RAN node may be reloaded from the CBC if needed. The procedure uses non UE-associated signalling.

8.9.3.2 Successful Operation

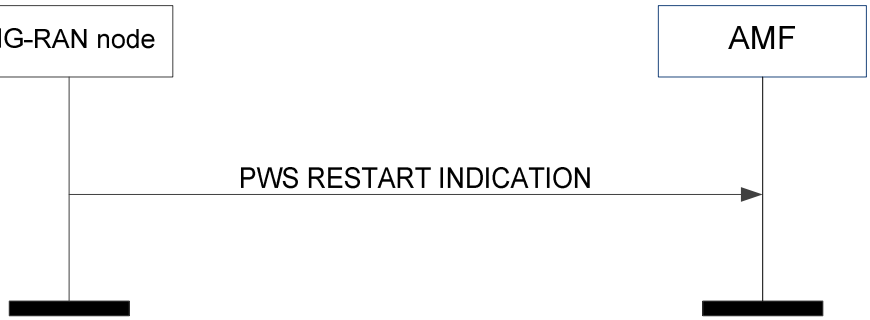


Figure 8.9.3.2-1: PWS restart indication

The NG-RAN node initiates the procedure by sending a PWS RESTART INDICATION message to the AMF. On receipt of a PWS RESTART INDICATION message, the AMF shall act as defined in TS 23.527 [57].

If the Emergency Area ID is available, the NG-RAN node shall also include it in the *Emergency Area ID List for Restart* IE.

8.9.3.3 Abnormal Conditions

Void.

8.9.4 PWS Failure Indication

8.9.4.1 General

The purpose of the PWS Failure Indication procedure is to inform the AMF that ongoing PWS operation for one or more cells of the NG-RAN node has failed. The procedure uses non UE-associated signalling.

8.9.4.2 Successful Operation

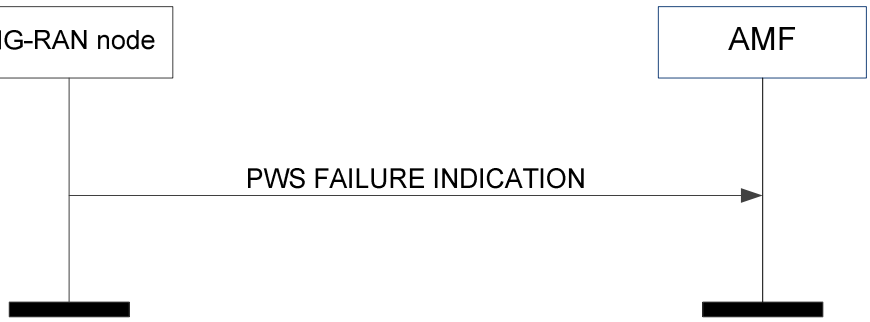


Figure 8.9.4.2-1: PWS failure indication

The NG-RAN node initiates the procedure by sending a PWS FAILURE INDICATION message to the AMF. On receipt of a PWS FAILURE INDICATION message, the AMF shall act as defined in TS 23.041 [22].

8.9.4.3 Abnormal Conditions

Void.

8.10 NRPPa Transport Procedures

8.10.1 General

The purpose of the NRPPa Transport procedures is to carry NRPPa signalling (defined in TS 38.455 [19]) between the NG-RAN node and the LMF over the NG interface.

The Downlink UE Associated NRPPa Transport procedure and the Uplink UE Associated NRPPa Transport procedure use UE-associated signalling. The UE-associated signalling is used to support E-CID Location Information Transfer, Positioning Information Transfer, Measurement Preconfiguration Information Transfer, and Reporting of General Error Situations due to reception of an NRPPa message that utilized UE-associated signalling.

The Downlink Non UE Associated NRPPa Transport procedure and the Uplink Non UE Associated NRPPa Transport procedure use non-UE associated signalling. The non-UE associated signalling is used to support OTDOA Information Transfer, Assistance Information Transfer, TRP Information Transfer, Measurement Information Transfer, PRS Information Transfer, Area-specific Information Transfer, Positioning Data Collection Information Transfer and Reporting of General Error Situations due to reception of an NRPPa message that utilized non-UE associated signalling.

8.10.2 Successful Operations

8.10.2.1 DOWNLINK UE ASSOCIATED NRPPA TRANSPORT

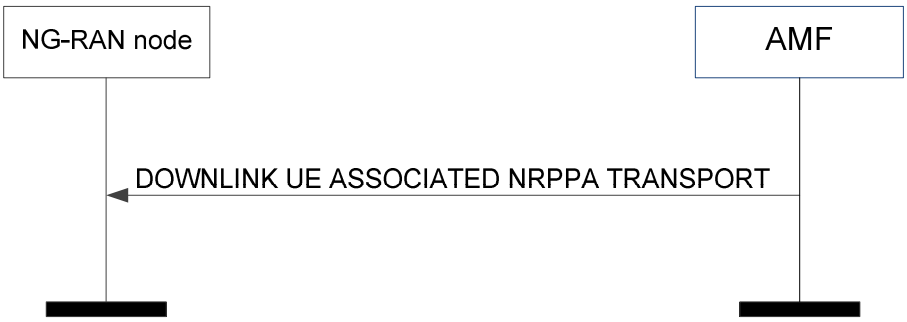


Figure 8.10.2.1-1: Downlink UE-associated NRPPa transport

The AMF initiates the procedure by sending the DOWNLINK UE ASSOCIATED NRPPA TRANSPORT message to the NG-RAN node.

8.10.2.2 UPLINK UE ASSOCIATED NRPPA TRANSPORT

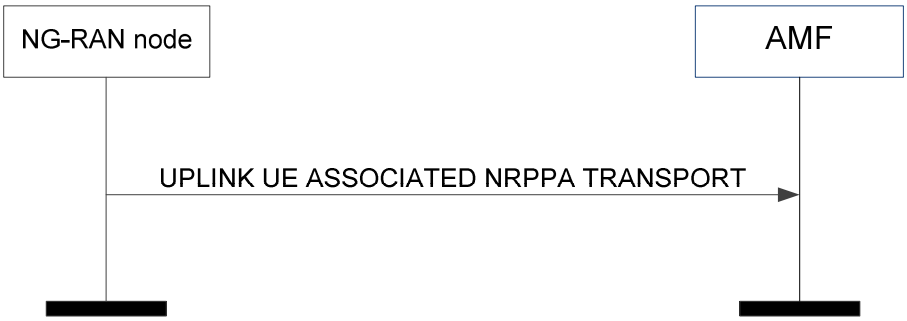


Figure 8.10.2.2-1: Uplink UE-associated NRPPa transport

The NG-RAN node initiates the procedure by sending the UPLINK UE ASSOCIATED NRPPA TRANSPORT message to the AMF.

8.10.2.3 DOWNLINK NON UE ASSOCIATED NRPPA TRANSPORT



Figure 8.10.2.3-1: Downlink non UE-associated NRPPa transport

The AMF initiates the procedure by sending the DOWNLINK NON UE ASSOCIATED NRPPA TRANSPORT message to the NG-RAN node.

8.10.2.4 UPLINK NON UE ASSOCIATED NRPPA TRANSPORT

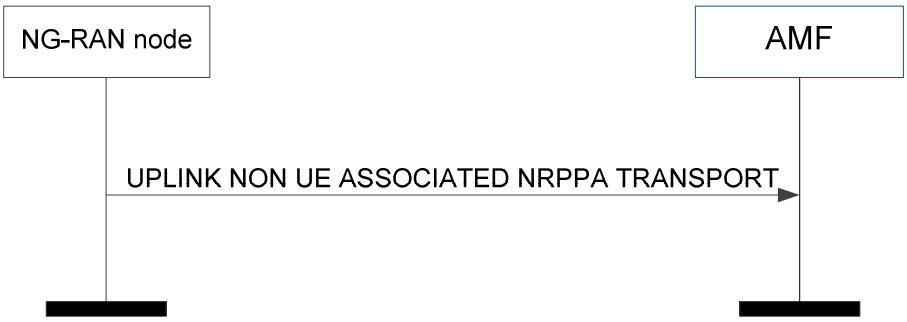


Figure 8.10.2.4-1: Uplink non UE-associated NRPPa transport

The NG-RAN node initiates the procedure by sending the UPLINK NON UE ASSOCIATED NRPPA TRANSPORT message to the AMF.

8.10.3 Unsuccessful Operations

Not applicable.

8.10.4 Abnormal Conditions

If an AMF receives an UPLINK UE ASSOCIATED NRPPA TRANSPORT message with an unknown Routing ID for the UE, the AMF shall ignore the message.

If an AMF receives an UPLINK NON UE ASSOCIATED NRPPA TRANSPORT message indicating an unknown or unreachable Routing ID, the AMF shall ignore the message.

8.11 Trace Procedures

8.11.1 Trace Start

8.11.1.1 General

The purpose of the Trace Start procedure is to allow the AMF to request the NG-RAN node to initiate a trace session for a UE. The procedure uses UE-associated signalling. If no UE-associated logical NG-connection exists, the UE-associated logical NG-connection shall be established as part of the procedure.

8.11.1.2 Successful Operation



Figure 8.11.1.2-1: Trace start

The AMF initiates the procedure by sending a TRACE START message. Upon reception of the TRACE START message, the NG-RAN node shall initiate the requested trace session as described in TS 32.422 [11].

If the *Trace Activation* IE is included in the TRACE START message which includes the *MDT Activation* IE set to "Immediate MDT and Trace", the NG-RAN node shall, if supported, initiate the requested trace session and MDT session as described in TS 32.422 [11].

If the *Trace Activation* IE is included in the TRACE START message which includes the *MDT Activation* IE set to "Immediate MDT Only", "Logged MDT only", the NG-RAN node shall, if supported, initiate the requested MDT session as described in TS 32.422 [11] and the NG-RAN node shall ignore the *Interfaces To Trace* IE and the *Trace Depth* IE.

If the *Trace Activation* IE includes the *MDT Location Information* IE within the *MDT Configuration* IE, the NG-RAN node shall, if supported, store this information and take it into account in the requested MDT session.

If the *Trace Activation* IE is included in the TRACE START message which includes the *MDT Activation* IE set to "Immediate MDT Only", "Logged MDT only" and if the *Signalling Based MDT PLMN List* IE is included in the *MDT Configuration* IE, the NG-RAN node may use it to propagate the MDT Configuration as described in TS 37.320 [41].

If the *Trace Activation* IE includes the *Bluetooth Measurement Configuration* IE within the *MDT Configuration* IE, the NG-RAN node shall, if supported, take it into account for MDT Configuration as described in TS 37.320 [41].

If the *Trace Activation* IE includes the *WLAN Measurement Configuration* IE within the *MDT Configuration* IE, the NG-RAN node shall, if supported, take it into account for MDT Configuration as described in TS 37.320 [41].

If the *Trace Activation* IE includes the *Sensor Measurement Configuration* IE within the *MDT Configuration* IE, the NG-RAN node shall, if supported, take it into account for MDT Configuration as described in TS 37.320 [41].

If the *Trace Activation* IE includes the *MDT Configuration* IE and if the NG-RAN node is a gNB at least the *MDT Configuration-NR* IE shall be present, while if the NG-RAN node is an ng-eNB at least the *MDT Configuration-EUTRA* IE shall be present.

If the *PNI-NPN Area Scope of MDT* IE is included in the MDT Configuration-NR IE included in the TRACE START message, the NG-RAN node shall, if supported, use it to derive the MDT area scope for MDT measurement collection in PNI-NPN areas. Upon reception of the *PNI-NPN Area Scope of MDT* IE, the NG-RAN node shall consider that the area scope for MDT measurement collection in PNI-NPN areas is defined only by the areas included in the *PNI-NPN Area Scope of MDT* IE.

If the *Trace Activation* IE includes the *MN Only MDT Collection* IE and the *MN Only MDT Collection* IE is set to "MN only", the NG-RAN node shall, if supported, consider that the *MDT Configuration-NR* IE or the *MDT Configuration-EUTRA* IE is only applicable for the MN if the UE is configured with MR-DC.

If the *Network Slice Area Scope of MDT* IE is included in the MDT Configuration-NR IE included in the TRACE START message, the NG-RAN node shall, if supported, use it to derive the MDT area scope for MDT measurement collection. Upon reception of the *Network Slice Area Scope of MDT* IE, the NG-RAN node shall consider that the area scope for MDT measurement collection is defined only by the *Network Slice Area Scope of MDT* IE and the *Area Scope of MDT* IE.

Interactions with other procedures:

If the NG-RAN node is not able to initiate the trace session due to ongoing handover of the UE to another NG-RAN node, the NG-RAN node shall initiate a Trace Failure Indication procedure with the appropriate cause value.

8.11.1.3 Abnormal Conditions

If the *PNI-NPN Area Scope of MDT* IE is included in the *MDT Configuration-NR* IE in the TRACE START message, and the *Area Scope of MDT* IE is set to "PNI-NPN Based MDT", the NG-RAN node shall, if supported, use the *Area Scope of MDT* IE to derive the MDT area scope for MDT measurement collection in PNI-NPN areas, and ignore the *PNI-NPN Area Scope of MDT* IE.

If the *Network Slice Area Scope of MDT* IE is included in the *MDT Configuration-NR* IE in the TRACE START message, and the *MDT Activation* IE is set to "Logged MDT only", the NG-RAN node shall ignore the *Network Slice Area Scope of MDT* IE.

8.11.2 Trace Failure Indication

8.11.2.1 General

The purpose of the Trace Failure Indication procedure is to allow the NG-RAN node to inform the AMF that a Trace Start procedure or a Deactivate Trace procedure or an ongoing trace has failed due to an interaction with a handover procedure or, while the UE is in RRC_INACTIVE state, due to reception of multiple trace activations. The procedure uses UE-associated signalling.

8.11.2.2 Successful Operation

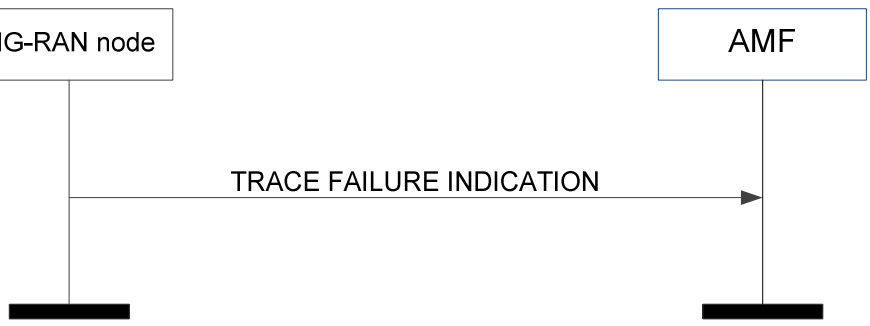


Figure 8.11.2.2-1: Trace failure indication

The NG-RAN node initiates the procedure by sending a TRACE FAILURE INDICATION message. Upon reception of the TRACE FAILURE INDICATION message, the AMF shall take appropriate actions based on the failure reason indicated by the *Cause* IE.

8.11.2.3 Abnormal Conditions

Void.

8.11.3 Deactivate Trace

8.11.3.1 General

The purpose of the Deactivate Trace procedure is to allow the AMF to request the NG-RAN node to stop the trace session for the indicated trace reference. The procedure uses UE-associated signalling.

8.11.3.2 Successful Operation



Figure 8.11.3.2-1: Deactivate trace

The AMF initiates the procedure by sending a DEACTIVATE TRACE message to the NG-RAN node as described in TS 32.422 [11]. Upon reception of the DEACTIVATE TRACE message, the NG-RAN node shall stop the trace session for the indicated trace reference in the *NG-RAN Trace ID* IE.

Interactions with other procedures:

If the NG-RAN node is not able to stop the trace session due to ongoing handover of the UE to another NG-RAN node, the NG-RAN node shall initiate a Trace Failure Indication procedure with the appropriate cause value.

8.11.3.3 Abnormal Conditions

Void.

8.11.4 Cell Traffic Trace

8.11.4.1 General

The purpose of the Cell Traffic Trace procedure is to send the allocated Trace Recording Session Reference and the Trace Reference to the AMF. The procedure uses UE-associated signalling.

8.11.4.2 Successful Operation

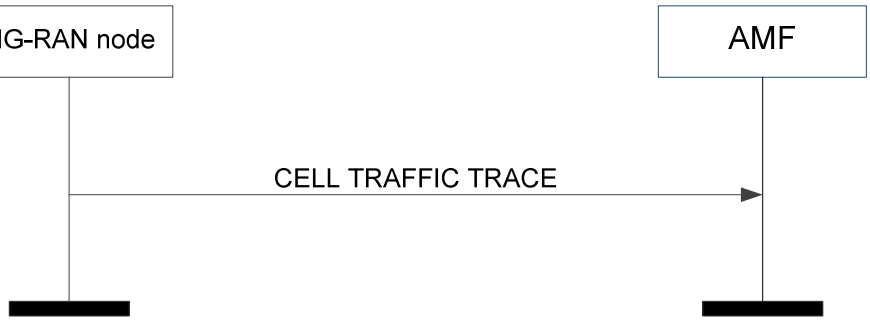


Figure 8.11.4.2-1: Cell traffic trace

The NG-RAN node initiates the procedure by sending a CELL TRAFFIC TRACE message.

If the *Privacy Indicator* IE is included in the message, the AMF shall take the information into account for anonymization of MDT data as described in TS 32.422 [11].

8.11.4.3 Abnormal Conditions

Void.

8.12 Location Reporting Procedures

8.12.1 Location Reporting Control

8.12.1.1 General

The purpose of the Location Reporting Control procedure is to allow the AMF to request the NG-RAN node to report the UE's current location, or the UE's last known location with time stamp, or the UE's presence in the area of interest while in CM-CONNECTED state, or the Aerial UE's flight information as specified in TS 23.501 [9] and TS 23.502 [10]. The procedure uses UE-associated signalling.

8.12.1.2 Successful Operation



Figure 8.12.1.2-1: Location reporting control

The AMF initiates the procedure by sending a LOCATION REPORTING CONTROL message to the NG-RAN node. On receipt of the LOCATION REPORTING CONTROL message the NG-RAN node shall perform the requested location reporting control action for the UE.

The *Location Reporting Request Type* IE indicates to the NG-RAN node whether:

- to report directly;
- to report upon change of serving cell;

- to report UE presence in the area of interest;
- to stop reporting at change of serving cell;
- to stop reporting UE presence in the area of interest;
- to cancel location reporting for the UE;
- to report upon change of serving cell and to report UE presence in the area of interest;
- to report flight information for the Aerial UE;
- to cancel flight information reporting for the Aerial UE.

If the *Area Of Interest List* IE is included in the *Location Reporting Request Type* IE in the LOCATION REPORTING CONTROL message, the NG-RAN node shall store this information and use it to track the UE's presence in the area of interest as defined in TS 23.502 [10].

NOTE: The NG-RAN reports the UE presence for all set of Location Reporting Reference IDs for inter-NG-RAN node handover.

If the *Additional Location Information* IE is included in the LOCATION REPORTING CONTROL message and set to "Include PSCell" then, if Dual Connectivity is activated, the NG-RAN node shall include the current PSCell in the report. If a report upon change of serving cell is requested, the NG-RAN node shall provide the report also whenever the UE changes the PSCell, and when Dual Connectivity is activated.

If reporting upon change of serving cell is requested, the NG-RAN node shall send a report immediately and shall send a report whenever the UE's location changes.

If the *Event Type* IE is set to "stop UE presence in the area of interest", and if the *Additional Cancelled Location Reporting Reference ID List* IE is included in the *Location Reporting Request Type* IE within the LOCATION REPORTING CONTROL message, the NG-RAN node shall, if supported, stop reporting UE presence for all received Location Reporting Reference IDs.

If the *Event Type* IE is present as "report aerial UE flight information", and the *Aerial UE Flight Information report control* IE is included in the *Location Reporting Request Type* IE in the LOCATION REPORTING CONTROL message, the NG-RAN node shall, if supported, store this information and use it to report the aerial UE flight information as defined in TS 23.502 [10].

8.12.1.3 Abnormal Conditions

Interactions with Location Reporting Failure Indication procedure:

If the NG-RAN node receives a LOCATION REPORTING CONTROL message containing several *Location Reporting Reference ID* IE set to the same value, the NG-RAN node shall send the LOCATION REPORTING FAILURE INDICATION message with an appropriate cause value.

If the *Location Reporting Request Type* IE in the received LOCATION REPORTING CONTROL message contains the *Event Type* IE set to neither "UE presence in the area of interest" nor "change of serving cell and UE presence in the area of interest", but the *Area of Interest List* IE is present, the NG-RAN node shall ignore the *Area of Interest List* IE. and proceed with the Location Reporting Procedure.

8.12.2 Location Reporting Failure Indication

8.12.2.1 General

The purpose of the Location Reporting Failure Indication procedure is to allow the NG-RAN node to inform the AMF that the location reporting request contained in the Location Reporting Control procedure, the Handover Resource Allocation procedure or the Initial Context Setup procedure has failed. The procedure is also used to inform the AMF in case an ongoing aerial UE flight information reporting is failed. The procedure uses UE-associated signalling.

8.12.2.2 Successful Operation



Figure 8.12.2.2-1: Location reporting failure indication

The NG-RAN node initiates the procedure by sending a LOCATION REPORTING FAILURE INDICATION message to the AMF. Upon reception of the LOCATION REPORTING FAILURE INDICATION message the AMF shall, based on the failure reason indicated by the *Cause* IE, take appropriate action.

If an ongoing aerial UE flight information reporting is failed, the NG-RAN node initiates the procedure by sending a LOCATION REPORTING FAILURE INDICATION message to the AMF. Upon reception of the LOCATION REPORTING FAILURE INDICATION message, the AMF shall, based on the *Aerial UE Flight Information Ongoing Reporting Failed* IE, take appropriate action according to TS 23.501 [9].

8.12.2.3 Abnormal Conditions

Void.

8.12.3 Location Report

8.12.3.1 General

The purpose of the Location Report procedure is to provide the UE's current location, the UE's last known location with time stamp, or the UE's presence in the area of interest to the AMF. The procedure uses UE-associated signalling. For Aerial UE, the Location Reporting procedure is to provide the UE's flight formation.

8.12.3.2 Successful Operation



Figure 8.12.3.2-1: Location report

The NG-RAN node initiates the procedure by sending a LOCATION REPORT message to the AMF. The LOCATION REPORT message may be used as a response to the LOCATION REPORTING CONTROL message.

8.12.3.3 Abnormal Conditions

Void.

8.13 UE TNLA Binding Procedures

8.13.1 UE TNLA Binding Release

8.13.1.1 General

The purpose of the UE TNLA Binding Release procedure is to request the NG-RAN node to release the NGAP UE TNLA binding, while requesting the NG-RAN node to maintain NG-U (user plane connectivity) and UE context information as specified in TS 23.502 [10]. The procedure uses UE-associated signalling.

8.13.1.2 Successful Operation



Figure 8.13.1.2-1: UE TNLA binding release request

At reception of the UE TNLA BINDING RELEASE REQUEST message, the NG-RAN node shall release the UE TNLA binding for the UE indicated in the UE TNLA BINDING RELEASE REQUEST message. The NG-RAN node shall keep the NG-U (user plane connectivity) and UE context information for the UE, and behave according to TS 23.502 [10].

8.13.1.3 Abnormal Conditions

Void.

8.14 UE Radio Capability Management Procedures

8.14.1 UE Radio Capability Info Indication

8.14.1.1 General

The purpose of the UE Radio Capability Info Indication procedure is to enable the NG-RAN node to provide to the AMF UE radio capability-related information. The procedure uses UE-associated signalling.

8.14.1.2 Successful Operation

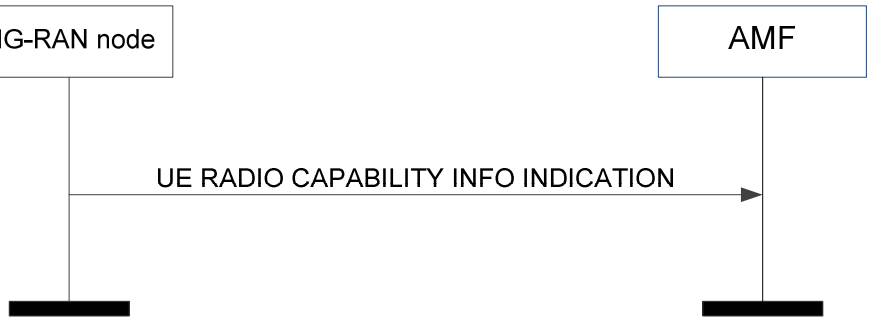


Figure 8.14.1.2-1: UE radio capability info indication

The NG-RAN node controlling a UE-associated logical NG connection initiates the procedure by sending a UE RADIO CAPABILITY INFO INDICATION message to the AMF including the UE radio capability information.

The UE RADIO CAPABILITY INFO INDICATION message may also include paging specific UE radio capability information within the *UE Radio Capability for Paging* IE. If the *UE Radio Capability for Paging* IE includes the *UE Radio Capability for Paging of NR* IE and the *UE Radio Capability for Paging of E-UTRA* IE, the AMF shall, if supported, use it as specified in TS 23.501 [9].

The UE radio capability information received by the AMF shall replace previously stored corresponding UE radio capability information in the AMF for the UE, as described in TS 23.501 [9].

If the UE RADIO CAPABILITY INFO INDICATION message includes the *UE Radio Capability – E-UTRA Format* IE, the AMF shall, if supported, use it as specified in TS 23.501 [9].

If the UE RADIO CAPABILITY INFO INDICATION message includes the *XR Device with 2Rx* IE, the AMF shall, if supported, store this information and use it accordingly.

8.14.1.3 Abnormal Conditions

Void.

8.14.2 UE Radio Capability Check

8.14.2.1 General

The purpose of the UE Radio Capability Check procedure is for the AMF to request the NG-RAN node to derive and provide an indication to the AMF on whether the UE radio capabilities are compatible with the network configuration for IMS voice. The procedure uses UE-associated signalling.

8.14.2.2 Successful Operation

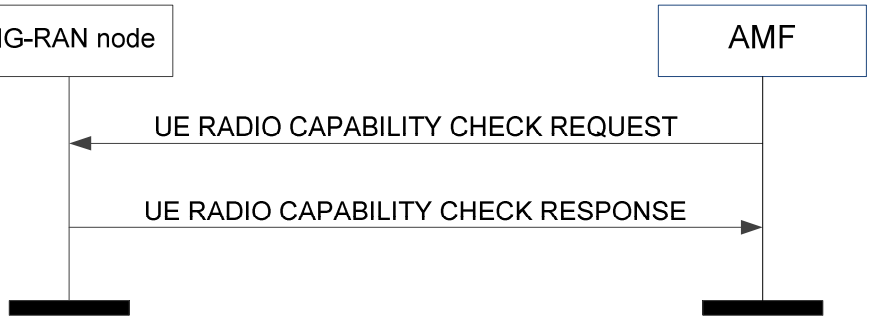


Figure 8.14.2.2-1: UE radio capability check procedure: successful operation

The AMF initiates the procedure by sending a UE RADIO CAPABILITY CHECK REQUEST message. If the UE-associated logical NG-connection is not established, the AMF shall allocate a unique AMF UE NGAP ID to be used for the UE and include the *AMF UE NGAP ID* IE in the UE RADIO CAPABILITY CHECK REQUEST message; by receiving the *AMF UE NGAP ID* IE in the UE RADIO CAPABILITY CHECK REQUEST message, the NG-RAN node establishes the UE-associated logical NG-connection.

Upon receipt of the UE RADIO CAPABILITY CHECK REQUEST message, the NG-RAN node checks whether the UE radio capabilities are compatible with the network configuration for IMS voice, and responds with a UE RADIO CAPABILITY CHECK RESPONSE message, as defined in TS 23.502 [10].

If the *UE Radio Capability* IE is contained in the UE RADIO CAPABILITY CHECK REQUEST message, the NG-RAN node shall use it to determine the value of the *IMS Voice Support Indicator* IE to be included in the UE RADIO CAPABILITY CHECK RESPONSE message.

If the UE RADIO CAPABILITY CHECK REQUEST message contains the *UE Radio Capability ID* IE, the NG-RAN node shall, if supported, use it as specified in TS 23.501 [9] and TS 23.502 [10].

Interactions with UE Radio Capability Info Indication procedure:

If the UE RADIO CAPABILITY CHECK REQUEST message is received with neither the *UE Radio Capability* IE nor the *UE Radio Capability ID* IE, and there is no UE Radio Capability information available in the NG-RAN node, the NG-RAN node shall, if supported, request the UE Radio Capability information from the UE, and send it to the AMF via the UE RADIO CAPABILITY INFO INDICATION message, as specified in TS 23.501 [9].

8.14.2.3 Unsuccessful Operation

Not applicable.

8.14.2.4 Abnormal Conditions

Void.

8.14.3 UE Radio Capability ID Mapping

8.14.3.1 General

The purpose of the UE Radio Capability ID Mapping procedure is for the NG-RAN node to request from the AMF UE Radio Capability information mapped to the UE Radio Capability ID.

The procedure uses non UE-associated signalling.

8.14.3.2 Successful Operation

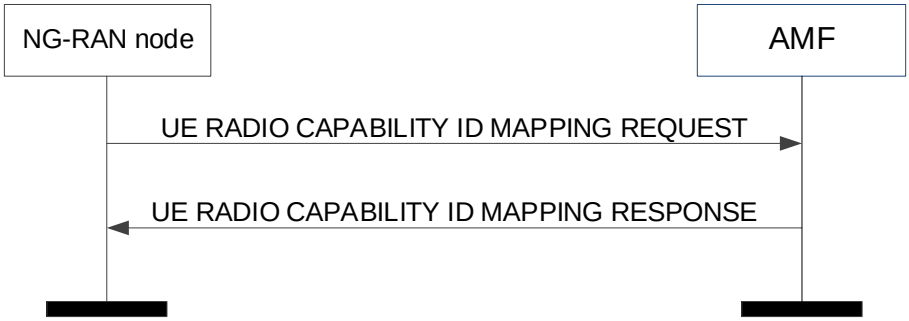


Figure 8.14.3.2-1: UE Radio Capability ID Mapping procedure: successful operation

The NG-RAN node initiates the procedure by sending a UE RADIO CAPABILITY ID MAPPING REQUEST message.

Upon receipt of the UE RADIO CAPABILITY ID MAPPING REQUEST message, the AMF shall provide within the UE RADIO CAPABILITY ID MAPPING RESPONSE message the UE Radio Capability information mapped to the UE Capability ID indicated in the UE RADIO CAPABILITY ID MAPPING REQUEST message.

8.14.3.3 Unsuccessful Operation

Not applicable.

8.14.3.4 Abnormal Conditions

Void.

8.15 Data Usage Reporting Procedures

8.15.1 Secondary RAT Data Usage Report

8.15.1.1 General

The purpose of the Secondary RAT Data Usage Report procedure is to provide information on the used resources of the secondary RAT (e.g. NR resources during MR-DC operation) as specified in TS 23.501 [9]. The procedure uses UE-associated signalling.

8.15.1.2 Successful Operation

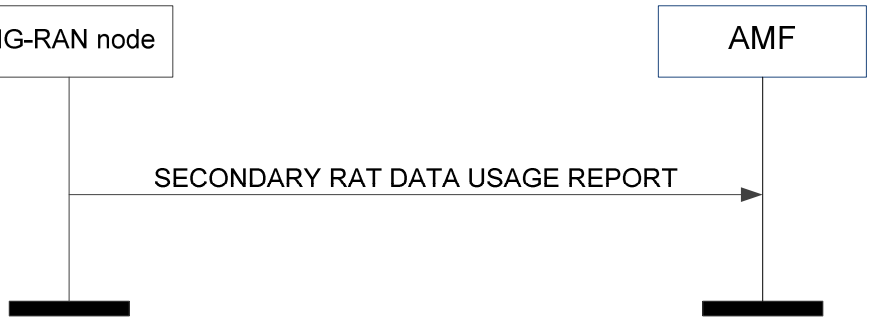


Figure 8.15.1.2-1: Secondary RAT data usage report

The NG-RAN node initiates the procedure by sending the SECONDARY RAT DATA USAGE REPORT message to the AMF.

If the *Handover Flag* IE is included in the SECONDARY RAT DATA USAGE REPORT message, it indicates that for each PDU session the AMF should buffer the *Secondary RAT Data Usage Report Transfer* IE since the secondary RAT data usage report is sent due to handover as defined in TS 23.502 [10].

For each PDU session for which the *Secondary RAT Usage Information List* IE is included in the *Secondary RAT Data Usage Transfer* IE, the SMF shall handle this information as specified in TS 23.502 [10].

The NG-RAN node shall, if supported, report in the SECONDARY RAT DATA USAGE REPORT message location information of the UE in the *User Location Information* IE.

8.15.1.3 Abnormal Conditions

Void.

8.16 RIM Information Transfer Procedures

8.16.1 Uplink RIM Information Transfer

8.16.1.1 General

The purpose of the Uplink RIM Information Transfer procedure is to transfer RIM information from the NG-RAN node to the AMF. The AMF does not interpret the transferred RIM information. This procedure uses non-UE associated signalling.

8.16.1.2 Successful Operation



Figure 8.16.1.2-1: Uplink RIM Information Transfer

The NG-RAN node initiates the procedure by sending an UPLINK RIM INFORMATION TRANSFER message to the AMF.

Upon reception of the UPLINK RIM INFORMATION TRANSFER message, the AMF shall transparently transfer it towards the NG-RAN node indicated in the *Target RAN Node ID* IE.

8.16.1.3 Abnormal Conditions

Void.

8.16.2 Downlink RIM Information Transfer

8.16.2.1 General

The purpose of the Downlink RIM Information Transfer procedure is to transfer RIM information from the AMF to the NG-RAN node. This procedure uses non-UE associated signalling.

8.16.2.2 Successful Operation

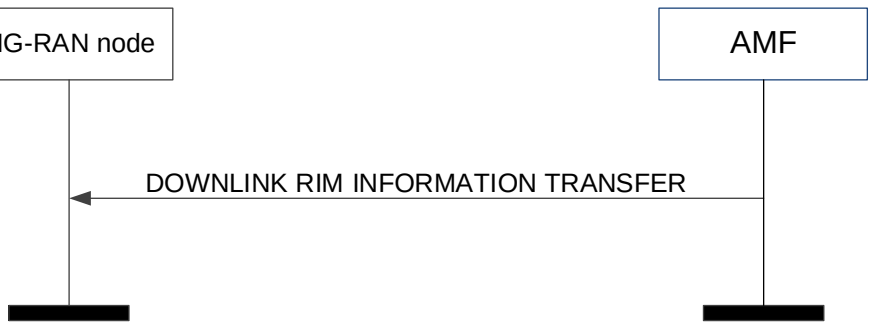


Figure 8.16.2.2-1: Downlink RIM Information Transfer

The AMF initiates the procedure by sending a DOWNLINK RIM INFORMATION TRANSFER message to the NG-RAN node. The NG-RAN node may use the RIM information in the received DOWNLINK RIM INFORMATION TRANSFER message for executing the RIM functionality, as specified in TS 38.300 [8].

8.16.2.3 Abnormal Conditions

Void.

8.17 Broadcast Session Management Procedures

8.17.1 Broadcast Session Setup

8.17.1.1 General

The purpose of the Broadcast Session Setup procedure is to request the NG-RAN node to setup MBS session resources for a broadcast MBS session. The procedure uses non-UE associated signalling.

8.17.1.2 Successful Operation

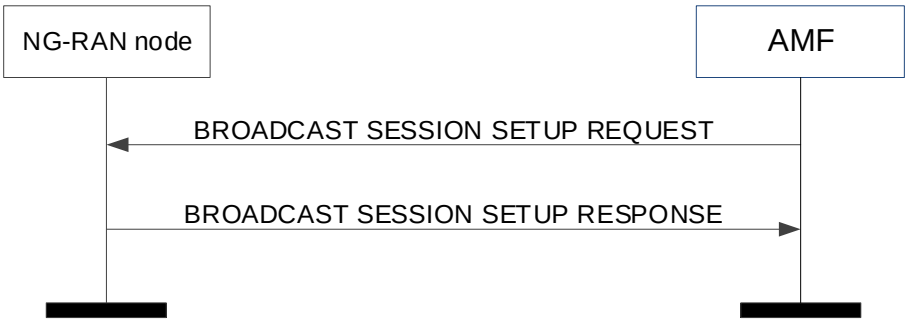


Figure 8.17.1.2-1: Broadcast Session Setup, successful operation.

The AMF initiates the procedure by sending a BROADCAST SESSION SETUP REQUEST message to the NG-RAN node. If the NG-RAN node accepts all the MBS QoS flows in the MBS session at least in one of its cells, the NG-RAN node responds with the BROADCAST SESSION SETUP RESPONSE message.

If the *MBS Service Area* IE is included in the BROADCAST SESSION SETUP REQUEST message, the NG-RAN node shall take it into account as specified in TS 23.247 [44], and TS 38.300 [8] for NTN operation.

If the *MBS Session FSA ID List* IE is included in the BROADCAST SESSION SETUP REQUEST message, the NG-RAN node shall take it into account to determine cells/frequencies within the MBS service area to broadcast MBS session data as specified in TS 23.247 [44].

If the *Supported UE Type List* IE is included in the BROADCAST SESSION SETUP REQUEST message, the NG-RAN node shall, if supported, take it into account for configuring MBS session resources.

If the *Associated Session ID* IE is included in the BROADCAST SESSION SETUP REQUEST message the NG-RAN node shall, if supported, take this information into account to determine whether MBS session resource sharing is possible, as specified in TS 38.300 [8].

8.17.1.3 Unsuccessful Operation

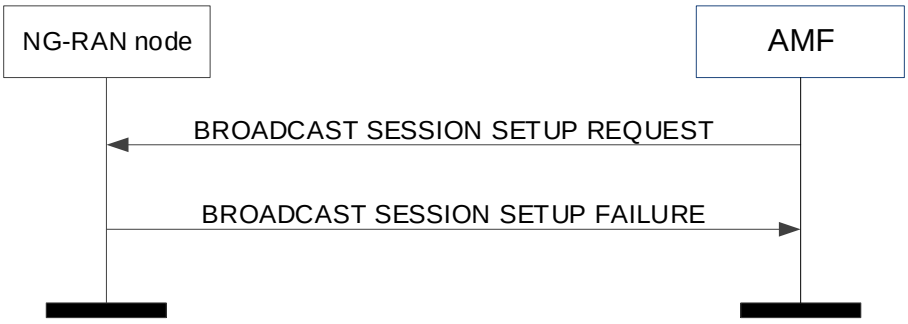


Figure 8.17.1.3-1: Broadcast Session Setup, unsuccessful operation.

If the NG-RAN node is not able to provide the requested MBS session resources for all the MBS QoS flows in the MBS session in any of its cells, it shall send the BROADCAST SESSION SETUP FAILURE message.

8.17.1.4 Abnormal Conditions

Void.

8.17.2 Broadcast Session Modification

8.17.2.1 General

The purpose of the Broadcast Session Modification procedure is to request the NG-RAN node to update the MBS session resources or the area related to a previously established broadcast MBS session. The procedure uses non-UE associated signalling.

8.17.2.2 Successful Operation

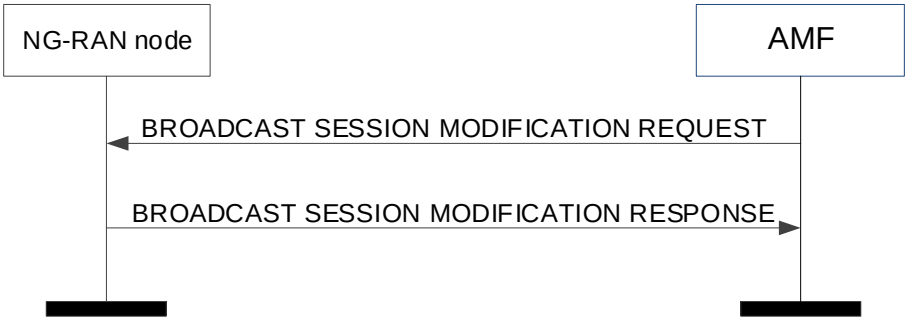


Figure 8.17.2.2-1: Broadcast Session Modification, successful operation.

The AMF initiates the procedure by sending a BROADCAST SESSION MODIFICATION REQUEST message to the NG-RAN node.

If the *MBS Service Area* IE is included in the BROADCAST SESSION MODIFICATION REQUEST message, the NG-RAN node shall update the MBS service area as needed and send the BROADCAST SESSION MODIFICATION RESPONSE message. For NTN operation, the NG-RAN node shall, if supported, update the intended service area information as specified in TS 38.300 [8].

If the *MBS Session Modification Request Transfer* IE is included in the BROADCAST SESSION MODIFICATION REQUEST message, the NG-RAN node shall replace the previously provided information by the newly received one and update the MBS session resources and area as requested and send the BROADCAST SESSION MODIFICATION RESPONSE message.

If the *Supported UE Type List* IE is included in the BROADCAST SESSION MODIFICATION REQUEST message, the NG-RAN node shall, if supported, take it into account for configuring MBS session resources.

If the *MBS NG-U Failure Indication* IE is included in the BROADCAST SESSION MODIFICATION REQUEST message within the *MBS Session Setup or Modification Request Transfer* IE and set to "NG-U path failure detected", the NG-RAN node may provide new NG-U transport layer information to replace the failed one(s) or switch the data delivery to another 5GC as per the Broadcast MBS session restoration procedure for N3mb Path Failure specified in TS 23.527 [57].

8.17.2.3 Unsuccessful Operation



Figure 8.17.2.3-1: Broadcast Session Modification, unsuccessful operation.

If the NG-RAN node fails to update any requested modification, the NG-RAN node shall send the BROADCAST SESSION MODIFICATION FAILURE message.

8.17.2.4 Abnormal Conditions

Void.

8.17.3 Broadcast Session Release

8.17.3.1 General

The purpose of the Broadcast Session Release procedure is to release the MBS session resources related to a previously established broadcast MBS session. The procedure uses non-UE assocated signalling.

8.17.3.2 Successful Operation



Figure 8.17.3.2-1: Broadcast Session Release, successful operation.

The AMF initiates the procedure by sending a BROADCAST SESSION RELEASE REQUEST message to the NG-RAN node.

Upon reception of the BROADCAST SESSION RELEASE REQUEST message, the NG-RAN node shall respond with the BROADCAST SESSION RELEASE RESPONSE message. The NG-RAN node node shall stop broadcasting and release all MBS session resources associated with the broadcast session.

Upon reception of the BROADCAST SESSION RELEASE RESPONSE message, the AMF shall transfer transparently the *Broadcast Session Release Response Transfer* IE, if available, to the MB-SMF.

8.17.3.3 Unsuccessful Operation

Not applicable.

8.17.3.4 Abnormal Conditions

Void.

8.17.4 Broadcast Session Release Required

8.17.4.1 General

The purpose of the Broadcast Session Release Required procedure is to trigger the AMF to release the MBS session resources related to a previously established broadcast MBS session. The procedure uses non-UE associated signalling.

8.17.4.2 Successful Operation



Figure 8.17.4.2-1: Broadcast Session Release Required, successful operation.

The NG-RAN node initiates the procedure by sending a BROADCAST SESSION RELEASE REQUIRED message to the AMF.

Upon reception of the BROADCAST SESSION RELEASE REQUIRED message, the AMF shall realize that the NG-RAN node is lacking adequate MBS session resources for a previously established broadcast MBS session and initiate the release of the MBS session resources.

8.17.4.3 Abnormal Conditions

Void.

8.17.5 Broadcast Session Transport

8.17.5.1 General

The purpose of the Broadcast Session Transport procedure is to assign NG-U resources for a broadcast MBS session. The procedure uses non-UE associated signalling.

8.17.5.2 Successful Operation

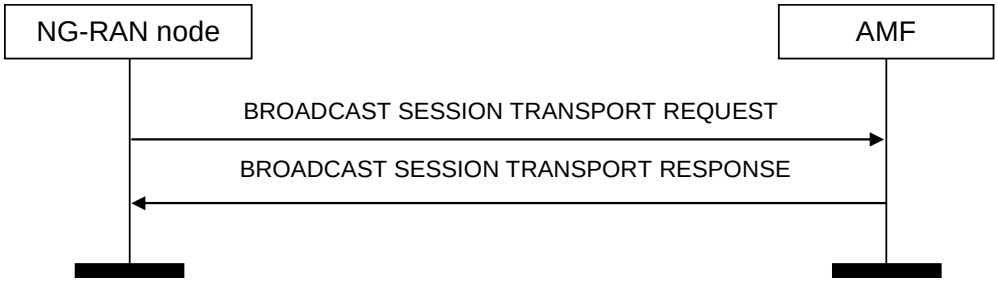


Figure 8.17.5.2-1: Broadcast Session Transport, successful operation.

The NG-RAN node initiates the procedure by sending a BROADCAST SESSION TRANSPORT REQUEST message to the AMF. The AMF responds with a BROADCAST SESSION TRANSPORT RESPONSE message.

If the *Shared NG-U Unicast TNL Information* IE is included in the *MBS Session TNL Information NG-RAN* IE within the *MBS Session Transport Request Transfer* IE in the BROADCAST SESSION TRANSPORT REQUEST message, the MB-SMF shall use the included information as the downlink termination point for the shared NG-U transport.

8.17.5.3 Unsuccessful Operation

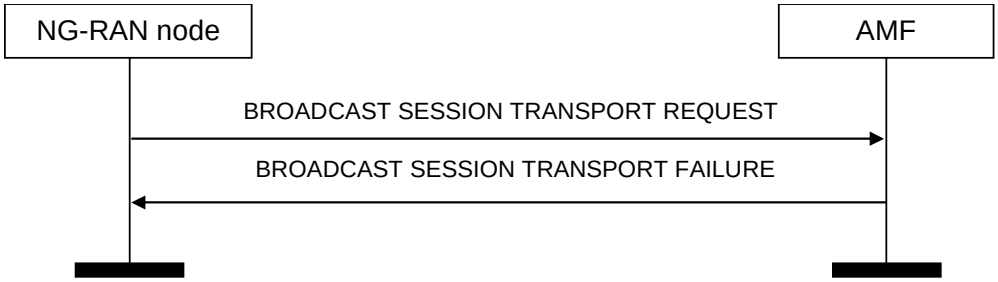


Figure 8.17.5.3-1: Broadcast Session Transport, unsuccessful operation.

In case the shared NG-U transport cannot be setup successfully, the AMF shall respond with the BROADCAST SESSION TRANSPORT FAILURE message to the NG-RAN node with an appropriate cause value.

8.17.5.4 Abnormal Conditions

Void.

8.18 Multicast Session Management Procedures

8.18.1 Distribution Setup

8.18.1.1 General

The purpose of the Distribution Setup procedure is to assign NG-U resources for a multicast MBS session. The procedure uses non-UE-associated signalling.

8.18.1.2 Successful Operation

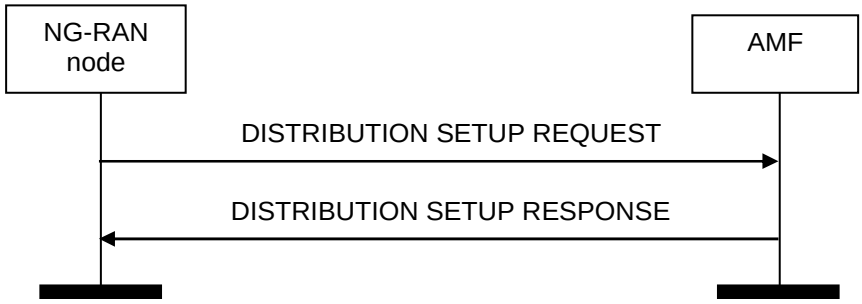


Figure 8.18.1.2-1: Distribution Setup, successful operation.

The NG-RAN node initiates the procedure by sending a DISTRIBUTION SETUP REQUEST message to the AMF. The AMF responds with a DISTRIBUTION SETUP RESPONSE message.

For location dependent multicast sessions, the NG-RAN node shall include the *MBS Area Session ID* IE in the DISTRIBUTION SETUP REQUEST message, and the AMF shall provide the same value of the *MBS Area Session ID* IE in the DISTRIBUTION SETUP RESPONSE message.

If the *Shared NG-U Unicast TNL Information* IE is included in the *MBS Distribution Setup Request Transfer* IE in the DISTRIBUTION SETUP REQUEST message, the MB-SMF shall use the included information as the downlink termination point for the shared NG-U transport.

If the *Shared NG-U Unicast TNL Information* IE is not included in the *MBS Distribution Setup Request Transfer* IE in the DISTRIBUTION SETUP REQUEST message, the MB-SMF shall interpret that the IP multicast is used for this shared NG-U transport, and include the *Shared NG-U Multicast TNL Information* IE in the *MBS Distribution Setup Response Transfer* IE in the DISTRIBUTION SETUP RESPONSE message.

If the *TAI MBS Support List* IE is included in the *MBS Distribution Setup Request Transfer* IE in the DISTRIBUTION SETUP REQUEST message, the MB-SMF shall, if supported, use the included information as specified in TS 23.247 [44].

8.18.1.3 Unsuccessful Operation

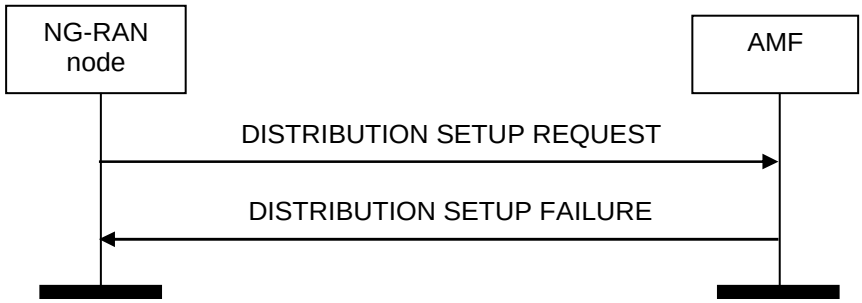


Figure 8.18.1.3-1: Distribution Setup, unsuccessful operation.

In case the shared NG-U transport cannot be setup successfully, the AMF shall respond with the DISTRIBUTION SETUP FAILURE message to the NG-RAN node with an appropriate cause value.

8.18.1.4 Abnormal Conditions

Void.

8.18.2 Distribution Release

8.18.2.1 General

The purpose of the Distribution Release procedure is to enable the release of already established NG-U resources for a given multicast MBS session, or for a given area session of the multicast MBS session. The procedure uses non-UE-associated signalling.

8.18.2.2 Successful Operation

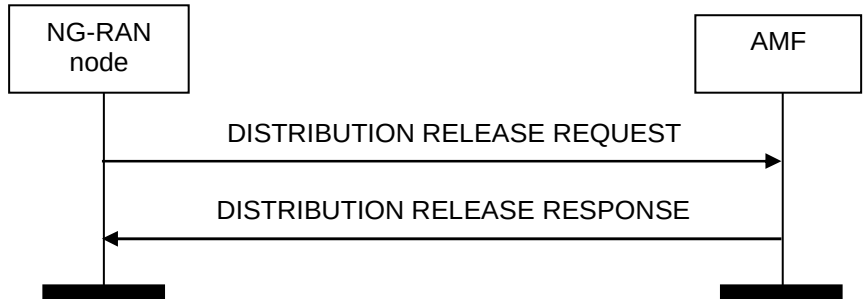


Figure 8.18.2.2-1: Distribution Release, successful operation.

The NG-RAN node initiates the procedure by sending a DISTRIBUTION RELEASE REQUEST message.

Upon receipt of the DISTRIBUTION RELEASE REQUEST message, the AMF shall send the DISTRIBUTION RELEASE RESPONSE message after successfully removing the corresponding NG-U resource for the MBS session.

For location dependent multicast session, the NG-RAN node shall include the *MBS Area Session ID* IE in the DISTRIBUTION RELEASE REQUEST message, and the AMF shall provide the same value of the *MBS Area Session ID* IE in the DISTRIBUTION RELEASE RESPONSE message.

If unicast shared NG-U transport is used, the NG-RAN node shall include the *Shared NG-U TNL Information* IE in the *MBS Distribution Release Request Transfer* IE in the DISTRIBUTION RELEASE REQUEST message, and the MB-SMF shall release the corresponding shared NG-U transport as specified in TS 23.247 [44].

8.18.2.3 Unsuccessful Operation

Not applicable.

8.18.2.4 Abnormal Conditions

Void.

8.18.3 Multicast Session Activation

8.18.3.1 General

The purpose of the Multicast Session Activation procedure is to request a NG-RAN node to activate the MBS session resources of a multicast MBS session. The procedure uses non-UE-associated signalling.

8.18.3.2 Successful Operation

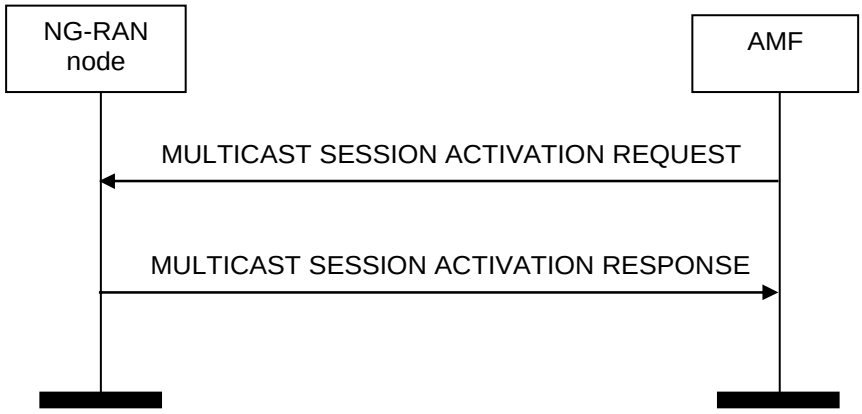


Figure 8.18.3.2-1: Multicast Session Activation, successful operation.

The AMF initiates the procedure by sending a MULTICAST SESSION ACTIVATION REQUEST message to the NG-RAN node.

Upon receipt of the MULTICAST SESSION ACTIVATION REQUEST, the NG-RAN node activates the previously requested MBS session resources corresponding to the MBS session indicated in the MULTICAST SESSION ACTIVATION REQUEST message and indicates in the MULTICAST SESSION ACTIVATION RESPONSE message for which MBS session the request was fulfilled.

8.18.3.3 Unsuccessful Operation

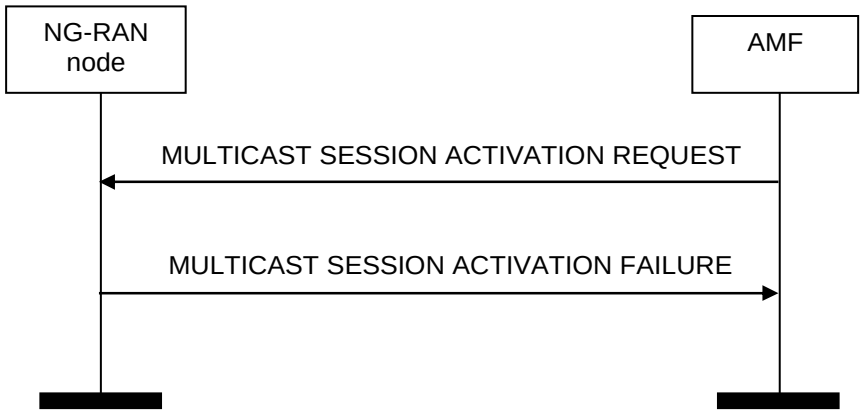


Figure 8.18.3.3-1: Multicast Session Activation, unsuccessful operation.

If the NG-RAN node cannot activate the previously requested MBS session resources indicated by the MULTICAST SESSION ACTIVATION REQUEST message, it shall respond with a MULTICAST SESSION ACTIVATION FAILURE message with an appropriate cause value.

8.18.3.4 Abnormal Conditions

Void.

8.18.4 Multicast Session Deactivation

8.18.4.1 General

The purpose of the Multicast Session Deactivation procedure is to request a NG-RAN node to deactivate the multicast MBS session resources of one MBS session. The procedure uses non-UE-associated signalling.

8.18.4.2 Successful Operation

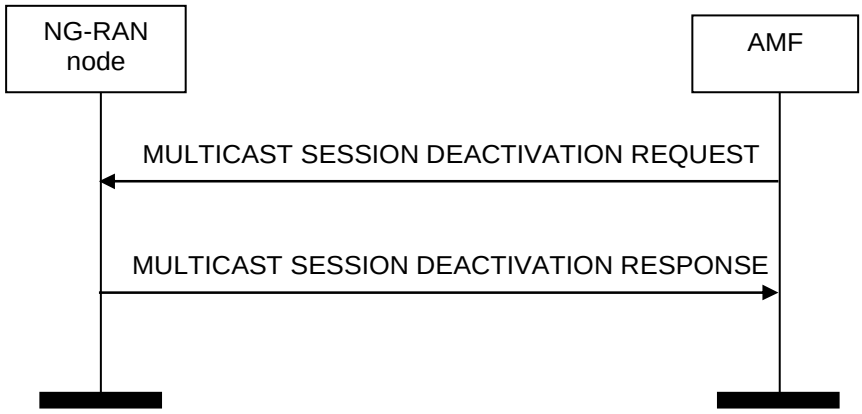


Figure 8.18.4.2-1: Multicast Session Deactivation, successful operation.

The AMF initiates the procedure by sending a MULTICAST SESSION DEACTIVATION REQUEST message to the NG-RAN node.

Upon receipt of this message, the NG-RAN node shall deactivate the previously requested MBS session resources corresponding to the MBS session indicated in the MULTICAST SESSION DEACTIVATION REQUEST message if the MBS resources are active and shall indicate in the MULTICAST SESSION DEACTIVATION RESPONSE message for which MBS session the request was fulfilled.

8.18.4.3 Unsuccessful Operation

Not applicable.

8.18.4.4 Abnormal Conditions

Void.

8.18.5 Multicast Session Update

8.18.5.1 General

The purpose of the Multicast Session Update procedure is to request the NG-RAN node to update the NG-RAN MBS session resources or area related to a multicast MBS session. The procedure uses non-UE associated signalling.

8.18.5.2 Successful Operation

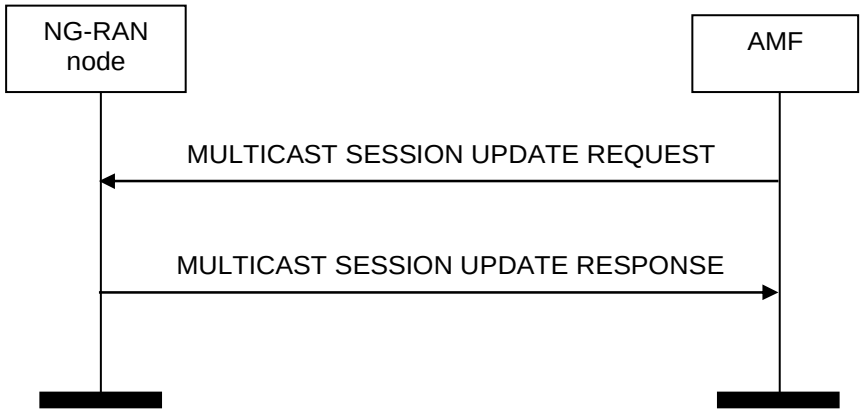


Figure 8.18.5.2-1: Multicast Session Update, successful operation.

The AMF initiates the procedure by sending a MULTICAST SESSION UPDATE REQUEST message to the NG-RAN node.

Upon receipt of the MULTICAST SESSION UPDATE REQUEST message, the NG-RAN node shall, if requested, update the MBS QoS profile and/or MBS Service Area for the multicast service and send the MULTICAST SESSION UPDATE RESPONSE message to the AMF.

For location dependent multicast session, the AMF shall include the *MBS Area Session ID* IE in the MULTICAST SESSION UPDATE REQUEST message, and the NG-RAN node shall provide the same value of the *MBS Area Session ID* IE in the MULTICAST SESSION UPDATE RESPONSE message.

In case the *MBS Service Area Information* IE is included in the *Multicast Session Update Request Transfer* IE in the MULTICAST SESSION UPDATE REQUEST message, the NG-RAN node shall update the stored MBS Service Area Information for that service, as specified in TS 23.247 [44].

In case the *MBS QoS Flows To Be Setup or Modify List* IE is included in the *Multicast Session Update Request Transfer* IE in the MULTICAST SESSION UPDATE REQUEST message, the NG-RAN node shall setup or modify the MBS QoS profile accordingly.

In case the *MBS QoS Flows To Be Release List* IE is included in the *Multicast Session Update Request Transfer* IE in the MULTICAST SESSION UPDATE REQUEST message, the NG-RAN node shall release the indicated MBS QoS flows.

In case the *MBS Session TNL Information 5GC* IE is included in the *Multicast Session Update Request Transfer* IE in the MULTICAST SESSION UPDATE REQUEST message, the NG-RAN node shall take the information into account and update related NG-U resources.

Interactions with other procedures:

If the *MBS User Plane Failure Indication* IE is included in the *Multicast Session Update Request Transfer* IE in the MULTICAST SESSION UPDATE REQUEST message and set to "NG-U path failure detected", the NG-RAN node may provide new NG-U transport layer information to replace the failed one via the Distribution Setup procedure, or release the failed one via the Distribution Release procedure, as per the Multicast MBS session restoration procedure for N3mb Path Failure specified in TS 23.527 [57].

8.18.5.3 Unsuccessful Operation



Figure 8.18.5.3-1: Multicast Session Update, unsuccessful operation.

If the NG-RAN node is not able to perform any of the requested update, it shall respond with a MULTICAST SESSION UPDATE FAILURE message with an appropriate cause value.

8.18.5.4 Abnormal Conditions

Void.

8.19 Timing Synchronisation Status Reporting Procedures

8.19.1 Timing Synchronisation Status

8.19.1.1 General

The purpose of the Timing Synchronisation Status procedure is to enable the AMF to request the NG-RAN node to start or stop reporting of RAN timing synchronisation status information as specified in TS 23.501 [9] and TS 23.502 [10]. The procedure uses non-UE associated signalling.

8.19.1.2 Successful Operation

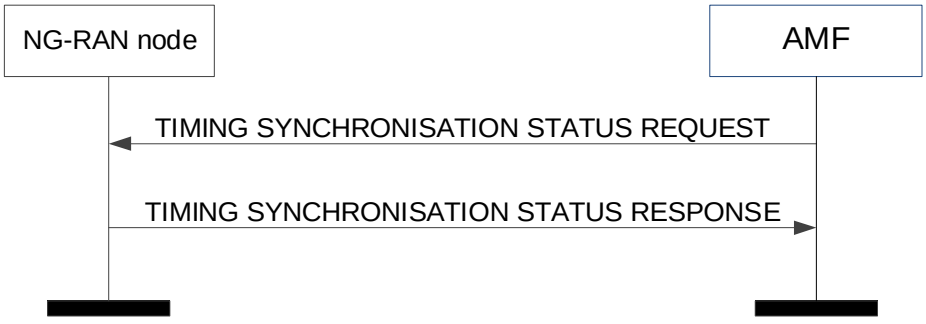


Figure 8.19.1.2-1: Timing synchronisation status procedure: successful operation

The AMF initiates the procedure by sending a TIMING SYNCHRONISATION STATUS REQUEST message to the NG-RAN node.

If the *RAN TSS Request Type* IE included in the TIMING SYNCHRONISATION STATUS REQUEST message is set to "start", the NG-RAN node shall start the RAN TSS reporting for the TSCTSF indicated by the *Routing ID* IE. If the *RAN TSS Request Type* IE is set to "stop", the NG-RAN node shall stop the reporting for the TSCTSF indicated by the *Routing ID* IE.

8.19.1.3 Unsuccessful Operation

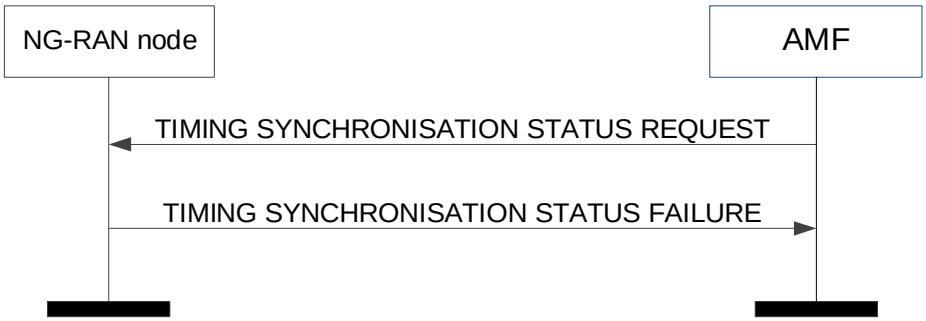


Figure 8.19.1.3-1: Timing synchronisation status procedure: unsuccessful operation

If the NG-RAN node is not able to report timing synchronisation status, it shall consider the procedure as failed and reply with the TIMING SYNCHRONISATION STATUS FAILURE message.

8.19.1.4 Abnormal Conditions

Void.

8.19.2 Timing Synchronisation Status Report

8.19.2.1 General

The purpose of the Timing Synchronisation Status Report procedure is to enable the NG-RAN node to provide RAN timing synchronisation status information to the AMF as specified in TS 23.501 [9] and TS 23.502 [10]. The procedure uses non-UE associated signalling.

8.19.2.2 Successful Operation



Figure 8.19.2.2-1: Timing synchronisation status report

The NG-RAN node initiates the procedure by sending a TIMING SYNCHRONISATION STATUS REPORT message to the AMF for the TSCTSF indicated by the *Routing ID* IE.

8.19.2.3 Abnormal Conditions

Void.

8.20 Ambient IoT Procedures

8.20.1 Inventory Request

8.20.1.1 General

The purpose of the Inventory Request procedure is to request the NG-RAN node to perform A-IoT paging over the A-IoT radio. This procedure applies only if the NG-RAN node is a gNB. The procedure uses non-UE associated signalling.

8.20.1.2 Successful Operation

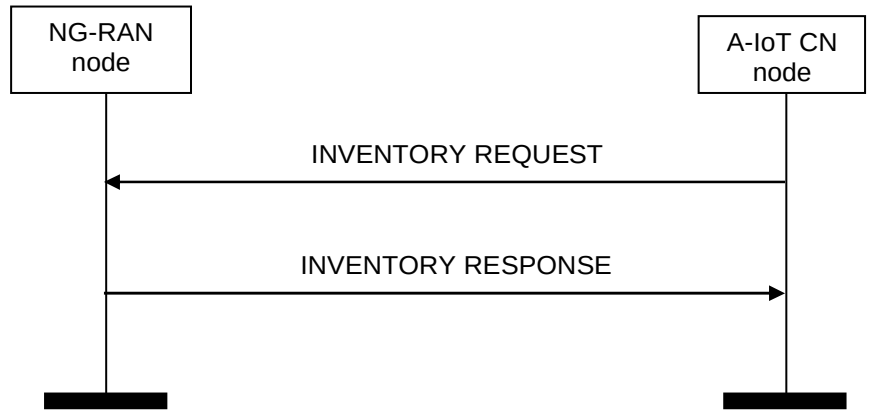


Figure 8.20.1.2-1: Inventory Request, successful operation.

The A-IoT CN node triggers the procedure by sending an INVENTORY REQUEST message to the NG-RAN node. If the NG-RAN node accepts the request, the NG-RAN node responds with the INVENTORY RESPONSE message.

The NG-RAN node shall, include the same values of the *AIOTF Identifier* IE and *A-IoT Correlation Identifier* IE in the INVENTORY RESPONSE message as received from the INVENTORY REQUEST message.

Upon receiving the *Inventory Assistance Information* IE contained in the *Inventory Request Transfer* IE in the INVENTORY REQUEST message, the NG-RAN node may take the information into account as defined in TS 38.300 [8].

Interaction with Inventory Report procedure

When starting the requested inventory, the NG-RAN node shall, include the same values of the *AIOTF Identifier* IE and *A-IoT Correlation Identifier* IE in the INVENTORY REPORT message(s) as received from the INVENTORY REQUEST message

If the *Follow on Command Indication* IE set to "true" is included in the *Inventory Request Transfer* IE in the INVENTORY REQUEST message, the NG-RAN node shall consider that there will be command to be transmitted to the device(s), and shall allocate and include a *RAN A-IoT Device NGAP ID* IE in each *Device Report Item* IE within the *Inventory Report Transfer* IE in the INVENTORY REPORT message(s).

8.20.1.3 Unsuccessful Operation

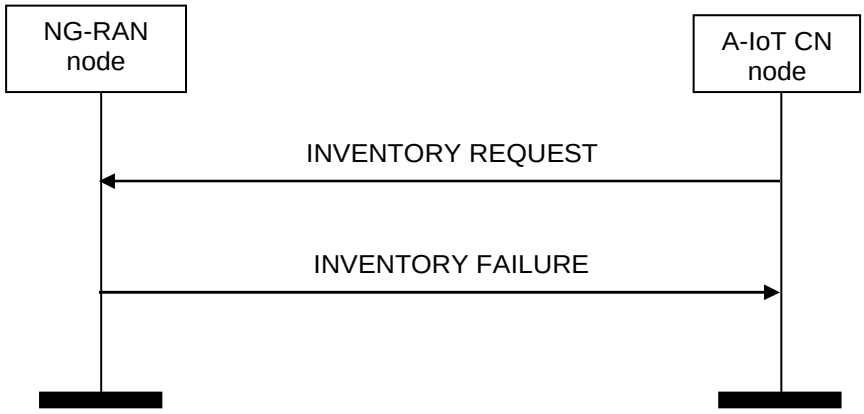


Figure 8.20.1.3-1: Inventory Request, unsuccessful operation.

If the NG-RAN node is not able to perform the inventory operation, it shall send the INVENTORY FAILURE message with an appropriate cause value.

8.20.1.4 Abnormal Conditions

Void.

8.20.2 Inventory Report

8.20.2.1 General

The purpose of the Inventory Report procedure is to enable the NG-RAN node to provide inventory report related information to the A-IoT CN node, following a successful Inventory Request procedure. This procedure applies only if the NG-RAN node is a gNB. The procedure uses non-UE associated signalling.

8.20.2.2 Successful Operation



Figure 8.20.2.2-1: Inventory Report

The NG-RAN node initiates the procedure by sending an INVENTORY REPORT message for the Inventory service.

If the *Reader Report List* IE is included in the *Inventory Report Transfer* IE contained in the INVENTORY REPORT message, the A-IoT CN node shall take it into account as specified in TS 23.369 [60].

If the *Inventory Complete Indication* IE set to "true" is included in the *Inventory Report Transfer* IE contained in the INVENTORY REPORT message, the A-IoT CN node shall consider that the inventory operation for the A-IoT session is completed in the NG-RAN node.

Interactions with the A-IoT Session Release procedure:

In case the *Inventory Complete Indication* IE is included in the *Inventory Report Transfer* IE contained in the INVENTORY REPORT message and set to "true", if there is no follow-on command to be transmitted, or all the follow-on command transmissions have been completed, the A-IoT CN node should initiate the A-IoT Session Release procedure for the A-IoT session denoted by the *AIOTF Identifier* IE and the *A-IoT Correlation Identifier* IE contained in the INVENTORY REPORT message.

8.20.2.3 Abnormal Conditions

Void.

8.20.3 Command Request

8.20.3.1 General

The purpose of the Command Request procedure is to request the NG-RAN node to transfer the command (A-IoT NAS PDU) to the A-IoT device over the A-IoT radio. This procedure applies only if the NG-RAN node is a gNB. The procedure uses non-UE associated signalling.

8.20.3.2 Successful Operation

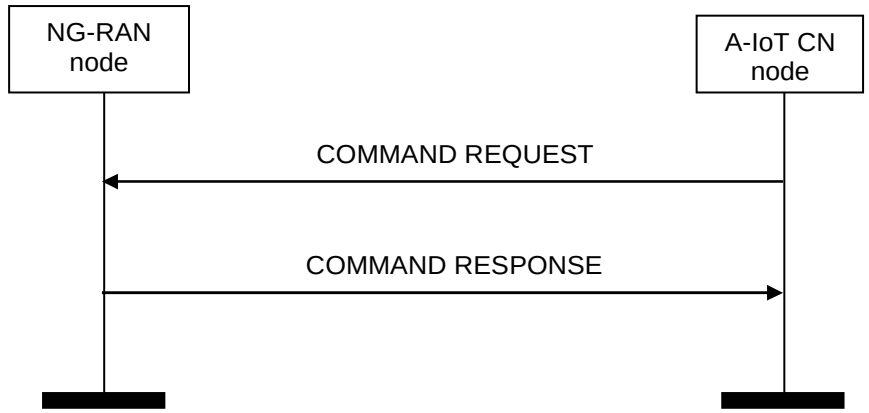


Figure 8.20.3.2-1: Command Request, successful operation.

The A-IoT CN node triggers the procedure by sending a COMMAND REQUEST message to the NG-RAN node. In case of successful operation, the NG-RAN node responds with the COMMAND RESPONSE message.

The NG-RAN node shall, include the same values of the *AIOTF Identifier* IE, the *A-IoT Correlation Identifier* IE and the *RAN A-IoT Device NGAP ID* IE in the COMMAND RESPONSE message as received from the COMMAND REQUEST message.

8.20.3.3 Unsuccessful Operation

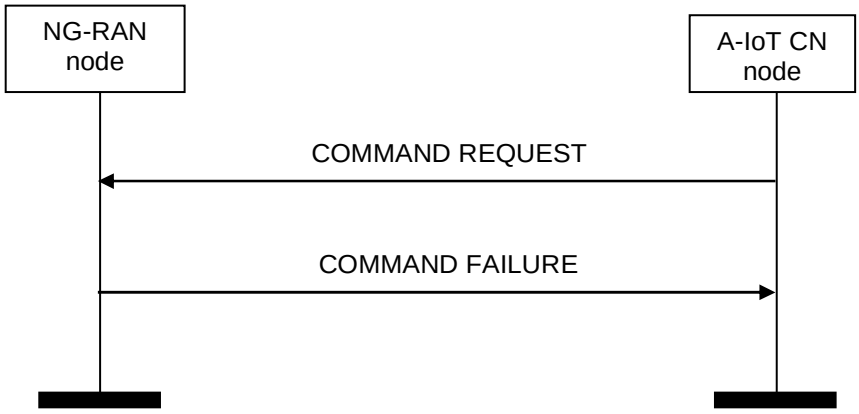


Figure 8.20.3.3-1: Command Request, unsuccessful operation.

If the NG-RAN node is not able to transmit the received *A-IoT NAS PDU* in the *Command Request Transfer* IE in the COMMAND REQUEST message towards the A-IoT device or if it does not receive the A-IoT NAS response from the A-IoT device, it shall send the COMMAND FAILURE message with an appropriate cause value.

8.20.3.4 Abnormal Conditions

Void.

8.20.4 A-IoT Session Release

8.20.4.1 General

The purpose of the A-IoT Session Release procedure is to enable the A-IoT CN node to terminate all activities related to the indicated A-IoT session. This procedure applies only if the NG-RAN node is a gNB. The procedure uses non-UE associated signalling.

8.20.4.2 Successful Operation

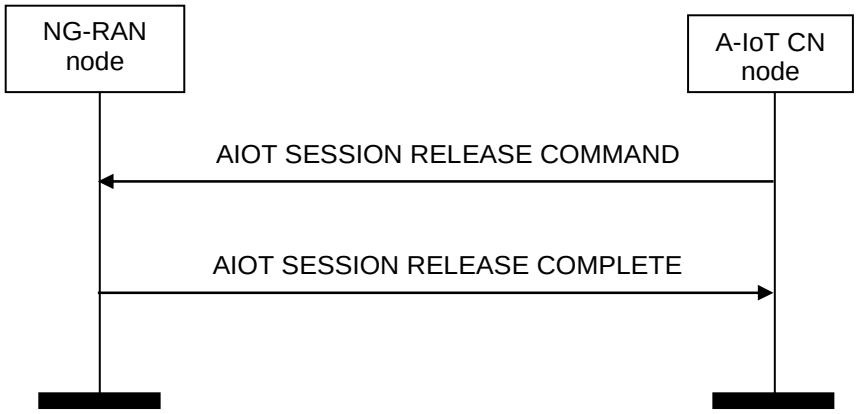


Figure 8.20.4.2-1: A-IoT Session Release, successful operation.

The A-IoT CN node triggers the procedure by sending an AIOT SESSION RELEASE COMMAND message to the NG-RAN node. Upon reception of an AIOT SESSION RELEASE COMMAND message the NG-RAN node shall terminate all activities and release the context and resources related to the A-IoT session denoted by the *AIOTF Identifier* IE and the *A-IoT Correlation Identifier* IE and respond with an AIOT SESSION RELEASE COMPLETE message.

8.20.4.3 Unsuccessful Operation

Not applicable.

8.20.4.4 Abnormal Conditions

Void.

8.20.5 A-IoT Session Release Request

8.20.5.1 General

The purpose of the A-IoT Session Release Request procedure is to enable the NG-RAN node to request the A-IoT CN node to release the A-IoT session. This procedure applies only if the NG-RAN node is a gNB. The procedure uses non-UE associated signalling.

8.20.5.2 Successful Operation



Figure 8.20.5.2-1: A-IoT Session Release Request

The NG-RAN node initiates the procedure by sending an AIOT SESSION RELEASE REQUEST message to the A-IoT CN node.

Interactions with the A-IoT Session Release procedure:

Upon reception of the AIOT SESSION RELEASE REQEUST message, the A-IoT CN node should initiate the A-IoT Session Release procedure for the A-IoT session denoted by the *AIOTF Identifier* IE and the *A-IoT Correlation Identifier* contained in the AIOT SESSION RELEASE REQUEST message.

8.20.5.3 Abnormal Conditions

Void.

9 Elements for NGAP Communication

9.0 General

Clauses 9.2 and 9.3 present the NGAP message and IE definitions in tabular format. The corresponding ASN.1 definition is presented in clause 9.4. In case there is contradiction between the tabular format and the ASN.1 definition, the ASN.1 shall take precedence, except for the definition of conditions for the presence of conditional IEs, where the tabular format shall take precedence.

The messages have been defined in accordance to the guidelines specified in TR 25.921 [7].

When specifying IEs which are to be represented by bitstrings, if not otherwise specifically stated in the semantics description of the concerned IE or elsewhere, the following principle applies with regards to the ordering of bits:

- The first bit (leftmost bit) contains the most significant bit (MSB);
- The last bit (rightmost bit) contains the least significant bit (LSB);
- When importing bitstrings from other specifications, the first bit of the bitstring contains the first bit of the concerned information.

9.1 Tabular Format Contents

9.1.1 Presence

All IEs are marked mandatory, optional or conditional according to table 9.1.1-1.

Table 9.1.1-1: Meaning of content within "Presence" column

Abbreviation	Meaning
M	IEs marked as Mandatory (M) shall always be included in the message.
O	IEs marked as Optional (O) may or may not be included in the message.
C	IEs marked as Conditional (C) shall be included in a message only if the condition is satisfied. Otherwise the IE shall not be included.

9.1.2 Criticality

Each IE or group of IEs may have criticality information applied to it according to table 9.1.2-1.

Table 9.1.2-1: Meaning of content within "Criticality" column

Abbreviation	Meaning
–	No criticality information is applied explicitly.
YES	Criticality information is applied. This is usable only for non-repeatable IEs
GLOBAL	The IE and all its repetitions together have one common criticality information. This is usable only for repeatable IEs.
EACH	Each repetition of the IE has its own criticality information. It is not allowed to assign different criticality values to the repetitions. This is usable only for repeatable IEs.

9.1.3 Range

The Range column indicates the allowed number of copies of repetitive IEs/IE groups.

9.1.4 Assigned Criticality

The Assigned Criticality column provides the actual criticality information as defined in clause 10.3.2, if applicable.

9.2 Message Functional Definition and Content

9.2.1 PDU Session Management Messages

9.2.1.1 PDU SESSION RESOURCE SETUP REQUEST

This message is sent by the AMF and is used to request the NG-RAN node to assign resources on Uu and NG-U for one or several PDU session resources.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
RAN Paging Priority	O		9.3.3.15		YES	ignore
NAS-PDU	O		9.3.3.4		YES	reject
PDU Session Resource Setup Request List		*1*			YES	reject
>PDU Session Resource Setup Request Item		*1..<maxnoofPDUSessions>*			-	
>>PDU Session ID	M		9.3.1.50		-	
>>PDU Session NAS-PDU	O		NAS-PDU 9.3.3.4		-	
>>S-NSSAI	M		9.3.1.24		-	
>>PDU Session Resource Setup Request Transfer	M		OCTET STRING	Containing the *PDU Session Resource Setup Request Transfer* IE specified in clause 9.3.4.1.	-	
>>PDU Session Expected UE Activity Behaviour	O		Expected UE Activity Behaviour 9.3.1.94	Expected UE Activity Behaviour for the PDU Session.	YES	ignore
UE Aggregate Maximum Bit Rate	O		9.3.1.58		YES	ignore
UE Slice Maximum Bit Rate List	O		9.3.1.231		YES	ignore

Range bound	Explanation
maxnoofPDUSessions	Maximum no. of PDU sessions allowed towards one UE. Value is 256.

9.2.1.2 PDU SESSION RESOURCE SETUP RESPONSE

This message is sent by the NG-RAN node as a response to the request to assign resources on Uu and NG-U for one or several PDU session resources.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	ignore
RAN UE NGAP ID	M		9.3.3.2		YES	ignore
PDU Session Resource Setup Response List		*0..1*			YES	ignore
>PDU Session Resource Setup Response Item		*1..<maxnoofPDUSessions>*			-	
>>PDU Session ID	M		9.3.1.50		-	
>>PDU Session Resource Setup Response Transfer	M		OCTET STRING	Containing the *PDU Session Resource Setup Response Transfer* IE specified in clause 9.3.4.2.	-	
PDU Session Resource Failed to Setup List		*0..1*			YES	ignore
>PDU Session Resource Failed to Setup Item		*1..<maxnoofPDUSessions>*			-	
>>PDU Session ID	M		9.3.1.50		-	
>>PDU Session Resource Setup Unsuccessful Transfer	M		OCTET STRING	Containing the *PDU Session Resource Setup Unsuccessful Transfer* IE specified in clause 9.3.4.16.	-	
Criticality Diagnostics	O		9.3.1.3		YES	ignore
User Location Information	O		9.3.1.16		YES	ignore

Range bound	Explanation
maxnoofPDUSessions	Maximum no. of PDU sessions allowed towards one UE. Value is 256.

9.2.1.3 PDU SESSION RESOURCE RELEASE COMMAND

This message is sent by the AMF and is used to request the NG-RAN node to release already established PDU session resources for a given UE.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
RAN Paging Priority	O		9.3.3.15		YES	ignore
NAS-PDU	O		9.3.3.4		YES	ignore
PDU Session Resource to Release List		*1*			YES	reject
>PDU Session Resource to Release Item		*1..<maxnoofPDUSessions>*			-	
>>PDU Session ID	M		9.3.1.50		-	
>>PDU Session Resource Release Command Transfer	M		OCTET STRING	Containing the *PDU Session Resource Release Command Transfer* IE specified in clause 9.3.4.12.	-	

Range bound	Explanation
maxnoofPDUSessions	Maximum no. of PDU sessions allowed towards one UE. Value is 256.

9.2.1.4 PDU SESSION RESOURCE RELEASE RESPONSE

This message is sent by the NG-RAN node as a response to the request to release already established PDU session resources for a given UE.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	ignore
RAN UE NGAP ID	M		9.3.3.2		YES	ignore
PDU Session Resource Released List		*1*			YES	ignore
>PDU Session Resource Released Item		*1..<maxnoofPDUSessions>*			-	
>>PDU Session ID	M		9.3.1.50		-	
>>PDU Session Resource Release Response Transfer	M		OCTET STRING	Containing the *PDU Session Resource Release Response Transfer* IE specified in clause 9.3.4.21.	-	
User Location Information	O		9.3.1.16		YES	ignore
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.1.5 PDU SESSION RESOURCE MODIFY REQUEST

This message is sent by the AMF and is used to request the NG-RAN node to enable modifications of already established PDU session resources for a given UE.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
RAN Paging Priority	O		9.3.3.15		YES	ignore
PDU Session Resource Modify Request List		*1*			YES	reject
>PDU Session Resource Modify Request Item		*1..<maxnoofPDUSessions>*			-	
>>PDU Session ID	M		9.3.1.50		-	
>>NAS-PDU	O		9.3.3.4		-	
>>PDU Session Resource Modify Request Transfer	M		OCTET STRING	Containing the *PDU Session Resource Modify Request Transfer* IE specified in clause 9.3.4.3.	-	
>>S-NSSAI	O		9.3.1.24		YES	reject
>>PDU Session Expected UE Activity Behaviour	O		Expected UE Activity Behaviour 9.3.1.94	Expected UE Activity Behaviour for the PDU Session.	YES	ignore

Range bound	Explanation
maxnoofPDUSessions	Maximum no. of PDU sessions allowed towards one UE. Value is 256.

9.2.1.6 PDU SESSION RESOURCE MODIFY RESPONSE

This message is sent by the NG-RAN node and is used to report the outcome of the request from the PDU SESSION RESOURCE MODIFY REQUEST message.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	ignore
RAN UE NGAP ID	M		9.3.3.2		YES	ignore
PDU Session Resource Modify Response List		*0..1*			YES	ignore
>PDU Session Resource Modify Response Item		*1..<maxnoofPDUSessions>*			-	
>>PDU Session ID	M		9.3.1.50		-	
>>PDU Session Resource Modify Response Transfer	M		OCTET STRING	Containing the *PDU Session Resource Modify Response Transfer* IE specified in clause 9.3.4.4.	-	
PDU Session Resource Failed to Modify List		*0..1*			YES	ignore
>PDU Session Resource Failed to Modify Item		*1..<maxnoofPDUSessions>*			-	
>>PDU Session ID	M		9.3.1.50		-	
>>PDU Session Resource Modify Unsuccessful Transfer	M		OCTET STRING	Containing the *PDU Session Resource Modify Unsuccessful Transfer* IE specified in clause 9.3.4.17.	-	
User Location Information	O		9.3.1.16		YES	ignore
Criticality Diagnostics	O		9.3.1.3		YES	ignore

Range bound	Explanation
maxnoofPDUSessions	Maximum no. of PDU sessions allowed towards one UE. Value is 256.

9.2.1.7 PDU SESSION RESOURCE NOTIFY

This message is sent by the NG-RAN node to notify that the QoS requirements of already established GBR QoS flow(s) for which notification control has been requested are either not fulfilled anymore or fulfilled again by the NG-RAN node. This message can also be sent by the NG-RAN node to notify that PDU session resource(s) for a given UE are released.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
PDU Session Resource Notify List		*0..1*			YES	reject
>PDU Session Resource Notify Item		*1..<maxnoofPDUSessions>*			-	
>>PDU Session ID	M		9.3.1.50		-	
>>PDU Session Resource Notify Transfer	M		OCTET STRING	Containing the *PDU Session Resource Notify Transfer* IE specified in clause 9.3.4.5.	-	
PDU Session Resource Released List		*0..1*			YES	ignore
>PDU Session Resource Released Item		*1..<maxnoofPDUSessions>*			-	
>>PDU Session ID	M		9.3.1.50		-	
>>PDU Session Resource Notify Released Transfer	M		OCTET STRING	Containing the *PDU Session Resource Notify Released Transfer* IE specified in clause 9.3.4.13.	-	
User Location Information	O		9.3.1.16		YES	ignore

Range bound	Explanation
maxnoofPDUSessions	Maximum no. of PDU sessions allowed towards one UE. Value is 256.

9.2.1.8 PDU SESSION RESOURCE MODIFY INDICATION

This message is sent by the NG-RAN node and is used to request the AMF to enable modifications of already established PDU session resources for a given UE.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
PDU Session Resource Modify Indication List		*1*			YES	reject
>PDU Session Resource Modify Indication Item		*1..<maxnoofPDUSessions>*			-	
>>PDU Session ID	M		9.3.1.50		-	
>>PDU Session Resource Modify Indication Transfer	M		OCTET STRING	Containing the *PDU Session Resource Modify Indication Transfer* IE specified in clause 9.3.4.6.	-	
User Location Information	O		9.3.1.16		YES	ignore

Range bound	Explanation
maxnoofPDUSessions	Maximum no. of PDU sessions allowed towards one UE. Value is 256.

9.2.1.9 PDU SESSION RESOURCE MODIFY CONFIRM

This message is sent by the AMF and is used to confirm the outcome of the request from the PDU SESSION RESOURCE MODIFY INDICATION message.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	ignore
RAN UE NGAP ID	M		9.3.3.2		YES	ignore
PDU Session Resource Modify Confirm List		*0..1*			YES	ignore
>PDU Session Resource Modify Confirm Item		*1..<maxnoofPDUSessions>*			-	
>>PDU Session ID	M		9.3.1.50		-	
>>PDU Session Resource Modify Confirm Transfer	M		OCTET STRING	Containing the *PDU Session Resource Modify Confirm Transfer* IE specified in clause 9.3.4.7.	-	
PDU Session Resource Failed to Modify List		*0..1*			YES	ignore
>PDU Session Resource Failed to Modify Item		*1..<maxnoofPDUSessions>*			-	
>>PDU Session ID	M		9.3.1.50		-	
>>PDU Session Resource Modify Indication Unsuccessful Transfer	M		OCTET STRING	Containing the *PDU Session Resource Modify Indication Unsuccessful Transfer* IE specified in clause 9.3.4.22.	-	
Criticality Diagnostics	O		9.3.1.3		YES	ignore

Range bound	Explanation
maxnoofPDUSessions	Maximum no. of PDU sessions allowed towards one UE. Value is 256.

9.2.2 UE Context Management Messages

9.2.2.1 INITIAL CONTEXT SETUP REQUEST

This message is sent by the AMF to request the setup of a UE context.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
Old AMF	O		AMF Name 9.3.3.21	This IE is ignored if the *Extended Old AMF* IE is present.	YES	reject
UE Aggregate Maximum Bit Rate	C-ifPDUsessionResourceSetup		9.3.1.58		YES	reject
Core Network Assistance Information for RRC INACTIVE	O		9.3.1.15		YES	ignore
GUAMI	M		9.3.3.3		YES	reject
PDU Session Resource Setup Request List		*0..1*			YES	reject
>PDU Session Resource Setup Request Item		*1..<maxnoofPDUSessions>*			-	
>>PDU Session ID	M		9.3.1.50		-	
>>PDU Session NAS-PDU	O		NAS-PDU 9.3.3.4		-	
>>S-NSSAI	M		9.3.1.24		-	
>>PDU Session Resource Setup Request Transfer	M		OCTET STRING	Containing the *PDU Session Resource Setup Request Transfer* IE specified in clause 9.3.4.1.	-	
>>PDU Session Expected UE Activity Behaviour	O		Expected UE Activity Behaviour 9.3.1.94	Expected UE Activity Behaviour for the PDU Session.	YES	ignore
Allowed NSSAI	M		9.3.1.31	Indicates the S-NSSAIs permitted by the network	YES	reject
UE Security Capabilities	M		9.3.1.86		YES	reject
Security Key	M		9.3.1.87		YES	reject
Trace Activation	O		9.3.1.14		YES	ignore
Mobility Restriction List	O		9.3.1.85		YES	ignore
UE Radio Capability	O		9.3.1.74		YES	ignore
Index to RAT/Frequency Selection Priority	O		9.3.1.61		YES	ignore
Masked IMEISV	O		9.3.1.54		YES	ignore
NAS-PDU	O		9.3.3.4		YES	ignore
Emergency Fallback Indicator	O		9.3.1.26		YES	reject
RRC Inactive Transition Report Request	O		9.3.1.91		YES	ignore
UE Radio Capability for Paging	O		9.3.1.68		YES	ignore
Redirection for Voice EPS Fallback	O		9.3.1.116		YES	ignore
Location Reporting Request Type	O		9.3.1.65		YES	ignore
CN Assisted RAN Parameters Tuning	O		9.3.1.119		YES	ignore
SRVCC Operation Possible	O		9.3.1.128		YES	ignore
IAB Authorized	O		9.3.1.129		YES	ignore
Enhanced Coverage Restriction	O		9.3.1.140		YES	ignore
Extended Connected Time	O		9.3.3.31		YES	ignore

UE Differentiation Information	O		9.3.1.144		YES	ignore
NR V2X Services Authorized	O		9.3.1.146		YES	ignore
LTE V2X Services Authorized	O		9.3.1.147		YES	ignore
NR UE Sidelink Aggregate Maximum Bit Rate	O		9.3.1.148	This IE applies only if the UE is authorized for NR V2X services.	YES	ignore
LTE UE Sidelink Aggregate Maximum Bit Rate	O		9.3.1.149	This IE applies only if the UE is authorized for LTE V2X services.	YES	ignore
PC5 QoS Parameters	O		9.3.1.150	This IE applies only if the UE is authorized for NR V2X services.	YES	ignore
CE-mode-B Restricted	O		9.3.1.155		YES	ignore
UE User Plane CIoT Support Indicator	O		9.3.1.160		YES	ignore
RG Level Wireline Access Characteristics	O		OCTET STRING	Specified in TS 23.316 [34]. Indicates the wireline access technology specific QoS information corresponding to a specific wireline access subscription.	YES	ignore
Management Based MDT PLMN List	O		MDT PLMN List 9.3.1.168		YES	ignore
UE Radio Capability ID	O		9.3.1.142		YES	reject
Time Synchronisation Assistance Information	O		9.3.1.220		YES	ignore
QMC Configuration Information	O		9.3.1.223		YES	ignore
Target NSSAI Information	O		9.3.1.229		YES	ignore
UE Slice Maximum Bit Rate List	O		9.3.1.231		YES	ignore
5G ProSe Authorized	O		9.3.1.233		YES	ignore
5G ProSe UE PC5 Aggregate Maximum Bit Rate	O		NR UE Sidelink Aggregate Maximum Bit Rate 9.3.1.148	This IE applies only if the UE is authorized for 5G ProSe services.	YES	ignore
5G ProSe PC5 QoS Parameters	O		9.3.1.234	This IE applies only if the UE is authorized for 5G ProSe services.	YES	ignore
Network Controlled Repeater Authorized	O		9.3.1.245		YES	ignore
Aerial UE Subscription Information	O		9.3.1.246		YES	ignore
NR A2X Services Authorized	O		9.3.1.247		YES	ignore
LTE A2X Services Authorized	O		9.3.1.248		YES	ignore
NR A2X UE PC5 Aggregate Maximum Bit Rate	O		NR UE Sidelink Aggregate Maximum Bit Rate 9.3.1.148	This IE applies only if the UE is authorized for NR A2X services.	YES	ignore

LTE A2X UE PC5 Aggregate Maximum Bit Rate	O		LTE UE Sidelink Aggregate Maximum Bit Rate 9.3.1.149	This IE applies only if the UE is authorized for LTE A2X services.	YES	ignore
A2X PC5 QoS Parameters	O		9.3.1.249	This IE applies only if the UE is authorized for A2X services.	YES	ignore
Mobile IAB Authorized	O		9.3.1.259		YES	ignore
Partially Allowed NSSAI	O		9.3.1.261	Indicates the S-NSSAIs partially permitted by the network.	YES	ignore
Ranging and Sidelink Positioning Service Information	O		9.3.1.269	This IE applies only if the UE is authorized for NR V2X services and/or 5G ProSe services.	YES	ignore
Extended Old AMF	O		Extended AMF Name 9.3.3.51		YES	ignore
AMF UE NGAP ID 2	O		AMF UE NGAP ID 9.3.3.1	This IE indicates the AMF UE NGAP ID assigned by the AMF.	YES	ignore

Range bound	Explanation
maxnoofPDUSessions	Maximum no. of PDU sessions allowed towards one UE. Value is 256.

Condition	Explanation
ifPDUsessionResourceSetup	This IE shall be present if the *PDU Session Resource Setup List* IE is present.

9.2.2.2 INITIAL CONTEXT SETUP RESPONSE

This message is sent by the NG-RAN node to confirm the setup of a UE context.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	ignore
RAN UE NGAP ID	M		9.3.3.2		YES	ignore
PDU Session Resource Setup Response List		*0..1*			YES	ignore
>PDU Session Resource Setup Response Item		*1..<maxnoofPDUSessions>*			-	
>>PDU Session ID	M		9.3.1.50		-	
>>PDU Session Resource Setup Response Transfer	M		OCTET STRING	Containing the *PDU Session Resource Setup Response Transfer* IE specified in clause 9.3.4.2.	-	
PDU Session Resource Failed to Setup List		*0..1*			YES	ignore
>PDU Session Resource Failed to Setup Item		*1..<maxnoofPDUSessions>*			-	
>>PDU Session ID	M		9.3.1.50		-	
>>PDU Session Resource Setup Unsuccessful Transfer	M		OCTET STRING	Containing the *PDU Session Resource Setup Unsuccessful Transfer* IE specified in clause 9.3.4.16.	-	
Criticality Diagnostics	O		9.3.1.3		YES	ignore

Range bound	Explanation
maxnoofPDUSessions	Maximum no. of PDU sessions allowed towards one UE. Value is 256.

9.2.2.3 INITIAL CONTEXT SETUP FAILURE

This message is sent by the NG-RAN node to indicate that the setup of the UE context was unsuccessful.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	ignore
RAN UE NGAP ID	M		9.3.3.2		YES	ignore
PDU Session Resource Failed to Setup List		*0..1*			YES	ignore
>PDU Session Resource Failed to Setup Item		*1..<maxnoofPDUSessions>*			-	
>>PDU Session ID	M		9.3.1.50		-	
>>PDU Session Resource Setup Unsuccessful Transfer	M		OCTET STRING	Containing the *PDU Session Resource Setup Unsuccessful Transfer* IE specified in clause 9.3.4.16.	-	
Cause	M		9.3.1.2		YES	ignore
Criticality Diagnostics	O		9.3.1.3		YES	ignore

Range bound	Explanation
maxnoofPDUSessions	Maximum no. of PDU sessions allowed towards one UE. Value is 256.

9.2.2.4 UE CONTEXT RELEASE REQUEST

This message is sent by the NG-RAN node to request the release of the UE-associated logical NG-connection over the NG interface.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
PDU Session Resource List		*0..1*			YES	reject
>PDU Session Resource Item		*1..<maxnoofPDUSessions>*			-	
>>PDU Session ID	M		9.3.1.50		-	
Cause	M		9.3.1.2		YES	ignore
GW Context Release Indication	O		9.3.1.274		YES	reject

Range bound	Explanation
maxnoofPDUSessions	Maximum no. of PDU sessions allowed towards one UE. Value is 256.

9.2.2.5 UE CONTEXT RELEASE COMMAND

This message is sent by the AMF to request the release of the UE-associated logical NG-connection over the NG interface.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
CHOICE *UE NGAP IDs*	M				YES	reject
>UE NGAP ID pair						
>>AMF UE NGAP ID	M		9.3.3.1		-	
>>RAN UE NGAP ID	M		9.3.3.2		-	
>AMF UE NGAP ID						
>>AMF UE NGAP ID	M		9.3.3.1		-	
Cause	M		9.3.1.2		YES	ignore

9.2.2.6 UE CONTEXT RELEASE COMPLETE

This message is sent by the NG-RAN node to confirm the release of the UE-associated logical NG-connection over the NG interface.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	ignore
RAN UE NGAP ID	M		9.3.3.2		YES	ignore
User Location Information	O		9.3.1.16		YES	ignore
Information on Recommended Cells and RAN Nodes for Paging	O		9.3.1.100		YES	ignore
PDU Session Resource List		*0..1*			YES	reject
>PDU Session Resource Item		*1..<maxnoofPDUSessions>*			-	
>>PDU Session ID	M		9.3.1.50		-	
>>PDU Session Resource Release Response Transfer	O		OCTET STRING	Containing the *PDU Session Resource Release Response Transfer* IE specified in clause 9.3.4.21.	YES	ignore
Criticality Diagnostics	O		9.3.1.3		YES	ignore
Paging Assistance Data for CE Capable UE	O		9.3.1.141		YES	ignore

Range bound	Explanation
maxnoofPDUSessions	Maximum no. of PDU sessions allowed towards one UE. Value is 256.

9.2.2.7 UE CONTEXT MODIFICATION REQUEST

This message is sent by the AMF to provide UE Context information changes to the NG-RAN node.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
RAN Paging Priority	O		9.3.3.15		YES	ignore
Security Key	O		9.3.1.87		YES	reject
Index to RAT/Frequency Selection Priority	O		9.3.1.61		YES	ignore
UE Aggregate Maximum Bit Rate	O		9.3.1.58		YES	ignore
UE Security Capabilities	O		9.3.1.86		YES	reject
Core Network Assistance Information for RRC INACTIVE	O		9.3.1.15		YES	ignore
Emergency Fallback Indicator	O		9.3.1.26		YES	reject
New AMF UE NGAP ID	O		AMF UE NGAP ID 9.3.3.1		YES	reject
RRC Inactive Transition Report Request	O		9.3.1.91		YES	ignore
New GUAMI	O		GUAMI 9.3.3.3		YES	reject
CN Assisted RAN Parameters Tuning	O		9.3.1.119		YES	ignore
SRVCC Operation Possible	O		9.3.1.128		YES	ignore
IAB Authorized	O		9.3.1.129		YES	ignore
NR V2X Services Authorized	O		9.3.1.146		YES	ignore
LTE V2X Services Authorized	O		9.3.1.147		YES	ignore
NR UE Sidelink Aggregate Maximum Bit Rate	O		9.3.1.148	This IE applies only if the UE is authorized for NR V2X services.	YES	ignore
LTE UE Sidelink Aggregate Maximum Bit Rate	O		9.3.1.149	This IE applies only if the UE is authorized for LTE V2X services.	YES	ignore
PC5 QoS Parameters	O		9.3.1.150	This IE applies only if the UE is authorized for NR V2X services.	YES	ignore
UE Radio Capability ID	O		9.3.1.142		YES	reject
RG Level Wireline Access Characteristics	O		OCTET STRING	Specified in TS 23.316 [34]. Indicates the wireline access technology specific QoS information corresponding to a specific wireline access subscription.	YES	ignore
Time Synchronisation Assistance Information	O		9.3.1.220		YES	ignore
QMC Configuration Information	O		9.3.1.223		YES	ignore
QMC Deactivation	O		9.3.1.222		YES	ignore
UE Slice Maximum Bit Rate List	O		9.3.1.231		YES	ignore
Management Based MDT PLMN Modification List	O		MDT PLMN Modification List 9.3.1.243		YES	ignore
5G ProSe Authorized	O		9.3.1.233		YES	ignore

5G ProSe UE PC5 Aggregate Maximum Bit Rate	O		NR UE Sidelink Aggregate Maximum Bit Rate 9.3.1.148	This IE applies only if the UE is authorized for 5G ProSe services.	YES	ignore
5G ProSe PC5 QoS Parameters	O		9.3.1.234	This IE applies only if the UE is authorized for 5G ProSe services.	YES	ignore
Network Controlled Repeater Authorized	O		9.3.1.245		YES	ignore
Aerial UE Subscription Information	O		9.3.1.246		YES	ignore
NR A2X Services Authorized	O		9.3.1.247		YES	ignore
LTE A2X Services Authorized	O		9.3.1.248		YES	ignore
NR A2X UE PC5 Aggregate Maximum Bit Rate	O		NR UE Sidelink Aggregate Maximum Bit Rate 9.3.1.148	This IE applies only if the UE is authorized for NR A2X services.	YES	ignore
LTE A2X UE PC5 Aggregate Maximum Bit Rate	O		LTE UE Sidelink Aggregate Maximum Bit Rate 9.3.1.149	This IE applies only if the UE is authorized for LTE A2X services.	YES	ignore
A2X PC5 QoS Parameters	O		9.3.1.249	This IE applies only if the UE is authorized for A2X services.	YES	ignore
Mobile IAB Authorized	O		9.3.1.259		YES	ignore
Ranging and Sidelink Positioning Service Information	O		9.3.1.269	This IE applies only if the UE is authorized for NR V2X services and/or 5G ProSe services.	YES	ignore

9.2.2.8 UE CONTEXT MODIFICATION RESPONSE

This message is sent by the NG-RAN node to confirm the performed UE context updates.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	ignore
RAN UE NGAP ID	M		9.3.3.2		YES	ignore
RRC State	O		9.3.1.92		YES	ignore
User Location Information	O		9.3.1.16		YES	ignore
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.2.9 UE CONTEXT MODIFICATION FAILURE

This message is sent by the NG-RAN node in case the performed UE context update is not successful.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	ignore
RAN UE NGAP ID	M		9.3.3.2		YES	ignore
Cause	M		9.3.1.2		YES	ignore
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.2.10 RRC INACTIVE TRANSITION REPORT

This message is sent by the NG-RAN node to notify the 5GC the UE enters or leaves RRC_INACTIVE state.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
RRC State	M		9.3.1.92		YES	ignore
User Location Information	M		9.3.1.16		YES	ignore

9.2.2.11 CONNECTION ESTABLISHMENT INDICATION

This message is sent by the AMF to complete the establishment of the UE-associated logical NG-connection.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
UE Radio Capability	O		9.3.1.74		YES	ignore
End Indication	O		9.3.3.32		YES	ignore
S-NSSAI	O		9.3.1.24		YES	ignore
Allowed NSSAI	O		9.3.1.31	Indicates the S-NSSAIs permitted by the network	YES	ignore
UE Differentiation Information	O		9.3.1.144		YES	ignore
DL CP Security Information	O		9.3.3.49		YES	ignore
NB-IoT UE Priority	O		9.3.1.145		YES	ignore
Enhanced Coverage Restriction	O		9.3.1.140		YES	ignore
CE-mode-B Restricted	O		9.3.1.155		YES	ignore
UE Radio Capability ID	O		9.3.1.142		YES	reject
Masked IMEISV	O		9.3.1.54		YES	ignore
Old AMF	O		AMF Name 9.3.3.21	This IE is ignored if the *Extended Old AMF* IE is present.	YES	reject
Partially Allowed NSSAI	O		9.3.1.261	Indicates the S-NSSAIs partially permitted by the network.	YES	ignore
Extended Old AMF	O		Extended AMF Name 9.3.3.51		YES	ignore

9.2.2.12 AMF CP RELOCATION INDICATION

This message is sent by the AMF to inform the NG-RAN node that the UE is to be relocated as described in TS 38.300 [8].

Direction: AMF → NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
S-NSSAI	O		9.3.1.24	In this version of the specification, this IE is not used, and shall be ignored if received.	YES	ignore
Allowed NSSAI	O		9.3.1.31	Indicates the S-NSSAIs permitted by the network. In this version of the specification, this IE is not used, and shall be ignored if received.	YES	ignore
Partially Allowed NSSAI	O		9.3.1.261	Indicates the S-NSSAIs partially permitted by the network. In this version of the specification, this IE is not used, and shall be ignored if received.	YES	ignore

9.2.2.13 RAN CP RELOCATION INDICATION

This message is sent by the NG-RAN node to initiate the establishment of a UE-associated logical NG-connection, following the reception of re-establishment request.

Direction: NG-RAN node → AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
5G-S-TMSI	M		9.3.3.20		YES	reject
E-UTRA CGI	M		9.3.1.9		YES	ignore
TAI	M		9.3.3.11		YES	ignore
UL CP Security Information	M		9.3.3.48		YES	reject

9.2.2.14 RETRIEVE UE INFORMATION

The message is sent by the NG-RAN node to request UE information over the NG interface.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
5G-S-TMSI	M		9.3.3.20		YES	reject

9.2.2.15 UE INFORMATION TRANSFER

The message is sent by the AMF to transfer UE information over the NG interface.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
5G-S-TMSI	M		9.3.3.20		YES	reject
NB-IoT UE Priority	O		9.3.1.145		YES	ignore
UE Radio Capability	O		9.3.1.74		YES	ignore
S-NSSAI	O		9.3.1.24		YES	ignore
Allowed NSSAI	O		9.3.1.31	Indicates the S-NSSAIs permitted by the network	YES	ignore
UE Differentiation Information	O		9.3.1.144		YES	ignore
Masked IMEISV	O		9.3.1.54		YES	ignore
Partially Allowed NSSAI	O		9.3.1.261	Indicates the S-NSSAIs partially permitted by the network.	YES	ignore

9.2.2.16 UE CONTEXT SUSPEND REQUEST

This message is sent by the NG-RAN node to request the AMF to suspend the UE context and the related PDU session contexts.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
Information on Recommended Cells and RAN Nodes for Paging	O		9.3.1.100		YES	ignore
Paging Assistance Data for CE Capable UE	O		9.3.1.141		YES	ignore
PDU Session Resource Suspend List		*0..1*			YES	reject
>PDU Session Resource Suspend Item		*1..<maxnoofPDUSessions>*			-	
>>PDU Session ID	M		9.3.1.50		-	
>>UE Context Suspend Request Transfer	M		Containing the *UE Context Suspend Request Transfer* IE specified in clause 9.3.4.26.		-	
User Location Information	O		9.3.1.16		YES	ignore

Range bound	Explanation
maxnoofPDUSessions	Maximum no. of PDU sessions allowed towards one UE. Value is 256.

9.2.2.17 UE CONTEXT SUSPEND RESPONSE

This message is sent by the AMF to indicate to the NG-RAN node the UE context and the related PDU session contexts have been suspended.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	ignore
RAN UE NGAP ID	M		9.3.3.2		YES	ignore
Security Context	O		9.3.1.88		YES	reject
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.2.18 UE CONTEXT SUSPEND FAILURE

This message is sent by the AMF to indicate to the NG-RAN node that suspension of the UE context has failed in the 5GC.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	ignore
RAN UE NGAP ID	M		9.3.3.2		YES	ignore
Cause	M		9.3.1.2		YES	ignore
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.2.19 UE CONTEXT RESUME REQUEST

This message is sent by the NG-RAN node to request the AMF to resume the UE-associated logical NG-connection and UE context.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
RRC Resume Cause	M		RRC Establishment Cause 9.3.1.111		YES	ignore
PDU Session Resource Resume List		*0..1*			YES	reject
>PDU Session Resource Resume Item		*1..<maxnoofPDUSessions>*			-	
>>PDU Session ID	M		9.3.1.50		-	
>>UE Context Resume Request Transfer	M		OCTET STRING	Containing the *UE Context Resume Request Transfer* IE specified in clause 9.3.4.24	-	
PDU Session Resource Failed to Resume List		*0..1*			YES	reject
>PDU Session Resource Failed to Resume Item		*1..<maxnoofPDUSessions>*			-	
>>PDU Session ID	M		9.3.1.50		-	
>>Cause	M		9.3.1.2		-	
Suspend Request Indication	O		9.3.1.158		YES	ignore
Information on Recommended Cells and RAN Nodes for Paging	O		9.3.1.100		YES	ignore
Paging Assistance Data for CE Capable UE	O		9.3.1.141		YES	ignore
User Location Information	O		9.3.1.16		YES	ignore

Range bound	Explanation
maxnoofPDUSessions	Maximum no. of PDU sessions allowed towards one UE. Value is 256.

9.2.2.20 UE CONTEXT RESUME RESPONSE

This message is sent by the AMF to indicate to the NG-RAN node that the UE context and the related PDU session contexts have been resumed in the 5GC.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	ignore
RAN UE NGAP ID	M		9.3.3.2		YES	ignore
PDU Session Resource Resume List		*0..1*			YES	reject
>PDU Session Resource Resume Item		*1..<maxnoofPDUSessions>*			-	
>>PDU Session ID	M		9.3.1.50		-	
>>UE Context Resume Response Transfer	M		OCTET STRING	Containing the *UE Context Resume Response Transfer* IE specified in clause 9.3.4.25	-	
PDU Session Resource Failed to Resume List		*0..1*			YES	reject
>PDU Session Resource Failed to Resume Item		*1..<maxnoofPDUSessions>*			-	
>>PDU Session ID	M		9.3.1.50		-	
>>Cause	M		9.3.1.2		-	
Security Context	O		9.3.1.88		YES	reject
Suspend Response Indication	O		9.3.1.159		YES	ignore
Extended Connected Time	O		9.3.3.31		YES	ignore
Criticality Diagnostics	O		9.3.1.3		YES	ignore

Range bound	Explanation
maxnoofPDUSessions	Maximum no. of PDU sessions allowed towards one UE. Value is 256.

9.2.2.21 UE CONTEXT RESUME FAILURE

This message is sent by the AMF to indicate to the NG-RAN node that resumption of the UE context and the related PDU session contexts has failed in the 5GC.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	ignore
RAN UE NGAP ID	M		9.3.3.2		YES	ignore
Cause	M		9.3.1.2		YES	ignore
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.2.22 MT COMMUNICATION HANDLING REQUEST

This message is sent by the NG-RAN node to the AMF to request activating or deactivating CN based MT communication handling for UEs in RRC_INACTIVE state with long eDRX beyond 10.24 seconds as specified in TS 23.501 [9].

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
CHOICE *5GC Action*	M				YES	reject
>HLCom Activate						
>>NR Paging Long eDRX Information for RRC INACTIVE	M		9.3.3.64		-	
>HLCom Deactivate						
>>UE Reachability Indication	M		ENUMERATED (true, …)		-	
PDU Session Resource List		*1*			YES	reject
>PDU Session Resource Item		*1..<maxnoofPDUSessions>*			-	
>>PDU Session ID	M		9.3.1.50		-	

Range bound	Explanation
maxnoofPDUSessions	Maximum no. of PDU sessions allowed towards one UE. Value is 256.

9.2.2.23 MT COMMUNICATION HANDLING RESPONSE

This message is sent by the AMF to indicate that CN based MT Communication handling was successfully activated or deactivated, as specified in TS 23.501 [9].

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.2.24 MT COMMUNICATION HANDLING FAILURE

This message is sent by the AMF to indicate that CN based MT Communication handling was unsuccessful.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
Cause	M		9.3.1.2		YES	ignore
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.2.25 RAN PAGING REQUEST

This message is sent by the AMF to request RAN Paging due to MT data buffered in 5GC or the arrival of DL signalling for the UE.

Direction: AMF → NG-RAN

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
AMF UE NGAP ID	M		9.3.3.1		YES	ignore
RAN UE NGAP ID	M		9.3.3.2		YES	ignore
Paging Policy Differentiation	O		9.3.3.63		YES	ignore
DL Signalling	O		ENUMERATED (true, …)		YES	ignore

9.2.3 UE Mobility Management Messages

9.2.3.1 HANDOVER REQUIRED

This message is sent by the source NG-RAN node to the AMF to request the preparation of resources at the target.

Direction: NG-RAN node → AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
Handover Type	M		9.3.1.22		YES	reject
Cause	M		9.3.1.2		YES	ignore
Target ID	M		9.3.1.25		YES	reject
Direct Forwarding Path Availability	O		9.3.1.64		YES	ignore
PDU Session Resource List		*1*			YES	reject
>PDU Session Resource Item		*1..<maxnoofPDUSessions>*			-	
>>PDU Session ID	M		9.3.1.50		-	
>>Handover Required Transfer	M		OCTET STRING	Containing the *Handover Required Transfer* IE specified in clause 9.3.4.14.	-	
Source to Target Transparent Container	M		9.3.1.20		YES	reject

Range bound	Explanation
maxnoofPDUSessions	Maximum no. of PDU sessions allowed towards one UE. Value is 256.

9.2.3.2 HANDOVER COMMAND

This message is sent by the AMF to inform the source NG-RAN node that resources for the handover have been prepared at the target side.

Direction: AMF→ NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
Handover Type	M		9.3.1.22		YES	reject
NAS Security Parameters from NG-RAN	C-iftoEPSUTRA		9.3.3.26		YES	reject
PDU Session Resource Handover List		*0..1*			YES	ignore
>PDU Session Resource Handover Item		*1..<maxnoofPDUSessions>*			-	
>>PDU Session ID	M		9.3.1.50		-	
>>Handover Command Transfer	M		OCTET STRING	Containing the *Handover Command Transfer* IE specified in clause 9.3.4.10.	-	
PDU Session Resource to Release List		*0..1*			YES	ignore
>PDU Session Resource to Release Item		*1..<maxnoofPDUSessions>*			-	
>>PDU Session ID	M		9.3.1.50		-	
>>Handover Preparation Unsuccessful Transfer	M		OCTET STRING	Containing the *Handover Preparation Unsuccessful Transfer* IE specified in clause 9.3.4.18.	-	
Target to Source Transparent Container	M		9.3.1.21		YES	reject
Criticality Diagnostics	O		9.3.1.3		YES	ignore

Range bound	Explanation
maxnoofPDUSessions	Maximum no. of PDU sessions allowed towards one UE. Value is 256.

Condition	Explanation
iftoEPSUTRA	This IE shall be present if the *Handover Type* IE is set to the value "5GStoEPS" or "5GtoUTRA".

9.2.3.3 HANDOVER PREPARATION FAILURE

This message is sent by the AMF to inform the source NG-RAN node that the Handover Preparation has failed.

Direction: AMF → NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	ignore
RAN UE NGAP ID	M		9.3.3.2		YES	ignore
Cause	M		9.3.1.2		YES	ignore
Criticality Diagnostics	O		9.3.1.3		YES	ignore
Target to Source Failure Transparent Container	O		9.3.1.186		YES	ignore

9.2.3.4 HANDOVER REQUEST

This message is sent by the AMF to the target NG-RAN node to request the preparation of resources.

Direction: AMF → NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	reject
Handover Type	M		9.3.1.22		YES	reject
Cause	M		9.3.1.2		YES	ignore
UE Aggregate Maximum Bit Rate	M		9.3.1.58		YES	reject
Core Network Assistance Information for RRC INACTIVE	O		9.3.1.15		YES	ignore
UE Security Capabilities	M		9.3.1.86		YES	reject
Security Context	M		9.3.1.88		YES	reject
New Security Context Indicator	O		9.3.1.55		YES	reject
NASC	O		NAS-PDU 9.3.3.4	Refers to either the "Intra N1 mode NAS transparent container" or the "S1 mode to N1 mode NAS transparent container", the details of the IE definition and the encoding arespecified in TS 24.501 [26].	YES	reject
PDU Session Resource Setup List		*1*			YES	reject
>PDU Session Resource Setup Item		*1..<maxnoofPDUSessions>*			-	
>>PDU Session ID	M		9.3.1.50		-	
>>S-NSSAI	M		9.3.1.24		-	
>>Handover Request Transfer	M		OCTET STRING	Containing the *PDU Session Resource Setup Request Transfer* IE specified in clause 9.3.4.1.	-	
>>PDU Session Expected UE Activity Behaviour	O		Expected UE Activity Behaviour 9.3.1.94	Expected UE Activity Behaviour for the PDU Session.	YES	ignore
Allowed NSSAI	M		9.3.1.31	Indicates the S-NSSAIs permitted by the network.	YES	reject
Trace Activation	O		9.3.1.14		YES	ignore
Masked IMEISV	O		9.3.1.54		YES	ignore
Source to Target Transparent Container	M		9.3.1.20		YES	reject
Mobility Restriction List	O		9.3.1.85		YES	ignore
Location Reporting Request Type	O		9.3.1.65		YES	ignore
RRC Inactive Transition Report Request	O		9.3.1.91		YES	ignore
GUAMI	M		9.3.3.3		YES	reject
Redirection for Voice EPS Fallback	O		9.3.1.116		YES	ignore
CN Assisted RAN Parameters Tuning	O		9.3.1.119		YES	ignore
SRVCC Operation Possible	O		9.3.1.128		YES	ignore
IAB Authorized	O		9.3.1.129		YES	reject
Enhanced Coverage Restriction	O		9.3.1.140		YES	ignore

UE Differentiation Information	O		9.3.1.144		YES	ignore
NR V2X Services Authorized	O		9.3.1.146		YES	ignore
LTE V2X Services Authorized	O		9.3.1.147		YES	ignore
NR UE Sidelink Aggregate Maximum Bit Rate	O		9.3.1.148	This IE applies only if the UE is authorized for NR V2X services.	YES	ignore
LTE UE Sidelink Aggregate Maximum Bit Rate	O		9.3.1.149	This IE applies only if the UE is authorized for LTE V2X services.	YES	ignore
PC5 QoS Parameters	O		9.3.1.150	This IE applies only if the UE is authorized for NR V2X services.	YES	ignore
CE-mode-B Restricted	O		9.3.1.155		YES	ignore
UE User Plane CIoT Support Indicator	O		9.3.1.160		YES	ignore
Management Based MDT PLMN List	O		MDT PLMN List 9.3.1.168		YES	ignore
UE Radio Capability ID	O		9.3.1.142		YES	reject
Extended Connected Time	O		9.3.3.31		YES	ignore
Time Synchronisation Assistance Information	O		9.3.1.220		YES	ignore
UE Slice Maximum Bit Rate List	O		9.3.1.231		YES	ignore
5G ProSe Authorized	O		9.3.1.233		YES	ignore
5G ProSe UE PC5 Aggregate Maximum Bit Rate	O		NR UE Sidelink Aggregate Maximum Bit Rate 9.3.1.148	This IE applies only if the UE is authorized for 5G ProSe services.	YES	ignore
5G ProSe PC5 QoS Parameters	O		9.3.1.234	This IE applies only if the UE is authorized for 5G ProSe services.	YES	ignore
Aerial UE Subscription Information	O		9.3.1.246		YES	ignore
NR A2X Services Authorized	O		9.3.1.247		YES	ignore
LTE A2X Services Authorized	O		9.3.1.248		YES	ignore
NR A2X UE PC5 Aggregate Maximum Bit Rate	O		NR UE Sidelink Aggregate Maximum Bit Rate 9.3.1.148	This IE applies only if the UE is authorized for NR A2X services.	YES	ignore
LTE A2X UE PC5 Aggregate Maximum Bit Rate	O		LTE UE Sidelink Aggregate Maximum Bit Rate 9.3.1.149	This IE applies only if the UE is authorized for LTE A2X services.	YES	ignore
A2X PC5 QoS Parameters	O		9.3.1.249	This IE applies only if the UE is authorized for A2X services.	YES	ignore
Mobile IAB Authorized	O		9.3.1.259		YES	ignore
No PDU Session Indication	O		ENUMERATED (true, ...)	This IE applies only if the UE is a mobile IAB-MT.	YES	ignore

Partially Allowed NSSAI	O		9.3.1.261	Indicates the S-NSSAIs partially permitted by the network.	YES	ignore
Ranging and Sidelink Positioning Service Information	O		9.3.1.269	This IE applies only if the UE is authorized for NR V2X services and/or 5G ProSe services.	YES	ignore
AMF UE NGAP ID 2	O		AMF UE NGAP ID 9.3.3.1	This IE indicates the AMF UE NGAP ID assigned by the AMF.	YES	ignore
Target RAN Node ID	O		Global RAN Node ID 9.3.1.5		YES	ignore

Range bound	Explanation
maxnoofPDUSessions	Maximum no. of PDU sessions allowed towards one UE. Value is 256.

9.2.3.5 HANDOVER REQUEST ACKNOWLEDGE

This message is sent by the target NG-RAN node to inform the AMF about the prepared resources at the target.

Direction: NG-RAN node → AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	ignore
RAN UE NGAP ID	M		9.3.3.2	Allocated at the target NG-RAN node.	YES	ignore
PDU Session Resource Admitted List		*1*			YES	ignore
>PDU Session Resource Admitted Item		*1..<maxnoofPDUSessions>*			-	
>>PDU Session ID	M		9.3.1.50		-	
>>Handover Request Acknowledge Transfer	M		OCTET STRING	Containing the *Handover Request Acknowledge Transfer* IE specified in clause 9.3.4.11.	-	
PDU Session Resource Failed to Setup List		*0..1*			YES	ignore
>PDU Session Resource Failed to Setup Item		*1..<maxnoofPDUSessions>*			-	
>>PDU Session ID	M		9.3.1.50		-	
>>Handover Resource Allocation Unsuccessful Transfer	M		OCTET STRING	Containing the *Handover Resource Allocation Unsuccessful Transfer* IE specified in clause 9.3.4.19.	-	
Target to Source Transparent Container	M		9.3.1.21		YES	reject
Criticality Diagnostics	O		9.3.1.3		YES	ignore
NPN Access Information	O		9.3.3.46		YES	reject
RedCap Indication	O		9.3.1.228		YES	ignore
eRedCap Indication	O		ENUMERATED (true, ...)		YES	ignore

Range bound	Explanation
maxnoofPDUSessions	Maximum no. of PDU sessions allowed towards one UE. Value is 256.

9.2.3.6 HANDOVER FAILURE

This message is sent by the target NG-RAN node to inform the AMF that the preparation of resources has failed.

Direction: NG-RAN node → AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	ignore
Cause	M		9.3.1.2		YES	ignore
Criticality Diagnostics	O		9.3.1.3		YES	ignore
Target to Source Failure Transparent Container	O		9.3.1.186		YES	ignore

9.2.3.7 HANDOVER NOTIFY

This message is sent by the target NG-RAN node to inform the AMF that the UE has been identified in the target cell and the handover has been completed.

Direction: NG-RAN node → AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
User Location Information	M		9.3.1.16		YES	ignore
Notify Source NG-RAN Node	O		ENUMERATED (NotifySource, …)		YES	ignore

9.2.3.8 PATH SWITCH REQUEST

This message is sent by the NG-RAN node to inform the AMF of the new serving NG-RAN node and to transfer some NG-U DL tunnel termination point(s) to the SMF via the AMF for one or multiple PDU session resources.

Direction: NG-RAN node → AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
Source AMF UE NGAP ID	M		AMF UE NGAP ID 9.3.3.1		YES	reject
User Location Information	M		9.3.1.16		YES	ignore
UE Security Capabilities	M		9.3.1.86		YES	ignore
PDU Session Resource to be Switched in Downlink List		*1*			YES	reject
>PDU Session Resource to be Switched in Downlink Item		*1..<maxnoofPDUSessions>*			-	
>>PDU Session ID	M		9.3.1.50		-	
>>Path Switch Request Transfer	M		OCTET STRING	Containing the *Path Switch Request Transfer* IE specified in clause 9.3.4.8.	-	
PDU Session Resource Failed to Setup List		*0..1*			YES	ignore
>PDU Session Resource Failed to Setup Item		*1..<maxnoofPDUSessions>*			-	
>>PDU Session ID	M		9.3.1.50		-	
>>Path Switch Request Setup Failed Transfer	M		OCTET STRING	Containing the *Path Switch Request Setup Failed Transfer* IE specified in clause 9.3.4.15.	-	
RRC Resume Cause	O		RRC Establishment Cause 9.3.1.111		YES	ignore
RedCap Indication	O		9.3.1.228		YES	ignore
eRedCap Indication	O		ENUMERATED (true, ...)		YES	ignore
Source AMF GUAMI	O		GUAMI 9.3.3.3	This IE indicates the source AMF.	YES	ignore

Range bound	Explanation
maxnoofPDUSessions	Maximum no. of PDU sessions allowed towards one UE. Value is 256.

9.2.3.9 PATH SWITCH REQUEST ACKNOWLEDGE

This message is sent by the AMF to inform the NG-RAN node that the path switch has been successfully completed in the 5GC.

Direction: AMF → NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	ignore
RAN UE NGAP ID	M		9.3.3.2		YES	ignore
UE Security Capabilities	O		9.3.1.86		YES	reject
Security Context	M		9.3.1.88		YES	reject
New Security Context Indicator	O		9.3.1.55		YES	reject
PDU Session Resource Switched List		*1*			YES	ignore
>PDU Session Resource Switched Item		*1..<maxnoofPDUSessions>*			-	
>>PDU Session ID	M		9.3.1.50		-	
>>Path Switch Request Acknowledge Transfer	M		OCTET STRING	Containing the *Path Switch Request Acknowledge Transfer* IE specified in clause 9.3.4.9.	-	
>>PDU Session Expected UE Activity Behaviour	O		Expected UE Activity Behaviour 9.3.1.94	Expected UE Activity Behaviour for the PDU Session.	YES	ignore
PDU Session Resource Released List		*0..1*			YES	ignore
>PDU Session Resource Released Item		*1..<maxnoofPDUSessions>*			-	
>>PDU Session ID	M		9.3.1.50		-	
>>Path Switch Request Unsuccessful Transfer	M		OCTET STRING	Containing the *Path Switch Request Unsuccessful Transfer* IE specified in clause 9.3.4.20.	-	
Allowed NSSAI	M		9.3.1.31	Indicates the S-NSSAIs permitted by the network.	YES	reject
Core Network Assistance Information for RRC INACTIVE	O		9.3.1.15		YES	ignore
RRC Inactive Transition Report Request	O		9.3.1.91		YES	ignore
Criticality Diagnostics	O		9.3.1.3		YES	ignore
Redirection for Voice EPS Fallback	O		9.3.1.116		YES	ignore
CN Assisted RAN Parameters Tuning	O		9.3.1.119		YES	ignore
SRVCC Operation Possible	O		9.3.1.128		YES	ignore
Enhanced Coverage Restriction	O		9.3.1.140		YES	ignore
Extended Connected Time	O		9.3.3.31		YES	ignore
UE Differentiation Information	O		9.3.1.144		YES	ignore
NR V2X Services Authorized	O		9.3.1.146		YES	ignore
LTE V2X Services Authorized	O		9.3.1.147		YES	ignore

NR UE Sidelink Aggregate Maximum Bit Rate	O		9.3.1.148	This IE applies only if the UE is authorized for NR V2X services.	YES	ignore
LTE UE Sidelink Aggregate Maximum Bit Rate	O		9.3.1.149	This IE applies only if the UE is authorized for LTE V2X services.	YES	ignore
PC5 QoS Parameters	O		9.3.1.150	This IE applies only if the UE is authorized for NR V2X services.	YES	ignore
CE-mode-B Restricted	O		9.3.1.155		YES	ignore
UE User Plane CIoT Support Indicator	O		9.3.1.160		YES	ignore
UE Radio Capability ID	O		9.3.1.142		YES	reject
Management Based MDT PLMN List	O		MDT PLMN List 9.3.1.168	This IE is ignored if the *Management Based MDT PLMN Modification List* IE is present.	YES	ignore
Time Synchronisation Assistance Information	O		9.3.1.220		YES	ignore
5G ProSe Authorized	O		9.3.1.233		YES	ignore
5G ProSe UE PC5 Aggregate Maximum Bit Rate	O		NR UE Sidelink Aggregate Maximum Bit Rate 9.3.1.148	This IE applies only if the UE is authorized for 5G ProSe services.	YES	ignore
5G ProSe PC5 QoS Parameters	O		9.3.1.234	This IE applies only if the UE is authorized for 5G ProSe services.	YES	ignore
Management Based MDT PLMN Modification List	O		MDT PLMN Modification List 9.3.1.243		YES	ignore
IAB Authorized	O		9.3.1.129		YES	ignore
Aerial UE Subscription Information	O		9.3.1.246		YES	ignore
NR A2X Services Authorized	O		9.3.1.247		YES	ignore
LTE A2X Services Authorized	O		9.3.1.248		YES	ignore
NR A2X UE PC5 Aggregate Maximum Bit Rate	O		NR UE Sidelink Aggregate Maximum Bit Rate 9.3.1.148	This IE applies only if the UE is authorized for NR A2X services.	YES	ignore
LTE A2X UE PC5 Aggregate Maximum Bit Rate	O		LTE UE Sidelink Aggregate Maximum Bit Rate 9.3.1.149	This IE applies only if the UE is authorized for LTE A2X services.	YES	ignore
A2X PC5 QoS Parameters	O		9.3.1.249	This IE applies only if the UE is authorized for A2X services.	YES	ignore
Mobile IAB Authorized	O		9.3.1.259		YES	ignore
Partially Allowed NSSAI	O		9.3.1.261	Indicates the S-NSSAIs partially permitted by the network.	YES	ignore

Ranging and Sidelink Positioning Service Information	O		9.3.1.269	This IE applies only if the UE is authorized for NR V2X services and/or 5G ProSe services.	YES	ignore
AMF UE NGAP ID 2	O		AMF UE NGAP ID 9.3.3.1	This IE indicates the AMF UE NGAP ID assigned by the AMF.	YES	ignore

Range bound	Explanation
maxnoofPDUSessions	Maximum no. of PDU sessions allowed towards one UE. Value is 256.

9.2.3.10 PATH SWITCH REQUEST FAILURE

This message is sent by the AMF to inform the NG-RAN node that a failure has occurred in the 5GC during the Path Switch Request procedure.

Direction: AMF → NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	ignore
RAN UE NGAP ID	M		9.3.3.2		YES	ignore
PDU Session Resource Released List		*1*			YES	ignore
>PDU Session Resource Released Item		*1..<maxnoofPDUSessions>*			-	
>>PDU Session ID	M		9.3.1.50		-	
>>Path Switch Request Unsuccessful Transfer	M		OCTET STRING	Containing the PDU session *Path Switch Request Unsuccessful Transfer* IE specified in clause 9.3.4.20.	-	
Criticality Diagnostics	O		9.3.1.3		YES	ignore

Range bound	Explanation
maxnoofPDUSessions	Maximum no. of PDU sessions allowed towards one UE. Value is 256.

9.2.3.11 HANDOVER CANCEL

This message is sent by the source NG-RAN node to the AMF to request the cancellation of an ongoing handover.

Direction: NG-RAN node → AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
Cause	M		9.3.1.2		YES	ignore

9.2.3.12 HANDOVER CANCEL ACKNOWLEDGE

This message is sent by the AMF to the source NG-RAN node to confirm that the ongoing handover was cancelled.

Direction: AMF → NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	ignore
RAN UE NGAP ID	M		9.3.3.2		YES	ignore
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.3.13 UPLINK RAN STATUS TRANSFER

This message is sent by the source NG-RAN node to transfer the uplink PDCP-SN and HFN receiver status and the downlink PDCP SN and HFN transmitter status during intra 5GC NG-based handover.

Direction: NG-RAN node → AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
RAN Status Transfer Transparent Container	M		9.3.1.108		YES	reject

9.2.3.14 DOWNLINK RAN STATUS TRANSFER

This message is sent by the AMF to the target NG-RAN node to transfer the uplink PDCP-SN and HFN receiver status and the downlink PDCP SN and HFN transmitter status during intra 5GC NG-based handover.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
RAN Status Transfer Transparent Container	M		9.3.1.108		YES	reject

9.2.3.15 HANDOVER SUCCESS

This message is sent by the AMF to the source NG-RAN node to indicate the successful access of the UE toward the target NG-RAN node.

Direction: AMF → NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject

9.2.3.16 UPLINK RAN EARLY STATUS TRANSFER

This message is sent by the source NG-RAN node to transfer the COUNT value(s) of the first forwarded downlink SDU(s) during NG DAPS Handover, and during NG-based handover with time-based trigger condition.

Direction: NG-RAN node → AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
Early Status Transfer Transparent Container	M		9.3.1.190		YES	reject

9.2.3.17 DOWNLINK RAN EARLY STATUS TRANSFER

This message is sent by the AMF to transfer the COUNT value(s) of the first forwarded downlink SDU(s) during NG DAPS Handover, and during NG-based handover with time-based trigger condition.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
Early Status Transfer Transparent Container	M		9.3.1.190		YES	reject

9.2.4 Paging Messages

9.2.4.1 PAGING

This message is sent by the AMF and is used to page a UE in one or several tracking areas.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
UE Paging Identity	M		9.3.3.18		YES	ignore
Paging DRX	O		9.3.1.90		YES	ignore
TAI List for Paging		*1*			YES	ignore
>TAI List for Paging Item		*1..<maxnoofTAIforPaging>*			-	
>>TAI	M		9.3.3.11		-	
Paging Priority	O		9.3.1.78		YES	ignore
UE Radio Capability for Paging	O		9.3.1.68		YES	ignore
Paging Origin	O		9.3.3.22		YES	ignore
Assistance Data for Paging	O		9.3.1.69		YES	ignore
NB-IoT Paging eDRX Information	O		9.3.1.138		YES	ignore
NB-IoT Paging DRX	O		9.3.1.139	If this IE is present, the *Paging DRX* IE is ignored.	YES	ignore
Enhanced Coverage Restriction	O		9.3.1.140		YES	ignore
WUS Assistance Information	O		9.3.1.143		YES	ignore
E-UTRA Paging eDRX Information	O		9.3.1.154		YES	ignore
CE-mode-B Restricted	O		9.3.1.155		YES	ignore
NR Paging eDRX Information	O		9.3.1.227		YES	ignore
Paging Cause	O		ENUMERATED (voice, …)		YES	ignore
PEIPS Assistance Information	O		9.3.1.232		YES	ignore
LP-WUSPS Assistance Information	O		9.3.1.279		YES	ignore
LP-WUS Disable Indication	O		ENUMERATED (true, …)		YES	ignore

Range bound	Explanation
maxnoofTAIforPaging	Maximum no. of TAIs for paging. Value is 16.

9.2.4.2 MULTICAST GROUP PAGING

This message is sent by the AMF and is used to notify involved UEs about the activation of a multicast MBS session.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
MBS Session ID	M		9.3.1.206		YES	ignore
MBS Service Area	O		9.3.1.208		YES	ignore
Multicast Group Paging Area List		*1*			YES	ignore
>Multicast Group Paging Area Item		*1..<maxnoofPagingAreas>*			-	
>>Multicast Group Paging Area	M		9.3.1.216		-	
>>UE Paging List		*0..1*			-	
>>>UE Paging Item		*1..<maxnoofUEsforPaging>*			-	
>>>>UE Identity Index Value	M		9.3.3.23		-	
>>>>Paging DRX	O		9.3.1.90		-	

Range bound	Explanation
maxnoofPagingAreas	Maximum no. of paging areas for multicast group paging. Value is 64.
maxnoofUEsforPaging	Maximum no. of UEs allowed within one paging area for multicast group paging. Value is 4096.

9.2.5 NAS Transport Messages

9.2.5.1 INITIAL UE MESSAGE

This message is sent by the NG-RAN node to transfer the initial layer 3 message to the AMF over the NG interface.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
RAN UE NGAP ID	M		9.3.3.2		YES	reject
NAS-PDU	M		9.3.3.4		YES	reject
User Location Information	M		9.3.1.16		YES	reject
RRC Establishment Cause	M		9.3.1.111		YES	ignore
5G-S-TMSI	O		9.3.3.20		YES	reject
AMF Set ID	O		9.3.3.12		YES	ignore
UE Context Request	O		ENUMERATED (requested, ...)		YES	ignore
Allowed NSSAI	O		9.3.1.31		YES	reject
Source to Target AMF Information Reroute	O		9.3.3.27		YES	ignore
Selected PLMN Identity	O		PLMN Identity 9.3.3.5	Indicates the selected PLMN id for the non-3GPP access.	YES	ignore
IAB Node Indication	O		ENUMERATED (true, ...)	Indication of an IAB node	YES	reject
CE-mode-B Support Indicator	O		9.3.1.156		YES	reject
LTE-M Indication	O		9.3.1.157		YES	ignore
EDT Session	O		ENUMERATED (true, …)		YES	ignore
Authenticated Indication	O		ENUMERATED (true, …)	Indicates the FN-RG has been authenticated by the access network.	YES	ignore
NPN Access Information	O		9.3.3.46		YES	reject
RedCap Indication	O		9.3.1.228		YES	ignore
Selected NID	O		NID 9.3.3.42	Indicates together with the *Selected PLMN Identity* IE, the selected SNPN Identity for the non-3GPP access.	YES	ignore
Mobile IAB Node Indication	O		ENUMERATED (true, ...)	Indicates that the UE is a mobile IAB-node	YES	reject
Partially Allowed NSSAI	O		9.3.1.261	Indicates the S-NSSAIs partially permitted by the network.	YES	ignore
eRedCap Indication	O		ENUMERATED (true, ...)		YES	ignore
AUN3 Device Access Information	O		9.3.3.66		YES	ignore
GUAMI	O		9.3.3.3		YES	ignore
GUAMI Type	O		ENUMERATED (native, mapped, …)		YES	ignore
Requested NSSAI	O		9.3.1.275	Indicates the S-NSSAIs requested by the UE.	YES	ignore

9.2.5.2 DOWNLINK NAS TRANSPORT

This message is sent by the AMF and is used for carrying NAS information over the NG interface.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
Old AMF	O		AMF Name 9.3.3.21	This IE is ignored if the *Extended Old AMF* IE is present.	YES	reject
RAN Paging Priority	O		9.3.3.15		YES	ignore
NAS-PDU	M		9.3.3.4		YES	reject
Mobility Restriction List	O		9.3.1.85		YES	ignore
Index to RAT/Frequency Selection Priority	O		9.3.1.61		YES	ignore
UE Aggregate Maximum Bit Rate	O		9.3.1.58		YES	ignore
Allowed NSSAI	O		9.3.1.31	Indicates the S-NSSAIs permitted by the network.	YES	reject
SRVCC Operation Possible	O		9.3.1.128		YES	ignore
Enhanced Coverage Restriction	O		9.3.1.140		YES	ignore
Extended Connected Time	O		9.3.3.31		YES	ignore
UE Differentiation Information	O		9.3.1.144		YES	ignore
CE-mode-B Restricted	O		9.3.1.155		YES	ignore
UE Radio Capability	O		9.3.1.74		YES	ignore
UE Capability Info Request	O		9.3.1.192		YES	ignore
End Indication	O		9.3.3.32		YES	ignore
UE Radio Capability ID	O		9.3.1.142		YES	reject
Target NSSAI Information	O		9.3.1.229		YES	ignore
Masked IMEISV	O		9.3.1.54		YES	ignore
Partially Allowed NSSAI	O		9.3.1.261	Indicates the S-NSSAIs partially permitted by the network.	YES	ignore
Mobile IAB Authorized	O		9.3.1.259		YES	ignore
Extended Old AMF	O		Extended AMF Name 9.3.3.51		YES	ignore

9.2.5.3 UPLINK NAS TRANSPORT

This message is sent by the NG-RAN node and is used for carrying NAS information over the NG interface.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
NAS-PDU	M		9.3.3.4		YES	reject
User Location Information	M		9.3.1.16		YES	ignore
W-AGF Identity Information	O		OCTET STRING	Containing the *WAgfInfo* IE specified in TS 29.510 [36].	YES	reject
TNGF Identity Information	O		OCTET STRING	Containing the *TngfInfo* IE specified in TS 29.510 [36].	YES	reject
TWIF Identity Information	O		OCTET STRING	Containing the *TwifInfo* IE specified in TS 29.510 [36].	YES	reject

9.2.5.4 NAS NON DELIVERY INDICATION

This message is sent by the NG-RAN node and is used for reporting the non-delivery of a NAS PDU previously received within a DOWNLINK NAS TRANSPORT message or the *NAS-PDU* IE previously received within the PDU SESSION RESOURCE SETUP REQUEST message over the NG interface.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
NAS-PDU	M		9.3.3.4		YES	ignore
Cause	M		9.3.1.2		YES	ignore

9.2.5.5 REROUTE NAS REQUEST

This message is sent by the AMF in order to request for a rerouting of the INITIAL UE MESSAGE to another AMF.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
AMF UE NGAP ID	O		9.3.3.1		YES	ignore
NGAP Message	M		OCTET STRING	Contains the INITIAL UE MESSAGE	YES	reject
AMF Set ID	M		9.3.3.12		YES	reject
Allowed NSSAI	O		9.3.1.31		YES	reject
Source to Target AMF Information Reroute	O		9.3.3.27		YES	ignore
Partially Allowed NSSAI	O		9.3.1.261	Indicates the S-NSSAIs partially permitted by the network.	YES	ignore

9.2.6 Interface Management Messages

9.2.6.1 NG SETUP REQUEST

This message is sent by the NG-RAN node to transfer application layer information for an NG-C interface instance.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
Global RAN Node ID	M		9.3.1.5	The AMF may use this information to verify the identity of the gNB, as specified in TS 33.545 [62].	YES	reject
RAN Node Name	O		PrintableString (SIZE(1..150, …))		YES	ignore
Supported TA List		*1*		Supported TAs in the NG-RAN node. This IE is ignored if the *A-IoT Support* IE is present and set to "A-IoT only".	YES	reject
>Supported TA Item		*1..<maxnoofTACs>*			-	
>>TAC	M		9.3.3.10	Broadcast TAC	-	
>>Broadcast PLMN List		*1*			-	
>>>Broadcast PLMN Item		*1..<maxnoofBPLMNs>*			-	
>>>>PLMN Identity	M		9.3.3.5	Broadcast PLMN	-	
>>>>TAI Slice Support List	M		Slice Support List 9.3.1.17	Supported S-NSSAIs per TAC, per PLMN or per SNPN.	-	
>>>>NPN Support	O		9.3.3.44	If the *NID* IE is included, it identifies a SNPN together with the *PLMN Identity* IE.	YES	reject
>>>>Extended TAI Slice Support List	O		Extended Slice Support List 9.3.1.191	Additional Supported S-NSSAIs per TAC, per PLMN or per SNPN.	YES	reject
>>>>TAI NSAG Support List	O		9.3.1.238	NSAG information associated with the slices per TAC, per PLMN or per SNPN.	YES	ignore
>>Configured TAC Indication	O		9.3.3.50		YES	ignore
>>RAT Information	O		9.3.1.125	RAT information associated with the TAC of the indicated PLMN(s).	YES	reject
Default Paging DRX	M		Paging DRX 9.3.1.90	This IE is ignored if the *A-IoT Support* IE is present and set to "A-IoT only".	YES	ignore
UE Retention Information	O		9.3.1.117		YES	ignore
NB-IoT Default Paging DRX	O		9.3.1.137		YES	ignore
Extended RAN Node Name	O		9.3.1.193		YES	ignore
A-IoT Support	O		9.3.1.278		YES	reject
Additional ULI	O		9.3.1.280		YES	ignore

Range bound	Explanation
maxnoofTACs	Maximum no. of TACs. Value is 256.
maxnoofBPLMNs	Maximum no. of Broadcast PLMNs. Value is 12.

9.2.6.2 NG SETUP RESPONSE

This message is sent by the AMF to transfer application layer information for an NG-C interface instance.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF Name	M		9.3.3.21	This IE is ignored if the *Extended AMF Name* IE is present. This IE is ignored if the NG Setup procedure is executed between the NG-RAN node and the AIOTF. This IE is ignored if the NG-RAN node only supports A-IoT.	YES	reject
Served GUAMI List		*1*		This IE is ignored if the NG Setup procedure is executed between the NG-RAN node and the AIOTF. This IE is ignored if the NG-RAN node only supports A-IoT.	YES	reject
>Served GUAMI Item		*1..<maxnoofServedGUAMIs>*			-	
>>GUAMI	M		9.3.3.3		-	
>>Backup AMF Name	O		AMF Name 9.3.3.21	This IE is ignored if the *Extended Backup AMF Name* IE is present.	-	
>>GUAMI Type	O		ENUMERATED (native, mapped, …)		YES	ignore
>>Extended Backup AMF Name	O		Extended AMF Name 9.3.3.51		YES	ignore
Relative AMF Capacity	M		9.3.1.32	This IE is ignored if the NG Setup procedure is executed between the NG-RAN node and the AIOTF. This IE is ignored if the NG-RAN node only supports A-IoT.	YES	ignore
PLMN Support List		*1*		This IE is ignored if the NG Setup procedure is executed between the NG-RAN node and the AIOTF. This IE is ignored if the NG-RAN node only supports A-IoT.	YES	reject
>PLMN Support Item		*1..<maxnoofPLMNs>*			-	
>>PLMN Identity	M		9.3.3.5		-	
>>Slice Support List	M		9.3.1.17	Supported S-NSSAIs per PLMN or per SNPN.	-	

>>NPN Support	O		9.3.3.44	If *NID* IE is included, it identifies a SNPN together with the *PLMN Identity* IE.	YES	reject
>>Extended Slice Support List	O		9.3.1.191	Additional Supported S-NSSAIs per PLMN or per SNPN.	YES	reject
>>Onboarding Support	O		ENUMERATED (true, ...)	Indication of onboarding support.	YES	ignore
Criticality Diagnostics	O		9.3.1.3		YES	ignore
UE Retention Information	O		9.3.1.117		YES	ignore
IAB Supported	O		ENUMERATED (true, ...)	Indication of support for IAB.	YES	ignore
Extended AMF Name	O		9.3.3.51		YES	ignore
Mobile IAB Supported	O		ENUMERATED (true, ...)	Indication of support for mobile IAB.	YES	ignore
AIOTF Identifier	O		9.3.3.70		YES	reject
AIOTF Name	O		9.3.3.76		YES	reject

Range bound	Explanation
maxnoofServedGUAMIs	Maximum no. of GUAMIs served by an AMF. Value is 256.
maxnoofPLMNs	Maximum no. of PLMNs per message. Value is 12.

9.2.6.3 NG SETUP FAILURE

This message is sent by the AMF to indicate NG setup failure.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
Cause	M		9.3.1.2		YES	ignore
Time to Wait	O		9.3.1.56		YES	ignore
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.6.4 RAN CONFIGURATION UPDATE

This message is sent by the NG-RAN node to transfer updated application layer information for an NG-C interface instance.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
RAN Node Name	O		PrintableString (SIZE(1..150, …))		YES	ignore
Supported TA List		*0..1*		Supported TAs in the NG-RAN node.	YES	reject
>Supported TA Item		*1..<maxnoofTACs>*			-	
>>TAC	M		9.3.3.10	Broadcast TAC	-	
>>Broadcast PLMN List		*1*			-	
>>>Broadcast PLMN Item		*1..<maxnoofBPLMNs>*			-	
>>>>PLMN Identity	M		9.3.3.5	Broadcast PLMN	-	
>>>>TAI Slice Support List	M		Slice Support List 9.3.1.17	Supported S-NSSAIs per TAC, per PLMN or per SNPN.	-	
>>>>NPN Support	O		9.3.3.44	If the *NID* IE is included, it identifies a SNPN together with the *PLMN Identity* IE.	YES	reject
>>>>Extended TAI Slice Support List	O		Extended Slice Support List 9.3.1.191	Additional Supported S-NSSAIs per TAC, per PLMN or per SNPN.	YES	reject
>>>>TAI NSAG Support List	O		9.3.1.238	NSAG information associated with the slices per TAC, per PLMN or per SNPN.	YES	ignore
>>Configured TAC Indication	O		9.3.3.50		YES	ignore
>>RAT Information	O		9.3.1.125	RAT information associated with the TAC of the indicated PLMN(s).	YES	reject
Default Paging DRX	O		Paging DRX 9.3.1.90		YES	ignore
Global RAN Node ID	O		9.3.1.5		YES	ignore
NG-RAN TNL Association to Remove List		*0..1*			YES	reject
>NG-RAN TNL Association to Remove Item		*1..<maxnoofTNLAssociations>*			-	
>>TNL Association Transport Layer Address	M		CP Transport Layer Information 9.3.2.6	Transport layer address of the NG-RAN node.	-	
>>TNL Association Transport Layer Address at AMF	O		CP Transport Layer Information 9.3.2.6	Transport layer address of the AMF.	-	
NB-IoT Default Paging DRX	O		9.3.1.137		YES	ignore
Extended RAN Node Name	O		9.3.1.193		YES	ignore
Additional ULI	O		9.3.1.280		YES	ignore
A-IoT Support	O		9.3.1.278		YES	reject

Range bound	Explanation
maxnoofTACs	Maximum no. of TACs. Value is 256.
maxnoofBPLMNs	Maximum no. of Broadcast PLMNs. Value is 12.
maxnoofTNLAssociations	Maximum no. of TNL Associations between the NG-RAN node and the AMF. Value is 32.

9.2.6.5 RAN CONFIGURATION UPDATE ACKNOWLEDGE

This message is sent by the AMF to acknowledge the NG-RAN node transfer of updated information for an NG-C interface instance.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.6.6 RAN CONFIGURATION UPDATE FAILURE

This message is sent by the AMF to indicate RAN configuration update failure.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
Cause	M		9.3.1.2		YES	ignore
Time to Wait	O		9.3.1.56		YES	ignore
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.6.7 AMF CONFIGURATION UPDATE

This message is sent by the AMF to transfer updated information for an NG-C interface instance.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF Name	O		9.3.3.21		YES	reject
Served GUAMI List		*0..1*			YES	reject
>Served GUAMI Item		*1..<maxnoofServedGUAMIs>*			-	
>>GUAMI	M		9.3.3.3		-	
>>Backup AMF Name	O		AMF Name 9.3.3.21	This IE is ignored if the *Extended Backup AMF Name* IE is present.	-	
>>GUAMI Type	O		ENUMERATED (native, mapped, …)		YES	ignore
>>Extended Backup AMF Name	O		Extended AMF Name 9.3.3.51		YES	ignore
Relative AMF Capacity	O		9.3.1.32		YES	ignore
PLMN Support List		*0..1*			YES	reject
>PLMN Support Item		*1..<maxnoofPLMNs>*			-	
>>PLMN Identity	M		9.3.3.5		-	
>>Slice Support List	M		9.3.1.17	Supported S-NSSAIs per PLMN or per SNPN.	-	
>>NPN Support	O		9.3.3.44	If the *NID* IE is included, it identifies a SNPN together with the *PLMN Identity* IE.	YES	reject
>>Extended Slice Support List	O		9.3.1.191	Additional Supported S-NSSAIs per PLMN or per SNPN.	YES	reject
>>Onboarding Support	O		ENUMERATED (true, ...)	Indication of onboarding support.	YES	ignore
AMF TNL Association to Add List		*0..1*			YES	ignore
>AMF TNL Association to Add Item		*1..<maxnoofTNLAssociations>*			-	
>>AMF TNL Association Address	M		CP Transport Layer Information 9.3.2.6	AMF Transport Layer information used to set up the new TNL association.	-	
>>TNL Association Usage	O		9.3.2.9		-	
>>TNL Address Weight Factor	M		9.3.2.10		-	
AMF TNL Association to Remove List		*0..1*			YES	ignore
>AMF TNL Association to Remove Item		*1..<maxnoofTNLAssociations>*			-	
>>AMF TNL Association Address	M		CP Transport Layer Information 9.3.2.6	Transport Layer Address of the AMF.	-	
>>TNL Association Transport Layer Address NG-RAN	O		CP Transport Layer Information 9.3.2.6	Transport Layer Address of the NG-RAN node.	YES	reject

AMF TNL Association to Update List		*0..1*			YES	ignore
>AMF TNL Association to Update Item		*1..<maxnoofTNLAssociations>*			-	
>>AMF TNL Association Address	M		CP Transport Layer Information 9.3.2.6	AMF Transport Layer information used to identify the TNL association to be updated.	-	
>>TNL Association Usage	O		9.3.2.9		-	
>>TNL Address Weight Factor	O		9.3.2.10		-	
Extended AMF Name	O		9.3.3.51		YES	ignore

Range bound	Explanation
maxnoofServedGUAMIs	Maximum no. of GUAMIs served by an AMF. Value is 256.
maxnoofPLMNs	Maximum no. of PLMNs per message. Value is 12.
maxnoofTNLAssociations	Maximum no. of TNL Associations between the NG-RAN node and the AMF. Value is 32.

9.2.6.8 AMF CONFIGURATION UPDATE ACKNOWLEDGE

This message is sent by the NG-RAN node to acknowledge the AMF transfer of updated information for an NG-C interface instance.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF TNL Association Setup List		*0..1*			YES	ignore
>AMF TNL Association Setup Item		*1..<maxnoofTNLAssociations>*			-	
>>AMF TNL Association Address	M		CP Transport Layer Information 9.3.2.6	Previously received AMF Transport Layer information for the TNL association.	-	
AMF TNL Association Failed to Setup List	O		TNL Association List 9.3.2.7		YES	ignore
Criticality Diagnostics	O		9.3.1.3		YES	ignore

Range bound	Explanation
maxnoofTNLAssociations	Maximum no. of TNL Associations between the NG-RAN node and the AMF. Value is 32.

9.2.6.9 AMF CONFIGURATION UPDATE FAILURE

This message is sent by the NG-RAN node to indicate AMF configuration update failure.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
Cause	M		9.3.1.2		YES	ignore
Time to Wait	O		9.3.1.56		YES	ignore
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.6.10 AMF STATUS INDICATION

This message is sent by the AMF to support AMF management functions.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
Unavailable GUAMI List		*1*		Indicates the GUAMIs configured to be unavailable at the AMF	YES	reject
>Unavailable GUAMI Item		*1..<maxnoofServedGUAMIs>*			-	
>>GUAMI	M		9.3.3.3		-	
>>Timer Approach for GUAMI Removal	O		ENUMERATED (apply timer, ...)		-	
>>Backup AMF Name	O		AMF Name 9.3.3.21	This IE is ignored if the *Extended Backup AMF Name* IE is present.	-	
>>Extended Backup AMF Name	O		Extended AMF Name 9.3.3.51		YES	ignore

Range bound	Explanation
maxnoofServedGUAMIs	Maximum no. of GUAMIs served by an AMF. Value is 256.

9.2.6.11 NG RESET

This message is sent by both the NG-RAN node and the AMF to request that the NG interface, or parts of the NG interface, be reset.

Direction: NG-RAN node → AMF and AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
Cause	M		9.3.1.2		YES	ignore
CHOICE *Reset Type*	M				YES	reject
>NG interface						
>>Reset All	M		ENUMERATED (Reset all, …)		-	
>Part of NG interface						
>>UE-associated Logical NG-connection List	M		9.3.3.25		-	

9.2.6.12 NG RESET ACKNOWLEDGE

This message is sent by both the NG-RAN node and the AMF as a response to an NG RESET message.

Direction: NG-RAN node → AMF and AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
UE-associated Logical NG-connection List	O		9.3.3.25		YES	ignore
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.6.13 ERROR INDICATION

This message is sent by both the NG-RAN node and the AMF to indicate that some error has been detected in the node.

Direction: NG-RAN node → AMF and AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
AMF UE NGAP ID	O		9.3.3.1		YES	ignore
RAN UE NGAP ID	O		9.3.3.2		YES	ignore
Cause	O		9.3.1.2		YES	ignore
Criticality Diagnostics	O		9.3.1.3		YES	ignore
5G-S-TMSI	O		9.3.3.20	In the case of NB-IoT UE using Control Plane CIoT 5GS Optimisation, when only 5G-S-TMSI is used to identify UE, the 5G-S-TMSI shall be included.	YES	ignore

9.2.6.14 OVERLOAD START

This message is sent by the AMF and is used to indicate to the NG-RAN node that the AMF is overloaded.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
AMF Overload Response	O		Overload Response 9.3.1.104		YES	reject
AMF Traffic Load Reduction Indication	O		Traffic Load Reduction Indication 9.3.1.106		YES	ignore
Overload Start NSSAI List		*0..1*			YES	ignore
>Overload Start NSSAI Item		*1..<maxnoofSliceItems>*			-	
>>Slice Overload List	M		9.3.1.107		-	
>>Slice Overload Response	O		Overload Response 9.3.1.104		-	
>>Slice Traffic Load Reduction Indication	O		Traffic Load Reduction Indication 9.3.1.106		-	
GUAMI List		*0..1*			YES	ignore
>GUAMI List Item		*1..<maxnoofGUAMIs>*			-	
>>GUAMI	M		9.3.3.3		-	

Range bound	Explanation
maxnoofSliceItems	Maximum no. of signalled slice support items. Value is 1024.
maxnoofGUAMIs	Maximum no. of GUAMIs. Value is 1024.

9.2.6.15 OVERLOAD STOP

This message is sent by the AMF and is used to indicate that the AMF is no longer overloaded.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
GUAMI List		*0..1*			YES	ignore
>GUAMI List Item		*1..<maxnoofGUAMIs>*			-	
>>GUAMI	M		9.3.3.3		-	

Range bound	Explanation
maxnoofGUAMIs	Maximum no. of GUAMIs. Value is 1024.

9.2.6.16 NG REMOVAL REQUEST

This message is sent by the NG-RAN node to initiate the removal of the interface.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
Global RAN Node ID	M		9.3.1.5		YES	reject

9.2.6.17 NG REMOVAL RESPONSE

This message is sent by the AMF to acknowledge the initiation of removal of the interface.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF Name	M		9.3.3.21	This IE is ignored if the *Extended AMF Name* IE is present.	YES	reject
Criticality Diagnostics	O		9.3.1.3		YES	ignore
Extended AMF Name	O		9.3.3.51		YES	ignore

9.2.6.18 NG REMOVAL FAILURE

This message is sent by the AMF to indicate that removing the interface cannot be accepted.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
Cause	M		9.3.1.2		YES	ignore
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.7 Configuration Transfer Messages

9.2.7.1 UPLINK RAN CONFIGURATION TRANSFER

This message is sent by the NG-RAN node in order to transfer RAN configuration information.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
SON Configuration Transfer	O		9.3.3.6		YES	ignore
EN-DC SON Configuration Transfer	O		OCTET STRING	Contains the *EN-DC SON Configuration Transfer* IE as defined in TS 36.413 [16].	YES	ignore
Inter-system SON Configuration Transfer	O		9.3.3.33		YES	ignore

9.2.7.2 DOWNLINK RAN CONFIGURATION TRANSFER

This message is sent by the AMF in order to transfer RAN configuration information.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
SON Configuration Transfer	O		9.3.3.6		YES	ignore
EN-DC SON Configuration Transfer	O		OCTET STRING	Contains the *EN-DC SON Configuration Transfer* IE as defined in TS 36.413 [16].	YES	ignore
Inter-system SON Configuration Transfer	O		9.3.3.33		YES	ignore

9.2.8 Warning Message Transmission Messages

9.2.8.1 WRITE-REPLACE WARNING REQUEST

This message is sent by the AMF to request the start or overwrite of the broadcast of a warning message.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
Message Identifier	M		9.3.1.35		YES	reject
Serial Number	M		9.3.1.36		YES	reject
Warning Area List	O		9.3.1.37		YES	ignore
Repetition Period	M		9.3.1.49		YES	reject
Number of Broadcasts Requested	M		9.3.1.38		YES	reject
Warning Type	O		9.3.1.39		YES	ignore
Warning Security Information	O		OCTET STRING (SIZE(50))	This IE is not used in the specification. If received, the IE is ignored.	YES	ignore
Data Coding Scheme	O		9.3.1.41		YES	ignore
Warning Message Contents	O		9.3.1.42		YES	ignore
Concurrent Warning Message Indicator	O		9.3.1.46		YES	reject
Warning Area Coordinates	O		9.3.1.112		YES	ignore

9.2.8.2 WRITE-REPLACE WARNING RESPONSE

This message is sent by the NG-RAN node to acknowledge the AMF on the start or overwrite request of a warning message.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
Message Identifier	M		9.3.1.35		YES	reject
Serial Number	M		9.3.1.36		YES	reject
Broadcast Completed Area List	O		9.3.1.43		YES	ignore
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.8.3 PWS CANCEL REQUEST

This message is forwarded by the AMF to the NG-RAN node to cancel an already ongoing broadcast of a warning message.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
Message Identifier	M		9.3.1.35		YES	reject
Serial Number	M		9.3.1.36		YES	reject
Warning Area List	O		9.3.1.37		YES	ignore
Cancel-All Warning Messages Indicator	O		9.3.1.47		YES	reject

9.2.8.4 PWS CANCEL RESPONSE

This message is sent by the NG-RAN node to indicate the list of warning areas where cancellation of the broadcast of the identified message was successful and unsuccessful.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
Message Identifier	M		9.3.1.35		YES	reject
Serial Number	M		9.3.1.36		YES	reject
Broadcast Cancelled Area List	O		9.3.1.44		YES	ignore
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.8.5 PWS RESTART INDICATION

This message is sent by the NG-RAN node to inform the AMF that PWS information for some or all cells of the NG-RAN node are available for reloading from the CBC if needed.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
CHOICE *Cell List for Restart*	M				YES	reject
>E-UTRA						
>>E-UTRA Cell List for Restart		*1..<maxnoofCellsinngeNB>*			-	
>>>E-UTRA CGI	M		9.3.1.9		-	
>NR						
>>NR Cell List for Restart		*1..<maxnoofCellsingNB>*			-	
>>>NR CGI	M		9.3.1.7		-	
Global RAN Node ID	M		9.3.1.5		YES	reject
TAI List for Restart		*1..<maxnoofTAIforRestart>*			YES	reject
>TAI	M		9.3.3.11		-	
Emergency Area ID List for Restart		*0..<maxnoofEAIforRestart>*			YES	reject
>Emergency Area ID	M		9.3.1.48		-	

Range bound	Explanation
maxnoofCellsinngeNB	Maximum no. of cells that can be served by an ng-eNB. Value is 256.
maxnoofCellsingNB	Maximum no. of cells that can be served by a gNB. Value is 16384.
maxnoofTAIforRestart	Maximum no. of TAIs subject for reloading warning message broadcast. Value is 2048.
maxnoofEAIforRestart	Maximum no. of Emergency Area IDs subject for reloading warning message broadcast. Value is 256.

9.2.8.6 PWS FAILURE INDICATION

This message is sent by the NG-RAN node to inform the AMF that ongoing PWS operation for one or more cells of the NG-RAN node has failed.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
CHOICE *PWS Failed Cell List*	M				YES	reject
>E-UTRA						
>>PWS Failed E-UTRA Cell List		*1..<maxnoofCellsinngeNB>*			-	
>>>E-UTRA CGI	M		9.3.1.9		-	
>NR						
>>PWS Failed NR Cell List		*1..<maxnoofCellsingNB>*			-	
>>>NR CGI	M		9.3.1.7		-	
Global RAN Node ID	M		9.3.1.5		YES	reject

Range bound	Explanation
maxnoofCellsinngeNB	Maximum no. of cells that can be served by an ng-eNB. Value is 256.
maxnoofCellsingNB	Maximum no. of cells that can be served by a gNB. Value is 16384.

9.2.9 NRPPa Transport Messages

9.2.9.1 DOWNLINK UE ASSOCIATED NRPPA TRANSPORT

This message is sent by the AMF and is used for carrying NRPPa message over the NG interface.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
Routing ID	M		9.3.3.13		YES	reject
NRPPa-PDU	M		9.3.3.14		YES	reject

9.2.9.2 UPLINK UE ASSOCIATED NRPPA TRANSPORT

This message is sent by the NG-RAN node and is used for carrying NRPPa message over the NG interface.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
Routing ID	M		9.3.3.13		YES	reject
NRPPa-PDU	M		9.3.3.14		YES	reject

9.2.9.3 DOWNLINK NON UE ASSOCIATED NRPPA TRANSPORT

This message is sent by the AMF and is used for carrying NRPPa message over the NG interface.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
Routing ID	M		9.3.3.13		YES	reject
NRPPa-PDU	M		9.3.3.14		YES	reject

9.2.9.4 UPLINK NON UE ASSOCIATED NRPPA TRANSPORT

This message is sent by the NG-RAN node and is used for carrying NRPPa message over the NG interface.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
Routing ID	M		9.3.3.13		YES	reject
NRPPa-PDU	M		9.3.3.14		YES	reject

9.2.10 Trace Messages

9.2.10.1 TRACE START

This message is sent by the AMF to initiate a trace session for a UE.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
Trace Activation	M		9.3.1.14		YES	ignore

9.2.10.2 TRACE FAILURE INDICATION

This message is sent by the NG-RAN node to indicate that a Trace Start procedure or a Deactivate Trace procedure has failed for a UE.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
NG-RAN Trace ID	M		OCTET STRING (SIZE(8))	As per NG-RAN Trace ID in *Trace Activation* IE	YES	ignore
Cause	M		9.3.1.2		YES	ignore

9.2.10.3 DEACTIVATE TRACE

This message is sent by the AMF to deactivate a trace session.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
NG-RAN Trace ID	M		OCTET STRING (SIZE(8))	As per NG-RAN Trace ID in *Trace Activation* IE	YES	ignore

9.2.10.4 CELL TRAFFIC TRACE

This message is sent by the NG-RAN node to transfer trace specific information.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
NG-RAN Trace ID	M		OCTET STRING (SIZE(8))	This IE is composed of the following: Trace Reference defined in TS 32.422 [11] (leftmost 6 octets, with PLMN information encoded as in 9.3.3.5), and Trace Recording Session Reference defined in TS 32.422 [11] (last 2 octets).	YES	ignore
NG-RAN CGI	M		9.3.1.73		YES	ignore
Trace Collection Entity IP Address	M		Transport Layer Address 9.3.2.4	For File based Reporting. Defined in TS 32.422 [11]. This IE is ignored if the *Trace Collection Entity URI* IE is present	YES	ignore
Privacy Indicator	O		ENUMERATED (Immediate MDT, Logged MDT, ...)		YES	ignore
Trace Collection Entity URI	O		URI 9.3.2.14	For Streaming based Reporting. Defined in TS 32.422 [11].	YES	ignore

9.2.11 Location Reporting Messages

9.2.11.1 LOCATION REPORTING CONTROL

This message is used by the AMF to request the NG-RAN node to report the location of the UE.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
Location Reporting Request Type	M		9.3.1.65		YES	ignore

9.2.11.2 LOCATION REPORTING FAILURE INDICATION

This message is sent by the NG-RAN node and is used to indicate the failure of location reporting.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
Cause	M		9.3.1.2		YES	ignore
Aerial UE Flight Information Ongoing Reporting Failed	O		ENUMERATED (true, …)		YES	ignore

9.2.11.3 LOCATION REPORT

This message is used to provide the UE's location.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
User Location Information	M		9.3.1.16		YES	ignore
UE Presence in Area of Interest List	O		9.3.1.67		YES	ignore
Location Reporting Request Type	M		9.3.1.65	Contains the Location Reporting Request Type to which the Location Report refers.	YES	ignore

9.2.12 UE TNLA Binding Messages

9.2.12.1 UE TNLA BINDING RELEASE REQUEST

This message is sent by the AMF to request the NG-RAN node to release the TNLA binding for the respective UE.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject

9.2.13 UE Radio Capability Management Messages

9.2.13.1 UE RADIO CAPABILITY INFO INDICATION

This message is sent by the NG-RAN node to provide UE radio capability related information to the AMF.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
UE Radio Capability	M		9.3.1.74		YES	ignore
UE Radio Capability for Paging	O		9.3.1.68		YES	ignore
UE Radio Capability – E-UTRA Format	O		9.3.1.74a		YES	ignore
XR Device with 2Rx	O		ENUMERATED (true, …)	Indicates the UE is a 2Rx XR UE as defined in TS 38.300 [8].	YES	ignore

9.2.13.2 UE RADIO CAPABILITY CHECK REQUEST

This message is sent by the AMF to request the NG-RAN node to check the compatibility between the UE radio capabilities and network configuration on IMS voice.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	reject
RAN UE NGAP ID	M		9.3.3.2		YES	reject
UE Radio Capability	O		9.3.1.74		YES	ignore
UE Radio Capability ID	O		9.3.1.142		YES	reject

9.2.13.3 UE RADIO CAPABILITY CHECK RESPONSE

This message is sent by the NG-RAN node to report IMS voice compatibility between the UE radio capabilities and network configuration.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AMF UE NGAP ID	M		9.3.3.1		YES	ignore
RAN UE NGAP ID	M		9.3.3.2		YES	ignore
IMS Voice Support Indicator	M		9.3.1.89		YES	reject
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.13.4 UE RADIO CAPABILITY ID MAPPING REQUEST

This message is sent by the NG-RAN node to request the AMF to provide mapping information for the indicated UE Radio Capability ID.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
UE Radio Capability ID	M		9.3.1.142		YES	reject

9.2.13.5 UE RADIO CAPABILITY ID MAPPING RESPONSE

This message is sent by the AMF to provide UE Radio Capability information which is mapped to the UE Radio Capability ID indicated by the NG-RAN node in the UE RADIO CAPABILITY ID MAPPING REQUEST message.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
UE Radio Capability ID	M		9.3.1.142		YES	reject
UE Radio Capability	M		9.3.1.74		YES	ignore
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.14 Data Usage Reporting Messages

9.2.14.1 SECONDARY RAT DATA USAGE REPORT

This message is sent by the NG-RAN node to report Secondary RAT data usage.

Direction: NG-RAN → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
AMF UE NGAP ID	M		9.3.3.1		YES	ignore
RAN UE NGAP ID	M		9.3.3.2		YES	ignore
PDU Session Resource Secondary RAT Usage List		*1*			YES	ignore
>PDU Session Resource Secondary RAT Usage Item		*1..<maxnoofPDUSessions>*			-	
>>PDU Session ID	M		9.3.1.50		-	
>>Secondary RAT Data Usage Report Transfer	M		OCTET STRING	Containing the *Secondary RAT Data Usage Report Transfer* IE specified in clause 9.3.4.23	-	
Handover Flag	O		ENUMERATED (handover_preparation, …)		YES	ignore
User Location Information	O		9.3.1.16		YES	ignore

Range bound	Explanation
maxnoofPDUSessions	Maximum no. of PDU sessions allowed towards one UE. Value is 256.

9.2.15 RIM Information Transfer Messages

9.2.15.1 UPLINK RIM INFORMATION TRANSFER

This message is sent by the NG-RAN node to the AMF to transfer the RIM Information.

Direction: NG-RAN → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
RIM Information Transfer	O		9.3.3.28		YES	ignore

9.2.15.2 DOWNLINK RIM INFORMATION TRANSFER

This message is sent by the AMF to the NG-RAN node to transfer the RIM Information.

Direction: AMF → NG-RAN

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
RIM Information Transfer	O		9.3.3.28		YES	ignore

9.2.16 Broadcast Session Management Messages

9.2.16.1 BROADCAST SESSION SETUP REQUEST

This message is sent by the AMF to establish MBS session resources for a broadcast MBS session.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
MBS Session ID	M		9.3.1.206		YES	reject
S-NSSAI	M		9.3.1.24		YES	reject
MBS Service Area	M		9.3.1.208		YES	reject
MBS Session Setup Request Transfer	M		OCTET STRING	Containing the *MBS Session Setup or Modification Request Transfer* IE specified in clause 9.3.5.3	YES	reject
Associated Session ID	O		9.3.1.262		YES	ignore

9.2.16.2 BROADCAST SESSION SETUP RESPONSE

This message is sent by the NG-RAN node to report the successful outcome of the request from the BROADCAST SESSION SETUP REQUEST message.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
MBS Session ID	M		9.3.1.206		YES	reject
MBS Session Setup Response Transfer	O		OCTET STRING	Containing the *MBS Session Setup or Modification Response Transfer* IE specified in clause 9.3.5.5	YES	reject
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.16.3 BROADCAST SESSION SETUP FAILURE

This message is sent by the NG-RAN node to report the unsuccessful outcome of the request from the BROADCAST SESSION SETUP REQUEST message.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
MBS Session ID	M		9.3.1.206		YES	reject
MBS Session Setup Failure Transfer	O		OCTET STRING	Containing the *MBS Session Setup or Modification Failure Transfer* IE specified in clause 9.3.5.6	YES	ignore
Cause	M		9.3.1.2		YES	ignore
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.16.4 BROADCAST SESSION MODIFICATION REQUEST

This message is sent by the AMF to modify MBS session resources or the MBS session broadcast area of a previously established broadcast MBS session.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
MBS Session ID	M		9.3.1.206		YES	reject
MBS Service Area	O		9.3.1.208		YES	reject
MBS Session Modification Request Transfer	O		OCTET STRING	Containing the *MBS Session Setup or Modification Request Transfer* IE specified in clause 9.3.5.3	YES	reject

9.2.16.5 BROADCAST SESSION MODIFICATION RESPONSE

This message is sent by the NG-RAN node to report the successful outcome of the request from the BROADCAST SESSION MODIFICATION REQUEST message.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
MBS Session ID	M		9.3.1.206		YES	reject
MBS Session Modification Response Transfer	O		OCTET STRING	Containing the *MBS Session Setup or Modification Response Transfer* IE specified in clause 9.3.5.5	YES	reject
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.16.6 BROADCAST SESSION MODIFICATION FAILURE

This message is sent by the NG-RAN node to report the unsuccessful outcome of the request from the BROADCAST SESSION MODIFICATION REQUEST message.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
MBS Session ID	M		9.3.1.206		YES	reject
MBS Session Modification Failure Transfer	O		OCTET STRING	Containing the *MBS Session Setup or Modification Failure Transfer* IE specified in clause 9.3.5.6	YES	ignore
Cause	M		9.3.1.2		YES	ignore
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.16.7 BROADCAST SESSION RELEASE REQUEST

This message is sent by the AMF to release the MBS session resources of a previously established broadcast MBS session.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
MBS Session ID	M		9.3.1.206		YES	reject
Cause	M		9.3.1.2		YES	ignore

9.2.16.8 BROADCAST SESSION RELEASE RESPONSE

This message is sent by the NG-RAN node to acknowledge the BROADCAST SESSION RELEASE REQUEST message.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
MBS Session ID	M		9.3.1.206		YES	reject
MBS Session Release Response Transfer	O		OCTET STRING	Containing the *MBS Session Release Response Transfer* IE specified in clause 9.3.5.14	YES	ignore
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.16.9 BROADCAST SESSION RELEASE REQUIRED

This message is sent by the NG-RAN node to trigger the AMF to initiate the release of corresponding MBS session resources.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
MBS Session ID	M		9.3.1.206		YES	reject
Cause	M		9.3.1.2		YES	ignore

9.2.16.10 BROADCAST SESSION TRANSPORT REQUEST

This message is sent by the NG-RAN node to request the setup of the NG-U transport for a broadcast MBS session.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
MBS Session ID	M		9.3.1.206		YES	reject
Broadcast Transport Request Transfer	M		OCTET STRING	Containing the *Broadcast Transport Request Transfer* IE specified in clause 9.3.5.15	YES	reject

9.2.16.11 BROADCAST SESSION TRANSPORT RESPONSE

This message is sent by the AMF to confirm the setup of the NG-U transport for the broadcast MBS session.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
MBS Session ID	M		9.3.1.206		YES	reject
Broadcast Transport Response Transfer	M		OCTET STRING	Containing the *Broadcast Transport Response Transfer* IE specified in clause 9.3.5.16	YES	reject
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.16.12 BROADCAST SESSION TRANSPORT FAILURE

This message is sent by the AMF to indicate that the setup of the NG-U transport was unsuccessful.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
MBS Session ID	M		9.3.1.206		YES	reject
Broadcast Transport Failure Transfer	M		OCTET STRING	Containing the *Broadcast Transport Failure Transfer* IE specified in clause 9.3.5.17	YES	ignore
Cause	M		9.3.1.2		YES	ignore
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.17 Multicast Session Management Messages

9.2.17.1 DISTRIBUTION SETUP REQUEST

This message is sent by the NG-RAN node to request the setup of the NG-U transport for a multicast MBS session, or for one area session of a location dependent multicast MBS session.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
MBS Session ID	M		9.3.1.206		YES	reject
MBS Area Session ID	O		9.3.1.207		YES	reject
MBS Distribution Setup Request Transfer	M		OCTET STRING	Containing the *MBS Distribution Setup Request Transfer* IE specified in clause 9.3.5.7.	YES	reject

9.2.17.2 DISTRIBUTION SETUP RESPONSE

This message is sent by the AMF to confirm the setup of the NG-U transport.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
MBS Session ID	M		9.3.1.206		YES	reject
MBS Area Session ID	O		9.3.1.207		YES	reject
MBS Distribution Setup Response Transfer	M		OCTET STRING	Containing the *MBS Distribution Setup Response Transfer* IE specified in clause 9.3.5.8.	YES	reject
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.17.3 DISTRIBUTION SETUP FAILURE

This message is sent by the AMF to indicate that the setup of the NG-U transport was unsuccessful.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
MBS Session ID	M		9.3.1.206		YES	reject
MBS Area Session ID	O		9.3.1.207		YES	reject
MBS Distribution Setup Unsuccessful Transfer	M		OCTET STRING	Containing the *MBS Distribution Setup Unsuccessful Transfer* IE specified in clause 9.3.5.9.	YES	ignore
Cause	M		9.3.1.2		YES	ignore
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.17.4 DISTRIBUTION RELEASE REQUEST

This message is sent by the NG-RAN node to request the release of the NG-U transport.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
MBS Session ID	M		9.3.1.206		YES	reject
MBS Area Session ID	O		9.3.1.207		YES	reject
MBS Distribution Release Request Transfer	M		OCTET STRING	Containing the *MBS Distribution Release Request Transfer* IE specified in clause 9.3.5.10.	YES	reject
Cause	M		9.3.1.2		YES	ignore

9.2.17.5 DISTRIBUTION RELEASE RESPONSE

This message is sent by the AMF to confirm the release of the NG-U transport.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
MBS Session ID	M		9.3.1.206		YES	reject
MBS Area Session ID	O		9.3.1.207		YES	reject
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.17.6 MULTICAST SESSION ACTIVATION REQUEST

This message is sent by the AMF to a NG-RAN node to request for activating MBS session resources for a multicast MBS session.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
MBS Session ID	M		9.3.1.206		YES	reject
Multicast Session Activation Request Transfer	M		OCTET STRING	Containing the *Multicast Session Activation Request Transfer* IE specified in clause 9.3.5.11.	YES	reject

9.2.17.7 MULTICAST SESSION ACTIVATION RESPONSE

This message is sent by the NG-RAN node to the AMF to indicate that the MBS session resources have been activated.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
MBS Session ID	M		9.3.1.206		YES	reject
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.17.8 MULTICAST SESSION ACTIVATION FAILURE

This message is sent by the NG-RAN node to the AMF to indicate that the requested activation of the MBS session resources has failed.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
MBS Session ID	M		9.3.1.206		YES	reject
Cause	M		9.3.1.2		YES	ignore
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.17.9 MULTICAST SESSION DEACTIVATION REQUEST

This message is sent by the AMF to a NG-RAN node to request to deactivate the MBS session resources of a multicast MBS session.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
MBS Session ID	M		9.3.1.206		YES	reject
Multicast Session Deactivation Request Transfer	M		OCTET STRING	Containing the *Multicast Session Deactivation Request Transfer* IE specified in clause 9.3.5.12.	YES	reject

9.2.17.10 MULTICAST SESSION DEACTIVATION RESPONSE

This message is sent by the NG-RAN node to the AMF to indicate that the MBS session resources have been deactivated.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
MBS Session ID	M		9.3.1.206		YES	reject
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.17.11 MULTICAST SESSION UPDATE REQUEST

This message is sent by the AMF to a NG-RAN node to update the MBS session resources information.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
MBS Session ID	M		9.3.1.206		YES	reject
MBS Area Session ID	O		9.3.1.207		YES	reject
Multicast Session Update Request Transfer	M		OCTET STRING	Containing the *Multicast Session Update Request Transfer* IE specified in clause 9.3.5.13.	YES	reject

9.2.17.12 MULTICAST SESSION UPDATE RESPONSE

This message is sent by the NG-RAN node to the AMF to confirm the update of MBS information.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
MBS Session ID	M		9.3.1.206		YES	reject
MBS Area Session ID	O		9.3.1.207		YES	reject
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.17.13 MULTICAST SESSION UPDATE FAILURE

This message is sent by the NG-RAN node to the AMF to indicate multicast session update failure.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
MBS Session ID	M		9.3.1.206		YES	reject
MBS Area Session ID	O		9.3.1.207		YES	reject
Cause	M		9.3.1.2		YES	ignore
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.18 Timing Synchronisation Status Reporting Messages

9.2.18.1 TIMING SYNCHRONISATION STATUS REQUEST

This message is sent by the AMF to request the NG-RAN node to start or stop reporting of RAN timing synchronization status information.

Direction: AMF → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
Routing ID	M		9.3.3.13	Indicating the TSCTSF NF ID, refer to TS 23.502 [10]	YES	reject
RAN TSS Request Type	M		ENUMERATED (start, stop, …)		YES	reject

9.2.18.2 TIMING SYNCHRONISATION STATUS RESPONSE

This message is sent by the NG-RAN node to confirm the request to start or stop reporting of RAN timing synchronization status information.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
Routing ID	M		9.3.3.13	Indicating the TSCTSF NF ID, refer to TS 23.502 [10]	YES	ignore
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.18.3 TIMING SYNCHRONISATION STATUS FAILURE

This message is sent by the NG-RAN node to indicate that reporting of RAN timing synchronisation status information cannot be initiated.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
Routing ID	M		9.3.3.13	Indicating the TSCTSF NF ID, refer to TS 23.502 [10]	YES	ignore
Cause	M		9.3.1.2		YES	ignore
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.18.4 TIMING SYNCHRONISATION STATUS REPORT

This message is sent by the NG-RAN node to report previously requested RAN timing synchronisation status information.

Direction: NG-RAN node → AMF

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
Routing ID	M		9.3.3.13	Indicating the TSCTSF NF ID, refer to TS 23.502 [10]	YES	ignore
RAN Timing Synchronisation Status Information	M		9.3.1.252		YES	ignore
RAN TSS Scope	M		9.3.1.254		YES	ignore

9.2.19 A-IoT Messages

9.2.19.1 INVENTORY REQUEST

This message is sent by the A-IoT CN node to trigger the NG-RAN node to perform A-IoT paging over the A-IoT radio.

Direction: A-IoT CN node → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AIOTF Identifier	M		9.3.3.70		YES	reject
A-IoT Correlation Identifier	M		9.3.3.69		YES	reject
Inventory Request Transfer	M		OCTET STRING	Containing the *Inventory Request Transfer* IE specified in clause 9.3.6.1	YES	reject

9.2.19.2 INVENTORY RESPONSE

This message is sent by the NG-RAN node to report the successful outcome of the request from the INVENTORY REQUEST message.

Direction: NG-RAN node → A-IoT CN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AIOTF Identifier	M		9.3.3.70		YES	reject
A-IoT Correlation Identifier	M		9.3.3.69		YES	reject
Inventory Response Transfer	M		OCTET STRING	Containing the Inventory *Response Transfer* IE specified in clause 9.3.6.2	YES	reject
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.19.3 INVENTORY FAILURE

This message is sent by the NG-RAN node to report the unsuccessful outcome of the request from the INVENTORY REQUEST message.

Direction: NG-RAN node → A-IoT CN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AIOTF Identifier	M		9.3.3.70		YES	ignore
A-IoT Correlation Identifier	M		9.3.3.69		YES	ignore
Inventory Failure Transfer	M		OCTET STRING	Containing the *Inventory Failure Transfer* IE specified in clause 9.3.6.3	YES	ignore
Cause	M		9.3.1.2		YES	ignore
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.19.4 INVENTORY REPORT

This message is sent by the NG-RAN node to provide the inventory report to the A-IoT CN node.

Direction: NG-RAN node → A-IoT CN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AIOTF Identifier	M		9.3.3.70		YES	reject
A-IoT Correlation Identifier	M		9.3.3.69		YES	reject
Inventory Report Transfer	M		OCTET STRING	Containing the *Inventory Report Transfer* IE specified in clause 9.3.6.4	YES	reject

9.2.19.5 COMMAND REQUEST

This message is sent by the A-IoT CN node to the gNB to trigger the command transmission over the A-IoT radio.

Direction: A-IoT CN node → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AIOTF Identifier	M		9.3.3.70		YES	reject
A-IoT Correlation Identifier	M		9.3.3.69		YES	reject
RAN A-IoT Device NGAP ID	M		9.3.3.74		YES	reject
Command Request Transfer	M		OCTET STRING	Containing the *Command Request Transfer* IE specified in clause 9.3.6.5.	YES	reject

9.2.19.6 COMMAND RESPONSE

This message is sent by the NG-RAN node to provide the command response to the A-IoT CN node.

Direction: NG-RAN node → A-IoT CN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AIOTF Identifier	M		9.3.3.70		YES	reject
A-IoT Correlation Identifier	M		9.3.3.69		YES	reject
RAN A-IoT Device NGAP ID	M		9.3.3.74		YES	reject
Command Response Transfer	M		OCTET STRING	Containing the *Command Response Transfer* IE specified in clause 9.3.6.6.	YES	reject
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.19.7 COMMAND FAILURE

This message is sent by the NG-RAN node to report the unsuccessful transmission of the command to the A-IoT CN node.

Direction: NG-RAN node → A-IoT CN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AIOTF Identifier	M		9.3.3.70		YES	ignore
A-IoT Correlation Identifier	M		9.3.3.69		YES	ignore
RAN A-IoT Device NGAP ID	M		9.3.3.74		YES	ignore
Command Failure Transfer	M		OCTET STRING	Containing the *Command Failure Transfer* IE specified in clause 9.3.6.7.	YES	ignore
Cause	M		9.3.1.2		YES	ignore
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.19.8 AIOT SESSION RELEASE COMMAND

This message is sent by the A-IoT CN node to the gNB to trigger the release of the A-IoT session.

Direction: A-IoT CN node → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AIOTF Identifier	M		9.3.3.70		YES	reject
A-IoT Correlation Identifier	M		9.3.3.69		YES	reject
AIOT Session Release Command Transfer	M		OCTET STRING	Containing the *AIOT Session Release Command Transfer* IE specified in clause 9.3.6.8.	YES	reject

9.2.19.9 AIOT SESSION RELEASE COMPLETE

This message is sent by the NG-RAN node to respond to the A-IoT session release command to the A-IoT CN node.

Direction: NG-RAN node → A-IoT CN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AIOTF Identifier	M		9.3.3.70		YES	ignore
A-IoT Correlation Identifier	M		9.3.3.69		YES	ignore
AIOT Session Release Complete Transfer	M		OCTET STRING	Containing the *AIOT Session Release Complete Transfer* IE specified in clause 9.3.6.9.	YES	ignore
Criticality Diagnostics	O		9.3.1.3		YES	ignore

9.2.19.10 AIOT SESSION RELEASE REQUEST

This message is sent by the gNB to request the A-IoT CN node to trigger the release of the A-IoT session.

Direction: NG-RAN node → A-IoT CN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	reject
AIOTF Identifier	M		9.3.3.70		YES	reject
A-IoT Correlation Identifier	M		9.3.3.69		YES	reject
AIOT Session Release Request Transfer	M		OCTET STRING	Containing the *AIOT Session Release Request Transfer* IE specified in clause 9.3.6.10.	YES	reject

9.3 Information Element Definitions

9.3.1 Radio Network Layer Related IEs

9.3.1.1 Message Type

The *Message Type* IE uniquely identifies the message being sent. It is mandatory for all messages.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Procedure Code	M		INTEGER (0..255)	
Type of Message	M		CHOICE (Initiating Message, Successful Outcome, Unsuccessful Outcome, …)	

9.3.1.2 Cause

The purpose of the *Cause* IE is to indicate the reason for a particular event for the NGAP protocol.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE *Cause Group*	M			
>Radio Network Layer				

>>Radio Network Layer Cause	M		ENUMERATED (Unspecified, TXnRELOCOverall expiry, Successful handover, Release due to NG-RAN generated reason, Release due to 5GC generated reason, Handover cancelled, Partial handover, Handover failure in target 5GC/NG-RAN node or target system, Handover target not allowed, TNGRELOCoverall expiry, TNGRELOCprep expiry, Cell not available, Unknown target ID, No radio resources available in target cell, Unknown local UE NGAP ID, Inconsistent remote UE NGAP ID, Handover desirable for radio reasons, Time critical handover, Resource optimisation handover, Reduce load in serving cell, User inactivity, Radio connection with UE lost, Radio resources not available, Invalid QoS combination, Failure in the radio interface procedure, Interaction with other procedure, Unknown PDU Session ID, Unknown QoS Flow ID, Multiple PDU Session ID Instances, Multiple QoS Flow ID Instances, Encryption and/or integrity protection algorithms not supported, NG intra-system handover triggered, NG inter-system handover triggered, Xn handover triggered, Not supported 5QI value, UE context transfer, IMS voice EPS fallback or RAT fallback triggered, UP integrity protection not possible, UP confidentiality protection not possible, Slice(s) not supported, UE in RRC_INACTIVE state not reachable, Redirection, Resources not available for the slice(s), UE maximum integrity protected data rate reason, Release due to CN-detected mobility, …, N26 interface not available, Release due to pre-emption, Multiple Location Reporting Reference ID Instances, RSN not available for the UP, NPN access denied,	

			CAG only access denied, Insufficient UE Capabilities, RedCap UE not supported, Unknown MBS Session ID, Indicated MBS Session Area Information not served by the gNB, Inconsistent slice info for the session, Misaligned association for the multicast and unicast sessions or flows, eRedCap UE not supported, 2Rx XR UE not supported, Aerial UE flight information reporting initiation failure, Unknown RAN A-IoT Device NGAP ID, Requested A-IoT service area information not served by the gNB, Unknown A-IoT Session, A-IoT device not reachable, Multiple A-IoT Session Instances)	
>Transport Layer				
>>Transport Layer Cause	M		ENUMERATED (Transport resource unavailable, Unspecified, …)	
>NAS				
>>NAS Cause	M		ENUMERATED (Normal release, Authentication failure, Deregister, Unspecified, …, UE not in PLMN serving area, Mobile IAB not authorized, IAB not authorized, No A-IoT NAS response)	
>Protocol				
>>Protocol Cause	M		ENUMERATED (Transfer syntax error, Abstract syntax error (reject), Abstract syntax error (ignore and notify), Message not compatible with receiver state, Semantic error, Abstract syntax error (falsely constructed message), Unspecified, …)	
>Miscellaneous				
>>Miscellaneous Cause	M		ENUMERATED (Control processing overload, Not enough user plane processing resources, Hardware failure, O&M intervention, Unknown PLMN or SNPN, Unspecified, …)	

The meaning of the different cause values is described in the following tables. In general, "not supported" cause values indicate that the related capability is missing. On the other hand, "not available" cause values indicate that the related capability is present, but insufficient resources were available to perform the requested action.

Radio Network Layer cause	Meaning
Unspecified	Sent for radio network layer cause when none of the specified cause values applies.
TXnRELOCOverall expiry	The timer guarding the handover that takes place over Xn has abnormally expired.
Successful handover	Successful handover.
Release due to NG-RAN generated reason	Release is initiated due to NG-RAN generated reason.
Release due to 5GC generated reason	Release is initiated due to 5GC generated reason.
Handover cancelled	The reason for the action is cancellation of Handover.
Partial handover	Provides a reason for the handover cancellation. The HANDOVER COMMAND message from AMF contained *PDU Session Resource to Release List* IE or *QoS flow to Release List* and the source NG-RAN node estimated service continuity for the UE would be better by not proceeding with handover towards this particular target NG-RAN node.
Handover failure in target 5GC/ NG-RAN node or target system	The handover failed due to a failure in target 5GC/NG-RAN node or target system.
Handover target not allowed	Handover to the indicated target cell is not allowed for the UE in question.
$TNG_{RELOCoverall}$ expiry	The reason for the action is expiry of timer $TNG_{RELOCoverall}$.
$TNG_{RELOCprep}$ expiry	Handover Preparation procedure is cancelled when timer $TNG_{RELOCprep}$ expires.
Cell not available	The concerned cell is not available.
Unknown target ID	Handover rejected because the target ID is not known to the AMF.
No radio resources available in target cell	Load on target cell is too high.
Unknown local UE NGAP ID	The action failed because the receiving node does not recognise the local UE NGAP ID.
Inconsistent remote UE NGAP ID	The action failed because the receiving node considers that the received remote UE NGAP ID is inconsistent.
Handover desirable for radio reasons	The reason for requesting handover is radio related.
Time critical handover	Handover is requested for time critical reason i.e., this cause value is reserved to represent all critical cases where the connection is likely to be dropped if handover is not performed.
Resource optimisation handover	The reason for requesting handover is to improve the load distribution with the neighbour cells.
Reduce load in serving cell	Load on serving cell needs to be reduced. When applied to handover preparation, it indicates the handover is triggered due to load balancing.
User inactivity	The action is requested due to inactivity on all user data radio bearers (i.e., DRBs and, if applicable, MRBs as per clause 16.10.5.2 in TS 38.300 [8]), e.g., NG is requested to be released in order to optimise the radio resources. For L2 U2N Relay UE, this action is requested due to user inactivity on all PDU sessions of L2 U2N Relay UE and its served remote UE(s).
Radio connection with UE lost	The action is requested due to losing the radio connection to the UE.
Radio resources not available	No requested radio resources are available.
Invalid QoS combination	The action was failed because of invalid QoS combination.
Failure in the radio interface procedure	Radio interface procedure has failed.
Interaction with other procedure	The action is due to an ongoing interaction with another procedure.
Unknown PDU Session ID	The action failed because the PDU Session ID is unknown in the NG-RAN node.
Unknown QoS Flow ID	The action failed because the QoS Flow ID is unknown in the NG-RAN node.
Multiple PDU Session ID instances	The action failed because multiple instances of the same PDU Session had been provided to/from the NG-RAN node.
Multiple QoS Flow ID instances	The action failed because multiple instances of the same QoS flow had been provided to the NG-RAN node.
Encryption and/or integrity protection algorithms not supported	The NG-RAN node is unable to support any of the encryption and/or integrity protection algorithms supported by the UE.
NG intra-system handover triggered	The action is due to a NG intra-system handover that has been triggered.
NG inter-system handover triggered	The action is due to a NG inter-system handover that has been triggered.
Xn handover triggered	The action is due to an Xn handover that has been triggered.
Not supported 5QI value	The QoS flow setup failed because the requested 5QI is not supported.
UE context transfer	The action is due to a UE resumes from the NG-RAN node different from the one which sent the UE into RRC_INACTIVE state.
IMS voice EPS fallback or RAT fallback triggered	The setup of QoS flow is failed due to EPS fallback or RAT fallback for IMS voice using handover or redirection.
UP integrity protection not possible	The PDU session cannot be accepted according to the required user plane integrity protection policy.

Radio Network Layer cause	Meaning
UP confidentiality protection not possible	The PDU session cannot be accepted according to the required user plane confidentiality protection policy.
Slice(s) not supported	Slice(s) not supported.
UE in RRC_INACTIVE state not reachable	The action is requested due to RAN paging failure.
Redirection	The release is requested due to inter-system redirection or intra-system redirection.
Resources not available for the slice(s)	The requested resources are not available for the slice(s).
UE maximum integrity protected data rate reason	The request is not accepted in order to comply with the maximum data rate for integrity protection supported by the UE.
Release due to CN-detected mobility	The context release is requested by the AMF because the UE is already served by another CN node (same or different system), or another NG interface of the same CN node.
N26 interface not available	The action failed due to a temporary failure of the N26 interface.
Release due to pre-emption	Release is initiated due to pre-emption.
Multiple Location Reporting Reference ID Instances	The action failed because multiple areas of interest are set with the same Location Reporting Reference ID.
RSN not available for the UP	The redundant user plane resources indicated by RSN are not available.
NPN access denied	Access was denied, or release is requested, for NPN reasons.
CAG only access denied	Access was denied because the cell is a non-CAG cell and UE is only allowed to access CAG cells.
Insufficient UE Capabilities	The procedure can't proceed due to insufficient UE capabilities.
RedCap UE not supported	The action failed because target NG-RAN node does not support RedCap UE.
Unknown MBS Session ID	The action failed because the MBS Session ID is unknown.
Indicated MBS Service Area Information not served by the gNB	The action failed because none of the cells in the indicated MBS Service Area Information are served by the NG-RAN node.
Inconsistent slice info for the session	The action failed because the slice info of the multicast session is inconsistent.
Misaligned association for the multicast and unicast sessions or flows	The action failed because the Associated Unicast QoS Flow ID has already been used, or the Associated Unicast QoS Flow ID is not defined, or the Associated Unicast QoS Flow ID is not released, or multiple MBS QoS flows associated to the same unicast QoS flow, or same multicast session associated to multiple PDU Sessions.
eRedCap UE not supported	The action failed because target NG-RAN node does not support eRedCap UE.
2Rx XR UE not supported	The action failed because target NG-RAN node does not support 2Rx XR UE.
Aerial UE flight information reporting initiation failure	The action failed because gNB cannot initiate the aerial UE flight information reporting.
Unknown RAN A-IoT Device NGAP ID	The action failed because the receiving node does not recognise the RAN A-IoT Device NGAP ID for the involved A-IoT session.
Requested A-IoT service area information not served by the gNB	The action failed because neither the A-IoT Area(s) nor the reader(s) indicated in the Requested Service Area Information are served by the NG-RAN node.
Unknown A-IoT Session	The action failed because the A-IoT Session (identified by the combination of AIOTF Identifier and A-IoT Correlation Identifier) is unknown.
A-IoT device not reachable	The action failed because the A-IoT device is not reachable.
Multiple A-IoT Session instances	The action failed because multiple concurrent instances of the same A-IoT Session (identified by identical combinations of an AIOTF identifier and an A-IoT Correlation Identifier) have been provided to the NG-RAN node.

Transport Layer cause	Meaning
Transport resource unavailable	The required transport resources are not available.
Unspecified	Sent when none of the specified cause values applies but still the cause is Transport Network Layer related.

NAS cause	Meaning
Normal release	The release is normal.
Authentication failure	The action is due to authentication failure.
Deregister	The action is due to deregister.
Unspecified	Sent when none of the specified cause values applies but still the cause is NAS related.
UE not in PLMN serving area	The release is due to the UE not being within the serving area of its current PLMN (for NTN).
Mobile IAB not authorized	The release is due to the NG-RAN node having completed the operation for a non-authorized mobile IAB-node.
IAB not authorized	The action is requested due to the NG-RAN node having completed the operation for a non-authorized IAB-node.
No A-IoT NAS response	The action is due to no A-IoT NAS response received from the A-IoT device.

Protocol cause	Meaning
Transfer syntax error	The received message included a transfer syntax error.
Abstract syntax error (reject)	The received message included an abstract syntax error and the concerning criticality indicated "reject".
Abstract syntax error (ignore and notify)	The received message included an abstract syntax error and the concerning criticality indicated "ignore and notify".
Message not compatible with receiver state	The received message was not compatible with the receiver state.
Semantic error	The received message included a semantic error.
Abstract syntax error (falsely constructed message)	The received message contained IEs or IE groups in wrong order or with too many occurrences.
Unspecified	Sent when none of the specified cause values applies but still the cause is Protocol related.

Miscellaneous cause	Meaning
Control processing overload	Control processing overload.
Not enough user plane processing resources	Not enough resources are available related to user plane processing.
Hardware failure	Action related to hardware failure.
O&M intervention	The action is due to O&M intervention.
Unknown PLMN or SNPN	The AMF does not identify any PLMN or SNPN provided by the NG-RAN node.
Unspecified failure	Sent when none of the specified cause values applies and the cause is not related to any of the categories Radio Network Layer, Transport Network Layer, NAS or Protocol.

9.3.1.3 Criticality Diagnostics

The *Criticality Diagnostics* IE is sent by the NG-RAN node or the AMF when parts of a received message have not been comprehended or were missing, or if the message contained logical errors. When applicable, it contains information about which IEs were not comprehended or were missing.

For further details on how to use the *Criticality Diagnostics* IE, see clause 10.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Procedure Code	O		INTEGER (0..255)	Used if Criticality Diagnostics is part of Error Indication procedure, and not within the response message of the same procedure that caused the error.
Triggering Message	O		ENUMERATED (initiating message, successful outcome, unsuccessful outcome)	Used only if the Criticality Diagnostics is part of Error Indication procedure.
Procedure Criticality	O		ENUMERATED (reject, ignore, notify)	Used for reporting the Criticality of the Triggering message (Procedure).
Information Element Criticality Diagnostics		*0..<maxnoofErrors>*		
>IE Criticality	M		ENUMERATED (reject, ignore, notify)	Used for reporting the criticality of the triggering IE. The value 'ignore' is not applicable.
>IE ID	M		INTEGER (0..65535)	The IE ID of the not understood or missing IE.
>Type of Error	M		ENUMERATED (not understood, missing, …)	

Range bound	Explanation
maxnoofErrors	Maximum no. of IE errors allowed to be reported with a single message. Value is 256.

9.3.1.4 Bit Rate

This IE indicates the number of bits delivered by NG-RAN in UL or to NG-RAN in DL or by UE in sidelink within a period of time, divided by the duration of the period. It is used, for example, to indicate the maximum or guaranteed bit rate for a GBR QoS flow, or an aggregate maximum bit rate.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Bit Rate	M		INTEGER (0..4,000,000,000,000, …)	The unit is: bit/s

9.3.1.5 Global RAN Node ID

This IE is used to globally identify an NG-RAN node (see TS 38.300 [8]).

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
CHOICE *NG-RAN node*	M				-	
>gNB						
>>Global gNB ID	M		9.3.1.6		-	
>ng-eNB						
>>Global ng-eNB ID	M		9.3.1.8		-	
>N3IWF						
>>Global N3IWF ID	M		9.3.1.57		-	
>TNGF						
>>Global TNGF ID	M		9.3.1.161		YES	reject
>TWIF						
>>Global TWIF ID	M		9.3.1.163		YES	reject
>W-AGF						
>>Global W-AGF ID	M		9.3.1.162		YES	reject

9.3.1.6 Global gNB ID

This IE is used to globally identify a gNB (see TS 38.300 [8]).

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PLMN Identity	M		9.3.3.5	
CHOICE *gNB ID*	M			
>gNB ID				
>>gNB ID	M		BIT STRING (SIZE(22..32))	Equal to the leftmost bits of the *NR Cell Identity* IE contained in the *NR CGI* IE of each cell served by the gNB.

9.3.1.7 NR CGI

This IE is used to globally identify an NR cell (see TS 38.300 [8]).

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PLMN Identity	M		9.3.3.5	
NR Cell Identity	M		BIT STRING (SIZE(36))	The leftmost bits of the *NR Cell Identity* IE correspond to the gNB ID (defined in clause 9.3.1.6).

9.3.1.8 Global ng-eNB ID

This IE is used to globally identify an ng-eNB (see TS 38.300 [8]).

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PLMN Identity	M		9.3.3.5	
CHOICE *ng-eNB ID*	M			
>Macro ng-eNB ID				
>>Macro ng-eNB ID	M		BIT STRING (SIZE(20))	Equal to the 20 leftmost bits of the *E-UTRA Cell Identity* IE contained in the *E-UTRA CGI* IE of each cell served by the ng-eNB.
>Short Macro ng-eNB ID				
>>Short Macro ng-eNB ID	M		BIT STRING (SIZE(18))	Equal to the 18 leftmost bits of the *E-UTRA Cell Identity* IE contained in the *E-UTRA CGI* IE of each cell served by the ng-eNB.
>Long Macro ng-eNB ID				
>>Long Macro ng-eNB ID	M		BIT STRING (SIZE(21))	Equal to the 21 leftmost bits of the *E-UTRA Cell Identity* IE contained in the *E-UTRA CGI* IE of each cell served by the ng-eNB.

9.3.1.9 E-UTRA CGI

This IE is used to globally identify an E-UTRA cell (see TS 36.300 [17]).

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PLMN Identity	M		9.3.3.5	
E-UTRA Cell Identity	M		BIT STRING (SIZE(28))	The leftmost bits of the *E-UTRA Cell Identity* IE correspond to the ng-eNB ID (defined in clause 9.3.1.8) and to the eNB ID (defined in clause 9.3.1.165).

9.3.1.10 GBR QoS Flow Information

This IE indicates QoS parameters for a GBR QoS flow for downlink and uplink.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Maximum Flow Bit Rate Downlink	M		Bit Rate 9.3.1.4	Maximum Bit Rate in DL. Details in TS 23.501 [9].	-	
Maximum Flow Bit Rate Uplink	M		Bit Rate 9.3.1.4	Maximum Bit Rate in UL. Details in TS 23.501 [9].	-	
Guaranteed Flow Bit Rate Downlink	M		Bit Rate 9.3.1.4	Guaranteed Bit Rate (provided there is data to deliver) in DL. Details in TS 23.501 [9].	-	
Guaranteed Flow Bit Rate Uplink	M		Bit Rate 9.3.1.4	Guaranteed Bit Rate (provided there is data to deliver) in UL. Details in TS 23.501 [9].	-	
Notification Control	O		ENUMERATED (notification requested, ...)	Details in TS 23.501 [9].	-	
Maximum Packet Loss Rate Downlink	O		Packet Loss Rate 9.3.1.79	Indicates the maximum rate for lost packets that can be tolerated in the downlink direction. Details in TS 23.501 [9].	-	
Maximum Packet Loss Rate Uplink	O		Packet Loss Rate 9.3.1.79	Indicates the maximum rate for lost packets that can be tolerated in the uplink direction. Details in TS 23.501 [9].	-	
Alternative QoS Parameters Set List	O		9.3.1.151	Indicates alternative sets of QoS parameters for the QoS flow.	YES	ignore
Monitoring Request on Available Bitrate		*0..1*			YES	ignore
>Monitoring Request	M		ENUMERATED (ul, dl, both, stop, …)	Indicates to monitor and report UL, or DL, or both UL/DL available bit rate for the associated QoS flow as specified in TS 23.501 [9], or stop the corresponding QoS monitoring.	-	
>DL Available Bitrate Report Thresholds	C-ifReportDL		Available Bitrate Report Threshold List 9.3.1.281		-	
>UL Available Bitrate Report Thresholds	C-ifReportUL		Available Bitrate Report Threshold List 9.3.1.281		-	

Condition	Explanation
ifReportDL	This IE shall be present if the *Monitoring Request* IE is set to the value "dl" or "both".
ifReportUL	This IE shall be present if the *Monitoring Request* IE is set to the value "ul" or "both".

9.3.1.11 Void

9.3.1.12 QoS Flow Level QoS Parameters

This IE defines the QoS parameters to be applied to a QoS flow.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
CHOICE *QoS Characteristics*	M				-	
>Non-dynamic 5QI						
>>Non Dynamic 5QI Descriptor	M		9.3.1.28		-	
>Dynamic 5QI						
>>Dynamic 5QI Descriptor	M		9.3.1.18		-	
Allocation and Retention Priority	M		9.3.1.19		-	
GBR QoS Flow Information	O		9.3.1.10	This IE shall be present for GBR QoS flows and is ignored otherwise.	-	
Reflective QoS Attribute	O		ENUMERATED (subject to, …)	Details in TS 23.501 [9]. This IE may be present in case of Non-GBR QoS flows and is ignored otherwise.	-	
Additional QoS Flow Information	O		ENUMERATED (more likely, …)	This IE indicates that traffic for this QoS flow is likely to appear more often than traffic for other flows established for the PDU session. This IE may be present in case of Non-GBR QoS flows and is ignored otherwise.	-	
QoS Monitoring Request	O		ENUMERATED (UL, DL, Both, …, stop)	Indicates to measure UL, or DL, or both UL/DL delays for the associated QoS flow or stop the corresponding QoS monitoring.	YES	ignore
QoS Monitoring Reporting Frequency	O		INTEGER (1.. 1800, …)	Indicates the reporting frequency for RAN part delay for QoS monitoring. Units: second	YES	ignore
PDU Set QoS Parameters		*0..1*			YES	ignore
>UL PDU Set QoS Information	O		PDU Set QoS Information 9.3.1.264		-	
>DL PDU Set QoS Information	O		PDU Set QoS Information 9.3.1.264		-	
DL PDU Set Information Marking Support Indication	O		ENUMERATED (true, …)		YES	ignore

MMSID	O		OCTET STRING (SIZE(1))	Multi-modal service ID from the application, used to indicate QoS flows are related to a multi-modal service, as specified in TS 23.501 [9] and TS 38.300 [8].	YES	ignore
Indication of Bitrate Adaptation	O		ENUMERATED (uplink, …)	Indicates that the QoS Flow allows rate adaptation in the indicated direction.	YES	ignore

9.3.1.13 QoS Flow List with Cause

This IE contains a list of QoS flows with a cause value. It is used for example to indicate failed QoS flow(s) or QoS flow(s) to be released.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
QoS Flow Item		*1..<maxnoofQoSFlows>*		
>QoS Flow Identifier	M		9.3.1.51	
>Cause	M		9.3.1.2	

Range bound	Explanation
maxnoofQoSFlows	Maximum no. of QoS flows allowed within one PDU session. Value is 64.

9.3.1.14 Trace Activation

This IE defines parameters related to a trace session activation.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
NG-RAN Trace ID	M		OCTET STRING (SIZE(8))	This IE is composed of the following: Trace Reference defined in TS 32.422 [11] (leftmost 6 octets, with PLMN information encoded as in 9.3.3.5), and Trace Recording Session Reference defined in TS 32.422 [11] (last 2 octets).	-	
Interfaces to Trace	M		BIT STRING (SIZE(8))	Each position in the bitmap represents an NG-RAN node interface: first bit = NG-C, second bit = Xn-C, third bit = Uu, fourth bit = F1-C, fifth bit = E1: other bits reserved for future use. Value '1' indicates 'should be traced'. Value '0' indicates 'should not be traced'.	-	
Trace Depth	M		ENUMERATED (minimum, medium, maximum, minimumWithoutVendorSpecificExtension, mediumWithoutVendorSpecificExtension, maximumWithoutVendorSpecificExtension, …, minimumOnlyVendorSpecificTraceRecord, mediumOnlyVendorSpecificTraceRecord, maximumOnlyVendorSpecificTraceRecord)	Defined in TS 32.422 [11].	-	
Trace Collection Entity IP Address	M		Transport Layer Address 9.3.2.4	For File based Reporting. Defined in TS 32.422 [11]. This IE is ignored if the *Trace Collection Entity URI* IE is present.	-	
MDT Configuration	O		9.3.1.167		YES	ignore

Trace Collection Entity URI	O		URI 9.3.2.14	For Streaming based Reporting. Defined in TS 32.422 [11].	YES	ignore

9.3.1.15 Core Network Assistance Information for RRC INACTIVE

This IE provides assistance information for RRC_INACTIVE configuration.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
UE Identity Index Value	M		9.3.3.23		-	
UE Specific DRX	O		Paging DRX 9.3.1.90		-	
Periodic Registration Update Timer	M		9.3.3.24		-	
MICO Mode Indication	O		9.3.1.23		-	
TAI List for RRC Inactive		*1*			-	
>TAI List for RRC Inactive Item		*1..<maxnoofTAIforInactive>*			-	
>>TAI	M		9.3.3.11		-	
Expected UE Behaviour	O		9.3.1.93		-	
E-UTRA Paging eDRX Information	O		9.3.1.154		YES	ignore
Extended UE Identity Index Value	O		9.3.3.52	This IE is ignored if the *Further Extended UE Identity Index Value* IE is present.	YES	ignore
UE Radio Capability for Paging	O		9.3.1.68		YES	ignore
MICO All PLMN	O		9.3.1.194		YES	ignore
NR Paging eDRX Information	O		9.3.1.227		YES	ignore
Paging Cause Indication for Voice Service	O		ENUMERATED (supported, …)	This IE indicates that the UE supports the feature of indication of paging cause for voice service.	YES	ignore
PEIPS Assistance Information	O		9.3.1.232		YES	ignore
Hashed UE Identity Index Value	O		9.3.3.62		YES	ignore
CN MT Communication Handling	O		ENUMERATED (supported, …)	This IE indicates the CN support of CN based MT communication handling.	YES	ignore
LP-WUSPS Assistance Information	O		9.3.1.279		YES	ignore
Further Extended UE Identity Index Value	O		9.3.3.77		YES	ignore
LP-WUS Disable Indication	O		ENUMERATED (true, …)		YES	ignore

Range bound	Explanation
maxnoofTAIforInactive	Maximum no. of TAIs for RRC Inactive. Value is 16.

9.3.1.16 User Location Information

This IE is used to provide location information of the UE and the flight information of the Aerial UE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
CHOICE *User Location Information*	M				-	
>E-UTRA user location information						
>>E-UTRA CGI	M		9.3.1.9		-	
>>TAI	M		9.3.3.11		-	
>>Age of Location	O		Time Stamp 9.3.1.75	Indicates the UTC time when the location information was generated.	-	
>>PSCell Information	O		NG-RAN CGI 9.3.1.73		YES	ignore
>NR user location information						
>>NR CGI	M		9.3.1.7		-	
>>TAI	M		9.3.3.11	This IE is ignored if the NR NTN TAI Information IE is present.	-	
>>Age of Location	O		Time Stamp 9.3.1.75	Indicates the UTC time when the location information was generated.	-	
>>PSCell Information	O		NG-RAN CGI 9.3.1.73		YES	ignore
>>NID	O		9.3.3.42		YES	reject
>>NR NTN TAI Information	O		9.3.3.53		YES	ignore
>>Mobile IAB-MT User Location Information	O		9.3.1.260	Indicates the user location information of a mobile IAB-MT, which is co-located with the mobile IAB-DU which serves the UE.	YES	ignore
>>Additional ULI	O		9.3.1.280	Indicates the Additional User Location Information for a UE served by a WAB-gNB.	YES	ignore
>>Aerial UE Flight information Reporting	O		9.3.1.282		YES	ignore
>N3IWF user location information with port number						
>>IP Address	M		Transport Layer Address 9.3.2.4	UE's local IP address used to reach the N3IWF	-	
>>Port Number	M		OCTET STRING (SIZE(2))	UDP source port number if NAT is detected.	-	
>>TAI	O		9.3.3.11		YES	ignore
>TNGF user location information					YES	ignore
>>TNAP ID	M		OCTET STRING	TNAP Identifier used to identify the TNAP. Details in TS 29.571 [35].	-	
>>IP Address	M		Transport Layer Address 9.3.2.4	UE's local IP address used to reach the TNGF.	-	

>>Port Number	O		OCTET STRING (SIZE(2))	UDP source port number if NAT is detected.	-	
>>TAI	O		9.3.3.11		YES	ignore
>TWIF user location information					YES	ignore
>>TWAP ID	M		OCTET STRING	TWAP Identifier used to identify the TWAP. Details in TS 29.571 [35].	-	
>>IP Address	M		Transport Layer Address 9.3.2.4	Non-5G-Capable over WLAN device's local IP address used to reach the TWIF.	-	
>>Port Number	O		OCTET STRING (SIZE(2))	UDP source port number if NAT is detected.	-	
>>TAI	O		9.3.3.11		YES	ignore
>W-AGF user location information				Indicates the location information via wireline access as specified in TS 23.316 [34].	YES	ignore
>>W-AGF user location information	M		9.3.1.164		-	
>N3IWF user location information without port number					YES	ignore
>>IP Address	M		Transport Layer Address 9.3.2.4	UE's local IP address used to reach the N3IWF.	-	
>>TAI	O		9.3.3.11		-	

9.3.1.17 Slice Support List

This IE indicates the list of supported slices.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Slice Support Item		*1..<maxnoofSliceItems>*		
>S-NSSAI	M		9.3.1.24	

Range bound	Explanation
maxnoofSliceItems	Maximum no. of signalled slice support items. Value is 1024.

9.3.1.18 Dynamic 5QI Descriptor

This IE indicates the QoS Characteristics for a Non-standardised or not pre-configured 5QI for downlink and uplink.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Priority Level	M		9.3.1.84	Priority Level is specified in TS 23.501 [9].	-	
Packet Delay Budget	M		9.3.1.80	Packet Delay Budget is specified in TS 23.501 [9]. This IE is ignored if the *Extended Packet Delay Budget* IE is present.	-	
Packet Error Rate	M		9.3.1.81	Packet Error Rate is specified in TS 23.501 [9].	-	
5QI	O		INTEGER (0..255, …)	Indicates the dynamically assigned 5QI as specified in TS 23.501 [9].	-	
Delay Critical	C-ifGBRflow		ENUMERATED (delay critical, non-delay critical, …)	Indicates whether the GBR QoS flow is delay critical as specified in TS 23.501 [9].	-	
Averaging Window	C-ifGBRflow		9.3.1.82	Averaging Window is specified in TS 23.501 [9].	-	
Maximum Data Burst Volume	O		9.3.1.83	Maximum Data Burst Volume is specified in TS 23.501 [9]. This IE shall be included if the *Delay Critical* IE is set to "delay critical" and is ignored otherwise.	-	
Extended Packet Delay Budget	O		9.3.1.135	Packet Delay Budget is specified in TS 23.501 [9].	YES	ignore
CN Packet Delay Budget Downlink	O		Extended Packet Delay Budget 9.3.1.135	Core Network Packet Delay Budget is specified in TS 23.501 [9]. This IE may be present in case of GBR QoS flows and is ignored otherwise.	YES	ignore
CN Packet Delay Budget Uplink	O		Extended Packet Delay Budget 9.3.1.135	Core Network Packet Delay Budget is specified in TS 23.501 [9]. This IE may be present in case of GBR QoS flows and is ignored otherwise.	YES	ignore

Condition	Explanation
ifGBRflow	This IE shall be present if the *GBR QoS Flow Information* IE is present in the *QoS Flow Level QoS Parameters* IE.

9.3.1.19 Allocation and Retention Priority

This IE specifies the relative importance of a QoS flow compared to other QoS flows for allocation and retention of NG-RAN resources.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Priority Level	M		INTEGER (1..15)	**Desc**.: This IE defines the relative importance of a resource request (see TS 23.501 [9]). **Usage**: Values are ordered in decreasing order of priority, i.e., with 1 as the highest priority and 15 as the lowest priority.
Pre-emption Capability	M		ENUMERATED (shall not trigger pre-emption, may trigger pre-emption, …)	**Desc.:** This IE indicates the pre-emption capability of the request on other QoS flows (see TS 23.501 [9]). **Usage**: The QoS flow shall not pre-empt other QoS flows or, the QoS flow may pre-empt other QoS flows. Note: The Pre-emption Capability indicator applies to the allocation of resources for a QoS flow and as such it provides the trigger to the pre-emption procedures/processes of the NG-RAN node.
Pre-emption Vulnerability	M		ENUMERATED (not pre-emptable, pre-emptable, …)	**Desc.**: This IE indicates the vulnerability of the QoS flow to pre-emption of other QoS flows (see TS 23.501 [9]). **Usage**: The QoS flow shall not be pre-empted by other QoS flows or the QoS flow may be pre-empted by other QoS flows. Note: The Pre-emption Vulnerability indicator applies for the entire duration of the QoS flow, unless modified and as such indicates whether the QoS flow is a target of the pre-emption procedures/processes of the NG-RAN node.

9.3.1.20 Source to Target Transparent Container

This IE is used to transparently pass radio related information from the handover source to the handover target through the core network; it is produced by the source RAN node and is transmitted to the target RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Source to Target Transparent Container	M		OCTET STRING	This IE includes a transparent container from the source RAN node to the target RAN node. The octets of the OCTET STRING are encoded according to the specifications of the target system. Note: In the current version of the specification, this IE may carry either the *Source NG-RAN Node to Target NG-RAN Node Transparent Container* IE or the *Source eNB to Target eNB Transparent Container* IE as defined in TS 36.413 [16] or the *Source RNC to Target RNC Transparent Container* IE as defined in TS 25.413 [28].

9.3.1.21 Target to Source Transparent Container

This IE is used to transparently pass radio related information from the handover target to the handover source through the core network; it is produced by the target RAN node and is transmitted to the source RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Target to Source Transparent Container	M		OCTET STRING	This IE includes a transparent container from the target RAN node to the source RAN node. The octets of the OCTET STRING are encoded according to the specifications of the target system. Note: In the current version of the specification, this IE may carry either the *Target NG-RAN Node to Source NG-RAN Node Transparent Container* IE or the *Target eNB to Source eNB Transparent Container* IE as defined in TS 36.413 [16], or the *Target RNC to Source RNC Transparent Container* IE as defined in TS 25.413 [28].

9.3.1.22 Handover Type

This IE indicates which kind of handover was triggered in the source side.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Handover Type	M		ENUMERATED (Intra5GS, 5GStoEPS, EPSto5GS, …, 5GStoUTRA)	Intra5GS: NG-RAN node to NG-RAN node 5GStoEPS: NG-RAN node to eNB EPSto5GS: eNB to NG-RAN node 5GStoUTRA: NG-RAN node to UTRA

9.3.1.23 MICO Mode Indication

This IE indicates that the UE is configured with MICO mode by the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MICO Mode Indication	M		ENUMERATED (true, …)	

9.3.1.24 S-NSSAI

This IE indicates the S-NSSAI as defined in TS 23.003 [23].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
SST	M		OCTET STRING (SIZE(1))	
SD	O		OCTET STRING (SIZE(3))	

9.3.1.25 Target ID

This IE identifies the target for the handover.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
CHOICE *Target ID*	M				-	
>NG-RAN						
>>Global RAN Node ID	M		9.3.1.5		-	
>>Selected TAI	M		TAI 9.3.3.11		-	
>>Selected Target SNPN Identity	O		NID 9.3.3.42	This IE together with the *PLMN Identity* IE included in the *Selected TAI* IE indicates the target SNPN.	YES	reject
>E-UTRAN						
>>Global eNB ID	M		Global ng-eNB ID 9.3.1.8		-	
>>Selected EPS TAI	M		EPS TAI 9.3.3.17		-	
>Target RNC-ID					YES	reject
>>LAI	M		9.3.3.30		-	
>>RNC-ID	M		9.3.1.123	This IE is ignored if the *Extended RNC-ID* IE is included in the *Target ID* IE.	-	
>>Extended RNC-ID	O		9.3.1.124	The *Extended RNC-ID* IE is used if the RNC identity has a value larger than 4095.	-	
>Target Home eNB ID					YES	reject
>>PLMN Identity	M		9.3.3.5		-	
>>Home eNB ID	M		BIT STRING (SIZE(28))	Equal to the *E-UTRA Cell Identity* IE contained in the *E-UTRA CGI* IE of the cell served by the eNB.	-	
>>Selected EPS TAI	M		EPS TAI 9.3.3.17		-	

9.3.1.26 Emergency Fallback Indicator

The IE indicates emergency service fallback.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Emergency Fallback Request Indicator	M		ENUMERATED (emergency fallback requested, …)	
Emergency Service Target CN	O		ENUMERATED (5GC, EPC, …)	

9.3.1.27 Security Indication

This IE contains the user plane integrity protection indication and confidentiality protection indication which indicates the requirements on UP integrity protection and ciphering for corresponding PDU sessions, respectively. Additionally, this IE contains the maximum integrity protected data rate per UE for integrity protection for DRBs.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Integrity Protection Indication	M		ENUMERATED (required, preferred, not needed, …)	Indicates whether UP integrity protection shall apply, should apply or shall not apply for the concerned PDU session.	-	
Confidentiality Protection Indication	M		ENUMERATED (required, preferred, not needed, …)	Indicates whether UP ciphering shall apply, should apply or shall not apply for the concerned PDU session.	-	
Maximum Integrity Protected Data Rate Uplink	C-ifIntegrityProtectionRequiredorPreferred		Maximum Integrity Protected Data Rate 9.3.1.103	Indicates the maximum aggregate rate for integrity protected DRBs supported by the UE in UL. If the *Maximum Integrity Protected Data Rate Downlink* IE is absent, this IE applies to both UL and DL.	-	
Maximum Integrity Protected Data Rate Downlink	O		Maximum Integrity Protected Data Rate 9.3.1.103	Indicates the maximum aggregate rate for integrity protected DRBs supported by the UE in the DL.	YES	ignore

Condition	Explanation
ifIntegrityProtectionRequiredorPreferred	This IE shall be present if the *Integrity Protection Indication* IE is set to the value "required" or "preferred".

9.3.1.28 Non Dynamic 5QI Descriptor

This IE indicates the QoS Characteristics for a standardized or pre-configured 5QI for downlink and uplink.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
5QI	M		INTEGER (0..255, …)	Indicates the standardized or pre-configured 5QI as specified in TS 23.501 [9].	-	
Priority Level	O		9.3.1.84	Priority Level is specified in TS 23.501 [9]. When included, it overrides standardized or pre-configured value.	-	
Averaging Window	O		9.3.1.82	Averaging Window is specified in TS 23.501 [9]. When included, it overrides standardized or pre-configured value.	-	
Maximum Data Burst Volume	O		9.3.1.83	Maximum Data Burst Volume is specified in TS 23.501 [9]. When included, it overrides standardized or pre-configured value.	-	
CN Packet Delay Budget Downlink	O		Extended Packet Delay Budget 9.3.1.135	Core Network Packet Delay Budget is specified in TS 23.501 [9]. This IE may be present in case of GBR QoS flows and is ignored otherwise.	YES	ignore
CN Packet Delay Budget Uplink	O		Extended Packet Delay Budget 9.3.1.135	Core Network Packet Delay Budget is specified in TS 23.501 [9]. This IE may be present in case of GBR QoS flows and is ignored otherwise.	YES	ignore

9.3.1.29 Source NG-RAN Node to Target NG-RAN Node Transparent Container

This IE is produced by the source NG-RAN node and is transmitted to the target NG-RAN node. For inter-system handovers to 5G, the IE is transmitted from the external handover source to the target NG-RAN node.

This IE is transparent to the 5GC.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
RRC Container	M		OCTET STRING	Includes the *HandoverPreparationInformation* message as defined in TS 38.331 [18] if the target is a gNB. Includes the *HandoverPreparationInformation* message as defined in TS 36.331 [21] if the target is an ng-eNB.	-	
PDU Session Resource Information List		*0..1*		For intra-system handovers in NG-RAN.	-	
>PDU Session Resource Information Item		*1..<maxnoofPDUSessions>*			-	
>>PDU Session ID	M		9.3.1.50		-	
>>QoS Flow Information List		*1*			-	
>>>QoS Flow Information Item		*1..<maxnoofQoSFlows>*			-	
>>>>QoS Flow Identifier	M		9.3.1.51		-	
>>>>DL Forwarding	O		9.3.1.33		-	
>>>>UL Forwarding	O		9.3.1.118		YES	ignore
>>>>Source Transport Layer Address	O		Transport Layer Address 9.3.2.4	Identifies the TNL address used by the sending node for direct data forwarding towards the target NG-RAN node	YES	ignore
>>>>Source Node Transport Layer Address	O		Transport Layer Address 9.3.2.4	Identifies the TNL address used by the source SN node for direct data forwarding towards the target NG-RAN node	YES	ignore
>>DRBs to QoS Flows Mapping List	O		9.3.1.34		-	
E-RAB Information List		*0..1*		For inter-system handovers to 5G.	-	
>E-RAB Information Item		*1..<maxnoofE-RABs>*			-	
>>E-RAB ID	M		9.3.2.3		-	
>>DL Forwarding	O		9.3.1.33		-	
>>Source Transport Layer Address	O		Transport Layer Address 9.3.2.4	Identifies the TNL address used by the sending node for direct data forwarding towards the target NG-RAN node	YES	ignore

>>Source Node Transport Layer Address	O		Transport Layer Address 9.3.2.4	Identifies the TNL address used by the source SN node for direct data forwarding towards the target NG-RAN node	YES	ignore
Target Cell ID	M		NG-RAN CGI 9.3.1.73		-	
Index to RAT/Frequency Selection Priority	O		9.3.1.61		-	
UE History Information	M		9.3.1.95		-	
SgNB UE X2AP ID	O		9.3.1.127	Allocated at the Source en-gNB	YES	ignore
UE History Information from UE	O		9.3.1.166		YES	ignore
Source Node ID	O		9.3.1.195	Source SN ID	YES	ignore
UE Context Reference at Source	O		RAN UE NGAP ID 9.3.3.2		YES	ignore
MBS Active Session Information Source to Target List		*0..1*			YES	ignore
>MBS Active Session Information Source to Target Item		*1..<maxnoofMBSSessionsofUE>*			-	
>>MBS Session ID	M		9.3.1.206		-	
>>MBS Area Session ID	O		9.3.1.207	If included, this IE indicates the MBS Area Session ID of the UE at the NG-RAN node from which the UE context is transferred	-	
>>MBS Service Area	O		9.3.1.208	Included if available in source NG-RAN node.	-	
>>MBS QoS Flows To Be Setup List	M		9.3.1.236		-	
>>MBS Mapping and Data Forwarding Request List		*0..1*			-	
>>>MBS Mapping and Data Forwarding Request Item		*1..<maxnoofMRBs>*			-	
>>>>MRB ID	M		9.3.1.218	Contains the MRB ID value allocated at the source NG-RAN node.	-	
>>>>MBS QoS Flow List		*1..<maxnoofMBSQoSflows>*			-	
>>>>>MBS QoS Flow Identifier	M		QoS Flow Identifier 9.3.1.51		-	
>>>>MRB Progress Information	O		9.3.1.219	The SN information of the last packet which has already been delivered for the MRB.	-	

QMC Configuration Information	O		9.3.1.223	Used for passing the QoE measurement information from the source NG-RAN node to the target NG-RAN node.	YES	ignore
NGAP IE Support Information Request List		*0..1*			YES	ignore
>NGAP IE Support Information Request Item		*1..<maxnoofIESupportInfo>*			-	
>>NGAP Protocol IE-Id	M		9.3.1.239		-	
Candidate Relay UE Information List		*0..1*			YES	reject
>Candidate Relay UE Information Item		*1..<maxnoofCandidateRelayUEs>*			-	
>>Candidate Relay UE ID	M		BIT STRING (SIZE(24))	Includes the *SL-SourceIdentity* for the candidate relay UE as defined in TS 38.331 [18].	-	
Time Based Handover Information		*0..1*		This IE only applies to NTN.	YES	ignore
>Handover Window Start	M		INTEGER (0..549755813887)	Corresponds to information provided in *t1-Threshold* contained in the *ReportConfigNR* IE as defined in TS 38.331 [18]	-	
>Handover Window Duration	M		INTEGER (1..6000)	Corresponds to information provided in the *duration* contained in the *condEventT1* contained in the *ReportConfigNR* IE as defined in TS 38.331 [18]	-	
Source SN to Target SN QMC Information	O		QMC Configuration Information 9.3.1.223	This IE contains SN-related QMC configuration information to be forwarded to the target S-NG-RAN node upon inter-MN handover.	YES	ignore

Range bound	Explanation
maxnoofPDUSessions	Maximum no. of PDU sessions allowed towards one UE. Value is 256.
maxnoofQoSFlows	Maximum no. of QoS flows allowed within one PDU session. Value is 64.
maxnoofE-RABs	Maximum no. of E-RABs allowed towards one UE. Value is 256.
maxnoofMBSSessions	Maximum no. of MBS sessions allowed within one PDU session. Value is 32.
maxnoofMBSSessionsofUE	Maximum no. of MBS sessions allowed towards one UE. Value is 256.
maxnoofMBSQoSflows	Maximum no. of MBS QoS flows allowed within one MBS session. Value is 64.
maxnoofMRBs	Maximum no. of MRBs. Value is 32.
maxnoofIESupportInfo	Maximum no. of IE Support Information. Value is 32.
maxnoofCandidateRelayUEs	Maximum no. of Candidate Relay UEs. Value is 32.

9.3.1.30 Target NG-RAN Node to Source NG-RAN Node Transparent Container

This IE is produced by the target NG-RAN node and is transmitted to the source NG-RAN node. For inter-system handovers to 5G, the IE is transmitted from the target NG-RAN node to the external relocation source.

This IE is transparent to the 5GC.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
RRC Container	M		OCTET STRING	Includes the *HandoverCommand* message as defined in TS 38.331 [18] if the target is a gNB. Includes the *HandoverCommand* message as defined in TS 36.331 [21] if the target is an ng-eNB.	-	
DAPS Response Information List		*0..1*			YES	ignore
>DAPS Response Information Item		*1..<maxnoofDRBs>*			-	
>>DRB ID	M		9.3.1.53		-	
>>DAPS Response Information	M		9.3.1.189	Indicates the response to a requested DAPS Handover	-	
Direct Forwarding Path Availability	O		9.3.1.64	Indicates whether a direct forwarding path between the source SN and the target NG-RAN node is available for inter-system handover	YES	ignore
MBS Active Session Information Target to Source List		*0..1*			YES	ignore
>MBS Active Session Information Target to Source Item		*1..<maxnoofMBSSessionsofUE>*			-	
>>MBS Session ID	M		9.3.1.206		-	
>>Data Forwarding Response MRB List		*0..1*			-	
>>>Data Forwarding Response MRB Item		*1..<maxnoofMRBs>*			-	
>>>>MRB ID	M		9.3.1.218	Contains the MRB ID value allocated at the source NG-RAN node.	-	
>>>>DL Forwarding UP TNL Information	M		UP Transport Layer Information 9.3.2.2		-	
>>>>MRB Progress Information	O		9.3.1.219	This IE includes the information of the oldest packet available at the target NG-RAN node for the MRB.	-	
NGAP IE Support Information Response List	O		9.3.1.242		YES	ignore

Range bound	Explanation
maxnoofDRBs	Maximum no. of DRBs allowed towards one UE. Value is 32.
maxnoofMBSSessionsofUE	Maximum no. of MBS sessions allowed towards one UE. Value is 256.
maxnoofMRBs	Maximum no. of MRBs. Value is 32.

9.3.1.31 Allowed NSSAI

This IE contains the allowed NSSAI.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Allowed S-NSSAI Item		*1..<maxnoofAllowedS-NSSAIs>*		
>S-NSSAI	M		9.3.1.24	

Range bound	Explanation
maxnoofAllowedS-NSSAIs	Maximum no. of allowed S-NSSAI. Value is 8.

9.3.1.32 Relative AMF Capacity

This IE indicates the relative processing capacity of an AMF with respect to the other AMFs in the AMF Set in order to load-balance AMFs within an AMF Set defined in TS 23.501 [9].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Relative AMF Capacity	M		INTEGER (0..255)	

9.3.1.33 DL Forwarding

This IE indicates that the QoS flow or E-RAB is proposed for forwarding of downlink packets.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
DL Forwarding	M		ENUMERATED (DL forwarding proposed, …)	

9.3.1.34 DRBs to QoS Flows Mapping List

This IE contains a list of DRBs containing information about the mapped QoS flows.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
DRBs to QoS Flows Mapping Item		*1..<maxnoofDRBs>*			-	
>DRB ID	M		9.3.1.53		-	
>Associated QoS Flow List	M		9.3.1.99	Contains information of the QoS flows mapped to the DRB	-	
>DAPS Request Information	O		9.3.1.188		YES	ignore

Range bound	Explanation
maxnoofDRBs	Maximum no. of DRBs allowed towards one UE. Value is 32.

9.3.1.35 Message Identifier

This IE identifies the warning message. It is set by the AMF and transferred to the UE by the NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Message Identifier	M		BIT STRING (SIZE(16))	This IE is set by the 5GC, transferred to the UE by the NG-RAN node.

9.3.1.36 Serial Number

This IE identifies a particular message from the source and type indicated by the Message Identifier and is altered every time the message with a given Message Identifier is changed.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Serial Number	M		BIT STRING (SIZE(16))	

9.3.1.37 Warning Area List

This IE indicates the areas where the warning message needs to be broadcast or cancelled.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE *Warning Area*	M			
>E-UTRA Cell IDs				
>>EUTRA CGI List for Warning		*1..<maxnoofCellIDforWarning>*		
>>>E-UTRA CGI	M		9.3.1.9	
>NR Cell IDs				
>>NR CGI List for Warning		*1..<maxnoofCellIDforWarning>*		
>>>NR CGI	M		9.3.1.7	
>TAIs for Warning				
>>TAI List for Warning		*1..<maxnoofTAIforWarning>*		
>>>TAI	M		9.3.3.11	
>Emergency Area IDs				
>>Emergency Area ID List		*1..<maxnoofEmergencyAreaID>*		
>>>Emergency Area ID	M		9.3.1.48	

Range bound	Explanation
maxnoofCellIDforWarning	Maximum no. of Cell ID subject for warning message broadcast. Value is 65535.
maxnoofTAIforWarning	Maximum no. of TAI subject for warning message broadcast. Value is 65535.
maxnoofEmergencyAreaID	Maximum no. of Emergency Area ID subject for warning message broadcast. Value is 65535.

9.3.1.38 Number of Broadcasts Requested

This IE indicates the number of times a message is to be broadcast.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Number of Broadcasts Requested	M		INTEGER (0..65535)	

9.3.1.39 Warning Type

This IE indicates types of the disaster. This IE also indicates that a Primary Notification is included. This IE can be used by the UE to differentiate the type of alert according to the type of disaster.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Warning Type	M		OCTET STRING (SIZE(2))	

9.3.1.40 Void

9.3.1.41 Data Coding Scheme

This IE identifies the alphabet or coding employed for the message characters and message handling at the UE (it is passed transparently from the 5GC to the UE).

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Data Coding Scheme	M		BIT STRING (SIZE(8))	

9.3.1.42 Warning Message Contents

This IE contains user information, e.g., the message with warning contents, and will be broadcast over the radio interface.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Warning Message Contents	M		OCTET STRING (SIZE(1..9600))	

9.3.1.43 Broadcast Completed Area List

This IE indicates the areas where either resources are available to perform the broadcast or where broadcast is performed successfully.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE *Broadcast Completed Area*	M			
>Cell ID Broadcast E-UTRA				
>>Completed Cell List		*1..<maxnoofCellIDforWarning>*		
>>>E-UTRA CGI	M		9.3.1.9	
>TAI Broadcast E-UTRA				
>>TAI Broadcast		*1..<maxnoofTAIforWarning>*		
>>>TAI	M		9.3.3.11	
>>>Completed Cell in TAI List		*1..<maxnoofCellinTAI>*		
>>>>E-UTRA CGI	M		9.3.1.9	
>Emergency Area ID Broadcast E-UTRA				
>>Emergency Area ID Broadcast		*1..<maxnoofEmergencyAreaID>*		
>>>Emergency Area ID	M		9.3.1.48	
>>>Completed Cell in Emergency Area ID List		*1..<maxnoofCellinEAI>*		
>>>>E-UTRA CGI	M		9.3.1.9	
>Cell ID Broadcast NR				
>>Completed Cell List		*1..<maxnoofCellIDforWarning>*		
>>>NR-CGI	M		9.3.1.7	
>TAI Broadcast NR				
>>TAI Broadcast		*1..<maxnoofTAIforWarning>*		
>>>TAI	M		9.3.3.11	
>>>Completed Cell in TAI List		*1..<maxnoofCellinTAI>*		
>>>>NR-CGI	M		9.3.1.7	
>Emergency Area ID Broadcast NR				
>>Emergency Area ID Broadcast		*1..<maxnoofEmergencyAreaID>*		
>>>Emergency Area ID	M		9.3.1.48	
>>>Completed Cell in Emergency Area ID List		*1..<maxnoofCellinEAI>*		
>>>>NR-CGI	M		9.3.1.7	

Range bound	Explanation
maxnoofCellIDforWarning	Maximum no. of Cell ID subject for warning message broadcast. Value is 65535.
maxnoofTAIforWarning	Maximum no. of TAI subject for warning message broadcast. Value is 65535.
maxnoofEmergencyAreaID	Maximum no. of Emergency Area ID subject for warning message broadcast. Value is 65535.
maxnoofCellinTAI	Maximum no. of Cell ID within a TAI. Value is 65535.
maxnoofCellinEAI	Maximum no. of Cell ID within an Emergency Area. Value is 65535.

9.3.1.44 Broadcast Cancelled Area List

This IE indicates the areas where broadcast was stopped successfully.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE *Broadcast Cancelled Area*	M			
>Cell ID Cancelled E-UTRA				
>>Cancelled Cell List		*1..<maxnoofCellIDforWarning>*		
>>>E-UTRA CGI	M		9.3.1.9	
>>>Number of Broadcasts	M		9.3.1.45	
>TAI Cancelled E-UTRA				
>>TAI Cancelled		*1..<maxnoofTAIforWarning>*		
>>>TAI	M		9.3.3.11	
>>>Cancelled Cell in TAI List		*1..<maxnoofCellinTAI>*		
>>>>E-UTRA CGI	M		9.3.1.9	
>>>>Number of Broadcasts	M		9.3.1.45	
>Emergency Area ID Cancelled E-UTRA				
>>Emergency Area ID Cancelled		*1..<maxnoofEmergencyAreaID>*		
>>>Emergency Area ID	M		9.3.1.48	
>>>Cancelled Cell in Emergency Area ID List		*1..<maxnoofCellinEAI>*		
>>>>E-UTRA CGI	M		9.3.1.9	
>>>>Number of Broadcasts	M		9.3.1.45	
>Cell ID Cancelled NR				
>>Cancelled Cell List		*1..<maxnoofCellIDforWarning>*		
>>>NR-CGI	M		9.3.1.7	
>>>Number of Broadcasts	M		9.3.1.45	
>TAI Cancelled NR				
>>TAI Cancelled		*1..<maxnoofTAIforWarning>*		
>>>TAI	M		9.3.3.11	
>>>Cancelled Cell in TAI List		*1..<maxnoofCellinTAI>*		
>>>>NR-CGI	M		9.3.1.7	
>>>>Number of Broadcasts	M		9.3.1.45	
>Emergency Area ID Cancelled NR				
>>Emergency Area ID Cancelled		*1..<maxnoofEmergencyAreaID>*		
>>>Emergency Area ID	M		9.3.1.48	
>>>Cancelled Cell in Emergency Area ID List		*1..<maxnoofCellinEAI>*		
>>>>NR-CGI	M		9.3.1.7	
>>>>Number of Broadcasts	M		9.3.1.45	

Range bound	Explanation
maxnoofCellIDforWarning	Maximum no. of Cell ID subject for warning message broadcast. Value is 65535.
maxnoofTAIforWarning	Maximum no. of TAI subject for warning message broadcast. Value is 65535.
maxnoofEmergencyAreaID	Maximum no. of Emergency Area ID subject for warning message broadcast. Value is 65535.
maxnoofCellinTAI	Maximum no. of Cell ID within a TAI. Value is 65535.
maxnoofCellinEAI	Maximum no. of Cell ID within an Emergency Area. Value is 65535.

9.3.1.45 Number of Broadcasts

This IE indicates the number of times that a particular message has been broadcast in a given warning area.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Number of Broadcasts	M		INTEGER (0..65535)	This IE is set to '0' if valid results are not known or not available. It is set to 65535 if the counter results have overflowed.

9.3.1.46 Concurrent Warning Message Indicator

This IE indicates to the NG-RAN node that the received warning message is a new message to be scheduled for concurrent broadcast with any other ongoing broadcast of warning messages.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Concurrent Warning Message Indicator	M		ENUMERATED (true, …)	This IE is used to identify a PWS type warning system which allows the broadcast of multiple concurrent warning messages over the radio.

9.3.1.47 Cancel-All Warning Messages Indicator

This IE indicates to the NG-RAN node to stop all already ongoing broadcast of warning messages in the NG-RAN node or in an area.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Cancel-All Warning Messages Indicator	M		ENUMERATED (true, …)	

9.3.1.48 Emergency Area ID

This IE is used to indicate the area which has the emergency impact.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Emergency Area ID	M		OCTET STRING (SIZE(3))	Emergency Area ID may consist of several cells. Emergency Area ID is defined by the operator.

9.3.1.49 Repetition Period

This IE indicates the periodicity of the warning message to be broadcast.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Repetition Period	M		INTEGER (0..2^{17}-1)	The unit of value 1 to 2^{17}-1 is [second].

9.3.1.50 PDU Session ID

This IE identifies a PDU Session for a UE. The definition and use of the PDU Session ID is specified in TS 23.501 [9].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PDU Session ID	M		INTEGER (0..255)	

9.3.1.51 QoS Flow Identifier

This IE identifies a QoS flow within a PDU Session, or a MBS QoS flow within a MBS session. The definition and use of the QoS Flow Identifier is specified in TS 23.501 [9].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
QoS Flow Identifier	M		INTEGER (0..63, …)	

9.3.1.52 PDU Session Type

This IE indicates the PDU Session Type as specified in TS 23.501 [9].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PDU Session Type	M		ENUMERATED (Ipv4, Ipv6, Ipv4v6, ethernet, unstructured, ...)	

9.3.1.53 DRB ID

This IE contains the DRB ID.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
DRB ID	M		INTEGER (1..32, …)	

9.3.1.54 Masked IMEISV

This IE contains the IMEISV value with a mask, to identify a terminal model without identifying an individual Mobile Equipment.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Masked IMEISV	M		BIT STRING (SIZE(64))	Coded as the International Mobile station Equipment Identity and Software Version Number (IMEISV) defined in TS 23.003 [23] with the last 4 digits of the SNR masked by setting the corresponding bits to 1. The first to fourth bits correspond to the first digit of the IMEISV, the fifth to eighth bits correspond to the second digit of the IMEISV, and so on.

9.3.1.55 New Security Context Indicator

This IE indicates that the AMF has activated a new 5G NAS security context as described in TS 33.501 [13].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
New Security Context Indicator	M		ENUMERATED (true, …)	The NSCI as defined in TS 33.501 [13].

9.3.1.56 Time to Wait

This IE defines the minimum allowed waiting time.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Time to Wait	M		ENUMERATED (1s, 2s, 5s, 10s, 20s, 60s, …)	

9.3.1.57 Global N3IWF ID

This IE is used to globally identify an N3IWF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PLMN Identity	M		9.3.3.5	
CHOICE *N3IWF ID*	M			
>N3IWF ID				
>>N3IWF ID	M		BIT STRING (SIZE(16))	

9.3.1.58 UE Aggregate Maximum Bit Rate

This IE is applicable for all Non-GBR QoS flows per UE which is defined for the downlink and the uplink direction and a subscription parameter provided by the AMF to the NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
UE Aggregate Maximum Bit Rate		*1*		Applicable for Non-GBR QoS flows.
>UE Aggregate Maximum Bit Rate Downlink	M		Bit Rate 9.3.1.4	This IE indicates the UE Aggregate Maximum Bit Rate as specified in TS 23.501 [9] in the downlink direction.
>UE Aggregate Maximum Bit Rate Uplink	M		Bit Rate 9.3.1.4	This IE indicates the UE Aggregate Maximum Bit Rate as specified in TS 23.501 [9] in the uplink direction.

9.3.1.59 Security Result

This IE indicates whether the security policy indicated as "preferred" in the *Security Indication* IE is performed or not.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Integrity Protection Result	M		ENUMERATED (performed, not performed, …)	Indicates whether UP integrity protection is performed or not for the concerned PDU session.
Confidentiality Protection Result	M		ENUMERATED (performed, not performed, …)	Indicates whether UP ciphering is performed or not for the concerned PDU session.

9.3.1.60 User Plane Security Information

This IE indicates user plane security information related to security policy.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Security Result	M		9.3.1.59	
Security Indication	M		9.3.1.27	

9.3.1.61 Index to RAT/Frequency Selection Priority

This IE is used to define local configuration for RRM strategies such as camp priorities in Idle mode and control of inter-RAT/inter-frequency handover in Active mode (see TS 23.501 [9]).

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Index to RAT/Frequency Selection Priority	M		INTEGER (1..256, …)	

9.3.1.62 Data Forwarding Accepted

This IE indicates that the NG-RAN node accepts the proposed DL data forwarding for the QoS flow which is subject to data forwarding.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Data Forwarding Accepted	M		ENUMERATED (data forwarding accepted, …)	

9.3.1.63 Data Forwarding Not Possible

This IE indicates that the 5GC decided that the corresponding PDU session will not be subject to data forwarding.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Data Forwarding Not Possible	M		ENUMERATED (data forwarding not possible, …)	

9.3.1.64 Direct Forwarding Path Availability

This IE indicates whether a direct forwarding path is available.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Direct Forwarding Path Availability	M		ENUMERATED (direct path available, …)	

9.3.1.65 Location Reporting Request Type

This IE indicates the type of location request to be handled by the NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Event Type	M		ENUMERATED (direct, change of serving cell, UE presence in the area of interest, stop change of serving cell, stop UE presence in the area of interest, cancel location reporting for the UE, …, change of serving cell and UE presence in the area of interest, report the Aerial UE flight information, cancel the Aerial UE flight information reporting)		-	
Report Area	M		ENUMERATED (cell, …)	Corresponds to the "Location Reporting Level" in TS 23.502 [10]	-	
Area of Interest List		*0..1*			-	
>Area of Interest Item		*1..<maxnoofAoI>*			-	
>>Area of Interest	M		9.3.1.66		-	
>>Location Reporting Reference ID	M		9.3.1.76		-	
Location Reporting Reference ID to be Cancelled	C-ifEventTypeisStopUEPresinAoI		Location Reporting Reference ID 9.3.1.76		-	
Additional Location Information	O		ENUMERATED (Include PSCell, ...)		YES	ignore
Additional Cancelled Location Reporting Reference ID List		*0..1*			YES	reject
>Additional Cancelled Location Reporting Reference ID Item		*1..<maxnoofAoIMinusOne>*			-	
>>Location Reporting Reference ID to be Cancelled	M		Location Reporting Reference ID 9.3.1.76		-	
Aerial UE Flight Information Reporting Control List		*0..1*			YES	ignore
>Aerial UE Flight Information Reporting Control Item		*1..<maxnoofFlightInfoReportControl>*			-	
>>Aerial UE Flight Information Reporting Control	M		9.3.1.283		-	

Range bound	Explanation
maxnoofAoI	Maximum no. of areas of interest. Value is 64.
maxnoofAoIMinusOne	Maximum no. of areas of interest minus one. Value is 63.
maxnoofFlightInfoReportControl	Maximum no. of Aerial UE Flight Information Reporting Control. Value is 64.

Condition	Explanation
ifEventTypeisStopUEPresinAoI	This IE shall be present if the *Event Type* IE is set to the value "stop UE presence in the area of interest".

9.3.1.66 Area of Interest

This IE indicates the area of interest.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Area of Interest TAI List		*0..1*		
>Area of Interest TAI Item		*1..<maxnoofTAIinAoI>*		
>>TAI	M		9.3.3.11	
Area of Interest Cell List		*0..1*		
>Area of Interest Cell Item		*1..<maxnoofCellinAoI>*		
>>NG-RAN CGI	M		9.3.1.73	
Area of Interest RAN Node List		*0..1*		
>Area of Interest RAN Node Item		*1..<maxnoofRANNodeinAoI>*		
>>Global RAN Node ID	M		9.3.1.5	

Range bound	Explanation
maxnoofTAIinAoI	Maximum no. of tracking areas in an area of interest. Value is 16.
maxnoofCellinAoI	Maximum no. of cells in an area of interest. Value is 256.
maxnoofRANNodeinAoI	Maximum no. of NG-RAN nodes in an area of interest. Value is 64.

9.3.1.67 UE Presence in Area of Interest List

This IE indicates the UE presence in the area of interest.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
UE Presence in Area of Interest Item		*1..<maxnoofAoI>*		
>Location Reporting Reference ID	M		9.3.1.76	
>UE Presence	M		ENUMERATED (in, out, unknown, …)	

Range bound	Explanation
maxnoofAoI	Maximum no. of areas of interest. Value is 64.

9.3.1.68 UE Radio Capability for Paging

This IE contains paging specific UE Radio Capability information.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
UE Radio Capability for Paging of NR	O		OCTET STRING	Includes the *UERadioPagingInformation* message as defined in TS 38.331 [18].
UE Radio Capability for Paging of E-UTRA	O		OCTET STRING	Includes the *UERadioPagingInformation* message as defined in TS 36.331 [21].
UE Radio Capability for Paging of NB-IoT	O		OCTET STRING	Includes the *UERadioPagingInformation-NB* message as defined in TS 36.331 [21].

9.3.1.69 Assistance Data for Paging

This IE provides assistance information for paging optimisation.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Assistance Data for Recommended Cells	O		9.3.1.70		-	
Paging Attempt Information	O		9.3.1.72		-	
NPN Paging Assistance Information	O		9.3.1.183		YES	ignore
Paging Assistance Data for CE Capable UE	O		9.3.1.141		YES	ignore

9.3.1.70 Assistance Data for Recommended Cells

This IE provides assistance information for paging in recommended cells.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Recommended Cells for Paging	M		9.3.1.71	

9.3.1.71 Recommended Cells for Paging

This IE contains the recommended cells for paging.

This IE is transparent to the 5GC.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Recommended Cell List		*1*		
>Recommended Cell Item		*1..<maxnoofRecommendedCells>*		Includes visited and non-visited cells, where visited cells are listed in the order the UE visited them with the most recent cell being the first in the list. Non-visited cells are included immediately after the visited cell they are associated with.
>>NG-RAN CGI	M		9.3.1.73	
>>Time Stayed in Cell	O		INTEGER (0..4095)	This is included for visited cells and indicates the time a UE stayed in a cell in seconds. If the UE stays in a cell more than 4095 seconds, this IE is set to 4095.

Range bound	Explanation
maxnoofRecommendedCells	Maximum no. of recommended Cells. Value is 16.

9.3.1.72 Paging Attempt Information

This IE includes information related to the paging count over NG.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Paging Attempt Count	M		INTEGER (1..16, ...)	Paging attempt count (see TS 38.300 [8]).
Intended Number of Paging Attempts	M		INTEGER (1..16, …)	Intended number of paging attempts (see TS 38.300 [8]).
Next Paging Area Scope	O		ENUMERATED (same, changed, …)	Indicates whether the paging area scope will change or not at next paging attempt. Usage specified in TS 38.300 [8].

9.3.1.73 NG-RAN CGI

This IE is used to globally identify a cell in NG-RAN.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE *NG-RAN CGI*	M			
>NR				
>>NR CGI	M		9.3.1.7	
>E-UTRA				
>>E-UTRA CGI	M		9.3.1.9	

9.3.1.74 UE Radio Capability

This IE contains UE Radio Capability information.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
UE Radio Capability	M		OCTET STRING	Includes either the *UERadioAccessCapabilityInformation* message as defined in TS 38.331 [18], or the *UERadioAccessCapabilityInformation-NB* message as defined in TS 36.331 [21].

9.3.1.74a UE Radio Capability – E-UTRA Format

This IE contains UE Radio Capability information to support Mode of operation A as specified in TS 23.501 [9].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
UE Radio Capability – E-UTRA Format	M		OCTET STRING	Includes the *UERadioAccessCapabilityInformation* message as defined in TS 36.331 [21].

9.3.1.75 Time Stamp

This IE contains UTC time information.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Time Stamp	M		OCTET STRING (SIZE(4))	Encoded in the same format as the first four octets of the 64-bit timestamp format as defined in clause 6 of IETF RFC 5905 [25].

9.3.1.76 Location Reporting Reference ID

This IE contains the Location Reporting Reference ID.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Location Reporting Reference ID	M		INTEGER (1..64, …)	

9.3.1.77 Data Forwarding Response DRB List

This IE indicates data forwarding related information.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Data Forwarding Response DRB Item		*1..<maxnoofDRBs>*		
>DRB ID	M		9.3.1.53	
>DL Forwarding UP TNL Information	O		UP Transport Layer Information 9.3.2.2	
>UL Forwarding UP TNL Information	O		UP Transport Layer Information 9.3.2.2	

Range bound	Explanation
maxnoofDRBs	Maximum no. of DRBs allowed towards one UE. Value is 32.

9.3.1.78 Paging Priority

This element indicates the paging priority for paging a UE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Paging Priority	M		ENUMERATED (PrioLevel1, PrioLevel2, PrioLevel3, PrioLevel4, PrioLevel5, PrioLevel6, PrioLevel7, PrioLevel8, …)	Lower value codepoint indicates higher priority.

9.3.1.79 Packet Loss Rate

This IE indicates the Packet Loss Rate for a QoS flow.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Packet Loss Rate	M		INTEGER (0..1000, …)	Ratio of lost packets per number of packets sent, expressed in tenth of percent.

9.3.1.80 Packet Delay Budget

This IE indicates the Packet Delay Budget for a QoS flow.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Packet Delay Budget	M		INTEGER (0..1023, …)	Upper bound value for the delay that a packet may experience expressed in unit of 0.5ms.

9.3.1.81 Packet Error Rate

This IE indicates the Packet Error Rate for a QoS flow.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Scalar	M		INTEGER (0..9, …)	The packet error rate is expressed as *Scalar* x 10-k where k is the *Exponent*.
Exponent	M		INTEGER (0..9, …)	

9.3.1.82 Averaging Window

This IE indicates the Averaging Window for a QoS flow, and applies to GBR QoS flows only.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Averaging Window	M		INTEGER (0..4095, …)	Unit: ms. The default value of the IE is 2000ms.

9.3.1.83 Maximum Data Burst Volume

This IE indicates the Maximum Data Burst Volume for a QoS flow, and applies to delay critical GBR QoS flows only.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Maximum Data Burst Volume	M		INTEGER (0..4095, …, 4096.. 2000000)	Unit: byte.

9.3.1.84 Priority Level

This IE indicates the Priority Level for a QoS flow.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Priority Level	M		INTEGER (1..127, …)	Values ordered in decreasing order of priority, i.e. with 1 as the highest priority and 127 as the lowest priority.

9.3.1.85 Mobility Restriction List

This IE defines roaming or access restrictions for subsequent mobility action for which the NG-RAN provides information about the target of the mobility action towards the UE, e.g., handover, or for SCG selection during dual connectivity operation or for assigning proper RNAs. NG-RAN behaviour upon receiving this IE is specified in TS 23.501 [9].

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Serving PLMN	M		PLMN Identity 9.3.3.5		-	
Equivalent PLMNs		*0..<maxnoofEPLMNs>*		Allowed PLMNs in addition to Serving PLMN. This list corresponds to the list of "equivalent PLMNs" as defined in TS 24.501 [26]. This list is part of the roaming restriction information. Roaming restrictions apply to PLMNs other than the Serving PLMN and Equivalent PLMNs.	-	
>PLMN Identity	M		9.3.3.5		-	
RAT Restrictions		*0..<maxnoofEPLMNsPlusOne>*		This IE contains RAT restriction related information as specified in TS 23.501 [9].	-	
>PLMN Identity	M		9.3.3.5		-	
>RAT Restriction Information	M		BIT STRING { e-UTRA (0), nR (1), nR-unlicensed (2), nR-LEO (3), nR-MEO (4), nR-GEO (5), nR-OTHERSAT (6)} (SIZE(8, …))	Each position in the bitmap represents a RAT. If a bit is set to "1", the respective RAT is restricted for the UE. If a bit is set to "0", the respective RAT is not restricted for the UE. Bit 7 reserved for future use.	-	
>Extended RAT Restriction Information	O		9.3.1.126	If this IE is included, the *RAT Restriction Information* IE is ignored.	YES	ignore
Forbidden Area Information		*0..<maxnoofEPLMNsPlusOne>*		This IE contains Forbidden Area information as specified in TS 23.501 [9].	-	
>PLMN Identity	M		9.3.3.5		-	
>Forbidden TACs		*1..<maxnoofForbTACs>*			-	
>>TAC	M		9.3.3.10	The TAC of the forbidden TAI.	-	
Service Area Information		*0..<maxnoofEPLMNsPlusOne>*		This IE contains Service Area Restriction information as specified in TS 23.501 [9].	-	
>PLMN Identity	M		9.3.3.5		-	
>Allowed TACs		*0..<maxnoofAllowedAreas>*			-	

>>TAC	M		9.3.3.10	The TAC of the allowed TAI.	-	
>Not Allowed TACs		*0..<maxnoofAllowedAreas>*			-	
>>TAC	M		9.3.3.10	The TAC of the not-allowed TAI.	-	
Last E-UTRAN PLMN Identity	O		PLMN Identity 9.3.3.5	Indicates the E-UTRAN PLMN ID from where the UE formerly handed over to 5GS and which is preferred in case of subsequent mobility to EPS.	YES	ignore
Core Network Type Restriction for Serving PLMN	O		ENUMERATED (EPCForbidden, …)	Indicates whether the UE is restricted to connect to EPC for the Serving PLMN as specified in TS 23.501 [9].	YES	ignore
Core Network Type Restriction for Equivalent PLMNs		*0..<maxnoofEPLMNs>*			YES	ignore
>PLMN Identity	M		9.3.3.5	Includes any of the Equivalent PLMNs listed in the *Mobility Restriction List* IE for which CN Type restriction applies as specified in TS 23.501 [9].	-	
>Core Network Type Restriction	M		ENUMERATED (EPCForbidden, 5GCForbidden, …)	Indicates whether the UE is restricted to connect to EPC or to 5GC for this PLMN.	-	
NPN Mobility Information	O		9.3.1.184		YES	reject

Range bound	Explanation
maxnoofEPLMNs	Maximum no. of equivalent PLMNs. Value is 15.
maxnoofEPLMNsPlusOne	Maximum no. of allowed PLMNs. Value is 16.
maxnoofForbTACs	Maximum no. of forbidden Tracking Area Codes. Value is 4096.
maxnoofAllowedAreas	Maximum no. of allowed or not allowed Tracking Areas. Value is 16.

9.3.1.86 UE Security Capabilities

This IE defines the supported algorithms for encryption and integrity protection in the UE. The Security Capabilities received from NAS signaling shall not be modified or truncated when forwarded to NG-RAN nodes and the NG-RAN nodes store and send the complete bitmaps without modification or truncation as specified in TS 38.300 [8].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
NR Encryption Algorithms	M		BIT STRING (SIZE(16, …))	Each position in the bitmap represents an encryption algorithm: "all bits equal to 0" – UE supports no other algorithm than NEA0, "first bit" – 128-NEA1, "second bit" – 128-NEA2, "third bit" – 128-NEA3, "fourth to seventh bit" are mapped from bit 4 to bit 1 of octet 3 in the *UE Security Capability* IE defined in TS 24.501 [26], other bits reserved for future use. Value '1' indicates support and value '0' indicates no support of the algorithm. Algorithms are defined in TS 33.501 [13].
NR Integrity Protection Algorithms	M		BIT STRING (SIZE(16, …))	Each position in the bitmap represents an integrity protection algorithm: "all bits equal to 0" – UE supports no other algorithm than NIA0, "first bit" – 128-NIA1, "second bit" – 128-NIA2, "third bit" – 128-NIA3, "fourth to seventh bit" are mapped from bit 4 to bit 1 of octet 4 in the *UE Security Capability* IE defined in TS 24.501 [26], other bits reserved for future use. Value '1' indicates support and value '0' indicates no support of the algorithm. Algorithms are defined in TS 33.501 [13].
E-UTRA Encryption Algorithms	M		BIT STRING (SIZE(16, …))	Each position in the bitmap represents an encryption algorithm: "all bits equal to 0" – UE supports no other algorithm than EEA0, "first bit" – 128-EEA1, "second bit" – 128-EEA2, "third bit" – 128-EEA3, "fourth to seventh bit" are mapped from bit 4 to bit 1 of octet 5 in the *UE Security Capability* IE defined in TS 24.501 [26], other bits reserved for future use. Value '1' indicates support and value '0' indicates no support of the algorithm. Algorithms are defined in TS 33.401 [27].

E-UTRA Integrity Protection Algorithms	M		BIT STRING (SIZE(16, …))	Each position in the bitmap represents an encryption algorithm: "all bits equal to 0" – UE supports no other algorithm than EIA0, "first bit" – 128-EIA1, "second bit" – 128-EIA2, "third bit" – 128-EIA3, "fourth to seventh bit" are mapped from bit 4 to bit 1 of octet 6 in the *UE Security Capability* IE defined in TS 24.501 [26], other bits reserved for future use. Value '1' indicates support and value '0' indicates no support of the algorithm. Algorithms are defined in TS 33.401 [27].

9.3.1.87 Security Key

This IE is used to apply security in the NG-RAN for different scenarios as defined in TS 33.501 [13].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Security Key	M		BIT STRING (SIZE(256))	Key material for NG-RAN node or Next Hop Key as defined in TS 33.501 [13]

9.3.1.88 Security Context

This IE provides security related parameters to the NG-RAN node which are used to derive security keys for user plane traffic and RRC signalling messages and for security parameter generation for subsequent mobility, see TS 33.501 [13].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Next Hop Chaining Count	M		INTEGER (0..7)	Next Hop Chaining Counter (NCC) defined in TS 33.501 [13].
Next-Hop NH	M		Security Key 9.3.1.87	The NH together with the NCC is used to derive the security configuration as defined in TS 33.501 [13].

9.3.1.89 IMS Voice Support Indicator

This IE is set by the NG-RAN node to indicate whether the UE radio capabilities are compatible with the network configuration for IMS voice.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
IMS Voice Support Indicator	M		ENUMERATED (Supported, Not Supported, …)	

9.3.1.90 Paging DRX

This IE indicates the Paging DRX as defined in TS 38.304 [12] and TS 36.304 [29].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Paging DRX	M		ENUMERATED (32, 64, 128, 256, …)	Unit: [number of radioframes]

9.3.1.91 RRC Inactive Transition Report Request

This IE is used to request the NG-RAN node to report or stop reporting to the 5GC when the UE enters or leaves RRC_INACTIVE state.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
RRC Inactive Transition Report Request	M		ENUMERATED (Subsequent state transition report, Single RRC connected state report, Cancel report, …)	

9.3.1.92 RRC State

This IE indicates the RRC state of the UE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
RRC State	M		ENUMERATED (Inactive, Connected, …)	Indicates the current RRC state of the UE.

9.3.1.93 Expected UE Behaviour

This IE indicates the behaviour of a UE with predictable activity and/or mobility behaviour, to assist the NG-RAN node in e.g. determining the optimum RRC connection time or helping with the RRC_INACTIVE state transition and RNA configuration (e.g. size and shape of the RNA).

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Expected UE Activity Behaviour	O		9.3.1.94	
Expected HO Interval	O		ENUMERATED (sec15, sec30, sec60, sec90, sec120, sec180, long-time, …)	Indicates the expected time interval between inter NG-RAN node handovers. If "long-time" is included, the interval between inter NG-RAN node handovers is expected to be longer than 180 seconds.
Expected UE Mobility	O		ENUMERATED (stationary, mobile, ...)	Indicates whether the UE is expected to be stationary or mobile.
Expected UE Moving Trajectory		*0..1*		Indicates the UE's expected geographical movement.
>Expected UE Moving Trajectory Item		*1..<maxnoofCellsUEMovingTrajectory>*		Includes list of visited and non-visited cells, where visited cells are listed in the order the UE visited them with the most recent cell being the first in the list. Non-visited cells are included immediately after the visited cell they are associated with.
>>NG-RAN CGI	M		9.3.1.73	
>>Time Stayed in Cell	O		INTEGER (0..4095)	Included for visited cells and indicates the time a UE stayed in a cell in seconds. If the UE stays in a cell more than 4095 seconds, this IE is set to 4095.

Range bound	Explanation
maxnoofCellsUEMovingTrajectory	Maximum no. of cells of UE moving trajectory. Value is 16.

9.3.1.94 Expected UE Activity Behaviour

This IE indicates information about the expected "UE activity behaviour" of the UE or the PDU session as defined in TS 23.501 [9].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Expected Activity Period	O		INTEGER (1..30|40|50|60|80|100|120|150|180|181, ...)	If set to "181" the expected activity time is longer than 180 seconds. The remaining values indicate the expected activity time in [seconds].
Expected Idle Period	O		INTEGER (1..30|40|50|60|80|100|120|150|180|181, ...)	If set to "181" the expected idle time is longer than 180 seconds. The remaining values indicate the expected idle time in [seconds].
Source of UE Activity Behaviour Information	O		ENUMERATED (subscription information, statistics, ...)	If "subscription information" is indicated, the information contained in the *Expected Activity Period* IE and the *Expected Idle Period* IE, if present, is derived from subscription information. If "statistics" is indicated, the information contained in the *Expected Activity Period* IE and the *Expected Idle Period* IE, if present, is derived from statistical information.

9.3.1.95 UE History Information

This IE contains information about cells that a UE has been served by in RRC_CONNECTED state prior to the target cell.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Last Visited Cell Item		*1..<maxnoofCellsinUEHistoryInfo>*		Most recent information is added to the top of this list.
>Last Visited Cell Information	M		9.3.1.96	

Range bound	Explanation
maxnoofCellsinUEHistoryInfo	Maximum no. of cells in the UE history information. Value is 16.

9.3.1.96 Last Visited Cell Information

This IE may contain cell specific information.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE *Last Visited Cell Information*	M			
>NG-RAN Cell				
>>Last Visited NG-RAN Cell Information	M		9.3.1.97	
>E-UTRAN Cell				
>>Last Visited E-UTRAN Cell Information	M		OCTET STRING	Defined in TS 36.413 [16].
>UTRAN Cell				
>>Last Visited UTRAN Cell Information	M		OCTET STRING	Defined in TS 25.413 [28].
>GERAN Cell				
>>Last Visited GERAN Cell Information	M		OCTET STRING	Defined in TS 36.413 [16].

9.3.1.97 Last Visited NG-RAN Cell Information

This IE contains information about a cell. In case of NR cell, this IE contains information about a set of NR cells with the same NR ARFCN for reference point A, and the *Global Cell ID* IE identifies one of the NR cells in the set. The information is to be used for RRM purposes.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Global Cell ID	M		NG-RAN CGI 9.3.1.73		-	
Cell Type	M		9.3.1.98		-	
Time UE Stayed in Cell	M		INTEGER (0..4095)	The duration of time the UE stayed in the cell, or set of NR cells with the same NR ARFCN for reference point A, in seconds. If the duration is more than 4095s, this IE is set to 4095.	-	
Time UE Stayed in Cell Enhanced Granularity	O		INTEGER (0..40950)	The duration of time the UE stayed in the cell, or set of NR cells with the same NR ARFCN for reference point A, in 1/10 seconds. If the duration is more than 4095s, this IE is set to 40950.	-	
HO Cause Value	O		Cause 9.3.1.2	The cause for the handover.	-	
Last Visited PSCell List		*0..<maxnoofPSCellsPerPrimaryCellinUEHistoryInfo>*		List of cells configured as PSCells. Most recent PSCell related information is added to the top of the list.	YES	ignore
>Last Visited PSCell Information	M		9.3.1.235	The PSCell related information.	-	

Range bound	Explanation
maxnoofPSCellsPerPrimaryCellinUEHistoryInfo	Maximum number of last visited PSCell information records that can be reported in the IE. Value is 8.

9.3.1.98 Cell Type

This IE provides the cell coverage area.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Cell Size	M		ENUMERATED (verysmall, small, medium, large, …)	

9.3.1.99 Associated QoS Flow List

This IE indicates the list of QoS flows associated with e.g. a DRB or UP TNL endpoint.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Associated QoS Flow Item		*1..<maxnoofQoSFlows>*			-	
>QoS Flow Identifier	M		9.3.1.51		-	
>QoS Flow Mapping Indication	O		ENUMERATED (ul, dl, …)		-	
>Current QoS Parameters Set Index	O		Alternative QoS Parameters Set Index 9.3.1.152	Index to the currently fulfilled alternative QoS parameters set	YES	ignore

Range bound	Explanation
maxnoofQoSFlows	Maximum no. of QoS flows allowed within one PDU session. Value is 64.

9.3.1.100 Information on Recommended Cells and RAN Nodes for Paging

This IE provides information on recommended cells and NG-RAN nodes for paging.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Recommended Cells for Paging	M		9.3.1.71	
Recommended RAN Nodes for Paging	M		9.3.1.101	

9.3.1.101 Recommended RAN Nodes for Paging

This IE contains recommended NG-RAN nodes for paging.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Recommended RAN Node List		*1*		
>Recommended RAN Node Item		*1..<maxnoofRecommendedRANNodes>*		Includes visited and non-visited NG-RAN nodes, where visited NG-RAN nodes are listed in the order the UE visited them with the most recent NG-RAN node being the first in the list. Non-visited NG-RAN nodes are included after the visited NG-RAN node they are associated with.
>>CHOICE *AMF Paging Target*				The AMF paging target is either an NG-RAN node identity or a TAI as specified in TS 38.300 [8].
>>>*RAN Node*				
>>>>Global RAN Node ID	M		9.3.1.5	
>>>*TAI*				
>>>>TAI	M		9.3.3.11	

Range bound	Explanation
maxnoofRedommendedRANNodes	Maximum no. of recommended NG-RAN nodes. Value is 16.

9.3.1.102 PDU Session Aggregate Maximum Bit Rate

This IE is applicable for all Non-GBR QoS flows per PDU session which is defined for the downlink and the uplink direction and is provided by the SMF to the NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PDU Session Aggregate Maximum Bit Rate		*1*		Applicable for Non-GBR QoS flows.
>PDU Session Aggregate Maximum Bit Rate Downlink	M		Bit Rate 9.3.1.4	Indicates the PDU session Aggregate Maximum Bit Rate as specified in TS 23.501 [9] in the downlink direction.
>PDU Session Aggregate Maximum Bit Rate Uplink	M		Bit Rate 9.3.1.4	Indicates the PDU session Aggregate Maximum Bit Rate as specified in TS 23.501 [9] in the uplink direction.

9.3.1.103 Maximum Integrity Protected Data Rate

This IE indicates the maximum aggregate data rate for integrity protected DRBs for a UE as defined in TS 38.300 [8].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Maximum Integrity Protected Data Rate	M		ENUMERATED (64kbps, max UE rate, …)	Defines the upper bound of the aggregate data rate of user plane integrity protected data for either UL or DL.

9.3.1.104 Overload Response

This IE indicates the required behaviour of the NG-RAN node in an overload situation.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE *Overload Response*	M			
>Overload Action				
>>Overload Action	M		9.3.1.105	

9.3.1.105 Overload Action

This IE indicates which signalling traffic is subject to rejection by the NG-RAN node in an AMF overload situation as defined in TS 23.501 [9].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Overload Action	M		ENUMERATED (Reject RRC connection establishments for non-emergency MO DT, Reject RRC connection establishments for Signalling, Permit Emergency Sessions and mobile terminated services only, Permit High Priority Sessions and mobile terminated services only, …)	

9.3.1.106 Traffic Load Reduction Indication

This IE indicates the percentage of the type of traffic relative to the instantaneous incoming rate at the NG-RAN node, as indicated in the *Overload Action* IE, to be rejected.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Traffic Load Reduction Indication	M		INTEGER (1..99)	

9.3.1.107 Slice Overload List

This IE indicates the list of overloaded slices.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Slice Overload Item		*1..<maxnoofSliceItems>*		
>S-NSSAI	M		9.3.1.24	

Range bound	Explanation
maxnoofSliceItems	Maximum no. of signalled slice support items. Value is 1024.

9.3.1.108 RAN Status Transfer Transparent Container

This IE is produced by the source NG-RAN node and is transmitted to the target NG-RAN node. It is used for intra 5GC NG-based handover.

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
DRBs Subject to Status Transfer List		*1*			-	
>DRBs Subject to Status Transfer Item		*1..<maxnoof DRBs>*			-	
>>DRB ID	M		9.3.1.53		-	
>>CHOICE *UL DRB Status*	M				-	
>>>12 bits						
>>>>UL COUNT Value	M		COUNT Value for PDCP SN Length 12 9.3.1.109	PDCP-SN and HFN of the first missing UL PDCP SDU in case of 12 bit long PDCP-SN.	-	
>>>>Receive Status of UL PDCP SDUs	O		BIT STRING (SIZE(1..2048))	The IE is used in case of 12 bit long PDCP-SN. The first bit indicates the status of the SDU after the First Missing UL PDCP SDU. The Nth bit indicates the status of the UL PDCP SDU in position (*N* + First Missing SDU Number) modulo (1 + the maximum value of the PDCP-SN). 0: PDCP SDU has not been received. 1: PDCP SDU has been received correctly.	-	
>>>18 bits						
>>>>UL COUNT Value	M		COUNT Value for PDCP SN Length 18 9.3.1.110	PDCP-SN and HFN of the first missing UL PDCP SDU in case of 18 bit long PDCP-SN.	-	
>>>>Receive Status of UL PDCP SDUs	O		BIT STRING (SIZE(1..131072))	The IE is used in case of 18 bit long PDCP-SN. The first bit indicates the status of the SDU after the First Missing UL PDCP SDU. The Nth bit indicates the status of the UL PDCP SDU in position (*N* + First Missing SDU Number) modulo (1 + the maximum value of the PDCP-SN). 0: PDCP SDU has not been received. 1: PDCP SDU has been received correctly.	-	

>>CHOICE *DL DRB Status*	M				-	
>>>12 bits						
>>>>DL COUNT Value	M		COUNT Value for PDCP SN Length 12 9.3.1.109	PDCP-SN and HFN that the target NG-RAN node should assign for the next DL PDCP SDU not having an SN yet in case of 12 bit long PDCP-SN.	-	
>>>18 bits						
>>>>DL COUNT Value	M		COUNT Value for PDCP SN Length 18 9.3.1.110	PDCP-SN and HFN that the target NG-RAN node should assign for the next DL PDCP SDU not having an SN yet in case of 18 bit long PDCP-SN.	-	
>>Old Associated QoS Flow List - UL End Marker Expected	O		Associated QoS Flow List 9.3.1.99	Indicates that the source NG-RAN node has initiated QoS flow re-mapping and has not yet received SDAP end markers, as described in TS 38.300 [8].	YES	ignore

Range bound	Explanation
maxnoofDRBs	Maximum no. of DRBs allowed towards one UE. Value is 32.

9.3.1.109 COUNT Value for PDCP SN Length 12

This IE contains a PDCP sequence number and a hyper frame number in case of 12 bit long PDCP-SN.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PDCP SN Length 12	M		INTEGER (0..4095)	
HFN for PDCP SN Length 12	M		INTEGER (0..1048575)	

9.3.1.110 COUNT Value for PDCP SN Length 18

This IE contains a PDCP sequence number and a hyper frame number in case of 18 bit long PDCP-SN.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PDCP SN Length 18	M		INTEGER (0..262143)	
HFN for PDCP SN Length 18	M		INTEGER (0..16383)	

9.3.1.111 RRC Establishment Cause

This IE indicates the reason for RRC Connection Establishment as received from the UE in the *EstablishmentCause* IE defined in TS 38.331 [18] or the *EstablishmentCause-5GC* IE defined in TS 36.331 [21], or the reason for RRC

Connection Resume as received from the UE in the *ResumeCause* IE defined in TS 38.331 [18] or the *ResumeCause-r15* IE defined in TS 36.331 [21] or the reason for Early Data Request as received from the UE in the *establishmentCause-r16* contained in the *RRCEarlyDataRequest-5GC-r16-IEs* IE defined in TS 36.331 [21].

In case of NB-IoT, this IE indicates the reason for RRC Connection Establishment as received from the UE in the *establishmentCause-r16* contained in the *RRCConnectionRequest-5GC-NB-r16-IEs* IE defined in TS 36.331 [21], or the reason for RRC Connection Resume as received from the UE in the *EstablishmentCause-NB-r13* IE defined in TS 36.331 [21], or the reason for Early Data Request as received from the UE in the *establishmentCause-r16* contained in the *RRCEarlyDataRequest-5GC-NB-r16-IEs* IE defined in TS 36.331 [21].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
RRC Establishment Cause	M		ENUMERATED (emergency, highPriorityAccess, mt-Access, mo-Signalling, mo-Data, mo-VoiceCall, mo-VideoCall, mo-SMS, mps-PriorityAccess, mcs-PriorityAccess, …, notAvailable, mo-ExceptionData)	The *notAvailable* value is used in case the UE is re-establishing an RRC connection but there is fallback to RRC connection establishment as described in TS 38.331 [18], or the UE is resuming an RRC connection and the cause value received from the UE does not map to any other value of the *RRC Establishment Cause* IE.

9.3.1.112 Warning Area Coordinates

This IE contains the affected alert area coordinates of a warning message, and will be broadcast over the radio interface.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Warning Area Coordinates	M		OCTET STRING (SIZE(1..1024))	

9.3.1.113 Network Instance

This IE provides the network instance to be used by the NG-RAN node when selecting a particular transport network resource as described in TS 23.501 [9].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Network Instance	M		INTEGER (1..256, …)	

9.3.1.114 Secondary RAT Usage Information

This IE provides information on the secondary resources used with MR-DC.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PDU Session Usage Report		*0..1*		
>RAT Type	M		ENUMERATED (nR, e-UTRA, …, nR-unlicensed, eUTRA-unlicensed)	
>PDU Session Timed Report List	M		Volume Timed Report List 9.3.1.115	
QoS Flows Usage Report List		*0..1*		
>QoS Flow Usage Report Item		*1..<maxnoofQoSFlows>*		
>>QoS Flow Indicator	M		9.3.1.51	
>>RAT Type	M		ENUMERATED (nR, e-UTRA, …, nR-unlicensed, eUTRA-unlicensed)	
>>QoS Flows Timed Report List	M		Volume Timed Report List 9.3.1.115	

Range bound	Explanation
maxnoofQoSFlows	Maximum no. of QoS flows allowed within one PDU session. Value is 64.

9.3.1.115 Volume Timed Report List

This IE provides information on the data usage.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Volume Timed Report Item		*1..<maxnoofTimePeriods>*		
>Start Timestamp	M		OCTET STRING (SIZE(4))	UTC time encoded in the same format as the first four octets of the 64-bit timestamp format as defined in clause 6 of IETF RFC 5905 [25]. It indicates the start time of the collecting period of the included Usage Count UL IE and Usage Count DL IE.
>End Timestamp	M		OCTET STRING (SIZE(4))	UTC time encoded in the same format as the first four octets of the 64-bit timestamp format as defined in clause 6 of IETF RFC 5905 [25]. It indicates the end time of the collecting period of the included Usage Count UL IE and Usage Count DL IE.
>Usage Count UL	M		INTEGER (0..2^{64}-1)	The unit is: octets.
>Usage Count DL	M		INTEGER (0..2^{64}-1)	The unit is: octets.

Range bound	Explanation
maxnoofTimePeriods	Maximum no. of time reporting periods. Value is 2.

9.3.1.116 Redirection for Voice EPS Fallback

This IE is used to indicate that the AMF and the UE support the redirection for voice for EPS Fallback.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Redirection for Voice EPS Fallback	M		ENUMERATED (possible, not-possible, …)	

9.3.1.117 UE Retention Information

This IE allows the NG-RAN node and the AMF to indicate whether prior UE related contexts and related UE-associated logical NG-connections and RRC connections are intended to be retained.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
UE Retention Information	M		ENUMERATED (ues-retained, ...)	

9.3.1.118 UL Forwarding

This IE indicates that the QoS flow is proposed for forwarding of uplink packets.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
UL Forwarding	M		ENUMERATED (UL forwarding proposed, …)	

9.3.1.119 CN Assisted RAN Parameters Tuning

This IE provides information for assisting in parameters tuning of the NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Expected UE Behaviour	O		9.3.1.93	This IE may be present in case the *Core Network Assistance Information for RRC INACTIVE* IE is not included and is ignored otherwise.

9.3.1.120 Common Network Instance

This IE provides the common network instance to be used by the NG-RAN node when selecting a particular transport network resource as described in TS 23.501 [9] in a format common with 5GC.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Common Network Instance	M		OCTET STRING	The octets of OCTET STRING are encoded as the Network Instance field of the *Network Instance* IE specified in TS 29.244 [43]

9.3.1.121 Data Forwarding Response E-RAB List

This IE is used at inter-system HO to provide DL data forwarding address information, if direct data forwarding is applied.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Data Forwarding Response E-RAB List		*1..<maxnoofERABs>*		The list may include the same DL Forwarding UP TNL Information for multiple E-RABs.
>E-RAB ID	M		9.3.2.3	
>DL Forwarding UP TNL Information	M		UP Transport Layer Information 9.3.2.2	

Range bound	Explanation
maxnoofE-RABs	Maximum no. of E-RABs. Value is 256.

9.3.1.122 gNB Set ID

The gNB Set ID IE is used to identify a group of gNBs which transmit the same RIM-RS.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
gNB Set ID	M		BIT STRING (SIZE(22))	

9.3.1.123 RNC-ID

The RNC-ID is used to identify an RNC.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
RNC-ID	M		INTEGER (0..4095)	

9.3.1.124 Extended RNC-ID

This IE is used to identify an RNC.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Extended RNC-ID	M		INTEGER (4096..65535)	This IE is used if the RNC identity has a value larger than 4095.

9.3.1.125 RAT Information

This IE provides RAT related information associated with a TAC, used as described in TS 23.501 [9].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
RAT Information	M		ENUMERATED (unlicensed, nb-IoT, ..., nR-LEO, nR-MEO, nR-GEO, nR-OTHERSAT)	

9.3.1.126 Extended RAT Restriction Information

This IE provides RAT restrictions as specified in TS 23.501 [9].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Primary RAT Restriction	M		BIT STRING { e-UTRA (0), nR (1), nR-unlicensed (2), nR-LEO (3), nR-MEO (4), nR-GEO (5), nR-OTHERSAT (6), e-UTRA-LEO (7), e-UTRA-MEO (8), e-UTRA-GEO (9), e-UTRA-OTHERSAT (10)} (SIZE(8, …, 16))	Each position in the bitmap represents a Primary RAT. If a bit is set to "1", the respective RAT is restricted for the UE. If a bit is set to "0", the respective RAT is not restricted for the UE. Bits 11-15 reserved for future use. The Primary RAT is the RAT used in the access cell, or target cell.
Secondary RAT Restriction	M		BIT STRING { e-UTRA (0), nR (1), e-UTRA-unlicensed (2), nR-unlicensed (3)} (SIZE(8, …))	Each position in the bitmap represents a Secondary RAT. If a bit is set to "1", the respective RAT is restricted for the UE. If a bit is set to "0", the respective RAT is not restricted for the UE. Bits 4-7 reserved for future use. A Secondary RAT is a RAT, distinct from the UE's primary RAT, used in any cell serving the UE excluding the PCell.

9.3.1.127 SgNB UE X2AP ID

This IE uniquely identifies an UE over the X2 interface within an en-gNB. The usage of this IE is defined in TS 37.340 [32].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
SgNB UE X2AP ID	M		INTEGER (0.. 2^{32} -1)	

9.3.1.128 SRVCC Operation Possible

This IE indicates that both UE and AMF are SRVCC-capable. NG-RAN behaviour on receipt of this IE is specified in TS 23.216 [31].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
SRVCC Operation Possible	M		ENUMERATED (Possible, not Possible, …)	The value "Possible" indicates that UE and AMF are SRVCC capable.

9.3.1.129 IAB Authorized

This IE provides information about the authorization status of the IAB node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
IAB Authorized	M		ENUMERATED (authorized, not authorized, ...)	Indicates the IAB node authorization status.

9.3.1.130 TSC Traffic Characteristics

This IE provides the traffic characteristics of TSC QoS flows.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
TSC Assistance Information Downlink	O		TSC Assistance Information 9.3.1.131	
TSC Assistance Information Uplink	O		TSC Assistance Information 9.3.1.131	

9.3.1.131 TSC Assistance Information

This IE provides the TSC assistance information for a TSC QoS flow in the uplink or downlink (see TS 23.501 [9]).

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Periodicity	M		9.3.1.132		-	
Burst Arrival Time	O		9.3.1.133		-	
Survival Time	O		9.3.1.221		YES	ignore
CHOICE *RAN Feedback Type*	O				YES	ignore
>*proactive*						
>>Burst Arrival Time Window	M		9.3.1.255		-	
>>Periodicity Range	O		9.3.1.256		-	
>*reactive*						
>>Capability for BAT Adaptation	M		ENUMERATED (true, …)		-	
N6 Jitter Information	O		9.3.1.265		YES	ignore

9.3.1.132 Periodicity

This IE indicates the Periodicity of the TSC QoS flow as defined in TS 23.501 [9].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Periodicity	M		INTEGER (0..640000, …)	Periodicity expressed in units of 1 us.

9.3.1.133 Burst Arrival Time

This IE indicates the Burst Arrival Time of the TSC QoS flow as defined in TS 23.501 [9].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Burst Arrival Time	M		OCTET STRING	Encoded in the same format as the *ReferenceTime* IE as defined in TS 38.331 [18]. The value is provided with 1 us accuracy.

9.3.1.134 Redundant QoS Flow Indicator

This IE provides the redundant QoS flow indicator for a QoS flow as specified in TS 23.501 [9].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Redundant QoS Flow Indicator	M		ENUMERATED (true, false)	This IE indicates whether this QoS flow is requested for the redundant transmission. Value "true" indicates that redundant transmission is requested for this QoS flow. Value "false" indicates that redundant transmission is requested to be stopped if started.

9.3.1.135 Extended Packet Delay Budget

This IE indicates the Packet Delay Budget for a QoS flow.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Extended Packet Delay Budget	M		INTEGER (1..65535, …, 65536..109999)	Upper bound value for the delay that a packet may experience expressed in unit of 0.01ms.

9.3.1.136 Redundant PDU Session Information

This IE defines Redundancy information to be applied to a PDU session.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
RSN	M		ENUMERATED (v1, v2, …)		-	
PDU Session Pair ID	O		INTEGER (0.. 255, …)	as defined in TS 23.501 [9]. This IE may be present in the request message and is ignored otherwise.	YES	ignore

9.3.1.137 NB-IoT Default Paging DRX

This IE indicates the NB-IoT Default Paging DRX as defined in TS 36.304 [29].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
NB-IoT Default Paging DRX	M		ENUMERATED (128, 256, 512, 1024, …)	Unit: [number of radioframes]

9.3.1.138 NB-IoT Paging eDRX Information

This IE indicates the NB-IoT Paging eDRX parameters as defined in TS 36.304 [29].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
NB-IoT Paging eDRX Cycle	M		ENUMERATED (hf2, hf4, hf6, hf8, hf10, hf12, hf14, hf16, hf32, hf64, hf128, hf256, hf512, hf1024, …)	T_{eDRX} defined in TS 36.304 [29]. Unit: [number of hyperframes].
NB-IoT Paging Time Window	O		ENUMERATED (s1, s2, s3, s4, s5, s6, s7, s8, s9, s10, s11, s12, s13, s14, s15, s16, …)	Unit: [2.56 seconds]

9.3.1.139 NB-IoT Paging DRX

This IE indicates the NB-IoT UE specific Paging DRX as defined in TS 36.304 [29].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
NB-IoT Paging DRX	M		ENUMERATED (32, 64, 128, 256, 512, 1024, …)	Unit: [number of radioframes]

9.3.1.140 Enhanced Coverage Restriction

This IE provides information on the restriction information of using Coverage Enhancement.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Enhanced Coverage Restriction	M		ENUMERATED (restricted, ...)	Indicates whether the UE is restricted to use coverage enhancement. Value "restricted" indicates that the UE is not allowed to use coverage enhancement.

9.3.1.141 Paging Assistance Data for CE Capable UE

This IE provides Assistance Data for paging CE capable UE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Global Cell ID	M		E-UTRA CGI 9.3.1.9	
Coverage Enhancement Level	M		OCTET STRING	Includes either the *UEPagingCoverageInformation* message as defined in TS 36.331 [21], or the *UEPagingCoverageInformation-NB* message as defined in TS 36.331 [21].

9.3.1.142 UE Radio Capability ID

This IE contains the UE Radio Capability ID.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
UE Radio Capability ID	M		OCTET STRING	Defined in TS 23.003 [23].

9.3.1.143 WUS Assistance Information

This IE provides WUS Assistance Information to be used by the NG-RAN node for determining the WUS group for the UE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Paging Probability Information	M		ENUMERATED (p00, p05, p10, p15, p20, p25, p30, p35, p40, p45, p50, p55, p60, p65, p70, p75, p80, p85, p90, p95, p100, …)	Unit: percentage

9.3.1.144 UE Differentiation Information

This IE is generated by the AMF based on the UE subscription information, it provides the Expected UE Behavior Information.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Periodic Communication Indicator	O		ENUMERATED (periodically, on demand, …)	This IE indicates whether the UE communicates periodically or not, e.g. only on demand.
Periodic Time	O		INTEGER (1..3600, …)	This IE indicates the interval time of periodic communication, the unit is: second
Scheduled Communication Time		*0..1*		This IE indicates the time zone and day of the week when the UE is available for communication.
>Day of Week	O		BIT STRING (SIZE(7))	Each position in the bitmap represents a day of the week: first bit = Mon, second bit =Tue, third bit =Wed, and so on. Value '1' indicates 'scheduled. Value '0' indicates 'not scheduled'. If Day-Of-Week is not provided, this is interpreted as every day of the week.
>Time of Day Start	O		INTEGER (0..86399, …)	This IE indicates the time to start of the day, each value represents the corresponding second since 00:00 of the day. If Time-Of-Day-Start is not provided, starting time is start of the day(s) indicated by Day-Of-Week-Mask.
>Time of Day End	O		INTEGER (0..86399, …)	This IE indicates the time to start of the day, each value represents the corresponding second since 00:00 of the day. The value of this IE should be bigger than the value of Time of Day Start IE. If Time-Of-Day-End is not provided, ending time is end of the day(s) indicated by Day-Of-Week-Mask.
Stationary Indication	O		ENUMERATED (stationary, mobile, …)	
Traffic Profile	O		ENUMERATED (single packet, dual packets, multiple packets, …)	"single packet" indicates single packet transmission (UL or DL), "dual packets" indicates dual packet transmission (UL with subsequent DL, or DL with subsequent UL), "multiple packets" indicates multiple packets transmission.
Battery Indication	O		ENUMERATED (battery powered, battery powered not rechargeable or replaceable, not battery powered, …)	"battery powered" indicates that the UE is battery powered and the battery is rechargeable/replaceable, "battery powered not rechargeable or replaceable" indicates that the UE is battery powered but the battery is not rechargeable/replaceable, "not battery powered" indicates that the UE is not battery powered.

9.3.1.145 NB-IoT UE Priority

This IE provides the NB-IoT UE Priority and to be used by the NG-RAN to prioritise between UEs accessing via NB-IoT.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
NB-IoT UE Priority	M		INTEGER (0..255, …)	Lower value indicates higher priority.

9.3.1.146 NR V2X Services Authorized

This IE provides information on the authorization status of the UE to use the NR sidelink for V2X services.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Vehicle UE	O		ENUMERATED (authorized, not authorized, ...)	Indicates whether the UE is authorized as Vehicle UE
Pedestrian UE	O		ENUMERATED (authorized, not authorized, ...)	Indicates whether the UE is authorized as Pedestrian UE

9.3.1.147 LTE V2X Services Authorized

This IE provides information on the authorization status of the UE to use the LTE sidelink for V2X services.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Vehicle UE	O		ENUMERATED (authorized, not authorized, ...)	Indicates whether the UE is authorized as Vehicle UE
Pedestrian UE	O		ENUMERATED (authorized, not authorized, ...)	Indicates whether the UE is authorized as Pedestrian UE

9.3.1.148 NR UE Sidelink Aggregate Maximum Bit Rate

This IE provides information on the Aggregate Maximum Bitrate of the UE's sidelink communication.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
NR UE Sidelink Aggregate Maximum Bit Rate	M		Bit Rate 9.3.1.4	Value 0 is not valid, and considered as a logical error by the receiving NG-RAN node.

9.3.1.149 LTE UE Sidelink Aggregate Maximum Bit Rate

This IE provides information on the Aggregate Maximum Bitrate of the UE's sidelink communication for LTE V2X services.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
LTE UE Sidelink Aggregate Maximum Bit Rate	M		Bit Rate 9.3.1.4	Value 0 is not valid, and considered as a logical error by the receiving NG-RAN node.

9.3.1.150 PC5 QoS Parameters

This IE provides information on the PC5 QoS parameters of the UE's sidelink communication for NR PC5.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PC5 QoS Flow List		*1*		
>PC5 QoS Flow Item		*1..<maxnoofPC5QoSFlows>*		
>>PQI	M		INTEGER (0..255, …)	PQI is a special 5QI as specified in TS 23.501 [9].
>>PC5 Flow Bit Rates		*0..1*		Only applies for GBR QoS Flows.
>>>Guaranteed Flow Bit Rate	M		Bit Rate 9.3.1.4	Guaranteed Bit Rate for the PC5 QoS flow. Details in TS 23.501 [9].
>>>Maximum Flow Bit Rate	M		Bit Rate 9.3.1.4	Maximum Bit Rate for the PC5 QoS flow. Details in TS 23.501 [9].
>>Range	O		ENUMERATED (m50, m80, m180, m200, m350, m400, m500, m700, m1000, …)	Only applies for groupcast.
PC5 Link Aggregate Bit Rates	O		Bit Rate 9.3.1.4	Only applies for non-GBR QoS Flows.

Range bound	Explanation
maxnoofPC5QoSFlows	Maximum no. of PC5 QoS flows allowed towards one UE. Value is 2048.

9.3.1.151 Alternative QoS Parameters Set List

This IE contains alternative sets of QoS parameters which the NG-RAN node can indicate to be fulfilled when notification control is enabled and it cannot fulfil the requested list of QoS parameters.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Alternative QoS Parameters Set Item		*1..<maxnoofQoSparaSets>*			-	
>Alternative QoS Parameters Set Index	M		9.3.1.152		-	
>Guaranteed Flow Bit Rate Downlink	O		Bit Rate 9.3.1.4		-	
>Guaranteed Flow Bit Rate Uplink	O		Bit Rate 9.3.1.4		-	
>Packet Delay Budget	O		9.3.1.80		-	
>Packet Error Rate	O		9.3.1.81		-	
>Maximum Data Burst Volume	O		9.3.1.83	Maximum Data Burst Volume is specified in TS 23.501 [9]. This IE may be included if the *Delay Critical* IE is set to "delay critical" and is ignored otherwise.	YES	ignore
>PDU Set Delay Budget Downlink	O		Extended Packet Delay Budget 9.3.1.135	This IE is included if the *PDU Set Packet Delay Budget* IE in the *DL PDU Set QoS Information* IE is present and is ignored otherwise.	YES	ignore
>PDU Set Delay Budget Uplink	O		Extended Packet Delay Budget 9.3.1.135	This IE is included if the *PDU Set Packet Delay Budget* IE in the *UL PDU Set QoS Information* IE is present and is ignored otherwise.	YES	ignore
>PDU Set Error Rate Downlink	O		Packet Error Rate 9.3.1.81	This IE is included if the *PDU Set Error Rate* IE in the *DL PDU Set QoS Information* IE is present and is ignored otherwise.	YES	ignore
>PDU Set Error Rate Uplink	O		Packet Error Rate 9.3.1.81	This IE is included if the *PDU Set Error Rate* IE in the *UL PDU Set QoS Information* IE is present and is ignored otherwise.	YES	ignore

Range bound	Explanation
maxnoofQoSparaSets	Maximum no. of alternative sets of QoS Parameters allowed for the QoS profile. Value is 8.

9.3.1.152 Alternative QoS Parameters Set Index

This IE indicates the index of alternative QoS parameters set.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Alternative QoS Parameters Set Index	M		INTEGER (1..8, ...)	Values are ordered in decreasing order of priority, i.e., with 1 as the highest priority and 8 as the lowest priority.

9.3.1.153 Alternative QoS Parameters Set Notify Index

This IE indicates the QoS parameters set which can currently be fulfilled.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Alternative QoS Parameters Set Notify Index	M		INTEGER (0..8, ...)	Indicates the index of the item within the *Alternative QoS Parameters Set List* IE corresponding to the currently fulfilled alternative QoS parameters set. Value 0 indicates that NG-RAN cannot even fulfil the lowest priority alternative parameters set.

9.3.1.154 E-UTRA Paging eDRX Information

This IE indicates the E-UTRA Paging eDRX parameters as defined in TS 36.304 [29].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
E-UTRA Paging eDRX Cycle	M		ENUMERATED (hfhalf, hf1, hf2, hf4, hf6, hf8, hf10, hf12, hf14, hf16, hf32, hf64, hf128, hf256, …)	TeDRX defined in TS 36.304 [29]. Unit: [number of hyperframes].
E-UTRA Paging Time Window	O		ENUMERATED (s1, s2, s3, s4, s5, s6, s7, s8, s9, s10, s11, s12, s13, s14, s15, s16, …)	Unit: [1.28 second].

9.3.1.155 CE-mode-B Restricted

This IE provides information on the restriction information of using Coverage Enhancement Mode B.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CE-mode-B Restricted	M		ENUMERATED (restricted, not-restricted, ...)	Indicates whether the UE is restricted to use coverage enhancement. Value "restricted" indicates that the UE is not allowed to use coverage enhancement mode B. Value "not-restricted" indicates that the UE is allowed to use coverage enhancement mode B.

9.3.1.156 CE-mode-B Support Indicator

This IE indicates whether CE-mode-B as specified in TS 36.306[42] is supported for the UE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CE-mode-B Support Indicator	M		ENUMERATED (supported, …)	

9.3.1.157 LTE-M Indication

This IE is provided by the NG-RAN node to inform that the UE indicates category M1 or M2 in its UE Radio Capability.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
LTE-M Indication	M		ENUMERATED (LTE-M, ...)	

9.3.1.158 Suspend Request Indication

This IE indicates that the NG-RAN node requests immediate transition to RRC idle with suspend, as specified in TS 23.502 [10].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Suspend Request Indication	M		ENUMERATED (suspend-requested, …)	

9.3.1.159 Suspend Response Indication

This IE is used by the AMF to inform the NG-RAN node to suspend the UE and send it to RRC_IDLE, as specified in TS 23.502 [10].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Suspend Response Indication	M		ENUMERATED (suspend-indicated, …)	

9.3.1.160 UE User Plane CIoT Support Indicator

This IE indicates whether User Plane CIoT 5GS Optimisation as specified in TS 23.501 [9] is supported for the UE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
UE User Plane CIoT Support Indicator	M		ENUMERATED (supported, …)	

9.3.1.161 Global TNGF ID

This IE is used to globally identify a TNGF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PLMN Identity	M		9.3.3.5	
CHOICE *TNGF ID*	M			
>*TNGF ID*				
>>TNGF ID	M		BIT STRING (SIZE(32, …))	

9.3.1.162 Global W-AGF ID

This IE is used to globally identify a W-AGF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PLMN Identity	M		9.3.3.5	
CHOICE *W-AGF ID*	M			
>*W-AGF ID*				
>>W-AGF ID	M		BIT STRING (SIZE(16, …))	

9.3.1.163 Global TWIF ID

This IE is used to globally identify a TWIF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PLMN Identity	M		9.3.3.5	
CHOICE *TWIF ID*	M			
>*TWIF ID*				
>>TWIF ID	M		BIT STRING (SIZE(32, …))	

9.3.1.164 W-AGF User Location Information

This IE indicates the location information via wireline access as specified in TS 23.316 [34].

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
CHOICE *W-AGF User Location Information*	M				-	
>Global Line ID					-	
>>Global Line ID	M		OCTET STRING	Encoded as defined in TS 23.003 [23].	-	
>>Line Type	O		ENUMERATED (DSL, PON, …)		-	
>>TAI	O		9.3.3.11		YES	ignore
>HFC Node ID					-	
>>HFC Node ID	M		OCTET STRING	Indicates the identifier of the HFC node as specified in [37]. Encoded as defined in TS 23.003 [23].	-	
>Global Cable ID					YES	ignore
>>Global Cable ID	M		OCTET STRING	Encoded as defined in TS 23.003 [23].	-	
>HFC Node ID New					YES	ignore
>>HFC Node ID	M		OCTET STRING	Indicates the identifier of the HFC node as specified in [37]. Encoded as defined in TS 23.003 [23].	-	
>>TAI	M		9.3.3.11		-	
>>Global Cable ID	O		OCTET STRING	Encoded as defined in TS 23.003 [23].	YES	ignore
>Global Cable ID New					YES	ignore
>>Global Cable ID	M		OCTET STRING	Encoded as defined in TS 23.003 [23].	-	
>>TAI	M		9.3.3.11		-	

9.3.1.165 Global eNB ID

This IE is used to globally identify an eNB (see TS 36.401 [38]).

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PLMN Identity	M		9.3.3.5	
CHOICE *eNB ID*	M			
>Macro eNB ID				
>>Macro eNB ID	M		BIT STRING (SIZE(20))	Equal to the 20 leftmost bits of the *E-UTRA Cell Identity* IE contained in the *E-UTRA CGI* IE of each cell served by the eNB.
>Home eNB ID				
>>Home eNB ID	M		BIT STRING (SIZE(28))	Equal to the *E-UTRA Cell Identity* IE contained in the *E-UTRA CGI* IE of the cell served by the eNB.
>Short Macro eNB ID				
>>Short Macro eNB ID	M		BIT STRING (SIZE(18))	Equal to the 18 leftmost bits of the *E-UTRA Cell Identity* IE contained in the *E-UTRA CGI* IE of each cell served by the eNB.
>Long Macro eNB ID				
>>Long Macro eNB ID	M		BIT STRING (SIZE(21))	Equal to the 21 leftmost bits of the *E-UTRA Cell Identity* IE contained in the *E-UTRA CGI* IE of each cell served by the eNB.

9.3.1.166 UE History Information from UE

This IE contains information about mobility history report for a UE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE *UE History Information from UE*	M			
>NR				
>>NR Mobility History Report	M		OCTET STRING	Includes the *mobilityHistoryReport* contained in the *UEInformationResponse* message as defined in TS 38.331 [18].

9.3.1.167 MDT Configuration

This IE defines the MDT configuration parameters.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
MDT Configuration-NR	O		9.3.1.169		-	
MDT Configuration-EUTRA	O		9.3.1.170		-	
MN Only MDT Collection	O		ENUMERATED (MN only, …)	For MR-DC configurations, indicates that the *MDT Configuration-NR* IE or the *MDT Configuration-EUTRA* IE only applies to the MN.	YES	ignore

9.3.1.168 MDT PLMN List

The purpose of the *MDT PLMN List* IE is to provide the list of PLMN allowed for MDT.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MDT PLMN List		*1..<maxnoofMDTPLMNs>*		
>PLMN Identity	M		9.3.3.5	

Range bound	Explanation
maxnoofMDTPLMNs	Maximum no. of PLMNs in the MDT PLMN list. Value is 16.

9.3.1.169 MDT Configuration-NR

This IE defines the MDT configuration parameters of NR.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
MDT Activation	M		ENUMERATED (Immediate MDT only, Logged MDT only, Immediate MDT and Trace, …)		-	
CHOICE *Area Scope of MDT*	M				-	
>Cell based				If *PNI-NPN Area Scope of MDT* IE is present, this IE covers non-CAG cells only, where non-CAG cells refer to cells that only provide public access.		
>>Cell ID List for MDT		*1..<maxnoofCellIDforMDT>*			-	
>>>NR CGI	M		9.3.1.7		-	
>TA based				If *PNI-NPN Area Scope of MDT* IE is present, this IE covers non-CAG cells only, where non-CAG cells refer to cells that only provide public access.		
>>TA List for MDT		*1..<maxnoofTAforMDT>*			-	
>>>TAC	M		9.3.3.10	The TAI is derived using the current serving PLMN.	-	
>PLMN wide			NULL			
>TAI based				If *PNI-NPN Area Scope of MDT* IE is present, this IE covers non-CAG cells only, where non-CAG cells refer to cells that only provide public access.		
>>TAI List for MDT		*1..<maxnoofTAforMDT>*			-	
>>>TAI	M		9.3.3.11		-	
>PNI-NPN Based MDT					YES	ignore
>>CAG List for MDT			9.3.3.65		-	
>SNPN Cell Based MDT					YES	ignore
>>SNPN Cell ID List for MDT		*1..<maxnoofCellIDforMDT>*			-	
>>>NR CGI	M		9.3.1.7		-	
>>>NID	M		9.3.3.42	Identifies an SNPN together with the PLMN Identity in the *NR CGI* IE.	-	
>SNPN TAI Based MDT					YES	ignore

>>SNPN TAI List for MDT		*1..<maxnoofTAforMDT>*			-	
>>>TAI	M		9.3.3.11		-	
>>>NID	M		9.3.3.42	Identifies an SNPN together with the PLMN Identity in the *TAI* IE.	-	
>SNPN Based MDT					YES	ignore
>>SNPN List for MDT		*1..<maxnoofMDTSNPNs>*			-	
>>>PLMN Identity	M		9.3.3.5		-	
>>>NID	M		9.3.3.42	Identifies an SNPN together with the *PLMN Identity* IE.	-	
>Geography Based				The geographical area can be used with NTN deployment.	YES	ignore
>>Geographical Area	M		9.3.3.68		-	
CHOICE *MDT Mode*	M				-	
>Immediate MDT						
>>Measurements to Activate	M		BITSTRING (SIZE(8))	Each position in the bitmap indicates a MDT measurement, as defined in TS 37.320 [41]. First Bit = M1, Second Bit= M2, Third Bit = M4, Fourth Bit = M5, Fifth Bit = M6, Sixth Bit = M7, Seventh Bit = logging of M1 from event triggered measurement reports according to existing RRM configuration, other bits reserved for future use. Value "1" indicates "activate" and value "0" indicates "do not activate".	-	
>>M1 Configuration	C-ifM1		9.3.1.171		-	
>>M4 Configuration	C-ifM4		9.3.1.172		-	
>>M5 Configuration	C-ifM5		9.3.1.173		-	
>>M6 Configuration	C-ifM6		9.3.1.174		-	
>>M7 Configuration	C-ifM7		9.3.1.175		-	
>>Bluetooth Measurement Configuration	O		9.3.1.177		-	
>>WLAN Measurement Configuration	O		9.3.1.178		-	
>>MDT Location Information	O		9.3.1.176		-	
>>Sensor Measurement Configuration	O		9.3.1.179		-	
>Logged MDT						

>>Logging Interval	M		ENUMERATED (320ms, 640ms, 1280ms, 2560ms, 5120ms, 10240ms, 20480ms, 30720ms, 40960ms, 61440ms, infinity, …)	Corresponds to the *LoggingInterval* IE as defined in TS 38.331 [18].	-	
>>Logging Duration	M		ENUMERATED (10, 20, 40, 60, 90,120, …)	Corresponds to the *LoggingDuration* IE as defined in TS 38.331 [18]. Unit: [minute].	-	
>>CHOICE *Report Type*	M				-	
>>>*Periodical*			NULL			
>>>*Event Triggered*						
>>>>Event Trigger Logged MDT Configuration	M		9.3.1.180		-	
>>Bluetooth Measurement Configuration	O		9.3.1.177		-	
>>WLAN Measurement Configuration	O		9.3.1.178		-	
>>Sensor Measurement Configuration	O		9.3.1.179		-	
>>Area Scope of Neighbour Cells	O		9.3.1.182		-	
>>Early Measurement	O		ENUMERATED (true, ...)	This IE indicates whether the UE is allowed to log measurements on early measurement related frequencies in logged MDT as specified in TS 38.331 [18].	YES	ignore
Signalling Based MDT PLMN List	O		MDT PLMN List 9.3.1.168		-	
PNI-NPN Area Scope of MDT		*0..1*		This IE is ignored if the *Area Scope of MDT* IE is set to "PLMN Wide"	YES	ignore
>CAG List for MDT	M		9.3.3.65		-	
Network Slice Area Scope of MDT	O		9.3.3.67		YES	ignore

Range bound	Explanation
maxnoofCellIDforMDT	Maximum no. of Cell ID subject for MDT scope. Value is 32.
maxnoofTAforMDT	Maximum no. of TA subject for MDT scope. Value is 8.
maxnoofMDTSNPNs	Maximum no. of SNPNs in the MDT SNPN list. Value is 16.

Condition	Explanation
C-ifM1	This IE shall be present if the *Measurements to Activate* IE has the first bit set to "1".
C-ifM4	This IE shall be present if the *Measurements to Activate* IE has the third bit set to "1".
C-ifM5	This IE shall be present if the *Measurements to Activate* IE has the fourth bit set to "1".
C-ifM6	This IE shall be present if the Measurements to Activate IE has the fitth bit set to "1".
C-ifM7	This IE shall be present if the Measurements to Activate IE has the sixth bit set to "1".

9.3.1.170 MDT Configuration-EUTRA

This IE defines the MDT configuration parameters of EUTRA.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MDT Activation	M		ENUMERATED (Immediate MDT only, Logged MDT only, Immediate MDT and Trace, …)	
CHOICE *Area Scope of MDT*	M			
>Cell based				
>>Cell ID List for MDT		*1..<maxnoofCellIDforMDT>*		
>>>E-UTRA CGI	M		9.3.1.9	
>TA based				
>>TA List for MDT		*1..<maxnoofTAforMDT>*		
>>>TAC	M		9.3.3.10	The TAI is derived using the current serving PLMN.
>PLMN wide			NULL	
>TAI based				
>>TAI List for MDT		*1..<maxnoofTAforMDT>*		
>>>TAI	M		9.3.3.11	
MDT Mode	M		OCTET STRING	*MDTMode* IE defined in TS 36.413 [16].
Signalling Based MDT PLMN List	O		MDT PLMN List 9.3.1.168	

Range bound	Explanation
maxnoofCellIDforMDT	Maximum no. of Cell ID subject for MDT scope. Value is 32.
maxnoofTAforMDT	Maximum no. of TA subject for MDT scope. Value is 8.

9.3.1.171 M1 Configuration

This IE defines the parameters for M1 measurement collection.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
M1 Reporting Trigger	M		ENUMERATED (periodic, A2event-triggered, A2event-triggered periodic, …)		-	
M1 Threshold Event A2	C-ifM1A2trigger				-	

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
>CHOICE *Threshold Type*	M				-	
>>*RSRP*						
>>>Threshold RSRP	M		INTEGER (0..127)	Corresponds to the *RSRP-Range* IE as defined in TS 38.331 [18].	-	
>>*RSRQ*						
>>>Threshold RSRQ	M		INTEGER (0..127)	Corresponds to the *RSRQ-Range* IE as defined in TS 38.331 [18].	-	
>>*SINR*						
>>>Threshold SINR	M		INTEGER (0..127)	Corresponds to the *SINR-Range* IE as defined in TS 38.331 [18].	-	
M1 Periodic Reporting	C-ifperiodicMDT				-	
>Report Interval	M		ENUMERATED (ms120, ms240, ms480, ms640, ms1024, ms2048, ms5120, ms10240, min1, min6, min12, min30, min60)	Corresponds to the *ReportInterval* IE as defined in TS 38.331 [18]. The value min60 is not used in the specification.	-	
>Report Amount	M		ENUMERATED (1, 2, 4, 8, 16, 32, 64, infinity)	Number of reports.	-	
>Extended Report Interval	O		ENUMERATED (ms20480, ms40960, ...)	This IE is the extension of the *Report Interval* IE. If this IE is present, the *Report Interval* IE is ignored.	YES	ignore
Include Beam Measurements Indication	O		ENUMERATED (true, …)	To configure whether the UE should include beam level measurements.	YES	ignore
Beam Measurements Report Configuration	C-ifM1BeamMeasInd				YES	ignore
>Beam Measurements Report Quantity		*0..1*		This IE indicates the beam measurement quantity and corresponds to the *MeasReportQuantity* IE as defined in TS 38.331 [18].	-	
>>RSRP	M		ENUMERATED (true, …, false)		-	
>>RSRQ	M		ENUMERATED (true, …, false)		-	
>>SINR	M		ENUMERATED (true, …, false)		-	
>MaxNrofRS-IndexesToReport	O		INTEGER (1..64, …)	Indicates the max number of beam measurements to be reported and corresponds to the	-	

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
				maxNrofRS-IndexesToReport in the *ReportConfigNR* IE as defined in TS 38.331 [18].		

Condition	Explanation
C-ifM1A2trigger	This IE shall be present if the *M1 Reporting Trigger* IE is set to the value "A2event-triggered" or "A2event-triggered periodic".
C-ifperiodicMDT	This IE shall be present if the *M1 Reporting Trigger* IE is set to the value "periodic" or "A2event-triggered periodic".
C-ifM1BeamMeasInd	This IE shall be present if the *Include Beam Measurements Indication* IE is set to the value "true".

9.3.1.172 M4 Configuration

This IE defines the parameters for M4 measurement collection.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
M4 Collection Period	M		ENUMERATED (ms1024, ms2048, ms5120, ms10240, min1, …)		-	
M4 Links to Log	M		ENUMERATED (uplink, downlink, both-uplink-and-downlink, …)		-	
M4 Report Amount	O		ENUMERATED (1, 2, 4, 8, 16, 32, 64, infinity, …)	Number of reports.	YES	ignore

9.3.1.173 M5 Configuration

This IE defines the parameters for M5 measurement collection.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
M5 Collection Period	M		ENUMERATED (ms1024, ms2048, ms5120, ms10240, min1, …)		-	
M5 Links to Log	M		ENUMERATED (uplink, downlink, both-uplink-and-downlink, …)		-	
M5 Report Amount	O		ENUMERATED (1, 2, 4, 8, 16, 32, 64, infinity, …)	Number of reports	YES	ignore

9.3.1.174 M6 Configuration

This IE defines the parameters for M6 measurement collection.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
M6 Report Interval	M		ENUMERATED (ms120, ms240, ms480, ms640, ms1024, ms2048, ms5120, ms10240, ms20480, ms40960, min1, min6, min12, min30, …)		-	
M6 Links to Log	M		ENUMERATED (uplink, downlink, both-uplink-and-downlink, …)		-	
M6 Report Amount	O		ENUMERATED (1, 2, 4, 8, 16, 32, 64, infinity, …)	Number of reports	YES	ignore
Excess Packet Delay Threshold Configuration	O		9.3.1.244		YES	ignore

9.3.1.175 M7 Configuration

This IE defines the parameters for M7 measurement collection.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
M7 Collection Period	M		INTEGER (1..60, …)	Unit: minutes	-	
M7 Links to Log	M		ENUMERATED (uplink, downlink, both-uplink-and-downlink, …)		-	
M7 Report Amount	O		ENUMERATED (1, 2, 4, 8, 16, 32, 64, infinity, …)	Number of reports	YES	ignore

9.3.1.176 MDT Location Information

This IE defines the MDT Location Information.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MDT Location Information	M		BITSTRING (SIZE(8))	Each position in the bitmap represents requested location information as defined in TS 37.320 [41]. First Bit = GNSS Other bits are reserved for future use and are ignored if received. Value "1" indicates "activate" and value "0" indicates "do not activate".

9.3.1.177 Bluetooth Measurement Configuration

This IE defines the parameters for Bluetooth measurement collection.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Bluetooth Measurement Configuration	M		ENUMERATED (Setup, …)	
Bluetooth Measurement Configuration Name List		*0..1*		This IE is present if the *Bluetooth Measurement Configuration* IE is set to "Setup".
>Bluetooth Measurement Configuration Name Item		*1..<maxnoofBluetoothName>*		
>>Bluetooth Measurement Configuration Name	M		OCTET STRING (SIZE (1..248))	
BT RSSI	O		ENUMERATED (true, …)	In case of Immediate MDT, it corresponds to M8 measurement as defined in TS 37.320 [41].

Range bound	Explanation
maxnoofBluetoothName	Maximum no. of Bluetooth local name used for Bluetooth measurement collection. Value is 4.

9.3.1.178 WLAN Measurement Configuration

This IE defines the parameters for WLAN measurement collection.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
WLAN Measurement Configuration	M		ENUMERATED (Setup, …)	
WLAN Measurement Configuration Name List		*0..1*		This IE is present if the *Bluetooth Measurement Configuration* IE is set to "Setup".
>WLAN Measurement Configuration Name Item		*1..<maxnoofWLANName>*		
>>WLAN Measurement Configuration Name	M		OCTET STRING (SIZE (1..32))	
WLAN RSSI	O		ENUMERATED (true, …)	In case of Immediate MDT, it corresponds to M8 as defined in TS 37.320 [41].
WLAN RTT	O		ENUMERATED (true, …)	In case of Immediate MDT, it corresponds to M9 as defined in TS 37.320 [41].

Range bound	Explanation
maxnoofWLANName	Maximum no. of WLAN SSID used for WLAN measurement collection. Value is 4.

9.3.1.179 Sensor Measurement Configuration

This IE defines the parameters for Sensor measurement collection.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Sensor Measurement Configuration	M		ENUMERATED (Setup, …)	
Sensor Measurement Configuration Name List		*0..1*		
>Sensor Measurement Configuration Name Item		*1..<maxnoofSensorName>*		
>>CHOICE *Sensor Name*	M			
>>>Uncompensated Barometric				
>>>>Uncompensated Barometric Configuration	M		ENUMERATED (true, …)	
>>>UE speed				
>>>>UE Speed Configuration	M		ENUMERATED (true, …)	
>>>UE orientation				
>>>>UE orientation Configuration	M		ENUMERATED (true, …)	

Range bound	Explanation
maxnoofSensorName	Maximum no. of Sensor local name used for Sensor measurement collection. Value is 3

9.3.1.180 Event Trigger Logged MDT Configuration

This IE defines the event trigger logged MDT configuration.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE *Event trigger type*	M			
>Out-of-coverage				
>>Out-of-Coverage Configuration	M		ENUMERATED (true, ...)	
>L1 Event				
>>CHOICE *L1 Event Threshold*	M			
>>>RSRP				
>>>>Threshold RSRP	M		INTEGER (0..127)	Corresponds to the *RSRP-Range* IE as defined in TS 38.331 [18].
>>>RSRQ				
>>>>Threshold RSRQ	M		INTEGER (0..127)	Corresponds to the *RSRQ-Range* IE as defined in TS 38.331 [18].
>>Hysteresis	M		INTEGER (0..30)	This parameter is used within the entry and leave condition of an event triggered reporting condition.
>>Time to Trigger	M		ENUMERATED (ms0, ms40, ms64, ms80, ms100, ms128, ms160, ms256, ms320, ms480, ms512, ms640, ms1024, ms1280, ms2560, ms5120)	Time during which specific criteria for the event needs to be met in order to trigger a measurement report.

9.3.1.181 NR Frequency Info

This defines the carrier frequency and bands used in a cell for a given direction (UL or DL) in FDD or for both UL and DL directions in TDD.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
NR ARFCN	M		INTEGER (0.. maxNRARFCN)	RF Reference Frequency as defined in TS 38.104 [39], clause 5.4.2.1. The frequency provided in this IE identifies the absolute frequency position of the reference resource block (Common RB 0) of the carrier. Its lowest subcarrier is also known as Point A.
NR Frequency Band List		*1*		This IE is not used in this specification and is ignored.
>NR Frequency Band Item		*1..<maxnoofNR CellBands>*		
>>NR Frequency Band	M		INTEGER (1.. 1024, ...)	Primary NR Operating Band as defined in TS 38.104 [39], clause 5.4.2.3. The value 1 corresponds to n1, value 2 corresponds to NR operating band n2, etc.

Range bound	Explanation
maxNRARFCN	Maximum value of NRARFCNs. Value is 3279165.
maxnoofNRCellBands	Maximum no. of frequency bands supported for a NR cell. Value is 32.

9.3.1.182 Area Scope of Neighbour Cells

This IE defines the area scope of neighbour cells for logged MDT.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Area Scope of Neighbour Cells Item	M	*1..<maxnoofFreqforMDT>*		
>NR Frequency Info	M		9.3.1.181	
>PCI List for MDT		*0.. <maxnoofNeighPCIforMDT>*		
>>NR PCI	M		INTEGER (0..1007, …)	NR Physical Cell ID

Range bound	Explanation
maxnoofFreqforMDT	Maximum no. of Frequency Information subject for MDT scope. Value is 8.
maxnoofNeighPCIforMDT	Maximum no. of Neighbour cells subject for MDT scope. Value is 32.

9.3.1.183 NPN Paging Assistance Information

This IE contains NPN Paging Assistance Information.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE *NPN Paging Assistance Information*	M			
>PNI-NPN Paging Assistance				
>>PNI-NPN Paging Assistance	M		Allowed PNI-NPN List 9.3.3.45	

9.3.1.184 NPN Mobility Information

This IE indicates the access restrictions related to an NPN.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
CHOICE *NPN Mobility Information*	M				-	
>SNPN Mobility Information					-	
>>Serving NID	M		NID 9.3.3.42		-	
>>Equivalent SNPNs List		*0..1*			YES	reject
>>>Equivalent SNPNs Item		*1..<maxnoofESNPNs>*		Allowed SNPNs in addition to Serving SNPN. This list corresponds to the list of "equivalent SNPNs" as defined in TS 24.501 [26]. This list is part of the roaming restriction information. Roaming restrictions apply to SNPNs other than the Serving SNPN and Equivalent SNPNs.	-	
>>>>PLMN Identity	M		9.3.3.5		-	
>>>>NID	M		9.3.3.42		-	
>PNI-NPN Mobility Information					-	
>>Allowed PNI-NPN List	M		9.3.3.45		-	

Range bound	Explanation
maxnoofESNPNs	Maximum no. of equivalent SNPNs. Value is 15.

9.3.1.185 Cell CAG Information

This IE provides information about support of closed access groups for a designated cell.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
NG-RAN CGI	M		9.3.1.73	
Cell CAG List	M		9.3.3.47	

9.3.1.186 Target to Source Failure Transparent Container

This IE is used to transparently pass radio related information from the handover target to the handover source through the core network in case of failure of the preparation at the target; it is produced by the target RAN node and is transmitted to the source RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Target to Source Failure Transparent Container	M		OCTET STRING	This IE includes a transparent container from the target RAN node to the source RAN node. The octets of the OCTET STRING are encoded according to the specifications of the target system. Note: In the current version of the specification, this IE may carry the *Target NG-RAN Node to Source NG-RAN Node Failure Transparent Container* IE.

9.3.1.187 Target NG-RAN Node to Source NG-RAN Node Failure Transparent Container

This IE is produced by the target NG-RAN node and is transmitted to the source NG-RAN node in case of preparation failure.

This IE is transparent to the 5GC.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Cell CAG Information	O		9.3.1.185		-	
NGAP IE Support Information Response List	O		9.3.1.242		YES	ignore

9.3.1.188 DAPS Request Information

The *DAPS Indicator* IE indicates that the source NG-RAN node requests a DAPS Handover for the concerned DRB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
DAPS Indicator	M		ENUMERATED (DAPS HO required, …)	Indicates that DAPS Handover is requested

9.3.1.189 DAPS Response Information

The *DAPS Response Indicator* IE indicates the per DRB response to a requested DAPS Handover.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
DAPS Response Indicator	M		ENUMERATED (DAPS HO accepted, DAPS HO not accepted, …)	Indicates that DAPS Handover is accepted or not

9.3.1.190 Early Status Transfer Transparent Container

The *Early Status Transfer Transparent Container* IE is an information element that is produced by the source NG-RAN node and is transmitted to the target NG-RAN node. This IE is used for the NG DAPS handover case, and for the NG-based handover with time-based trigger condition case.

This IE is transparent to the 5GC.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
CHOICE *Procedure Stage*	M				-	
>First DL COUNT						
>>DRBs Subject To Early Status Transfer List		*1*			-	
>>>DRBs Subject To Early Status Transfer Item		*1..<maxnoofDRBs>*			-	
>>>>DRB ID	M		9.3.1.53		-	
>>>>CHOICE *First DL COUNT*	M				-	
>>>>>12 bits						
>>>>>>FIRST DL COUNT Value	M		COUNT Value for PDCP SN Length 12 9.3.1.109	PDCP-SN and Hyper frame number of the first DL SDU that the source NG-RAN node forwards to the target NG-RAN node in case of 12 bit long PDCP-SN	-	
>>>>>18 bits						
>>>>>>FIRST DL COUNT Value	M		COUNT Value for PDCP SN Length 18 9.3.1.110	PDCP-SN and Hyper frame number of the first DL SDU that the source NG-RAN node forwards to the target NG-RAN node in case of 18 bit long PDCP-SN	-	
>DL Discarding					YES	ignore
>>DRBs Subject To DL Discarding List		*1*			-	
>>>DRBs Subject To DL Discarding Item		*1 .. <maxnoofDRBs>*			-	
>>>>DRB ID	M		9.3.1.53		-	
>>>>CHOICE *DL* Discarding	M				-	
>>>>>12 bits						
>>>>>>DISCARD DL COUNT Value	M		COUNT Value for PDCP SN Length 12 9.3.1.109	PDCP-SN and Hyper frame number for which the receiving NG-RAN node should discard forwarded DL SDUs associated with lower values in case of 12 bit long PDCP-SN	-	
>>>>>18 bits						
>>>>>>DISCARD DL COUNT Value	M		COUNT Value for PDCP SN Length 18	PDCP-SN and Hyper frame number for which	-	

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
			9.3.1.110	the receiving NG-RAN node should discard forwarded DL SDUs associated with lower values in case of 18 bit long PDCP-SN		

Range bound	Explanation
maxnoofDRBs	Maximum no. of DRBs allowed towards one UE. Value is 32.

9.3.1.191 Extended Slice Support List

This IE indicates a list of supported slices.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Slice Support Item		*1..<maxnoofExtSliceItems>*		
>S-NSSAI	M		9.3.1.24	

Range bound	Explanation
maxnoofExtSliceItems	Maximum no. of signalled slice support items. Value is 65535.

9.3.1.192 UE Capability Info Request

This IE indicates the request to provide to the AMF the UE radio capability related information when retrieved from the UE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
UE Capability Info Request	M		ENUMERATED (requested, …)	

9.3.1.193 Extended RAN Node Name

This IE provides extended human readable name of the NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
RAN Node Name Visible	O		VisibleString (SIZE(1..150, …))	
RAN Node Name UTF8	O		UTF8String (SIZE(1..150, …))	

9.3.1.194 MICO All PLMN

This IE indicates that the UE is configured with MICO mode by the AMF for the "all PLMN" as specified in TS 23.501 [9].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MICO All PLMN	M		ENUMERATED (true, …)	

9.3.1.195 Source Node ID

This IE identifies the source SN for the handover.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE *Source Node ID*	M			
>Source E-UTRAN Node ID				
>>Source en-gNB ID	M		Global gNB ID 9.3.1.6	This IE is used for handover from EN-DC to SA. The source en-gNB ID is the identity of the source SN.

9.3.1.196 E-UTRAN Composite Available Capacity Group

This IE indicates the overall available resource level in the cell in downlink and uplink.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Composite Available Capacity Downlink	M		E-UTRAN Composite Available Capacity 9.3.1.197	For the downlink
Composite Available Capacity Uplink	M		E-UTRAN Composite Available Capacity 9.3.1.197	For the uplink

9.3.1.197 E-UTRAN Composite Available Capacity

This IE indicates the overall available resource level in the cell in either downlink or uplink.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
E-UTRAN Cell Capacity Class Value	O		9.3.1.198	
E-UTRAN Capacity Value	M		9.3.1.199	'0' indicates no resource is available, Measured on a linear scale.

9.3.1.198 E-UTRAN Cell Capacity Class Value

This IE indicates the value that classifies the cell capacity with regards to the other cells. This IE only indicates resources that are configured for traffic purposes.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Cell Capacity Class Value	M		INTEGER (1..100, ...)	Value 1 indicates the minimum cell capacity, and 100 indicates the maximum cell capacity. There should be a linear relation between cell capacity and Cell Capacity Class Value.

9.3.1.199 E-UTRAN Capacity Value

This IE indicates the amount of resources that are available relative to the total E-UTRAN resources. The capacity value should be measured and reported so that the minimum E-UTRAN resource usage of existing services is reserved according to implementation. This IE can be weighted according to the ratio of cell capacity class values, if available.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Capacity Value	M		INTEGER (0..100)	Value 0 indicates no available capacity, and 100 indicates maximum available capacity. Capacity Value should be measured on a linear scale.

9.3.1.200 E-UTRAN Radio Resource Status

This IE indicates the usage of the PRBs for all traffic in downlink and uplink (TS 36.314 [49], TS 23.203 [50]) and the usage of PDCCH CCEs for downlink and uplink scheduling.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
DL GBR PRB Usage	M		INTEGER (0..100)	
UL GBR PRB Usage	M		INTEGER (0..100)	
DL Non-GBR PRB Usage	M		INTEGER (0..100)	
UL Non-GBR PRB Usage	M		INTEGER (0..100)	
DL Total PRB Usage	M		INTEGER (0..100)	
UL Total PRB Usage	M		INTEGER (0..100)	
DL Scheduling PDCCH CCE Usage	O		INTEGER (0..100)	
UL Scheduling PDCCH CCE Usage	O		INTEGER (0..100)	

9.3.1.201 Void

9.3.1.202 Void

9.3.1.203 Void

9.3.1.204 Void

9.3.1.205 NR Radio Resource Status

This IE indicates the usage of the PRBs per cell for MIMO for all traffic in Downlink and Uplink.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
DL GBR PRB Usage for MIMO	M		INTEGER (0..100)	Per cell DL GBR PRB usage for MIMO in percentage of the cell total PRB number as defined in TS 38.314 [48].
UL GBR PRB Usage for MIMO	M		INTEGER (0..100)	Per cell UL GBR PRB usage for MIMO in percentage of the cell total PRB number as defined in TS 38.314 [48].
DL Non-GBR PRB Usage for MIMO	M		INTEGER (0..100)	Per cell DL Non-GBR PRB usage for MIMO in percentage of the cell total PRB number as defined in TS 38.314 [48].
UL Non-GBR PRB Usage for MIMO	M		INTEGER (0..100)	Per cell UL Non-GBR PRB usage for MIMO in percentage of the cell total PRB number as defined in TS 38.314 [48].
DL Total PRB Usage for MIMO	M		INTEGER (0..100)	Per cell DL Total PRB usage for MIMO in percentage of the cell total PRB number as defined in TS 38.314 [48].
UL Total PRB usage for MIMO	M		INTEGER (0..100)	Per cell UL Total PRB usage for MIMO in percentage of the cell total PRB number as defined in TS 38.314 [48].

9.3.1.206 MBS Session ID

This IE uniquely identifies an MBS session.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
TMGI	M		OCTET STRING (SIZE(6))	Encoded as defined in TS 23.003 [23].
NID	O		9.3.3.42	

9.3.1.207 MBS Area Session ID

This IE indicates the Area Session ID for MBS session with location dependent context.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MBS Area Session ID	M		INTEGER (0..65535, …)	

9.3.1.208 MBS Service Area

This IE contains the MBS service area.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE *Session Type*	M			
>location independent				
>>MBS Service Area Information	M		9.3.1.209	
>location dependent				
>>MBS Service Area Information List		*1*		
>>>MBS Service Area Information Item		*1..<maxnoofMBSServiceAreaInformation>*		
>>>>MBS Area Session ID	M		9.3.1.207	
>>>>MBS Service Area Information	M		9.3.1.209	

Range bound	Explanation
maxnoofMBSServiceAreaInformation	Maximum no. of MBS Service Area Information elements in the *MBS Service Area Information Location Dependent List* IE. Value is 256.

9.3.1.209 MBS Service Area Information

This IE contains MBS service area information.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
MBS Service Area Cell List		*0..<maxnoofCellsforMBS>*			-	
>NR CGI	M		9.3.1.7		-	
MBS Service Area TAI List		*0..<maxnoofTAIforMBS>*			-	
>TAI	M		9.3.3.11		-	
MBS Intended Service Area List		*0..<maxnoofIntendedAreasforMBS>*			YES	ignore
>Intended Service Area Coordinates	M		9.3.1.273		-	

Range bound	Explanation
maxnoofCellsforMBS	Maximum no. of cells allowed within one MBS Service Area. Value is 8192.
maxnoofTAIforMBS	Maximum no. of TAs allowed within one MBS Service Area. Value is 1024.
maxnoofIntendedAreasforMBS	Maximum no. of intended areas allowed within one MBS Service Area. Value is 65536.

9.3.1.210 MBS Support Indicator

This IE indicates whether MBS is supported for the NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MBS Support Indicator	M		ENUMERATED (multicast supported, …, multicast supported with reception in RRC inactive)	

9.3.1.211 MBS Session Setup Request List

This IE provides information related to MBS sessions joined by the UE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
MBS Session Setup Request List		*1*			-	
>MBS Session Setup Request Item		*1..<maxnoofMBSSessions>*			-	
>>MBS Session ID	M		9.3.1.206		-	
>>MBS Area Session ID	O		9.3.1.207		-	
>>Associated MBS QoS Flow Setup Request List		*0..1*			-	
>>>Associated MBS QoS Flow Setup Request Item		*1..<maxnoofMBSQoSflows>*			-	
>>>>MBS QoS Flow Identifier	M		QoS Flow Identifier 9.3.1.51		-	
>>>>Associated Unicast QoS Flow Identifier	M		QoS Flow Identifier 9.3.1.51		-	
>>MBS Assistance Information	O		9.3.1.263		YES	ignore

Range bound	Explanation
maxnoofMBSSessions	Maximum no. of MBS sessions allowed within one PDU session. Value is 32.
maxnoofMBSQoSflows	Maximum no. of MBS QoS flows allowed within one MBS session. Value is 64.

9.3.1.212 MBS Session Setup or Modify Request List

This IE provides information related to MBS sessions joined by the UE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
MBS Session Setup or Modify Request List		*1*			-	
>MBS Session Setup or Modify Request Item		*1..<maxnoofMBSSessions>*			-	
>>MBS Session ID	M		9.3.1.206		-	
>>MBS Area Session ID	O		9.3.1.207		-	
>>Associated MBS QoS Flow Setup or Modify Request List		*0..1*			-	
>>>Associated MBS QoS Flow Setup or Modify Request Item		*1..<maxnoofMBSQoSflows>*			-	
>>>>MBS QoS Flow Identifier	M		QoS Flow Identifier 9.3.1.51		-	
>>>>Associated Unicast QoS Flow Identifier	M		QoS Flow Identifier 9.3.1.51		-	
>>MBS QoS Flow To Release List	O		QoS Flow List with Cause 9.3.1.13	This IE indicates the MBS QoS Flow Identifiers of the MBS QoS Flows to be released.	-	
>>MBS Assistance Information	O		9.3.1.263		YES	ignore

Range bound	Explanation
maxnoofMBSSessions	Maximum no. of MBS sessions allowed within one PDU session. Value is 32.
maxnoofMBSQoSflows	Maximum no. of MBS QoS flows allowed within one MBS session. Value is 64.

9.3.1.213 MBS Session Setup Response List

This IE contains a list of information related to MBS sessions.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MBS Session Setup Response List		*1*		
>MBS Session Setup Response Item		*1..<maxnoofMBSSessions>*		
>>MBS Session ID	M		9.3.1.206	
>>MBS Area Session ID	O		9.3.1.207	

Range bound	Explanation
maxnoofMBSSessions	Maximum no. of MBS sessions allowed within one PDU session. Value is 32.

9.3.1.214 MBS Session Failed to Setup List

This IE contains a list of information related to MBS sessions.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MBS Session Failed to Setup List		*1*		
>MBS Session Failed to Setup Item		*1..<maxnoofMBSSessions>*		
>>MBS Session ID	M		9.3.1.206	
>>MBS Area Session ID	O		9.3.1.207	
>>Cause	M		9.3.1.2	

Range bound	Explanation
maxnoofMBSSessions	Maximum no. of MBS Sessions allowed within one PDU session. Value is 32.

9.3.1.215 MBS Session To Release List

This IE indicates MBS sessions to be removed.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MBS Session To Release List		*1*		
>MBS Session To Release Item		*1..<maxnoofMBSSessions>*		
>>MBS Session ID	M		9.3.1.206	
>>Cause	M		9.3.1.2	

Range bound	Explanation
maxnoofMBSSessions	Maximum no. of MBS sessions allowed within one PDU session. Value is 32.

9.3.1.216 Multicast Group Paging Area

This IE contains a list of TAIs corresponding to the multicast group paging area.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MBS Area TAI List		*1..<maxnoofTAIforPaging>*		
>TAI	M		9.3.3.11	

Range bound	Explanation
maxnoofTAIforPaging	Maximum no. of TAIs for multicast group paging. Value is 16.

9.3.1.217 MBS Session Status

This IE indicates whether the MBS session is activated or deactivated.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MBS Session Status	M		ENUMERATED (activated, deactivated, …)	

9.3.1.218 MRB ID

This IE contains the MRB ID as specified in TS 38.401 [2].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MRB ID	M		INTEGER (1..512, ...)	

9.3.1.219 MRB Progress Information

This IE contains the MRB progress information.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE *PDCP SN Status*	M			
>12bits				
>>PDCP SN Length 12	M		INTEGER (0..4095)	
>18bits				
>>PDCP SN Length 18	M		INTEGER (0..262143)	

9.3.1.220 Time Synchronisation Assistance Information

This IE indicates 5G access stratum time distribution parameters as defined in TS 23.501 [9].

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Time Distribution Indication	M		ENUMERATED (enabled, disabled, …)		-	
Uu Time Synchronisation Error Budget	C-ifEnabled		INTEGER (1..1000000, …)	Expressed in units of 1ns.	-	
Clock Quality Reporting Control Information	O		9.3.1.250		YES	ignore

Condition	Explanation
ifEnabled	This IE shall be present if the *Time Distribution Indication* IE is set to the value "enabled".

9.3.1.221 Survival Time

This IE indicates the Survival Time of the TSC QoS flow as defined in TS 23.501 [9].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Survival Time	M		INTEGER (0.. 1920000, …)	Survival time expressed in units of 1 us.

9.3.1.222 QMC Deactivation

This IE indicates the QMC configurations to be deactivated.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
QoE Reference List		*1..<maxnoofUE AppLayerMeas>*		
>QoE Reference	M		OCTET STRING (SIZE(6))	*QoE Reference*, as defined in clause 5.2 of TS 28.405 [45]. It consists of MCC+MNC+QMC ID, where the MCC and MNC are coming with the QMC activation request from the management system to identify one PLMN containing the management system, and QMC ID is a 3-bytes Octet String.

Range bound	Explanation
maxnoofUEAppLayerMeas	Maximum no. of UE application layer measurement. Value is 16.

9.3.1.223 QMC Configuration Information

This IE contains the configuration information for the QMC functionality.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
UE Application Layer Measurement Information List		*1*		
>UE Application Layer Measurement Information Item		*1..<maxnoofUE AppLayerMeas>*		
>>UE Application Layer Measurement Configuration Information	M		9.3.1.224	

Range bound	Explanation
maxnoofUEAppLayerMeas	Maximum no. of UE application layer measurements. Value is 16.

9.3.1.224 UE Application Layer Measurement Configuration Information

This IE defines configuration information for the QMC functionality.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
QoE Reference	M		OCTET STRING (SIZE(6))	*QoE Reference*, as defined in clause 5.2 of TS 28.405 [45]. It consists of MCC+MNC+QMC ID, where the MCC and MNC are received with the QMC activation request from the management system to identify one PLMN containing the management system, and QMC ID is a 3-byte Octet String.	-	
Service Type	M		ENUMERATED (QMC for DASH streaming, QMC for MTSI, QMC for VR, ...)	This IE indicates the service type of QoE measurements.	-	
CHOICE *Area Scope of QMC*	O				-	
>Cell based						
>>Cell ID List for QMC		*1..<maxnoofCellIDforQMC>*			-	
>>>NG-RAN CGI	M		9.3.1.73	This IE can indicate an NR CGI or an E-UTRA CGI.	-	
>TA based						
>>TA List for QMC		*1..<maxnoofTAforQMC>*			-	
>>>TAC	M		9.3.3.10	The TAI is derived using the current serving PLMN.	-	
>TAI based						
>>TAI List for QMC		*1..<maxnoofTAforQMC>*			-	
>>>TAI	M		9.3.3.11		-	
>PLMN area based						
>>PLMN List for QMC		*1..<maxnoofPLMNforQMC>*			-	
>>>PLMN Identity	M		9.3.3.5		-	
Measurement Collection Entity IP Address	M		Transport Layer Address 9.3.2.4	The IP address of the entity receiving the QoE measurement report.	-	
QoE Measurement Status	O		ENUMERATED (ongoing, …)	Indicates whether the QoE measurement has been started. Present in case of NG-based handover.	-	

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Container for Application Layer Measurement Configuration	O		OCTET STRING (SIZE(1.. 8000))	Contains application layer measurement configuration, see Annex L in 26.247 [46], clause 16.5 in TS 26.114 [51] and clause 9 in TS 26.118 [52]. Present in case of initial QoE configuration, and shall be included in *Source to Target Transparent Container* IE for signalling-based QMC during NG-based handover.	-	
Measurement Configuration Application Layer ID	O		INTEGER (0..15, …)	This IE is present only when the message containing it is NG-based handover related. The IE indicates the identity of the application layer measurement configuration and corresponds to the *MeasConfigAppLayerId* IE as defined in TS 38.331 [18].	-	
Slice Support List for QMC		*0..1*			-	
>Slice Support QMC Item		*1..<maxnoofSNSSAIforQMC>*			-	
>>S-NSSAI	M		9.3.1.24		-	
CHOICE *MDT Alignment Information*	O			Indicates the MDT measurements with which alignment is required.	-	
>S-based MDT						
>>NG-RAN Trace ID	M		OCTET STRING (SIZE(8))	This IE is composed of the following: Trace Reference defined in TS 32.422 [11] (leftmost 6 octets, with PLMN information encoded as in 9.3.3.5), and Trace Recording Session Reference defined in TS 32.422 [11] (last 2 octets).	-	

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Available RAN Visible QoE Metrics	O		9.3.1.225	Present in case of initial QoE configuration and in case of NG-based handover for signalling-based QoE measurement.	-	
Assistance Information for QoE Measurement	O		INTEGER (1..16, …)	This IE indicates the suggested priority of the application layer measurement configuration. Values are ordered in decreasing order of priority, i.e., with 1 as the highest priority and 16 as the lowest priority.	YES	ignore
Communication Service Type	O		ENUMERATED (MBS broadcast, MBS multicast, ..., unicast)	This IE indicates the type of communication service for which the QoE measurement collection should be performed.	YES	ignore
QoE and RVQoE Reporting Paths	O		9.3.1.272	This IE indicates the SRBs currently used for QoE and RVQoE reporting for the present QoE measurement configuration.	YES	ignore

Range bound	Explanation
maxnoofCellIDforQMC	Maximum no. of Cell ID subject for QMC scope. Value is 32.
maxnoofTAforQMC	Maximum no. of TA subject for QMC scope. Value is 8.
maxnoofPLMNforQMC	Maximum no. of PLMNs in the PLMN list for QMC scope. Value is 16.
maxnoofSNSSAIforQMC	Maximum no. of S-NSSAIs in the S-NSSAI list for QMC scope. Value is 16.

9.3.1.225 Available RAN Visible QoE Metrics

This IE defines which RAN visible QoE metrics can be configured by the NG-RAN in the RAN visible QoE measurement.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Application Layer Buffer Level List	O		ENUMERATED (true, ...)	The IE defines whether the Buffer Level can be collected as a RAN visible QoE metric by NG-RAN from UE, for DASH streaming and VR service types.
Playout Delay for Media Startup	O		ENUMERATED (true, ...)	The IE defines whether the Playout delay can be collected as a RAN visible QoE metric by NG-RAN from UE, for DASH streaming and VR service types.

9.3.1.226 Void

9.3.1.227 NR Paging eDRX Information

This IE indicates the NR Paging eDRX parameters as defined in TS 38.304 [12].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
NR Paging eDRX Cycle	M		ENUMERATED (hfquarter, hfhalf, hf1, hf2, hf4, hf8, hf16, hf32, hf64, hf128, hf256, hf512, hf1024, …)	$T_{eDRX\ CN}$ defined in TS 38.304 [12]. Unit: [number of hyperframes].
NR Paging Time Window	O		ENUMERATED (s1, s2, s3, s4, s5, s6, s7, s8, s9, s10, s11, s12, s13, s14, s15, s16, …, s17, s18, s19, s20, s21, s22, s23, s24, s25, s26, s27, s28, s29, s30, s31, s32)	PTW defined in TS 38.304 [12]. Unit: [1.28 seconds]

9.3.1.228 RedCap Indication

This IE is provided by the NG-RAN node to inform that the UE indicates Reduced Capability.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
RedCap Indication	M		ENUMERATED (RedCap, ...)	

9.3.1.229 Target NSSAI Information

This IE contains the Target NSSAI and Index to RAT/Frequency Selection Priority as specified in TS 23.501 [9].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Target NSSAI	M		9.3.1.230	
Index to RAT/Frequency Selection Priority	M		9.3.1.61	

9.3.1.230 Target NSSAI

This IE contains the Target NSSAI as specified in TS 23.501 [9].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Target S-NSSAI List		*1*		
>Target S-NSSAI Item		*1..<maxnoofTargetS-NSSAIs>*		
>>S-NSSAI	M		9.3.1.24	

Range bound	Explanation
maxnoofTargetS-NSSAIs	Maximum no. of Target S-NSSAIs. Value is 8.

9.3.1.231 UE Slice Maximum Bit Rate List

This IE contains the UE Slice Maximum Bit Rate List as specified in TS 23.501 [9].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
UE Slice Maximum Bit Rate Item		*1..<maxnoof AllowedS-NSSAIs>*		Applicable across all GBR and Non-GBR QoS flows.
>S-NSSAI	M		9.3.1.24	
>UE Slice Maximum Bit Rate Downlink	M		Bit Rate 9.3.1.4	This IE indicates the downlink UE-Slice-MBR as specified in TS 23.501 [9].
>UE Slice Maximum Bit Rate Uplink	M		Bit Rate 9.3.1.4	This IE indicates the uplink UE-Slice-MBR as specified in TS 23.501 [9].

Range bound	Explanation
maxnoofAllowedS-NSSAIs	Maximum no. of allowed S-NSSAI. Value is 8.

9.3.1.232 PEIPS Assistance Information

This IE provides the information related to CN paging subgrouping for a particular UE, as specified in TS 38.304 [12].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CN Subgroup ID	M		INTEGER (0..7, …)	

9.3.1.233 5G ProSe Authorized

This IE provides information on the authorization status of the UE to use the 5G ProSe services.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
5G ProSe Direct Discovery	O		ENUMERATED (authorized, not authorized, ...)	Indicates whether the UE is authorized for 5G ProSe Direct Discovery	-	
5G ProSe Direct Communication	O		ENUMERATED (authorized, not authorized, ...)	Indicates whether the UE is authorized for 5G ProSe Direct Communication	-	
5G ProSe Layer-2 UE-to-Network Relay	O		ENUMERATED (authorized, not authorized, ...)	Indicates whether the UE is authorized for 5G ProSe Layer-2 UE-to-Network Relay	-	
5G ProSe Layer-3 UE-to-Network Relay	O		ENUMERATED (authorized, not authorized, ...)	Indicates whether the UE is authorized for 5G ProSe Layer-3 UE-to-Network Relay	-	
5G ProSe Layer-2 Remote UE	O		ENUMERATED (authorized, not authorized, ...)	Indicates whether the UE is authorized for 5G ProSe Layer-2 Remote UE	-	
5G ProSe Layer-2 Multipath	O		ENUMERATED (authorized, not authorized, ...)	Indicates whether the 5G ProSe Layer-2 Remote UE is authorized for 5G ProSe multipath transmission	YES	ignore
5G ProSe Layer-2 UE-to-UE Relay	O		ENUMERATED (authorized, not authorized, ...)	Indicates whether the UE is authorized for 5G ProSe Layer-2 UE-to-UE Relay UE	YES	ignore
5G ProSe Layer-2 UE-to-UE Remote	O		ENUMERATED (authorized, not authorized, ...)	Indicates whether the UE is authorized for 5G ProSe Layer-2 UE-to-UE Remote UE.	YES	ignore
5G ProSe Layer-2 Multi-Hop UE-to-Network Relay	O		ENUMERATED (authorized, not authorized, ...)	Indicates whether the UE is authorized for 5G ProSe Layer-2 Multi-Hop UE-to-Network Relay.	YES	ignore
5G ProSe Layer-2 Multi-Hop Intermediate UE-to-Network Relay	O		ENUMERATED (authorized, not authorized, ...)	Indicates whether the UE is authorized for 5G ProSe Layer-2 Multi-Hop Intermediate UE-to-Network Relay.	YES	ignore
5G ProSe Layer-2 Multi-Hop Remote	O		ENUMERATED (authorized, not authorized, ...)	Indicates whether the UE is authorized for 5G ProSe Layer-2 Multi-Hop Remote.	YES	ignore
5G ProSe Layer-3 Multi-Hop UE-to-Network Relay	O		ENUMERATED (authorized, not authorized, ...)	Indicates whether the UE is authorized for 5G ProSe Layer-3 Multi-Hop UE-to-Network Relay.	YES	ignore

9.3.1.234 5G ProSe PC5 QoS Parameters

This IE provides information on the 5G ProSe PC5 QoS parameters of the UE's sidelink communication for 5G ProSe services.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
5G ProSe PC5 QoS Flow List		*1*		
>5G ProSe PC5 QoS Flow Item		*1..<maxnoofPC5QoSFlows>*		
>>PQI	M		INTEGER (0..255, …)	PQI is a special 5QI as specified in TS 23.501 [9].
>>5G ProSe PC5 Flow Bit Rates		*0..1*		Only applies for GBR QoS flows.
>>>Guaranteed Flow Bit Rate	M		Bit Rate 9.3.1.4	Guaranteed Bit Rate for the PC5 QoS flow. Details in TS 23.501 [9].
>>>Maximum Flow Bit Rate	M		Bit Rate 9.3.1.4	Maximum Bit Rate for the PC5 QoS flow. Details in TS 23.501 [9].
>>Range	O		ENUMERATED (m50, m80, m180, m200, m350, m400, m500, m700, m1000, …)	Only applies for groupcast.
5G ProSe PC5 Link Aggregate Bit Rates	O		Bit Rate 9.3.1.4	Only applies for Non-GBR QoS flows.

Range bound	Explanation
maxnoofPC5QoSFlows	Maximum no. of PC5 QoS flows allowed towards one UE. Value is 2048.

9.3.1.235 Last Visited PSCell Information

The Last Visited PSCell Information may contain cell specific information.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
PSCell ID	O		NG-RAN CGI 9.3.1.73	This IE is present when the SCG resources are configured for the UE.	-	
Time Stay	M		INTEGER (0..40950)	The duration of the time the UE stayed in the cell in 1/10 seconds. If the UE stays in a cell more than 4095s, this IE is set to 40950. Or the duration of the time when no SCG resources are configured for the UE.	-	
SCG Activation Time	O		INTEGER (0..40950)	The total duration of the time the UE stayed in the cell while the SCG was activated, in 1/10 seconds. If the duration is more than 4095s, this IE is set to 40950.	YES	ignore

9.3.1.236 MBS QoS Flows To Be Setup List

This IE contains a list of QoS flows and their associated QoS parameters.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MBS QoS Flows Setup Request Item		*1..<maxnoofMBSQoSFlows>*		
>MBS QoS Flow Identifier	M		QoS Flow Identifier 9.3.1.51	
>MBS QoS Flow Level QoS Parameters	M		QoS Flow Level QoS Parameters 9.3.1.12	

Range bound	Explanation
maxnoofMBSQoSflows	Maximum no. of MBS QoS flows allowed within one MBS session. Value is 64.

9.3.1.237 Reporting System

This IE lists the cells on the reporting system.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE *Reporting System*				
>E-UTRAN				
>>E-UTRAN Cell To Report List		*1*		
>>>E-UTRAN Cell To Report Item		*1..<maxnoofReportedCells>*		
>>>>Cell ID	M		E-UTRA CGI 9.3.1.9	
>NG-RAN				
>>NG-RAN Cell To Report List		*1*		
>>>NG-RAN Cell To Report Item		*1..<maxnoofReportedCells>*		
>>>>Cell ID	M		NG-RAN CGI 9.3.1.73	
>No Reporting			NULL	Resource status not available. Applicable to the *Inter-system Resource Status Reply* IE.

Range bound	Explanation
maxnoofReportedCells	Maximum no. of cells that can be reported. Value is 256.

9.3.1.238 TAI NSAG Support List

This IE contains the slice group mapping for all groups configured at the NG-RAN node per TAI.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
TAI NSAG Support Item		*1..<maxnoofNSAGs>*		
>NSAG ID	M		INTEGER (0..255, …)	
>NSAG Slice Support List	M		Extended Slice Support List 9.3.1.191	Indicates the list of slices which belong to the NSAG.

Range bound	Explanation
maxnoofNSAGs	Maximum no. of Slice Groups for the TAI. Value is 256.

9.3.1.239 NGAP Protocol IE-Id

This IE uniquely identifies an NGAP Protocol IE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
NGAP Protocol IE-Id	M		INTEGER (0..65535)	

9.3.1.240 NGAP Protocol IE Support Information

This IE provides information about support of functions associated to an NGAP Protocol IE-Id.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
NGAP Protocol IE Support Information	M		ENUMERATED (supported, not-supported, ...)	

9.3.1.241 NGAP Protocol IE Presence Information

This IE provides information on whether an NGAP Protocol IE-Id was received within the message requesting the information (i.e. HANDOVER REQUEST).

IE/Group Name	Presence	Range	IE type and reference	Semantics description
NGAP Protocol IE Presence Information	M		ENUMERATED (present, not present)	

9.3.1.242 NGAP IE Support Information Response List

This IE provides information about support of functions associated to a list of NGAP Protocol IE-Ids.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
NGAP IE Support Information Response Item		*1..<maxnoofIE SupportInfo>*		
>NGAP Protocol IE-Id	M		9.3.1.239	
>NGAP Protocol IE Support Information	M		9.3.1.240	
>NGAP Protocol IE Presence Information	M		9.3.1.241	

Range bound	Explanation
maxnoofIESupportInfo	Maximum no. of IE Support Information. Value is 32.

9.3.1.243 MDT PLMN Modification List

This IE provides the modified list of PLMN allowed for MDT.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MDT PLMN Modification List		*0..<maxnoofM DTPLMNs>*		An empty list indicates there is no PLMN allowed for MDT.
>PLMN Identity	M		9.3.3.5	

Range bound	Explanation
maxnoofMDTPLMNs	Maximum no. of PLMNs in the MDT PLMN list. Value is 16.

9.3.1.244 Excess Packet Delay Threshold Configuration

This IE defines the parameters for Excess Packet Delay Threshold configuration to support the calculation of the PDCP Excess Packet Delay in the UL per DRB as specified in TS 38.314 [48].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Excess Packet Delay Threshold Item		*1..<maxnoofThresholdsForExcessPacketDelay>*		
>5QI	M		INTEGER (0..255, …)	Indicates the standardized or pre-configured 5QI as specified in TS 23.501 [9].
>Excess Packet Delay Threshold Value	M		ENUMERATED (ms0.25, ms0.5, ms1, ms2, ms4, ms5, ms10, ms20, ms30, ms40, ms50, ms60, ms70, ms80, ms90, ms100, ms150, ms300, ms500, ...)	

Range bound	Explanation
maxnoofThresholdsForExcessPacketDelay	Maximum no. of thresholds for Excess Packet Delay configuration. Value is 255.

9.3.1.245 Network Controlled Repeater Authorized

This IE provides the authorization status of the UE to act as a Network Controlled Repeater.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Network Controlled Repeater Authorized	M		ENUMERATED (authorized, not authorized, ...)	Indicates whether the UE is authorized as Network Controlled Repeater

9.3.1.246 Aerial UE Subscription Information

This IE is used by the NG-RAN node to know if the UE is allowed to use aerial function, refer to TS 23.501 [9].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Aerial UE Subscription Information	M		ENUMERATED (allowed, not allowed,…)	

9.3.1.247 NR A2X Services Authorized

This IE provides information on the authorization status of the UE to use the NR sidelink for A2X services.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Aerial UE	O		ENUMERATED (authorized, not authorized, ...)	Indicates whether the UE is authorized as Aerial UE
Aerial Controller UE	O		ENUMERATED (authorized, not authorized, ...)	Indicates whether the UE is authorized as Aerial Controller UE

9.3.1.248 LTE A2X Services Authorized

This IE provides information on the authorization status of the UE to use the LTE sidelink for A2X services.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Aerial UE	O		ENUMERATED (authorized, not authorized, ...)	Indicates whether the UE is authorized as Aerial UE
Aerial Controller UE	O		ENUMERATED (authorized, not authorized, ...)	Indicates whether the UE is authorized as Aerial Controller UE

9.3.1.249 A2X PC5 QoS Parameters

This IE provides information on the PC5 QoS parameters of the UE's sidelink communication for A2X.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
A2X PC5 QoS Flow List		*1*		
>A2X PC5 QoS Flow Item		*1..<maxnoofPC5QoSFlows>*		
>>A2X PQI	M		INTEGER (0..255, …)	PQI is a special 5QI as specified in TS 23.501 [9].
>>A2X PC5 Flow Bit Rates		*0..1*		Only applies for GBR QoS Flows.
>>>A2X Guaranteed Flow Bit Rate	M		Bit Rate 9.3.1.4	Guaranteed Bit Rate for the PC5 QoS flow. Details in TS 23.501 [9].
>>>A2X Maximum Flow Bit Rate	M		Bit Rate 9.3.1.4	Maximum Bit Rate for the PC5 QoS flow. Details in TS 23.501 [9].
>>A2X Range	O		ENUMERATED (m50, m80, m180, m200, m350, m400, m500, m700, m1000, …)	Only applies for groupcast.
A2X PC5 Link Aggregate Bit Rates	O		Bit Rate 9.3.1.4	Only applies for non-GBR QoS Flows.

Range bound	Explanation
maxnoofPC5QoSFlows	Maximum no. of PC5 QoS flows allowed towards one UE. Value is 2048.

9.3.1.250 Clock Quality Reporting Control Information

This IE indicates the clock quality reporting control information as defined in TS 23.501 [9].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE *Clock Quality Detail Level*	M			
>clock quality metrics			NULL	
>clock quality acceptance indication				
>>Clock Quality Acceptance Criteria	M		9.3.1.251	

9.3.1.251 Clock Quality Acceptance Criteria

This IE indicates the clock quality acceptance criteria as defined in TS 23.501 [9].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Synchronisation State	O		BIT STRING { locked (0), holdover (1), freeRun (2) } (SIZE (8, …))	Each position in the bitmap represents a synchronisation state. If a bit is set to "1", the respective synchronisation state is acceptable. If a bit is set to "0", the respective synchronisation state is not acceptable. Bits 3-7 reserved for future use.
Traceable to UTC	O		ENUMERATED (true, …)	
Traceable to GNSS	O		ENUMERATED (true, …)	
Clock Frequency Stability	O		BIT STRING (SIZE (16))	Indicates the offsetScaledLogVariance as specified in TS 23.501 [9].
Clock Accuracy	O		INTEGER (1..40000000, …)	Clock accuracy expressed in units of 25 ns.
Parent Time Source	O		BIT STRING { syncE (0), pTP (1), gNSS (2), atomicClock (3), terrestrialRadio (4), serialTimeCode (5), nTP (6), handset (7), other (8) } (SIZE (16, …))	Each position in the bitmap represents a parent time source. If a bit is set to "1", the respective parent time source is acceptable. If a bit is set to "0", the respective parent time source is not acceptable. Bits 9-15 reserved for future use.

9.3.1.252 RAN Timing Synchronisation Status Information

This IE indicates the RAN timing synchronisation status information provided towards the AMF as defined in TS 23.501 [9].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Synchronisation State	O		ENUMERATED (locked, holdover, freeRun, …)	
Traceable to UTC	O		ENUMERATED (true, false, …)	
Traceable to GNSS	O		ENUMERATED (true, false, …)	
Clock Frequency Stability	O		BIT STRING (SIZE (16))	Indicates the offsetScaledLogVariance as specified in TS 23.501 [9].
Clock Accuracy	O		9.3.1.253	
Parent Time Source	O		ENUMERATED (syncE, pTP, gNSS, atomicClock, terrestrialRadio, serialTimeCode, nTP, handSet, other, …)	

9.3.1.253 Clock Accuracy

This IE indicates the clock accuracy as defined in TS 23.501 [9].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE *Clock Accuracy*	M			
>*Value*				
>>Clock Accuracy Value	M		INTEGER (1.. 40000000, …)	Indicates the absolute clock accuracy value. Unit in 25ns.
>*Index*				
>>Clock Accuracy Index	M		INTEGER (32..47, ...)	Indicates the clockAccuracy enumeration value specified in Table 5 of clause 7.6.2.6 of IEEE Std 1588 [55].

9.3.1.254 RAN TSS Scope

This IE indicates the scope of the RAN timing synchronisation status as defined in TS 23.501 [9].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE *RAN TSS scope*	M			
>*RAN node level*				
>>Global gNB ID	M		9.3.1.6	
>*cell list level*				
>>RAN TSS Cell List		*1*		
>>>RAN TSS Cell Item		*1..<maxnoofCellsTSS>*		
>>>>NR CGI	M		9.3.1.7	

Range bound	Explanation
maxnoofCellsTSS	Maximum no. of Cell IDs in the scope of the RAN timing synchronisation status. Value is 16384.

9.3.1.255 Burst Arrival Time Window

This IE indicates the burst arrival time window of the TSC QoS flow as defined in TS 23.501 [9].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Burst Arrival Time Window Start	M		INTEGER (0..640000, …)	Start of the burst arrival time window calculated with reference to the *Burst Arrival Time* IE, expressed in units of 1 us. Integer values are negative.
Burst Arrival Time Window End	M		INTEGER (0..640000, …)	End of the burst arrival time window calculated with reference to the *Burst Arrival Time* IE, expressed in units of 1 us. Integer values are positive.

9.3.1.256 Periodicity Range

This IE indicates the periodicity range for the TSC QoS flow as defined in TS 23.501 [9].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE *Periodicity Range*	M			
>*Periodicity Bound*				
>>Periodicity Lower Bound	M		Periodicity 9.3.1.132	
>>Periodicity Upper Bound	M		Periodicity 9.3.1.132	
>*Periodicity List*				
>>**Allowed Periodicity List**		*1..<maxnoofPeriodicities>*		
>>>Allowed Periodicity	M		Periodicity 9.3.1.132	

Range bound	Explanation
maxnoofPeriodicities	Maximum no. of allowed periodicities. Value is 8.

9.3.1.257 TSC Traffic Characteristics Feedback

This IE provides the TSC traffic characteristics feedback of a TSC QoS flow (see TS 23.501 [9].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
TSC Feedback Information Downlink	O		TSC Feedback Information 9.3.1.258	
TSC Feedback Information Uplink	O		TSC Feedback Information 9.3.1.258	

9.3.1.258 TSC Feedback Information

This IE provides the TSC feedback information for a TSC QoS flow in the uplink or downlink (see TS 23.501 [9]).

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Burst Arrival Time Offset	M		INTEGER (-640000..640000, …)	Burst arrival time offset expressed in units of 1 us.
Adjusted Periodicity	O		Periodicity 9.3.1.132	Not applicable to reactive RAN feedback.

9.3.1.259 Mobile IAB Authorized

This IE provides information about the authorization status of the mobile IAB-node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Mobile IAB Authorized	M		ENUMERATED (authorized, not authorized, ...)	Indicates the mobile IAB-node authorization status.

9.3.1.260 Mobile IAB-MT User Location Information

This IE contains the NR CGI and the TAI for the co-located mobile IAB-MT of the mobile IAB-DU which serves the UE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
NR CGI	M		9.3.1.7	The NR CGI of the cell, which is the serving cell of the mobile IAB-MT co-located with the mobile IAB-DU that serves the UE.
TAI	M		9.3.3.11	The TAI supported by the cell, which is the serving cell of the mobile IAB-MT co-located with the mobile IAB-DU which serves the UE.

9.3.1.261 Partially Allowed NSSAI

This IE contains a list of S-NSSAI(s) partially permitted by the network for the UE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Partially Allowed S-NSSAI Item		*1..<maxnoofAllowedS-NSSAIs>*		
>S-NSSAI	M		9.3.1.24	

Range bound	Explanation
maxnoofPartiallyAllowedS-NSSAIs	Maximum no. of partially allowed S-NSSAI. Value is 8.

9.3.1.262 Associated Session ID

This IE is used to associate MBS Session IDs providing identical user data.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Associated Session ID	M		OCTET STRING	Coded as the *AssociatedSessionId* IE defined in TS 29.571 [35]. The gNB does not interpret the content of the *Associated Session ID* IE.

9.3.1.263 MBS Assistance Information

This IE provides MBS Assistance Information as specified in TS 38.300 [8] and TS 23.247 [44].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MBS Assistance Information	M		ENUMERATED (true, ...)	

9.3.1.264 PDU Set QoS Information

This IE defines the PDU Set QoS Information to be applied to a QoS flow.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PDU Set Packet Delay Budget	O		Extended Packet Delay Budget 9.3.1.135	PDU Set Delay Budget as specified in TS 23.501 [9].
PDU Set Error Rate	O		Packet Error Rate 9.3.1.81	PDU Set Error Rate as specified in TS 23.501 [9].
PDU Set Integrated Handling Information	O		ENUMERATED (true, false, …)	PDU Set Integrated Handling Information as specified in TS 23.501 [9].

9.3.1.265 N6 Jitter Information

This IE indicates the N6 jitter information associated with the Periodicity in downlink.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
N6 Jitter Lower Bound	M		INTEGER (-127.. 127)	Indicates the lower bound of the N6 jitter. The unit is: 0.5ms.
N6 Jitter Upper Bound	M		INTEGER (-127.. 127)	Indicates the upper bound of the N6 jitter. The unit is: 0.5ms.

9.3.1.266 ECN Marking or Congestion Information Reporting Request

This IE indicates to the NG-RAN node to perform ECN marking or to report information for ECN marking or to report congestion information for a QoS Flow.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE *ECN Marking or Congestion Information Request*	M			
>ECN Marking at RAN				
>>ECN Marking at NG-RAN Request	M		ENUMERATED (ul, dl, both, stop, …)	
>ECN Marking at UPF				
>>ECN Marking at UPF Request	M		ENUMERATED (ul, dl, both, stop, …)	
>Congestion Information				
>>Congestion Information Request	M		ENUMERATED (ul, dl, both, stop, …)	

9.3.1.267 ECN Marking or Congestion Information Reporting Status

This IE contains a list of QoS flows with activation status information for NG-RAN node to perform ECN marking or to report information for ECN marking or to report congestion information reporting.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
ECN Marking or Congestion Information Reporting Status Item		*1..<maxnoofQoSFlows >*		
>QoS Flow Identifier	M		9.3.1.51	
>Activation Status	M		ENUMERATED (active, not Active, …)	Indicates whether ECN marking at NG-RAN or reporting information for ECN marking at UPF or congestion information reporting is active or not active.

Range bound	Explanation
maxnoofQoSFlows	Maximum no. of QoS flows allowed within one PDU session. Value is 64.

9.3.1.268 PDU Set based Handling Indicator

This IE indicates whether PDU Set based Handling is supported for the NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PDU Set based Handling Indicator	M		ENUMERATED (supported, …)	

9.3.1.269 Ranging and Sidelink Positioning Service Information

This IE provides information on the UE for Ranging and Sidelink Positioning service.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Ranging and Sidelink Positioning Authorized	M		ENUMERATED (authorized, not authorized, ...)	This IE indicates whether the UE is authorized to use RSPP communication resources and SL-PRS resources.
RSPP Transport QoS Parameters	O		9.3.1.270	This IE applies only if the UE is authorized for Ranging and Sidelink Positioning service.

9.3.1.270 RSPP Transport QoS Parameters

This IE provides information on the RSPP transport QoS parameters.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
RSPP Transport QoS Flow List		*1*		
>RSPP Transport QoS Flow Item		*1..<maxnoofRSPPQoSFlows>*		
>>PQI	M		INTEGER (0..255, …)	PQI is a special 5QI as specified in TS 23.501 [9].
>>RSPP Transport Bit Rates		*0..1*		Only applies for GBR QoS flows.
>>>Guaranteed Flow Bit Rate	M		Bit Rate 9.3.1.4	Guaranteed Bit Rate for the RSPP QoS flow. Details in TS 23.501 [9].
>>>Maximum Flow Bit Rate	M		Bit Rate 9.3.1.4	Maximum Bit Rate for the RSPP QoS flow. Details in TS 23.501 [9].
>>Range	O		ENUMERATED (m50, m80, m180, m200, m350, m400, m500, m700, m1000, …)	Only applies for groupcast.
RSPP Transport Link Aggregate Bit Rates	O		Bit Rate 9.3.1.4	Only applies for Non-GBR QoS flows.

Range bound	Explanation
maxnoofRSPPQoSFlows	Maximum no. of RSPP QoS flows allowed towards one UE. Value is 2048.

9.3.1.271 User Plane Failure Indication

This IE is used to notify the NG-RAN node that a user plane failure occurred over NG-U interface.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
User Plane Failure Type	M		ENUMERATED (GTP-U Error Indication Received, UP Path Failure, …)	Indicates the type of NG-U failure.
UL NG-U UP TNL Information	M		UP Transport Layer Information 9.3.2.2	Identifies the NG-U transport bearer at the UPF for which the failure occurred.
DL NG-U UP TNL Information	M		UP Transport Layer Information 9.3.2.2	Identifies the NG-U transport bearer at the NG-RAN node for which the failure occurred.

9.3.1.272 QoE and RVQoE Reporting Paths

This IE indicates the SRB currently used for receiving the QoE reports and RAN visible QoE reports.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
QoE Reporting Path	O		ENUMERATED (srb4, srb5, …)	This IE indicates the SRB currently used for receiving the QoE reports.
RVQoE Reporting Path	O		ENUMERATED (srb4, srb5, …)	This IE indicates the SRB currently used for receiving the RAN Visible QoE reports.

9.3.1.273 Intended Service Area Coordinates

This IE provides information on the Intended Service Area Coordinates for MBS Broadcast Service.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Intended Service Area Coordinates	M		OCTET STRING	Includes the *areaCoordinates* contained in the *IntendedServiceAreaInfo* IE as defined in TS 38.331 [18]

9.3.1.274 GW Context Release Indication

This information element is set by the gNB to provide an indication that the AMF may release any resources related to the signalled NG UE context (see TS 38.300 [8]).

IE/Group Name	Presence	Range	IE type and reference	Semantics description
GW Context Release Indication	M		ENUMERATED (true, …)	

9.3.1.275 Requested NSSAI

This IE indicates the S-NSSAIs requested by the UE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Requested NSSAI Item		*1..<maxnoofRequestedS-NSSAIs>*		
>S-NSSAI	M		9.3.1.24	

Range bound	Explanation
maxnoofRequestedS-NSSAIs	Maximum no. of S-NSSAIs requested by the UE. Value is 8.

9.3.1.276 Reader Index

This IE represents identifier of a Reader within a gNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Reader Index	M		INTEGER (1..65535, …)	

9.3.1.277 A-IoT Area ID

This IE is used to uniquely identify an A-IoT Area.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PLMN Identity	M		9.3.3.5	
NID	O		9.3.3.42	
A-IoT Area Code	M		OCTET STRING (SIZE(3))	

9.3.1.278 A-IoT Support

This IE indicates the support of A-IoT.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
A-IoT Support	M		ENUMERATED (A-IoT only, A-IoT and NR Uu, ...)	

9.3.1.279 LP-WUSPS Assistance Information

This IE provides the information related to LP-WUS paging subgrouping for a particular UE, as specified in TS 38.304 [12].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
LP-WUS CN Subgroup ID	M		INTEGER (0..30, …)	

9.3.1.280 Additional ULI

This IE contains the NR CGI and the TAI that reflect the location information of the WAB-node which serves the UE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
NR CGI	M		9.3.1.7	
TAI	M		9.3.3.11	

9.3.1.281 Available Bitrate Report Threshold List

This IE contains a list of available bitrate report thresholds. It is used for available bitrate report for UL and DL as specified in TS 23.501 [9].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Available Bitrate Report Threshold Item		*1..<maxnoofThresholds>*		
>Reporting Threshold	M		INTEGER (0.. 4,000,000,000, …)	This IE indicates the Reporting threshold as specified in TS 23.501 [9]. The unit is Kbps.

Range bound	Explanation
maxnoofThresholds	Maximum no. of thresholds allowed to be provided by the SMF. Value is 8.

9.3.1.282 Aerial UE Flight information Reporting

This IE contains the aerial UE altitude reporting information.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Altitude	M		9.3.1.284	
Time Stamp	M		9.3.1.75	Indicates the UTC time when the aerial UE flight information is received.

9.3.1.283 Aerial UE Flight Information Reporting Control

This IE indicates Aerial UE flight information reporting information.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Higher Altitude Threshold	M		Altitude 9.3.1.284	Indicates the higher altitude threshold information for the Aerial UE reporting.
Lower Altitude Threshold	M		Altitude 9.3.1.284	Indicates the lower altitude threshold information for the Aerial UE reporting.
Aerial UE Reporting Periodicity	O		ENUMERATED {ms120, ms240, ms480, ms640, ms1024, ms2048, ms5120, ms10240, ms20480, ms40960, min1, min6, min12, min30, …}	Indicates the periodicity of the Aerial UE reporting.
CHOICE *Area ID*	M			
>TAI				
>>TAI	M		9.3.3.11	
>RAN Node				
>>Global RAN Node ID	M		9.3.1.5	
>NG-RAN CGI				
>>NG-RAN CGI	M		9.3.1.73	

9.3.1.284 Altitude

This IE contains Altitude information.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Altitude	M		INTEGER (-420..10000, ...)	Aerial UE altitude information as specified in TS 38.331[18]. The unit of this IE is meter

9.3.2 Transport Network Layer Related IEs

9.3.2.1 QoS Flow per TNL Information List

This IE is used to provide a list of additional UP transport layer information for a split PDU session, along with the associated QoS flows.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
QoS Flow per TNL Information Item		*1..<maxnoofMultiConnectivityMinusOne>*		
>QoS Flow per TNL Information	M		9.3.2.8	

Range bound	Explanation
maxnoofMultiConnectivityMinusOne	Maximum no. of connectivity allowed for a UE minus one. Value is 3. The current version of the specification supports 1.

9.3.2.2 UP Transport Layer Information

This IE is used to provide the NG UP transport layer information associated with a PDU session for an NG-RAN node – UPF pair. In this release it corresponds to an IP address and a GTP Tunnel Endpoint Identifier.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE *UP Transport Layer Information*	M			
>GTP tunnel				
>>Endpoint IP Address	M		Transport Layer Address 9.3.2.4	
>>GTP-TEID	M		9.3.2.5	

9.3.2.3 E-RAB ID

This IE is the identifier of the LTE E-RAB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
E-RAB ID	M		INTEGER (0..15, …)	

9.3.2.4 Transport Layer Address

This IE is an IP address.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Transport Layer Address	M		BIT STRING (SIZE(1..160, …))	The Radio Network Layer is not supposed to interpret the address information. It should pass it to the Transport Layer for interpretation. For details, see TS 38.414 [14].

9.3.2.5 GTP-TEID

This IE is the GTP Tunnel Endpoint Identifier to be used for the user plane transport between the NG-RAN node and the UPF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
GTP-TEID	M		OCTET STRING (SIZE(4))	For details and range, see TS 29.281 [15].

9.3.2.6 CP Transport Layer Information

This IE is used to provide the NG control plane transport layer information associated with an NG-RAN node – AMF pair.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
CHOICE *CP Transport Layer Information*	M				-	
>Endpoint-IP-address						
>>Endpoint IP Address	M		Transport Layer Address 9.3.2.4		-	
>Endpoint-IP-address-and-port					YES	reject
>>Endpoint IP Address	M		Transport Layer Address 9.3.2.4		-	
>>Port Number	M		OCTET STRING (SIZE(2))		-	

9.3.2.7 TNL Association List

This IE contains a list of TNL associations. It is used for example to indicate failed TNL association(s).

IE/Group Name	Presence	Range	IE type and reference	Semantics description
TNL Association Item		*1..<maxnoofTNLAssociations>*		
>TNL Association Address	M		CP Transport Layer Information 9.3.2.6	
>Cause	M		9.3.1.2	

Range bound	Explanation
maxnoofTNLAssociations	Maximum no. of TNL Associations between the NG-RAN node and the AMF. Value is 32.

9.3.2.8 QoS Flow per TNL Information

This IE indicates the NG-U transport layer information and associated list of QoS flows.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
UP Transport Layer Information	M		9.3.2.2	
Associated QoS Flow List	M		9.3.1.99	

9.3.2.9 TNL Association Usage

This IE indicates the usage of the TNL association.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
TNL Association Usage	M		ENUMERATED (ue, non-ue, both, …)	Indicates whether the TNL association is only used for UE-associated signalling, or non-UE-associated signalling, or both.

9.3.2.10 TNL Address Weight Factor

This IE indicates the weight factor of the TNL address.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
TNL Address Weight Factor	M		INTEGER (0..255)	Value 0 indicates the TNL address is not permitted for the initial NGAP message. If the value for each TNL address is the same, it indicates the deployments that rely solely on 5GC-based load balancing.

9.3.2.11 UP Transport Layer Information Pair List

This IE is used to provide a list of uplink UP transport layer information and associated downlink UP transport layer information for a split PDU session.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
UP Transport Layer Information Pair Item		*1..<maxnoofMultiConnectivityMinusOne>*		
>UL NG-U UP TNL Information	M		UP Transport Layer Information 9.3.2.2	
>DL NG-U UP TNL Information	M		UP Transport Layer Information 9.3.2.2	

Range bound	Explanation
maxnoofMultiConnectivityMinusOne	Maximum no. of connectivity allowed for a UE minus one. Value is 3. The current version of the specification supports 1.

9.3.2.12 UP Transport Layer Information List

This IE is used to provide a list of additional UP transport layer information for a split PDU session.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
UP Transport Layer Information Item		*1..<maxnoofMultiConnectivityMinusOne>*			-	
>NG-U UP TNL Information	M		UP Transport Layer Information 9.3.2.2		-	
>Common Network Instance	O		9.3.1.120		YES	ignore

Range bound	Explanation
maxnoofMultiConnectivityMinusOne	Maximum no. of connectivity allowed for a UE minus one. Value is 3. The current version of the specification supports 1.

9.3.2.13 QoS Flow List with Data Forwarding

This IE is used to provide a list of QoS flows with indication if forwarding is accepted.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
QoS Flow Item with Data Forwarding		*1..<maxnoofQoSFlows>*			-	
>QoS Flow Identifier	M		9.3.1.51		-	
>Data Forwarding Accepted	O		9.3.1.62	This IE is included for the QoS flows in the PDU session to be forwarded over the PDU session forwarding tunnel. It may be included for the QoS flows in the PDU session to be forwarded over the DRB forwarding tunnel(s).	-	
>Current QoS Parameters Set Index	O		Alternative QoS Parameters Set Index 9.3.1.152	Index to the currently fulfilled alternative QoS parameters set	YES	ignore

Range bound	Explanation
maxnoofQoSFlows	Maximum no. of QoS flows allowed within one PDU session. Value is 64.

9.3.2.14 URI

This IE is an URI.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
URI	M		VisibleString	String representing URI (Uniform Resource Identifier)

9.3.2.15 MBS Session TNL Information 5GC

This IE provides 5GC TNL information for location dependent and location independent MBS sessions.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE *Session Type*	M			
>location independent				
>>Shared NG-U Multicast TNL Information	M		9.3.2.16	
>location dependent				
>>MBS Session TNL Information 5GC List		*1*		
>>>MBS Session TNL Information 5GC Item		*1..<maxnoofMBSServiceAreaInformation>*		
>>>>MBS Area Session ID	M		9.3.1.207	
>>>>Shared NG-U Multicast TNL Information	M		9.3.2.16	

Range bound	Explanation
maxnoofMBSServiceAreaInformation	Maximum no. of MBS Service Area Information. Value is 256.

9.3.2.16 Shared NG-U Multicast TNL Information

This IE provides the shared NG UP transport layer information associated with an MBS session at the 5GC.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
IP Multicast Address	M		Transport Layer Address 9.3.2.4	
IP Source Address	M		Transport Layer Address 9.3.2.4	
GTP-TEID at 5GC	M		GTP-TEID 9.3.2.5	

9.3.2.17 MBS Session TNL Information NG-RAN

This IE provides NG-RAN TNL information for location dependent and location independent broadcast MBS sessions.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE *Session Type*	M			
>location independent				
>>Shared NG-U Unicast TNL Information	M		UP Transport Layer Information 9.3.2.2	
>location dependent				
>>MBS Session TNL Information NG-RAN List		*1*		
>>>MBS Session TNL Information NG-RAN Item		*1..<maxnoofMBSServiceAreaInformation>*		
>>>>MBS Area Session ID	M		9.3.1.207	
>>>>Shared NG-U Unicast TNL Information	O		UP Transport Layer Information 9.3.2.2	

Range bound	Explanation
maxnoofMBSServiceAreaInformation	Maximum no. of MBS Service Area Information. Value is 256.

9.3.2.18 MBS NG-U Failure Indication

This IE provides information that the 5GC has detected an NG-U failure.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE *Session Type*	M			
>location independent				
>>MBS User Plane Failure Indication	M		9.3.2.19	
>location dependent				
>>MBS UP Failure Indication List		*1*		
>>>MBS UP Failure Indication Item		*1..<maxnoofMBSServiceAreaInformation>*		
>>>>MBS Area Session ID	M		9.3.1.207	
>>>>MBS User Plane Failure Indication	M		9.3.2.19	

Range bound	Explanation
maxnoofMBSServiceAreaInformation	Maximum no. of MBS Service Area Information. Value is 256.

9.3.2.19 MBS User Plane Failure Indication

This IE provides information that the 5GC has detected an NG-U failure for MBS session.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MBS User Plane Failure Indication	M		ENUMERATED (NG-U path failure detected, …)	

9.3.3 NAS Related IEs

9.3.3.1 AMF UE NGAP ID

This IE uniquely identifies the UE association over the NG interface, as described in TS 38.401 [2].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
AMF UE NGAP ID	M		INTEGER (0..2^{40} -1)	

9.3.3.2 RAN UE NGAP ID

This IE uniquely identifies the UE association over the NG interface within the NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
RAN UE NGAP ID	M		INTEGER (0..2^{32} -1)	

9.3.3.3 GUAMI

This IE indicates the AMF identity.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PLMN Identity	M		9.3.3.5	
AMF Region ID	M		BIT STRING (SIZE(8))	
AMF Set ID	M		9.3.3.12	
AMF Pointer	M		9.3.3.19	

9.3.3.4 NAS-PDU

This IE contains a 5GC – UE or UE – 5GC message that is transferred without interpretation in the NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
NAS-PDU	M		OCTET STRING	The content is defined in TS 24.501 [26].

9.3.3.5 PLMN Identity

This IE indicates the PLMN Identity.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PLMN Identity	M		OCTET STRING (SIZE(3))	Digits 0 to 9 encoded 0000 to 1001, 1111 used as filler digit. Two digits per octet: - bits 4 to 1 of octet n encoding digit 2n-1 - bits 8 to 5 of octet n encoding digit 2n PLMN Identity consists of 3 digits from MCC followed by either: - a filler digit plus 2 digits from MNC (in case of 2 digit MNC) or - 3 digits from MNC (in case of 3 digit MNC).

9.3.3.6 SON Configuration Transfer

This IE contains the configuration information, used by e.g., SON functionality, and additionally includes the NG-RAN node identifier of the destination of this configuration information and the NG-RAN node identifier of the source of this information.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Target RAN Node ID SON		*1*			-	
>Global RAN Node ID	M		9.3.1.5		-	
>Selected TAI	M		TAI 9.3.3.11		-	
>NR CGI	O		9.3.1.7	This IE is ignored if the *SON Information* IE contains the *SON Information Reply* IE.	YES	ignore
Source RAN Node ID		*1*			-	
>Global RAN Node ID	M		9.3.1.5		-	
>Selected TAI	M		TAI 9.3.3.11		-	
SON Information	M		9.3.3.7		-	
Xn TNL Configuration Info	C-ifSONInformationRequest		9.3.3.9	Source NG-RAN node Xn TNL Configuration Info.	-	
Requested TNL Information	O		PLMN Identity 9.3.3.5	Indicates to the candidate NG-RAN node the PLMN ID for which the *Xn TNL Configuration Info* IE is requested if the *SON Information* IE is set to "Xn TNL Configuration Info". If the *SON Information Request* IE within the *SON Information* IE is set to any value other than "Xn TNL Configuration Info", the *Requested TNL Information* IE is ignored.	YES	ignore

Condition	Explanation
ifSONInformationRequest	This IE shall be present if the *SON Information* IE contains the *SON Information Request* IE set to the value "Xn TNL Configuration Info".

9.3.3.7 SON Information

This IE identifies the nature of the configuration information transferred, i.e., a request, a reply or a report.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
CHOICE *SON Information*	M				-	
>SON Information Request						
>>SON Information Request	M		ENUMERATED (Xn TNL Configuration Info, …)		-	
>SON Information Reply						
>>SON Information Reply	M		9.3.3.8		-	
>SON Information Report						
>>SON Information Report	M		9.3.3.35		YES	ignore

9.3.3.8 SON Information Reply

This IE contains the configuration information to be replied to the NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Xn TNL Configuration Info	O		9.3.3.9	

9.3.3.9 Xn TNL Configuration Info

This IE is used for signalling Xn TNL Configuration information for automatic Xn SCTP association establishment.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Xn Transport Layer Addresses		*1..<maxnoofXnTLAs>*			-	
>Transport Layer Address	M		9.3.2.4	Transport Layer Addresses for Xn SCTP endpoint.	-	
Xn Extended Transport Layer Addresses		*0..<maxnoofXnExtTLAs>*			-	
>IP-Sec Transport Layer Address	O		Transport Layer Address 9.3.2.4	Transport Layer Addresses for IP-Sec endpoint.	-	
>Xn GTP Transport Layer Addresses		*0..<maxnoofXnGTP-TLAs>*			-	
>>GTP Transport Layer Address	M		Transport Layer Address 9.3.2.4	GTP Transport Layer Addresses for GTP end-points (used for data forwarding over Xn).	-	
>Xn SCTP Transport Layer Addresses		*0..<maxnoofXnTLAs>*			YES	ignore
>>Transport Layer Address SCTP	M		Transport Layer Address 9.3.2.4	Transport Layer Addresses for Xn SCTP endpoint.	-	

Range bound	Explanation
maxnoofXnTLAs	Maximum no. of Xn Transport Layer Addresses for an SCTP end-point. Value is 2.
maxnoofXnExtTLAs	Maximum no. of Xn Extended Transport Layer Addresses in the message. Value is 16.
maxnoofXnGTP-TLAs	Maximum no. of Xn GTP Transport Layer Addresses for a GTP end-point in the message. Value is 16.

9.3.3.10 TAC

This IE is used to uniquely identify a Tracking Area Code.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
TAC	M		OCTET STRING (SIZE(3))	

9.3.3.11 TAI

This IE is used to uniquely identify a Tracking Area.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PLMN Identity	M		9.3.3.5	
TAC	M		9.3.3.10	

9.3.3.12 AMF Set ID

This IE is used to uniquely identify an AMF Set within the AMF Region.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
AMF Set ID	M		BIT STRING (SIZE(10))	

9.3.3.13 Routing ID

This IE is used to identify an LMF or a TSCTSF within the 5GC.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Routing ID	M		OCTET STRING	The maximum length is 16 octets, referring to the length of a Universally Unique Identifier (UUID) version 4 as specified in clause 4.4 in IETF RFC 4122 [53]

9.3.3.14 NRPPa-PDU

This IE contains an NG-RAN node – LMF or LMF – NG-RAN node message that is transferred without interpretation in the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
NRPPa-PDU	M		OCTET STRING	

9.3.3.15 RAN Paging Priority

This IE contains the service priority as defined in TS 23.501 [9].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
RAN Paging Priority	M		INTEGER (1..256)	Values ordered in decreasing order of priority, i.e. with 1 as the highest priority and 256 as the lowest priority

9.3.3.16 EPS TAC

This IE is used to uniquely identify an EPS Tracking Area Code.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
EPS TAC	M		OCTET STRING (SIZE(2))	

9.3.3.17 EPS TAI

This IE is used to uniquely identify an EPS Tracking Area.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PLMN Identity	M		9.3.3.5	
EPS TAC	M		9.3.3.16	

9.3.3.18 UE Paging Identity

This IE represents the Identity with which the UE is paged.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE *UE Paging Identity*	M			
>5G-S-TMSI				
>>5G-S-TMSI	M		9.3.3.20	

9.3.3.19 AMF Pointer

This IE is used to identify one or more AMF(s) within the AMF Set.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
AMF Pointer	M		BIT STRING (SIZE(6))	

9.3.3.20 5G-S-TMSI

This IE is used for security reasons, to hide the identity of a subscriber.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
AMF Set ID	M		9.3.3.12	
AMF Pointer	M		9.3.3.19	
5G-TMSI	M		OCTET STRING (SIZE(4))	5G-TMSI is unique within the AMF that allocated it.

9.3.3.21 AMF Name

This IE is used to uniquely identify the AMF (see TS 38.300 [8]). It may also be used as a human readable name of the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
AMF Name	M		PrintableString (SIZE(1..150, ...))	

9.3.3.22 Paging Origin

This IE indicates whether Paging is originated due to the PDU sessions from the non-3GPP access.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Paging Origin	M		ENUMERATED (non-3GPP, ...)	

9.3.3.23 UE Identity Index Value

This IE is used by the NG-RAN node to calculate the Paging Frame as specified in TS 38.304 [12] and TS 36.304 [29].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE *UE Identity Index Value*	M			
>Index Length 10				
>>Index Length 10	M		BIT STRING (SIZE(10))	Coded as specified in TS 38.304 [12] and TS 36.304 [29].

9.3.3.24 Periodic Registration Update Timer

This IE is used to assist NG-RAN to generate corresponding timer for periodic RNA update for RRC_INACTIVE UEs.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Periodic Registration Update Timer	M		BIT STRING (SIZE(8))	Bits 5 to 1 represent the binary coded timer value. Bits 6 to 8 define the timer value unit for the Periodic Registration Update Timer as follows: Bits **8 7 6** 0 0 0 value is incremented in multiples of 10 minutes 0 0 1 value is incremented in multiples of 1 hour 0 1 0 value is incremented in multiples of 10 hours 0 1 1 value is incremented in multiples of 2 seconds 1 0 0 value is incremented in multiples of 30 seconds 1 0 1 value is incremented in multiples of 1 minute 1 1 1 value indicates that the timer is deactivated. 1 1 0 value is incremented in multiples of 1 hour in this version of the protocol.

9.3.3.25 UE-associated Logical NG-connection List

This IE contains a list of UE-associated logical NG-connections.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
UE-associated Logical NG-connection Item		*1..<maxnoofNGConnectionsToReset>*		
>AMF UE NGAP ID	O		9.3.3.1	
>RAN UE NGAP ID	O		9.3.3.2	

Range bound	Explanation
maxnoofNGConnectionsToReset	Maximum no. of UE-associated logical NG-connections allowed to reset in one message. Value is 65536.

9.3.3.26 NAS Security Parameters from NG-RAN

This IE provides security related parameters for inter-system handover from NG-RAN to E-UTRAN or from NG-RAN to UTRAN via the eNB to the UE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
NAS Security Parameters from NG-RAN	M		OCTET STRING	Refers to the *N1 mode to S1 mode NAS transparent container* IE, the details of the IE definition and the encoding are specified in TS 24.501 [26].

9.3.3.27 Source to Target AMF Information Reroute

This IE is used to transparently pass information provided by NSSF from the source AMF to the target AMF through the NG-RAN node; it is produced by the source core network node and is transmitted to the target core network node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Configured NSSAI	O		OCTET STRING (SIZE(128))	The maximum number of S-NSSAI in Configured NSSAI is 16.This IE contains optional mapping S-NSSAI. When present, this IE shall be transmitted transparent from the source Core network node to the target Core network node. The octets of the OCTET STRING are encoded according to description in TS 29.531 [30]
Rejected NSSAI in PLMN	O		OCTET STRING (SIZE(32))	This IE contain the rejected NSSAI(s) in the PLMN. When present, this IE shall be transmitted transparent from the source Core network node to the target Core network node. The octets of the OCTET STRING are encoded according to description in TS 29.531 [30].
Rejected NSSAI in TA	O		OCTET STRING (SIZE(32))	This IE contain the rejected NSSAI(s) in the TA. When present, this IE shall be transmitted transparent from the source Core network node to the target Core network node. The octets of the OCTET STRING are encoded according to description in TS 29.531 [30].

9.3.3.28 RIM Information Transfer

This IE contains information used by the RIM functionality, and additionally includes the NG-RAN node identifier of the destination of the RIM information and the NG-RAN node identifier of the source of this information.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Target RAN Node ID RIM		*1*		
>Global RAN Node ID	M		9.3.1.5	
>Selected TAI	M		TAI 9.3.3.11	
Source RAN Node ID		*1*		
>Global RAN Node ID	M		9.3.1.5	
>Selected TAI	M		TAI 9.3.3.11	
RIM Information	M		9.3.3.29	

9.3.3.29 RIM Information

This IE contains the RIM information.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Target gNB Set ID	M		gNB Set ID 9.3.1.122	The victim gNB Set ID.
RIM-RS Detection	M		ENUMERATED (RS detected, RS disappeared, …)	

9.3.3.30 LAI

This IE is used to uniquely identify a Location Area.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
LAI				
>PLMN Identity	M		9.3.3.5	
>LAC	M		OCTET STRING (SIZE(2))	0000 and FFFE not allowed.

9.3.3.31 Extended Connected Time

This IE indicates the minimum time the RAN should keep the UE in RRC_CONNECTED state regardless of inactivity, as defined in TS 23.501 [9].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Extended Connected Time	M		INTEGER (0..255)	Minimum time the RAN should keep the UE in RRC_CONNECTED state. Unit is second. Value of "0" indicates that the AMF is aware of pending data traffic, but no specific time value is requested.

9.3.3.32 End Indication

This IE indicates that there are no further NAS PDUs to be transmitted for this UE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
End Indication	M		ENUMERATED (no further data, further data exists, …)	

9.3.3.33 Inter-system SON Configuration Transfer

This IE contains the configuration information, used by e.g., SON functionality, transmitted between an NG-RAN node and an eNB and additionally includes the node identifier of the destination of this configuration information and the node identifier of the source of this information.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE *Transfer Type*	M			
>from E-UTRAN to NG-RAN				
>>Source eNB-ID		*1*		
>>>Global eNB ID	M		9.3.1.165	
>>>Selected EPS TAI	M		EPS TAI 9.3.3.17	
>>Target NG-RAN node ID		*1*		
>>>Global RAN Node ID	M		9.3.1.5	
>>>Selected TAI	M		TAI 9.3.3.11	
>from NG-RAN to E-UTRAN				
>>Source NG-RAN Node ID		*1*		
>>>Global RAN Node ID	M		9.3.1.5	
>>>Selected TAI	M		TAI 9.3.3.11	
>>Target eNB-ID		*1*		
>>>Global eNB ID	M		9.3.1.165	
>>>Selected EPS TAI	M		EPS TAI 9.3.3.17	
Inter-system SON Information	M		9.3.3.34	

9.3.3.34 Inter-system SON Information

This IE identifies the nature of the configuration information transferred.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
CHOICE *Inter-system SON Information*	M				-	
>Inter-system SON Information Report						
>>Inter-system SON Information Report	M		9.3.3.36		-	
>Inter-system SON Information Request					YES	ignore
>>Inter-system SON Information Request	M		9.3.3.54		-	
>Inter-system SON Information Reply					YES	ignore
>>Inter-system SON Information Reply	M		9.3.3.55		-	

9.3.3.35 SON Information Report

This IE contains the configuration information to be transferred.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
CHOICE *SON Information Report*	M				-	
>Failure Indication Information						
>>Failure Indication	M		9.3.3.37		-	
>HO Report Information						
>>HO Report	M		9.3.3.39		-	
>Successful HO Report Information					YES	ignore
>>Successful HO Report List		*1*			-	
>>>Successful HO Report Item		*1..<maxnoofSuccessfulHOReports>*			-	
>>>>Successful HO Report Container	M		OCTET STRING	Includes the *SuccessHO-Report* IE as defined in TS 38.331 [18].	-	
>Successful PSCell Change Report Information					YES	ignore
>>Successful PSCell Change Report List		*1*			-	
>>>Successful PSCell Change Report Item		*1..<maxnoofSuccessfulPSCellChangeReports>*			-	
>>>>Successful PSCell Change Report Container	M		OCTET STRING	Includes the *SuccessPSCell-Report* IE as defined in TS 38.331 [18].	-	

Range bound	Explanation
maxnoofSuccessfulHOReports	Maximum no. of Successful HO Reports. Value is 64.
maxnoofSuccessfulPSCellChangeReports	Maximum no. of Successful PSCell Change Reports. Value is 64.

9.3.3.36 Inter-system SON Information Report

This IE contains the configuration information to be transferred.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
CHOICE *Inter-system SON Information Report*	M				-	
>HO Report Information						
>>Inter-system HO Report	M		9.3.3.40		-	
>Failure Indication Information						
>>Inter-system Failure Indication	M		9.3.3.38		-	
>Energy Savings Indication					YES	ignore
>>Inter-system Cell State Indication	M		9.3.3.57		-	
>Resource Status Report					YES	ignore
>>Inter-system Resource Status Report	M		9.3.3.60		-	

9.3.3.37 Failure Indication

This IE contains the failure indication to be transferred.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
UE RLF Report Container	M		9.3.3.41	

9.3.3.38 Inter-system Failure Indication

This IE contains the failure indication to be transferred.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
UE RLF Report Container	O		9.3.3.41	Only contains the LTE RLF report in this version of the specification.

9.3.3.39 HO Report

This IE contains the HO report to be transferred.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Handover Report Type	M		ENUMERATED (HO too early, HO to wrong cell, Inter-system ping-pong, …)		-	
Handover Cause	M		Cause 9.3.1.2	Indicates handover cause employed for handover from source cell	-	
Source Cell CGI	M		NG-RAN CGI 9.3.1.73	NG-RAN CGI of the source cell for handover procedure	-	
Target Cell CGI	M		NG-RAN CGI 9.3.1.73	NG-RAN CGI of the target cell for handover procedure. If the Handover Report Type is set to "Inter-system ping-pong", it contains the target cell of the inter system handover from the other system to NG-RAN node cell	-	
Re-establishment Cell CGI	C-ifHandoverReportType HoToWrongCell		NG-RAN CGI 9.3.1.73	NG-RAN CGI of the cell where UE attempted re-establishment or where the UE successfully re-connected after the failure	-	
Source Cell C-RNTI	O		BIT STRING (SIZE (16))	C-RNTI allocated at the source NG-RAN node	-	
Target Cell in E-UTRAN	C-ifHandoverReportType Intersystempingpong		E-UTRA CGI 9.3.1.9	E-UTRA CGI of the E-UTRAN target cell for handover procedure	-	
Mobility Information	O		BIT STRING (SIZE (16))	This IE is not used in the specification. If received, the IE is ignored.	-	
UE RLF Report Container	O		9.3.3.41	The UE RLF Report Container IE received in the FAILURE INDICATION message.	-	
Extended Mobility Information	O		BIT STRING (SIZE (32))	Corresponds to the *Mobility Information* IE provided in the HANDOVER REQUEST message from the source NG-RAN node	YES	ignore

Target Cell C-RNTI	O		BIT STRING (SIZE (16))	C-RNTI allocated at the target NG-RAN node.	YES	ignore
Time Since Failure	O		INTEGER (0.. 172800, ...)	Corresponds to the *TimeSinceFailure* IE received from the UE in RLF Report as defined in TS 36.331 [21].	YES	ignore

Condition	Explanation
ifHandoverReportTypeHoToWrongCell	This IE shall be present if the *Handover Report Type* IE is set to the value "HO to wrong cell"
ifHandoverReportTypeIntersystempingpong	This IE shall be present if the *Handover Report Type* IE is set to the value "Inter-system ping-pong"

9.3.3.40 Inter-system HO Report

This IE contains the inter-system HO report to be transferred.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
CHOICE *Handover Report Type*	M				-	
>Too early Inter-system HO						
>>Source Cell ID	M		E-UTRA CGI 9.3.1.9	CGI of the source cell for the HO.	-	
>>Failure Cell ID	M		NG-RAN CGI 9.3.1.73	CGI of the target cell for the HO.	-	
>>UE RLF Report Container	O		9.3.3.41		-	
>Inter-system Unnecessary HO						
>>Source Cell CGI	M		NG-RAN CGI 9.3.1.73	Source NR cell in NG-RAN	-	
>>Target Cell CGI	M		E-UTRA CGI 9.3.1.9	Target cell in E-UTRAN	-	
>>Early IRAT HO	M		ENUMERATED (true, false, ...)	Is set to "true" if the measurement period expired due to an inter-RAT handover towards NR executed within the configured measurement duration and otherwise set to "false"	-	
>>Candidate Cell List		*1*			-	
>>>Candidate Cell Item		*1..<maxnoofCandidateCells>*			-	
>>>>CHOICE *Candidate Cell Type*	M				-	
>>>>>*Candidate CGI*						
>>>>>>Candidate Cell ID	M		NR CGI 9.3.1.7	This IE contains an NR CGI.	-	
>>>>>*Candidate PCI*						
>>>>>>Candidate PCI	M		INTEGER (0..1007, …)	This IE includes the NR Physical Cell Identifier of detected cells not included in the *Candidate Cell List* IE and for which an NR CGI could not be derived.	-	
>>>>>>Candidate NR ARFCN	M		INTEGER (0.. maxNRARFCN)	RF Reference Frequency as defined in TS 38.104 [39], clause 5.4.2.1. The frequency provided in this IE identifies the absolute frequency position of the reference resource block (Common RB 0) of the carrier. Its lowest subcarrier is also known as Point A.	-	

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
>Inter-system Mobility Failure for Voice Fallback					YES	ignore
>>Source Cell ID	M		NG-RAN CGI 9.3.1.73	CGI of the source cell for HO	-	
>>Failure Cell ID	M		E-UTRA CGI 9.3.1.9	CGI of the failure cell for HO	-	
>>Re-connect Cell ID	O		E-UTRA CGI 9.3.1.9	E-UTRA CGI of the cell where UE attempted re-establishment or where the UE successfully re-connected after the failure.	-	
>>UE RLF Report Container	O		9.3.3.41	Only contains the LTE RLF report in this version of the specification.	-	

Range bound	Explanation
maxnoofCandidateCells	Maximum no. of candidate cells. Value is 32
maxNRARFCN	Maximum value of NRARFCNs. Value is 3279165.

9.3.3.41 UE RLF Report Container

This IE contains the RLF Report to be transferred.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE *RLF type*	M			
>NR				
>>NR UE RLF Report Container	M		OCTET STRING	Includes the *nr-RLF-Report* contained in the *UEInformationResponse* message as defined in TS 38.331 [18].
>LTE				
>>LTE UE RLF Report Container	M		OCTET STRING	Includes the *rLF-Report-r9* contained in the *UEInformationResponse* message as defined in TS 36.331 [21]

9.3.3.42 NID

This IE is used to identify (together with a PLMN identifier) a Stand-alone Non-Public Network.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
NID	M		BIT STRING (SIZE(44))	Defined in TS 23.003 [23].

9.3.3.43 CAG ID

This IE is used to identify (together with a PLMN identifier) a Public Network Integrated NPN.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CAG ID	M		BIT STRING (SIZE(32))	Defined in TS 23.003 [23].

9.3.3.44 NPN Support

For SNPN, this IE identifies a supported SNPN together with the associated PLMN ID.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE *NPN Support*	M			
>SNPN				
>>NID	M		9.3.3.42	

9.3.3.45 Allowed PNI-NPN List

This IE contains information on allowed UE mobility in PNI-NPN including allowed PNI-NPNs and whether the UE is allowed to access non-CAG cells for each PLMN.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Allowed PNI-NPN Item		*1..<maxnoofEPLMNs+1>*		
>PLMN Identity	M		9.3.3.5	
>PNI-NPN Restricted	M		ENUMERATED (restricted, not-restricted, …)	If set to "restricted", indicates that the UE is not allowed to access non-CAG cells for this PLMN.
>Allowed CAG List per PLMN		*1..<maxnoofAllowedCAGsperPLMN>*		
>>CAG ID	M		9.3.3.43	

Range bound	Explanation
maxnoofEPLMNs+1	Maximum no. of equivalent PLMNs plus one serving PLMN. Value is 16.
maxnoofAllowedCAGsperPLMN	Maximum number of CAGs per PLMN in UE's Allowed PNI-NPN list. Value is 256.

9.3.3.46 NPN Access Information

This IE contains information to perform access control for NPN.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE *NPN Access Information*	M			
>PNI-NPN Access Information				
>>Cell CAG List	M		9.3.3.47	

9.3.3.47 Cell CAG List

This IE indicates the list of CAG IDs supported by a cell.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Cell CAG List		*1..<maxnoofCAGsperCell>*		
>CAG ID	M		9.3.3.43	

Range bound	Explanation
maxnoofCAGsperCell	Maximum no. of CAGs per cell. Value is 64. Max is 12 in this release.

9.3.3.48 UL CP Security Information

This IE contains NAS level security information to enable UE authentication by the AMF as described in TS 33.401 [27].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
UL NAS MAC	M		BIT STRING (SIZE(16))	Defined in TS 33.401 [27].
UL NAS Count	M		BIT STRING (SIZE(5))	Defined in TS 33.401 [27].

9.3.3.49 DL CP Security Information

This IE contains NAS level security information to be forwarded to the UE as described in TS 33.401 [27].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
DL NAS MAC	M		BIT STRING (SIZE(16))	Defined in TS 33.401 [27].

9.3.3.50 Configured TAC Indication

This IE indicates that in all NR cells served by the gNB, the TAC with which this IE is associated, is only configured but not broadcast.

NOTE: This IE is defined in accordance to the possibility foreseen in TS 38.331 [18] to not broadcast the TAC if the NR cell only supports PSCell/SCell functionality.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Configured TAC Indication	M		ENUMERATED (true, ...)	

9.3.3.51 Extended AMF Name

This IE provides extended human readable name of the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
AMF Name Visible	O		VisibleString (SIZE(1..150, …))	
AMF Name UTF8	O		UTF8String (SIZE(1..150, …))	

9.3.3.52 Extended UE Identity Index Value

This IE is used by the NG-RAN node to calculate the Paging Frame and Paging Occasion as specified in TS 36.304 [29], the Paging Frame and Paging Occasion for eDRX and the UE_ID based subgroup ID for PEI as specified in TS 38.304 [12].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Extended UE Identity Index Value	M		BIT STRING (SIZE(16))	Encoded as 5G-S-TMSI mod 65536.

9.3.3.53 NR NTN TAI Information

This IE contains the TAI information for NR NTN.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Serving PLMN	M		PLMN Identity 9.3.3.5	Indicates the UE's serving PLMN.
TAC List in NR NTN		*1..<maxnoofTACsinNTN>*		Includes all TAC(s) broadcast in the cell, for the UE's serving PLMN.
>TAC	M		9.3.3.10	
UE Location Derived TAC in NR NTN	O		TAC 9.3.3.10	This IE contains TAC information derived from the actual UE location, if available.

Range bound	Explanation
maxnoofTACsinNTN	Maximum no. of TACs broadcast per cell. Value is 12.

9.3.3.54 Inter-system SON Information Request

This IE contains the request information to be transferred.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE *Inter-system SON Information Request*	M			
>NG-RAN Cell Activation				
>>Inter-system Cell Activation Request	M		9.3.3.56	
>Resource Status				
>>Inter-system Resource Status Request	M		9.3.3.59	

9.3.3.55 Inter-system SON Information Reply

This IE contains the reply information to be transferred.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE *Inter-system SON Information Reply*	M			
>NG-RAN Cell Activation				
>>Inter-system Cell Activation Reply	M		9.3.3.58	
>Resource Status				
>>Inter-system Resource Status Reply	M		9.3.3.61	

9.3.3.56 Inter-system Cell Activation Request

This IE contains request information for inter-system Cell Activation.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Activation ID	M		INTEGER (0..16384, …)	Allocated by the eNB.
Cells to Activate List		*1..<maxnoofCellsinNGRANNode>*		
>NG-RAN CGI	M		9.3.1.73	

Range bound	Explanation
maxnoofCellsinNGRANNode	Maximum no. of cells that can be served by a NG-RAN node. Value is 16384.

9.3.3.57 Inter-system Cell State Indication

This IE contains notification information for inter-system Cell Activation and Deactivation.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Notification Cell List		*1*		
>Notification Cell Item		*1..<maxnoofCellsinNGRANNode>*		
>>NG-RAN CGI	M		9.3.1.73	
>>Notify Flag	M		ENUMERATED (Activated, Deactivated, ...)	

Range bound	Explanation
maxnoofCellsinNGRANNode	Maximum no. of cells that can be served by a NG-RAN node. Value is 16384.

9.3.3.58 Inter-system Cell Activation Reply

This IE contains reply information for inter-system Cell Activation.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Activated Cells List		*1..<maxnoofCellsinNGRANNode>*		
>NG-RAN CGI	M		9.3.1.73	
Activation ID	M		INTEGER (0..16384, …)	Allocated by the eNB.

Range bound	Explanation
maxnoofCellsinNGRANNode	Maximum no. of cells that can be served by a NG-RAN node. Value is 16384.

9.3.3.59 Inter-system Resource Status Request

This IE contains information on the requested Inter-system Load Reporting reporting.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Reporting System	M		9.3.1.237	
Report Characteristics	M		BITSTRING (SIZE(32))	Each position in the bitmap indicates measurement object the receiving node is requested to report. First Bit = Number of Active UEs, Second Bit = RRC connections, Third Bit = PRB. Other bits reserved for future use.
CHOICE *report type*	M			
>Event based reporting				
>>Inter-system Resource Threshold Low	M		INTEGER (0..100)	Inter-system Resource Status reporting is enabled when Composite Available Capacity is above this threshold or is disabled when Composite Available Capacity is below this threshold. The reporting node sends a report when the cell Composite Available Capacity becomes greater than or equal to the threshold.
>>Inter-system Resource Threshold High	M		INTEGER (0..100)	Inter-system Resource Status reporting is enabled when Composite Available Capacity is below this threshold or is disabled when Composite Available Capacity is above this threshold. The reporting node sends a report when the cell Composite Available Capacity becomes smaller than or equal to the threshold.
>>Number of Measurement Reporting Levels	M		ENUMERATED (2, 3, 4, 5, 10, ..., 0)	The reporting node divides the cell load scale into the indicated number of reporting levels, evenly distributed on a linear scale between the Inter-system Resource Threshold Low and the Inter-system Resource Threshold High. The reporting node sends a report each time the cell load changes from one reporting level to another. If the value is "0", the IE is ignored and only the Inter-system Resource Threshold Low and the Inter-system Resource Threshold High are used as the reporting levels.
>Periodic Reporting				
>>Reporting Periodicity	M		ENUMERATED (stop, single, 1000ms, 2000ms, 5000ms, 10000ms, …)	Periodicity that can be used for reporting. If the value is "stop", the reporting node is asked to stop the periodic reporting. If the value is "single" there is only one report.

Range bound	Explanation
maxnoofReportedCells	Maximum no. of cells that can be reported. Value is 256.

9.3.3.60 Inter-system Resource Status Report

This IE contains the Inter-system load report.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE *Reporting System*	M			
>E-UTRAN				
>>E-UTRAN Cell Report List		*1*		
>>>E-UTRAN Cell Report Item		*1..<maxnoofReportedCells>*		
>>>>Cell ID	M		E-UTRA CGI 9.3.1.9	
>>>>E-UTRAN Composite Available Capacity Group	M		9.3.1.196	Corresponds to the *Composite Available Capacity Group* IE as defined in TS 36.423 [40].
>>>>Number of Active UEs	O		INTEGER (0..16777215, …)	Corresponds to the *Number of Active UEs* IE as defined in TS 36.314 [49].
>>>>RRC Connections	O		INTEGER (1..65536, …)	Corresponds to the *RRC Connections* IE as defined in TS 38.423 [24].
>>>>E-UTRAN Radio Resource Status	O		9.3.1.200	
>NG-RAN				
>>NG-RAN Cell Report List		*1*		
>>>NG-RAN Cell Report Item		*1..<maxnoofReportedCells>*		
>>>>Cell ID	M		NG-RAN CGI 9.3.1.73	
>>>>NR Composite Available Capacity Group	M		E-UTRAN Composite Available Capacity Group 9.3.1.196	Corresponds to the *Composite Available Capacity Group* IE as defined in TS 36.423 [40].
>>>>Number of Active UEs	O		INTEGER (0..16777215, …)	Corresponds to the *Number of Active UEs* IE as defined in TS 38.423 [24].
>>>>RRC Connections	O		INTEGER (1..65536, …)	Corresponds to the *RRC Connections* IE as defined in TS 38.423 [24].
>>>>NR Radio Resource Status	O		9.3.1.205	

Range bound	Explanation
maxnoofReportedCells	Maximum no. of cells that can be reported. Value is 256.

9.3.3.61 Inter-system Resource Status Reply

This IE indicates for which cell(s) the inter-system load reporting was successfully initiated.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Reporting System	M		9.3.1.237	

9.3.3.62 Hashed UE Identity Index Value

This IE is the 13 Most Significant Bits (MSBs) of the Hashed ID defined in TS 38.304 [12] or TS 36.304 [29].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Hashed UE Identity Index Value	M		BIT STRING (SIZE(13, …))	

9.3.3.63 Paging Policy Differentiation

This IE provides paging policy differentiation information for a UE in RRC_INACTIVE state.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PDU Session for Paging List		*1*		
>PDU Session for Paging Item		*1..<maxnoofPDUSessions>*		
>>PDU Session ID	M		9.3.1.50	
>>Paging Policy Differentiation List		*1*		
>>>Paging Policy Differentiation Item		*1..<maxnoofQoSFlows>*		
>>>>QoS Flow Identifier	O		9.3.1.51	
>>>>Paging Policy Indicator	O		INTEGER (0..7, …)	Used for paging policy differentiation as specified in TS 23.501 [9].
>>>>Allocation and Retention Priority	O		9.3.1.19	
>>>>5QI	O		INTEGER (0..255, …)	Indicates the 5QI associated with the PDU session
>>>>DL Data Size	O		INTEGER (0..96000, …)	Unit: Byte.

Range bound	Explanation
maxnoofPDUSessions	Maximum no. of PDU sessions allowed towards one UE. Value is 256.
maxnoofQoSFlows	Maximum no. of QoS flows allowed within one PDU session. Value is 64.

9.3.3.64 NR Paging Long eDRX Information for RRC INACTIVE

This IE indicates the NR Paging long eDRX parameters as defined in TS 38.304 [12].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
NR Paging Long eDRX Cycle for RRC INACTIVE	M		ENUMERATED (hf2, hf4, hf8, hf16, hf32, hf64, hf128, hf256, hf512, hf1024, …)	$T_{eDRX, RAN}$ defined in TS 38.304 [12]. Unit: [number of hyperframes].
NR Paging Time Window for RRC_INACTIVE	M		ENUMERATED (s1, s2, s3, s4, s5, s6, s7, s8, s9, s10, s11, s12, s13, s14, s15, s16, s17, s18, s19, s20, s21, s22, s23, s24, s25, s26, s27, s28, s29, s30, s31, s32, …)	Unit: [1.28 seconds]

9.3.3.65 CAG List for MDT

This IE is used to identify the list of Public Network Integrated NPNs for MDT.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CAG List for MDT		*1*		For logged MDT, this list contains a maximum of 144 Public Network Integrated NPNs with a maximum of 12 different PLMN identities, configurable to the *CAG-ConfigList* IE defined in TS 38.331 [18] where a PLMN ID may be repeated more than once.
>CAG List for MDT Item		*1..<maxnoofCAGforMDT>*		
>>PLMN Identity	M		9.3.3.5	
>>CAG ID	M		9.3.3.43	

Range bound	Explanation
maxnoofCAGforMDT	Maximum no. of CAG IDs for MDT area scope. Value is 256.

9.3.3.66 AUN3 Device Access Information

This IE contains AUN3 device access information for the AUN3 device registration as described in TS 23.316 [34].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
AUN3 Device Access	M		ENUMERATED (true, ...)	
Existing NG Connection with Same Location	M		ENUMERATED (true, false, ...)	

9.3.3.67 Network Slice Area Scope of MDT

This IE is used to identify the list of network slices for MDT.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Network Slice List for MDT		*1*		
>Network Slice Item for MDT		*1..<maxnoofMDTPLMNs>*		
>>PLMN Identity	M		9.3.3.5	
>>Slice MDT List		*1*		
>>>Slice MDT Item		*1..<maxnoofSliceItemsforMDT >*		
>>>>S-NSSAI	M		9.3.1.24	

Range bound	Explanation
maxnoofMDTPLMNs	Maximum no. of PLMNs in the MDT PLMN list. Value is 16.
maxnoofSliceItemsforMDT	Maximum no. of S-NSSAIs for MDT area scope. Value is 1024.

9.3.3.68 Geographical Area

This IE is used to indicate the geographical area scope for NTN MDT.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
NTN Geographical Area		*1..<maxnoofAreaNTN>*		
>CHOICE *Area Type*	M			
>>*Circle*				
>>>Reference Location	M		OCTET STRING	ReferenceLocation-r17 as defined in TS 38.331[18]
>>>Distance Radius	M		INTEGER(1..65535)	Each step represents 50m distance.
>>*Polygon*				
>>>Polygon	M		OCTET STRING	Defined in TS 37.355 [59]. The first/leftmost bit of the first octet contains the most significant bit.
MDT PLMN List	O		9.3.1.168	

Range bound	Explanation
maxnoofAreaNTN	Maximum no. the geographical area configurations. Value is 8.

9.3.3.69 A-IoT Correlation Identifier

This IE uniquely identifies an A-IoT session within an AIOTF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
A-IoT Correlation Identifier	M		INTEGER (0..65535, ...)	

9.3.3.70 AIOTF Identifier

This IE uniquely identifies the AIOTF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
AIOTF Identifier	M		OCTET STRING (SIZE(16..36, ...))	Coded as the *NfInstanceId* IE defined in TS 29.571 [35].

9.3.3.71 Requested Service Area Information

This IE includes the Requested Service Area Information for the A-IoT inventory.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Requested Reader List		*0..1*		
>Requested Reader Item		*1..<maxnoofReaders>*		
>>Global gNB ID	M		9.3.1.6	
>>Reader Index	M		9.3.1.276	
Requested A-IoT Area List		*0..1*		
>Requested A-IoT Area Item		*1..<maxnoofAIoTAreas>*		
>>A-IoT Area ID	M		9.3.1.277	

Range bound	Explanation
maxnoofReaders	Maximum no. of Readers. Value is 65535.
maxnoofAIoTAreas	Maximum no. of A-IoT Areas. Value is 256.

9.3.3.72 Inventory Assistance Information

This IE includes the assistance information for the A-IoT Inventory Service.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Expected D2R Message Size	M		INTEGER (1..256,…)	Unit: Byte. This IE indicates the expected size of the A-IoT NAS PDU carried in Inventory Report.
Approximate Number of Target A-IoT Devices	O		INTEGER (1..65535, …)	
Time Interval	O		INTEGER (1..256, ...)	Unit: 0.1 second. This IE indicates the time interval as defined in TS 23.369 [60].

9.3.3.73 A-IoT Device Identification Requested

This IE represents the Requested Identity of the A-IoT device(s).

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE *Device Identification for Paging*	M			
>*Single Device*				
>>Single Device Identity	M		BIT STRING (SIZE(1..1024, ...))	Includes the AIoT Identification Information defined in TS 23.003 [23].
>*Group Devices*				
>>Group Device Identity	M		BIT STRING (SIZE(1..1024, ...))	Includes the AIoT Identification Information defined in TS 23.003 [23].
>*All Devices*			NULL	

9.3.3.74 RAN A-IoT Device NGAP ID

This IE uniquely identifies the A-IoT Device over the NG interface within the NG-RAN node within a A-IoT Session, as described in TS 38.401 [2].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
RAN A-IoT Device NGAP ID	M		INTEGER ($0..2^{32}-1$)	

9.3.3.75 Command Assistance Information

This IE includes the assistance information for the A-IoT Command Service.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Estimate of Expected D2R Message Size	M		INTEGER (1.. 256, ...)	Unit: Byte. This IE indicates the size of the A-IoT NAS PDU carried in Command Response.

9.3.3.76 AIOTF Name

This IE is used to uniquely identify the AIOTF. It may also be used as a human readable name of the AIOTF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
AIOTF Name Visible	O		VisibleString (SIZE(1..150, ...))	
AIOTF Name UTF8	O		UTF8String (SIZE(1..150, ...))	

9.3.3.77 Further Extended UE Identity Index Value

This IE is used by the NG-RAN node to calculate the Paging Frame and Paging Occasion for eDRX and the UE_ID based subgroup ID for PEI and LP-WUS as specified in TS 38.304 [12].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Further Extended UE Identity Index Value	M		BIT STRING (SIZE(20))	Encoded as 5G-S-TMSI mod 1048576.

9.3.3.78 A-IoT Security Information

This IE contains A-IoT security information.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE *A-IoT Security Information*	M			
>A-IoT RAND_n				
>>RAND_AIOT_n	M		BIT STRING (SIZE (128, ...))	Contains the $RAND_{AIOT_n}$ as defined in TS 33.369 [61].

9.3.4 SMF Related IEs

9.3.4.1 PDU Session Resource Setup Request Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
PDU Session Aggregate Maximum Bit Rate	O		9.3.1.102	This IE shall be present when at least one Non-GBR QoS flow is being setup and is ignored otherwise.	YES	reject
UL NG-U UP TNL Information	M		UP Transport Layer Information 9.3.2.2	UPF endpoint of the NG-U transport bearer, for delivery of UL PDUs.	YES	reject
Additional UL NG-U UP TNL Information	O		UP Transport Layer Information List 9.3.2.12	UPF endpoint of the additional NG-U transport bearer(s), for delivery of UL PDUs for split PDU session.	YES	reject
Data Forwarding Not Possible	O		9.3.1.63	This IE may be present in case of HANDOVER REQUEST message and is ignored otherwise.	YES	reject
PDU Session Type	M		9.3.1.52		YES	reject
Security Indication	O		9.3.1.27		YES	reject
Network Instance	O		9.3.1.113	This IE is ignored if the *Common Network Instance* IE is included.	YES	reject
QoS Flow Setup Request List		*1*			YES	reject
>QoS Flow Setup Request Item		*1..<maxnoofQoSFlows>*			-	
>>QoS Flow Identifier	M		9.3.1.51		-	
>>QoS Flow Level QoS Parameters	M		9.3.1.12		-	
>>E-RAB ID	O		9.3.2.3		-	
>>TSC Traffic Characteristics	O		9.3.1.130	Traffic pattern information associated with the QFI. Details in TS 23.501 [9].	YES	ignore
>>Redundant QoS Flow Indicator	O		9.3.1.134	This IE indicates whether this QoS flow is requested for the redundant transmission.	YES	ignore
>>ECN Marking or Congestion Information Reporting Request	O		9.3.1.266		YES	ignore
Common Network Instance	O		9.3.1.120		YES	ignore
Direct Forwarding Path Availability	O		9.3.1.64	This IE may be present in case of inter-system handover and intra-system handover.	YES	ignore
Redundant UL NG-U UP TNL Information	O		UP Transport Layer Information 9.3.2.2	UPF endpoint of the NG-U transport bearer, for delivery of UL PDUs for the redundant transmission.	YES	ignore

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Additional Redundant UL NG-U UP TNL Information	O		UP Transport Layer Information List 9.3.2.12	UPF endpoint of the additional NG-U transport bearer(s), for delivery of redundant UL PDUs for split PDU session.	YES	ignore
Redundant Common Network Instance	O		Common Network Instance 9.3.1.120		YES	ignore
Redundant PDU Session Information	O		9.3.1.136		YES	ignore
MBS Session Setup Request List	O		9.3.1.211		YES	ignore
Downlink TL Container	O		OCTET STRING	Containing the Get Request message specified in TS 29.585 [56].	YES	ignore

Range bound	Explanation
maxnoofQoSFlows	Maximum no. of QoS flows allowed within one PDU session. Value is 64.

9.3.4.2 PDU Session Resource Setup Response Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
DL QoS Flow per TNL Information	M		QoS Flow per TNL Information 9.3.2.8	NG-RAN node endpoint of the NG-U transport bearer for delivery of DL PDUs, together with associated QoS flows.	-	
Additional DL QoS Flow per TNL Information	O		QoS Flow per TNL Information List 9.3.2.1	NG-RAN node endpoint of the additional NG-U transport bearer(s) for delivery of DL PDUs for split PDU session, together with associated QoS flows and corresponding to the *Additional UL NG-U UP TNL Information* IE in the *PDU Session Resource Setup Request Transfer* IE.	-	
Security Result	O		9.3.1.59		-	
QoS Flow Failed to Setup List	O		QoS Flow List with Cause 9.3.1.13		-	
Redundant DL QoS Flow per TNL Information	O		QoS Flow per TNL Information 9.3.2.8	NG-RAN node endpoint of the NG-U transport bearer(s) for delivery of DL PDUs of the indicated Redundant QoS Flow(s) and corresponding to the *Redundant UL NG-U UP TNL Information* IE in the *PDU Session Resource Setup Request Transfer* IE.	YES	ignore
Additional Redundant DL QoS Flow per TNL Information	O		QoS Flow per TNL Information List 9.3.2.1	NG-RAN node endpoint of the additional NG-U transport bearer(s) for delivery of redundant DL PDUs for split PDU session, together with associated QoS flows and corresponding to the *Additional Redundant UL NG-U UP TNL Information* IE in the *PDU Session Resource Setup Request Transfer* IE.	YES	ignore

Used RSN Information	O		Redundant PDU Session Information 9.3.1.136		YES	ignore
Global RAN Node ID of Secondary NG-RAN Node	O		Global RAN Node ID 9.3.1.5		YES	ignore
MBS Support Indicator	O		9.3.1.210		YES	ignore
MBS Session Setup Response List	O		9.3.1.213		YES	ignore
MBS Session Failed to Setup List	O		9.3.1.214		YES	ignore
QoS Flow TSC List		*0..1*			YES	ignore
>QoS Flow TSC Item		*1..<maxnoofQoSFlows>*			-	
>>QoS Flow Identifier	M		9.3.1.51		-	
>>TSC Traffic Characteristics Feedback	O		9.3.1.257		-	
>>AN Packet Delay Budget Uplink	O		Extended Packet Delay Budget 9.3.1.135	Indicates the dynamic value of 5G-AN PDB in UL direction for the QoS flow as specified in TS 23.501 [9]	-	
Uplink TL Container	O		OCTET STRING	Containing the Get Response message specified in TS 29.585 [56].	YES	ignore
ECN Marking or Congestion Information Reporting Status	O		9.3.1.267		YES	ignore
PDU Set based Handling Indicator	O		9.3.1.268		YES	ignore

Range bound	Explanation
maxnoofQoSFlows	Maximum no. of QoS flows allowed within one PDU session. Value is 64.

9.3.4.3 PDU Session Resource Modify Request Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
PDU Session Aggregate Maximum Bit Rate	O		9.3.1.102		YES	reject
UL NG-U UP TNL Modify List		*0..1*			YES	reject
>UL NG-U UP TNL Modify Item		*1..<maxnoofMultiConnectivity>*		This IE(s) are included only for modification of an existing tunnel.	-	
>>UL NG-U UP TNL Information	M		UP Transport Layer Information 9.3.2.2	UPF endpoint of the NG-U transport bearer, for delivery of UL PDUs.	-	
>>DL NG-U UP TNL Information	M		UP Transport Layer Information 9.3.2.2	Identifies the NG-U transport bearer at the NG-RAN node.	-	
>>Redundant UL NG-U UP TNL Information	O		UP Transport Layer Information 9.3.2.2	UPF endpoint of the NG-U transport bearer, for delivery of UL PDUs for the redundant transmission.	YES	ignore
>>Redundant DL NG-U UP TNL Information	O		UP Transport Layer Information 9.3.2.2	Identifies the NG-U transport bearer at the NG-RAN node for the redundant transmission.	YES	ignore
Network Instance	O		9.3.1.113	This IE is ignored if the *Common Network Instance* IE is included.	YES	reject
QoS Flow Add or Modify Request List		*0..1*			YES	reject
>QoS Flow Add or Modify Request Item		*1..<maxnoofQoSFlows>*			-	
>>QoS Flow Identifier	M		9.3.1.51		-	
>>QoS Flow Level QoS Parameters	O		9.3.1.12		-	
>>E-RAB ID	O		9.3.2.3		-	
>>TSC Traffic Characteristics	O		9.3.1.130	Traffic pattern information associated with the QFI. Details in TS 23.501 [9].	YES	ignore
>>Redundant QoS Flow Indicator	O		9.3.1.134	This IE indicates whether this QoS flow is requested for the redundant transmission.	YES	ignore
>>UL NG-U UP TNL Information	O		UP Transport Layer Information 9.3.2.2	This IE indicates the UPF endpoint of NG-U transport bearer for the QoS flow.	YES	ignore
>>Downlink TL Container	O		OCTET STRING	Containing the Set Request message specified in TS 29.585 [56].	YES	ignore
>>ECN Marking or Congestion Information Reporting Request	O		9.3.1.266		YES	ignore
QoS Flow to Release List	O		QoS Flow List with Cause 9.3.1.13		YES	reject

Additional UL NG-U UP TNL Information	O		UP Transport Layer Information List 9.3.2.12	UPF endpoint of the additional NG-U transport bearer(s) proposed for delivery of UL PDUs for split PDU session.	YES	reject
Common Network Instance	O		9.3.1.120		YES	ignore
Additional Redundant UL NG-U UP TNL Information	O		UP Transport Layer Information List 9.3.2.12	UPF endpoint of the additional NG-U transport bearer(s) proposed for delivery of redundant UL PDUs for split PDU session.	YES	ignore
Redundant Common Network Instance	O		Common Network Instance 9.3.1.120		YES	ignore
Redundant UL NG-U UP TNL Information	O		UP Transport Layer Information 9.3.2.2	UPF endpoint of the NG-U transport bearer, for delivery of UL PDUs for the redundant transmission of the Redundant QoS Flow(s).	YES	ignore
Security Indication	O		9.3.1.27		YES	ignore
MBS Session Setup or Modify Request List	O		9.3.1.212		YES	ignore
MBS Session To Release List	O		9.3.1.215		YES	ignore
User Plane Failure Indication	O		9.3.1.271		YES	ignore

Range bound	Explanation
maxnoofQoSFlows	Maximum no. of QoS flows allowed within one PDU session. Value is 64.
maxnoofMultiConnectivity	Maximum no. of connectivity allowed for a UE. Value is 4. The current version of the specification supports up to 2 connectivity.

9.3.4.4 PDU Session Resource Modify Response Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
DL NG-U UP TNL Information	O		UP Transport Layer Information 9.3.2.2	NG-RAN node endpoint of the NG-U transport bearer, for delivery of DL PDUs.	-	
UL NG-U UP TNL Information	O		UP Transport Layer Information 9.3.2.2	Identifies the NG-U transport bearer at the 5GC node.	-	
QoS Flow Add or Modify Response List		*0..1*			-	
>QoS Flow Add or Modify Response Item		*1..<maxnoofQoSFlows>*			-	
>>QoS Flow Identifier	M		9.3.1.51		-	
>>Current QoS Parameters Set Index	O		Alternative QoS Parameters Set Index 9.3.1.152	Index to the currently fulfilled alternative QoS parameters set	YES	Ignore
>>TSC Traffic Characteristics Feedback	O		9.3.1.257		YES	ignore
>>Uplink TL Container	O		OCTET STRING	Containing the Set Response message specified in TS 29.585 [56].	YES	ignore
>>DL NG-U UP TNL Information	O		UP Transport Layer Information 9.3.2.2	NG-RAN node endpoint of NG-U transport bearer for the QoS flow.	YES	ignore
>>AN Packet Delay Budget Uplink	O		Extended Packet Delay Budget 9.3.1.135	Indicates the dynamic value of 5G-AN PDB in UL direction for the QoS flow as specified in TS 23.501 [9].	YES	ignore
Additional DL QoS Flow per TNL Information	O		QoS Flow per TNL Information List 9.3.2.1	NG-RAN node endpoint of the additional NG-U transport bearer(s) for delivery of DL PDUs for split PDU session, together with associated QoS flows.	-	
QoS Flow Failed to Add or Modify List	O		QoS Flow List with Cause 9.3.1.13		-	
Additional NG-U UP TNL Information	O		UP Transport Layer Information Pair List 9.3.2.11	NG-RAN node endpoint of the NG-U transport bearer corresponding to the modified UPF endpoint received in the *PDU Session Resource Modify Request Transfer* IE in case of PDU session split.	YES	ignore

Redundant DL NG-U UP TNL Information	O		UP Transport Layer Information 9.3.2.2	NG-RAN node endpoint of the NG-U transport bearer, for delivery of DL PDUs for the redundant transmission.	YES	ignore
Redundant UL NG-U UP TNL Information	O		UP Transport Layer Information 9.3.2.2	Identifies the NG-U transport bearer at the 5GC node for the redundant transmission.	YES	ignore
Additional Redundant DL QoS Flow per TNL Information	O		QoS Flow per TNL Information List 9.3.2.1	NG-RAN node endpoint of the additional NG-U transport bearer(s) for delivery of redundant DL PDUs for split PDU session, together with associated QoS flows.	YES	ignore
Additional Redundant NG-U UP TNL Information	O		UP Transport Layer Information Pair List 9.3.2.11	NG-RAN node endpoint of the NG-U transport bearer for delivery of redundant DL PDUs corresponding to the modified UPF endpoint(s) received in the *UL NG-U UP TNL Modify List* IE of the *PDU Session Resource Modify Request Transfer* IE in case of PDU session split.	YES	ignore
Secondary RAT Usage Information	O		9.3.1.114		YES	ignore
MBS Support Indicator	O		9.3.1.210		YES	ignore
MBS Session Setup or Modify Response List	O		MBS Session Setup Response List 9.3.1.213		YES	ignore
MBS Session Failed to Setup or Modify List	O		MBS Session Failed to Setup List 9.3.1.214		YES	ignore
ECN Marking or Congestion Information Reporting Status	O		9.3.1.267		YES	ignore
PDU Set based Handling Indicator	O		9.3.1.268		YES	ignore
User Plane Failure Indication Report	O		ENUMERATED (QoS flows and tunnel to be released, QoS flows to be moved, new transport address allocated, …)		YES	ignore

Range bound	Explanation
maxnoofQoSFlows	Maximum no. of QoS flows allowed within one PDU session. Value is 64.

9.3.4.5 PDU Session Resource Notify Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
QoS Flow Notify List		*0..1*			-	
>QoS Flow Notify Item		*1..<maxnoofQoSFlows>*			-	
>>QoS Flow Identifier	M		9.3.1.51		-	
>>Notification Cause	M		ENUMERATED (fullfilled, not fulfilled, …, not fulfilled DL, not fulfilled UL)	Details in TS 23.501 [9].	-	
>>Current QoS Parameters Set Index	O		Alternative QoS Parameters Set Notify Index 9.3.1.153	Index to the currently fulfilled alternative QoS parameters set. Value 0 indicates that NG-RAN cannot even fulfil the lowest alternative parameters set.	YES	Ignore
>>TSC Traffic Characteristics Feedback	O		9.3.1.257		YES	ignore
QoS Flow Released List	O		QoS Flow List with Cause 9.3.1.13		-	
Secondary RAT Usage Information	O		9.3.1.114		YES	ignore
QoS Flow Feedback List		*0..1*			YES	ignore
>QoS Flow Feedback Item		*1..<maxnoofQoSFlows>*			-	
>>QoS Flow Identifier	M		9.3.1.51		-	
>>Update Feedback	O		BIT STRING { CN PDB DL(0), CN PDB UL(1)} (SIZE(8, …))	Each position in the bitmap represents a QoS parameter. If a bit is set to "1", the respective parameter was not updated. If a bit is set to "0", the respective parameter was successfully updated. Bits 2-7 reserved for future use.	-	
>>CN Packet Delay Budget Downlink	O		Extended Packet Delay Budget 9.3.1.135	Indicates when the packet delay budget downlink was not updated in path switch that NG-RAN can offer this value	-	
>>CN Packet Delay Budget Uplink	O		Extended Packet Delay Budget 9.3.1.135	Indicates when the packet delay budget uplink was not updated in path switch that NG-RAN can offer this value	-	

Range bound	Explanation
maxnoofQoSFlows	Maximum no. of QoS flows allowed within one PDU session. Value is 64.

9.3.4.6 PDU Session Resource Modify Indication Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
DL QoS Flow per TNL Information	M		QoS Flow per TNL Information 9.3.2.8	NG-RAN node endpoint of the NG-U transport bearer for delivery of DL PDUs, together with associated QoS flows.	-	
Additional DL QoS Flow per TNL Information	O		QoS Flow per TNL Information List 9.3.2.1	NG-RAN node endpoint of the additional NG-U transport bearer(s) for delivery of DL PDUs for split PDU session, together with associated QoS flows	-	
Secondary RAT Usage Information	O		9.3.1.114		YES	ignore
Security Result	O		9.3.1.59	Current UP security status	YES	ignore
Redundant DL QoS Flow per TNL Information	O		QoS Flow per TNL Information 9.3.2.8	NG-RAN node endpoint of the NG-U transport bearer for delivery of DL PDUs for the redundant transmission, together with associated QoS flows.	YES	ignore
Additional Redundant DL QoS Flow per TNL Information	O		QoS Flow per TNL Information List 9.3.2.1	NG-RAN node endpoint of the additional NG-U transport bearer(s) for delivery of Redundant DL PDUs for split PDU session, together with associated QoS flows.	YES	ignore
Global RAN Node ID of Secondary NG-RAN Node	O		Global RAN Node ID 9.3.1.5		YES	ignore
ECN Marking or Congestion Information Reporting Status	O		9.3.1.267		YES	ignore

9.3.4.7 PDU Session Resource Modify Confirm Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
QoS Flow Modify Confirm List		*1*			-	
>QoS Flow Modify Confirm Item		*1..<maxnoofQoSFlows>*			-	
>>QoS Flow Identifier	M		9.3.1.51		-	
UL NG-U UP TNL Information	M		UP Transport Layer Information 9.3.2.2	UPF endpoint of the NG-U transport bearer corresponding to the *DL QoS Flow per TNL Information* IE received in the *PDU Session Resource Modify Indication Transfer* IE.	-	
Additional NG-U UP TNL Information	O		UP Transport Layer Information Pair List 9.3.2.11	NG-RAN node endpoint of the NG-U transport bearer indicated in the *PDU Session Resource Modify Indication Transfer* IE and the corresponding UPF endpoint for split PDU session.	-	
QoS Flow Failed to Modify List	O		QoS Flow List with Cause 9.3.1.13		-	
Redundant UL NG-U UP TNL Information	O		UP Transport Layer Information 9.3.2.2	UPF endpoint of the NG-U transport bearer identified by the above redundant DL NG-U UP TNL Information IE for the redundant transmission.	YES	ignore
Additional Redundant NG-U UP TNL Information	O		UP Transport Layer Information Pair List 9.3.2.11	NG-RAN node endpoint of the NG-U transport bearer for the redundant transmission indicated in the PDU Session Resource Modify Indication Transfer IE and the corresponding UPF endpoint for split PDU session.	YES	ignore

Range bound	Explanation
maxnoofQoSFlows	Maximum no. of QoS flows allowed within one PDU session. Value is 64.

9.3.4.8 Path Switch Request Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
DL NG-U UP TNL Information	M		UP Transport Layer Information 9.3.2.2	NG-RAN node endpoint of the NG-U transport bearer, for delivery of DL PDUs.	-	
DL NG-U TNL Information Reused	O		ENUMERATED (true, …)	Indicates that DL NG-U TNL Information has been reused.	-	
User Plane Security Information	O		9.3.1.60		-	
QoS Flow Accepted List		*1*		QoS flows associated with the *DL NG-U UP TNL Information* IE.	-	
>QoS Flow Accepted Item		*1..<maxnoofQoSFlows>*			-	
>>QoS Flow Identifier	M		9.3.1.51		-	
>>Current QoS Parameters Set Index	O		Alternative QoS Parameters Set Index 9.3.1.152	Index to the currently fulfilled alternative QoS parameters set.	YES	ignore
Additional DL QoS Flow per TNL Information	O		QoS Flow per TNL Information List 9.3.2.1	NG-RAN node endpoint of the additional NG-U transport bearer(s) for delivery of DL PDUs for split PDU session, together with associated QoS flows.	YES	ignore
Redundant DL NG-U UP TNL Information	O		UP Transport Layer Information 9.3.2.2	NG-RAN node endpoint of the NG-U transport bearer, for delivery of redundant DL PDUs.	YES	ignore
Redundant DL NG-U TNL Information Reused	O		ENUMERATED (true, …)	Indicates that Redundant DL NG-U TNL Information has been reused.	YES	ignore
Additional Redundant DL QoS Flow per TNL Information	O		QoS Flow per TNL Information List 9.3.2.1	NG-RAN node endpoint of the additional NG-U transport bearer(s) for delivery of Redundant DL PDUs for split PDU session, together with associated QoS flows.	YES	ignore
Used RSN Information	O		Redundant PDU Session Information 9.3.1.136		YES	ignore
Global RAN Node ID of Secondary NG-RAN Node	O		Global RAN Node ID 9.3.1.5		YES	ignore
MBS Support Indicator	O		9.3.1.210		YES	ignore
PDU Set based Handling Indicator	O		9.3.1.268		YES	ignore
ECN Marking or Congestion Information Reporting Status	O		9.3.1.267		YES	ignore

Range bound	Explanation
maxnoofQoSFlows	Maximum no. of QoS flows allowed within one PDU session. Value is 64.

9.3.4.9 Path Switch Request Acknowledge Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
UL NG-U UP TNL Information	O		UP Transport Layer Information 9.3.2.2	UPF endpoint of the NG-U transport bearer corresponding to the DL NG-U UP TNL Information IE received in the Path Switch Request Transfer IE.	-	
Security Indication	O		9.3.1.27		-	
Additional NG-U UP TNL Information	O		UP Transport Layer Information Pair List 9.3.2.11	NG-RAN node endpoint of the NG-U transport bearer indicated in the Path Switch Request Transfer IE and the corresponding UPF endpoint for split PDU session.	YES	ignore
Redundant UL NG-U UP TNL Information	O		UP Transport Layer Information 9.3.2.2	UPF endpoint of the NG-U transport bearer, for delivery of UL PDUs for the redundant transmission.	YES	ignore
Additional Redundant NG-U UP TNL Information	O		UP Transport Layer Information Pair List 9.3.2.11	NG-RAN node endpoint of the NG-U transport bearer for the redundant transmission indicated in the Path Switch Request Transfer IE and the corresponding UPF endpoint for split PDU session.	YES	ignore
QoS Flow Parameters List		*0..1*			YES	ignore
>QoS Flow Parameters Item		*1..<maxnoofQoSFlows>*			-	
>>QoS Flow Identifier	M		9.3.1.51		-	
>>Alternative QoS Parameters Set List	O		9.3.1.151	Indicates alternative sets of QoS parameters for the QoS flow.	-	
>>CN Packet Delay Budget Downlink	O		Extended Packet Delay Budget 9.3.1.135	Core Network Packet Delay Budget is specified in TS 23.501 [9]. This IE may be present in case of GBR QoS flows and is ignored otherwise.	YES	ignore

>>CN Packet Delay Budget Uplink	O		Extended Packet Delay Budget 9.3.1.135	Core Network Packet Delay Budget is specified in TS 23.501 [9]. This IE may be present in case of GBR QoS flows and is ignored otherwise.	YES	ignore
>>Burst Arrival Time Downlink	O		Burst Arrival Time 9.3.1.133	Indicates the downlink Burst Arrival Time of the TSC QoS flow	YES	ignore

Range bound	Explanation
maxnoofQoSFlows	Maximum no. of QoS flows allowed within one PDU session. Value is 64.

9.3.4.10 Handover Command Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
DL Forwarding UP TNL Information	O		UP Transport Layer Information 9.3.2.2	To deliver forwarded DL PDUs per PDU session tunnel.	-	
QoS Flow to be Forwarded List		*0..1*			-	
>QoS Flow to be Forwarded Item		*1..<maxnoofQoSFlows>*			-	
>>QoS Flow Identifier	M		9.3.1.51		-	
Data Forwarding Response DRB List	O		9.3.1.77		-	
Additional DL Forwarding UP TNL Information	O		QoS Flow per TNL Information List 9.3.2.1	NG-RAN node endpoint to deliver forwarded DL PDUs for split PDU session tunnel, together with associated QoS flows to be forwarded.	YES	ignore
UL Forwarding UP TNL Information	O		UP Transport Layer Information 9.3.2.2	To deliver forwarded UL PDUs	YES	reject
Additional UL Forwarding UP TNL Information	O		UP Transport Layer Information List 9.3.2.12	NG-RAN node endpoint to deliver forwarded UL PDUs for split PDU session tunnel.	YES	reject
Data Forwarding Response E-RAB List	O		9.3.1.121		YES	ignore
QoS Flow Failed to Setup List	O		QoS Flow List with Cause 9.3.1.13		YES	ignore

Range bound	Explanation
maxnoofQoSFlows	Maximum no. of QoS flows allowed within one PDU session. Value is 64.

9.3.4.11 Handover Request Acknowledge Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
DL NG-U UP TNL Information	M		UP Transport Layer Information 9.3.2.2	NG-RAN node endpoint of the NG-U transport bearer, for delivery of DL PDUs.	-	
DL Forwarding UP TNL Information	O		UP Transport Layer Information 9.3.2.2	To deliver forwarded DL PDUs.	-	
Security Result	O		9.3.1.59		-	
QoS Flow Setup Response List	M		QoS Flow List with Data Forwarding 9.3.2.13	QoS flows associated with the *DL NG-U UP TNL Information* IE.	-	
QoS Flow Failed to Setup List	O		QoS Flow List with Cause 9.3.1.13		-	
Data Forwarding Response DRB List	O		9.3.1.77		-	
Additional DL UP TNL Information for HO List		*0..1*			YES	ignore
>Additional DL UP TNL Information for HO Item		*1..<maxnoofMultiConnectivityMinusOne>*		Additional DL UP TNL Information for split PDU session, in the same order as the UPF endpoint of the additional NG-U transport bearer(s) received in the *Handover Request Transfer* IE of the Handover Request message.	-	
>>Additional DL NG-U UP TNL Information	M		UP Transport Layer Information 9.3.2.2	NG-RAN node endpoint of the additional NG-U transport bearer for delivery of DL PDUs.	-	
>>Additional QoS Flow Setup Response List	M		QoS Flow List with Data Forwarding 9.3.2.13	QoS flows associated with the *Additional DL NG-U UP TNL Information* IE.	-	
>>Additional DL Forwarding UP TNL Information	O		UP Transport Layer Information 9.3.2.2	NG-RAN node endpoint to deliver forwarded DL PDUs.	-	
>>Additional Redundant DL NG-U UP TNL Information	O		UP Transport Layer Information 9.3.2.2	NG-RAN node endpoint of the additional NG-U transport bearer for delivery of redundant DL PDUs.	YES	ignore
UL Forwarding UP TNL Information	O		UP Transport Layer Information 9.3.2.2	To deliver forwarded UL PDUs	YES	reject
Additional UL Forwarding UP TNL Information	O		UP Transport Layer Information List 9.3.2.12	NG-RAN node endpoint to deliver forwarded UL PDUs for split PDU session.	YES	reject

Data Forwarding Response E-RAB List	O		9.3.1.121		YES	ignore
Redundant DL NG-U UP TNL Information	O		UP Transport Layer Information 9.3.2.2	NG-RAN node endpoint of the NG-U transport bearer, for delivery of DL PDUs for the redundant transmission.	YES	ignore
Used RSN Information	O		Redundant PDU Session Information 9.3.1.136		YES	ignore
Global RAN Node ID of Secondary NG-RAN Node	O		Global RAN Node ID 9.3.1.5		YES	ignore
MBS Support Indicator	O		9.3.1.210		YES	ignore
PDU Set based Handling Indicator	O		9.3.1.268		YES	ignore
ECN Marking or Congestion Information Reporting Status	O		9.3.1.267		YES	ignore

Range bound	Explanation
maxnoofQoSFlows	Maximum no. of QoS flows allowed within one PDU session. Value is 64.
maxnoofMultiConnectivityMinusOne	Maximum no. of connectivity allowed for a UE minus one. Value is 3. The current version of the specification supports 1.

9.3.4.12 PDU Session Resource Release Command Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Cause	M		9.3.1.2		-	
QoS Flow Additional Information List		*0..1*			YES	ignore
>QoS Flow Additional Information Item		*1..<maxnoofQoSFlows>*			-	
>>QoS Flow Identifier	M		9.3.1.51		-	
>>Downlink TL Container	O		OCTET STRING	Containing the Set Request message specified in TS 29.585 [56].	-	

Range bound	Explanation
maxnoofQoSFlows	Maximum no. of QoS flows allowed within one PDU session. Value is 64.

9.3.4.13 PDU Session Resource Notify Released Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Cause	M		9.3.1.2		-	
Secondary RAT Usage Information	O		9.3.1.114		YES	ignore
User Plane Error Indicator	O		ENUMERATED (GTP-U Error Indication Received, …)		YES	ignore

9.3.4.14 Handover Required Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Direct Forwarding Path Availability	O		9.3.1.64	

9.3.4.15 Path Switch Request Setup Failed Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Cause	M		9.3.1.2	

9.3.4.16 PDU Session Resource Setup Unsuccessful Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Cause	M		9.3.1.2	
Criticality Diagnostics	O		9.3.1.3	

9.3.4.17 PDU Session Resource Modify Unsuccessful Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Cause	M		9.3.1.2	
Criticality Diagnostics	O		9.3.1.3	

9.3.4.18 Handover Preparation Unsuccessful Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Cause	M		9.3.1.2	

9.3.4.19 Handover Resource Allocation Unsuccessful Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Cause	M		9.3.1.2	
Criticality Diagnostics	O		9.3.1.3	

9.3.4.20 Path Switch Request Unsuccessful Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Cause	M		9.3.1.2	

9.3.4.21 PDU Session Resource Release Response Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Secondary RAT Usage Information	O		9.3.1.114		YES	ignore
QoS Flow Additional Information List		*0..1*			YES	ignore
>QoS Flow Additional Information Item		*1..<maxnoofQoSFlows>*			-	
>>QoS Flow Identifier	M		9.3.1.51		-	
>>Uplink TL Container	O		OCTET STRING	Containing the Set Response message specified in TS 29.585 [56].	-	

Range bound	Explanation
maxnoofQoSFlows	Maximum no. of QoS flows allowed within one PDU session. Value is 64.

9.3.4.22 PDU Session Resource Modify Indication Unsuccessful Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Cause	M		9.3.1.2	

9.3.4.23 Secondary RAT Data Usage Report Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Secondary RAT Usage Information	O		9.3.1.114	

9.3.4.24 UE Context Resume Request Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
QoS Flow Failed to Resume List	O		QoS Flow List with Cause 9.3.1.13	

9.3.4.25 UE Context Resume Response Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
QoS Flow Failed to Resume List	O		QoS Flow List with Cause 9.3.1.13	

9.3.4.26 UE Context Suspend Request Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Suspend Indicator	O		ENUMERATED (true, …)	

9.3.5 MB-SMF Related IEs

9.3.5.1 Void

9.3.5.2 Void

9.3.5.3 MBS Session Setup or Modification Request Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
MBS Session TNL Information 5GC	O		9.3.2.15		YES	reject
MBS QoS Flows To Be Setup or Modified List	M		MBS QoS Flows To Be Setup List 9.3.1.236		YES	reject
MBS Session FSA ID List		*0..<maxnoofMBSFSAs>*			YES	ignore
>MBS Frequency Selection Area Identity	M		OCTET STRING (SIZE(3))		-	
Supported UE Type List		*0..<maxnoofUETypes>*			YES	ignore
>Supported UE Type	M		ENUMERATED (Non-(e)RedCap UE, (e)RedCap UE, ...)		-	
MBS NG-U Failure Indication	O		9.3.2.18		YES	reject

Range bound	Explanation
maxnoofMBSQoSFlows	Maximum no. of QoS Flows allowed within one MBS session. Value is 64.
maxnoofMBSFSAs	Maximum no. of FSA IDs for one MBS session. Value is 64.
maxnoofUETypes	Maximum no. of associated UE types. Value is 8.

9.3.5.4 Void

9.3.5.5 MBS Session Setup or Modification Response Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MBS Session TNL Information NG-RAN	O		9.3.2.17	

9.3.5.6 MBS Session Setup or Modification Failure Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Cause	M		9.3.1.2	
Criticality Diagnostics	O		9.3.1.3	

9.3.5.7 MBS Distribution Setup Request Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
MBS Session ID	M		9.3.1.206		-	
MBS Area Session ID	O		9.3.1.207		-	
Shared NG-U Unicast TNL Information	O		UP Transport Layer Information 9.3.2.2	NG-RAN node endpoint of the NG-U transport bearer, for delivery of DL PDUs.	-	
TAI MBS Support List		*0..1*		Supported TAs in the NG-RAN node.	YES	ignore
>TAI MBS Support Item		*1..< maxnoofSupportedTAIforMBS >*			-	
>>TAI	M		9.3.3.11		-	

Range bound	Explanation
maxnoofSupportedTAIforMBS	Maximum no. of TAs supported in the NG-RAN node, indicated for MBS purposes. Value is 256.

9.3.5.8 MBS Distribution Setup Response Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MBS Session ID	M		9.3.1.206	
MBS Area Session ID	O		9.3.1.207	
Shared NG-U Multicast TNL Information	O		9.3.2.16	
MBS QoS Flows To Be Setup List	M		9.3.1.236	
MBS Session Status	M		9.3.1.217	
MBS Service Area	O		9.3.1.208	

Range bound	Explanation
maxnoofMBSQoSFlows	Maximum no. of QoS Flows allowed within one MBS session. Value is 64.

9.3.5.9 MBS Distribution Setup Unsuccessful Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MBS Session ID	M		9.3.1.206	
MBS Area Session ID	O		9.3.1.207	
Cause	M		9.3.1.2	
Criticality Diagnostics	O		9.3.1.3	

9.3.5.10 MBS Distribution Release Request Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MBS Session ID	M		9.3.1.206	
MBS Area Session ID	O		9.3.1.207	
Shared NG-U Unicast TNL Information	O		UP Transport Layer Information 9.3.2.2	NG-RAN node endpoint of the NG-U transport bearer, for delivery of DL PDUs.
Cause	M		9.3.1.2	

9.3.5.11 Multicast Session Activation Request Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MBS Session ID	M		9.3.1.206	

9.3.5.12 Multicast Session Deactivation Request Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MBS Session ID	M		9.3.1.206	

9.3.5.13 Multicast Session Update Request Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
MBS Session ID	M		9.3.1.206		YES	reject
MBS Service Area	O		9.3.1.208		YES	reject
MBS QoS Flows To Be Setup or Modified List	O		MBS QoS Flows To Be Setup List 9.3.1.236		YES	reject
MBS QoS Flow To Release List	O		QoS Flow List with Cause 9.3.1.13	This IE indicates the MBS QoS flow Identifiers of the MBS QoS flows to be released.	YES	reject
MBS Session TNL Information 5GC	O		9.3.2.15		YES	reject
MBS User Plane Failure Indication	O		9.3.2.19		YES	reject

Range bound	Explanation
maxnoofMBSQoSFlows	Maximum no. of QoS Flows allowed within one MBS session. Value is 64.

9.3.5.14 MBS Session Release Response Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MBS Session TNL Information NG-RAN	O		9.3.2.17	

9.3.5.15 Broadcast Transport Request Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MBS Session ID	M		9.3.1.206	
MBS Session TNL Information NG-RAN	M		9.3.2.17	

9.3.5.16 Broadcast Transport Response Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MBS Session ID	M		9.3.1.206	

9.3.5.17 Broadcast Transport Failure Transfer

This IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MBS Session ID	M		9.3.1.206	
Cause	M		9.3.1.2	
Criticality Diagnostics	O		9.3.1.3	

9.3.6 AIOTF Related IEs

9.3.6.1 Inventory Request Transfer

This IE provides the inventory request related information from the AIOTF to the NG-RAN node.

In indirect communication, this IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
A-IoT Correlation Identifier	M		9.3.3.69		YES	reject
A-IoT Device Identification Requested	M		9.3.3.73		YES	reject
Requested Service Area Information	M		9.3.3.71		YES	reject
Inventory Assistance Information	M		9.3.3.72		YES	reject
Follow on Command Indication	O		ENUMERATED (true, ...)	This IE indicates that there is command(s) to be transmitted.	YES	reject
A-IoT Security Information	M		9.3.3.78		YES	reject

9.3.6.2 Inventory Response Transfer

This IE provides the inventory response related information from the NG-RAN node to the AIOTF.

In indirect communication, this IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
A-IoT Correlation Identifier	M		9.3.3.69	
Criticality Diagnostics	O		9.3.1.3	

9.3.6.3 Inventory Failure Transfer

This IE provides the inventory failure related information from the NG-RAN node to the AIOTF.

In indirect communication, this IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
A-IoT Correlation Identifier	M		9.3.3.69	
Cause	M		9.3.1.2	
Criticality Diagnostics	O		9.3.1.3	

9.3.6.4 Inventory Report Transfer

This IE provides the inventory report related information from the NG-RAN node to the AIOTF.

In indirect communication, this IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
A-IoT Correlation Identifier	M		9.3.3.69	
Global gNB ID	M		9.3.1.6	
Reader Report List		*0..1*		
>Reader Report Item		*1..< maxnoofReaders>*		
>>Reader Index	M		9.3.1.276	
>>Device Report List		*1*		
>>>Device Report Item		*1..<maxnoofDevices>*		
>>>>A-IoT NAS PDU	M		OCTET STRING	
>>>>RAN A-IoT Device NGAP ID	O		9.3.3.74	
Inventory Complete Indication	O		ENUMERATED (true, ...)	

Range bound	Explanation
maxnoofReaders	Maximum no. of Readers served by a gNB. Value is 65535.
maxnoofDevices	Maximum no. of Devices within a reader. Value is 65535.

9.3.6.5 Command Request Transfer

This IE provides the command request related information from the AIOTF to the NG-RAN node.

In indirect communication, this IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
A-IoT Correlation Identifier	M		9.3.3.69		YES	reject
RAN A-IoT Device NGAP ID	M		9.3.3.74		YES	reject
A-IoT NAS PDU	M		OCTET STRING		YES	reject
Command Assistance Information	M		9.3.3.75		YES	reject

9.3.6.6 Command Response Transfer

This IE provides the command response related information from the NG-RAN node to the AIOTF.

In indirect communication, this IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
A-IoT Correlation Identifier	M		9.3.3.69	
RAN A-IoT Device NGAP ID	M		9.3.3.74	
A-IoT NAS PDU	M		OCTET STRING	
Criticality Diagnostics	O		9.3.1.3	

9.3.6.7 Command Failure Transfer

This IE provides the command failure related information from the NG-RAN node to the AIOTF.

In indirect communication, this IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
A-IoT Correlation Identifier	M		9.3.3.69	
RAN A-IoT Device NGAP ID	M		9.3.3.74	
Cause	M		9.3.1.2	
Criticality Diagnostics	O		9.3.1.3	

9.3.6.8 AIOT Session Release Command Transfer

This IE provides the A-IoT session release command related information from the AIOTF to the NG-RAN node.

In indirect communication, this IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
A-IoT Correlation Identifier	M		9.3.3.69		YES	reject
Cause	M		9.3.1.2		YES	ignore

9.3.6.9 AIOT Session Release Complete Transfer

This IE provides the A-IoT session release complete related information from the NG-RAN node to the AIOTF.

In indirect communication, this IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
A-IoT Correlation Identifier	M		9.3.3.69	
Criticality Diagnostics	O		9.3.1.3	

9.3.6.10 AIOT Session Release Request Transfer

This IE provides the A-IoT session release request related information from the NG-RAN node to the AIOTF.

In indirect communication, this IE is transparent to the AMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
A-IoT Correlation Identifier	M		9.3.3.69	
Cause	M		9.3.1.2	

9.4 Message and Information Element Abstract Syntax (with ASN.1)

9.4.1 General

NGAP ASN.1 definition conforms to ITU-T Rec. X.691 [4], ITU-T Rec. X.680 [5] and ITU-T Rec. X.681 [6].

The ASN.1 definition specifies the structure and content of NGAP messages. NGAP messages can contain any IEs specified in the object set definitions for that message without the order or number of occurrence being restricted by ASN.1. However, for this version of the standard, a sending entity shall construct an NGAP message according to the PDU definitions module and with the following additional rules:

- IEs shall be ordered (in an IE container) in the order they appear in object set definitions.
- Object set definitions specify how many times IEs may appear. An IE shall appear exactly once if the presence field in an object has value "mandatory". An IE may appear at most once if the presence field in an object has value "optional" or "conditional". If in a tabular format there is multiplicity specified for an IE (i.e., an IE list) then in the corresponding ASN.1 definition the list definition is separated into two parts. The first part defines an IE container list where the list elements reside. The second part defines list elements. The IE container list appears as an IE of its own. For this version of the standard an IE container list may contain only one kind of list elements.

NOTE: In the above "IE" means an IE in the object set with an explicit ID. If one IE needs to appear more than once in one object set, then the different occurrences will have different IE IDs.

If an NGAP message that is not constructed as defined above is received, this shall be considered as Abstract Syntax Error, and the message shall be handled as defined for Abstract Syntax Error in clause 10.3.6.

9.4.2 Usage of private message mechanism for non-standard use

The private message mechanism for non-standard use may be used:

- for special operator- (and/or vendor) specific features considered not to be part of the basic functionality, i.e., the functionality required for a complete and high-quality specification in order to guarantee multivendor interoperability;
- by vendors for research purposes, e.g., to implement and evaluate new algorithms/features before such features are proposed for standardisation.

The private message mechanism shall not be used for basic functionality. Such functionality shall be standardised.

9.4.3 Elementary Procedure Definitions

```
-- ASN1START
-- **************************************************************
--
-- Elementary Procedure definitions
--
-- **************************************************************

NGAP-PDU-Descriptions  {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
ngran-Access (22) modules (3) ngap (1) version1 (1) ngap-PDU-Descriptions (0)}

DEFINITIONS AUTOMATIC TAGS ::=

BEGIN

-- **************************************************************
--
-- IE parameter types from other modules.
--
-- **************************************************************

IMPORTS

    Criticality,
    ProcedureCode
FROM NGAP-CommonDataTypes

    AMFConfigurationUpdate,
    AMFConfigurationUpdateAcknowledge,
    AMFConfigurationUpdateFailure,
    AMFCPRelocationIndication,
    AMFStatusIndication,
    BroadcastSessionModificationFailure,
    BroadcastSessionModificationRequest,
    BroadcastSessionModificationResponse,
    BroadcastSessionReleaseRequest,
    BroadcastSessionReleaseRequired,
    BroadcastSessionReleaseResponse,
    BroadcastSessionSetupFailure,
    BroadcastSessionSetupRequest,
    BroadcastSessionSetupResponse,
    BroadcastSessionTransportFailure,
    BroadcastSessionTransportRequest,
    BroadcastSessionTransportResponse,
    CellTrafficTrace,
    ConnectionEstablishmentIndication,
    DeactivateTrace,
    DistributionReleaseRequest,
    DistributionReleaseResponse,
    DistributionSetupFailure,
    DistributionSetupRequest,
```

```
    DistributionSetupResponse,
    DownlinkNASTransport,
    DownlinkNonUEAssociatedNRPPaTransport,
    DownlinkRANConfigurationTransfer,
    DownlinkRANEarlyStatusTransfer,
    DownlinkRANStatusTransfer,
    DownlinkUEAssociatedNRPPaTransport,
    ErrorIndication,
    HandoverCancel,
    HandoverCancelAcknowledge,
    HandoverCommand,
    HandoverFailure,
    HandoverNotify,
    HandoverPreparationFailure,
    HandoverRequest,
    HandoverRequestAcknowledge,
    HandoverRequired,
    HandoverSuccess,
    InitialContextSetupFailure,
    InitialContextSetupRequest,
    InitialContextSetupResponse,
    InitialUEMessage,
    LocationReport,
    LocationReportingControl,
    LocationReportingFailureIndication,
    MTCommunicationHandlingRequest,
    MTCommunicationHandlingResponse,
    MTCommunicationHandlingFailure,
    MulticastSessionActivationFailure,
    MulticastSessionActivationRequest,
    MulticastSessionActivationResponse,
    MulticastSessionDeactivationRequest,
    MulticastSessionDeactivationResponse,
    MulticastSessionUpdateFailure,
    MulticastSessionUpdateRequest,
    MulticastSessionUpdateResponse,
    MulticastGroupPaging,
    NASNonDeliveryIndication,
    NGReset,
    NGResetAcknowledge,
    NGRemovalFailure,
    NGRemovalRequest,
    NGRemovalResponse,
    NGSetupFailure,
    NGSetupRequest,
    NGSetupResponse,
    OverloadStart,
    OverloadStop,
    Paging,
    PathSwitchRequest,
    PathSwitchRequestAcknowledge,
    PathSwitchRequestFailure,
    PDUSessionResourceModifyConfirm,
    PDUSessionResourceModifyIndication,
```

```
    PDUSessionResourceModifyRequest,
    PDUSessionResourceModifyResponse,
    PDUSessionResourceNotify,
    PDUSessionResourceReleaseCommand,
    PDUSessionResourceReleaseResponse,
    PDUSessionResourceSetupRequest,
    PDUSessionResourceSetupResponse,
    PrivateMessage,
    PWSCancelRequest,
    PWSCancelResponse,
    PWSFailureIndication,
    PWSRestartIndication,
    RANConfigurationUpdate,
    RANConfigurationUpdateAcknowledge,
    RANConfigurationUpdateFailure,
    RANCPRelocationIndication,
    RANPagingRequest,
    RerouteNASRequest,
    RetrieveUEInformation,
    RRCInactiveTransitionReport,
    SecondaryRATDataUsageReport,
    TimingSynchronisationStatusRequest,
    TimingSynchronisationStatusResponse,
    TimingSynchronisationStatusFailure,
    TimingSynchronisationStatusReport,
    TraceFailureIndication,
    TraceStart,
    UEContextModificationFailure,
    UEContextModificationRequest,
    UEContextModificationResponse,
    UEContextReleaseCommand,
    UEContextReleaseComplete,
    UEContextReleaseRequest,
    UEContextResumeRequest,
    UEContextResumeResponse,
    UEContextResumeFailure,
    UEContextSuspendRequest,
    UEContextSuspendResponse,
    UEContextSuspendFailure,
    UEInformationTransfer,
    UERadioCapabilityCheckRequest,
    UERadioCapabilityCheckResponse,
    UERadioCapabilityIDMappingRequest,
    UERadioCapabilityIDMappingResponse,
    UERadioCapabilityInfoIndication,
    UETNLABindingReleaseRequest,
    UplinkNASTransport,
    UplinkNonUEAssociatedNRPPaTransport,
    UplinkRANConfigurationTransfer,
    UplinkRANEarlyStatusTransfer,
    UplinkRANStatusTransfer,
    UplinkUEAssociatedNRPPaTransport,
    WriteReplaceWarningRequest,
    WriteReplaceWarningResponse,
```

```
    UplinkRIMInformationTransfer,
    DownlinkRIMInformationTransfer,
    InventoryRequest,
    InventoryResponse,
    InventoryFailure,
    InventoryReport,
    CommandRequest,
    CommandResponse,
    CommandFailure,
    AIOTSessionReleaseCommand,
    AIOTSessionReleaseComplete,
    AIOTSessionReleaseRequest


FROM NGAP-PDU-Contents

    id-AMFConfigurationUpdate,
    id-AMFCPRelocationIndication,
    id-AMFStatusIndication,
    id-BroadcastSessionModification,
    id-BroadcastSessionRelease,
    id-BroadcastSessionReleaseRequired,
    id-BroadcastSessionSetup,
    id-BroadcastSessionTransport,
    id-CellTrafficTrace,
    id-ConnectionEstablishmentIndication,
    id-DeactivateTrace,
    id-DistributionRelease,
    id-DistributionSetup,
    id-DownlinkNASTransport,
    id-DownlinkNonUEAssociatedNRPPaTransport,
    id-DownlinkRANConfigurationTransfer,
    id-DownlinkRANEarlyStatusTransfer,
    id-DownlinkRANStatusTransfer,
    id-DownlinkRIMInformationTransfer,
    id-DownlinkUEAssociatedNRPPaTransport,
    id-ErrorIndication,
    id-HandoverCancel,
    id-HandoverNotification,
    id-HandoverPreparation,
    id-HandoverResourceAllocation,
    id-HandoverSuccess,
    id-InitialContextSetup,
    id-InitialUEMessage,
    id-LocationReport,
    id-LocationReportingControl,
    id-LocationReportingFailureIndication,
    id-MTCommunicationHandling,
    id-MulticastGroupPaging,
    id-MulticastSessionActivation,
    id-MulticastSessionDeactivation,
    id-MulticastSessionUpdate,
    id-NASNonDeliveryIndication,
    id-NGReset,
```

```
    id-NGRemoval,
    id-NGSetup,
    id-OverloadStart,
    id-OverloadStop,
    id-Paging,
    id-PathSwitchRequest,
    id-PDUSessionResourceModify,
    id-PDUSessionResourceModifyIndication,
    id-PDUSessionResourceNotify,
    id-PDUSessionResourceRelease,
    id-PDUSessionResourceSetup,
    id-PrivateMessage,
    id-PWSCancel,
    id-PWSFailureIndication,
    id-PWSRestartIndication,
    id-RANConfigurationUpdate,
    id-RANCPRelocationIndication,
    id-RANPagingRequest,
    id-RerouteNASRequest,
    id-RetrieveUEInformation,
    id-RRCInactiveTransitionReport,
    id-SecondaryRATDataUsageReport,
    id-TimingSynchronisationStatus,
    id-TimingSynchronisationStatusReport,
    id-TraceFailureIndication,
    id-TraceStart,
    id-UEContextModification,
    id-UEContextRelease,
    id-UEContextReleaseRequest,
    id-UEContextResume,
    id-UEContextSuspend,
    id-UEInformationTransfer,
    id-UERadioCapabilityCheck,
    id-UERadioCapabilityIDMapping,
    id-UERadioCapabilityInfoIndication,
    id-UETNLABindingRelease,
    id-UplinkNASTransport,
    id-UplinkNonUEAssociatedNRPPaTransport,
    id-UplinkRANConfigurationTransfer,
    id-UplinkRANEarlyStatusTransfer,
    id-UplinkRANStatusTransfer,
    id-UplinkRIMInformationTransfer,
    id-UplinkUEAssociatedNRPPaTransport,
    id-WriteReplaceWarning,
    id-InventoryRequest,
    id-InventoryReport,
    id-CommandRequest,
    id-AIOTSessionRelease,
    id-AIOTSessionReleaseRequest


FROM NGAP-Constants;

-- **************************************************************
```

```
--
-- Interface Elementary Procedure Class
--
-- **************************************************************

NGAP-ELEMENTARY-PROCEDURE ::= CLASS {
    &InitiatingMessage              ,
    &SuccessfulOutcome                          OPTIONAL,
    &UnsuccessfulOutcome                        OPTIONAL,
    &procedureCode              ProcedureCode   UNIQUE,
    &criticality                Criticality DEFAULT ignore
}

WITH SYNTAX {
    INITIATING MESSAGE          &InitiatingMessage
    [SUCCESSFUL OUTCOME         &SuccessfulOutcome]
    [UNSUCCESSFUL OUTCOME       &UnsuccessfulOutcome]
    PROCEDURE CODE              &procedureCode
    [CRITICALITY                &criticality]
}

-- **************************************************************
--
-- Interface PDU Definition
--
-- **************************************************************

NGAP-PDU ::= CHOICE {
    initiatingMessage           InitiatingMessage,
    successfulOutcome           SuccessfulOutcome,
    unsuccessfulOutcome         UnsuccessfulOutcome,
    ...
}

InitiatingMessage ::= SEQUENCE {
    procedureCode   NGAP-ELEMENTARY-PROCEDURE.&procedureCode        ({NGAP-ELEMENTARY-PROCEDURES}),
    criticality     NGAP-ELEMENTARY-PROCEDURE.&criticality          ({NGAP-ELEMENTARY-PROCEDURES}{@procedureCode}),
    value           NGAP-ELEMENTARY-PROCEDURE.&InitiatingMessage    ({NGAP-ELEMENTARY-PROCEDURES}{@procedureCode})
}

SuccessfulOutcome ::= SEQUENCE {
    procedureCode   NGAP-ELEMENTARY-PROCEDURE.&procedureCode        ({NGAP-ELEMENTARY-PROCEDURES}),
    criticality     NGAP-ELEMENTARY-PROCEDURE.&criticality          ({NGAP-ELEMENTARY-PROCEDURES}{@procedureCode}),
    value           NGAP-ELEMENTARY-PROCEDURE.&SuccessfulOutcome    ({NGAP-ELEMENTARY-PROCEDURES}{@procedureCode})
}

UnsuccessfulOutcome ::= SEQUENCE {
    procedureCode   NGAP-ELEMENTARY-PROCEDURE.&procedureCode        ({NGAP-ELEMENTARY-PROCEDURES}),
    criticality     NGAP-ELEMENTARY-PROCEDURE.&criticality          ({NGAP-ELEMENTARY-PROCEDURES}{@procedureCode}),
    value           NGAP-ELEMENTARY-PROCEDURE.&UnsuccessfulOutcome  ({NGAP-ELEMENTARY-PROCEDURES}{@procedureCode})
}

-- **************************************************************
--
```

```
-- Interface Elementary Procedure List
--
-- ************************************************************

NGAP-ELEMENTARY-PROCEDURES NGAP-ELEMENTARY-PROCEDURE ::= {
    NGAP-ELEMENTARY-PROCEDURES-CLASS-1          |
    NGAP-ELEMENTARY-PROCEDURES-CLASS-2,
    ...
}

NGAP-ELEMENTARY-PROCEDURES-CLASS-1 NGAP-ELEMENTARY-PROCEDURE ::= {
    aMFConfigurationUpdate                      |
    broadcastSessionModification                |
    broadcastSessionRelease                     |
    broadcastSessionSetup                       |
    broadcastSessionTransport                   |
    distributionSetup                           |
    distributionRelease                         |
    handoverCancel                              |
    handoverPreparation                         |
    handoverResourceAllocation                  |
    initialContextSetup                         |
    mTCommunicationHandling                     |
    multicastSessionActivation                  |
    multicastSessionDeactivation                |
    multicastSessionUpdate                      |
    nGReset                                     |
    nGSetup                                     |
    pathSwitchRequest                           |
    pDUSessionResourceModify                    |
    pDUSessionResourceModifyIndication          |
    pDUSessionResourceRelease                   |
    pDUSessionResourceSetup                     |
    pWSCancel                                   |
    rANConfigurationUpdate                      |
    timingSynchronisationStatus                 |
    uEContextModification                       |
    uEContextRelease                            |
    uEContextResume                             |
    uEContextSuspend                            |
    uERadioCapabilityCheck                      |
    uERadioCapabilityIDMapping                  |
    writeReplaceWarning                         |
    nGRemoval                                   |
    inventoryRequest                            |
    commandRequest                              |
    aIOTSessionRelease                         ,
    ...
}

NGAP-ELEMENTARY-PROCEDURES-CLASS-2 NGAP-ELEMENTARY-PROCEDURE ::= {
    aMFCPRelocationIndication                   |
    aMFStatusIndication                         |
    broadcastSessionReleaseRequired             |
```

```
    cellTrafficTrace                        |
    connectionEstablishmentIndication       |
    deactivateTrace                         |
    downlinkNASTransport                    |
    downlinkNonUEAssociatedNRPPaTransport   |
    downlinkRANConfigurationTransfer        |
    downlinkRANEarlyStatusTransfer          |
    downlinkRANStatusTransfer               |
    downlinkRIMInformationTransfer          |
    downlinkUEAssociatedNRPPaTransport      |
    errorIndication                         |
    handoverNotification                    |
    handoverSuccess                         |
    initialUEMessage                        |
    locationReport                          |
    locationReportingControl                |
    locationReportingFailureIndication      |
    multicastGroupPaging                    |
    nASNonDeliveryIndication                |
    overloadStart                           |
    overloadStop                            |
    paging                                  |
    pDUSessionResourceNotify                |
    privateMessage                          |
    pWSFailureIndication                    |
    pWSRestartIndication                    |
    rANCPRelocationIndication               |
    rANPagingRequest                        |
    rerouteNASRequest                       |
    retrieveUEInformation                   |
    rRCInactiveTransitionReport             |
    secondaryRATDataUsageReport             |
    timingSynchronisationStatusReport       |
    traceFailureIndication                  |
    traceStart                              |
    uEContextReleaseRequest                 |
    uEInformationTransfer                   |
    uERadioCapabilityInfoIndication         |
    uETNLABindingRelease                    |
    uplinkNASTransport                      |
    uplinkNonUEAssociatedNRPPaTransport     |
    uplinkRANConfigurationTransfer          |
    uplinkRANEarlyStatusTransfer            |
    uplinkRANStatusTransfer                 |
    uplinkRIMInformationTransfer            |
    uplinkUEAssociatedNRPPaTransport        |
    inventoryReport                         |
    aIOTSessionReleaseRequest               ,
    ...

}

-- **************************************************************
--
```

```
-- Interface Elementary Procedures
--
-- **************************************************************

aMFConfigurationUpdate NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      AMFConfigurationUpdate
    SUCCESSFUL OUTCOME      AMFConfigurationUpdateAcknowledge
    UNSUCCESSFUL OUTCOME    AMFConfigurationUpdateFailure
    PROCEDURE CODE          id-AMFConfigurationUpdate
    CRITICALITY             reject
}

aMFCPRelocationIndication NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      AMFCPRelocationIndication
    PROCEDURE CODE          id-AMFCPRelocationIndication
    CRITICALITY             reject
}

aMFStatusIndication NGAP-ELEMENTARY-PROCEDURE ::={
    INITIATING MESSAGE      AMFStatusIndication
    PROCEDURE CODE          id-AMFStatusIndication
    CRITICALITY             ignore
}

broadcastSessionModification NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      BroadcastSessionModificationRequest
    SUCCESSFUL OUTCOME      BroadcastSessionModificationResponse
    UNSUCCESSFUL OUTCOME    BroadcastSessionModificationFailure
    PROCEDURE CODE          id-BroadcastSessionModification
    CRITICALITY             reject
}

broadcastSessionRelease NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      BroadcastSessionReleaseRequest
    SUCCESSFUL OUTCOME      BroadcastSessionReleaseResponse
    PROCEDURE CODE          id-BroadcastSessionRelease
    CRITICALITY             reject
}

broadcastSessionReleaseRequired NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      BroadcastSessionReleaseRequired
    PROCEDURE CODE          id-BroadcastSessionReleaseRequired
    CRITICALITY             reject
}

broadcastSessionSetup NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      BroadcastSessionSetupRequest
    SUCCESSFUL OUTCOME      BroadcastSessionSetupResponse
    UNSUCCESSFUL OUTCOME    BroadcastSessionSetupFailure
    PROCEDURE CODE          id-BroadcastSessionSetup
    CRITICALITY             reject
}

broadcastSessionTransport NGAP-ELEMENTARY-PROCEDURE ::= {
```

```
    INITIATING MESSAGE      BroadcastSessionTransportRequest
    SUCCESSFUL OUTCOME      BroadcastSessionTransportResponse
    UNSUCCESSFUL OUTCOME    BroadcastSessionTransportFailure
    PROCEDURE CODE          id-BroadcastSessionTransport
    CRITICALITY             reject
}

cellTrafficTrace NGAP-ELEMENTARY-PROCEDURE ::={
    INITIATING MESSAGE      CellTrafficTrace
    PROCEDURE CODE          id-CellTrafficTrace
    CRITICALITY             ignore
}

connectionEstablishmentIndication NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      ConnectionEstablishmentIndication
    PROCEDURE CODE          id-ConnectionEstablishmentIndication
    CRITICALITY             reject
}

deactivateTrace NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      DeactivateTrace
    PROCEDURE CODE          id-DeactivateTrace
    CRITICALITY             ignore
}

distributionSetup NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      DistributionSetupRequest
    SUCCESSFUL OUTCOME      DistributionSetupResponse
    UNSUCCESSFUL OUTCOME    DistributionSetupFailure
    PROCEDURE CODE          id-DistributionSetup
    CRITICALITY             reject
}

distributionRelease NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      DistributionReleaseRequest
    SUCCESSFUL OUTCOME      DistributionReleaseResponse
    PROCEDURE CODE          id-DistributionRelease
    CRITICALITY             reject
}

downlinkNASTransport NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      DownlinkNASTransport
    PROCEDURE CODE          id-DownlinkNASTransport
    CRITICALITY             ignore
}

downlinkNonUEAssociatedNRPPaTransport NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      DownlinkNonUEAssociatedNRPPaTransport
    PROCEDURE CODE          id-DownlinkNonUEAssociatedNRPPaTransport
    CRITICALITY             ignore
}

downlinkRANConfigurationTransfer NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      DownlinkRANConfigurationTransfer
```

```
    PROCEDURE CODE          id-DownlinkRANConfigurationTransfer
    CRITICALITY             ignore
}

downlinkRANEarlyStatusTransfer NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      DownlinkRANEarlyStatusTransfer
    PROCEDURE CODE          id-DownlinkRANEarlyStatusTransfer
    CRITICALITY             ignore
}

downlinkRANStatusTransfer NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      DownlinkRANStatusTransfer
    PROCEDURE CODE          id-DownlinkRANStatusTransfer
    CRITICALITY             ignore
}

downlinkUEAssociatedNRPPaTransport NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      DownlinkUEAssociatedNRPPaTransport
    PROCEDURE CODE          id-DownlinkUEAssociatedNRPPaTransport
    CRITICALITY             ignore
}

errorIndication NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      ErrorIndication
    PROCEDURE CODE          id-ErrorIndication
    CRITICALITY             ignore
}

handoverCancel NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      HandoverCancel
    SUCCESSFUL OUTCOME      HandoverCancelAcknowledge
    PROCEDURE CODE          id-HandoverCancel
    CRITICALITY             reject
}

handoverNotification NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      HandoverNotify
    PROCEDURE CODE          id-HandoverNotification
    CRITICALITY             ignore
}

handoverPreparation NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      HandoverRequired
    SUCCESSFUL OUTCOME      HandoverCommand
    UNSUCCESSFUL OUTCOME    HandoverPreparationFailure
    PROCEDURE CODE          id-HandoverPreparation
    CRITICALITY             reject
}

handoverResourceAllocation NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      HandoverRequest
    SUCCESSFUL OUTCOME      HandoverRequestAcknowledge
    UNSUCCESSFUL OUTCOME    HandoverFailure
    PROCEDURE CODE          id-HandoverResourceAllocation
```

```
    CRITICALITY             reject
}

handoverSuccess NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      HandoverSuccess
    PROCEDURE CODE          id-HandoverSuccess
    CRITICALITY             ignore
}

initialContextSetup NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      InitialContextSetupRequest
    SUCCESSFUL OUTCOME      InitialContextSetupResponse
    UNSUCCESSFUL OUTCOME    InitialContextSetupFailure
    PROCEDURE CODE          id-InitialContextSetup
    CRITICALITY             reject
}

initialUEMessage NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      InitialUEMessage
    PROCEDURE CODE          id-InitialUEMessage
    CRITICALITY             ignore
}

locationReport NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      LocationReport
    PROCEDURE CODE          id-LocationReport
    CRITICALITY             ignore
}

locationReportingControl NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      LocationReportingControl
    PROCEDURE CODE          id-LocationReportingControl
    CRITICALITY             ignore
}

locationReportingFailureIndication NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      LocationReportingFailureIndication
    PROCEDURE CODE          id-LocationReportingFailureIndication
    CRITICALITY             ignore
}

mTCommunicationHandling NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      MTCommunicationHandlingRequest
    SUCCESSFUL OUTCOME      MTCommunicationHandlingResponse
    UNSUCCESSFUL OUTCOME    MTCommunicationHandlingFailure
    PROCEDURE CODE          id-MTCommunicationHandling
    CRITICALITY             reject
}

multicastSessionActivation NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      MulticastSessionActivationRequest
    SUCCESSFUL OUTCOME      MulticastSessionActivationResponse
    UNSUCCESSFUL OUTCOME    MulticastSessionActivationFailure
    PROCEDURE CODE          id-MulticastSessionActivation
```

```
    CRITICALITY             reject
}

multicastSessionDeactivation NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      MulticastSessionDeactivationRequest
    SUCCESSFUL OUTCOME      MulticastSessionDeactivationResponse
    PROCEDURE CODE          id-MulticastSessionDeactivation
    CRITICALITY             reject
}

multicastSessionUpdate NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      MulticastSessionUpdateRequest
    SUCCESSFUL OUTCOME      MulticastSessionUpdateResponse
    UNSUCCESSFUL OUTCOME    MulticastSessionUpdateFailure
    PROCEDURE CODE          id-MulticastSessionUpdate
    CRITICALITY             reject
}

multicastGroupPaging NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      MulticastGroupPaging
    PROCEDURE CODE          id-MulticastGroupPaging
    CRITICALITY             ignore
}

nASNonDeliveryIndication NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      NASNonDeliveryIndication
    PROCEDURE CODE          id-NASNonDeliveryIndication
    CRITICALITY             ignore
}

nGReset NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      NGReset
    SUCCESSFUL OUTCOME      NGResetAcknowledge
    PROCEDURE CODE          id-NGReset
    CRITICALITY             reject
}

nGSetup NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      NGSetupRequest
    SUCCESSFUL OUTCOME      NGSetupResponse
    UNSUCCESSFUL OUTCOME    NGSetupFailure
    PROCEDURE CODE          id-NGSetup
    CRITICALITY             reject
}

nGRemoval NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      NGRemovalRequest
    SUCCESSFUL OUTCOME      NGRemovalResponse
    UNSUCCESSFUL OUTCOME    NGRemovalFailure
    PROCEDURE CODE          id-NGRemoval
    CRITICALITY             reject
}

overloadStart NGAP-ELEMENTARY-PROCEDURE ::= {
```

```
    INITIATING MESSAGE      OverloadStart
    PROCEDURE CODE          id-OverloadStart
    CRITICALITY             ignore
}

overloadStop NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      OverloadStop
    PROCEDURE CODE          id-OverloadStop
    CRITICALITY             reject
}

paging NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      Paging
    PROCEDURE CODE          id-Paging
    CRITICALITY             ignore
}

pathSwitchRequest NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      PathSwitchRequest
    SUCCESSFUL OUTCOME      PathSwitchRequestAcknowledge
    UNSUCCESSFUL OUTCOME    PathSwitchRequestFailure
    PROCEDURE CODE          id-PathSwitchRequest
    CRITICALITY             reject
}

pDUSessionResourceModify NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      PDUSessionResourceModifyRequest
    SUCCESSFUL OUTCOME      PDUSessionResourceModifyResponse
    PROCEDURE CODE          id-PDUSessionResourceModify
    CRITICALITY             reject
}

pDUSessionResourceModifyIndication NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      PDUSessionResourceModifyIndication
    SUCCESSFUL OUTCOME      PDUSessionResourceModifyConfirm
    PROCEDURE CODE          id-PDUSessionResourceModifyIndication
    CRITICALITY             reject
}

pDUSessionResourceNotify NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      PDUSessionResourceNotify
    PROCEDURE CODE          id-PDUSessionResourceNotify
    CRITICALITY             ignore
}

pDUSessionResourceRelease NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      PDUSessionResourceReleaseCommand
    SUCCESSFUL OUTCOME      PDUSessionResourceReleaseResponse
    PROCEDURE CODE          id-PDUSessionResourceRelease
    CRITICALITY             reject
}

pDUSessionResourceSetup NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      PDUSessionResourceSetupRequest
```

```
    SUCCESSFUL OUTCOME      PDUSessionResourceSetupResponse
    PROCEDURE CODE          id-PDUSessionResourceSetup
    CRITICALITY             reject
}

privateMessage NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      PrivateMessage
    PROCEDURE CODE          id-PrivateMessage
    CRITICALITY             ignore
}

pWSCancel NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      PWSCancelRequest
    SUCCESSFUL OUTCOME      PWSCancelResponse
    PROCEDURE CODE          id-PWSCancel
    CRITICALITY             reject
}

pWSFailureIndication NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      PWSFailureIndication
    PROCEDURE CODE          id-PWSFailureIndication
    CRITICALITY             ignore
}

pWSRestartIndication NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      PWSRestartIndication
    PROCEDURE CODE          id-PWSRestartIndication
    CRITICALITY             ignore
}

rANConfigurationUpdate NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      RANConfigurationUpdate
    SUCCESSFUL OUTCOME      RANConfigurationUpdateAcknowledge
    UNSUCCESSFUL OUTCOME    RANConfigurationUpdateFailure
    PROCEDURE CODE          id-RANConfigurationUpdate
    CRITICALITY             reject
}

rANCPRelocationIndication NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      RANCPRelocationIndication
    PROCEDURE CODE          id-RANCPRelocationIndication
    CRITICALITY             reject
}

rANPagingRequest NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      RANPagingRequest
    PROCEDURE CODE          id-RANPagingRequest
    CRITICALITY             ignore
}

rerouteNASRequest NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      RerouteNASRequest
    PROCEDURE CODE          id-RerouteNASRequest
    CRITICALITY             reject
```

```
}

retrieveUEInformation NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      RetrieveUEInformation
    PROCEDURE CODE          id-RetrieveUEInformation
    CRITICALITY             reject
}

rRCInactiveTransitionReport NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      RRCInactiveTransitionReport
    PROCEDURE CODE          id-RRCInactiveTransitionReport
    CRITICALITY             ignore
}

secondaryRATDataUsageReport NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      SecondaryRATDataUsageReport
    PROCEDURE CODE          id-SecondaryRATDataUsageReport
    CRITICALITY             ignore
}

timingSynchronisationStatus NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      TimingSynchronisationStatusRequest
    SUCCESSFUL OUTCOME      TimingSynchronisationStatusResponse
    UNSUCCESSFUL OUTCOME    TimingSynchronisationStatusFailure
    PROCEDURE CODE          id-TimingSynchronisationStatus
    CRITICALITY             reject
}

timingSynchronisationStatusReport NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      TimingSynchronisationStatusReport
    PROCEDURE CODE          id-TimingSynchronisationStatusReport
    CRITICALITY             ignore
}

traceFailureIndication NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      TraceFailureIndication
    PROCEDURE CODE          id-TraceFailureIndication
    CRITICALITY             ignore
}

traceStart NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      TraceStart
    PROCEDURE CODE          id-TraceStart
    CRITICALITY             ignore
}

uEContextModification NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      UEContextModificationRequest
    SUCCESSFUL OUTCOME      UEContextModificationResponse
    UNSUCCESSFUL OUTCOME    UEContextModificationFailure
    PROCEDURE CODE          id-UEContextModification
    CRITICALITY             reject
}
```

```
uEContextRelease NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      UEContextReleaseCommand
    SUCCESSFUL OUTCOME      UEContextReleaseComplete
    PROCEDURE CODE          id-UEContextRelease
    CRITICALITY             reject
}

uEContextReleaseRequest NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      UEContextReleaseRequest
    PROCEDURE CODE          id-UEContextReleaseRequest
    CRITICALITY             ignore
}

uEContextResume NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      UEContextResumeRequest
    SUCCESSFUL OUTCOME      UEContextResumeResponse
    UNSUCCESSFUL OUTCOME    UEContextResumeFailure
    PROCEDURE CODE          id-UEContextResume
    CRITICALITY             reject
}

uEContextSuspend NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      UEContextSuspendRequest
    SUCCESSFUL OUTCOME      UEContextSuspendResponse
    UNSUCCESSFUL OUTCOME    UEContextSuspendFailure
    PROCEDURE CODE          id-UEContextSuspend
    CRITICALITY             reject
}

uEInformationTransfer NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      UEInformationTransfer
    PROCEDURE CODE          id-UEInformationTransfer
    CRITICALITY             reject
}

uERadioCapabilityCheck NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      UERadioCapabilityCheckRequest
    SUCCESSFUL OUTCOME      UERadioCapabilityCheckResponse
    PROCEDURE CODE          id-UERadioCapabilityCheck
    CRITICALITY             reject
}

uERadioCapabilityIDMapping NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      UERadioCapabilityIDMappingRequest
    SUCCESSFUL OUTCOME      UERadioCapabilityIDMappingResponse
    PROCEDURE CODE          id-UERadioCapabilityIDMapping
    CRITICALITY             reject
}

uERadioCapabilityInfoIndication NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      UERadioCapabilityInfoIndication
    PROCEDURE CODE          id-UERadioCapabilityInfoIndication
    CRITICALITY             ignore
}
```

```
uETNLABindingRelease NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      UETNLABindingReleaseRequest
    PROCEDURE CODE          id-UETNLABindingRelease
    CRITICALITY             ignore
}

uplinkNASTransport NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      UplinkNASTransport
    PROCEDURE CODE          id-UplinkNASTransport
    CRITICALITY             ignore
}

uplinkNonUEAssociatedNRPPaTransport NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      UplinkNonUEAssociatedNRPPaTransport
    PROCEDURE CODE          id-UplinkNonUEAssociatedNRPPaTransport
    CRITICALITY             ignore
}

uplinkRANConfigurationTransfer NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      UplinkRANConfigurationTransfer
    PROCEDURE CODE          id-UplinkRANConfigurationTransfer
    CRITICALITY             ignore
}

uplinkRANEarlyStatusTransfer NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      UplinkRANEarlyStatusTransfer
    PROCEDURE CODE          id-UplinkRANEarlyStatusTransfer
    CRITICALITY             reject
}

uplinkRANStatusTransfer NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      UplinkRANStatusTransfer
    PROCEDURE CODE          id-UplinkRANStatusTransfer
    CRITICALITY             ignore
}

uplinkUEAssociatedNRPPaTransport NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      UplinkUEAssociatedNRPPaTransport
    PROCEDURE CODE          id-UplinkUEAssociatedNRPPaTransport
    CRITICALITY             ignore
}

writeReplaceWarning NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      WriteReplaceWarningRequest
    SUCCESSFUL OUTCOME      WriteReplaceWarningResponse
    PROCEDURE CODE          id-WriteReplaceWarning
    CRITICALITY             reject
}

uplinkRIMInformationTransfer NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      UplinkRIMInformationTransfer
    PROCEDURE CODE          id-UplinkRIMInformationTransfer
    CRITICALITY             ignore
```

```
}

downlinkRIMInformationTransfer NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      DownlinkRIMInformationTransfer
    PROCEDURE CODE          id-DownlinkRIMInformationTransfer
    CRITICALITY             ignore
}

inventoryRequest NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      InventoryRequest
    SUCCESSFUL OUTCOME      InventoryResponse
    UNSUCCESSFUL OUTCOME    InventoryFailure
    PROCEDURE CODE          id-InventoryRequest
    CRITICALITY             reject
}

inventoryReport NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      InventoryReport
    PROCEDURE CODE          id-InventoryReport
    CRITICALITY             reject
}

commandRequest NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      CommandRequest
    SUCCESSFUL OUTCOME      CommandResponse
    UNSUCCESSFUL OUTCOME    CommandFailure
    PROCEDURE CODE          id-CommandRequest
    CRITICALITY             reject
}

aIOTSessionRelease NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      AIOTSessionReleaseCommand
    SUCCESSFUL OUTCOME      AIOTSessionReleaseComplete
    PROCEDURE CODE          id-AIOTSessionRelease
    CRITICALITY             reject
}

aIOTSessionReleaseRequest NGAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      AIOTSessionReleaseRequest
    PROCEDURE CODE          id-AIOTSessionReleaseRequest
    CRITICALITY             reject
}

END
-- ASN1STOP
```

9.4.4 PDU Definitions

```
-- ASN1START
-- **************************************************************
--
-- PDU definitions for NGAP.
--
```

```
-- **************************************************************

NGAP-PDU-Contents {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
ngran-Access (22) modules (3) ngap (1) version1 (1) ngap-PDU-Contents (1) }

DEFINITIONS AUTOMATIC TAGS ::=

BEGIN

-- **************************************************************
--
-- IE parameter types from other modules.
--
-- **************************************************************

IMPORTS

    A2X-PC5-QoS-Parameters,
    AerialUEsubscriptionInformation,
    AdditionalULI,
    AIoT-CorrelationIdentifier,
    AIOTFIdentifier,
    AIOTFName,
    AIOTSessionReleaseCommandTransfer,
    AIOTSessionReleaseCompleteTransfer,
    AIOTSessionReleaseRequestTransfer,
    AIoT-Support,
    AllowedNSSAI,
    AMFName,
    AMFSetID,
    AMF-TNLAssociationSetupList,
    AMF-TNLAssociationToAddList,
    AMF-TNLAssociationToRemoveList,
    AMF-TNLAssociationToUpdateList,
    AMF-UE-NGAP-ID,
    AssistanceDataForPaging,
    AssociatedSessionID,
    AUN3DeviceAccessInfo,
    AuthenticatedIndication,
    BroadcastCancelledAreaList,
    BroadcastCompletedAreaList,
    BroadcastTransportFailureTransfer,
    BroadcastTransportRequestTransfer,
    BroadcastTransportResponseTransfer,
    CancelAllWarningMessages,
    Cause,
    CellIDListForRestart,
    CEmodeBrestricted,
    CEmodeBSupport-Indicator,
    CNAssistedRANTuning,
    CommandRequestTransfer,
    CommandResponseTransfer,
    CommandFailureTransfer, ConcurrentWarningMessageInd,
```

```
    CoreNetworkAssistanceInformationForInactive,
    CPTransportLayerInformation,
    CriticalityDiagnostics,
    DataCodingScheme,
    DirectForwardingPathAvailability,
    DL-CP-SecurityInformation,
    DL-Signalling,
    EarlyStatusTransfer-TransparentContainer,
    EDT-Session,
    EmergencyAreaIDListForRestart,
    EmergencyFallbackIndicator,
    EN-DCSONConfigurationTransfer,
    EndIndication,
    Enhanced-CoverageRestriction,
    ERedCapIndication,
    EUTRA-CGI,
    EUTRA-PagingeDRXInformation,
    Extended-AMFName,
    Extended-ConnectedTime,
    Extended-RANNodeName,
    FiveGCAction,
    FiveG-ProSeAuthorized,
    FiveG-ProSePC5QoSParameters,
    FiveG-S-TMSI,
    GlobalRANNodeID,
    GUAMI,
    GUAMIList,
    GUAMIType,
    GW-Context-Release-Indication,
    HandoverFlag,
    HandoverType,
    IAB-Authorized,
    IABNodeIndication,
    IAB-Supported,
    IMSVoiceSupportIndicator,
    IndexToRFSP,
    InfoOnRecommendedCellsAndRANNodesForPaging,
    IntersystemSONConfigurationTransfer,
    InventoryRequestTransfer,
    InventoryResponseTransfer,
    InventoryFailureTransfer,
    InventoryReportTransfer,
    LAI,
    LocationReportingRequestType,
    LPWUSPSAssistanceInformation,
    LPWUSDisableIndication,
    LTE-A2X-ServicesAuthorized,
    LTEM-Indication,
    LTEUESidelinkAggregateMaximumBitrate,
    LTEV2XServicesAuthorized,
    MaskedIMEISV,
    MBS-AreaSessionID,
    MBS-DistributionReleaseRequestTransfer,
    MBS-DistributionSetupRequestTransfer,
```

```
    MBS-DistributionSetupResponseTransfer,
    MBS-DistributionSetupUnsuccessfulTransfer,
    MBS-ServiceArea,
    MBS-SessionID,
    MBSSessionReleaseResponseTransfer,
    MBSSessionSetupOrModFailureTransfer,
    MBSSessionSetupOrModRequestTransfer,
    MBSSessionSetupOrModResponseTransfer,
    MDTPLMNList,
    MDTPLMNModificationList,
    MessageIdentifier,
    MobileIAB-Authorized,
    MobileIABNodeIndication,
    MobileIAB-Supported,
    MobilityRestrictionList,
    MulticastGroupPagingAreaList,
    MulticastSessionActivationRequestTransfer,
    MulticastSessionDeactivationRequestTransfer,
    MulticastSessionUpdateRequestTransfer,
    NAS-PDU,
    NASSecurityParametersFromNGRAN,
    NB-IoT-DefaultPagingDRX,
    NB-IoT-PagingDRX,
    NB-IoT-Paging-eDRXInfo,
    NB-IoT-UEPriority,
    NetworkControlledRepeaterAuthorized,
    NewSecurityContextInd,
    NGRAN-CGI,
    NGRAN-TNLAssociationToRemoveList,
    NGRANTraceID,
    NID,
    NoPDUSessionIndication,
    NotifySourceNGRANNode,
    NPN-AccessInformation,
    NR-A2X-ServicesAuthorized,
    NR-CGI,
    NR-PagingeDRXInformation,
    NRPPa-PDU,
    NRUESidelinkAggregateMaximumBitrate,
    NRV2XServicesAuthorized,
    NumberOfBroadcastsRequested,
    OverloadResponse,
    OverloadStartNSSAIList,
    PagingAssisDataforCEcapabUE,
    PagingCause,
    PagingDRX,
    PagingOrigin,
    PagingPolicyDifferentiation,
    PagingPriority,
    Partially-Allowed-NSSAI,
    PC5QoSParameters,
    PDUSessionAggregateMaximumBitRate,
    PDUSessionListMTCommHReq,
    PDUSessionResourceAdmittedList,
```

```
    PDUSessionResourceFailedToModifyListModCfm,
    PDUSessionResourceFailedToModifyListModRes,
    PDUSessionResourceFailedToResumeListRESReq,
    PDUSessionResourceFailedToResumeListRESRes,
    PDUSessionResourceFailedToSetupListCxtFail,
    PDUSessionResourceFailedToSetupListCxtRes,
    PDUSessionResourceFailedToSetupListHOAck,
    PDUSessionResourceFailedToSetupListPSReq,
    PDUSessionResourceFailedToSetupListSURes,
    PDUSessionResourceHandoverList,
    PDUSessionResourceListCxtRelCpl,
    PDUSessionResourceListCxtRelReq,
    PDUSessionResourceListHORqd,
    PDUSessionResourceModifyListModCfm,
    PDUSessionResourceModifyListModInd,
    PDUSessionResourceModifyListModReq,
    PDUSessionResourceModifyListModRes,
    PDUSessionResourceNotifyList,
    PDUSessionResourceReleasedListNot,
    PDUSessionResourceReleasedListPSAck,
    PDUSessionResourceReleasedListPSFail,
    PDUSessionResourceReleasedListRelRes,
    PDUSessionResourceResumeListRESReq,
    PDUSessionResourceResumeListRESRes,
    PDUSessionResourceSecondaryRATUsageList,
    PDUSessionResourceSetupListCxtReq,
    PDUSessionResourceSetupListCxtRes,
    PDUSessionResourceSetupListHOReq,
    PDUSessionResourceSetupListSUReq,
    PDUSessionResourceSetupListSURes,
    PDUSessionResourceSuspendListSUSReq,
    PDUSessionResourceSwitchedList,
    PDUSessionResourceToBeSwitchedDLList,
    PDUSessionResourceToReleaseListHOCmd,
    PDUSessionResourceToReleaseListRelCmd,
    PEIPSassistanceInformation,
    PLMNIdentity,
    PLMNSupportList,
    PrivacyIndicator,
    PWSFailedCellIDList,
    QMCConfigInfo,
    QMCDeactivation,
    RAN-AIOT-Device-NGAP-ID,
    RANNodeName,
    RANPagingPriority,
    RANStatusTransfer-TransparentContainer,
    RANTimingSynchronisationStatusInfo,
    RAN-TSSRequestType,
    RAN-TSSScope,
    RAN-UE-NGAP-ID,
    RedCapIndication,
    RedirectionVoiceFallback,
    RelativeAMFCapacity,
    RepetitionPeriod,
```

```
    RequestedNSSAI,
    ResetType,
    RGLevelWirelineAccessCharacteristics,
    RIMInformationTransfer,
    RoutingID,
    RRCEstablishmentCause,
    RRCInactiveTransitionReportRequest,
    RRCState,
    SecurityContext,
    SecurityKey,
    SerialNumber,
    ServedGUAMIList,
    SliceSupportList,
    SLPositioningRangingServiceInfo,
    S-NSSAI,
    SONConfigurationTransfer,
    SourceToTarget-AMFInformationReroute,
    SourceToTarget-TransparentContainer,
    SRVCCOperationPossible,
    SupportedTAList,
    Suspend-Request-Indication,
    Suspend-Response-Indication,
    TAI,
    TAIListForPaging,
    TAIListForRestart,
    TargetID,
    TargetNSSAIInformation,
    TargettoSource-Failure-TransparentContainer,
    TargetToSource-TransparentContainer,
    TimeSyncAssistanceInfo,
    TimeToWait,
    TNLAssociationList,
    TraceActivation,
    TrafficLoadReductionIndication,
    TransportLayerAddress,
    UEAggregateMaximumBitRate,
    UE-associatedLogicalNG-connectionList,
    UECapabilityInfoRequest,
    UEContextRequest,
    UE-DifferentiationInfo,
    UE-NGAP-IDs,
    UEPagingIdentity,
    UEPresenceInAreaOfInterestList,
    UERadioCapability,
    UERadioCapabilityForPaging,
    UERadioCapabilityID,
    UERetentionInformation,
    UESecurityCapabilities,
    UESliceMaximumBitRateList,
    UE-UP-CIoT-Support,
    UL-CP-SecurityInformation,
    UnavailableGUAMIList,
    URI-address,
    UserLocationInformation,
```

```
    WarningAreaCoordinates,
    WarningAreaList,
    WarningMessageContents,
    WarningSecurityInfo,
    WarningType,
    WUS-Assistance-Information,
    XrDeviceWith2Rx

FROM NGAP-IEs

    PrivateIE-Container{},
    ProtocolExtensionContainer{},
    ProtocolIE-Container{},
    ProtocolIE-ContainerList{},
    ProtocolIE-ContainerPair{},
    ProtocolIE-SingleContainer{},
    NGAP-PRIVATE-IES,
    NGAP-PROTOCOL-EXTENSION,
    NGAP-PROTOCOL-IES,
    NGAP-PROTOCOL-IES-PAIR

FROM NGAP-Containers

    id-A2X-PC5-QoS-Parameters,
    id-AerialUEsubscriptionInformation,
    id-AdditionalULI,
    id-AIoT-CorrelationIdentifier,
    id-AIOTFIdentifier,
    id-AIOTFName,
    id-AIOTSessionReleaseCommandTransfer,
    id-AIOTSessionReleaseCompleteTransfer,
    id-AIOTSessionReleaseRequestTransfer,
    id-AIoT-Support,
    id-AllowedNSSAI,
    id-AMFName,
    id-AMFOverloadResponse,
    id-AMFSetID,
    id-AMF-TNLAssociationFailedToSetupList,
    id-AMF-TNLAssociationSetupList,
    id-AMF-TNLAssociationToAddList,
    id-AMF-TNLAssociationToRemoveList,
    id-AMF-TNLAssociationToUpdateList,
    id-AMFTrafficLoadReductionIndication,
    id-AMF-UE-NGAP-ID,
    id-AMF-UE-NGAP-ID2,
    id-AssistanceDataForPaging,
    id-AssociatedSessionID,
    id-AUN3DeviceAccessInfo,
    id-AuthenticatedIndication,
    id-BroadcastCancelledAreaList,
    id-BroadcastCompletedAreaList,
    id-BroadcastTransportFailureTransfer,
    id-BroadcastTransportRequestTransfer,
    id-BroadcastTransportResponseTransfer,
```

```
    id-CancelAllWarningMessages,
    id-Cause,
    id-CellIDListForRestart,
    id-CEmodeBrestricted,
    id-CEmodeBSupport-Indicator,
    id-CNAssistedRANTuning,
    id-CommandRequestTransfer,
    id-CommandResponseTransfer,
    id-CommandFailureTransfer,
    id-ConcurrentWarningMessageInd,
    id-CoreNetworkAssistanceInformationForInactive,
    id-CriticalityDiagnostics,
    id-DataCodingScheme,
    id-DefaultPagingDRX,
    id-DirectForwardingPathAvailability,
    id-DL-CP-SecurityInformation,
    id-DL-Signalling,
    id-EarlyStatusTransfer-TransparentContainer,
    id-EDT-Session,
    id-EmergencyAreaIDListForRestart,
    id-EmergencyFallbackIndicator,
    id-ENDC-SONConfigurationTransferDL,
    id-ENDC-SONConfigurationTransferUL,
    id-EndIndication,
    id-Enhanced-CoverageRestriction,
    id-ERedCapIndication,
    id-EUTRA-CGI,
    id-EUTRA-PagingeDRXInformation,
    id-Extended-AMFName,
    id-Extended-ConnectedTime,
    id-Extended-RANNodeName,
    id-FiveGCAction,
    id-FiveG-ProSeAuthorized,
    id-FiveG-ProSePC5QoSParameters,
    id-FiveG-ProSeUEPC5AggregateMaximumBitRate,
    id-FiveG-S-TMSI,
    id-GlobalRANNodeID,
    id-GUAMI,
    id-GUAMIList,
    id-GUAMIType,
    id-GW-Context-Release-Indication,
    id-HandoverFlag,
    id-HandoverType,
    id-IAB-Authorized,
    id-IABNodeIndication,
    id-IAB-Supported,
    id-IMSVoiceSupportIndicator,
    id-IndexToRFSP,
    id-InfoOnRecommendedCellsAndRANNodesForPaging,
    id-IntersystemSONConfigurationTransferDL,
    id-IntersystemSONConfigurationTransferUL,
    id-InventoryRequestTransfer,
    id-InventoryResponseTransfer,
    id-InventoryFailureTransfer,
```

```
    id-InventoryReportTransfer,
    id-LocationReportingRequestType,
    id-LPWUSPSAssistanceInformation,
    id-LPWUSDisableIndication,
    id-LTE-A2X-ServicesAuthorized,
    id-LTE-A2X-UE-PC5-AggregateMaximumBitRate,
    id-LTEM-Indication,
    id-LTEUESidelinkAggregateMaximumBitrate,
    id-LTEV2XServicesAuthorized,
    id-ManagementBasedMDTPLMNList,
    id-ManagementBasedMDTPLMNModificationList,
    id-MaskedIMEISV,
    id-MBS-AreaSessionID,
    id-MBS-DistributionReleaseRequestTransfer,
    id-MBS-DistributionSetupRequestTransfer,
    id-MBS-DistributionSetupResponseTransfer,
    id-MBS-DistributionSetupUnsuccessfulTransfer,
    id-MBS-ServiceArea,
    id-MBS-SessionID,
    id-MBSSessionModificationFailureTransfer,
    id-MBSSessionModificationRequestTransfer,
    id-MBSSessionModificationResponseTransfer,
    id-MBSSessionReleaseResponseTransfer,
    id-MBSSessionSetupFailureTransfer,
    id-MBSSessionSetupRequestTransfer,
    id-MBSSessionSetupResponseTransfer,
    id-MessageIdentifier,
    id-MobileIAB-Authorized,
    id-MobileIABNodeIndication,
    id-MobileIAB-Supported,
    id-MobilityRestrictionList,
    id-MulticastGroupPagingAreaList,
    id-MulticastSessionActivationRequestTransfer,
    id-MulticastSessionDeactivationRequestTransfer,
    id-MulticastSessionUpdateRequestTransfer,
    id-NASC,
    id-NAS-PDU,
    id-NASSecurityParametersFromNGRAN,
    id-NB-IoT-DefaultPagingDRX,
    id-NB-IoT-PagingDRX,
    id-NB-IoT-Paging-eDRXInfo,
    id-NB-IoT-UEPriority,
    id-NetworkControlledRepeaterAuthorized,
    id-NewAMF-UE-NGAP-ID,
    id-NewGUAMI,
    id-NewSecurityContextInd,
    id-NGAP-Message,
    id-NGRAN-CGI,
    id-NGRAN-TNLAssociationToRemoveList,
    id-NGRANTraceID,
    id-NoPDUSessionIndication,
    id-NotifySourceNGRANNode,
    id-NPN-AccessInformation,
    id-NR-A2X-ServicesAuthorized,
```

```
    id-NR-A2X-UE-PC5-AggregateMaximumBitRate,
    id-NR-PagingeDRXInformation,
    id-NRPPa-PDU,
    id-NRUESidelinkAggregateMaximumBitrate,
    id-NRV2XServicesAuthorized,
    id-NumberOfBroadcastsRequested,
    id-OldAMF,
    id-OverloadStartNSSAIList,
    id-PagingAssisDataforCEcapabUE,
    id-PagingCause,
    id-PagingDRX,
    id-PagingOrigin,
    id-PagingPolicyDifferentiation,
    id-PagingPriority,
    id-Partially-Allowed-NSSAI,
    id-PC5QoSParameters,
    id-PDUSessionListMTCommHReq,
    id-PDUSessionResourceAdmittedList,
    id-PDUSessionResourceFailedToModifyListModCfm,
    id-PDUSessionResourceFailedToModifyListModRes,
    id-PDUSessionResourceFailedToResumeListRESReq,
    id-PDUSessionResourceFailedToResumeListRESRes,
    id-PDUSessionResourceFailedToSetupListCxtFail,
    id-PDUSessionResourceFailedToSetupListCxtRes,
    id-PDUSessionResourceFailedToSetupListHOAck,
    id-PDUSessionResourceFailedToSetupListPSReq,
    id-PDUSessionResourceFailedToSetupListSURes,
    id-PDUSessionResourceHandoverList,
    id-PDUSessionResourceListCxtRelCpl,
    id-PDUSessionResourceListCxtRelReq,
    id-PDUSessionResourceListHORqd,
    id-PDUSessionResourceModifyListModCfm,
    id-PDUSessionResourceModifyListModInd,
    id-PDUSessionResourceModifyListModReq,
    id-PDUSessionResourceModifyListModRes,
    id-PDUSessionResourceNotifyList,
    id-PDUSessionResourceReleasedListNot,
    id-PDUSessionResourceReleasedListPSAck,
    id-PDUSessionResourceReleasedListPSFail,
    id-PDUSessionResourceReleasedListRelRes,
    id-PDUSessionResourceResumeListRESReq,
    id-PDUSessionResourceResumeListRESRes,
    id-PDUSessionResourceSecondaryRATUsageList,
    id-PDUSessionResourceSetupListCxtReq,
    id-PDUSessionResourceSetupListCxtRes,
    id-PDUSessionResourceSetupListHOReq,
    id-PDUSessionResourceSetupListSUReq,
    id-PDUSessionResourceSetupListSURes,
    id-PDUSessionResourceSuspendListSUSReq,
    id-PDUSessionResourceSwitchedList,
    id-PDUSessionResourceToBeSwitchedDLList,
    id-PDUSessionResourceToReleaseListHOCmd,
    id-PDUSessionResourceToReleaseListRelCmd,
    id-PEIPSassistanceInformation,
```

```
    id-PLMNSupportList,
    id-PrivacyIndicator,
    id-PWSFailedCellIDList,
    id-QMCConfigInfo,
    id-QMCDeactivation,
    id-RAN-AIOT-Device-NGAP-ID,
    id-RANNodeName,
    id-RANPagingPriority,
    id-RANStatusTransfer-TransparentContainer,
    id-RANTimingSynchronisationStatusInfo,
    id-RAN-TSSRequestType,
    id-RAN-TSSScope,
    id-RAN-UE-NGAP-ID,
    id-RedCapIndication,
    id-RedirectionVoiceFallback,
    id-RelativeAMFCapacity,
    id-RepetitionPeriod,
    id-RequestedNSSAI,
    id-ResetType,
    id-RGLevelWirelineAccessCharacteristics,
    id-RIMInformationTransfer,
    id-RoutingID,
    id-RRCEstablishmentCause,
    id-RRCInactiveTransitionReportRequest,
    id-RRC-Resume-Cause,
    id-RRCState,
    id-SecurityContext,
    id-SecurityKey,
    id-SelectedNID,
    id-SelectedPLMNIdentity,
    id-SerialNumber,
    id-ServedGUAMIList,
    id-SliceSupportList,
    id-S-NSSAI,
    id-SONConfigurationTransferDL,
    id-SONConfigurationTransferUL,
    id-SourceAMF-GUAMI,
    id-SourceAMF-UE-NGAP-ID,
    id-SourceToTarget-AMFInformationReroute,
    id-SourceToTarget-TransparentContainer,
    id-SRVCCOperationPossible,
    id-SupportedTAList,
    id-Suspend-Request-Indication,
    id-Suspend-Response-Indication,
    id-Target-RAN-Node-ID,
    id-TAI,
    id-TAIListForPaging,
    id-TAIListForRestart,
    id-TargetID,
    id-TargetNSSAIInformation,
    id-TargettoSource-Failure-TransparentContainer,
    id-TargetToSource-TransparentContainer,
    id-TimeSyncAssistanceInfo,
    id-TimeToWait,
```

```
    id-TNGFIdentityInformation,
    id-TraceActivation,
    id-TraceCollectionEntityIPAddress,
    id-TraceCollectionEntityURI,
    id-TWIFIdentityInformation,
    id-UEAggregateMaximumBitRate,
    id-UE-associatedLogicalNG-connectionList,
    id-UECapabilityInfoRequest,
    id-UEContextRequest,
    id-UE-DifferentiationInfo,
    id-UE-NGAP-IDs,
    id-UEPagingIdentity,
    id-UEPresenceInAreaOfInterestList,
    id-UERadioCapability,
    id-UERadioCapability-EUTRA-Format,
    id-UERadioCapabilityForPaging,
    id-UERadioCapabilityID,
    id-UERetentionInformation,
    id-UESecurityCapabilities,
    id-UESliceMaximumBitRateList,
    id-UE-UP-CIoT-Support,
    id-UL-CP-SecurityInformation,
    id-UnavailableGUAMIList,
    id-UserLocationInformation,
    id-W-AGFIdentityInformation,
    id-WarningAreaCoordinates,
    id-WarningAreaList,
    id-WarningMessageContents,
    id-WarningSecurityInfo,
    id-WarningType,
    id-WUS-Assistance-Information,
    id-XrDeviceWith2Rx,
    id-SLPositioningRangingServiceInfo,
    id-ExtendedOldAMF,
    id-Aerial-UE-FlightInformationOngoingReporting-failed


FROM NGAP-Constants;

-- ****************************************************************
--
-- PDU SESSION MANAGEMENT ELEMENTARY PROCEDURES
--
-- ****************************************************************

-- ****************************************************************
--
-- PDU Session Resource Setup Elementary Procedure
--
-- ****************************************************************

-- ****************************************************************
--
-- PDU SESSION RESOURCE SETUP REQUEST
```

```
--
-- **************************************************************

PDUSessionResourceSetupRequest ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {PDUSessionResourceSetupRequestIEs} },
    ...
}

PDUSessionResourceSetupRequestIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID                          CRITICALITY reject  TYPE AMF-UE-NGAP-ID                     PRESENCE mandatory   }|
    { ID id-RAN-UE-NGAP-ID                          CRITICALITY reject  TYPE RAN-UE-NGAP-ID                     PRESENCE mandatory   }|
    { ID id-RANPagingPriority                       CRITICALITY ignore  TYPE RANPagingPriority                  PRESENCE optional    }|
    { ID id-NAS-PDU                                 CRITICALITY reject  TYPE NAS-PDU                            PRESENCE optional    }|
    { ID id-PDUSessionResourceSetupListSUReq        CRITICALITY reject  TYPE PDUSessionResourceSetupListSUReq    PRESENCE mandatory   }|
    { ID id-UEAggregateMaximumBitRate               CRITICALITY ignore  TYPE UEAggregateMaximumBitRate           PRESENCE optional    }|
    { ID id-UESliceMaximumBitRateList               CRITICALITY ignore  TYPE UESliceMaximumBitRateList           PRESENCE optional    },
    ...
}

-- **************************************************************
--
-- PDU SESSION RESOURCE SETUP RESPONSE
--
-- **************************************************************

PDUSessionResourceSetupResponse ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {PDUSessionResourceSetupResponseIEs} },
    ...
}

PDUSessionResourceSetupResponseIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID                              CRITICALITY ignore  TYPE AMF-UE-NGAP-ID                             PRESENCE mandatory   }|
    { ID id-RAN-UE-NGAP-ID                              CRITICALITY ignore  TYPE RAN-UE-NGAP-ID                             PRESENCE mandatory   }|
    { ID id-PDUSessionResourceSetupListSURes            CRITICALITY ignore  TYPE PDUSessionResourceSetupListSURes            PRESENCE optional    }|
    { ID id-PDUSessionResourceFailedToSetupListSURes    CRITICALITY ignore  TYPE PDUSessionResourceFailedToSetupListSURes    PRESENCE optional    }|
    { ID id-CriticalityDiagnostics                      CRITICALITY ignore  TYPE CriticalityDiagnostics                      PRESENCE optional    }|
    { ID id-UserLocationInformation                     CRITICALITY ignore  TYPE UserLocationInformation                     PRESENCE optional    },
    ...
}


-- **************************************************************
--
-- PDU Session Resource Release Elementary Procedure
--
-- **************************************************************

-- **************************************************************
--
-- PDU SESSION RESOURCE RELEASE COMMAND
```

```
--
-- **************************************************************

PDUSessionResourceReleaseCommand ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {PDUSessionResourceReleaseCommandIEs} },
    ...
}

PDUSessionResourceReleaseCommandIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID                              CRITICALITY reject  TYPE AMF-UE-NGAP-ID                          PRESENCE mandatory   }|
    { ID id-RAN-UE-NGAP-ID                              CRITICALITY reject  TYPE RAN-UE-NGAP-ID                          PRESENCE mandatory   }|
    { ID id-RANPagingPriority                           CRITICALITY ignore  TYPE RANPagingPriority                       PRESENCE optional    }|
    { ID id-NAS-PDU                                     CRITICALITY ignore  TYPE NAS-PDU                                 PRESENCE optional    }|
    { ID id-PDUSessionResourceToReleaseListRelCmd       CRITICALITY reject  TYPE PDUSessionResourceToReleaseListRelCmd    PRESENCE mandatory   },
    ...
}

-- **************************************************************
--
-- PDU SESSION RESOURCE RELEASE RESPONSE
--
-- **************************************************************

PDUSessionResourceReleaseResponse ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {PDUSessionResourceReleaseResponseIEs} },
    ...
}

PDUSessionResourceReleaseResponseIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID                              CRITICALITY ignore  TYPE AMF-UE-NGAP-ID                          PRESENCE mandatory   }|
    { ID id-RAN-UE-NGAP-ID                              CRITICALITY ignore  TYPE RAN-UE-NGAP-ID                          PRESENCE mandatory   }|
    { ID id-PDUSessionResourceReleasedListRelRes            CRITICALITY ignore  TYPE PDUSessionResourceReleasedListRelRes   PRESENCE mandatory   }|
    { ID id-UserLocationInformation                     CRITICALITY ignore  TYPE UserLocationInformation                 PRESENCE optional    }|
    { ID id-CriticalityDiagnostics                      CRITICALITY ignore  TYPE CriticalityDiagnostics                  PRESENCE optional    },
    ...
}

-- **************************************************************
--
-- PDU Session Resource Modify Elementary Procedure
--
-- **************************************************************

-- **************************************************************
--
-- PDU SESSION RESOURCE MODIFY REQUEST
--
-- **************************************************************

PDUSessionResourceModifyRequest ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {PDUSessionResourceModifyRequestIEs} },
    ...
}
```

```
PDUSessionResourceModifyRequestIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID                          CRITICALITY reject  TYPE AMF-UE-NGAP-ID                     PRESENCE mandatory   }|
    { ID id-RAN-UE-NGAP-ID                          CRITICALITY reject  TYPE RAN-UE-NGAP-ID                     PRESENCE mandatory   }|
    { ID id-RANPagingPriority                       CRITICALITY ignore  TYPE RANPagingPriority                  PRESENCE optional    }|
    { ID id-PDUSessionResourceModifyListModReq      CRITICALITY reject  TYPE PDUSessionResourceModifyListModReq  PRESENCE mandatory   },
    ...
}

-- **************************************************************
--
-- PDU SESSION RESOURCE MODIFY RESPONSE
--
-- **************************************************************

PDUSessionResourceModifyResponse ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {PDUSessionResourceModifyResponseIEs} },
    ...
}

PDUSessionResourceModifyResponseIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID                              CRITICALITY ignore  TYPE AMF-UE-NGAP-ID                          PRESENCE mandatory
    }|
    { ID id-RAN-UE-NGAP-ID                              CRITICALITY ignore  TYPE RAN-UE-NGAP-ID                          PRESENCE mandatory
    }|
    { ID id-PDUSessionResourceModifyListModRes          CRITICALITY ignore  TYPE PDUSessionResourceModifyListModRes      PRESENCE optional
    }|
    { ID id-PDUSessionResourceFailedToModifyListModRes  CRITICALITY ignore  TYPE PDUSessionResourceFailedToModifyListModRes   PRESENCE optional
    }|
    { ID id-UserLocationInformation                     CRITICALITY ignore  TYPE UserLocationInformation                 PRESENCE optional
    }|
    { ID id-CriticalityDiagnostics                      CRITICALITY ignore  TYPE CriticalityDiagnostics                  PRESENCE optional
    },
    ...
}


-- **************************************************************
--
-- PDU Session Resource Notify Elementary Procedure
--
-- **************************************************************

-- **************************************************************
--
-- PDU SESSION RESOURCE NOTIFY
--
-- **************************************************************

PDUSessionResourceNotify ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {PDUSessionResourceNotifyIEs} },
    ...
}

PDUSessionResourceNotifyIEs NGAP-PROTOCOL-IES ::= {
```

```
    { ID id-AMF-UE-NGAP-ID                          CRITICALITY reject  TYPE AMF-UE-NGAP-ID                          PRESENCE mandatory   }|
    { ID id-RAN-UE-NGAP-ID                          CRITICALITY reject  TYPE RAN-UE-NGAP-ID                          PRESENCE mandatory   }|
    { ID id-PDUSessionResourceNotifyList            CRITICALITY reject  TYPE PDUSessionResourceNotifyList            PRESENCE optional    }|
    { ID id-PDUSessionResourceReleasedListNot       CRITICALITY ignore  TYPE PDUSessionResourceReleasedListNot       PRESENCE optional    }|
    { ID id-UserLocationInformation                 CRITICALITY ignore  TYPE UserLocationInformation                 PRESENCE optional    },
    ...
}


-- **************************************************************
--
-- PDU Session Resource Modify Indication Elementary Procedure
--
-- **************************************************************

-- **************************************************************
--
-- PDU SESSION RESOURCE MODIFY INDICATION
--
-- **************************************************************

PDUSessionResourceModifyIndication ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {PDUSessionResourceModifyIndicationIEs} },
    ...
}

PDUSessionResourceModifyIndicationIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID                          CRITICALITY reject  TYPE AMF-UE-NGAP-ID                          PRESENCE mandatory   }|
    { ID id-RAN-UE-NGAP-ID                          CRITICALITY reject  TYPE RAN-UE-NGAP-ID                          PRESENCE mandatory   }|
    { ID id-PDUSessionResourceModifyListModInd      CRITICALITY reject  TYPE PDUSessionResourceModifyListModInd      PRESENCE mandatory   }|
    { ID id-UserLocationInformation                 CRITICALITY ignore  TYPE UserLocationInformation                 PRESENCE optional    },
    ...
}

-- **************************************************************
--
-- PDU SESSION RESOURCE MODIFY CONFIRM
--
-- **************************************************************

PDUSessionResourceModifyConfirm ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {PDUSessionResourceModifyConfirmIEs} },
    ...
}

PDUSessionResourceModifyConfirmIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID                              CRITICALITY ignore  TYPE AMF-UE-NGAP-ID                              PRESENCE mandatory   }|
    { ID id-RAN-UE-NGAP-ID                              CRITICALITY ignore  TYPE RAN-UE-NGAP-ID                              PRESENCE mandatory   }|
    { ID id-PDUSessionResourceModifyListModCfm          CRITICALITY ignore  TYPE PDUSessionResourceModifyListModCfm          PRESENCE optional }|
    { ID id-PDUSessionResourceFailedToModifyListModCfm  CRITICALITY ignore  TYPE PDUSessionResourceFailedToModifyListModCfm  PRESENCE optional }|
    { ID id-CriticalityDiagnostics                      CRITICALITY ignore  TYPE CriticalityDiagnostics                      PRESENCE optional    },
    ...
}
```

```
-- ************************************************************
--
-- UE CONTEXT MANAGEMENT ELEMENTARY PROCEDURES
--
-- ************************************************************

-- ************************************************************
--
-- Initial Context Setup Elementary Procedure
--
-- ************************************************************

-- ************************************************************
--
-- INITIAL CONTEXT SETUP REQUEST
--
-- ************************************************************

InitialContextSetupRequest ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {InitialContextSetupRequestIEs} },
    ...
}

InitialContextSetupRequestIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID                          CRITICALITY reject  TYPE AMF-UE-NGAP-ID                          PRESENCE mandatory   }|
    { ID id-RAN-UE-NGAP-ID                          CRITICALITY reject  TYPE RAN-UE-NGAP-ID                          PRESENCE mandatory   }|
    { ID id-OldAMF                                  CRITICALITY reject  TYPE AMFName                                 PRESENCE optional    }|
    { ID id-UEAggregateMaximumBitRate               CRITICALITY reject  TYPE UEAggregateMaximumBitRate               PRESENCE conditional }|
-- The above IE shall be present if the PDU Session Resource Setup List IE is present
    { ID id-CoreNetworkAssistanceInformationForInactive     CRITICALITY ignore  TYPE CoreNetworkAssistanceInformationForInactive     PRESENCE
optional        }|
    { ID id-GUAMI                                   CRITICALITY reject  TYPE GUAMI                                   PRESENCE mandatory   }|
    { ID id-PDUSessionResourceSetupListCxtReq       CRITICALITY reject  TYPE PDUSessionResourceSetupListCxtReq        PRESENCE optional    }|
    { ID id-AllowedNSSAI                            CRITICALITY reject  TYPE AllowedNSSAI                            PRESENCE mandatory   }|
    { ID id-UESecurityCapabilities                  CRITICALITY reject  TYPE UESecurityCapabilities                  PRESENCE mandatory   }|
    { ID id-SecurityKey                             CRITICALITY reject  TYPE SecurityKey                             PRESENCE mandatory   }|
    { ID id-TraceActivation                         CRITICALITY ignore  TYPE TraceActivation                         PRESENCE optional    }|
    { ID id-MobilityRestrictionList                 CRITICALITY ignore  TYPE MobilityRestrictionList                 PRESENCE optional    }|
    { ID id-UERadioCapability                       CRITICALITY ignore  TYPE UERadioCapability                       PRESENCE optional    }|
    { ID id-IndexToRFSP                             CRITICALITY ignore  TYPE IndexToRFSP                             PRESENCE optional    }|
    { ID id-MaskedIMEISV                            CRITICALITY ignore  TYPE MaskedIMEISV                            PRESENCE optional    }|
    { ID id-NAS-PDU                                 CRITICALITY ignore  TYPE NAS-PDU                                 PRESENCE optional    }|
    { ID id-EmergencyFallbackIndicator              CRITICALITY reject  TYPE EmergencyFallbackIndicator              PRESENCE optional    }|
    { ID id-RRCInactiveTransitionReportRequest      CRITICALITY ignore  TYPE RRCInactiveTransitionReportRequest      PRESENCE optional    }|
    { ID id-UERadioCapabilityForPaging              CRITICALITY ignore  TYPE UERadioCapabilityForPaging              PRESENCE optional    }|
    { ID id-RedirectionVoiceFallback                CRITICALITY ignore  TYPE RedirectionVoiceFallback                PRESENCE optional    }|
    { ID id-LocationReportingRequestType            CRITICALITY ignore  TYPE LocationReportingRequestType            PRESENCE optional    }|
    { ID id-CNAssistedRANTuning                     CRITICALITY ignore  TYPE CNAssistedRANTuning                     PRESENCE optional    }|
    { ID id-SRVCCOperationPossible                  CRITICALITY ignore  TYPE SRVCCOperationPossible                  PRESENCE optional    }|
    { ID id-IAB-Authorized                          CRITICALITY ignore  TYPE IAB-Authorized                          PRESENCE optional    }|
    { ID id-Enhanced-CoverageRestriction            CRITICALITY ignore  TYPE Enhanced-CoverageRestriction            PRESENCE optional    }|
    { ID id-Extended-ConnectedTime                  CRITICALITY ignore  TYPE Extended-ConnectedTime                  PRESENCE optional    }|
    { ID id-UE-DifferentiationInfo                  CRITICALITY ignore  TYPE UE-DifferentiationInfo                  PRESENCE optional    }|
    { ID id-NRV2XServicesAuthorized                 CRITICALITY ignore  TYPE NRV2XServicesAuthorized                 PRESENCE optional    }|
```

```
    { ID id-LTEV2XServicesAuthorized                CRITICALITY ignore  TYPE LTEV2XServicesAuthorized                PRESENCE optional   }|
    { ID id-NRUESidelinkAggregateMaximumBitrate     CRITICALITY ignore  TYPE NRUESidelinkAggregateMaximumBitrate     PRESENCE optional   }|
    { ID id-LTEUESidelinkAggregateMaximumBitrate    CRITICALITY ignore  TYPE LTEUESidelinkAggregateMaximumBitrate    PRESENCE optional   }|
    { ID id-PC5QoSParameters                        CRITICALITY ignore  TYPE PC5QoSParameters                        PRESENCE optional }|
    { ID id-CEmodeBrestricted                       CRITICALITY ignore  TYPE CEmodeBrestricted                       PRESENCE optional   }|
    { ID id-UE-UP-CIoT-Support                      CRITICALITY ignore  TYPE UE-UP-CIoT-Support                      PRESENCE optional   }|
    { ID id-RGLevelWirelineAccessCharacteristics    CRITICALITY ignore  TYPE RGLevelWirelineAccessCharacteristics    PRESENCE optional   }|
    { ID id-ManagementBasedMDTPLMNList              CRITICALITY ignore  TYPE MDTPLMNList                             PRESENCE optional   }|
    { ID id-UERadioCapabilityID                     CRITICALITY reject  TYPE UERadioCapabilityID                     PRESENCE optional   }|
    { ID id-TimeSyncAssistanceInfo                  CRITICALITY ignore  TYPE TimeSyncAssistanceInfo                  PRESENCE optional   }|
    { ID id-QMCConfigInfo                           CRITICALITY ignore  TYPE QMCConfigInfo                           PRESENCE optional   }|
    { ID id-TargetNSSAIInformation                  CRITICALITY ignore  TYPE TargetNSSAIInformation                  PRESENCE optional   }|
    { ID id-UESliceMaximumBitRateList               CRITICALITY ignore  TYPE UESliceMaximumBitRateList               PRESENCE optional   }|
    { ID id-FiveG-ProSeAuthorized                   CRITICALITY ignore  TYPE FiveG-ProSeAuthorized                   PRESENCE optional   }|
    { ID id-FiveG-ProSeUEPC5AggregateMaximumBitRate CRITICALITY ignore  TYPE NRUESidelinkAggregateMaximumBitrate     PRESENCE optional   }|
    { ID id-FiveG-ProSePC5QoSParameters             CRITICALITY ignore  TYPE FiveG-ProSePC5QoSParameters             PRESENCE optional   }|
    { ID id-NetworkControlledRepeaterAuthorized     CRITICALITY ignore  TYPE NetworkControlledRepeaterAuthorized   PRESENCE optional   }|
    { ID id-AerialUEsubscriptionInformation         CRITICALITY ignore  TYPE AerialUEsubscriptionInformation         PRESENCE optional   }|
    { ID id-NR-A2X-ServicesAuthorized               CRITICALITY ignore  TYPE NR-A2X-ServicesAuthorized               PRESENCE optional   }|
    { ID id-LTE-A2X-ServicesAuthorized              CRITICALITY ignore  TYPE LTE-A2X-ServicesAuthorized              PRESENCE optional   }|
    { ID id-NR-A2X-UE-PC5-AggregateMaximumBitRate   CRITICALITY ignore  TYPE NRUESidelinkAggregateMaximumBitrate     PRESENCE optional   }|
    { ID id-LTE-A2X-UE-PC5-AggregateMaximumBitRate  CRITICALITY ignore  TYPE LTEUESidelinkAggregateMaximumBitrate    PRESENCE optional   }|
    { ID id-A2X-PC5-QoS-Parameters                  CRITICALITY ignore  TYPE A2X-PC5-QoS-Parameters                  PRESENCE optional   }|
    { ID id-MobileIAB-Authorized                    CRITICALITY ignore  TYPE MobileIAB-Authorized                    PRESENCE optional   }|
    { ID id-Partially-Allowed-NSSAI                 CRITICALITY ignore  TYPE Partially-Allowed-NSSAI                 PRESENCE optional   }|
    { ID id-SLPositioningRangingServiceInfo         CRITICALITY ignore  TYPE SLPositioningRangingServiceInfo         PRESENCE optional   }|
    { ID id-ExtendedOldAMF                          CRITICALITY ignore  TYPE Extended-AMFName                        PRESENCE optional   }|
    { ID id-AMF-UE-NGAP-ID2                         CRITICALITY ignore  TYPE AMF-UE-NGAP-ID                          PRESENCE optional   },
    ...
}

-- **************************************************************
--
-- INITIAL CONTEXT SETUP RESPONSE
--
-- **************************************************************

InitialContextSetupResponse ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {InitialContextSetupResponseIEs} },
    ...
}

InitialContextSetupResponseIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID                          CRITICALITY ignore  TYPE AMF-UE-NGAP-ID                          PRESENCE mandatory
    }|
    { ID id-RAN-UE-NGAP-ID                          CRITICALITY ignore  TYPE RAN-UE-NGAP-ID                          PRESENCE mandatory
    }|
    { ID id-PDUSessionResourceSetupListCxtRes       CRITICALITY ignore  TYPE PDUSessionResourceSetupListCxtRes        PRESENCE optional
    }|
    { ID id-PDUSessionResourceFailedToSetupListCxtRes   CRITICALITY ignore  TYPE PDUSessionResourceFailedToSetupListCxtRes     PRESENCE optional
    }|
    { ID id-CriticalityDiagnostics                  CRITICALITY ignore  TYPE CriticalityDiagnostics                  PRESENCE optional
    },
    ...
```

```
}


-- **************************************************************
--
-- INITIAL CONTEXT SETUP FAILURE
--
-- **************************************************************

InitialContextSetupFailure ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {InitialContextSetupFailureIEs} },
    ...
}

InitialContextSetupFailureIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID                              CRITICALITY ignore  TYPE AMF-UE-NGAP-ID                              PRESENCE mandatory
    }|
    { ID id-RAN-UE-NGAP-ID                              CRITICALITY ignore  TYPE RAN-UE-NGAP-ID                              PRESENCE mandatory
    }|
    { ID id-PDUSessionResourceFailedToSetupListCxtFail  CRITICALITY ignore  TYPE PDUSessionResourceFailedToSetupListCxtFail    PRESENCE optional
    }|
    { ID id-Cause                                       CRITICALITY ignore  TYPE Cause                                       PRESENCE mandatory
    }|
    { ID id-CriticalityDiagnostics                      CRITICALITY ignore  TYPE CriticalityDiagnostics                      PRESENCE optional
    },
    ...
}

-- **************************************************************
--
-- UE Context Release Request Elementary Procedure
--
-- **************************************************************

-- **************************************************************
--
-- UE CONTEXT RELEASE REQUEST
--
-- **************************************************************

UEContextReleaseRequest ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {UEContextReleaseRequest-IEs} },
    ...
}

UEContextReleaseRequest-IEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID                      CRITICALITY reject  TYPE AMF-UE-NGAP-ID                      PRESENCE mandatory   }|
    { ID id-RAN-UE-NGAP-ID                      CRITICALITY reject  TYPE RAN-UE-NGAP-ID                      PRESENCE mandatory   }|
    { ID id-PDUSessionResourceListCxtRelReq     CRITICALITY reject  TYPE PDUSessionResourceListCxtRelReq     PRESENCE optional    }|
    { ID id-Cause                               CRITICALITY ignore  TYPE Cause                               PRESENCE mandatory   }|
    { ID id-GW-Context-Release-Indication       CRITICALITY reject  TYPE GW-Context-Release-Indication       PRESENCE optional    },
    ...
}
```

```
-- **************************************************************
--
-- UE Context Release Elementary Procedure
--
-- **************************************************************

-- **************************************************************
--
-- UE CONTEXT RELEASE COMMAND
--
-- **************************************************************

UEContextReleaseCommand ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {UEContextReleaseCommand-IEs} },
    ...
}

UEContextReleaseCommand-IEs NGAP-PROTOCOL-IES ::= {
    { ID id-UE-NGAP-IDs             CRITICALITY reject  TYPE UE-NGAP-IDs            PRESENCE mandatory  }|
    { ID id-Cause                   CRITICALITY ignore  TYPE Cause                  PRESENCE mandatory  },
    ...
}

-- **************************************************************
--
-- UE CONTEXT RELEASE COMPLETE
--
-- **************************************************************

UEContextReleaseComplete ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {UEContextReleaseComplete-IEs} },
    ...
}

UEContextReleaseComplete-IEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID                              CRITICALITY ignore  TYPE AMF-UE-NGAP-ID                              PRESENCE mandatory   }|
    { ID id-RAN-UE-NGAP-ID                              CRITICALITY ignore  TYPE RAN-UE-NGAP-ID                              PRESENCE mandatory   }|
    { ID id-UserLocationInformation                     CRITICALITY ignore  TYPE UserLocationInformation                     PRESENCE optional    }|
    { ID id-InfoOnRecommendedCellsAndRANNodesForPaging  CRITICALITY ignore  TYPE InfoOnRecommendedCellsAndRANNodesForPaging  PRESENCE optional    }|
    { ID id-PDUSessionResourceListCxtRelCpl             CRITICALITY reject  TYPE PDUSessionResourceListCxtRelCpl             PRESENCE optional    }|
    { ID id-CriticalityDiagnostics                      CRITICALITY ignore  TYPE CriticalityDiagnostics                      PRESENCE optional    }|
    { ID id-PagingAssisDataforCEcapabUE                 CRITICALITY ignore  TYPE PagingAssisDataforCEcapabUE                 PRESENCE optional    },
    ...
}

-- **************************************************************
--
-- UE Context Resume Elementary Procedure
--
-- **************************************************************

-- **************************************************************
--
-- UE CONTEXT RESUME REQUEST
```

```
--
-- **************************************************************

UEContextResumeRequest ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {UEContextResumeRequestIEs} },
    ...
}

UEContextResumeRequestIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID                          CRITICALITY reject  TYPE AMF-UE-NGAP-ID                          PRESENCE mandatory   }|
    { ID id-RAN-UE-NGAP-ID                          CRITICALITY reject  TYPE RAN-UE-NGAP-ID                          PRESENCE mandatory   }|
    { ID id-RRC-Resume-Cause                        CRITICALITY ignore  TYPE RRCEstablishmentCause                   PRESENCE mandatory   }|
    { ID id-PDUSessionResourceResumeListRESReq      CRITICALITY reject  TYPE PDUSessionResourceResumeListRESReq       PRESENCE optional    }|
    { ID id-PDUSessionResourceFailedToResumeListRESReq      CRITICALITY reject  TYPE PDUSessionResourceFailedToResumeListRESReq      PRESENCE
optional        }|
    { ID id-Suspend-Request-Indication              CRITICALITY ignore  TYPE Suspend-Request-Indication              PRESENCE optional    }|
    { ID id-InfoOnRecommendedCellsAndRANNodesForPaging  CRITICALITY ignore  TYPE InfoOnRecommendedCellsAndRANNodesForPaging    PRESENCE optional
    }|
    { ID id-PagingAssisDataforCEcapabUE                 CRITICALITY ignore  TYPE PagingAssisDataforCEcapabUE          PRESENCE optional    }|
    { ID id-UserLocationInformation                     CRITICALITY ignore  TYPE UserLocationInformation              PRESENCE optional    },
    ...
}

-- **************************************************************
--
-- UE CONTEXT RESUME RESPONSE
--
-- **************************************************************

UEContextResumeResponse ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {UEContextResumeResponseIEs} },
    ...
}

UEContextResumeResponseIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID                          CRITICALITY ignore  TYPE AMF-UE-NGAP-ID                          PRESENCE mandatory   }|
    { ID id-RAN-UE-NGAP-ID                          CRITICALITY ignore  TYPE RAN-UE-NGAP-ID                          PRESENCE mandatory   }|
    { ID id-PDUSessionResourceResumeListRESRes      CRITICALITY reject  TYPE PDUSessionResourceResumeListRESRes       PRESENCE optional    }|
    { ID id-PDUSessionResourceFailedToResumeListRESRes      CRITICALITY reject  TYPE PDUSessionResourceFailedToResumeListRESRes      PRESENCE
optional        }|
    { ID id-SecurityContext                         CRITICALITY reject  TYPE SecurityContext                         PRESENCE optional    }|
    { ID id-Suspend-Response-Indication             CRITICALITY ignore  TYPE Suspend-Response-Indication             PRESENCE optional    }|
    { ID id-Extended-ConnectedTime                  CRITICALITY ignore  TYPE Extended-ConnectedTime                  PRESENCE optional    }|
    { ID id-CriticalityDiagnostics                  CRITICALITY ignore  TYPE CriticalityDiagnostics                  PRESENCE optional    },
    ...
}

-- **************************************************************
--
-- UE CONTEXT RESUME FAILURE
--
-- **************************************************************

UEContextResumeFailure ::= SEQUENCE {
```

```
    protocolIEs     ProtocolIE-Container        { { UEContextResumeFailureIEs} },
    ...
}

UEContextResumeFailureIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID              CRITICALITY ignore  TYPE AMF-UE-NGAP-ID            PRESENCE mandatory  }|
    { ID id-RAN-UE-NGAP-ID              CRITICALITY ignore  TYPE RAN-UE-NGAP-ID            PRESENCE mandatory  }|
    { ID id-Cause                       CRITICALITY ignore  TYPE Cause                     PRESENCE mandatory  }|
    { ID id-CriticalityDiagnostics      CRITICALITY ignore  TYPE CriticalityDiagnostics    PRESENCE optional   },
    ...
}


-- **************************************************************
--
-- UE Context Suspend Elementary Procedure
--
-- **************************************************************

-- **************************************************************
--
-- UE CONTEXT SUSPEND REQUEST
--
-- **************************************************************

UEContextSuspendRequest ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {UEContextSuspendRequestIEs} },
    ...
}

UEContextSuspendRequestIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID                              CRITICALITY reject  TYPE AMF-UE-NGAP-ID                              PRESENCE mandatory
    }|
    { ID id-RAN-UE-NGAP-ID                              CRITICALITY reject  TYPE RAN-UE-NGAP-ID                              PRESENCE mandatory
    }|
    { ID id-InfoOnRecommendedCellsAndRANNodesForPaging  CRITICALITY ignore  TYPE InfoOnRecommendedCellsAndRANNodesForPaging  PRESENCE optional
    }|
    { ID id-PagingAssisDataforCEcapabUE                 CRITICALITY ignore  TYPE PagingAssisDataforCEcapabUE                 PRESENCE optional
    }|
    { ID id-PDUSessionResourceSuspendListSUSReq         CRITICALITY reject  TYPE PDUSessionResourceSuspendListSUSReq         PRESENCE optional
    }|
    { ID id-UserLocationInformation                     CRITICALITY ignore  TYPE UserLocationInformation                     PRESENCE optional
    },
    ...
}

-- **************************************************************
--
-- UE CONTEXT SUSPEND RESPONSE
--
-- **************************************************************

UEContextSuspendResponse ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {UEContextSuspendResponseIEs} },
```

```
    ...
}

UEContextSuspendResponseIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID                          CRITICALITY ignore  TYPE AMF-UE-NGAP-ID                          PRESENCE mandatory   }|
    { ID id-RAN-UE-NGAP-ID                          CRITICALITY ignore  TYPE RAN-UE-NGAP-ID                          PRESENCE mandatory   }|
    { ID id-SecurityContext                         CRITICALITY reject  TYPE SecurityContext                         PRESENCE optional    }|
    { ID id-CriticalityDiagnostics                  CRITICALITY ignore  TYPE CriticalityDiagnostics                  PRESENCE optional    },
    ...
}

-- **************************************************************
--
-- UE CONTEXT SUSPEND FAILURE
--
-- **************************************************************

UEContextSuspendFailure ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { { UEContextSuspendFailureIEs} },
    ...
}

UEContextSuspendFailureIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID              CRITICALITY ignore  TYPE AMF-UE-NGAP-ID             PRESENCE mandatory  }|
    { ID id-RAN-UE-NGAP-ID              CRITICALITY ignore  TYPE RAN-UE-NGAP-ID             PRESENCE mandatory  }|
    { ID id-Cause                       CRITICALITY ignore  TYPE Cause                      PRESENCE mandatory  }|
    { ID id-CriticalityDiagnostics      CRITICALITY ignore  TYPE CriticalityDiagnostics     PRESENCE optional   },
    ...
}

-- **************************************************************
--
-- UE Context Modification Elementary Procedure
--
-- **************************************************************

-- **************************************************************
--
-- UE CONTEXT MODIFICATION REQUEST
--
-- **************************************************************

UEContextModificationRequest ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {UEContextModificationRequestIEs} },
    ...
}

UEContextModificationRequestIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID                          CRITICALITY reject  TYPE AMF-UE-NGAP-ID                      PRESENCE mandatory   }|
    { ID id-RAN-UE-NGAP-ID                          CRITICALITY reject  TYPE RAN-UE-NGAP-ID                      PRESENCE mandatory   }|
    { ID id-RANPagingPriority                       CRITICALITY ignore  TYPE RANPagingPriority                   PRESENCE optional    }|
    { ID id-SecurityKey                             CRITICALITY reject  TYPE SecurityKey                         PRESENCE optional    }|
    { ID id-IndexToRFSP                             CRITICALITY ignore  TYPE IndexToRFSP                         PRESENCE optional    }|
    { ID id-UEAggregateMaximumBitRate               CRITICALITY ignore  TYPE UEAggregateMaximumBitRate           PRESENCE optional    }|
```

```
    { ID id-UESecurityCapabilities                  CRITICALITY reject  TYPE UESecurityCapabilities                PRESENCE optional    }|
    { ID id-CoreNetworkAssistanceInformationForInactive     CRITICALITY ignore  TYPE CoreNetworkAssistanceInformationForInactive     PRESENCE
optional        }|
    { ID id-EmergencyFallbackIndicator              CRITICALITY reject  TYPE EmergencyFallbackIndicator            PRESENCE optional    }|
    { ID id-NewAMF-UE-NGAP-ID                       CRITICALITY reject  TYPE AMF-UE-NGAP-ID                       PRESENCE optional    }|
    { ID id-RRCInactiveTransitionReportRequest      CRITICALITY ignore  TYPE RRCInactiveTransitionReportRequest    PRESENCE optional    }|
    { ID id-NewGUAMI                                CRITICALITY reject  TYPE GUAMI                                PRESENCE optional    }|
    { ID id-CNAssistedRANTuning                     CRITICALITY ignore  TYPE CNAssistedRANTuning                  PRESENCE optional    }|
    { ID id-SRVCCOperationPossible                  CRITICALITY ignore  TYPE SRVCCOperationPossible               PRESENCE optional    }|
    { ID id-IAB-Authorized                          CRITICALITY ignore  TYPE IAB-Authorized                       PRESENCE optional    }|
    { ID id-NRV2XServicesAuthorized                 CRITICALITY ignore  TYPE NRV2XServicesAuthorized              PRESENCE optional    }|
    { ID id-LTEV2XServicesAuthorized                CRITICALITY ignore  TYPE LTEV2XServicesAuthorized             PRESENCE optional    }|
    { ID id-NRUESidelinkAggregateMaximumBitrate     CRITICALITY ignore  TYPE NRUESidelinkAggregateMaximumBitrate   PRESENCE optional    }|
    { ID id-LTEUESidelinkAggregateMaximumBitrate    CRITICALITY ignore  TYPE LTEUESidelinkAggregateMaximumBitrate  PRESENCE optional    }|
    { ID id-PC5QoSParameters                        CRITICALITY ignore  TYPE PC5QoSParameters                     PRESENCE optional }|
    { ID id-UERadioCapabilityID                     CRITICALITY reject  TYPE UERadioCapabilityID                  PRESENCE optional    }|
    { ID id-RGLevelWirelineAccessCharacteristics    CRITICALITY ignore  TYPE RGLevelWirelineAccessCharacteristics  PRESENCE optional    }|
    { ID id-TimeSyncAssistanceInfo                  CRITICALITY ignore  TYPE TimeSyncAssistanceInfo                PRESENCE optional    }|
    { ID id-QMCConfigInfo                           CRITICALITY ignore  TYPE QMCConfigInfo                         PRESENCE optional    }|
    { ID id-QMCDeactivation                         CRITICALITY ignore  TYPE QMCDeactivation                       PRESENCE optional    }|
    { ID id-UESliceMaximumBitRateList               CRITICALITY ignore  TYPE UESliceMaximumBitRateList             PRESENCE optional    }|
    { ID id-ManagementBasedMDTPLMNModificationList  CRITICALITY ignore  TYPE MDTPLMNModificationList              PRESENCE optional    }|
    { ID id-FiveG-ProSeAuthorized                   CRITICALITY ignore  TYPE FiveG-ProSeAuthorized                 PRESENCE optional    }|
    { ID id-FiveG-ProSeUEPC5AggregateMaximumBitRate CRITICALITY ignore  TYPE NRUESidelinkAggregateMaximumBitrate   PRESENCE optional    }|
    { ID id-FiveG-ProSePC5QoSParameters             CRITICALITY ignore  TYPE FiveG-ProSePC5QoSParameters           PRESENCE optional    }|
    { ID id-NetworkControlledRepeaterAuthorized     CRITICALITY ignore  TYPE NetworkControlledRepeaterAuthorized PRESENCE optional    }|
    { ID id-AerialUEsubscriptionInformation         CRITICALITY ignore  TYPE AerialUEsubscriptionInformation       PRESENCE optional    }|
    { ID id-NR-A2X-ServicesAuthorized               CRITICALITY ignore  TYPE NR-A2X-ServicesAuthorized             PRESENCE optional    }|
    { ID id-LTE-A2X-ServicesAuthorized              CRITICALITY ignore  TYPE LTE-A2X-ServicesAuthorized            PRESENCE optional    }|
    { ID id-NR-A2X-UE-PC5-AggregateMaximumBitRate   CRITICALITY ignore  TYPE NRUESidelinkAggregateMaximumBitrate   PRESENCE optional    }|
    { ID id-LTE-A2X-UE-PC5-AggregateMaximumBitRate  CRITICALITY ignore  TYPE LTEUESidelinkAggregateMaximumBitrate  PRESENCE optional    }|
    { ID id-A2X-PC5-QoS-Parameters                  CRITICALITY ignore  TYPE A2X-PC5-QoS-Parameters               PRESENCE optional    }|
    { ID id-MobileIAB-Authorized                    CRITICALITY ignore  TYPE MobileIAB-Authorized                 PRESENCE optional    }|
    { ID id-SLPositioningRangingServiceInfo         CRITICALITY ignore  TYPE SLPositioningRangingServiceInfo       PRESENCE optional    },
    ...
}

-- **************************************************************
--
-- UE CONTEXT MODIFICATION RESPONSE
--
-- **************************************************************

UEContextModificationResponse ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {UEContextModificationResponseIEs} },
    ...
}

UEContextModificationResponseIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID              CRITICALITY ignore  TYPE AMF-UE-NGAP-ID             PRESENCE mandatory  }|
    { ID id-RAN-UE-NGAP-ID              CRITICALITY ignore  TYPE RAN-UE-NGAP-ID             PRESENCE mandatory  }|
    { ID id-RRCState                    CRITICALITY ignore  TYPE RRCState                   PRESENCE optional   }|
    { ID id-UserLocationInformation     CRITICALITY ignore  TYPE UserLocationInformation    PRESENCE optional }|
    { ID id-CriticalityDiagnostics      CRITICALITY ignore  TYPE CriticalityDiagnostics     PRESENCE optional   },
```

```
    ...
}

-- **************************************************************
--
-- UE CONTEXT MODIFICATION FAILURE
--
-- **************************************************************

UEContextModificationFailure ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {UEContextModificationFailureIEs} },
    ...
}

UEContextModificationFailureIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID              CRITICALITY ignore  TYPE AMF-UE-NGAP-ID             PRESENCE mandatory  }|
    { ID id-RAN-UE-NGAP-ID              CRITICALITY ignore  TYPE RAN-UE-NGAP-ID             PRESENCE mandatory  }|
    { ID id-Cause                       CRITICALITY ignore  TYPE Cause                      PRESENCE mandatory  }|
    { ID id-CriticalityDiagnostics      CRITICALITY ignore  TYPE CriticalityDiagnostics     PRESENCE optional   },
    ...
}

-- **************************************************************
--
-- RRC INACTIVE TRANSITION REPORT
--
-- **************************************************************

RRCInactiveTransitionReport ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {RRCInactiveTransitionReportIEs} },
    ...
}

RRCInactiveTransitionReportIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID              CRITICALITY reject  TYPE AMF-UE-NGAP-ID                PRESENCE mandatory }|
    { ID id-RAN-UE-NGAP-ID              CRITICALITY reject  TYPE RAN-UE-NGAP-ID                PRESENCE mandatory }|
    { ID id-RRCState                    CRITICALITY ignore  TYPE RRCState                      PRESENCE mandatory }|
    { ID id-UserLocationInformation     CRITICALITY ignore  TYPE UserLocationInformation       PRESENCE mandatory },
    ...
}

-- **************************************************************
--
-- Retrieve UE Information
--
-- **************************************************************

RetrieveUEInformation ::= SEQUENCE {
    protocolIEs         ProtocolIE-Container       { { RetrieveUEInformationIEs} },
    ...
}

RetrieveUEInformationIEs NGAP-PROTOCOL-IES ::= {
    { ID id-FiveG-S-TMSI                    CRITICALITY reject  TYPE FiveG-S-TMSI              PRESENCE mandatory },
```

```
    ...

}

-- **************************************************************

-- UE Information Transfer
--
-- **************************************************************

UEInformationTransfer ::= SEQUENCE {
    protocolIEs         ProtocolIE-Container       { {  UEInformationTransferIEs} },
    ...
}

UEInformationTransferIEs NGAP-PROTOCOL-IES ::= {
    { ID id-FiveG-S-TMSI                CRITICALITY reject      TYPE FiveG-S-TMSI              PRESENCE mandatory }|
    { ID id-NB-IoT-UEPriority           CRITICALITY ignore  TYPE NB-IoT-UEPriority          PRESENCE optional   }|
    { ID id-UERadioCapability           CRITICALITY ignore  TYPE UERadioCapability          PRESENCE optional   }|
    { ID id-S-NSSAI                     CRITICALITY ignore  TYPE S-NSSAI                    PRESENCE optional   }|
    { ID id-AllowedNSSAI                CRITICALITY ignore  TYPE AllowedNSSAI               PRESENCE optional   }|
    { ID id-UE-DifferentiationInfo      CRITICALITY ignore  TYPE UE-DifferentiationInfo     PRESENCE optional   }|
    { ID id-MaskedIMEISV                CRITICALITY ignore  TYPE MaskedIMEISV               PRESENCE optional   }|
    { ID id-Partially-Allowed-NSSAI     CRITICALITY ignore  TYPE Partially-Allowed-NSSAI    PRESENCE optional   },
    ...
}

-- **************************************************************
--
-- RAN CP Relocation Indication
--
-- **************************************************************

RANCPRelocationIndication ::= SEQUENCE {
    protocolIEs         ProtocolIE-Container { { RANCPRelocationIndicationIEs} },
    ...
}

RANCPRelocationIndicationIEs NGAP-PROTOCOL-IES ::= {
    { ID id-RAN-UE-NGAP-ID                  CRITICALITY reject  TYPE RAN-UE-NGAP-ID              PRESENCE mandatory   }|
    { ID id-FiveG-S-TMSI                    CRITICALITY reject  TYPE FiveG-S-TMSI                PRESENCE mandatory   }|
    { ID id-EUTRA-CGI                       CRITICALITY ignore  TYPE EUTRA-CGI                   PRESENCE mandatory   }|
    { ID id-TAI                             CRITICALITY ignore  TYPE TAI                         PRESENCE mandatory   }|
    { ID id-UL-CP-SecurityInformation       CRITICALITY reject  TYPE UL-CP-SecurityInformation   PRESENCE mandatory   },
    ...
}

-- **************************************************************
--
-- UE MOBILITY MANAGEMENT ELEMENTARY PROCEDURES
--
-- **************************************************************

-- **************************************************************
```

```
--
-- Handover Preparation Elementary Procedure
--
-- **************************************************************

-- **************************************************************
--
-- HANDOVER REQUIRED
--
-- **************************************************************

HandoverRequired ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {HandoverRequiredIEs} },
    ...
}

HandoverRequiredIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID                          CRITICALITY reject  TYPE AMF-UE-NGAP-ID                         PRESENCE mandatory   }|
    { ID id-RAN-UE-NGAP-ID                          CRITICALITY reject  TYPE RAN-UE-NGAP-ID                         PRESENCE mandatory   }|
    { ID id-HandoverType                            CRITICALITY reject  TYPE HandoverType                           PRESENCE mandatory   }|
    { ID id-Cause                                   CRITICALITY ignore  TYPE Cause                                  PRESENCE mandatory   }|
    { ID id-TargetID                                CRITICALITY reject  TYPE TargetID                               PRESENCE mandatory   }|
    { ID id-DirectForwardingPathAvailability        CRITICALITY ignore  TYPE DirectForwardingPathAvailability       PRESENCE optional    }|
    { ID id-PDUSessionResourceListHORqd             CRITICALITY reject  TYPE PDUSessionResourceListHORqd            PRESENCE mandatory   }|
    { ID id-SourceToTarget-TransparentContainer     CRITICALITY reject  TYPE SourceToTarget-TransparentContainer    PRESENCE mandatory   },
    ...
}

-- **************************************************************
--
-- HANDOVER COMMAND
--
-- **************************************************************

HandoverCommand ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {HandoverCommandIEs} },
    ...
}

HandoverCommandIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID                              CRITICALITY reject  TYPE AMF-UE-NGAP-ID                             PRESENCE mandatory   }|
    { ID id-RAN-UE-NGAP-ID                              CRITICALITY reject  TYPE RAN-UE-NGAP-ID                             PRESENCE mandatory   }|
    { ID id-HandoverType                                CRITICALITY reject  TYPE HandoverType                               PRESENCE mandatory   }|
    { ID id-NASSecurityParametersFromNGRAN              CRITICALITY reject  TYPE NASSecurityParametersFromNGRAN             PRESENCE conditional }|
-- The above IE shall be present if the HandoverType IE is set to the value “5GStoEPPS” or “5GStoUTRAN”
    { ID id-PDUSessionResourceHandoverList              CRITICALITY ignore  TYPE PDUSessionResourceHandoverList             PRESENCE optional    }|
    { ID id-PDUSessionResourceToReleaseListHOCmd        CRITICALITY ignore  TYPE PDUSessionResourceToReleaseListHOCmd       PRESENCE optional    }|
    { ID id-TargetToSource-TransparentContainer         CRITICALITY reject  TYPE TargetToSource-TransparentContainer        PRESENCE mandatory   }|
    { ID id-CriticalityDiagnostics                      CRITICALITY ignore  TYPE CriticalityDiagnostics                     PRESENCE optional    },
    ...
}


-- **************************************************************
```

```
--
-- HANDOVER PREPARATION FAILURE
--
-- **************************************************************

HandoverPreparationFailure ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {HandoverPreparationFailureIEs} },
    ...
}

HandoverPreparationFailureIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID              CRITICALITY ignore  TYPE AMF-UE-NGAP-ID             PRESENCE mandatory  }|
    { ID id-RAN-UE-NGAP-ID              CRITICALITY ignore  TYPE RAN-UE-NGAP-ID             PRESENCE mandatory  }|
    { ID id-Cause                       CRITICALITY ignore  TYPE Cause                      PRESENCE mandatory  }|
    { ID id-CriticalityDiagnostics      CRITICALITY ignore  TYPE CriticalityDiagnostics     PRESENCE optional   }|
    { ID id-TargettoSource-Failure-TransparentContainer     CRITICALITY ignore  TYPE TargettoSource-Failure-TransparentContainer     PRESENCE
optional        },
    ...
}

-- **************************************************************
--
-- Handover Resource Allocation Elementary Procedure
--
-- **************************************************************

-- **************************************************************
--
-- HANDOVER REQUEST
--
-- **************************************************************

HandoverRequest ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {HandoverRequestIEs} },
    ...
}

HandoverRequestIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID                          CRITICALITY reject  TYPE AMF-UE-NGAP-ID                         PRESENCE mandatory   }|
    { ID id-HandoverType                            CRITICALITY reject  TYPE HandoverType                           PRESENCE mandatory   }|
    { ID id-Cause                                   CRITICALITY ignore  TYPE Cause                                  PRESENCE mandatory   }|
    { ID id-UEAggregateMaximumBitRate               CRITICALITY reject  TYPE UEAggregateMaximumBitRate              PRESENCE mandatory   }|
    { ID id-CoreNetworkAssistanceInformationForInactive     CRITICALITY ignore  TYPE CoreNetworkAssistanceInformationForInactive     PRESENCE
optional        }|
    { ID id-UESecurityCapabilities                  CRITICALITY reject  TYPE UESecurityCapabilities                 PRESENCE mandatory   }|
    { ID id-SecurityContext                         CRITICALITY reject  TYPE SecurityContext                        PRESENCE mandatory   }|
    { ID id-NewSecurityContextInd                   CRITICALITY reject  TYPE NewSecurityContextInd                  PRESENCE optional    }|
    { ID id-NASC                                    CRITICALITY reject  TYPE NAS-PDU                                PRESENCE optional    }|
    { ID id-PDUSessionResourceSetupListHOReq        CRITICALITY reject  TYPE PDUSessionResourceSetupListHOReq        PRESENCE mandatory   }|
    { ID id-AllowedNSSAI                            CRITICALITY reject  TYPE AllowedNSSAI                           PRESENCE mandatory   }|
    { ID id-TraceActivation                         CRITICALITY ignore  TYPE TraceActivation                        PRESENCE optional    }|
    { ID id-MaskedIMEISV                            CRITICALITY ignore  TYPE MaskedIMEISV                           PRESENCE optional    }|
    { ID id-SourceToTarget-TransparentContainer     CRITICALITY reject  TYPE SourceToTarget-TransparentContainer    PRESENCE mandatory   }|
    { ID id-MobilityRestrictionList                 CRITICALITY ignore  TYPE MobilityRestrictionList                PRESENCE optional    }|
```

```
    { ID id-LocationReportingRequestType            CRITICALITY ignore  TYPE LocationReportingRequestType          PRESENCE optional    }|
    { ID id-RRCInactiveTransitionReportRequest      CRITICALITY ignore  TYPE RRCInactiveTransitionReportRequest    PRESENCE optional    }|
    { ID id-GUAMI                                   CRITICALITY reject  TYPE GUAMI                                 PRESENCE mandatory   }|
    { ID id-RedirectionVoiceFallback                CRITICALITY ignore  TYPE RedirectionVoiceFallback              PRESENCE optional    }|
    { ID id-CNAssistedRANTuning                     CRITICALITY ignore  TYPE CNAssistedRANTuning                   PRESENCE optional    }|
    { ID id-SRVCCOperationPossible                  CRITICALITY ignore  TYPE SRVCCOperationPossible                PRESENCE optional    }|
    { ID id-IAB-Authorized                          CRITICALITY reject  TYPE IAB-Authorized                        PRESENCE optional    }|
    { ID id-Enhanced-CoverageRestriction            CRITICALITY ignore  TYPE Enhanced-CoverageRestriction          PRESENCE optional    }|
    { ID id-UE-DifferentiationInfo                  CRITICALITY ignore  TYPE UE-DifferentiationInfo                PRESENCE optional    }|
    { ID id-NRV2XServicesAuthorized                 CRITICALITY ignore  TYPE NRV2XServicesAuthorized               PRESENCE optional    }|
    { ID id-LTEV2XServicesAuthorized                CRITICALITY ignore  TYPE LTEV2XServicesAuthorized              PRESENCE optional    }|
    { ID id-NRUESidelinkAggregateMaximumBitrate     CRITICALITY ignore  TYPE NRUESidelinkAggregateMaximumBitrate   PRESENCE optional    }|
    { ID id-LTEUESidelinkAggregateMaximumBitrate    CRITICALITY ignore  TYPE LTEUESidelinkAggregateMaximumBitrate  PRESENCE optional    }|
    { ID id-PC5QoSParameters                        CRITICALITY ignore  TYPE PC5QoSParameters                      PRESENCE optional    }|
    { ID id-CEmodeBrestricted                       CRITICALITY ignore  TYPE CEmodeBrestricted                     PRESENCE optional    }|
    { ID id-UE-UP-CIoT-Support                      CRITICALITY ignore  TYPE UE-UP-CIoT-Support                    PRESENCE optional    }|
    { ID id-ManagementBasedMDTPLMNList              CRITICALITY ignore  TYPE MDTPLMNList                           PRESENCE optional    }|
    { ID id-UERadioCapabilityID                     CRITICALITY reject  TYPE UERadioCapabilityID                   PRESENCE optional    }|
    { ID id-Extended-ConnectedTime                  CRITICALITY ignore  TYPE Extended-ConnectedTime                PRESENCE optional    }|
    { ID id-TimeSyncAssistanceInfo                  CRITICALITY ignore  TYPE TimeSyncAssistanceInfo                PRESENCE optional    }|
    { ID id-UESliceMaximumBitRateList               CRITICALITY ignore  TYPE UESliceMaximumBitRateList             PRESENCE optional    }|
    { ID id-FiveG-ProSeAuthorized                   CRITICALITY ignore  TYPE FiveG-ProSeAuthorized                 PRESENCE optional    }|
    { ID id-FiveG-ProSeUEPC5AggregateMaximumBitRate CRITICALITY ignore  TYPE NRUESidelinkAggregateMaximumBitrate  PRESENCE optional    }|
    { ID id-FiveG-ProSePC5QoSParameters             CRITICALITY ignore  TYPE FiveG-ProSePC5QoSParameters           PRESENCE optional    }|
    { ID id-AerialUEsubscriptionInformation         CRITICALITY ignore  TYPE AerialUEsubscriptionInformation       PRESENCE optional    }|
    { ID id-NR-A2X-ServicesAuthorized               CRITICALITY ignore  TYPE NR-A2X-ServicesAuthorized             PRESENCE optional    }|
    { ID id-LTE-A2X-ServicesAuthorized              CRITICALITY ignore  TYPE LTE-A2X-ServicesAuthorized            PRESENCE optional    }|
    { ID id-NR-A2X-UE-PC5-AggregateMaximumBitRate   CRITICALITY ignore  TYPE NRUESidelinkAggregateMaximumBitrate  PRESENCE optional    }|
    { ID id-LTE-A2X-UE-PC5-AggregateMaximumBitRate  CRITICALITY ignore  TYPE LTEUESidelinkAggregateMaximumBitrate PRESENCE optional    }|
    { ID id-A2X-PC5-QoS-Parameters                  CRITICALITY ignore  TYPE A2X-PC5-QoS-Parameters                PRESENCE optional    }|
    { ID id-MobileIAB-Authorized                    CRITICALITY ignore  TYPE MobileIAB-Authorized                  PRESENCE optional    }|
    { ID id-NoPDUSessionIndication                  CRITICALITY ignore  TYPE NoPDUSessionIndication                PRESENCE optional    }|
    { ID id-Partially-Allowed-NSSAI                 CRITICALITY ignore  TYPE Partially-Allowed-NSSAI               PRESENCE optional    }|
    { ID id-SLPositioningRangingServiceInfo         CRITICALITY ignore  TYPE SLPositioningRangingServiceInfo       PRESENCE optional    }|
    { ID id-AMF-UE-NGAP-ID2                         CRITICALITY ignore  TYPE AMF-UE-NGAP-ID                        PRESENCE optional    }|
    { ID id-Target-RAN-Node-ID                      CRITICALITY ignore  TYPE GlobalRANNodeID                       PRESENCE optional    },
    ...
}

-- **************************************************************
--
-- HANDOVER REQUEST ACKNOWLEDGE
--
-- **************************************************************

HandoverRequestAcknowledge ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {HandoverRequestAcknowledgeIEs} },
    ...
}

HandoverRequestAcknowledgeIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID                          CRITICALITY ignore  TYPE AMF-UE-NGAP-ID                          PRESENCE mandatory   }|
    { ID id-RAN-UE-NGAP-ID                          CRITICALITY ignore  TYPE RAN-UE-NGAP-ID                          PRESENCE mandatory   }|
    { ID id-PDUSessionResourceAdmittedList          CRITICALITY ignore  TYPE PDUSessionResourceAdmittedList          PRESENCE mandatory   }|
```

```
    { ID id-PDUSessionResourceFailedToSetupListHOAck    CRITICALITY ignore  TYPE PDUSessionResourceFailedToSetupListHOAck   PRESENCE optional    }|
    { ID id-TargetToSource-TransparentContainer         CRITICALITY reject  TYPE TargetToSource-TransparentContainer        PRESENCE mandatory   }|
    { ID id-CriticalityDiagnostics                      CRITICALITY ignore  TYPE CriticalityDiagnostics                     PRESENCE optional    }|
    { ID id-NPN-AccessInformation                       CRITICALITY reject  TYPE NPN-AccessInformation                      PRESENCE optional    }|
    { ID id-RedCapIndication                            CRITICALITY ignore  TYPE RedCapIndication                           PRESENCE optional    }|
    { ID id-ERedCapIndication                           CRITICALITY ignore  TYPE ERedCapIndication                          PRESENCE optional    },
    ...
}


-- **************************************************************
--
-- HANDOVER FAILURE
--
-- **************************************************************

HandoverFailure ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { { HandoverFailureIEs} },
    ...
}

HandoverFailureIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID              CRITICALITY ignore  TYPE AMF-UE-NGAP-ID             PRESENCE mandatory  }|
    { ID id-Cause                       CRITICALITY ignore  TYPE Cause                      PRESENCE mandatory  }|
    { ID id-CriticalityDiagnostics      CRITICALITY ignore  TYPE CriticalityDiagnostics     PRESENCE optional   }|
    { ID id-TargettoSource-Failure-TransparentContainer     CRITICALITY ignore  TYPE TargettoSource-Failure-TransparentContainer     PRESENCE
optional        },
    ...
}

-- **************************************************************
--
-- Handover Notification Elementary Procedure
--
-- **************************************************************

-- **************************************************************
--
-- HANDOVER NOTIFY
--
-- **************************************************************

HandoverNotify ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { { HandoverNotifyIEs} },
    ...
}

HandoverNotifyIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID              CRITICALITY reject  TYPE AMF-UE-NGAP-ID             PRESENCE mandatory  }|
    { ID id-RAN-UE-NGAP-ID              CRITICALITY reject  TYPE RAN-UE-NGAP-ID             PRESENCE mandatory  }|
    { ID id-UserLocationInformation     CRITICALITY ignore  TYPE UserLocationInformation    PRESENCE mandatory  }|
    { ID id-NotifySourceNGRANNode       CRITICALITY ignore  TYPE NotifySourceNGRANNode      PRESENCE optional   },
    ...
}
```

```
-- **************************************************************
--
-- Path Switch Request Elementary Procedure
--
-- **************************************************************

-- **************************************************************
--
-- PATH SWITCH REQUEST
--
-- **************************************************************

PathSwitchRequest ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { { PathSwitchRequestIEs} },
    ...
}

PathSwitchRequestIEs NGAP-PROTOCOL-IES ::= {
    { ID id-RAN-UE-NGAP-ID                              CRITICALITY reject  TYPE RAN-UE-NGAP-ID                             PRESENCE mandatory   }|
    { ID id-SourceAMF-UE-NGAP-ID                        CRITICALITY reject  TYPE AMF-UE-NGAP-ID                             PRESENCE mandatory   }|
    { ID id-UserLocationInformation                     CRITICALITY ignore  TYPE UserLocationInformation                    PRESENCE mandatory   }|
    { ID id-UESecurityCapabilities                      CRITICALITY ignore  TYPE UESecurityCapabilities                     PRESENCE mandatory   }|
    { ID id-PDUSessionResourceToBeSwitchedDLList        CRITICALITY reject  TYPE PDUSessionResourceToBeSwitchedDLList       PRESENCE mandatory   }|
    { ID id-PDUSessionResourceFailedToSetupListPSReq    CRITICALITY ignore  TYPE PDUSessionResourceFailedToSetupListPSReq   PRESENCE optional    }|
    { ID id-RRC-Resume-Cause                            CRITICALITY ignore  TYPE RRCEstablishmentCause                      PRESENCE optional    }|
    { ID id-RedCapIndication                            CRITICALITY ignore  TYPE RedCapIndication                           PRESENCE optional    }|
    { ID id-ERedCapIndication                           CRITICALITY ignore  TYPE ERedCapIndication                          PRESENCE optional    }|
    { ID id-SourceAMF-GUAMI                         CRITICALITY ignore  TYPE GUAMI                                  PRESENCE optional    },
    ...
}


-- **************************************************************
--
-- PATH SWITCH REQUEST ACKNOWLEDGE
--
-- **************************************************************

PathSwitchRequestAcknowledge ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { { PathSwitchRequestAcknowledgeIEs} },
    ...
}

PathSwitchRequestAcknowledgeIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID                              CRITICALITY ignore  TYPE AMF-UE-NGAP-ID                             PRESENCE mandatory   }|
    { ID id-RAN-UE-NGAP-ID                              CRITICALITY ignore  TYPE RAN-UE-NGAP-ID                             PRESENCE mandatory   }|
    { ID id-UESecurityCapabilities                      CRITICALITY reject  TYPE UESecurityCapabilities                     PRESENCE optional    }|
    { ID id-SecurityContext                             CRITICALITY reject  TYPE SecurityContext                            PRESENCE mandatory   }|
    { ID id-NewSecurityContextInd                       CRITICALITY reject  TYPE NewSecurityContextInd                      PRESENCE optional    }|
    { ID id-PDUSessionResourceSwitchedList              CRITICALITY ignore  TYPE PDUSessionResourceSwitchedList             PRESENCE mandatory   }|
    { ID id-PDUSessionResourceReleasedListPSAck         CRITICALITY ignore  TYPE PDUSessionResourceReleasedListPSAck        PRESENCE optional    }|
    { ID id-AllowedNSSAI                                CRITICALITY reject  TYPE AllowedNSSAI                               PRESENCE mandatory   }|
```

```
    { ID id-CoreNetworkAssistanceInformationForInactive     CRITICALITY ignore  TYPE CoreNetworkAssistanceInformationForInactive     PRESENCE
optional        }|
    { ID id-RRCInactiveTransitionReportRequest          CRITICALITY ignore  TYPE RRCInactiveTransitionReportRequest      PRESENCE optional    }|
    { ID id-CriticalityDiagnostics                      CRITICALITY ignore  TYPE CriticalityDiagnostics                  PRESENCE optional    }|
    { ID id-RedirectionVoiceFallback                    CRITICALITY ignore  TYPE RedirectionVoiceFallback                PRESENCE optional    }|
    { ID id-CNAssistedRANTuning                         CRITICALITY ignore  TYPE CNAssistedRANTuning                     PRESENCE optional    }|
    { ID id-SRVCCOperationPossible                      CRITICALITY ignore  TYPE SRVCCOperationPossible                  PRESENCE optional    }|
    { ID id-Enhanced-CoverageRestriction                CRITICALITY ignore  TYPE Enhanced-CoverageRestriction            PRESENCE optional    }|
    { ID id-Extended-ConnectedTime                      CRITICALITY ignore  TYPE Extended-ConnectedTime                  PRESENCE optional    }|
    { ID id-UE-DifferentiationInfo                      CRITICALITY ignore  TYPE UE-DifferentiationInfo                  PRESENCE optional    }|
    { ID id-NRV2XServicesAuthorized                     CRITICALITY ignore  TYPE NRV2XServicesAuthorized                 PRESENCE optional    }|
    { ID id-LTEV2XServicesAuthorized                    CRITICALITY ignore  TYPE LTEV2XServicesAuthorized                PRESENCE optional    }|
    { ID id-NRUESidelinkAggregateMaximumBitrate         CRITICALITY ignore  TYPE NRUESidelinkAggregateMaximumBitrate     PRESENCE optional    }|
    { ID id-LTEUESidelinkAggregateMaximumBitrate        CRITICALITY ignore  TYPE LTEUESidelinkAggregateMaximumBitrate    PRESENCE optional    }|
    { ID id-PC5QoSParameters                            CRITICALITY ignore  TYPE PC5QoSParameters                        PRESENCE optional    }|
    { ID id-CEmodeBrestricted                           CRITICALITY ignore  TYPE CEmodeBrestricted                       PRESENCE optional    }|
    { ID id-UE-UP-CIoT-Support                          CRITICALITY ignore  TYPE UE-UP-CIoT-Support                      PRESENCE optional    }|
    { ID id-UERadioCapabilityID                         CRITICALITY reject  TYPE UERadioCapabilityID                     PRESENCE optional    }|
    { ID id-ManagementBasedMDTPLMNList                  CRITICALITY ignore  TYPE MDTPLMNList                             PRESENCE optional    }|
    { ID id-TimeSyncAssistanceInfo                      CRITICALITY ignore  TYPE TimeSyncAssistanceInfo                  PRESENCE optional    }|
    { ID id-FiveG-ProSeAuthorized                       CRITICALITY ignore  TYPE FiveG-ProSeAuthorized                   PRESENCE optional    }|
    { ID id-FiveG-ProSeUEPC5AggregateMaximumBitRate     CRITICALITY ignore  TYPE NRUESidelinkAggregateMaximumBitrate     PRESENCE optional    }|
    { ID id-FiveG-ProSePC5QoSParameters                 CRITICALITY ignore  TYPE FiveG-ProSePC5QoSParameters             PRESENCE optional    }|
    { ID id-ManagementBasedMDTPLMNModificationList      CRITICALITY ignore  TYPE MDTPLMNModificationList                 PRESENCE optional    }|
    { ID id-IAB-Authorized                              CRITICALITY ignore  TYPE IAB-Authorized                          PRESENCE optional    }|
    { ID id-AerialUEsubscriptionInformation             CRITICALITY ignore  TYPE AerialUEsubscriptionInformation         PRESENCE optional    }|
    { ID id-NR-A2X-ServicesAuthorized                   CRITICALITY ignore  TYPE NR-A2X-ServicesAuthorized               PRESENCE optional    }|
    { ID id-LTE-A2X-ServicesAuthorized                  CRITICALITY ignore  TYPE LTE-A2X-ServicesAuthorized              PRESENCE optional    }|
    { ID id-NR-A2X-UE-PC5-AggregateMaximumBitRate       CRITICALITY ignore  TYPE NRUESidelinkAggregateMaximumBitrate     PRESENCE optional    }|
    { ID id-LTE-A2X-UE-PC5-AggregateMaximumBitRate      CRITICALITY ignore  TYPE LTEUESidelinkAggregateMaximumBitrate    PRESENCE optional    }|
    { ID id-A2X-PC5-QoS-Parameters                      CRITICALITY ignore  TYPE A2X-PC5-QoS-Parameters                  PRESENCE optional    }|
    { ID id-MobileIAB-Authorized                        CRITICALITY ignore  TYPE MobileIAB-Authorized                    PRESENCE optional    }|
    { ID id-Partially-Allowed-NSSAI                     CRITICALITY ignore  TYPE Partially-Allowed-NSSAI                 PRESENCE optional    }|
    { ID id-SLPositioningRangingServiceInfo             CRITICALITY ignore  TYPE SLPositioningRangingServiceInfo         PRESENCE optional    }|
    { ID id-AMF-UE-NGAP-ID2                             CRITICALITY ignore  TYPE AMF-UE-NGAP-ID                          PRESENCE optional    },
    ...
}


-- **************************************************************
--
-- PATH SWITCH REQUEST FAILURE
--
-- **************************************************************

PathSwitchRequestFailure ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { { PathSwitchRequestFailureIEs} },
    ...
}

PathSwitchRequestFailureIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID                          CRITICALITY ignore  TYPE AMF-UE-NGAP-ID                          PRESENCE mandatory   }|
    { ID id-RAN-UE-NGAP-ID                          CRITICALITY ignore  TYPE RAN-UE-NGAP-ID                          PRESENCE mandatory   }|
    { ID id-PDUSessionResourceReleasedListPSFail    CRITICALITY ignore  TYPE PDUSessionResourceReleasedListPSFail    PRESENCE mandatory   }|
```

```
    { ID id-CriticalityDiagnostics                CRITICALITY ignore  TYPE CriticalityDiagnostics               PRESENCE optional    },
    ...
}

-- **************************************************************
--
-- Handover Cancellation Elementary Procedure
--
-- **************************************************************

-- **************************************************************
--
-- HANDOVER CANCEL
--
-- **************************************************************

HandoverCancel ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { { HandoverCancelIEs} },
    ...
}

HandoverCancelIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID      CRITICALITY reject  TYPE AMF-UE-NGAP-ID     PRESENCE mandatory  }|
    { ID id-RAN-UE-NGAP-ID      CRITICALITY reject  TYPE RAN-UE-NGAP-ID     PRESENCE mandatory  }|
    { ID id-Cause               CRITICALITY ignore  TYPE Cause              PRESENCE mandatory  },
    ...
}

-- **************************************************************
--
-- HANDOVER CANCEL ACKNOWLEDGE
--
-- **************************************************************

HandoverCancelAcknowledge ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { { HandoverCancelAcknowledgeIEs} },
    ...
}

HandoverCancelAcknowledgeIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID              CRITICALITY ignore  TYPE AMF-UE-NGAP-ID             PRESENCE mandatory  }|
    { ID id-RAN-UE-NGAP-ID              CRITICALITY ignore  TYPE RAN-UE-NGAP-ID             PRESENCE mandatory  }|
    { ID id-CriticalityDiagnostics      CRITICALITY ignore  TYPE CriticalityDiagnostics     PRESENCE optional   },
    ...
}

-- **************************************************************
--
-- HANDOVER SUCCESS ELEMENTARY PROCEDURE
--
-- **************************************************************

-- **************************************************************
--
```

```
-- HANDOVER SUCCESS
--
-- **************************************************************

HandoverSuccess ::= SEQUENCE {
    protocolIEs         ProtocolIE-Container       { { HandoverSuccessIEs} },
    ...
}

HandoverSuccessIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID      CRITICALITY reject  TYPE AMF-UE-NGAP-ID     PRESENCE mandatory  }|
    { ID id-RAN-UE-NGAP-ID      CRITICALITY reject  TYPE RAN-UE-NGAP-ID     PRESENCE mandatory  },
    ...
}

-- **************************************************************
--
-- UPLINK RAN EARLY STATUS TRANSFER ELEMENTARY PROCEDURE
--
-- **************************************************************

-- **************************************************************
--
-- Uplink RAN Early Status Transfer
--
-- **************************************************************

UplinkRANEarlyStatusTransfer ::= SEQUENCE {
    protocolIEs         ProtocolIE-Container       { {UplinkRANEarlyStatusTransferIEs} },
    ...
}

UplinkRANEarlyStatusTransferIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID                              CRITICALITY reject  TYPE AMF-UE-NGAP-ID                              PRESENCE mandatory   }|
    { ID id-RAN-UE-NGAP-ID                              CRITICALITY reject  TYPE RAN-UE-NGAP-ID                              PRESENCE mandatory   }|
    { ID id-EarlyStatusTransfer-TransparentContainer    CRITICALITY reject  TYPE EarlyStatusTransfer-TransparentContainer    PRESENCE mandatory   },
    ...
}

-- **************************************************************
--
-- DOWNLINK RAN EARLY STATUS TRANSFER ELEMENTARY PROCEDURE
--
-- **************************************************************

-- **************************************************************
--
-- Downlink RAN Early Status Transfer
--
-- **************************************************************

DownlinkRANEarlyStatusTransfer ::= SEQUENCE {
    protocolIEs         ProtocolIE-Container       { {DownlinkRANEarlyStatusTransferIEs} },
    ...
```

```
}

DownlinkRANEarlyStatusTransferIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID                              CRITICALITY reject  TYPE AMF-UE-NGAP-ID                              PRESENCE mandatory   }|
    { ID id-RAN-UE-NGAP-ID                              CRITICALITY reject  TYPE RAN-UE-NGAP-ID                              PRESENCE mandatory   }|
    { ID id-EarlyStatusTransfer-TransparentContainer    CRITICALITY reject  TYPE EarlyStatusTransfer-TransparentContainer    PRESENCE mandatory   },
    ...
}


-- **************************************************************
--
-- Uplink RAN Status Transfer Elementary Procedure
--
-- **************************************************************

-- **************************************************************
--
-- UPLINK RAN STATUS TRANSFER
--
-- **************************************************************

UplinkRANStatusTransfer ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {UplinkRANStatusTransferIEs} },
    ...
}

UplinkRANStatusTransferIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID                              CRITICALITY reject  TYPE AMF-UE-NGAP-ID                          PRESENCE mandatory   }|
    { ID id-RAN-UE-NGAP-ID                              CRITICALITY reject  TYPE RAN-UE-NGAP-ID                          PRESENCE mandatory   }|
    { ID id-RANStatusTransfer-TransparentContainer      CRITICALITY reject  TYPE RANStatusTransfer-TransparentContainer  PRESENCE mandatory   },
    ...
}

-- **************************************************************
--
-- Downlink RAN Status Transfer Elementary Procedure
--
-- **************************************************************

-- **************************************************************
--
-- DOWNLINK RAN STATUS TRANSFER
--
-- **************************************************************

DownlinkRANStatusTransfer ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {DownlinkRANStatusTransferIEs} },
    ...
}

DownlinkRANStatusTransferIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID                              CRITICALITY reject  TYPE AMF-UE-NGAP-ID                              PRESENCE mandatory   }|
    { ID id-RAN-UE-NGAP-ID                              CRITICALITY reject  TYPE RAN-UE-NGAP-ID                              PRESENCE mandatory   }|
```

```
    { ID id-RANStatusTransfer-TransparentContainer      CRITICALITY reject  TYPE RANStatusTransfer-TransparentContainer     PRESENCE mandatory   },
    ...
}

-- **************************************************************
--
-- PAGING ELEMENTARY PROCEDURE
--
-- **************************************************************

-- **************************************************************
--
-- PAGING
--
-- **************************************************************

Paging ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {PagingIEs} },
    ...
}

PagingIEs NGAP-PROTOCOL-IES ::= {
    { ID id-UEPagingIdentity                CRITICALITY ignore  TYPE UEPagingIdentity               PRESENCE mandatory   }|
    { ID id-PagingDRX                       CRITICALITY ignore  TYPE PagingDRX                      PRESENCE optional    }|
    { ID id-TAIListForPaging                CRITICALITY ignore  TYPE TAIListForPaging               PRESENCE mandatory   }|
    { ID id-PagingPriority                  CRITICALITY ignore  TYPE PagingPriority                 PRESENCE optional    }|
    { ID id-UERadioCapabilityForPaging      CRITICALITY ignore  TYPE UERadioCapabilityForPaging     PRESENCE optional    }|
    { ID id-PagingOrigin                    CRITICALITY ignore  TYPE PagingOrigin                   PRESENCE optional    }|
    { ID id-AssistanceDataForPaging         CRITICALITY ignore  TYPE AssistanceDataForPaging        PRESENCE optional    }|
    { ID id-NB-IoT-Paging-eDRXInfo          CRITICALITY ignore  TYPE NB-IoT-Paging-eDRXInfo         PRESENCE optional    }|
    { ID id-NB-IoT-PagingDRX                CRITICALITY ignore  TYPE NB-IoT-PagingDRX               PRESENCE optional    }|
    { ID id-Enhanced-CoverageRestriction    CRITICALITY ignore  TYPE Enhanced-CoverageRestriction   PRESENCE optional    }|
    { ID id-WUS-Assistance-Information      CRITICALITY ignore  TYPE WUS-Assistance-Information     PRESENCE optional    }|
    { ID id-EUTRA-PagingeDRXInformation     CRITICALITY ignore  TYPE EUTRA-PagingeDRXInformation    PRESENCE optional    }|
    { ID id-CEmodeBrestricted               CRITICALITY ignore  TYPE CEmodeBrestricted              PRESENCE optional    }|
    { ID id-NR-PagingeDRXInformation        CRITICALITY ignore  TYPE NR-PagingeDRXInformation       PRESENCE optional    }|
    { ID id-PagingCause                     CRITICALITY ignore  TYPE PagingCause                    PRESENCE optional    }|
    { ID id-PEIPSassistanceInformation      CRITICALITY ignore  TYPE PEIPSassistanceInformation     PRESENCE optional    }|
    { ID id-LPWUSPSAssistanceInformation    CRITICALITY ignore  TYPE LPWUSPSAssistanceInformation   PRESENCE optional    }|
    { ID id-LPWUSDisableIndication          CRITICALITY ignore  TYPE LPWUSDisableIndication         PRESENCE optional    },
    ...
}

-- **************************************************************
--
-- NAS TRANSPORT ELEMENTARY PROCEDURES
--
-- **************************************************************

-- **************************************************************
--
-- INITIAL UE MESSAGE
--
-- **************************************************************
```

```
InitialUEMessage ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {InitialUEMessage-IEs} },
    ...
}

InitialUEMessage-IEs NGAP-PROTOCOL-IES ::= {
    { ID id-RAN-UE-NGAP-ID                          CRITICALITY reject  TYPE RAN-UE-NGAP-ID                          PRESENCE mandatory   }|
    { ID id-NAS-PDU                                 CRITICALITY reject  TYPE NAS-PDU                                 PRESENCE mandatory   }|
    { ID id-UserLocationInformation                 CRITICALITY reject  TYPE UserLocationInformation                 PRESENCE mandatory   }|
    { ID id-RRCEstablishmentCause                   CRITICALITY ignore  TYPE RRCEstablishmentCause                   PRESENCE mandatory   }|
    { ID id-FiveG-S-TMSI                            CRITICALITY reject  TYPE FiveG-S-TMSI                            PRESENCE optional    }|
    { ID id-AMFSetID                                CRITICALITY ignore  TYPE AMFSetID                                PRESENCE optional    }|
    { ID id-UEContextRequest                        CRITICALITY ignore  TYPE UEContextRequest                        PRESENCE optional    }|
    { ID id-AllowedNSSAI                            CRITICALITY reject  TYPE AllowedNSSAI                            PRESENCE optional    }|
    { ID id-SourceToTarget-AMFInformationReroute    CRITICALITY ignore  TYPE SourceToTarget-AMFInformationReroute    PRESENCE optional    }|
    { ID id-SelectedPLMNIdentity                    CRITICALITY ignore  TYPE PLMNIdentity                            PRESENCE optional    }|
    { ID id-IABNodeIndication                       CRITICALITY reject  TYPE IABNodeIndication                       PRESENCE optional    }|
    { ID id-CEmodeBSupport-Indicator                CRITICALITY reject  TYPE CEmodeBSupport-Indicator                PRESENCE optional    }|
    { ID id-LTEM-Indication                         CRITICALITY ignore  TYPE LTEM-Indication                         PRESENCE optional    }|
    { ID id-EDT-Session                             CRITICALITY ignore  TYPE EDT-Session                             PRESENCE optional    }|
    { ID id-AuthenticatedIndication                 CRITICALITY ignore  TYPE AuthenticatedIndication                 PRESENCE optional    }|
    { ID id-NPN-AccessInformation                   CRITICALITY reject  TYPE NPN-AccessInformation                   PRESENCE optional    }|
    { ID id-RedCapIndication                        CRITICALITY ignore  TYPE RedCapIndication                        PRESENCE optional    }|
    { ID id-SelectedNID                             CRITICALITY ignore  TYPE NID                                     PRESENCE optional    }|
    { ID id-MobileIABNodeIndication                 CRITICALITY reject  TYPE MobileIABNodeIndication                 PRESENCE optional    }|
    { ID id-Partially-Allowed-NSSAI                 CRITICALITY ignore  TYPE Partially-Allowed-NSSAI                 PRESENCE optional    }|
    { ID id-ERedCapIndication                       CRITICALITY ignore  TYPE ERedCapIndication                       PRESENCE optional    }|
    { ID id-AUN3DeviceAccessInfo                    CRITICALITY ignore  TYPE AUN3DeviceAccessInfo                    PRESENCE optional    }|
    { ID id-GUAMI                                   CRITICALITY ignore  TYPE GUAMI                                   PRESENCE optional    }|
    { ID id-GUAMIType                               CRITICALITY ignore  TYPE GUAMIType                               PRESENCE optional    }|
    { ID id-RequestedNSSAI                          CRITICALITY ignore  TYPE RequestedNSSAI                      PRESENCE optional    },
    ...
}

-- **************************************************************
--
-- DOWNLINK NAS TRANSPORT
--
-- **************************************************************

DownlinkNASTransport ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {DownlinkNASTransport-IEs} },
    ...
}

DownlinkNASTransport-IEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID                  CRITICALITY reject  TYPE AMF-UE-NGAP-ID              PRESENCE mandatory   }|
    { ID id-RAN-UE-NGAP-ID                  CRITICALITY reject  TYPE RAN-UE-NGAP-ID              PRESENCE mandatory   }|
    { ID id-OldAMF                          CRITICALITY reject  TYPE AMFName                     PRESENCE optional    }|
    { ID id-RANPagingPriority               CRITICALITY ignore  TYPE RANPagingPriority           PRESENCE optional    }|
    { ID id-NAS-PDU                         CRITICALITY reject  TYPE NAS-PDU                     PRESENCE mandatory   }|
    { ID id-MobilityRestrictionList         CRITICALITY ignore  TYPE MobilityRestrictionList     PRESENCE optional    }|
    { ID id-IndexToRFSP                     CRITICALITY ignore  TYPE IndexToRFSP                 PRESENCE optional    }|
```

```
    { ID id-UEAggregateMaximumBitRate       CRITICALITY ignore  TYPE UEAggregateMaximumBitRate    PRESENCE optional    }|
    { ID id-AllowedNSSAI                    CRITICALITY reject  TYPE AllowedNSSAI                 PRESENCE optional    }|
    { ID id-SRVCCOperationPossible          CRITICALITY ignore  TYPE SRVCCOperationPossible       PRESENCE optional    }|
    { ID id-Enhanced-CoverageRestriction    CRITICALITY ignore  TYPE Enhanced-CoverageRestriction PRESENCE optional    }|
    { ID id-Extended-ConnectedTime          CRITICALITY ignore  TYPE Extended-ConnectedTime       PRESENCE optional    }|
    { ID id-UE-DifferentiationInfo          CRITICALITY ignore  TYPE UE-DifferentiationInfo       PRESENCE optional    }|
    { ID id-CEmodeBrestricted               CRITICALITY ignore  TYPE CEmodeBrestricted            PRESENCE optional    }|
    { ID id-UERadioCapability               CRITICALITY ignore  TYPE UERadioCapability            PRESENCE optional    }|
    { ID id-UECapabilityInfoRequest         CRITICALITY ignore  TYPE UECapabilityInfoRequest      PRESENCE optional    }|
    { ID id-EndIndication                   CRITICALITY ignore  TYPE EndIndication                PRESENCE optional    }|
    { ID id-UERadioCapabilityID             CRITICALITY reject  TYPE UERadioCapabilityID          PRESENCE optional    }|
    { ID id-TargetNSSAIInformation          CRITICALITY ignore  TYPE TargetNSSAIInformation       PRESENCE optional    }|
    { ID id-MaskedIMEISV                    CRITICALITY ignore  TYPE MaskedIMEISV                 PRESENCE optional    }|
    { ID id-Partially-Allowed-NSSAI         CRITICALITY ignore  TYPE Partially-Allowed-NSSAI      PRESENCE optional    }|
    { ID id-MobileIAB-Authorized            CRITICALITY ignore  TYPE MobileIAB-Authorized         PRESENCE optional    }|
    { ID id-ExtendedOldAMF                  CRITICALITY ignore  TYPE Extended-AMFName             PRESENCE optional    },
    ...
}

-- **************************************************************
--
-- UPLINK NAS TRANSPORT
--
-- **************************************************************

UplinkNASTransport ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container    { {UplinkNASTransport-IEs} },
    ...
}

UplinkNASTransport-IEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID              CRITICALITY reject  TYPE AMF-UE-NGAP-ID                PRESENCE mandatory }|
    { ID id-RAN-UE-NGAP-ID              CRITICALITY reject  TYPE RAN-UE-NGAP-ID                PRESENCE mandatory }|
    { ID id-NAS-PDU                     CRITICALITY reject  TYPE NAS-PDU                       PRESENCE mandatory }|
    { ID id-UserLocationInformation     CRITICALITY ignore  TYPE UserLocationInformation       PRESENCE mandatory }|
    { ID id-W-AGFIdentityInformation    CRITICALITY reject  TYPE OCTET STRING                  PRESENCE optional  }|
    { ID id-TNGFIdentityInformation     CRITICALITY reject  TYPE OCTET STRING                  PRESENCE optional  }|
    { ID id-TWIFIdentityInformation     CRITICALITY reject  TYPE OCTET STRING                  PRESENCE optional  },
    ...
}

-- **************************************************************
--
-- NAS NON DELIVERY INDICATION
--
-- **************************************************************

NASNonDeliveryIndication ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {NASNonDeliveryIndication-IEs} },
    ...
}

NASNonDeliveryIndication-IEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID      CRITICALITY reject  TYPE AMF-UE-NGAP-ID     PRESENCE mandatory  }|
```

```
    { ID id-RAN-UE-NGAP-ID      CRITICALITY reject  TYPE RAN-UE-NGAP-ID     PRESENCE mandatory  }|
    { ID id-NAS-PDU             CRITICALITY ignore  TYPE NAS-PDU            PRESENCE mandatory  }|
    { ID id-Cause               CRITICALITY ignore  TYPE Cause              PRESENCE mandatory  },
    ...
}

-- **************************************************************
--
-- REROUTE NAS REQUEST
--
-- **************************************************************

RerouteNASRequest ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {RerouteNASRequest-IEs} },
    ...
}

RerouteNASRequest-IEs NGAP-PROTOCOL-IES ::= {
    { ID id-RAN-UE-NGAP-ID                          CRITICALITY reject  TYPE RAN-UE-NGAP-ID                         PRESENCE mandatory   }|
    { ID id-AMF-UE-NGAP-ID                          CRITICALITY ignore  TYPE AMF-UE-NGAP-ID                         PRESENCE optional    }|
    { ID id-NGAP-Message                            CRITICALITY reject  TYPE OCTET STRING                           PRESENCE mandatory   }|
    { ID id-AMFSetID                                CRITICALITY reject  TYPE AMFSetID                               PRESENCE mandatory   }|
    { ID id-AllowedNSSAI                            CRITICALITY reject  TYPE AllowedNSSAI                           PRESENCE optional    }|
    { ID id-SourceToTarget-AMFInformationReroute    CRITICALITY ignore  TYPE SourceToTarget-AMFInformationReroute   PRESENCE optional    }|
    { ID id-Partially-Allowed-NSSAI                 CRITICALITY ignore  TYPE Partially-Allowed-NSSAI                PRESENCE optional    },
    ...
}

-- **************************************************************
--
-- INTERFACE MANAGEMENT ELEMENTARY PROCEDURES
--
-- **************************************************************

-- **************************************************************
--
-- NG Removal Elementary Procedure
--
-- **************************************************************

-- **************************************************************
--
-- NG REMOVAL REQUEST
--
-- **************************************************************

NGRemovalRequest ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {NGRemovalRequestIEs} },
    ...
}

NGRemovalRequestIEs NGAP-PROTOCOL-IES ::= {
    { ID id-GlobalRANNodeID             CRITICALITY reject  TYPE GlobalRANNodeID                PRESENCE mandatory },
    ...
```

```
}

-- **************************************************************
--
-- NG REMOVAL RESPONSE
--
-- **************************************************************

NGRemovalResponse ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {NGRemovalResponseIEs} },
    ...
}

NGRemovalResponseIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMFName                     CRITICALITY reject  TYPE AMFName                    PRESENCE mandatory  }|
    { ID id-CriticalityDiagnostics      CRITICALITY ignore  TYPE CriticalityDiagnostics     PRESENCE optional   }|
    { ID id-Extended-AMFName            CRITICALITY ignore  TYPE Extended-AMFName           PRESENCE optional   },
    ...
}

-- **************************************************************
--
-- NG REMOVAL FAILURE
--
-- **************************************************************

NGRemovalFailure ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {NGRemovalFailureIEs} },
    ...
}

NGRemovalFailureIEs NGAP-PROTOCOL-IES ::= {
    { ID id-Cause                       CRITICALITY ignore  TYPE Cause                      PRESENCE mandatory  }|
    { ID id-CriticalityDiagnostics      CRITICALITY ignore  TYPE CriticalityDiagnostics     PRESENCE optional   },
    ...
}

-- **************************************************************
--
-- NG Setup Elementary Procedure
--
-- **************************************************************

-- **************************************************************
--
-- NG SETUP REQUEST
--
-- **************************************************************

NGSetupRequest ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {NGSetupRequestIEs} },
    ...
}
```

```
NGSetupRequestIEs NGAP-PROTOCOL-IES ::= {
    { ID id-GlobalRANNodeID             CRITICALITY reject  TYPE GlobalRANNodeID               PRESENCE mandatory }|
    { ID id-RANNodeName                 CRITICALITY ignore  TYPE RANNodeName                   PRESENCE optional  }|
    { ID id-SupportedTAList             CRITICALITY reject  TYPE SupportedTAList               PRESENCE mandatory }|
    { ID id-DefaultPagingDRX            CRITICALITY ignore  TYPE PagingDRX                     PRESENCE mandatory }|
    { ID id-UERetentionInformation      CRITICALITY ignore  TYPE UERetentionInformation        PRESENCE optional  }|
    { ID id-NB-IoT-DefaultPagingDRX     CRITICALITY ignore  TYPE NB-IoT-DefaultPagingDRX       PRESENCE optional  }|
    { ID id-Extended-RANNodeName        CRITICALITY ignore  TYPE Extended-RANNodeName          PRESENCE optional  }|
    { ID id-AIoT-Support                CRITICALITY reject  TYPE AIoT-Support                  PRESENCE optional  }|
    { ID id-AdditionalULI               CRITICALITY ignore  TYPE AdditionalULI                 PRESENCE optional  },
    ...
}

-- **************************************************************
--
-- NG SETUP RESPONSE
--
-- **************************************************************

NGSetupResponse ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {NGSetupResponseIEs} },
    ...
}

NGSetupResponseIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMFName                     CRITICALITY reject  TYPE AMFName                    PRESENCE mandatory  }|
    { ID id-ServedGUAMIList             CRITICALITY reject  TYPE ServedGUAMIList            PRESENCE mandatory  }|
    { ID id-RelativeAMFCapacity         CRITICALITY ignore  TYPE RelativeAMFCapacity        PRESENCE mandatory  }|
    { ID id-PLMNSupportList             CRITICALITY reject  TYPE PLMNSupportList            PRESENCE mandatory  }|
    { ID id-CriticalityDiagnostics      CRITICALITY ignore  TYPE CriticalityDiagnostics     PRESENCE optional   }|
    { ID id-UERetentionInformation      CRITICALITY ignore  TYPE UERetentionInformation     PRESENCE optional   }|
    { ID id-IAB-Supported               CRITICALITY ignore  TYPE IAB-Supported              PRESENCE optional   }|
    { ID id-Extended-AMFName            CRITICALITY ignore  TYPE Extended-AMFName           PRESENCE optional   }|
    { ID id-MobileIAB-Supported         CRITICALITY ignore  TYPE MobileIAB-Supported        PRESENCE optional   }|
    { ID id-AIOTFIdentifier             CRITICALITY reject  TYPE AIOTFIdentifier            PRESENCE optional   }|
    { ID id-AIOTFName                   CRITICALITY reject  TYPE AIOTFName                  PRESENCE optional   },
    ...
}

-- **************************************************************
--
-- NG SETUP FAILURE
--
-- **************************************************************

NGSetupFailure ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {NGSetupFailureIEs} },
    ...
}

NGSetupFailureIEs NGAP-PROTOCOL-IES ::= {
    { ID id-Cause                       CRITICALITY ignore  TYPE Cause                      PRESENCE mandatory  }|
    { ID id-TimeToWait                  CRITICALITY ignore  TYPE TimeToWait                 PRESENCE optional   }|
    { ID id-CriticalityDiagnostics      CRITICALITY ignore  TYPE CriticalityDiagnostics     PRESENCE optional   },
```

```
    ...
}

-- **************************************************************
--
-- RAN Configuration Update Elementary Procedure
--
-- **************************************************************

-- **************************************************************
--
-- RAN CONFIGURATION UPDATE
--
-- **************************************************************

RANConfigurationUpdate ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {RANConfigurationUpdateIEs} },
    ...
}

RANConfigurationUpdateIEs NGAP-PROTOCOL-IES ::= {
    { ID id-RANNodeName                             CRITICALITY ignore  TYPE RANNodeName                          PRESENCE optional }|
    { ID id-SupportedTAList                         CRITICALITY reject  TYPE SupportedTAList                      PRESENCE optional }|
    { ID id-DefaultPagingDRX                        CRITICALITY ignore  TYPE PagingDRX                            PRESENCE optional }|
    { ID id-GlobalRANNodeID                         CRITICALITY ignore  TYPE GlobalRANNodeID                      PRESENCE optional }|
    { ID id-NGRAN-TNLAssociationToRemoveList        CRITICALITY reject  TYPE NGRAN-TNLAssociationToRemoveList     PRESENCE optional }|
    { ID id-NB-IoT-DefaultPagingDRX                 CRITICALITY ignore  TYPE NB-IoT-DefaultPagingDRX              PRESENCE optional }|
    { ID id-Extended-RANNodeName                    CRITICALITY ignore  TYPE Extended-RANNodeName                 PRESENCE optional }|
    { ID id-AdditionalULI                           CRITICALITY ignore  TYPE AdditionalULI                        PRESENCE optional }|
    { ID id-AIoT-Support                            CRITICALITY reject  TYPE AIoT-Support                         PRESENCE optional },
    ...
}

-- **************************************************************
--
-- RAN CONFIGURATION UPDATE ACKNOWLEDGE
--
-- **************************************************************

RANConfigurationUpdateAcknowledge ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {RANConfigurationUpdateAcknowledgeIEs} },
    ...
}

RANConfigurationUpdateAcknowledgeIEs NGAP-PROTOCOL-IES ::= {
    { ID id-CriticalityDiagnostics      CRITICALITY ignore  TYPE CriticalityDiagnostics     PRESENCE optional   },
    ...
}

-- **************************************************************
--
-- RAN CONFIGURATION UPDATE FAILURE
--
-- **************************************************************
```

```
RANConfigurationUpdateFailure ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {RANConfigurationUpdateFailureIEs} },
    ...
}

RANConfigurationUpdateFailureIEs NGAP-PROTOCOL-IES ::= {
    { ID id-Cause                       CRITICALITY ignore  TYPE Cause                      PRESENCE mandatory  }|
    { ID id-TimeToWait                  CRITICALITY ignore  TYPE TimeToWait                 PRESENCE optional   }|
    { ID id-CriticalityDiagnostics      CRITICALITY ignore  TYPE CriticalityDiagnostics     PRESENCE optional   },
...
}

-- **************************************************************
--
-- AMF Configuration Update Elementary Procedure
--
-- **************************************************************

-- **************************************************************
--
-- AMF CONFIGURATION UPDATE
--
-- **************************************************************

AMFConfigurationUpdate ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {AMFConfigurationUpdateIEs} },
    ...
}

AMFConfigurationUpdateIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMFName                             CRITICALITY reject  TYPE AMFName                            PRESENCE optional    }|
    { ID id-ServedGUAMIList                     CRITICALITY reject  TYPE ServedGUAMIList                    PRESENCE optional    }|
    { ID id-RelativeAMFCapacity                 CRITICALITY ignore  TYPE RelativeAMFCapacity                PRESENCE optional    }|
    { ID id-PLMNSupportList                     CRITICALITY reject  TYPE PLMNSupportList                    PRESENCE optional    }|
    { ID id-AMF-TNLAssociationToAddList         CRITICALITY ignore  TYPE AMF-TNLAssociationToAddList        PRESENCE optional    }|
    { ID id-AMF-TNLAssociationToRemoveList      CRITICALITY ignore  TYPE AMF-TNLAssociationToRemoveList     PRESENCE optional    }|
    { ID id-AMF-TNLAssociationToUpdateList      CRITICALITY ignore  TYPE AMF-TNLAssociationToUpdateList     PRESENCE optional    }|
    { ID id-Extended-AMFName                    CRITICALITY ignore  TYPE Extended-AMFName                   PRESENCE optional    },
    ...
}

-- **************************************************************
--
-- AMF CONFIGURATION UPDATE ACKNOWLEDGE
--
-- **************************************************************

AMFConfigurationUpdateAcknowledge ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {AMFConfigurationUpdateAcknowledgeIEs} },
    ...
}

AMFConfigurationUpdateAcknowledgeIEs NGAP-PROTOCOL-IES ::= {
```

```
    { ID id-AMF-TNLAssociationSetupList            CRITICALITY ignore  TYPE AMF-TNLAssociationSetupList        PRESENCE optional    }|
    { ID id-AMF-TNLAssociationFailedToSetupList    CRITICALITY ignore  TYPE TNLAssociationList                PRESENCE optional    }|
    { ID id-CriticalityDiagnostics                 CRITICALITY ignore  TYPE CriticalityDiagnostics             PRESENCE optional    },
    ...
}

-- **************************************************************
--
-- AMF CONFIGURATION UPDATE FAILURE
--
-- **************************************************************

AMFConfigurationUpdateFailure ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {AMFConfigurationUpdateFailureIEs} },
    ...
}

AMFConfigurationUpdateFailureIEs NGAP-PROTOCOL-IES ::= {
    { ID id-Cause                       CRITICALITY ignore  TYPE Cause                      PRESENCE mandatory  }|
    { ID id-TimeToWait                  CRITICALITY ignore  TYPE TimeToWait                 PRESENCE optional   }|
    { ID id-CriticalityDiagnostics      CRITICALITY ignore  TYPE CriticalityDiagnostics     PRESENCE optional   },
    ...
}

-- **************************************************************
--
-- AMF Status Indication Elementary Procedure
--
-- **************************************************************

-- **************************************************************
--
-- AMF STATUS INDICATION
--
-- **************************************************************

AMFStatusIndication ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {AMFStatusIndicationIEs} },
    ...
}

AMFStatusIndicationIEs NGAP-PROTOCOL-IES ::= {
    { ID id-UnavailableGUAMIList        CRITICALITY reject  TYPE UnavailableGUAMIList       PRESENCE mandatory  },
    ...
}

-- **************************************************************
--
-- NG Reset Elementary Procedure
--
-- **************************************************************

-- **************************************************************
--
```

```
-- NG RESET
--
-- **************************************************************

NGReset ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {NGResetIEs} },
    ...
}

NGResetIEs NGAP-PROTOCOL-IES ::= {
    { ID id-Cause                       CRITICALITY ignore  TYPE Cause                      PRESENCE mandatory  }|
    { ID id-ResetType                   CRITICALITY reject  TYPE ResetType                  PRESENCE mandatory  },
    ...
}

-- **************************************************************
--
-- NG RESET ACKNOWLEDGE
--
-- **************************************************************

NGResetAcknowledge ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {NGResetAcknowledgeIEs} },
    ...
}

NGResetAcknowledgeIEs NGAP-PROTOCOL-IES ::= {
    { ID id-UE-associatedLogicalNG-connectionList          CRITICALITY ignore  TYPE UE-associatedLogicalNG-connectionList        PRESENCE optional
    }|
    { ID id-CriticalityDiagnostics                         CRITICALITY ignore  TYPE CriticalityDiagnostics                      PRESENCE optional
    },
    ...
}

-- **************************************************************
--
-- Error Indication Elementary Procedure
--
-- **************************************************************

-- **************************************************************
--
-- ERROR INDICATION
--
-- **************************************************************

ErrorIndication ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {ErrorIndicationIEs} },
    ...
}

ErrorIndicationIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID              CRITICALITY ignore  TYPE AMF-UE-NGAP-ID             PRESENCE optional   }|
    { ID id-RAN-UE-NGAP-ID              CRITICALITY ignore  TYPE RAN-UE-NGAP-ID             PRESENCE optional   }|
```

```
    { ID id-Cause                       CRITICALITY ignore  TYPE Cause                      PRESENCE optional   }|
    { ID id-CriticalityDiagnostics      CRITICALITY ignore  TYPE CriticalityDiagnostics     PRESENCE optional   }|
    { ID id-FiveG-S-TMSI                CRITICALITY ignore  TYPE FiveG-S-TMSI               PRESENCE optional   },
    ...
}

-- **************************************************************
--
-- OVERLOAD START
--
-- **************************************************************

OverloadStart ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {OverloadStartIEs} },
    ...
}

OverloadStartIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMFOverloadResponse                     CRITICALITY reject  TYPE OverloadResponse                   PRESENCE optional   }|
    { ID id-AMFTrafficLoadReductionIndication       CRITICALITY ignore  TYPE TrafficLoadReductionIndication     PRESENCE optional   }|
    { ID id-OverloadStartNSSAIList                  CRITICALITY ignore  TYPE OverloadStartNSSAIList             PRESENCE optional   }|
    { ID id-GUAMIList                       CRITICALITY ignore  TYPE GUAMIList                          PRESENCE optional   },
    ...
}

-- **************************************************************
--
-- OVERLOAD STOP
--
-- **************************************************************

OverloadStop ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {OverloadStopIEs} },
    ...
}

OverloadStopIEs NGAP-PROTOCOL-IES ::= {
    { ID id-GUAMIList           CRITICALITY ignore  TYPE GUAMIList      PRESENCE optional       },
    ...
}

-- **************************************************************
--
-- CONFIGURATION TRANSFER ELEMENTARY PROCEDURES
--
-- **************************************************************

-- **************************************************************
--
-- UPLINK RAN CONFIGURATION TRANSFER
--
-- **************************************************************

UplinkRANConfigurationTransfer ::= SEQUENCE {
```

```
    protocolIEs     ProtocolIE-Container        { {UplinkRANConfigurationTransferIEs} },
    ...
}

UplinkRANConfigurationTransferIEs NGAP-PROTOCOL-IES ::= {
    { ID id-SONConfigurationTransferUL                  CRITICALITY ignore  TYPE SONConfigurationTransfer                PRESENCE optional    }|
    { ID id-ENDC-SONConfigurationTransferUL             CRITICALITY ignore  TYPE EN-DCSONConfigurationTransfer           PRESENCE optional    }|
    { ID id-IntersystemSONConfigurationTransferUL       CRITICALITY ignore  TYPE IntersystemSONConfigurationTransfer     PRESENCE optional    },
    ...
}

-- **************************************************************
--
-- DOWNLINK RAN CONFIGURATION TRANSFER
--
-- **************************************************************

DownlinkRANConfigurationTransfer ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {DownlinkRANConfigurationTransferIEs} },
    ...
}

DownlinkRANConfigurationTransferIEs NGAP-PROTOCOL-IES ::= {
    { ID id-SONConfigurationTransferDL                  CRITICALITY ignore  TYPE SONConfigurationTransfer                PRESENCE optional    }|
    { ID id-ENDC-SONConfigurationTransferDL             CRITICALITY ignore  TYPE EN-DCSONConfigurationTransfer           PRESENCE optional    }|
    { ID id-IntersystemSONConfigurationTransferDL       CRITICALITY ignore  TYPE IntersystemSONConfigurationTransfer     PRESENCE optional    },
    ...
}

-- **************************************************************
--
-- WARNING MESSAGE TRANSMISSION ELEMENTARY PROCEDURES
--
-- **************************************************************

-- **************************************************************
--
-- Write-Replace Warning Elementary Procedure
--
-- **************************************************************

-- **************************************************************
--
-- WRITE-REPLACE WARNING REQUEST
--
-- **************************************************************

WriteReplaceWarningRequest ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {WriteReplaceWarningRequestIEs} },
    ...
}

WriteReplaceWarningRequestIEs NGAP-PROTOCOL-IES ::= {
    { ID id-MessageIdentifier               CRITICALITY reject  TYPE MessageIdentifier              PRESENCE mandatory   }|
```

```
    { ID id-SerialNumber                  CRITICALITY reject  TYPE SerialNumber                  PRESENCE mandatory   }|
    { ID id-WarningAreaList               CRITICALITY ignore  TYPE WarningAreaList               PRESENCE optional    }|
    { ID id-RepetitionPeriod              CRITICALITY reject  TYPE RepetitionPeriod              PRESENCE mandatory   }|
    { ID id-NumberOfBroadcastsRequested   CRITICALITY reject  TYPE NumberOfBroadcastsRequested   PRESENCE mandatory   }|
    { ID id-WarningType                   CRITICALITY ignore  TYPE WarningType                   PRESENCE optional    }|
    { ID id-WarningSecurityInfo           CRITICALITY ignore  TYPE WarningSecurityInfo           PRESENCE optional    }|
    { ID id-DataCodingScheme              CRITICALITY ignore  TYPE DataCodingScheme              PRESENCE optional    }|
    { ID id-WarningMessageContents        CRITICALITY ignore  TYPE WarningMessageContents        PRESENCE optional    }|
    { ID id-ConcurrentWarningMessageInd   CRITICALITY reject  TYPE ConcurrentWarningMessageInd   PRESENCE optional    }|
    { ID id-WarningAreaCoordinates        CRITICALITY ignore  TYPE WarningAreaCoordinates        PRESENCE optional    },
    ...
}

-- **************************************************************
--
-- WRITE-REPLACE WARNING RESPONSE
--
-- **************************************************************

WriteReplaceWarningResponse ::= SEQUENCE {
    protocolIEs         ProtocolIE-Container        { {WriteReplaceWarningResponseIEs} },
    ...
}

WriteReplaceWarningResponseIEs NGAP-PROTOCOL-IES ::= {
    { ID id-MessageIdentifier             CRITICALITY reject  TYPE MessageIdentifier             PRESENCE mandatory   }|
    { ID id-SerialNumber                  CRITICALITY reject  TYPE SerialNumber                  PRESENCE mandatory   }|
    { ID id-BroadcastCompletedAreaList    CRITICALITY ignore  TYPE BroadcastCompletedAreaList    PRESENCE optional    }|
    { ID id-CriticalityDiagnostics        CRITICALITY ignore  TYPE CriticalityDiagnostics        PRESENCE optional    },
    ...
}

-- **************************************************************
--
-- PWS Cancel Elementary Procedure
--
-- **************************************************************

-- **************************************************************
--
-- PWS CANCEL REQUEST
--
-- **************************************************************

PWSCancelRequest ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {PWSCancelRequestIEs} },
    ...
}

PWSCancelRequestIEs NGAP-PROTOCOL-IES ::= {
    { ID id-MessageIdentifier           CRITICALITY reject  TYPE MessageIdentifier             PRESENCE mandatory }|
    { ID id-SerialNumber                CRITICALITY reject  TYPE SerialNumber                  PRESENCE mandatory }|
    { ID id-WarningAreaList             CRITICALITY ignore  TYPE WarningAreaList               PRESENCE optional  }|
    { ID id-CancelAllWarningMessages    CRITICALITY reject  TYPE CancelAllWarningMessages       PRESENCE optional  },
```

```
    ...
}

-- **************************************************************
--
-- PWS CANCEL RESPONSE
--
-- **************************************************************

PWSCancelResponse ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {PWSCancelResponseIEs} },
    ...
}

PWSCancelResponseIEs NGAP-PROTOCOL-IES ::= {
    { ID id-MessageIdentifier           CRITICALITY reject  TYPE MessageIdentifier              PRESENCE mandatory }|
    { ID id-SerialNumber                CRITICALITY reject  TYPE SerialNumber                   PRESENCE mandatory }|
    { ID id-BroadcastCancelledAreaList  CRITICALITY ignore  TYPE BroadcastCancelledAreaList     PRESENCE optional  }|
    { ID id-CriticalityDiagnostics      CRITICALITY ignore  TYPE CriticalityDiagnostics         PRESENCE optional  },
    ...
}

-- **************************************************************
--
-- PWS Restart Indication Elementary Procedure
--
-- **************************************************************

-- **************************************************************
--
-- PWS RESTART INDICATION
--
-- **************************************************************

PWSRestartIndication ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {PWSRestartIndicationIEs} },
    ...
}

PWSRestartIndicationIEs NGAP-PROTOCOL-IES ::= {
    { ID id-CellIDListForRestart            CRITICALITY reject  TYPE CellIDListForRestart           PRESENCE mandatory   }|
    { ID id-GlobalRANNodeID                 CRITICALITY reject  TYPE GlobalRANNodeID                PRESENCE mandatory   }|
    { ID id-TAIListForRestart               CRITICALITY reject  TYPE TAIListForRestart              PRESENCE mandatory   }|
    { ID id-EmergencyAreaIDListForRestart   CRITICALITY reject  TYPE EmergencyAreaIDListForRestart  PRESENCE optional    },
    ...
}

-- **************************************************************
--
-- PWS Failure Indication Elementary Procedure
--
-- **************************************************************

-- **************************************************************
```

```
--
-- PWS FAILURE INDICATION
--
-- **************************************************************

PWSFailureIndication ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {PWSFailureIndicationIEs} },
    ...
}

PWSFailureIndicationIEs NGAP-PROTOCOL-IES ::= {
    { ID id-PWSFailedCellIDList         CRITICALITY reject  TYPE PWSFailedCellIDList    PRESENCE mandatory }|
    { ID id-GlobalRANNodeID             CRITICALITY reject  TYPE GlobalRANNodeID        PRESENCE mandatory },
    ...
}

-- **************************************************************
--
-- NRPPA TRANSPORT ELEMENTARY PROCEDURES
--
-- **************************************************************

-- **************************************************************
--
-- DOWNLINK UE ASSOCIATED NRPPA TRANSPORT
--
-- **************************************************************

DownlinkUEAssociatedNRPPaTransport ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {DownlinkUEAssociatedNRPPaTransportIEs} },
    ...
}

DownlinkUEAssociatedNRPPaTransportIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID          CRITICALITY reject  TYPE AMF-UE-NGAP-ID             PRESENCE mandatory }|
    { ID id-RAN-UE-NGAP-ID          CRITICALITY reject  TYPE RAN-UE-NGAP-ID             PRESENCE mandatory }|
    { ID id-RoutingID               CRITICALITY reject  TYPE RoutingID                  PRESENCE mandatory }|
    { ID id-NRPPa-PDU               CRITICALITY reject  TYPE NRPPa-PDU                  PRESENCE mandatory },
    ...
}

-- **************************************************************
--
-- UPLINK UE ASSOCIATED NRPPA TRANSPORT
--
-- **************************************************************

UplinkUEAssociatedNRPPaTransport ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {UplinkUEAssociatedNRPPaTransportIEs} },
    ...
}

UplinkUEAssociatedNRPPaTransportIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID          CRITICALITY reject  TYPE AMF-UE-NGAP-ID             PRESENCE mandatory }|
```

```
    { ID id-RAN-UE-NGAP-ID          CRITICALITY reject  TYPE RAN-UE-NGAP-ID             PRESENCE mandatory }|
    { ID id-RoutingID               CRITICALITY reject  TYPE RoutingID                  PRESENCE mandatory }|
    { ID id-NRPPa-PDU               CRITICALITY reject  TYPE NRPPa-PDU                  PRESENCE mandatory },
    ...
}

-- **************************************************************
--
-- DOWNLINK NON UE ASSOCIATED NRPPA TRANSPORT
--
-- **************************************************************

DownlinkNonUEAssociatedNRPPaTransport ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {DownlinkNonUEAssociatedNRPPaTransportIEs} },
    ...
}

DownlinkNonUEAssociatedNRPPaTransportIEs NGAP-PROTOCOL-IES ::= {
    { ID id-RoutingID               CRITICALITY reject  TYPE RoutingID                  PRESENCE mandatory }|
    { ID id-NRPPa-PDU               CRITICALITY reject  TYPE NRPPa-PDU                  PRESENCE mandatory },
    ...
}

-- **************************************************************
--
-- UPLINK NON UE ASSOCIATED NRPPA TRANSPORT
--
-- **************************************************************

UplinkNonUEAssociatedNRPPaTransport ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {UplinkNonUEAssociatedNRPPaTransportIEs} },
    ...
}

UplinkNonUEAssociatedNRPPaTransportIEs NGAP-PROTOCOL-IES ::= {
    { ID id-RoutingID               CRITICALITY reject  TYPE RoutingID                  PRESENCE mandatory }|
    { ID id-NRPPa-PDU               CRITICALITY reject  TYPE NRPPa-PDU                  PRESENCE mandatory },
    ...
}

-- **************************************************************
--
-- TRACE ELEMENTARY PROCEDURES
--
-- **************************************************************

-- **************************************************************
--
-- TRACE START
--
-- **************************************************************

TraceStart ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {TraceStartIEs} },
```

```
    ...
}

TraceStartIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID              CRITICALITY reject  TYPE AMF-UE-NGAP-ID             PRESENCE mandatory  }|
    { ID id-RAN-UE-NGAP-ID              CRITICALITY reject  TYPE RAN-UE-NGAP-ID             PRESENCE mandatory  }|
    { ID id-TraceActivation             CRITICALITY ignore  TYPE TraceActivation            PRESENCE mandatory  },
    ...
}

-- **************************************************************
--
-- TRACE FAILURE INDICATION
--
-- **************************************************************

TraceFailureIndication ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {TraceFailureIndicationIEs} },
    ...
}

TraceFailureIndicationIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID              CRITICALITY reject  TYPE AMF-UE-NGAP-ID             PRESENCE mandatory  }|
    { ID id-RAN-UE-NGAP-ID              CRITICALITY reject  TYPE RAN-UE-NGAP-ID             PRESENCE mandatory  }|
    { ID id-NGRANTraceID                CRITICALITY ignore  TYPE NGRANTraceID               PRESENCE mandatory  }|
    { ID id-Cause                       CRITICALITY ignore  TYPE Cause                      PRESENCE mandatory  },
    ...
}

-- **************************************************************
--
-- DEACTIVATE TRACE
--
-- **************************************************************

DeactivateTrace ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {DeactivateTraceIEs} },
    ...
}

DeactivateTraceIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID              CRITICALITY reject  TYPE AMF-UE-NGAP-ID             PRESENCE mandatory  }|
    { ID id-RAN-UE-NGAP-ID              CRITICALITY reject  TYPE RAN-UE-NGAP-ID             PRESENCE mandatory  }|
    { ID id-NGRANTraceID                CRITICALITY ignore  TYPE NGRANTraceID               PRESENCE mandatory  },
    ...
}

-- **************************************************************
--
-- CELL TRAFFIC TRACE
--
-- **************************************************************

CellTrafficTrace ::= SEQUENCE {
```

```
    protocolIEs     ProtocolIE-Container        { {CellTrafficTraceIEs} },
    ...
}

CellTrafficTraceIEs NGAP-PROTOCOL-IES ::= {
    {ID id-AMF-UE-NGAP-ID                   CRITICALITY reject  TYPE AMF-UE-NGAP-ID             PRESENCE mandatory }|
    {ID id-RAN-UE-NGAP-ID                   CRITICALITY reject  TYPE RAN-UE-NGAP-ID             PRESENCE mandatory }|
    {ID id-NGRANTraceID                     CRITICALITY ignore  TYPE NGRANTraceID               PRESENCE mandatory }|
    {ID id-NGRAN-CGI                        CRITICALITY ignore  TYPE NGRAN-CGI                  PRESENCE mandatory }|
    {ID id-TraceCollectionEntityIPAddress   CRITICALITY ignore  TYPE TransportLayerAddress      PRESENCE mandatory }|
    {ID id-PrivacyIndicator                 CRITICALITY ignore  TYPE PrivacyIndicator           PRESENCE optional  }|
    {ID id-TraceCollectionEntityURI         CRITICALITY ignore  TYPE URI-address                PRESENCE optional  },
    ...
}

-- **************************************************************
--
-- LOCATION REPORTING ELEMENTARY PROCEDURES
--
-- **************************************************************

-- **************************************************************
--
-- LOCATION REPORTING CONTROL
--
-- **************************************************************

LocationReportingControl ::= SEQUENCE {
    protocolIEs         ProtocolIE-Container        { {LocationReportingControlIEs} },
    ...
}

LocationReportingControlIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID                  CRITICALITY reject  TYPE AMF-UE-NGAP-ID                 PRESENCE mandatory   }|
    { ID id-RAN-UE-NGAP-ID                  CRITICALITY reject  TYPE RAN-UE-NGAP-ID                 PRESENCE mandatory   }|
    { ID id-LocationReportingRequestType    CRITICALITY ignore  TYPE LocationReportingRequestType   PRESENCE mandatory   },
    ...
}

-- **************************************************************
--
-- LOCATION REPORTING FAILURE INDICATION
--
-- **************************************************************

LocationReportingFailureIndication ::= SEQUENCE {
    protocolIEs         ProtocolIE-Container        { {LocationReportingFailureIndicationIEs} },
    ...
}

LocationReportingFailureIndicationIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID          CRITICALITY reject  TYPE AMF-UE-NGAP-ID             PRESENCE mandatory }|
    { ID id-RAN-UE-NGAP-ID          CRITICALITY reject  TYPE RAN-UE-NGAP-ID             PRESENCE mandatory }|
    { ID id-Cause                   CRITICALITY ignore  TYPE Cause                      PRESENCE mandatory }|
```

```
    { ID id-Aerial-UE-FlightInformationOngoingReporting-failed         CRITICALITY ignore  TYPE Aerial-UE-FlightInformationOngoingReporting-failed
                    PRESENCE optional},
    ...
}


Aerial-UE-FlightInformationOngoingReporting-failed::= ENUMERATED {
    true,
    ...
}

-- **************************************************************
--
-- LOCATION REPORT
--
-- **************************************************************

LocationReport ::= SEQUENCE {
    protocolIEs         ProtocolIE-Container        { {LocationReportIEs} },
    ...
}

LocationReportIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID                      CRITICALITY reject  TYPE AMF-UE-NGAP-ID                   PRESENCE mandatory   }|
    { ID id-RAN-UE-NGAP-ID                      CRITICALITY reject  TYPE RAN-UE-NGAP-ID                   PRESENCE mandatory   }|
    { ID id-UserLocationInformation             CRITICALITY ignore  TYPE UserLocationInformation          PRESENCE mandatory   }|
    { ID id-UEPresenceInAreaOfInterestList      CRITICALITY ignore  TYPE UEPresenceInAreaOfInterestList   PRESENCE optional    }|
    { ID id-LocationReportingRequestType        CRITICALITY ignore  TYPE LocationReportingRequestType     PRESENCE mandatory   },
    ...
}

-- **************************************************************
--
-- UE TNLA BINDING ELEMENTARY PROCEDURES
--
-- **************************************************************

-- **************************************************************
--
-- UE TNLA BINDING RELEASE REQUEST
--
-- **************************************************************

UETNLABindingReleaseRequest ::= SEQUENCE {
    protocolIEs         ProtocolIE-Container        { {UETNLABindingReleaseRequestIEs} },
    ...
}

UETNLABindingReleaseRequestIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID      CRITICALITY reject  TYPE AMF-UE-NGAP-ID     PRESENCE mandatory  }|
    { ID id-RAN-UE-NGAP-ID      CRITICALITY reject  TYPE RAN-UE-NGAP-ID     PRESENCE mandatory  },
    ...
}
```

```
-- **************************************************************
--
-- UE RADIO CAPABILITY MANAGEMENT ELEMENTARY PROCEDURES
--
-- **************************************************************

-- **************************************************************
--
-- UE RADIO CAPABILITY INFO INDICATION
--
-- **************************************************************

UERadioCapabilityInfoIndication ::= SEQUENCE {
    protocolIEs         ProtocolIE-Container        { {UERadioCapabilityInfoIndicationIEs} },
    ...
}

UERadioCapabilityInfoIndicationIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID                  CRITICALITY reject  TYPE AMF-UE-NGAP-ID              PRESENCE mandatory   }|
    { ID id-RAN-UE-NGAP-ID                  CRITICALITY reject  TYPE RAN-UE-NGAP-ID              PRESENCE mandatory   }|
    { ID id-UERadioCapability               CRITICALITY ignore  TYPE UERadioCapability           PRESENCE mandatory   }|
    { ID id-UERadioCapabilityForPaging      CRITICALITY ignore  TYPE UERadioCapabilityForPaging  PRESENCE optional    }|
    { ID id-UERadioCapability-EUTRA-Format  CRITICALITY ignore  TYPE UERadioCapability           PRESENCE optional    }|
    { ID id-XrDeviceWith2Rx                 CRITICALITY ignore  TYPE XrDeviceWith2Rx             PRESENCE optional    },
    ...
}

-- **************************************************************
--
-- UE Radio Capability Check Elementary Procedure
--
-- **************************************************************

-- **************************************************************
--
-- UE RADIO CAPABILITY CHECK REQUEST
--
-- **************************************************************

UERadioCapabilityCheckRequest ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {UERadioCapabilityCheckRequestIEs} },
    ...
}

UERadioCapabilityCheckRequestIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID          CRITICALITY reject  TYPE AMF-UE-NGAP-ID         PRESENCE mandatory  }|
    { ID id-RAN-UE-NGAP-ID          CRITICALITY reject  TYPE RAN-UE-NGAP-ID         PRESENCE mandatory  }|
    { ID id-UERadioCapability       CRITICALITY ignore  TYPE UERadioCapability      PRESENCE optional   }|
    { ID id-UERadioCapabilityID     CRITICALITY reject  TYPE UERadioCapabilityID    PRESENCE optional   },
    ...
}

-- **************************************************************
--
```

```
-- UE RADIO CAPABILITY CHECK RESPONSE
--
-- **************************************************************

UERadioCapabilityCheckResponse ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {UERadioCapabilityCheckResponseIEs} },
    ...
}

UERadioCapabilityCheckResponseIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID                  CRITICALITY ignore  TYPE AMF-UE-NGAP-ID              PRESENCE mandatory   }|
    { ID id-RAN-UE-NGAP-ID                  CRITICALITY ignore  TYPE RAN-UE-NGAP-ID              PRESENCE mandatory   }|
    { ID id-IMSVoiceSupportIndicator        CRITICALITY reject  TYPE IMSVoiceSupportIndicator    PRESENCE mandatory   }|
    { ID id-CriticalityDiagnostics          CRITICALITY ignore  TYPE CriticalityDiagnostics      PRESENCE optional    },
    ...
}

-- **************************************************************
--
-- PRIVATE MESSAGE ELEMENTARY PROCEDURE
--
-- **************************************************************

-- **************************************************************
--
-- PRIVATE MESSAGE
--
-- **************************************************************

PrivateMessage ::= SEQUENCE {
    privateIEs      PrivateIE-Container     { { PrivateMessageIEs } },
    ...
}

PrivateMessageIEs NGAP-PRIVATE-IES ::= {
    ...
}


-- **************************************************************
--
-- DATA USAGE REPORTING ELEMENTARY PROCEDURES
--
-- **************************************************************

-- **************************************************************
--
-- SECONDARY RAT DATA USAGE REPORT
--
-- **************************************************************

SecondaryRATDataUsageReport ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {SecondaryRATDataUsageReportIEs} },
    ...
```

```
}

SecondaryRATDataUsageReportIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID                              CRITICALITY ignore  TYPE AMF-UE-NGAP-ID                              PRESENCE mandatory
    }|
    { ID id-RAN-UE-NGAP-ID                              CRITICALITY ignore  TYPE RAN-UE-NGAP-ID                              PRESENCE mandatory
    }|
    { ID id-PDUSessionResourceSecondaryRATUsageList     CRITICALITY ignore  TYPE PDUSessionResourceSecondaryRATUsageList     PRESENCE mandatory
    }|
    { ID id-HandoverFlag                                CRITICALITY ignore  TYPE HandoverFlag                                PRESENCE optional
    }|
    { ID id-UserLocationInformation                     CRITICALITY ignore  TYPE UserLocationInformation                     PRESENCE optional
    },
    ...
}

-- **************************************************************
--
-- RIM INFORMATION TRANSFER ELEMENTARY PROCEDURES
--
-- **************************************************************

-- **************************************************************
--
-- UPLINK RIM INFORMATION TRANSFER
--
-- **************************************************************

UplinkRIMInformationTransfer ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {UplinkRIMInformationTransferIEs} },
    ...
}

UplinkRIMInformationTransferIEs NGAP-PROTOCOL-IES ::= {
    { ID id-RIMInformationTransfer  CRITICALITY ignore  TYPE RIMInformationTransfer PRESENCE optional  },
    ...
}

-- **************************************************************
--
-- DOWNLINK RIM INFORMATION TRANSFER
--
-- **************************************************************

DownlinkRIMInformationTransfer ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {DownlinkRIMInformationTransferIEs} },
    ...
}

DownlinkRIMInformationTransferIEs NGAP-PROTOCOL-IES ::= {
    { ID id-RIMInformationTransfer  CRITICALITY ignore  TYPE RIMInformationTransfer PRESENCE optional  },
    ...
}
```

```
-- ************************************************************
--
-- Connection Establishment Indication
--
-- ************************************************************

ConnectionEstablishmentIndication::= SEQUENCE {
    protocolIEs         ProtocolIE-Container { {ConnectionEstablishmentIndicationIEs} },
    ...
}

ConnectionEstablishmentIndicationIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID                  CRITICALITY reject  TYPE AMF-UE-NGAP-ID              PRESENCE mandatory   }|
    { ID id-RAN-UE-NGAP-ID                  CRITICALITY reject  TYPE RAN-UE-NGAP-ID              PRESENCE mandatory   }|
    { ID id-UERadioCapability               CRITICALITY ignore  TYPE UERadioCapability           PRESENCE optional    }|
    { ID id-EndIndication                   CRITICALITY ignore  TYPE EndIndication               PRESENCE optional    }|
    { ID id-S-NSSAI                         CRITICALITY ignore  TYPE S-NSSAI                     PRESENCE optional    }|
    { ID id-AllowedNSSAI                    CRITICALITY ignore  TYPE AllowedNSSAI                PRESENCE optional    }|
    { ID id-UE-DifferentiationInfo          CRITICALITY ignore  TYPE UE-DifferentiationInfo       PRESENCE optional    }|
    { ID id-DL-CP-SecurityInformation       CRITICALITY ignore  TYPE DL-CP-SecurityInformation    PRESENCE optional    }|
    { ID id-NB-IoT-UEPriority               CRITICALITY ignore  TYPE NB-IoT-UEPriority            PRESENCE optional    }|
    { ID id-Enhanced-CoverageRestriction    CRITICALITY ignore  TYPE Enhanced-CoverageRestriction PRESENCE optional    }|
    { ID id-CEmodeBrestricted               CRITICALITY ignore  TYPE CEmodeBrestricted            PRESENCE optional    }|
    { ID id-UERadioCapabilityID             CRITICALITY reject  TYPE UERadioCapabilityID          PRESENCE optional    }|
    { ID id-MaskedIMEISV                    CRITICALITY ignore  TYPE MaskedIMEISV                 PRESENCE optional    }|
    { ID id-OldAMF                          CRITICALITY reject  TYPE AMFName                      PRESENCE optional    }|
    { ID id-Partially-Allowed-NSSAI         CRITICALITY ignore  TYPE Partially-Allowed-NSSAI      PRESENCE optional    }|
    { ID id-ExtendedOldAMF                  CRITICALITY ignore  TYPE Extended-AMFName             PRESENCE optional    },
    ...
}


-- ************************************************************
--
-- UE RADIO CAPABILITY ID MAPPING ELEMENTARY PROCEDURES
--
-- ************************************************************

-- ************************************************************
--
-- UE RADIO CAPABILITY ID MAPPING REQUEST
--
-- ************************************************************

UERadioCapabilityIDMappingRequest ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {UERadioCapabilityIDMappingRequestIEs} },
    ...
}

UERadioCapabilityIDMappingRequestIEs NGAP-PROTOCOL-IES ::= {
    { ID id-UERadioCapabilityID     CRITICALITY reject  TYPE UERadioCapabilityID    PRESENCE mandatory  },
    ...
}
```

```
-- ************************************************************
--
-- UE RADIO CAPABILITY ID MAPPING RESPONSE
--
-- ************************************************************

UERadioCapabilityIDMappingResponse ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {UERadioCapabilityIDMappingResponseIEs} },
    ...
}

UERadioCapabilityIDMappingResponseIEs NGAP-PROTOCOL-IES ::= {
    { ID id-UERadioCapabilityID         CRITICALITY reject  TYPE UERadioCapabilityID        PRESENCE mandatory  }|
    { ID id-UERadioCapability           CRITICALITY ignore  TYPE UERadioCapability          PRESENCE mandatory  }|
    { ID id-CriticalityDiagnostics      CRITICALITY ignore  TYPE CriticalityDiagnostics     PRESENCE optional   },
    ...
}

-- ************************************************************
--
-- AMF CP Relocation Indication
--
-- ************************************************************

AMFCPRelocationIndication ::= SEQUENCE {
    protocolIEs         ProtocolIE-Container { { AMFCPRelocationIndicationIEs} },
    ...
}

AMFCPRelocationIndicationIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID              CRITICALITY reject  TYPE AMF-UE-NGAP-ID             PRESENCE mandatory  }|
    { ID id-RAN-UE-NGAP-ID              CRITICALITY reject  TYPE RAN-UE-NGAP-ID             PRESENCE mandatory  }|
    { ID id-S-NSSAI                     CRITICALITY ignore  TYPE S-NSSAI                    PRESENCE optional   }| --this IE is not used and
ignored
    { ID id-AllowedNSSAI                CRITICALITY ignore  TYPE AllowedNSSAI               PRESENCE optional   }| --this IE is not used and
ignored
    { ID id-Partially-Allowed-NSSAI     CRITICALITY ignore  TYPE Partially-Allowed-NSSAI    PRESENCE optional   }, --this IE is not used and
ignored
    ...
}

-- ************************************************************
--
-- MBS SESSION MANAGEMENT ELEMENTARY PROCEDURES
--
-- ************************************************************

-- ************************************************************
--
-- Broadcast Session Setup Elementary Procedure
--
-- ************************************************************

-- ************************************************************
```

```
--
-- BROADCAST SESSION SETUP REQUEST
--
-- **************************************************************

BroadcastSessionSetupRequest ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {BroadcastSessionSetupRequestIEs} },
    ...
}

BroadcastSessionSetupRequestIEs NGAP-PROTOCOL-IES ::= {
    { ID id-MBS-SessionID                       CRITICALITY reject  TYPE MBS-SessionID                              PRESENCE mandatory   }|
    { ID id-S-NSSAI                             CRITICALITY reject  TYPE S-NSSAI                                    PRESENCE mandatory   }|
    { ID id-MBS-ServiceArea                     CRITICALITY reject  TYPE MBS-ServiceArea                            PRESENCE mandatory   }|
    { ID id-MBSSessionSetupRequestTransfer      CRITICALITY reject  TYPE OCTET STRING (CONTAINING MBSSessionSetupOrModRequestTransfer)     PRESENCE
mandatory   }|
    { ID id-AssociatedSessionID                 CRITICALITY ignore  TYPE AssociatedSessionID                    PRESENCE optional    },
    ...
}

-- **************************************************************
--
-- BROADCAST SESSION SETUP RESPONSE
--
-- **************************************************************

BroadcastSessionSetupResponse ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {BroadcastSessionSetupResponseIEs} },
    ...
}

BroadcastSessionSetupResponseIEs NGAP-PROTOCOL-IES ::= {
    { ID id-MBS-SessionID                       CRITICALITY reject  TYPE MBS-SessionID                              PRESENCE mandatory   }|
    { ID id-MBSSessionSetupResponseTransfer     CRITICALITY reject  TYPE OCTET STRING (CONTAINING MBSSessionSetupOrModResponseTransfer) PRESENCE
optional        }|
    { ID id-CriticalityDiagnostics              CRITICALITY ignore  TYPE CriticalityDiagnostics                     PRESENCE optional    },
    ...
}

-- **************************************************************
--
-- BROADCAST SESSION SETUP FAILURE
--
-- **************************************************************

BroadcastSessionSetupFailure ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {BroadcastSessionSetupFailureIEs} },
    ...
}

BroadcastSessionSetupFailureIEs NGAP-PROTOCOL-IES ::= {
    { ID id-MBS-SessionID                       CRITICALITY reject  TYPE MBS-SessionID                              PRESENCE mandatory   }|
    { ID id-MBSSessionSetupFailureTransfer      CRITICALITY ignore  TYPE OCTET STRING (CONTAINING MBSSessionSetupOrModFailureTransfer)  PRESENCE
optional    }|
```

```
    { ID id-Cause                           CRITICALITY ignore  TYPE Cause                                  PRESENCE mandatory   }|
    { ID id-CriticalityDiagnostics          CRITICALITY ignore  TYPE CriticalityDiagnostics                 PRESENCE optional    },
    ...
}

-- **************************************************************
--
-- Broadcast Session Modification Elementary Procedure
--
-- **************************************************************

-- **************************************************************
--
-- BROADCAST SESSION MODIFICATION REQUEST
--
-- **************************************************************

BroadcastSessionModificationRequest ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {BroadcastSessionModificationRequestIEs} },
    ...
}

BroadcastSessionModificationRequestIEs NGAP-PROTOCOL-IES ::= {
    { ID id-MBS-SessionID                       CRITICALITY reject  TYPE MBS-SessionID                      PRESENCE mandatory   }|
    { ID id-MBS-ServiceArea                     CRITICALITY reject  TYPE MBS-ServiceArea                    PRESENCE optional    }|
    { ID id-MBSSessionModificationRequestTransfer   CRITICALITY reject  TYPE OCTET STRING (CONTAINING MBSSessionSetupOrModRequestTransfer)
    PRESENCE optional       },
    ...
}

-- **************************************************************
--
-- BROADCAST SESSION MODIFICATION RESPONSE
--
-- **************************************************************

BroadcastSessionModificationResponse ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {BroadcastSessionModificationResponseIEs} },
    ...
}

BroadcastSessionModificationResponseIEs NGAP-PROTOCOL-IES ::= {
    { ID id-MBS-SessionID                       CRITICALITY reject  TYPE MBS-SessionID                      PRESENCE mandatory   }|
    { ID id-MBSSessionModificationResponseTransfer  CRITICALITY reject  TYPE OCTET STRING (CONTAINING MBSSessionSetupOrModResponseTransfer)PRESENCE
optional    }|
    { ID id-CriticalityDiagnostics              CRITICALITY ignore  TYPE CriticalityDiagnostics             PRESENCE optional    },
    ...
}

-- **************************************************************
--
-- BROADCAST SESSION MODIFICATION  FAILURE
--
-- **************************************************************
```

```
BroadcastSessionModificationFailure ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {BroadcastSessionModificationFailureIEs} },
    ...
}

BroadcastSessionModificationFailureIEs NGAP-PROTOCOL-IES ::= {
    { ID id-MBS-SessionID                           CRITICALITY reject  TYPE MBS-SessionID                          PRESENCE mandatory   }|
    { ID id-MBSSessionModificationFailureTransfer   CRITICALITY ignore  TYPE OCTET STRING (CONTAINING MBSSessionSetupOrModFailureTransfer) PRESENCE
optional    }|
    { ID id-Cause                                   CRITICALITY ignore  TYPE Cause                               PRESENCE mandatory   }|
    { ID id-CriticalityDiagnostics                  CRITICALITY ignore  TYPE CriticalityDiagnostics              PRESENCE optional    },
    ...
}

-- **************************************************************
--
-- Broadcast Session Release Elementary Procedure
--
-- **************************************************************

-- **************************************************************
--
-- BROADCAST SESSION RELEASE REQUEST
--
-- **************************************************************

BroadcastSessionReleaseRequest ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {BroadcastSessionReleaseRequestIEs} },
    ...
}

BroadcastSessionReleaseRequestIEs NGAP-PROTOCOL-IES ::= {
    { ID id-MBS-SessionID                           CRITICALITY reject  TYPE MBS-SessionID                          PRESENCE mandatory   }|
    { ID id-Cause                                   CRITICALITY ignore  TYPE Cause                               PRESENCE mandatory   },
    ...
}

-- **************************************************************
--
-- Broadcast Session Release Required Elementary Procedure
--
-- **************************************************************

-- **************************************************************
--
-- BROADCAST SESSION RELEASE REQUIRED
--
-- **************************************************************

BroadcastSessionReleaseRequired ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {BroadcastSessionReleaseRequiredIEs} },
    ...
}
```

```
BroadcastSessionReleaseRequiredIEs NGAP-PROTOCOL-IES ::= {
    { ID id-MBS-SessionID                          CRITICALITY reject  TYPE MBS-SessionID                          PRESENCE mandatory   }|
    { ID id-Cause                                  CRITICALITY ignore  TYPE Cause                                  PRESENCE mandatory   },
    ...
}

-- **************************************************************
--
-- BROADCAST SESSION RELEASE RESPONSE
--
-- **************************************************************

BroadcastSessionReleaseResponse ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {BroadcastSessionReleaseResponseIEs} },
    ...
}

BroadcastSessionReleaseResponseIEs NGAP-PROTOCOL-IES ::= {
    { ID id-MBS-SessionID                          CRITICALITY reject  TYPE MBS-SessionID                       PRESENCE mandatory   }|
    { ID id-MBSSessionReleaseResponseTransfer      CRITICALITY ignore  TYPE OCTET STRING (CONTAINING MBSSessionReleaseResponseTransfer)   PRESENCE
optional        }|
    { ID id-CriticalityDiagnostics                 CRITICALITY ignore  TYPE CriticalityDiagnostics             PRESENCE optional    },
    ...
}


-- **************************************************************
--
-- Broadcast Session Transport Elementary Procedure
--
-- **************************************************************

-- **************************************************************
--
-- BROADCAST SESSION TRANSPORT REQUEST
--
-- **************************************************************

BroadcastSessionTransportRequest ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {BroadcastSessionTransportRequestIEs} },
    ...
}

BroadcastSessionTransportRequestIEs NGAP-PROTOCOL-IES ::= {
    { ID id-MBS-SessionID                       CRITICALITY reject  TYPE MBS-SessionID           PRESENCE mandatory   }|
    { ID id-BroadcastTransportRequestTransfer   CRITICALITY reject  TYPE OCTET STRING (CONTAINING BroadcastTransportRequestTransfer)    PRESENCE
mandatory   },
    ...
}

-- **************************************************************
--
-- BROADCAST SESSION TRANSPORT RESPONSE
```

```
--
-- ********************************************************************

BroadcastSessionTransportResponse ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {BroadcastSessionTransportResponseIEs} },
    ...
}

BroadcastSessionTransportResponseIEs NGAP-PROTOCOL-IES ::= {
    { ID id-MBS-SessionID                       CRITICALITY reject  TYPE MBS-SessionID           PRESENCE mandatory   }|
    { ID id-BroadcastTransportResponseTransfer  CRITICALITY reject  TYPE OCTET STRING (CONTAINING BroadcastTransportResponseTransfer)PRESENCE
mandatory   }|
    { ID id-CriticalityDiagnostics              CRITICALITY ignore  TYPE CriticalityDiagnostics   PRESENCE optional    },
    ...
}

-- ********************************************************************
--
-- BROADCAST SESSION TRANSPORT FAILURE
--
-- ********************************************************************

BroadcastSessionTransportFailure ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {BroadcastSessionTransportFailureIEs} },
    ...
}

BroadcastSessionTransportFailureIEs NGAP-PROTOCOL-IES ::= {
    { ID id-MBS-SessionID                       CRITICALITY reject  TYPE MBS-SessionID           PRESENCE mandatory   }|
    { ID id-BroadcastTransportFailureTransfer   CRITICALITY ignore  TYPE OCTET STRING (CONTAINING BroadcastTransportFailureTransfer) PRESENCE
    mandatory   }|
    { ID id-Cause                               CRITICALITY ignore  TYPE Cause                   PRESENCE mandatory   }|
    { ID id-CriticalityDiagnostics              CRITICALITY ignore  TYPE CriticalityDiagnostics   PRESENCE optional    },
    ...
}



-- ********************************************************************
--
-- Distribution Setup Elementary Procedure
--
-- ********************************************************************

-- ********************************************************************
--
-- DISTRIBUTION SETUP REQUEST
--
-- ********************************************************************

DistributionSetupRequest ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {DistributionSetupRequestIEs} },
    ...
}
```

```
DistributionSetupRequestIEs NGAP-PROTOCOL-IES ::= {
    { ID id-MBS-SessionID                               CRITICALITY reject  TYPE MBS-SessionID                              PRESENCE mandatory   }|
    { ID id-MBS-AreaSessionID                           CRITICALITY reject  TYPE MBS-AreaSessionID                          PRESENCE optional    }|
    { ID id-MBS-DistributionSetupRequestTransfer        CRITICALITY reject  TYPE OCTET STRING (CONTAINING MBS-DistributionSetupRequestTransfer)
        PRESENCE mandatory  },
    ...
}

-- **************************************************************
--
-- DISTRIBUTION SETUP RESPONSE
--
-- **************************************************************

DistributionSetupResponse ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {DistributionSetupResponseIEs} },
    ...
}

DistributionSetupResponseIEs NGAP-PROTOCOL-IES ::= {
    { ID id-MBS-SessionID                               CRITICALITY reject  TYPE MBS-SessionID                              PRESENCE mandatory   }|
    { ID id-MBS-AreaSessionID                           CRITICALITY reject  TYPE MBS-AreaSessionID                          PRESENCE optional    }|
    { ID id-MBS-DistributionSetupResponseTransfer       CRITICALITY reject  TYPE OCTET STRING (CONTAINING MBS-DistributionSetupResponseTransfer)
        PRESENCE mandatory  }|
    { ID id-CriticalityDiagnostics                      CRITICALITY ignore  TYPE CriticalityDiagnostics                     PRESENCE optional    },
    ...
}

-- **************************************************************
--
-- DISTRIBUTION SETUP FAILURE
--
-- **************************************************************

DistributionSetupFailure ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {DistributionSetupFailureIEs} },
    ...
}

DistributionSetupFailureIEs NGAP-PROTOCOL-IES ::= {
    { ID id-MBS-SessionID                               CRITICALITY reject  TYPE MBS-SessionID                              PRESENCE mandatory   }|
    { ID id-MBS-AreaSessionID                           CRITICALITY reject  TYPE MBS-AreaSessionID                          PRESENCE optional    }|
    { ID id-MBS-DistributionSetupUnsuccessfulTransfer   CRITICALITY ignore  TYPE OCTET STRING (CONTAINING MBS-
DistributionSetupUnsuccessfulTransfer)  PRESENCE mandatory  }|
    { ID id-Cause                                       CRITICALITY ignore  TYPE Cause                                      PRESENCE mandatory   }|
    { ID id-CriticalityDiagnostics                      CRITICALITY ignore  TYPE CriticalityDiagnostics                     PRESENCE optional    },
    ...
}

-- **************************************************************
--
-- Distribution Release Elementary Procedure
--
```

```
-- ************************************************************

-- ************************************************************
--
-- DISTRIBUTION RELEASE REQUEST
--
-- ************************************************************

DistributionReleaseRequest ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {DistributionReleaseRequestIEs} },
    ...
}

DistributionReleaseRequestIEs NGAP-PROTOCOL-IES ::= {
    { ID id-MBS-SessionID                           CRITICALITY reject  TYPE MBS-SessionID                              PRESENCE mandatory   }|
    { ID id-MBS-AreaSessionID                       CRITICALITY reject  TYPE MBS-AreaSessionID                          PRESENCE optional    }|
    { ID id-MBS-DistributionReleaseRequestTransfer  CRITICALITY reject  TYPE OCTET STRING (CONTAINING MBS-DistributionReleaseRequestTransfer)
        PRESENCE mandatory  }|
    { ID id-Cause                                   CRITICALITY ignore  TYPE Cause                                      PRESENCE mandatory   },
    ...
}

-- ************************************************************
--
-- DISTRIBUTION RELEASE RESPONSE
--
-- ************************************************************

DistributionReleaseResponse ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {DistributionReleaseResponseIEs} },
    ...
}

DistributionReleaseResponseIEs NGAP-PROTOCOL-IES ::= {
    { ID id-MBS-SessionID                           CRITICALITY reject  TYPE MBS-SessionID                              PRESENCE mandatory   }|
    { ID id-MBS-AreaSessionID                       CRITICALITY reject  TYPE MBS-AreaSessionID                          PRESENCE optional    }|
    { ID id-CriticalityDiagnostics                  CRITICALITY ignore  TYPE CriticalityDiagnostics                     PRESENCE optional    },
    ...
}

-- ************************************************************
--
-- Multicast Session Activation Elementary Procedure
--
-- ************************************************************

-- ************************************************************
--
-- MULTICAST SESSION ACTIVATION REQUEST
--
-- ************************************************************

MulticastSessionActivationRequest ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {MulticastSessionActivationRequestIEs} },
```

```
    ...
}

MulticastSessionActivationRequestIEs NGAP-PROTOCOL-IES ::= {
    { ID id-MBS-SessionID                                 CRITICALITY reject  TYPE MBS-SessionID                                 PRESENCE mandatory   }|
    { ID id-MulticastSessionActivationRequestTransfer   CRITICALITY reject  TYPE OCTET STRING (CONTAINING
MulticastSessionActivationRequestTransfer)  PRESENCE mandatory  },
    ...
}

-- **************************************************************
--
-- MULTICAST SESSION ACTIVATION RESPONSE
--
-- **************************************************************

MulticastSessionActivationResponse ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {MulticastSessionActivationResponseIEs} },
    ...
}

MulticastSessionActivationResponseIEs NGAP-PROTOCOL-IES ::= {
    { ID id-MBS-SessionID                                 CRITICALITY reject  TYPE MBS-SessionID                                 PRESENCE mandatory   }|
    { ID id-CriticalityDiagnostics                        CRITICALITY ignore  TYPE CriticalityDiagnostics                        PRESENCE optional    },
    ...
}

-- **************************************************************
--
-- MULTICAST SESSION ACTIVATION FAILURE
--
-- **************************************************************

MulticastSessionActivationFailure ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {MulticastSessionActivationFailureIEs} },
    ...
}

MulticastSessionActivationFailureIEs NGAP-PROTOCOL-IES ::= {
    { ID id-MBS-SessionID                                 CRITICALITY reject  TYPE MBS-SessionID                                 PRESENCE mandatory
    }|
    { ID id-Cause                                         CRITICALITY ignore  TYPE Cause                                         PRESENCE mandatory
    }|
    { ID id-CriticalityDiagnostics                        CRITICALITY ignore  TYPE CriticalityDiagnostics                        PRESENCE optional
    },
    ...
}

-- **************************************************************
--
-- Multicast Session Deactivation Elementary Procedure
--
-- **************************************************************
```

```
-- **************************************************************
--
-- MULTICAST SESSION DEACTIVATION REQUEST
--
-- **************************************************************

MulticastSessionDeactivationRequest ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {MulticastSessionDeactivationRequestIEs} },
    ...
}

MulticastSessionDeactivationRequestIEs NGAP-PROTOCOL-IES ::= {
    { ID id-MBS-SessionID                               CRITICALITY reject  TYPE MBS-SessionID                              PRESENCE mandatory   }|
    { ID id-MulticastSessionDeactivationRequestTransfer CRITICALITY reject  TYPE OCTET STRING (CONTAINING
MulticastSessionDeactivationRequestTransfer)    PRESENCE mandatory  },
    ...
}

-- **************************************************************
--
-- MULTICAST SESSION DEACTIVATION RESPONSE
--
-- **************************************************************

MulticastSessionDeactivationResponse ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {MulticastSessionDeactivationResponseIEs} },
    ...
}

MulticastSessionDeactivationResponseIEs NGAP-PROTOCOL-IES ::= {
    { ID id-MBS-SessionID                               CRITICALITY reject  TYPE MBS-SessionID                          PRESENCE mandatory
    }|
    { ID id-CriticalityDiagnostics                      CRITICALITY ignore  TYPE CriticalityDiagnostics                 PRESENCE optional
    },
    ...
}

-- **************************************************************
--
-- Multicast Session Update Elementary Procedure
--
-- **************************************************************

-- **************************************************************
--
-- MULTICAST SESSION UPDATE REQUEST
--
-- **************************************************************

MulticastSessionUpdateRequest ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {MulticastSessionUpdateRequestIEs} },
    ...
}
```

```
MulticastSessionUpdateRequestIEs NGAP-PROTOCOL-IES ::= {
    { ID id-MBS-SessionID                               CRITICALITY reject  TYPE MBS-SessionID                              PRESENCE mandatory   }|
    { ID id-MBS-AreaSessionID                           CRITICALITY reject  TYPE MBS-AreaSessionID                          PRESENCE optional    }|
    { ID id-MulticastSessionUpdateRequestTransfer       CRITICALITY reject  TYPE OCTET STRING (CONTAINING MulticastSessionUpdateRequestTransfer)
        PRESENCE mandatory  },
    ...
}

-- **************************************************************
--
-- MULTICAST SESSION UPDATE RESPONSE
--
-- **************************************************************

MulticastSessionUpdateResponse ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {MulticastSessionUpdateResponseIEs} },
    ...
}

MulticastSessionUpdateResponseIEs NGAP-PROTOCOL-IES ::= {
    { ID id-MBS-SessionID                               CRITICALITY reject  TYPE MBS-SessionID                              PRESENCE mandatory   }|
    { ID id-MBS-AreaSessionID                           CRITICALITY reject  TYPE MBS-AreaSessionID                          PRESENCE optional    }|
    { ID id-CriticalityDiagnostics                      CRITICALITY ignore  TYPE CriticalityDiagnostics                     PRESENCE optional    },
    ...
}

-- **************************************************************
--
-- MULTICAST SESSION UPDATE FAILURE
--
-- **************************************************************

MulticastSessionUpdateFailure ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {MulticastSessionUpdateFailureIEs} },
    ...
}

MulticastSessionUpdateFailureIEs NGAP-PROTOCOL-IES ::= {
    { ID id-MBS-SessionID                               CRITICALITY reject  TYPE MBS-SessionID                          PRESENCE mandatory
    }|
    { ID id-MBS-AreaSessionID                           CRITICALITY reject  TYPE MBS-AreaSessionID                      PRESENCE optional
    }|
    { ID id-Cause                                       CRITICALITY ignore  TYPE Cause                                  PRESENCE mandatory
    }|
    { ID id-CriticalityDiagnostics                      CRITICALITY ignore  TYPE CriticalityDiagnostics                 PRESENCE optional
    },
    ...
}

-- **************************************************************
--
-- MULTICAST GROUP PAGING ELEMENTARY PROCEDURE
--
-- **************************************************************
```

```
-- ********************************************************************
--
-- MULTICAST GROUP PAGING
--
-- ********************************************************************

MulticastGroupPaging ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {MulticastGroupPagingIEs} },
    ...
}

MulticastGroupPagingIEs NGAP-PROTOCOL-IES ::= {
    { ID id-MBS-SessionID                       CRITICALITY ignore  TYPE MBS-SessionID                PRESENCE mandatory   }|
    { ID id-MBS-ServiceArea                     CRITICALITY ignore  TYPE MBS-ServiceArea              PRESENCE optional    }|
    { ID id-MulticastGroupPagingAreaList        CRITICALITY ignore  TYPE MulticastGroupPagingAreaList PRESENCE mandatory   },
    ...
}

-- ********************************************************************
--
-- TIMING SYNCHRONISATION STATUS REPORTING ELEMENTARY PROCEDURES
--
-- ********************************************************************

-- ********************************************************************
--
-- Timing Synchronisation Status Elementary Procedure
--
-- ********************************************************************

-- ********************************************************************
--
-- TIMING SYNCHRONISATION STATUS REQUEST
--
-- ********************************************************************

TimingSynchronisationStatusRequest ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {TimingSynchronisationStatusRequestIEs} },
    ...
}

TimingSynchronisationStatusRequestIEs NGAP-PROTOCOL-IES ::= {
    { ID id-RoutingID               CRITICALITY reject  TYPE RoutingID          PRESENCE mandatory   }|
    { ID id-RAN-TSSRequestType      CRITICALITY reject  TYPE RAN-TSSRequestType PRESENCE mandatory   },
    ...
}

-- ********************************************************************
--
-- TIMING SYNCHRONISATION STATUS RESPONSE
--
-- ********************************************************************
```

```
TimingSynchronisationStatusResponse ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {TimingSynchronisationStatusResponseIEs} },
    ...
}

TimingSynchronisationStatusResponseIEs NGAP-PROTOCOL-IES ::= {
    { ID id-RoutingID                   CRITICALITY ignore  TYPE RoutingID                  PRESENCE mandatory  }|
    { ID id-CriticalityDiagnostics      CRITICALITY ignore  TYPE CriticalityDiagnostics     PRESENCE optional   },
    ...
}

-- **************************************************************
--
-- TIMING SYNCHRONISATION STATUS FAILURE
--
-- **************************************************************

TimingSynchronisationStatusFailure ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { { TimingSynchronisationStatusFailureIEs} },
    ...
}

TimingSynchronisationStatusFailureIEs NGAP-PROTOCOL-IES ::= {
    { ID id-RoutingID                           CRITICALITY ignore  TYPE RoutingID                PRESENCE mandatory  }|
    { ID id-Cause                               CRITICALITY ignore  TYPE Cause                    PRESENCE mandatory  }|
    { ID id-CriticalityDiagnostics              CRITICALITY ignore  TYPE CriticalityDiagnostics   PRESENCE optional   },
    ...
}

-- **************************************************************
--
-- Timing Synchronisation Status Reporting Elementary Procedure
--
-- **************************************************************

-- **************************************************************
--
-- TIMING SYNCHRONISATION STATUS REPORT
--
-- **************************************************************

TimingSynchronisationStatusReport ::= SEQUENCE {
    protocolIEs         ProtocolIE-Container        { {TimingSynchronisationStatusReportIEs} },
    ...
}

TimingSynchronisationStatusReportIEs NGAP-PROTOCOL-IES ::= {
    { ID id-RoutingID                           CRITICALITY ignore  TYPE RoutingID                                  PRESENCE mandatory  }|
    { ID id-RANTimingSynchronisationStatusInfo  CRITICALITY ignore  TYPE RANTimingSynchronisationStatusInfo         PRESENCE mandatory  }|
    { ID id-RAN-TSSScope                        CRITICALITY ignore  TYPE RAN-TSSScope                               PRESENCE mandatory  },
    ...
}
```

```
-- ************************************************************
--
-- MT Communication Handling Elementary Procedure
--
-- ************************************************************

-- ************************************************************
--
-- MT COMMUNICATION HANDLING REQUEST
--
-- ************************************************************

MTCommunicationHandlingRequest ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { { MTCommunicationHandlingRequestIEs} },
    ...
}

MTCommunicationHandlingRequestIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID                  CRITICALITY reject  TYPE AMF-UE-NGAP-ID             PRESENCE mandatory   }|
    { ID id-RAN-UE-NGAP-ID                  CRITICALITY reject  TYPE RAN-UE-NGAP-ID             PRESENCE mandatory   }|
    { ID id-FiveGCAction                    CRITICALITY reject  TYPE FiveGCAction               PRESENCE mandatory   }|
    { ID id-PDUSessionListMTCommHReq        CRITICALITY reject  TYPE PDUSessionListMTCommHReq    PRESENCE mandatory   },
    ...
}

-- ************************************************************
--
-- MT COMMUNICATION HANDLING RESPONSE
--
-- ************************************************************

MTCommunicationHandlingResponse ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {MTCommunicationHandlingResponseIEs} },
    ...
}

MTCommunicationHandlingResponseIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID                      CRITICALITY reject  TYPE AMF-UE-NGAP-ID                     PRESENCE mandatory   }|
    { ID id-RAN-UE-NGAP-ID                      CRITICALITY reject  TYPE RAN-UE-NGAP-ID                     PRESENCE mandatory   }|
    { ID id-CriticalityDiagnostics              CRITICALITY ignore  TYPE CriticalityDiagnostics             PRESENCE optional    },
    ...
}


-- ************************************************************
--
-- MT COMMUNICATION HANDLING FAILURE
--
-- ************************************************************

MTCommunicationHandlingFailure ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { { MTCommunicationHandlingFailureIEs} },
    ...
}
```

```
MTCommunicationHandlingFailureIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID              CRITICALITY reject  TYPE AMF-UE-NGAP-ID             PRESENCE mandatory  }|
    { ID id-RAN-UE-NGAP-ID              CRITICALITY reject  TYPE RAN-UE-NGAP-ID             PRESENCE mandatory  }|
    { ID id-Cause                       CRITICALITY ignore  TYPE Cause                      PRESENCE mandatory  }|
    { ID id-CriticalityDiagnostics      CRITICALITY ignore  TYPE CriticalityDiagnostics     PRESENCE optional   },
    ...
}

-- **************************************************************

-- RAN Paging Request procedure
--
-- **************************************************************

-- **************************************************************
--
-- RAN PAGING REQUEST
--
-- **************************************************************

RANPagingRequest ::= SEQUENCE {
    protocolIEs         ProtocolIE-Container       { {  RANPagingRequestIEs} },
    ...
}

RANPagingRequestIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AMF-UE-NGAP-ID                  CRITICALITY ignore  TYPE AMF-UE-NGAP-ID                 PRESENCE mandatory   }|
    { ID id-RAN-UE-NGAP-ID                  CRITICALITY ignore  TYPE RAN-UE-NGAP-ID                 PRESENCE mandatory   }|
    { ID id-PagingPolicyDifferentiation     CRITICALITY ignore  TYPE PagingPolicyDifferentiation    PRESENCE optional    }|
    { ID id-DL-Signalling                   CRITICALITY ignore  TYPE DL-Signalling                  PRESENCE optional    },
    ...
}

-- **************************************************************
--
-- A-IoT ELEMENTARY PROCEDURES
--
-- **************************************************************

-- **************************************************************
--
-- Inventory Request Elementary Procedure
--
-- **************************************************************

-- **************************************************************
--
-- INVENTORY REQUEST
--
-- **************************************************************

InventoryRequest ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {InventoryRequestIEs} },
```

```
    ...
}

InventoryRequestIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AIOTFIdentifier             CRITICALITY reject  TYPE AIOTFIdentifier                                      PRESENCE mandatory   }|
    { ID id-AIoT-CorrelationIdentifier  CRITICALITY reject  TYPE AIoT-CorrelationIdentifier                           PRESENCE mandatory   }|
    { ID id-InventoryRequestTransfer    CRITICALITY reject  TYPE OCTET STRING (CONTAINING InventoryRequestTransfer)   PRESENCE mandatory   },
    ...
}

-- **************************************************************
--
-- INVENTORY RESPONSE
--
-- **************************************************************

InventoryResponse ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {InventoryResponseIEs} },
    ...
}

InventoryResponseIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AIOTFIdentifier             CRITICALITY reject  TYPE AIOTFIdentifier                                      PRESENCE mandatory   }|
    { ID id-AIoT-CorrelationIdentifier  CRITICALITY reject  TYPE AIoT-CorrelationIdentifier                           PRESENCE mandatory   }|
    { ID id-InventoryResponseTransfer   CRITICALITY reject  TYPE OCTET STRING (CONTAINING InventoryResponseTransfer)  PRESENCE mandatory   }|
    { ID id-CriticalityDiagnostics      CRITICALITY ignore  TYPE CriticalityDiagnostics                               PRESENCE optional    },
    ...
}

-- **************************************************************
--
-- INVENTORY FAILURE
--
-- **************************************************************

InventoryFailure ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {InventoryFailureIEs} },
    ...
}

InventoryFailureIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AIOTFIdentifier             CRITICALITY ignore  TYPE AIOTFIdentifier                                      PRESENCE mandatory   }|
    { ID id-AIoT-CorrelationIdentifier  CRITICALITY ignore  TYPE AIoT-CorrelationIdentifier                           PRESENCE mandatory   }|
    { ID id-InventoryFailureTransfer    CRITICALITY ignore  TYPE OCTET STRING (CONTAINING InventoryFailureTransfer )  PRESENCE mandatory   }|
    { ID id-Cause                       CRITICALITY ignore  TYPE Cause                                                PRESENCE mandatory   }|
    { ID id-CriticalityDiagnostics      CRITICALITY ignore  TYPE CriticalityDiagnostics                               PRESENCE optional    },
    ...
}

-- **************************************************************

-- Inventory Report procedure
--
-- **************************************************************
```

```
-- ************************************************************
--
-- INVENTORY REPORT
--
-- ************************************************************

InventoryReport ::= SEQUENCE {
    protocolIEs         ProtocolIE-Container       { {  InventoryReportIEs} },
    ...
}

InventoryReportIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AIOTFIdentifier             CRITICALITY reject  TYPE AIOTFIdentifier                                    PRESENCE mandatory   }|
    { ID id-AIoT-CorrelationIdentifier  CRITICALITY reject  TYPE AIoT-CorrelationIdentifier                         PRESENCE mandatory   }|
    { ID id-InventoryReportTransfer     CRITICALITY reject  TYPE OCTET STRING (CONTAINING InventoryReportTransfer  )  PRESENCE mandatory   },
    ...
}

-- ************************************************************
--
-- Command Request Elementary Procedure
--
-- ************************************************************

-- ************************************************************
--
-- COMMAND REQUEST
--
-- ************************************************************

CommandRequest ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {CommandRequestIEs} },
    ...
}

CommandRequestIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AIOTFIdentifier             CRITICALITY reject  TYPE AIOTFIdentifier                                    PRESENCE mandatory   }|
    { ID id-AIoT-CorrelationIdentifier  CRITICALITY reject  TYPE AIoT-CorrelationIdentifier                         PRESENCE mandatory   }|
    { ID id-RAN-AIOT-Device-NGAP-ID     CRITICALITY reject  TYPE RAN-AIOT-Device-NGAP-ID                            PRESENCE mandatory   }|
    { ID id-CommandRequestTransfer      CRITICALITY reject  TYPE OCTET STRING (CONTAINING CommandRequestTransfer)    PRESENCE mandatory   },
    ...
}

-- ************************************************************
--
-- COMMAND RESPONSE
--
-- ************************************************************

CommandResponse ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {CommandResponseIEs} },
    ...
}
```

```
CommandResponseIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AIOTFIdentifier             CRITICALITY reject  TYPE AIOTFIdentifier                                  PRESENCE mandatory   }|
    { ID id-AIoT-CorrelationIdentifier  CRITICALITY reject  TYPE AIoT-CorrelationIdentifier                       PRESENCE mandatory   }|
    { ID id-RAN-AIOT-Device-NGAP-ID     CRITICALITY reject  TYPE RAN-AIOT-Device-NGAP-ID                         PRESENCE mandatory   }|
    { ID id-CommandResponseTransfer     CRITICALITY reject  TYPE OCTET STRING (CONTAINING CommandResponseTransfer)    PRESENCE mandatory   }|
    { ID id-CriticalityDiagnostics      CRITICALITY ignore  TYPE CriticalityDiagnostics                          PRESENCE optional    },
    ...
}

-- **************************************************************
--
-- COMMAND FAILURE
--
-- **************************************************************

CommandFailure ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {CommandFailureIEs} },
    ...
}

CommandFailureIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AIOTFIdentifier             CRITICALITY ignore  TYPE AIOTFIdentifier                                  PRESENCE mandatory   }|
    { ID id-AIoT-CorrelationIdentifier  CRITICALITY ignore  TYPE AIoT-CorrelationIdentifier                       PRESENCE mandatory   }|
    { ID id-RAN-AIOT-Device-NGAP-ID     CRITICALITY ignore  TYPE RAN-AIOT-Device-NGAP-ID                         PRESENCE mandatory   }|
    { ID id-CommandFailureTransfer      CRITICALITY ignore  TYPE OCTET STRING (CONTAINING CommandFailureTransfer )    PRESENCE mandatory   }|
    { ID id-Cause                       CRITICALITY ignore  TYPE Cause                                           PRESENCE mandatory   }|
    { ID id-CriticalityDiagnostics      CRITICALITY ignore  TYPE CriticalityDiagnostics                          PRESENCE optional    },
    ...
}

-- **************************************************************
--
-- A-IoT Session Release Elementary Procedure
--
-- **************************************************************

-- **************************************************************
--
-- AIOT SESSION RELEASE COMMAND
--
-- **************************************************************

AIOTSessionReleaseCommand ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {AIOTSessionReleaseCommandIEs} },
    ...
}

AIOTSessionReleaseCommandIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AIOTFIdentifier                 CRITICALITY reject  TYPE AIOTFIdentifier                                  PRESENCE mandatory   }|
    { ID id-AIoT-CorrelationIdentifier      CRITICALITY reject  TYPE AIoT-CorrelationIdentifier                       PRESENCE mandatory   }|
    { ID id-AIOTSessionReleaseCommandTransfer   CRITICALITY reject  TYPE OCTET STRING (CONTAINING AIOTSessionReleaseCommandTransfer)    PRESENCE
mandatory   },
    ...
```

```
}

-- **************************************************************
--
-- AIOT SESSION RELEASE COMPLETE
--
-- **************************************************************

AIOTSessionReleaseComplete ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {AIOTSessionReleaseCompleteIEs} },
    ...
}

AIOTSessionReleaseCompleteIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AIOTFIdentifier                     CRITICALITY ignore  TYPE AIOTFIdentifier                            PRESENCE mandatory   }|
    { ID id-AIoT-CorrelationIdentifier          CRITICALITY ignore  TYPE AIoT-CorrelationIdentifier                 PRESENCE mandatory   }|
    { ID id-AIOTSessionReleaseCompleteTransfer  CRITICALITY ignore  TYPE OCTET STRING (CONTAINING AIOTSessionReleaseCompleteTransfer)PRESENCE
mandatory   }|
    { ID id-CriticalityDiagnostics              CRITICALITY ignore  TYPE CriticalityDiagnostics                     PRESENCE optional    },
    ...
}

-- **************************************************************
--
-- A-IoT Session Release Request Elementary Procedure
--
-- **************************************************************

-- **************************************************************
--
-- AIOT SESSION RELEASE REQUEST
--
-- **************************************************************

AIOTSessionReleaseRequest ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {AIOTSessionReleaseRequestIEs} },
    ...
}

AIOTSessionReleaseRequestIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AIOTFIdentifier                     CRITICALITY reject  TYPE AIOTFIdentifier                            PRESENCE mandatory   }|
    { ID id-AIoT-CorrelationIdentifier          CRITICALITY reject  TYPE AIoT-CorrelationIdentifier                 PRESENCE mandatory   }|
    { ID id-AIOTSessionReleaseRequestTransfer   CRITICALITY reject  TYPE OCTET STRING (CONTAINING AIOTSessionReleaseRequestTransfer)    PRESENCE
mandatory   },
    ...
}

END
-- ASN1STOP
```

9.4.5 Information Element Definitions

```
-- ASN1START
```

```
-- **************************************************************
--
-- Information Element Definitions
--
-- **************************************************************

NGAP-IEs {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
ngran-Access (22) modules (3) ngap (1) version1 (1) ngap-IEs (2) }

DEFINITIONS AUTOMATIC TAGS ::=

BEGIN

IMPORTS

    id-AdditionalDLForwardingUPTNLInformation,
    id-AdditionalULForwardingUPTNLInformation,
    id-AdditionalDLQosFlowPerTNLInformation,
    id-AdditionalDLUPTNLInformationForHOList,
    id-AdditionalNGU-UP-TNLInformation,
    id-AdditionalRedundantDL-NGU-UP-TNLInformation,
    id-AdditionalRedundantDLQosFlowPerTNLInformation,
    id-AdditionalRedundantNGU-UP-TNLInformation,
    id-AdditionalRedundantUL-NGU-UP-TNLInformation,
    id-AdditionalUL-NGU-UP-TNLInformation,
    id-AIOTFIdentifier,
    id-AIoT-CorrelationIdentifier,
    id-AIoT-DeviceIdentificationRequested,
    id-AIoT-SecurityInfo,
    id-AIoT-RequestedServiceAreaInformation,
    id-AIoT-InventoryAssistanceInformation,
    id-AIoT-FollowonCommandIndication,
    id-RAN-AIOT-Device-NGAP-ID,
    id-AIoT-CommandAssistanceInformation,
    id-AIoT-NASPDU,
    id-AlternativeQoSParaSetList,
    id-AssistanceInformationQoE-Meas,
    id-AdditionalCancelledlocationReportingReferenceIDList,
    id-BurstArrivalTimeDownlink,
    id-Cause,
    id-CNPacketDelayBudgetDL,
    id-CNPacketDelayBudgetUL,
    id-CNTypeRestrictionsForEquivalent,
    id-CNTypeRestrictionsForServing,
    id-CommonNetworkInstance,
    id-ConfiguredTACIndication,
    id-CN-MT-CommunicationHandling,
    id-CurrentQoSParaSetIndex,
    id-DAPSRequestInfo,
    id-DAPSResponseInfoList,
    id-DataForwardingNotPossible,
    id-DataForwardingResponseERABList,
    id-DirectForwardingPathAvailability,
```

```
    id-DL-NGU-UP-TNLInformation,
    id-DownlinkTLContainer,
    id-EndpointIPAddressAndPort,
    id-EnergySavingIndication,
    id-ExtendedMobilityInformation,
    id-ExtendedPacketDelayBudget,
    id-ExtendedRATRestrictionInformation,
    id-ExtendedReportIntervalMDT,
    id-ExtendedSliceSupportList,
    id-ExtendedTAISliceSupportList,
    id-ExtendedUEIdentityIndexValue,
    id-EUTRA-PagingeDRXInformation,
    id-EquivalentSNPNsList,
    id-FurtherExtendedUEIdentityIndexValue,
    id-GeographyBasedMDT,
    id-GlobalCable-ID,
    id-GlobalRANNodeID,
    id-GlobalTNGF-ID,
    id-GlobalTWIF-ID,
    id-GlobalW-AGF-ID,
    id-GUAMIType,
    id-HashedUEIdentityIndexValue,
    id-IncludeBeamMeasurementsIndication,
    id-IntersystemSONInformationRequest,
    id-IntersystemSONInformationReply,
    id-IntersystemResourceStatusUpdate,
    id-IntersystemMobilityFailureforVoiceFallback,
    id-LastEUTRAN-PLMNIdentity,
    id-LastVisitedPSCellList,
    id-LocationReportingAdditionalInfo,
    id-LPWUSPSAssistanceInformation,
    id-LPWUSDisableIndication,
    id-M4ReportAmount,
    id-M5ReportAmount,
    id-M6ReportAmount,
    id-ExcessPacketDelayThresholdConfiguration,
    id-M7ReportAmount,
    id-MaximumIntegrityProtectedDataRate-DL,
    id-MBS-AreaSessionID,
    id-MBS-QoSFlowsToBeSetupList,
    id-MBS-QoSFlowsToBeSetupModList,
    id-MBS-QoSFlowToReleaseList,
    id-MBS-ServiceArea,
    id-MBS-SessionFSAIDList,
    id-MBS-SessionID,
    id-MBS-ActiveSessionInformation-SourcetoTargetList,
    id-MBS-ActiveSessionInformation-TargettoSourceList,
    id-MBS-AssistanceInformation,
    id-MBS-IntendedServiceAreaList,
    id-MBS-SessionTNLInfo5GC,
    id-MBS-SupportIndicator,
    id-MBSSessionFailedtoSetupList,
    id-MBSSessionFailedtoSetuporModifyList,
    id-MBSSessionSetupResponseList,
```

```
    id-MBSSessionSetuporModifyResponseList,
    id-MBSSessionToReleaseList,
    id-MBSSessionSetupRequestList,
    id-MBSSessionSetuporModifyRequestList,
    id-MDTConfiguration,
    id-MicoAllPLMN,
    id-NetworkInstance,
    id-NetworkSliceAreaScopeofMDT,
    id-NGAPIESupportInformationRequestList,
    id-NGAPIESupportInformationResponseList,
    id-NID,
    id-NR-CGI,
    id-NRNTNTAIInformation,
    id-NPN-MobilityInformation,
    id-NPN-PagingAssistanceInformation,
    id-NPN-Support,
    id-NR-PagingeDRXInformation,
    id-OldAssociatedQosFlowList-ULendmarkerexpected,
    id-OnboardingSupport,
    id-PagingAssisDataforCEcapabUE,
    id-PagingCauseIndicationForVoiceService,
    id-PDUSessionAggregateMaximumBitRate,
    id-PduSessionExpectedUEActivityBehaviour,
    id-PDUSessionPairID,
    id-PDUSessionResourceFailedToSetupListCxtFail,
    id-PDUSessionResourceReleaseResponseTransfer,
    id-PDUSessionType,
    id-PEIPSassistanceInformation,
    id-PSCellInformation,
    id-PNI-NPNBasedMDT,
    id-PNI-NPN-AreaScopeofMDT,
    id-QMCConfigInfo,
    id-QosFlowAdditionalInfoList,
    id-QosFlowAddOrModifyRequestList,
    id-QosFlowFailedToSetupList,
    id-QosFlowFeedbackList,
    id-QosFlowParametersList,
    id-QosFlowSetupRequestList,
    id-QosFlowToReleaseList,
    id-QosMonitoringRequest,
    id-QosMonitoringReportingFrequency,
    id-SNPN-CellBasedMDT,
    id-SNPN-TAIBasedMDT,
    id-SNPN-BasedMDT,
    id-SuccessfulHandoverReportList,
    id-SupportedUETypeList,
    id-UEContextReferenceAtSource,
    id-RAT-Information,
    id-RedundantCommonNetworkInstance,
    id-RedundantDL-NGU-TNLInformationReused,
    id-RedundantDL-NGU-UP-TNLInformation,
    id-RedundantDLQosFlowPerTNLInformation,
    id-RedundantPDUSessionInformation,
    id-RedundantQosFlowIndicator,
```

```
    id-RedundantUL-NGU-UP-TNLInformation,
    id-SCTP-TLAs,
    id-SecondaryRATUsageInformation,
    id-SecurityIndication,
    id-SecurityResult,
    id-SgNB-UE-X2AP-ID,
    id-S-NSSAI,
    id-SONInformationReport,
    id-SourceNodeID,
    id-SourceNodeTNLAddrInfo,
    id-SourceSN-to-TargetSN-QMCInfo,
    id-SourceTNLAddrInfo,
    id-SurvivalTime,
    id-Selected-Target-SNPN-Identity,
    id-TNLAssociationTransportLayerAddressNGRAN,
    id-TAIMBSSupportList,
    id-TAINSAGSupportList,
    id-TargetHomeENB-ID,
    id-TargetRNC-ID,
    id-TimeBasedHandoverInformation,
    id-TraceCollectionEntityURI,
    id-TSCTrafficCharacteristics,
    id-UEHistoryInformationFromTheUE,
    id-UERadioCapabilityForPaging,
    id-UERadioCapabilityForPagingOfNB-IoT,
    id-UL-NGU-UP-TNLInformation,
    id-UL-NGU-UP-TNLModifyList,
    id-ULForwarding,
    id-ULForwardingUP-TNLInformation,
    id-UplinkTLContainer,
    id-UsedRSNInformation,
    id-UserLocationInformationTNGF,
    id-UserLocationInformationTWIF,
    id-UserLocationInformationW-AGF,
    id-UserPlaneErrorIndicator,
    id-EarlyMeasurement,
    id-BeamMeasurementsReportConfiguration,
    id-DLDiscarding,
    id-TAI,
    id-HFCNode-ID-new,
    id-GlobalCable-ID-new,
    id-FiveGProSeLayer2Multipath,
    id-CandidateRelayUEInformationList,
    id-FiveGProSeLayer2UEtoUERelay,
    id-FiveGProSeLayer2UEtoUERemote,
    id-SuccessfulPSCellChangeReportList,
    id-TargetCellCRNTI,
    id-TimeSinceFailure,
    id-ClockQualityReportingControlInfo,
    id-RANfeedbacktype,
    id-QoSFlowTSCList,
    id-TSCTrafficCharacteristicsFeedback,
    id-ANPacketDelayBudgetUL,
    id-CommServiceType,
```

```
    id-MobileIAB-MTUserLocationInformation,
    id-PDUsetQoSParameters,
    id-PDUSetbasedHandlingIndicator,
    id-N6JitterInformation,
    id-ECNMarkingorCongestionInformationReportingRequest,
    id-ECNMarkingorCongestionInformationReportingStatus,
    id-MN-only-MDT-collection,
    id-XrDeviceWith2Rx,
    id-MaximumDataBurstVolume,
    id-MBS-NGUFailureIndication,
    id-UserPlaneFailureIndication,
    id-UserPlaneFailureIndicationReport,
    id-QoERVQoEReportingPaths,
    id-UserLocationInformationN3IWF-without-PortNumber,
    id-ExtendedBackupAMFName,
    id-MBS-UP-FailureIndication,
    id-RequestedTNLInfo,
    id-FiveGProSeLayer2MHUEtoNetworkRelay,
    id-FiveGProSeLayer2MHIntermediateUEtoNetworkRelay,
    id-FiveGProSeLayer2MHRemote,
    id-FiveGProSeLayer3MHUEtoNetworkRelay,
    id-AdditionalULI,
    id-PduSetDelayBudgetDownlink,
    id-PduSetDelayBudgetUplink,
    id-PduSetErrorRateDownlink,
    id-PduSetErrorRateUplink,
    id-DLPDUSetInformationMarkingSupportIndication,
    id-MonitoringRequestonAvailableBitrate,
    id-MMSID,
    id-Indication-of-Bitrate-Adaptation,
    id-SCGActivationTime,
    id-Aerial-UE-FlightInformationReporting,
    id-Aerial-UE-FlightInformationReportingControlList,
    maxnoofAIoTAreas,
    maxnoofAllowedAreas,
    maxnoofAllowedCAGsperPLMN,
    maxnoofAllowedS-NSSAIs,
    maxnoofAreaNTN,
    maxnoofAoIMinusOne,
    maxnoofBluetoothName,
    maxnoofBPLMNs,
    maxnoofCAGforMDT,
    maxnoofCAGSperCell,
    maxnoofCandidateCells,
    maxnoofCellIDforMDT,
    maxnoofCellIDforQMC,
    maxnoofCellIDforWarning,
    maxnoofCellinAoI,
    maxnoofCellinEAI,
    maxnoofCellsforMBS,
    maxnoofCellsingNB,
    maxnoofCellsinngeNB,
    maxnoofCellsinNGRANNode,
    maxnoofCellinTAI,
```

```
    maxnoofCellsinUEHistoryInfo,
    maxnoofCellsUEMovingTrajectory,
    maxnoofDevices,
    maxnoofDRBs,
    maxnoofEmergencyAreaID,
    maxnoofEAIforRestart,
    maxnoofEPLMNs,
    maxnoofEPLMNsPlusOne,
    maxnoofE-RABs,
    maxnoofErrors,
    maxnoofExtSliceItems,
    maxnoofESNPNs,
    maxnoofForbTACs,
    maxnoofFreqforMDT,
    maxnoofGUAMIs,
    maxnoofMBSFSAs,
    maxnoofMBSQoSFlows,
    maxnoofMBSServiceAreaInformation,
    maxnoofMBSAreaSessionIDs,
    maxnoofMBSSessions,
    maxnoofMBSSessionsofUE,
    maxnoofMDTPLMNs,
    maxnoofMRBs,
    maxnoofMultiConnectivity,
    maxnoofMultiConnectivityMinusOne,
    maxnoofNeighPCIforMDT,
    maxnoofNGAPIESupportInfo,
    maxnoofNGConnectionsToReset,
    maxNRARFCN,
    maxnoofNRCellBands,
    maxnoofNSAGs,
    maxnoofPagingAreas,
    maxnoofPC5QoSFlows,
    maxnoofPDUSessions,
    maxnoofPLMNs,
    maxnoofPLMNforQMC,
    maxnoofQosFlows,
    maxnoofQosParaSets,
    maxnoofRANNodeinAoI,
    maxnoofReaders,
    maxnoofRecommendedCells,
    maxnoofRecommendedRANNodes,
    maxnoofAoI,
    maxnoofFlightInfoReportControl,
    maxnoofPSCellsPerPrimaryCellinUEHistoryInfo,
    maxnoofReportedCells,
    maxnoofSensorName,
    maxnoofServedGUAMIs,
    maxnoofSliceItems,
    maxnoofMDTSNPNs,
    maxnoofSNSSAIforQMC,
    maxnoofSuccessfulHOReports,
    maxnoofTACs,
    maxnoofTACsinNTN,
```

```
    maxnoofTAforMDT,
    maxnoofTAforQMC,
    maxnoofTAIforInactive,
    maxnoofSupportedTAIforMBS,
    maxnoofTAIforMBS,
    maxnoofTAIforPaging,
    maxnoofTAIforRestart,
    maxnoofTAIforWarning,
    maxnoofTAIinAoI,
    maxnoofTargetS-NSSAIs,
    maxnoofTimePeriods,
    maxnoofTNLAssociations,
    maxnoofUEAppLayerMeas,
    maxnoofUEsforPaging,
    maxnoofUETypes,
    maxnoofWLANName,
    maxnoofXnExtTLAs,
    maxnoofXnGTP-TLAs,
    maxnoofXnTLAs,
    maxnoofThresholdsForExcessPacketDelay,
    maxnoofCandidateRelayUEs,
    maxnoofSuccessfulPSCellChangeReports,
    maxnoofCellsTSS,
    maxnoofPeriodicities,
    maxnoofPartiallyAllowedS-NSSAIs,
    maxnoofRSPPQoSFlows,
    maxnoofSliceItemsforMDT,
    maxnoofIntendedAreasforMBS,
    maxnoofRequestedSNSSAIs,
    maxnoofThresholds



FROM NGAP-Constants

    Criticality,
    ProcedureCode,
    ProtocolIE-ID,
    TriggeringMessage
FROM NGAP-CommonDataTypes

    ProtocolExtensionContainer{},
    ProtocolIE-Container{},
    NGAP-PROTOCOL-EXTENSION,
    ProtocolIE-SingleContainer{},
    NGAP-PROTOCOL-IES
FROM NGAP-Containers;

-- A

AdditionalDLUPTNLInformationForHOList ::= SEQUENCE (SIZE(1..maxnoofMultiConnectivityMinusOne)) OF AdditionalDLUPTNLInformationForHOItem

AdditionalDLUPTNLInformationForHOItem ::= SEQUENCE {
    additionalDL-NGU-UP-TNLInformation              UPTransportLayerInformation,
```

```
    additionalQosFlowSetupResponseList              QosFlowListWithDataForwarding,
    additionalDLForwardingUPTNLInformation          UPTransportLayerInformation                         OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { AdditionalDLUPTNLInformationForHOItem-ExtIEs} }  OPTIONAL,
    ...
}

AdditionalDLUPTNLInformationForHOItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-AdditionalRedundantDL-NGU-UP-TNLInformation CRITICALITY ignore  EXTENSION UPTransportLayerInformation     PRESENCE optional    },
    ...
}

AdditionalQosFlowInformation ::= ENUMERATED {
    more-likely,
    ...
}

AerialUEsubscriptionInformation ::= ENUMERATED {
    allowed,
    not-allowed,
    ...
}

AdditionalULI ::= SEQUENCE {
    nRCGI                           NR-CGI,
    tAI                             TAI,
    iE-Extensions                   ProtocolExtensionContainer { { AdditionalULI-ExtIEs} }  OPTIONAL,
    ...
}

AdditionalULI-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

A2X-PC5-FlowBitRates ::= SEQUENCE {
    a2X-GuaranteedFlowBitRate       BitRate,
    a2X-MaximumFlowBitRate          BitRate,
    iE-Extensions       ProtocolExtensionContainer { {A2X-PC5-FlowBitRates-ExtIEs} }    OPTIONAL,
    ...
}

A2X-PC5-FlowBitRates-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

A2X-PC5-QoS-Flow-List ::= SEQUENCE (SIZE(1..maxnoofPC5QoSFlows)) OF A2X-PC5-QoS-Flow-Item

A2X-PC5-QoS-Flow-Item ::= SEQUENCE {
    a2X-PQI                             INTEGER (0..255, ...),
    a2X-PC5-FlowBitRates                A2X-PC5-FlowBitRates                            OPTIONAL,
    a2X-Range                           ENUMERATED {m50, m80, m180, m200,
                                                    m350, m400, m500, m700,
                                                    m1000, ...}                         OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {A2X-PC5-QoS-Flow-Item-ExtIEs} }   OPTIONAL,
    ...
```

```
}

A2X-PC5-QoS-Flow-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

A2X-PC5-QoS-Parameters ::= SEQUENCE {
    a2X-PC5-QoS-Flow-List               A2X-PC5-QoS-Flow-List,
    a2X-PC5-LinkAggregateBitRates       BitRate                                         OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {A2X-PC5-QoS-Parameters-ExtIEs} }  OPTIONAL,
    ...
}

A2X-PC5-QoS-Parameters-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

AdditionalCancelledlocationReportingReferenceIDList ::= SEQUENCE (SIZE(1.. maxnoofAoIMinusOne)) OF
AdditionalCancelledlocationReportingReferenceIDItem

AdditionalCancelledlocationReportingReferenceIDItem ::= SEQUENCE {
    locationReportingReferenceIDToBeCancelled       LocationReportingReferenceID,
    iE-Extensions       ProtocolExtensionContainer { { AdditionalCancelledlocationReportingReferenceIDItem-ExtIEs} }  OPTIONAL,
    ...
}

AdditionalCancelledlocationReportingReferenceIDItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

AIoTAreaID ::= SEQUENCE {
    pLMNidentity        PLMNIdentity,
    nID                 NID                         OPTIONAL,
    aIoTAreaCode        OCTET STRING (SIZE (3)),
    iE-Extensions       ProtocolExtensionContainer { { AIoTAreaID-ExtIEs} } OPTIONAL,
    ...
}

AIoTAreaID-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

AIoT-CorrelationIdentifier ::= INTEGER (0..65535, ...)

AIoT-FollowonCommandIndication ::= ENUMERATED {true, ...}

RAN-AIOT-Device-NGAP-ID ::= INTEGER (0..4294967295)

AIoT-CommandAssistanceInformation ::= SEQUENCE {
    estimateofExpectedD2RMsgSize        INTEGER (1..256, ...),
    iE-Extensions       ProtocolExtensionContainer { { AIoT-CommandAssistanceInformation-ExtIEs} } OPTIONAL,
    ...
}
```

```
AIoT-CommandAssistanceInformation-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

AIoT-DeviceIdentificationRequested ::= CHOICE {
    singleDevice                    BIT STRING (SIZE(1..1024, ...)),
    groupDevices                    BIT STRING (SIZE(1..1024, ...)),
    allDevices                      NULL,
    choice-Extensions       ProtocolIE-SingleContainer { { AIoT-DeviceIdentificationRequested-ExtIEs} }
}

AIoT-DeviceIdentificationRequested-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

AIoT-DeviceReportList ::= SEQUENCE (SIZE(1..maxnoofDevices)) OF AIoT-DeviceReportItem

AIoT-DeviceReportItem ::= SEQUENCE {
    aIoT-NASPDU                 AIoT-NASPDU,
    rAN-AIOT-Device-NGAP-ID     RAN-AIOT-Device-NGAP-ID                                 OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { AIoT-DeviceReportItem-ExtIEs} }  OPTIONAL,
    ...
}

AIoT-DeviceReportItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

AIOTFIdentifier ::= OCTET STRING (SIZE(16..36, ...))

AIOTFName ::= SEQUENCE {
    aIOTFNameVisibleString      AIOTFNameVisibleString              OPTIONAL,
    aIOTFNameUTF8String         AIOTFNameUTF8String                 OPTIONAL,
    iE-Extensions               ProtocolExtensionContainer { { AIOTFName-ExtIEs } } OPTIONAL,
    ...
}

AIOTFName-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

AIOTFNameVisibleString ::= VisibleString (SIZE(1..150, ...))

AIOTFNameUTF8String ::= UTF8String (SIZE(1..150, ...))

AIoT-InventoryAssistanceInformation ::= SEQUENCE {
    expectedD2RMsgSize                          INTEGER (1..256, ...),
    approximateNoofTargetDevices                INTEGER (1..65535, ...)             OPTIONAL,
    timeInterval                                INTEGER (1..256, ...)               OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { AIoT-InventoryAssistanceInformation-ExtIEs} } OPTIONAL,
    ...
}

AIoT-InventoryAssistanceInformation-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
```

```
    ...
}

AIoT-NASPDU  ::= OCTET STRING

AIoT-SecurityInfo ::= CHOICE {
    a-IoT-RAND-n            BIT STRING (SIZE(128, ...)),
    choice-Extensions       ProtocolIE-SingleContainer { {AIoT-SecurityInfo-ExtIEs} }
}

AIoT-SecurityInfo-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}


AIoT-ReaderReportList ::= SEQUENCE (SIZE(1..maxnoofReaders)) OF AIoT-ReaderReportItem

AIoT-ReaderReportItem ::= SEQUENCE {
    readerIndex                 AIoT-ReaderIndex,
    deviceReportList            AIoT-DeviceReportList,
    iE-Extensions       ProtocolExtensionContainer { { AIoT-ReaderReportItem-ExtIEs} } OPTIONAL,
    ...
}

AIoT-ReaderReportItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

AIoT-ReaderIndex ::= INTEGER (1..65535, ...)

AIoT-RequestedReaderList ::= SEQUENCE (SIZE(1..maxnoofReaders)) OF AIoT-RequestedReaderItem

AIoT-RequestedReaderItem ::= SEQUENCE {
    globalgNB-ID                GlobalGNB-ID,
    readerIndex                 AIoT-ReaderIndex,
    iE-Extensions       ProtocolExtensionContainer { { AIoT-RequestedReaderItem-ExtIEs} } OPTIONAL,
    ...
}

AIoT-RequestedReaderItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

AIoT-RequestedAIoTAreaList ::= SEQUENCE (SIZE(1..maxnoofAIoTAreas)) OF AIoTAreaID

AIoT-RequestedServiceAreaInformation ::= SEQUENCE {
    requestedReaderList             AIoT-RequestedReaderList                    OPTIONAL,
    requestedAIoTAreaList           AIoT-RequestedAIoTAreaList                  OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { AIoT-RequestedServiceAreaInformation-ExtIEs} } OPTIONAL,
    ...
}

AIoT-RequestedServiceAreaInformation-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
```

```
}

AIOTSessionReleaseCommandTransfer ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {AIOTSessionReleaseCommandTransferIEs} },
    ...
}

AIOTSessionReleaseCommandTransferIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AIoT-CorrelationIdentifier      CRITICALITY reject  TYPE AIoT-CorrelationIdentifier                          PRESENCE mandatory   }|
    { ID id-Cause                           CRITICALITY ignore  TYPE Cause                                             PRESENCE mandatory   },
    ...
}

AIOTSessionReleaseCompleteTransfer ::= SEQUENCE {
    correlationIdentifier       AIoT-CorrelationIdentifier,
    criticalityDiagnostics      CriticalityDiagnostics                                          OPTIONAL,
    iE-Extensions               ProtocolExtensionContainer { {AIOTSessionReleaseCompleteTransfer-ExtIEs} } OPTIONAL,
    ...
}

AIOTSessionReleaseCompleteTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

AIOTSessionReleaseRequestTransfer ::= SEQUENCE {
    correlationIdentifier       AIoT-CorrelationIdentifier,
    cause                       Cause,
    iE-Extensions               ProtocolExtensionContainer { {AIOTSessionReleaseRequestTransfer-ExtIEs} }  OPTIONAL,
    ...
}

AIOTSessionReleaseRequestTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

AIoT-Support ::= ENUMERATED {aIoT-only, aIoT-and-NRUu, ...}

AllocationAndRetentionPriority ::= SEQUENCE {
    priorityLevelARP                PriorityLevelARP,
    pre-emptionCapability           Pre-emptionCapability,
    pre-emptionVulnerability        Pre-emptionVulnerability,
    iE-Extensions       ProtocolExtensionContainer { {AllocationAndRetentionPriority-ExtIEs} } OPTIONAL,
    ...
}

AllocationAndRetentionPriority-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

Allowed-CAG-List-per-PLMN ::= SEQUENCE (SIZE(1..maxnoofAllowedCAGsperPLMN)) OF CAG-ID

AllowedNSSAI ::= SEQUENCE (SIZE(1..maxnoofAllowedS-NSSAIs)) OF AllowedNSSAI-Item

AllowedNSSAI-Item ::= SEQUENCE {
```

```
    s-NSSAI             S-NSSAI,
    iE-Extensions       ProtocolExtensionContainer { {AllowedNSSAI-Item-ExtIEs} } OPTIONAL,
    ...
}

AllowedNSSAI-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

Allowed-PNI-NPN-List ::= SEQUENCE (SIZE(1..maxnoofEPLMNsPlusOne)) OF Allowed-PNI-NPN-Item

Allowed-PNI-NPN-Item ::= SEQUENCE {
    pLMNIdentity                PLMNIdentity,
    pNI-NPN-restricted          ENUMERATED {restricted, not-restricted, ...},
    allowed-CAG-List-per-PLMN   Allowed-CAG-List-per-PLMN,
    iE-Extensions           ProtocolExtensionContainer { {Allowed-PNI-NPN-Item-ExtIEs} } OPTIONAL,
    ...
}

Allowed-PNI-NPN-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

AllowedTACs ::= SEQUENCE (SIZE(1..maxnoofAllowedAreas)) OF TAC

AlternativeQoSParaSetIndex ::= INTEGER (1..8, ...)

AlternativeQoSParaSetNotifyIndex ::= INTEGER (0..8, ...)

AlternativeQoSParaSetList ::= SEQUENCE (SIZE(1..maxnoofQosParaSets)) OF AlternativeQoSParaSetItem

AlternativeQoSParaSetItem ::= SEQUENCE {
    alternativeQoSParaSetIndex          AlternativeQoSParaSetIndex,
    guaranteedFlowBitRateDL             BitRate                                             OPTIONAL,
    guaranteedFlowBitRateUL             BitRate                                             OPTIONAL,
    packetDelayBudget                   PacketDelayBudget                                   OPTIONAL,
    packetErrorRate                     PacketErrorRate                                     OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {AlternativeQoSParaSetItem-ExtIEs} }   OPTIONAL,
    ...
}

AlternativeQoSParaSetItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-MaximumDataBurstVolume  CRITICALITY ignore  EXTENSION MaximumDataBurstVolume        PRESENCE optional     }|
    { ID id-PduSetDelayBudgetDownlink   CRITICALITY ignore  EXTENSION ExtendedPacketDelayBudget   PRESENCE optional    }|
    { ID id-PduSetDelayBudgetUplink     CRITICALITY ignore  EXTENSION ExtendedPacketDelayBudget   PRESENCE optional    }|
    { ID id-PduSetErrorRateDownlink     CRITICALITY ignore  EXTENSION PacketErrorRate             PRESENCE optional    }|
    { ID id-PduSetErrorRateUplink       CRITICALITY ignore  EXTENSION PacketErrorRate             PRESENCE optional    },
    ...
}

AssistanceInformationQoE-Meas ::= INTEGER (1..16, ...)

AMFName ::= PrintableString (SIZE(1..150, ...))
```

```
AMFNameVisibleString ::= VisibleString (SIZE(1..150, ...))

AMFNameUTF8String ::= UTF8String (SIZE(1..150, ...))

AMFPagingTarget ::= CHOICE {
    globalRANNodeID         GlobalRANNodeID,
    tAI                     TAI,
    choice-Extensions       ProtocolIE-SingleContainer { {AMFPagingTarget-ExtIEs} }
}

AMFPagingTarget-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

AMFPointer ::= BIT STRING (SIZE(6))

AMFRegionID ::= BIT STRING (SIZE(8))

AMFSetID ::= BIT STRING (SIZE(10))

AMF-TNLAssociationSetupList ::= SEQUENCE (SIZE(1..maxnoofTNLAssociations)) OF AMF-TNLAssociationSetupItem

AMF-TNLAssociationSetupItem ::= SEQUENCE {
    aMF-TNLAssociationAddress       CPTransportLayerInformation,
    iE-Extensions       ProtocolExtensionContainer { {AMF-TNLAssociationSetupItem-ExtIEs} } OPTIONAL,
    ...
}

AMF-TNLAssociationSetupItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

AMF-TNLAssociationToAddList ::= SEQUENCE (SIZE(1..maxnoofTNLAssociations)) OF AMF-TNLAssociationToAddItem

AMF-TNLAssociationToAddItem ::= SEQUENCE {
    aMF-TNLAssociationAddress       CPTransportLayerInformation,
    tNLAssociationUsage             TNLAssociationUsage                                 OPTIONAL,
    tNLAddressWeightFactor          TNLAddressWeightFactor,
    iE-Extensions       ProtocolExtensionContainer { {AMF-TNLAssociationToAddItem-ExtIEs} } OPTIONAL,
    ...
}

AMF-TNLAssociationToAddItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

AMF-TNLAssociationToRemoveList ::= SEQUENCE (SIZE(1..maxnoofTNLAssociations)) OF AMF-TNLAssociationToRemoveItem

AMF-TNLAssociationToRemoveItem ::= SEQUENCE {
    aMF-TNLAssociationAddress       CPTransportLayerInformation,
    iE-Extensions       ProtocolExtensionContainer { {AMF-TNLAssociationToRemoveItem-ExtIEs} }  OPTIONAL,
    ...
}
```

```
AMF-TNLAssociationToRemoveItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    {ID id-TNLAssociationTransportLayerAddressNGRAN CRITICALITY reject  EXTENSION CPTransportLayerInformation PRESENCE optional},
    ...
}

AMF-TNLAssociationToUpdateList ::= SEQUENCE (SIZE(1..maxnoofTNLAssociations)) OF AMF-TNLAssociationToUpdateItem

AMF-TNLAssociationToUpdateItem ::= SEQUENCE {
    aMF-TNLAssociationAddress       CPTransportLayerInformation,
    tNLAssociationUsage             TNLAssociationUsage                                     OPTIONAL,
    tNLAddressWeightFactor          TNLAddressWeightFactor                                  OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {AMF-TNLAssociationToUpdateItem-ExtIEs} }  OPTIONAL,
    ...
}

AMF-TNLAssociationToUpdateItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

AMF-UE-NGAP-ID ::= INTEGER (0..1099511627775)

AreaOfInterest ::= SEQUENCE {
    areaOfInterestTAIList           AreaOfInterestTAIList                       OPTIONAL,
    areaOfInterestCellList          AreaOfInterestCellList                      OPTIONAL,
    areaOfInterestRANNodeList       AreaOfInterestRANNodeList                   OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {AreaOfInterest-ExtIEs} }  OPTIONAL,
    ...
}

AreaOfInterest-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

AreaOfInterestCellList ::= SEQUENCE (SIZE(1..maxnoofCellinAoI)) OF AreaOfInterestCellItem

AreaOfInterestCellItem ::= SEQUENCE {
    nGRAN-CGI           NGRAN-CGI,
    iE-Extensions       ProtocolExtensionContainer { {AreaOfInterestCellItem-ExtIEs} }  OPTIONAL,
    ...
}

AreaOfInterestCellItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

AreaOfInterestList ::= SEQUENCE (SIZE(1..maxnoofAoI)) OF AreaOfInterestItem

AreaOfInterestItem ::= SEQUENCE {
    areaOfInterest                      AreaOfInterest,
    locationReportingReferenceID        LocationReportingReferenceID,
    iE-Extensions       ProtocolExtensionContainer { {AreaOfInterestItem-ExtIEs} }  OPTIONAL,
    ...
}
```

```
AreaOfInterestItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

AreaOfInterestRANNodeList ::= SEQUENCE (SIZE(1..maxnoofRANNodeinAoI)) OF AreaOfInterestRANNodeItem

AreaOfInterestRANNodeItem ::= SEQUENCE {
    globalRANNodeID     GlobalRANNodeID,
    iE-Extensions       ProtocolExtensionContainer { {AreaOfInterestRANNodeItem-ExtIEs} }   OPTIONAL,
    ...
}

AreaOfInterestRANNodeItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

AreaOfInterestTAIList ::= SEQUENCE (SIZE(1..maxnoofTAIinAoI)) OF AreaOfInterestTAIItem

AreaOfInterestTAIItem ::= SEQUENCE {
    tAI                 TAI,
    iE-Extensions       ProtocolExtensionContainer { {AreaOfInterestTAIItem-ExtIEs} }   OPTIONAL,
    ...
}

AreaOfInterestTAIItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

AssistanceDataForPaging ::= SEQUENCE {
    assistanceDataForRecommendedCells       AssistanceDataForRecommendedCells           OPTIONAL,
    pagingAttemptInformation                PagingAttemptInformation                    OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {AssistanceDataForPaging-ExtIEs} } OPTIONAL,
    ...
}

AssistanceDataForPaging-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-NPN-PagingAssistanceInformation     CRITICALITY ignore  EXTENSION NPN-PagingAssistanceInformation      PRESENCE optional }|
    { ID id-PagingAssisDataforCEcapabUE         CRITICALITY ignore  EXTENSION PagingAssisDataforCEcapabUE          PRESENCE optional },
    ...
}

AssistanceDataForRecommendedCells ::= SEQUENCE {
    recommendedCellsForPaging       RecommendedCellsForPaging,
    iE-Extensions       ProtocolExtensionContainer { {AssistanceDataForRecommendedCells-ExtIEs} } OPTIONAL,
    ...
}

AssistanceDataForRecommendedCells-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

AssociatedMBSQosFlowSetupRequestList ::= SEQUENCE (SIZE(1..maxnoofMBSQoSFlows)) OF AssociatedMBSQosFlowSetupRequestItem

AssociatedMBSQosFlowSetupRequestItem ::= SEQUENCE {
```

```
    mBS-QosFlowIdentifier               QosFlowIdentifier,
    associatedUnicastQosFlowIdentifier  QosFlowIdentifier,
    iE-Extensions                       ProtocolExtensionContainer { { AssociatedMBSQosFlowSetupRequestItem-ExtIEs} } OPTIONAL,
    ...
}

AssociatedMBSQosFlowSetupRequestItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

AssociatedMBSQosFlowSetuporModifyRequestList ::= SEQUENCE (SIZE(1..maxnoofMBSQoSFlows)) OF AssociatedMBSQosFlowSetuporModifyRequestItem

AssociatedMBSQosFlowSetuporModifyRequestItem ::= SEQUENCE {
    mBS-QosFlowIdentifier               QosFlowIdentifier,
    associatedUnicastQosFlowIdentifier  QosFlowIdentifier,
    iE-Extensions                       ProtocolExtensionContainer { { AssociatedMBSQosFlowSetuporModifyRequestItem-ExtIEs} }  OPTIONAL,
    ...
}

AssociatedMBSQosFlowSetuporModifyRequestItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

AssociatedQosFlowList ::= SEQUENCE (SIZE(1..maxnoofQosFlows)) OF AssociatedQosFlowItem

AssociatedQosFlowItem ::= SEQUENCE {
    qosFlowIdentifier               QosFlowIdentifier,
    qosFlowMappingIndication        ENUMERATED {ul, dl, ...}                            OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {AssociatedQosFlowItem-ExtIEs} }   OPTIONAL,
    ...
}

AssociatedQosFlowItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-CurrentQoSParaSetIndex  CRITICALITY ignore  EXTENSION AlternativeQoSParaSetIndex    PRESENCE optional  },
    ...
}

AssociatedSessionID ::= OCTET STRING

AUN3DeviceAccessInfo ::= SEQUENCE {
    aUN3DeviceAccess                        ENUMERATED {true, ...},
    existingNGConnectionwithSameLocation    ENUMERATED {true, false, ...},
    iE-Extensions       ProtocolExtensionContainer { { AUN3DeviceAccessInfo-ExtIEs} }   OPTIONAL,
    ...
}

AUN3DeviceAccessInfo-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}


AuthenticatedIndication ::= ENUMERATED {true, ...}

AveragingWindow ::= INTEGER (0..4095, ...)
```

```
AreaScopeOfMDT-NR ::= CHOICE {
    cellBased                   CellBasedMDT-NR,
    tABased                     TABasedMDT,
    pLMNWide                    NULL,
    tAIBased                    TAIBasedMDT,
    choice-Extensions       ProtocolIE-SingleContainer { {AreaScopeOfMDT-NR-ExtIEs} }
}

AreaScopeOfMDT-NR-ExtIEs NGAP-PROTOCOL-IES ::= {
    { ID id-PNI-NPNBasedMDT     CRITICALITY ignore  TYPE PNI-NPNBasedMDT        PRESENCE mandatory }|
    { ID id-SNPN-CellBasedMDT   CRITICALITY ignore  TYPE SNPN-CellBasedMDT      PRESENCE mandatory }|
    { ID id-SNPN-TAIBasedMDT    CRITICALITY ignore  TYPE SNPN-TAIBasedMDT       PRESENCE mandatory }|
    { ID id-SNPN-BasedMDT       CRITICALITY ignore  TYPE SNPN-BasedMDT          PRESENCE mandatory }|
    { ID id-GeographyBasedMDT   CRITICALITY ignore  TYPE GeographyBasedMDT      PRESENCE optional },
    ...
}

AreaScopeOfMDT-EUTRA ::= CHOICE {
    cellBased                   CellBasedMDT-EUTRA,
    tABased                     TABasedMDT,
    pLMNWide                    NULL,
    tAIBased                    TAIBasedMDT,
    choice-Extensions       ProtocolIE-SingleContainer { {AreaScopeOfMDT-EUTRA-ExtIEs} }
}

AreaScopeOfMDT-EUTRA-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

AreaScopeOfNeighCellsList ::= SEQUENCE (SIZE(1..maxnoofFreqforMDT)) OF AreaScopeOfNeighCellsItem
AreaScopeOfNeighCellsItem ::= SEQUENCE {
    nrFrequencyInfo             NRFrequencyInfo,
    pciListForMDT               PCIListForMDT                                           OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { AreaScopeOfNeighCellsItem-ExtIEs} }  OPTIONAL,
    ...
}

AreaScopeOfNeighCellsItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

AreaScopeOfQMC ::= CHOICE {
    cellBased               CellBasedQMC,
    tABased                 TABasedQMC,
    tAIBased                    TAIBasedQMC,
    pLMNAreaBased           PLMNAreaBasedQMC,
    choice-Extensions       ProtocolIE-SingleContainer { { AreaScopeOfQMC-ExtIEs} }
}

AreaScopeOfQMC-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}
```

```
AvailableBitrateReportThresholdList ::= SEQUENCE (SIZE(1..maxnoofThresholds)) OF AvailableBitrateReportThresholdItem

AvailableBitrateReportThresholdItem ::= SEQUENCE {
    reportingThreshold              ReportingThreshold,
    iE-Extensions                   ProtocolExtensionContainer { { AvailableBitrateReportThresholdItem-ExtIEs} } OPTIONAL,
    ...
}

AvailableBitrateReportThresholdItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

AvailableRANVisibleQoEMetrics ::= SEQUENCE {
    applicationLayerBufferLevelList     ENUMERATED {true, ...}      OPTIONAL,
    playoutDelayForMediaStartup         ENUMERATED {true, ...}      OPTIONAL,
    iE-Extensions               ProtocolExtensionContainer { { AvailableRANVisibleQoEMetrics-ExtIEs} }  OPTIONAL,
    ...
}

AvailableRANVisibleQoEMetrics-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}


-- B

BeamMeasurementsReportConfiguration ::= SEQUENCE {
    beamMeasurementsReportQuantity          BeamMeasurementsReportQuantity  OPTIONAL,
    maxNrofRS-IndexesToReport               MaxNrofRS-IndexesToReport       OPTIONAL,
    iE-Extensions                           ProtocolExtensionContainer { { BeamMeasurementsReportConfiguration-ExtIEs} } OPTIONAL,
    ...
}

BeamMeasurementsReportConfiguration-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

BeamMeasurementsReportQuantity ::= SEQUENCE {
    rSRP                        ENUMERATED {true, ..., false},
    rSRQ                        ENUMERATED {true, ..., false},
    sINR                        ENUMERATED {true, ..., false},
    iE-Extensions           ProtocolExtensionContainer { { BeamMeasurementsReportQuantity-ExtIEs} } OPTIONAL,
    ...
}

BeamMeasurementsReportQuantity-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

BitRate ::= INTEGER (0..4000000000000, ...)

BroadcastCancelledAreaList ::= CHOICE {
    cellIDCancelledEUTRA                CellIDCancelledEUTRA,
    tAICancelledEUTRA                   TAICancelledEUTRA,
```

```
    emergencyAreaIDCancelledEUTRA       EmergencyAreaIDCancelledEUTRA,
    cellIDCancelledNR                   CellIDCancelledNR,
    tAICancelledNR                      TAICancelledNR,
    emergencyAreaIDCancelledNR          EmergencyAreaIDCancelledNR,
    choice-Extensions       ProtocolIE-SingleContainer { {BroadcastCancelledAreaList-ExtIEs} }
}

BroadcastCancelledAreaList-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

BroadcastCompletedAreaList ::= CHOICE {
    cellIDBroadcastEUTRA                CellIDBroadcastEUTRA,
    tAIBroadcastEUTRA                   TAIBroadcastEUTRA,
    emergencyAreaIDBroadcastEUTRA       EmergencyAreaIDBroadcastEUTRA,
    cellIDBroadcastNR                   CellIDBroadcastNR,
    tAIBroadcastNR                      TAIBroadcastNR,
    emergencyAreaIDBroadcastNR          EmergencyAreaIDBroadcastNR,
    choice-Extensions       ProtocolIE-SingleContainer { {BroadcastCompletedAreaList-ExtIEs} }
}

BroadcastCompletedAreaList-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

BroadcastPLMNList ::= SEQUENCE (SIZE(1..maxnoofBPLMNs)) OF BroadcastPLMNItem

BroadcastPLMNItem ::= SEQUENCE {
    pLMNIdentity            PLMNIdentity,
    tAISliceSupportList     SliceSupportList,
    iE-Extensions       ProtocolExtensionContainer { {BroadcastPLMNItem-ExtIEs} } OPTIONAL,
    ...
}

BroadcastPLMNItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    {ID id-NPN-Support                  CRITICALITY reject  EXTENSION NPN-Support               PRESENCE optional}|
    {ID id-ExtendedTAISliceSupportList  CRITICALITY reject  EXTENSION ExtendedSliceSupportList  PRESENCE optional}|
    {ID id-TAINSAGSupportList           CRITICALITY ignore  EXTENSION TAINSAGSupportList        PRESENCE optional},
    ...
}

BroadcastTransportFailureTransfer ::= SEQUENCE {
    mBS-SessionID               MBS-SessionID,
    cause                       Cause,
    criticalityDiagnostics      CriticalityDiagnostics                                          OPTIONAL,
    iE-Extensions               ProtocolExtensionContainer { { BroadcastTransportFailureTransfer-ExtIEs} } OPTIONAL,
    ...
}

BroadcastTransportFailureTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

BroadcastTransportRequestTransfer ::= SEQUENCE {
```

```
    mBS-SessionID               MBS-SessionID,
    mBS-SessionTNLInfoNGRAN     MBS-SessionTNLInfoNGRAN,
    iE-Extensions               ProtocolExtensionContainer { {BroadcastTransportRequestTransfer-ExtIEs} }    OPTIONAL,
    ...
}

BroadcastTransportRequestTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

BroadcastTransportResponseTransfer ::= SEQUENCE {
    mBS-SessionID           MBS-SessionID,
    iE-Extensions           ProtocolExtensionContainer { {BroadcastTransportResponseTransfer-ExtIEs} }    OPTIONAL,
    ...
}

BroadcastTransportResponseTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

BluetoothMeasurementConfiguration ::= SEQUENCE {
    bluetoothMeasConfig             BluetoothMeasConfig,
    bluetoothMeasConfigNameList     BluetoothMeasConfigNameList                                     OPTIONAL,
    bt-rssi                         ENUMERATED {true, ...}                                          OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { BluetoothMeasurementConfiguration-ExtIEs } } OPTIONAL,
    ...
}

BluetoothMeasurementConfiguration-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

BluetoothMeasConfigNameList ::= SEQUENCE (SIZE(1..maxnoofBluetoothName)) OF BluetoothMeasConfigNameItem

BluetoothMeasConfigNameItem ::= SEQUENCE {
    bluetoothName       BluetoothName,
    iE-Extensions       ProtocolExtensionContainer { { BluetoothMeasConfigNameItem-ExtIEs } }   OPTIONAL,
    ...
}

BluetoothMeasConfigNameItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

BluetoothMeasConfig::= ENUMERATED {setup,...}

BluetoothName ::= OCTET STRING (SIZE (1..248))

BurstArrivalTime ::= OCTET STRING

BurstArrivalTimeWindow ::= SEQUENCE {
    burstArrivalTimeWindowStart             INTEGER (0..640000, ...),
    burstArrivalTimeWindowEnd               INTEGER (0..640000, ...),
    iE-Extension            ProtocolExtensionContainer { {BurstArrivalTimeWindow-ExtIEs} } OPTIONAL,
```

```
    ...
}

BurstArrivalTimeWindow-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

-- C

CAG-ID ::= BIT STRING (SIZE(32))

CandidateRelayUEInformationList ::= SEQUENCE (SIZE(1.. maxnoofCandidateRelayUEs)) OF CandidateRelayUEInformationItem

CandidateRelayUEInformationItem ::= SEQUENCE {
    candidateRelayUE-Id     CandidateRelayUE-ID,
    iE-Extensions       ProtocolExtensionContainer { { CandidateRelayUEInformationItem-ExtIEs} }  OPTIONAL,
    ...
}

CandidateRelayUEInformationItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

CandidateRelayUE-ID ::= BIT STRING (SIZE(24))

CancelAllWarningMessages ::= ENUMERATED {
    true,
    ...
}

CancelledCellsInEAI-EUTRA ::= SEQUENCE (SIZE(1..maxnoofCellinEAI)) OF CancelledCellsInEAI-EUTRA-Item

CancelledCellsInEAI-EUTRA-Item ::= SEQUENCE {
    eUTRA-CGI               EUTRA-CGI,
    numberOfBroadcasts      NumberOfBroadcasts,
    iE-Extensions       ProtocolExtensionContainer { {CancelledCellsInEAI-EUTRA-Item-ExtIEs} } OPTIONAL,
    ...
}

CancelledCellsInEAI-EUTRA-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

CancelledCellsInEAI-NR ::= SEQUENCE (SIZE(1..maxnoofCellinEAI)) OF CancelledCellsInEAI-NR-Item

CancelledCellsInEAI-NR-Item ::= SEQUENCE {
    nR-CGI                  NR-CGI,
    numberOfBroadcasts      NumberOfBroadcasts,
    iE-Extensions       ProtocolExtensionContainer { {CancelledCellsInEAI-NR-Item-ExtIEs} } OPTIONAL,
    ...
}

CancelledCellsInEAI-NR-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
```

```
}

CancelledCellsInTAI-EUTRA ::= SEQUENCE (SIZE(1..maxnoofCellinTAI)) OF CancelledCellsInTAI-EUTRA-Item

CancelledCellsInTAI-EUTRA-Item ::= SEQUENCE {
    eUTRA-CGI               EUTRA-CGI,
    numberOfBroadcasts      NumberOfBroadcasts,
    iE-Extensions       ProtocolExtensionContainer { {CancelledCellsInTAI-EUTRA-Item-ExtIEs} } OPTIONAL,
    ...
}

CancelledCellsInTAI-EUTRA-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

CancelledCellsInTAI-NR ::= SEQUENCE (SIZE(1..maxnoofCellinTAI)) OF CancelledCellsInTAI-NR-Item

CancelledCellsInTAI-NR-Item ::= SEQUENCE{
    nR-CGI                  NR-CGI,
    numberOfBroadcasts      NumberOfBroadcasts,
    iE-Extensions       ProtocolExtensionContainer { {CancelledCellsInTAI-NR-Item-ExtIEs} } OPTIONAL,
    ...
}

CancelledCellsInTAI-NR-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

CandidateCellList ::= SEQUENCE (SIZE(1.. maxnoofCandidateCells)) OF CandidateCellItem

CandidateCellItem ::= SEQUENCE{
    candidateCell       CandidateCell,
    iE-Extensions       ProtocolExtensionContainer { {CandidateCellItem-ExtIEs} } OPTIONAL,
    ...
}

CandidateCellItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

CandidateCell::= CHOICE {
    candidateCGI            CandidateCellID,
    candidatePCI            CandidatePCI,
    choice-Extensions       ProtocolIE-SingleContainer { { CandidateCell-ExtIEs} }
}

CandidateCell-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}


CandidateCellID::= SEQUENCE {
    candidateCellID         NR-CGI,
    iE-Extensions           ProtocolExtensionContainer { { CandidateCellID-ExtIEs} }            OPTIONAL,
```

```
    ...
}

CandidateCellID-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

CandidatePCI::= SEQUENCE {
    candidatePCI            INTEGER (0..1007, ...),
    candidateNRARFCN        INTEGER (0..maxNRARFCN),
    iE-Extensions           ProtocolExtensionContainer { { CandidatePCI-ExtIEs} }           OPTIONAL,
    ...
}

CandidatePCI-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

Cause ::= CHOICE {
    radioNetwork        CauseRadioNetwork,
    transport           CauseTransport,
    nas                 CauseNas,
    protocol            CauseProtocol,
    misc                CauseMisc,
    choice-Extensions       ProtocolIE-SingleContainer { {Cause-ExtIEs} }
}

Cause-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

CauseMisc ::= ENUMERATED {
    control-processing-overload,
    not-enough-user-plane-processing-resources,
    hardware-failure,
    om-intervention,
    unknown-PLMN-or-SNPN,
    unspecified,
    ...
}

CauseNas ::= ENUMERATED {
    normal-release,
    authentication-failure,
    deregister,
    unspecified,
    ...,
    uE-not-in-PLMN-serving-area,
    mobile-IAB-not-authorized,
    iAB-not-authorized,
    no-aiot-NAS-response
}

CauseProtocol ::= ENUMERATED {
```

```
    transfer-syntax-error,
    abstract-syntax-error-reject,
    abstract-syntax-error-ignore-and-notify,
    message-not-compatible-with-receiver-state,
    semantic-error,
    abstract-syntax-error-falsely-constructed-message,
    unspecified,
    ...
}

CauseRadioNetwork ::= ENUMERATED {
    unspecified,
    txnrelocoverall-expiry,
    successful-handover,
    release-due-to-ngran-generated-reason,
    release-due-to-5gc-generated-reason,
    handover-cancelled,
    partial-handover,
    ho-failure-in-target-5GC-ngran-node-or-target-system,
    ho-target-not-allowed,
    tngrelocoverall-expiry,
    tngrelocprep-expiry,
    cell-not-available,
    unknown-targetID,
    no-radio-resources-available-in-target-cell,
    unknown-local-UE-NGAP-ID,
    inconsistent-remote-UE-NGAP-ID,
    handover-desirable-for-radio-reason,
    time-critical-handover,
    resource-optimisation-handover,
    reduce-load-in-serving-cell,
    user-inactivity,
    radio-connection-with-ue-lost,
    radio-resources-not-available,
    invalid-qos-combination,
    failure-in-radio-interface-procedure,
    interaction-with-other-procedure,
    unknown-PDU-session-ID,
    unkown-qos-flow-ID,
    multiple-PDU-session-ID-instances,
    multiple-qos-flow-ID-instances,
    encryption-and-or-integrity-protection-algorithms-not-supported,
    ng-intra-system-handover-triggered,
    ng-inter-system-handover-triggered,
    xn-handover-triggered,
    not-supported-5QI-value,
    ue-context-transfer,
    ims-voice-eps-fallback-or-rat-fallback-triggered,
    up-integrity-protection-not-possible,
    up-confidentiality-protection-not-possible,
    slice-not-supported,
    ue-in-rrc-inactive-state-not-reachable,
    redirection,
    resources-not-available-for-the-slice,
```

```
    ue-max-integrity-protected-data-rate-reason,
    release-due-to-cn-detected-mobility,
    ...,
    n26-interface-not-available,
    release-due-to-pre-emption,
    multiple-location-reporting-reference-ID-instances,
    rsn-not-available-for-the-up,
    npn-access-denied,
    cag-only-access-denied,
    insufficient-ue-capabilities,
    redcap-ue-not-supported,
    unknown-MBS-Session-ID,
    indicated-MBS-session-area-information-not-served-by-the-gNB,
    inconsistent-slice-info-for-the-session,
    misaligned-association-for-multicast-unicast,
    eredcap-ue-not-supported,
    two-rx-xr-ue-not-supported,
    aerial-ue-flight-information-reporting-initiation-failure,
    unknown-RAN-AIoT-Device-NGAP-ID,
    requested-AIoT-service-area-information-not-served-by-the-gNB,
    unknown-AIoT-session,
    aiot-device-not-reachable,
    multiple-AIoT-session-ID-instances
}

CauseTransport ::= ENUMERATED {
    transport-resource-unavailable,
    unspecified,
    ...
}

Cell-CAGInformation ::= SEQUENCE {
    nGRAN-CGI               NGRAN-CGI,
    cellCAGList         CellCAGList,
    iE-Extensions       ProtocolExtensionContainer { {Cell-CAGInformation-ExtIEs} } OPTIONAL,
    ...
}

Cell-CAGInformation-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}


CellCAGList ::= SEQUENCE (SIZE(1..maxnoofCAGSperCell)) OF CAG-ID

CellIDBroadcastEUTRA ::= SEQUENCE (SIZE(1..maxnoofCellIDforWarning)) OF CellIDBroadcastEUTRA-Item

CellIDBroadcastEUTRA-Item ::= SEQUENCE {
    eUTRA-CGI           EUTRA-CGI,
    iE-Extensions       ProtocolExtensionContainer { {CellIDBroadcastEUTRA-Item-ExtIEs} } OPTIONAL,
    ...
}

CellIDBroadcastEUTRA-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
```

```
    ...
}

CellIDBroadcastNR ::= SEQUENCE (SIZE(1..maxnoofCellIDforWarning)) OF CellIDBroadcastNR-Item

CellIDBroadcastNR-Item ::= SEQUENCE {
    nR-CGI              NR-CGI,
    iE-Extensions       ProtocolExtensionContainer { {CellIDBroadcastNR-Item-ExtIEs} } OPTIONAL,
    ...
}

CellIDBroadcastNR-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

CellIDCancelledEUTRA ::= SEQUENCE (SIZE(1..maxnoofCellIDforWarning)) OF CellIDCancelledEUTRA-Item

CellIDCancelledEUTRA-Item ::= SEQUENCE {
    eUTRA-CGI               EUTRA-CGI,
    numberOfBroadcasts      NumberOfBroadcasts,
    iE-Extensions       ProtocolExtensionContainer { {CellIDCancelledEUTRA-Item-ExtIEs} } OPTIONAL,
    ...
}

CellIDCancelledEUTRA-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

CellIDCancelledNR ::= SEQUENCE (SIZE(1..maxnoofCellIDforWarning)) OF CellIDCancelledNR-Item

CellIDCancelledNR-Item ::= SEQUENCE {
    nR-CGI                  NR-CGI,
    numberOfBroadcasts      NumberOfBroadcasts,
    iE-Extensions       ProtocolExtensionContainer { {CellIDCancelledNR-Item-ExtIEs} } OPTIONAL,
    ...
}

CellIDCancelledNR-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

CellIDListForRestart ::= CHOICE {
    eUTRA-CGIListforRestart     EUTRA-CGIList,
    nR-CGIListforRestart        NR-CGIList,
    choice-Extensions       ProtocolIE-SingleContainer { {CellIDListForRestart-ExtIEs} }
}

CellIDListForRestart-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

CellSize ::= ENUMERATED {verysmall, small, medium, large, ...}
```

```
CellType ::= SEQUENCE {
    cellSize        CellSize,
    iE-Extensions       ProtocolExtensionContainer { {CellType-ExtIEs} }    OPTIONAL,
    ...
}

CellType-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

CEmodeBSupport-Indicator ::= ENUMERATED {supported,...}


CEmodeBrestricted ::= ENUMERATED {
    restricted,
    not-restricted,
    ...
}

ClockAccuracy ::= CHOICE {
    clockAccuracyValue      INTEGER (1..40000000, ...),
    clockAccuracyIndex      INTEGER (32..47, ...),
    choice-Extensions       ProtocolIE-SingleContainer { { ClockAccuracy-ExtIEs} }
}

ClockAccuracy-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

ClockQualityAcceptanceIndication ::= SEQUENCE {
    clockQualityAcceptanceCriteria      ClockQualityAcceptanceCriteria,
    iE-Extensions               ProtocolExtensionContainer { {ClockQualityAcceptanceIndication-ExtIEs} } OPTIONAL,
    ...
}

ClockQualityAcceptanceIndication-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

ClockQualityAcceptanceCriteria ::= SEQUENCE {
    synchronisationState            BIT STRING (SIZE(8, ...))                   OPTIONAL,
    traceabletoUTC                  ENUMERATED {true, ...}                      OPTIONAL,
    traceabletoGNSS                 ENUMERATED {true, ...}                      OPTIONAL,
    clockFrequencyStability         BIT STRING (SIZE(16))                       OPTIONAL,
    clockAccuracy                   INTEGER (1..40000000, ...)                  OPTIONAL,
    parentTImeSource                BIT STRING (SIZE(16, ...))                  OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { ClockQualityAcceptanceCriteria-ExtIEs} } OPTIONAL,
    ...
}

ClockQualityAcceptanceCriteria-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}
```

```
ClockQualityReportingControlInfo ::= SEQUENCE {
    clockQualityDetailLevel     ClockQualityDetailLevel,
    iE-Extensions               ProtocolExtensionContainer { {ClockQualityReportingControlInfo-ExtIEs} } OPTIONAL,
    ...
}

ClockQualityReportingControlInfo-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

ClockQualityDetailLevel ::= CHOICE {
    clockQualityMetrics                     NULL,
    clockQualityAcceptanceIndication        ClockQualityAcceptanceIndication,
    choice-extensions           ProtocolIE-SingleContainer { {ClockQualityDetailLevel-ExtIEs} }
}

ClockQualityDetailLevel-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

CNAssistedRANTuning ::= SEQUENCE {
    expectedUEBehaviour                 ExpectedUEBehaviour                         OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {CNAssistedRANTuning-ExtIEs} } OPTIONAL,
    ...
}

CNAssistedRANTuning-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

CNsubgroupID ::= INTEGER (0..7, ...)

CNTypeRestrictionsForEquivalent ::= SEQUENCE (SIZE(1..maxnoofEPLMNs)) OF CNTypeRestrictionsForEquivalentItem

CNTypeRestrictionsForEquivalentItem ::= SEQUENCE {
    plmnIdentity        PLMNIdentity,
    cn-Type             ENUMERATED {epc-forbidden, fiveGC-forbidden, ...},
    iE-Extensions       ProtocolExtensionContainer { {CNTypeRestrictionsForEquivalentItem-ExtIEs} }    OPTIONAL,
    ...
}

CNTypeRestrictionsForEquivalentItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::={
    ...
}

CNTypeRestrictionsForServing ::= ENUMERATED {
    epc-forbidden,
    ...
}

CommandRequestTransfer ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { { CommandRequestTransferIEs} },
    ...
}
```

```
CommandRequestTransferIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AIoT-CorrelationIdentifier              CRITICALITY reject  TYPE AIoT-CorrelationIdentifier         PRESENCE mandatory   }|
    { ID id-RAN-AIOT-Device-NGAP-ID                 CRITICALITY reject  TYPE RAN-AIOT-Device-NGAP-ID           PRESENCE mandatory   }|
    { ID id-AIoT-NASPDU                             CRITICALITY reject  TYPE AIoT-NASPDU                       PRESENCE mandatory   }|
    { ID id-AIoT-CommandAssistanceInformation       CRITICALITY reject  TYPE AIoT-CommandAssistanceInformation  PRESENCE mandatory      },
    ...
}

CommandResponseTransfer ::= SEQUENCE {
    correlationIdentifier           AIoT-CorrelationIdentifier,
    rAN-AIOT-Device-NGAP-ID         RAN-AIOT-Device-NGAP-ID,
    aIoT-NASPDU                     AIoT-NASPDU,
    criticalityDiagnostics          CriticalityDiagnostics                                          OPTIONAL,
    iE-Extensions                   ProtocolExtensionContainer { { CommandResponseTransfer-ExtIEs} } OPTIONAL,
    ...
}

CommandResponseTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

CommandFailureTransfer ::= SEQUENCE {
    correlationIdentifier           AIoT-CorrelationIdentifier,
    rAN-AIOT-Device-NGAP-ID         RAN-AIOT-Device-NGAP-ID,
    cause                           Cause,
    criticalityDiagnostics          CriticalityDiagnostics                                          OPTIONAL,
    iE-Extensions                   ProtocolExtensionContainer { { CommandFailureTransfer-ExtIEs} } OPTIONAL,
    ...
}

CommandFailureTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

CommonNetworkInstance ::= OCTET STRING

CompletedCellsInEAI-EUTRA ::= SEQUENCE (SIZE(1..maxnoofCellinEAI)) OF CompletedCellsInEAI-EUTRA-Item

CompletedCellsInEAI-EUTRA-Item ::= SEQUENCE {
    eUTRA-CGI           EUTRA-CGI,
    iE-Extensions       ProtocolExtensionContainer { {CompletedCellsInEAI-EUTRA-Item-ExtIEs} } OPTIONAL,
    ...
}

CompletedCellsInEAI-EUTRA-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

CompletedCellsInEAI-NR ::= SEQUENCE (SIZE(1..maxnoofCellinEAI)) OF CompletedCellsInEAI-NR-Item

CompletedCellsInEAI-NR-Item ::= SEQUENCE {
    nR-CGI              NR-CGI,
    iE-Extensions       ProtocolExtensionContainer { {CompletedCellsInEAI-NR-Item-ExtIEs} } OPTIONAL,
```

```
    ...
}

CompletedCellsInEAI-NR-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

CompletedCellsInTAI-EUTRA ::= SEQUENCE (SIZE(1..maxnoofCellinTAI)) OF CompletedCellsInTAI-EUTRA-Item

CompletedCellsInTAI-EUTRA-Item ::= SEQUENCE{
    eUTRA-CGI           EUTRA-CGI,
    iE-Extensions       ProtocolExtensionContainer { {CompletedCellsInTAI-EUTRA-Item-ExtIEs} } OPTIONAL,
    ...
}

CompletedCellsInTAI-EUTRA-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

CompletedCellsInTAI-NR ::= SEQUENCE (SIZE(1..maxnoofCellinTAI)) OF CompletedCellsInTAI-NR-Item

CompletedCellsInTAI-NR-Item ::= SEQUENCE{
    nR-CGI              NR-CGI,
    iE-Extensions       ProtocolExtensionContainer { {CompletedCellsInTAI-NR-Item-ExtIEs} } OPTIONAL,
    ...
}

CompletedCellsInTAI-NR-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

ConcurrentWarningMessageInd ::= ENUMERATED {
    true,
    ...
}

ConfidentialityProtectionIndication ::= ENUMERATED {
    required,
    preferred,
    not-needed,
    ...
}

ConfidentialityProtectionResult ::= ENUMERATED {
    performed,
    not-performed,
    ...
}

ConfiguredTACIndication ::= ENUMERATED {
    true,
    ...
}
```

```
CoreNetworkAssistanceInformationForInactive ::= SEQUENCE {
    uEIdentityIndexValue                UEIdentityIndexValue,
    uESpecificDRX                       PagingDRX                                                                   OPTIONAL,
    periodicRegistrationUpdateTimer     PeriodicRegistrationUpdateTimer,
    mICOModeIndication                  MICOModeIndication                                                          OPTIONAL,
    tAIListForInactive                  TAIListForInactive,
    expectedUEBehaviour                 ExpectedUEBehaviour                                                         OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {CoreNetworkAssistanceInformationForInactive-ExtIEs} }  OPTIONAL,
    ...
}

CoreNetworkAssistanceInformationForInactive-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-EUTRA-PagingeDRXInformation                 CRITICALITY ignore  EXTENSION EUTRA-PagingeDRXInformation             PRESENCE optional }|
    { ID id-ExtendedUEIdentityIndexValue                CRITICALITY ignore  EXTENSION ExtendedUEIdentityIndexValue            PRESENCE optional }|
    { ID id-UERadioCapabilityForPaging                  CRITICALITY ignore  EXTENSION UERadioCapabilityForPaging             PRESENCE optional }|
    { ID id-MicoAllPLMN                                 CRITICALITY ignore  EXTENSION MicoAllPLMN                            PRESENCE optional }|
    { ID id-NR-PagingeDRXInformation                    CRITICALITY ignore  EXTENSION NR-PagingeDRXInformation               PRESENCE optional }|
    { ID id-PagingCauseIndicationForVoiceService        CRITICALITY ignore  EXTENSION PagingCauseIndicationForVoiceService    PRESENCE optional }|
    { ID id-PEIPSassistanceInformation                  CRITICALITY ignore  EXTENSION PEIPSassistanceInformation              PRESENCE optional }|
    { ID id-HashedUEIdentityIndexValue                  CRITICALITY ignore  EXTENSION HashedUEIdentityIndexValue              PRESENCE optional }|
    { ID id-CN-MT-CommunicationHandling                 CRITICALITY ignore  EXTENSION    CN-MT-CommunicationHandling         PRESENCE optional }|
    { ID id-LPWUSPSAssistanceInformation                CRITICALITY ignore  EXTENSION LPWUSPSAssistanceInformation          PRESENCE optional }|
    { ID id-FurtherExtendedUEIdentityIndexValue         CRITICALITY ignore  EXTENSION FurtherExtendedUEIdentityIndexValue    PRESENCE optional }|
    { ID id-LPWUSDisableIndication                      CRITICALITY ignore  EXTENSION LPWUSDisableIndication                 PRESENCE optional },
    ...
}

CN-MT-CommunicationHandling ::= ENUMERATED {supported, ...}

COUNTValueForPDCP-SN12 ::= SEQUENCE {
    pDCP-SN12           INTEGER (0..4095),
    hFN-PDCP-SN12       INTEGER (0..1048575),
    iE-Extensions       ProtocolExtensionContainer { {COUNTValueForPDCP-SN12-ExtIEs} }  OPTIONAL,
    ...
}

COUNTValueForPDCP-SN12-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

COUNTValueForPDCP-SN18 ::= SEQUENCE {
    pDCP-SN18           INTEGER (0..262143),
    hFN-PDCP-SN18       INTEGER (0..16383),
    iE-Extensions       ProtocolExtensionContainer { {COUNTValueForPDCP-SN18-ExtIEs} }  OPTIONAL,
    ...
}

COUNTValueForPDCP-SN18-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

CoverageEnhancementLevel ::= OCTET STRING

CPTransportLayerInformation ::= CHOICE {
```

```
    endpointIPAddress       TransportLayerAddress,
    choice-Extensions       ProtocolIE-SingleContainer { {CPTransportLayerInformation-ExtIEs} }
}

CPTransportLayerInformation-ExtIEs NGAP-PROTOCOL-IES ::= {
    { ID id-EndpointIPAddressAndPort        CRITICALITY reject  TYPE EndpointIPAddressAndPort     PRESENCE mandatory   },
    ...
}

CriticalityDiagnostics ::= SEQUENCE {
    procedureCode                   ProcedureCode                                           OPTIONAL,
    triggeringMessage               TriggeringMessage                                       OPTIONAL,
    procedureCriticality            Criticality                                             OPTIONAL,
    iEsCriticalityDiagnostics       CriticalityDiagnostics-IE-List                          OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer {{CriticalityDiagnostics-ExtIEs}}        OPTIONAL,
    ...
}

CriticalityDiagnostics-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

CriticalityDiagnostics-IE-List ::= SEQUENCE (SIZE(1..maxnoofErrors)) OF CriticalityDiagnostics-IE-Item

CriticalityDiagnostics-IE-Item ::= SEQUENCE {
    iECriticality       Criticality,
    iE-ID               ProtocolIE-ID,
    typeOfError         TypeOfError,
    iE-Extensions       ProtocolExtensionContainer {{CriticalityDiagnostics-IE-Item-ExtIEs}} OPTIONAL,
    ...
}

CriticalityDiagnostics-IE-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

C-RNTI ::= BIT STRING (SIZE(16))

CellBasedMDT-NR::= SEQUENCE {
    cellIdListforMDT    CellIdListforMDT-NR,
    iE-Extensions       ProtocolExtensionContainer { {CellBasedMDT-NR-ExtIEs} } OPTIONAL,
    ...
}

CellBasedMDT-NR-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

CellIdListforMDT-NR ::= SEQUENCE (SIZE(1..maxnoofCellIDforMDT)) OF NR-CGI


CellBasedMDT-EUTRA::= SEQUENCE {
    cellIdListforMDT    CellIdListforMDT-EUTRA,
    iE-Extensions       ProtocolExtensionContainer { {CellBasedMDT-EUTRA-ExtIEs} } OPTIONAL,
```

```
    ...
}

CellBasedMDT-EUTRA-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

CellBasedQMC ::= SEQUENCE {
    cellIdListforQMC    CellIdListforQMC,
    iE-Extensions       ProtocolExtensionContainer { {CellBasedQMC-ExtIEs} } OPTIONAL,
    ...
}

CellBasedQMC-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

CellIdListforQMC ::= SEQUENCE (SIZE(1..maxnoofCellIDforQMC)) OF NGRAN-CGI

CellIdListforMDT-EUTRA ::= SEQUENCE (SIZE(1..maxnoofCellIDforMDT)) OF EUTRA-CGI

CAGListforMDT ::= SEQUENCE (SIZE(1.. maxnoofCAGforMDT)) OF CAGListforMDTItem

CAGListforMDTItem ::= SEQUENCE {
    plmnID              PLMNIdentity,
    cAGID               CAG-ID,
    iE-Extensions       ProtocolExtensionContainer { {CAGListforMDTItem-ExtIEs} }   OPTIONAL,
    ...
}

CAGListforMDTItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::={
    ...
}


-- D

DataCodingScheme ::= BIT STRING (SIZE(8))

DataForwardingAccepted ::= ENUMERATED {
    data-forwarding-accepted,
    ...
}

DataForwardingNotPossible ::= ENUMERATED {
    data-forwarding-not-possible,
    ...
}

DataForwardingResponseDRBList ::= SEQUENCE (SIZE(1..maxnoofDRBs)) OF DataForwardingResponseDRBItem

DataForwardingResponseDRBItem ::= SEQUENCE {
    dRB-ID                              DRB-ID,
    dLForwardingUP-TNLInformation       UPTransportLayerInformation                             OPTIONAL,
```

```
    uLForwardingUP-TNLInformation       UPTransportLayerInformation                             OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer {{DataForwardingResponseDRBItem-ExtIEs}}     OPTIONAL,
    ...
}

DataForwardingResponseDRBItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

DAPSRequestInfo ::= SEQUENCE {
    dAPSIndicator               ENUMERATED {daps-ho-required, ...},
    iE-Extensions               ProtocolExtensionContainer { {DAPSRequestInfo-ExtIEs} } OPTIONAL,
    ...
}

DAPSRequestInfo-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

DAPSResponseInfoList ::= SEQUENCE (SIZE(1.. maxnoofDRBs)) OF DAPSResponseInfoItem

DAPSResponseInfoItem ::= SEQUENCE {
    dRB-ID              DRB-ID,
    dAPSResponseInfo        DAPSResponseInfo,
    iE-Extension            ProtocolExtensionContainer { {DAPSResponseInfoItem-ExtIEs} }        OPTIONAL,
    ...
}

DAPSResponseInfoItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

DAPSResponseInfo ::= SEQUENCE {
  dapsresponseindicator     ENUMERATED {daps-ho-accepted, daps-ho-not-accepted, ...},
  iE-Extensions         ProtocolExtensionContainer { { DAPSResponseInfo-ExtIEs} }   OPTIONAL,
    ...
}

DAPSResponseInfo-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}


DataForwardingResponseERABList ::= SEQUENCE (SIZE(1..maxnoofE-RABs)) OF DataForwardingResponseERABListItem

DataForwardingResponseERABListItem ::= SEQUENCE {
    e-RAB-ID                        E-RAB-ID,
    dLForwardingUP-TNLInformation       UPTransportLayerInformation,
    iE-Extensions       ProtocolExtensionContainer { {DataForwardingResponseERABListItem-ExtIEs} }   OPTIONAL,
    ...
}

DataForwardingResponseERABListItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
```

```
}

DelayCritical ::= ENUMERATED {
    delay-critical,
    non-delay-critical,
    ...
}

DL-CP-SecurityInformation ::= SEQUENCE {
    dl-NAS-MAC              DL-NAS-MAC,
    iE-Extensions           ProtocolExtensionContainer { { DL-CP-SecurityInformation-ExtIEs} }  OPTIONAL,
    ...
}

DL-CP-SecurityInformation-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

DL-Signalling ::= ENUMERATED {true, ...}


DL-NAS-MAC ::= BIT STRING (SIZE (16))

DLForwarding ::= ENUMERATED {
    dl-forwarding-proposed,
    ...
}

DL-NGU-TNLInformationReused ::= ENUMERATED {
    true,
    ...
}

DLPDUSetInformationMarkingSupportIndication     ::= ENUMERATED {true, ...}

DirectForwardingPathAvailability ::= ENUMERATED {
    direct-path-available,
    ...
}

DRB-ID ::= INTEGER (1..32, ...)

DRBsSubjectToStatusTransferList ::= SEQUENCE (SIZE(1..maxnoofDRBs)) OF DRBsSubjectToStatusTransferItem

DRBsSubjectToStatusTransferItem ::= SEQUENCE {
    dRB-ID              DRB-ID,
    dRBStatusUL         DRBStatusUL,
    dRBStatusDL         DRBStatusDL,
    iE-Extension        ProtocolExtensionContainer { {DRBsSubjectToStatusTransferItem-ExtIEs} } OPTIONAL,
    ...
}

DRBsSubjectToStatusTransferItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-OldAssociatedQosFlowList-ULendmarkerexpected    CRITICALITY ignore EXTENSION AssociatedQosFlowList    PRESENCE optional },
```

```
    ...
}

DRBStatusDL ::= CHOICE {
    dRBStatusDL12           DRBStatusDL12,
    dRBStatusDL18           DRBStatusDL18,
    choice-Extensions       ProtocolIE-SingleContainer { {DRBStatusDL-ExtIEs} }
}

DRBStatusDL-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

DRBStatusDL12 ::= SEQUENCE {
    dL-COUNTValue       COUNTValueForPDCP-SN12,
    iE-Extension        ProtocolExtensionContainer { {DRBStatusDL12-ExtIEs} }       OPTIONAL,
    ...
}

DRBStatusDL12-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

DRBStatusDL18 ::= SEQUENCE {
    dL-COUNTValue       COUNTValueForPDCP-SN18,
    iE-Extension        ProtocolExtensionContainer { {DRBStatusDL18-ExtIEs} }       OPTIONAL,
    ...
}

DRBStatusDL18-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

DRBStatusUL ::= CHOICE {
    dRBStatusUL12           DRBStatusUL12,
    dRBStatusUL18           DRBStatusUL18,
    choice-Extensions       ProtocolIE-SingleContainer { {DRBStatusUL-ExtIEs} }
}

DRBStatusUL-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

DRBStatusUL12 ::= SEQUENCE {
    uL-COUNTValue                   COUNTValueForPDCP-SN12,
    receiveStatusOfUL-PDCP-SDUs     BIT STRING (SIZE(1..2048))                      OPTIONAL,
    iE-Extension        ProtocolExtensionContainer { {DRBStatusUL12-ExtIEs} }       OPTIONAL,
    ...
}

DRBStatusUL12-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}
```

```
DRBStatusUL18 ::= SEQUENCE {
    uL-COUNTValue                   COUNTValueForPDCP-SN18,
    receiveStatusOfUL-PDCP-SDUs     BIT STRING (SIZE(1..131072))                    OPTIONAL,
    iE-Extension        ProtocolExtensionContainer { {DRBStatusUL18-ExtIEs} }       OPTIONAL,
    ...
}

DRBStatusUL18-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

DRBsToQosFlowsMappingList ::= SEQUENCE (SIZE(1..maxnoofDRBs)) OF DRBsToQosFlowsMappingItem

DRBsToQosFlowsMappingItem ::= SEQUENCE {
    dRB-ID                              DRB-ID,
    associatedQosFlowList               AssociatedQosFlowList,
    iE-Extensions       ProtocolExtensionContainer { {DRBsToQosFlowsMappingItem-ExtIEs} }       OPTIONAL,
    ...
}

DRBsToQosFlowsMappingItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-DAPSRequestInfo CRITICALITY ignore  EXTENSION DAPSRequestInfo   PRESENCE optional  },
    ...
}

Dynamic5QIDescriptor ::= SEQUENCE {
    priorityLevelQos            PriorityLevelQos,
    packetDelayBudget           PacketDelayBudget,
    packetErrorRate             PacketErrorRate,
    fiveQI                      FiveQI                                              OPTIONAL,
    delayCritical               DelayCritical                                       OPTIONAL,
-- The above IE shall be present in case of GBR QoS flow
    averagingWindow             AveragingWindow                                     OPTIONAL,
-- The above IE shall be present in case of GBR QoS flow
    maximumDataBurstVolume      MaximumDataBurstVolume                              OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {Dynamic5QIDescriptor-ExtIEs} }    OPTIONAL,
    ...
}

Dynamic5QIDescriptor-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-ExtendedPacketDelayBudget   CRITICALITY ignore  EXTENSION ExtendedPacketDelayBudget   PRESENCE optional    }|
    { ID id-CNPacketDelayBudgetDL       CRITICALITY ignore  EXTENSION ExtendedPacketDelayBudget   PRESENCE optional    }|
    { ID id-CNPacketDelayBudgetUL       CRITICALITY ignore  EXTENSION ExtendedPacketDelayBudget   PRESENCE optional    },
    ...
}

-- E

EarlyMeasurement ::= ENUMERATED {true, ...}

EarlyStatusTransfer-TransparentContainer ::= SEQUENCE {
    procedureStage          ProcedureStageChoice,
    iE-Extensions           ProtocolExtensionContainer { {EarlyStatusTransfer-TransparentContainer-ExtIEs} }  OPTIONAL,
    ...
```

```
}

EarlyStatusTransfer-TransparentContainer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

ProcedureStageChoice ::= CHOICE {
    first-dl-count          FirstDLCount,
    choice-Extensions       ProtocolIE-SingleContainer { {ProcedureStageChoice-ExtIEs} }
}

ProcedureStageChoice-ExtIEs NGAP-PROTOCOL-IES ::= {
    { ID id-DLDiscarding                        CRITICALITY ignore  TYPE DLDiscarding                           PRESENCE mandatory   },
    ...
}

DLDiscarding ::= SEQUENCE {
    dRBsSubjectToDLDiscarding                   DRBsSubjectToDLDiscarding-List,
    iE-Extension                                ProtocolExtensionContainer { {DLDiscarding-ExtIEs} } OPTIONAL,
    ...
}

DLDiscarding-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

DRBsSubjectToDLDiscarding-List ::= SEQUENCE (SIZE (1..maxnoofDRBs)) OF DRBsSubjectToDLDiscarding-Item

DRBsSubjectToDLDiscarding-Item ::= SEQUENCE {
    drbID               DRB-ID,
    dlCount             DLCountChoice,
    iE-Extension        ProtocolExtensionContainer { { DRBsSubjectToDLDiscarding-Item-ExtIEs} } OPTIONAL,
    ...
}

DRBsSubjectToDLDiscarding-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

DLCountChoice ::= CHOICE {
    count12bits             COUNTValueForPDCP-SN12,
    count18bits             COUNTValueForPDCP-SN18,
    choice-extension        ProtocolIE-SingleContainer { {DLCountChoice-ExtIEs} }
}

DLCountChoice-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

FirstDLCount ::= SEQUENCE {
    dRBsSubjectToEarlyStatusTransfer        DRBsSubjectToEarlyStatusTransfer-List,
    iE-Extension        ProtocolExtensionContainer { {FirstDLCount-ExtIEs} }        OPTIONAL,
    ...
}
```

```
FirstDLCount-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

DRBsSubjectToEarlyStatusTransfer-List ::= SEQUENCE (SIZE (1.. maxnoofDRBs)) OF DRBsSubjectToEarlyStatusTransfer-Item

DRBsSubjectToEarlyStatusTransfer-Item ::= SEQUENCE {
    dRB-ID              DRB-ID,
    firstDLCOUNT        DRBStatusDL,
    iE-Extension        ProtocolExtensionContainer { { DRBsSubjectToEarlyStatusTransfer-Item-ExtIEs} }  OPTIONAL,
    ...
}

DRBsSubjectToEarlyStatusTransfer-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

ECNMarkingorCongestionInformationReportingRequest ::= CHOICE {
    eCNMarkingAtRANRequest              ECNMarkingAtRANRequest,
    eCNMarkingAtUPFRequest              ECNMarkingAtUPFRequest,
    congestionInformationRequest        CongestionInformationRequest,
    choice-Extensions               ProtocolIE-SingleContainer { {ECNMarkingorCongestionInformationReportingRequest-ExtIEs} }
}

ECNMarkingorCongestionInformationReportingRequest-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

ECNMarkingAtRANRequest ::= ENUMERATED {ul, dl, both, stop, ...}

ECNMarkingAtUPFRequest ::= ENUMERATED {ul, dl, both, stop, ...}

CongestionInformationRequest ::= ENUMERATED {ul, dl, both, stop, ...}

ECNMarkingorCongestionInformationReportingStatus ::= SEQUENCE (SIZE (1..maxnoofQosFlows)) OF ECNMarkingorCongestionInformationReportingStatus-Item

ECNMarkingorCongestionInformationReportingStatus-Item ::= SEQUENCE {
    qosFlowIdentifier               QosFlowIdentifier,
    activationStatus                ActivationStatus,
    iE-Extension                    ProtocolExtensionContainer { { ECNMarkingorCongestionInformationReportingStatus-Item-ExtIEs} }OPTIONAL,
    ...
}

ECNMarkingorCongestionInformationReportingStatus-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

ActivationStatus    ::= ENUMERATED {
    active,
    not-active,
    ...
}
```

```
EDT-Session ::= ENUMERATED {
    true,
    ...
}

EmergencyAreaID ::= OCTET STRING (SIZE(3))

EmergencyAreaIDBroadcastEUTRA ::= SEQUENCE (SIZE(1..maxnoofEmergencyAreaID)) OF EmergencyAreaIDBroadcastEUTRA-Item

EmergencyAreaIDBroadcastEUTRA-Item ::= SEQUENCE {
    emergencyAreaID                 EmergencyAreaID,
    completedCellsInEAI-EUTRA       CompletedCellsInEAI-EUTRA,
    iE-Extensions       ProtocolExtensionContainer { {EmergencyAreaIDBroadcastEUTRA-Item-ExtIEs} } OPTIONAL,
    ...
}

EmergencyAreaIDBroadcastEUTRA-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

EmergencyAreaIDBroadcastNR ::= SEQUENCE (SIZE(1..maxnoofEmergencyAreaID)) OF EmergencyAreaIDBroadcastNR-Item

EmergencyAreaIDBroadcastNR-Item ::= SEQUENCE {
    emergencyAreaID             EmergencyAreaID,
    completedCellsInEAI-NR      CompletedCellsInEAI-NR,
    iE-Extensions       ProtocolExtensionContainer { {EmergencyAreaIDBroadcastNR-Item-ExtIEs} } OPTIONAL,
    ...
}

EmergencyAreaIDBroadcastNR-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

EmergencyAreaIDCancelledEUTRA ::= SEQUENCE (SIZE(1..maxnoofEmergencyAreaID)) OF EmergencyAreaIDCancelledEUTRA-Item

EmergencyAreaIDCancelledEUTRA-Item ::= SEQUENCE {
    emergencyAreaID                 EmergencyAreaID,
    cancelledCellsInEAI-EUTRA       CancelledCellsInEAI-EUTRA,
    iE-Extensions       ProtocolExtensionContainer { {EmergencyAreaIDCancelledEUTRA-Item-ExtIEs} } OPTIONAL,
    ...
}

EmergencyAreaIDCancelledEUTRA-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

EmergencyAreaIDCancelledNR ::= SEQUENCE (SIZE(1..maxnoofEmergencyAreaID)) OF EmergencyAreaIDCancelledNR-Item

EmergencyAreaIDCancelledNR-Item ::= SEQUENCE {
    emergencyAreaID             EmergencyAreaID,
    cancelledCellsInEAI-NR      CancelledCellsInEAI-NR,
    iE-Extensions       ProtocolExtensionContainer { {EmergencyAreaIDCancelledNR-Item-ExtIEs} } OPTIONAL,
    ...
}
```

```
EmergencyAreaIDCancelledNR-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

EmergencyAreaIDList ::= SEQUENCE (SIZE(1..maxnoofEmergencyAreaID)) OF EmergencyAreaID

EmergencyAreaIDListForRestart ::= SEQUENCE (SIZE(1..maxnoofEAIforRestart)) OF EmergencyAreaID

EmergencyFallbackIndicator ::= SEQUENCE {
    emergencyFallbackRequestIndicator       EmergencyFallbackRequestIndicator,
    emergencyServiceTargetCN                EmergencyServiceTargetCN                        OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {EmergencyFallbackIndicator-ExtIEs} }  OPTIONAL,
    ...
}

EmergencyFallbackIndicator-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

EmergencyFallbackRequestIndicator ::= ENUMERATED {
    emergency-fallback-requested,
    ...
}

EmergencyServiceTargetCN ::= ENUMERATED {
    fiveGC,
    epc,
    ...
}

ENB-ID ::= CHOICE {
    macroENB-ID             BIT STRING (SIZE(20)),
    homeENB-ID              BIT STRING (SIZE(28)),
    short-macroENB-ID       BIT STRING (SIZE(18)),
    long-macroENB-ID        BIT STRING (SIZE(21)),
    choice-Extensions       ProtocolIE-SingleContainer { { ENB-ID-ExtIEs} }
}

ENB-ID-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}


Enhanced-CoverageRestriction ::= ENUMERATED {restricted, ... }


Extended-ConnectedTime ::= INTEGER (0..255)

EN-DCSONConfigurationTransfer ::= OCTET STRING

EndpointIPAddressAndPort ::=SEQUENCE {
    endpointIPAddress TransportLayerAddress,
    portNumber          PortNumber,
```

```
    iE-Extensions       ProtocolExtensionContainer { { EndpointIPAddressAndPort-ExtIEs} } OPTIONAL
}

EndIndication ::= ENUMERATED {
    no-further-data,
    further-data-exists,
    ...
}

EndpointIPAddressAndPort-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

EquivalentPLMNs ::= SEQUENCE (SIZE(1..maxnoofEPLMNs)) OF PLMNIdentity

EPS-TAC ::= OCTET STRING (SIZE(2))

EPS-TAI ::= SEQUENCE {
    pLMNIdentity        PLMNIdentity,
    ePS-TAC             EPS-TAC,
    iE-Extensions       ProtocolExtensionContainer { {EPS-TAI-ExtIEs} } OPTIONAL,
    ...
}

EPS-TAI-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

E-RAB-ID ::= INTEGER (0..15, ...)

E-RABInformationList ::= SEQUENCE (SIZE(1..maxnoofE-RABs)) OF E-RABInformationItem

E-RABInformationItem ::= SEQUENCE {
    e-RAB-ID            E-RAB-ID,
    dLForwarding        DLForwarding                                                OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {E-RABInformationItem-ExtIEs} }    OPTIONAL,
    ...
}

E-RABInformationItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    {ID id-SourceTNLAddrInfo        CRITICALITY ignore  EXTENSION TransportLayerAddress PRESENCE optional}|
    {ID id-SourceNodeTNLAddrInfo    CRITICALITY ignore  EXTENSION TransportLayerAddress PRESENCE optional},
    ...
}

ERedCapIndication ::= ENUMERATED {
    true,
    ...
}

EUTRACellIdentity ::= BIT STRING (SIZE(28))

EUTRA-CGI ::= SEQUENCE {
    pLMNIdentity            PLMNIdentity,
```

```
    eUTRACellIdentity       EUTRACellIdentity,
    iE-Extensions       ProtocolExtensionContainer { {EUTRA-CGI-ExtIEs} } OPTIONAL,
    ...
}

EUTRA-CGI-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

EUTRA-CGIList ::= SEQUENCE (SIZE(1..maxnoofCellsinngeNB)) OF EUTRA-CGI

EUTRA-CGIListForWarning ::= SEQUENCE (SIZE(1..maxnoofCellIDforWarning)) OF EUTRA-CGI

EUTRA-PagingeDRXInformation ::= SEQUENCE {
    eUTRA-paging-eDRX-Cycle     EUTRA-Paging-eDRX-Cycle,
    eUTRA-paging-Time-Window    EUTRA-Paging-Time-Window                    OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {EUTRA-PagingeDRXInformation-ExtIEs} } OPTIONAL,
    ...
}

EUTRA-PagingeDRXInformation-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

EUTRA-Paging-eDRX-Cycle ::= ENUMERATED {
    hfhalf, hf1, hf2, hf4, hf6,
    hf8, hf10, hf12, hf14, hf16,
    hf32, hf64, hf128, hf256,
    ...
}

EUTRA-Paging-Time-Window ::= ENUMERATED {
    s1, s2, s3, s4, s5,
    s6, s7, s8, s9, s10,
    s11, s12, s13, s14, s15, s16,
    ...
}

EUTRAencryptionAlgorithms ::= BIT STRING (SIZE(16, ...))

EUTRAintegrityProtectionAlgorithms ::= BIT STRING (SIZE(16, ...))

EventType ::= ENUMERATED {
    direct,
    change-of-serve-cell,
    ue-presence-in-area-of-interest,
    stop-change-of-serve-cell,
    stop-ue-presence-in-area-of-interest,
    cancel-location-reporting-for-the-ue,
    ...,
    change-of-serving-cell-and-UE-presence-in-the-Area-of-Interest,
    report-the-Aerial-UE-flight-information,
    cancel-the-Aerial-UE-flight-information-reporting
}
```

```
ExcessPacketDelayThresholdConfiguration ::= SEQUENCE (SIZE(1..maxnoofThresholdsForExcessPacketDelay)) OF ExcessPacketDelayThresholdItem

ExcessPacketDelayThresholdItem ::= SEQUENCE {
    fiveQi      FiveQI,
    excessPacketDelayThresholdValue         ExcessPacketDelayThresholdValue,
    iE-Extensions       ProtocolExtensionContainer { { ExcessPacketDelayThresholdItem-ExtIEs} } OPTIONAL,
    ...
}

ExcessPacketDelayThresholdItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

ExcessPacketDelayThresholdValue ::= ENUMERATED {
ms0dot25, ms0dot5, ms1, ms2, ms4, ms5, ms10, ms20, ms30, ms40, ms50, ms60, ms70, ms80, ms90, ms100, ms150, ms300, ms500,
    ...
}

ExpectedActivityPeriod ::= INTEGER (1..30|40|50|60|80|100|120|150|180|181, ...)

ExpectedHOInterval ::= ENUMERATED {
    sec15, sec30, sec60, sec90, sec120, sec180, long-time,
    ...
}

ExpectedIdlePeriod ::= INTEGER (1..30|40|50|60|80|100|120|150|180|181, ...)

ExpectedUEActivityBehaviour ::= SEQUENCE {
    expectedActivityPeriod                      ExpectedActivityPeriod                      OPTIONAL,
    expectedIdlePeriod                          ExpectedIdlePeriod                          OPTIONAL,
    sourceOfUEActivityBehaviourInformation      SourceOfUEActivityBehaviourInformation      OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {ExpectedUEActivityBehaviour-ExtIEs} } OPTIONAL,
    ...
}

ExpectedUEActivityBehaviour-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

ExpectedUEBehaviour ::= SEQUENCE {
    expectedUEActivityBehaviour     ExpectedUEActivityBehaviour                     OPTIONAL,
    expectedHOInterval              ExpectedHOInterval                              OPTIONAL,
    expectedUEMobility              ExpectedUEMobility                              OPTIONAL,
    expectedUEMovingTrajectory      ExpectedUEMovingTrajectory                      OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {ExpectedUEBehaviour-ExtIEs} } OPTIONAL,
    ...
}

ExpectedUEBehaviour-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

ExpectedUEMobility ::= ENUMERATED {
```

```
    stationary,
    mobile,
    ...
}

ExpectedUEMovingTrajectory ::= SEQUENCE (SIZE(1..maxnoofCellsUEMovingTrajectory)) OF ExpectedUEMovingTrajectoryItem

ExpectedUEMovingTrajectoryItem ::= SEQUENCE {
    nGRAN-CGI               NGRAN-CGI,
    timeStayedInCell        INTEGER (0..4095)                                                   OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {ExpectedUEMovingTrajectoryItem-ExtIEs} }  OPTIONAL,
    ...
}

ExpectedUEMovingTrajectoryItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

Extended-AMFName     ::= SEQUENCE {
    aMFNameVisibleString        AMFNameVisibleString                OPTIONAL,
    aMFNameUTF8String           AMFNameUTF8String                   OPTIONAL,
    iE-Extensions               ProtocolExtensionContainer { { Extended-AMFName-ExtIEs } } OPTIONAL,
    ...
}

Extended-AMFName-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

ExtendedPacketDelayBudget ::= INTEGER (1..65535, ..., 65536..109999)


Extended-RANNodeName     ::= SEQUENCE {
    rANNodeNameVisibleString        RANNodeNameVisibleString                    OPTIONAL,
    rANNodeNameUTF8String           RANNodeNameUTF8String                       OPTIONAL,
    iE-Extensions                   ProtocolExtensionContainer { { Extended-RANNodeName-ExtIEs } } OPTIONAL,
    ...
}

Extended-RANNodeName-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

ExtendedRATRestrictionInformation ::= SEQUENCE {
    primaryRATRestriction       BIT STRING (SIZE(8, ..., 16)),
    secondaryRATRestriction     BIT STRING (SIZE(8, ...)),
    iE-Extensions       ProtocolExtensionContainer { {ExtendedRATRestrictionInformation-ExtIEs} } OPTIONAL,
    ...
}

ExtendedRATRestrictionInformation-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}
```

```
ExtendedRNC-ID                  ::= INTEGER (4096..65535)

ExtendedSliceSupportList ::= SEQUENCE (SIZE(1..maxnoofExtSliceItems)) OF SliceSupportItem

ExtendedUEIdentityIndexValue ::= BIT STRING (SIZE(16))

EventTrigger::= CHOICE {
    outOfCoverage               ENUMERATED {true, ...},
    eventL1LoggedMDTConfig      EventL1LoggedMDTConfig,
    choice-Extensions       ProtocolIE-SingleContainer { { EventTrigger-ExtIEs} }
}

EventTrigger-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

EventL1LoggedMDTConfig ::= SEQUENCE {
    l1Threshold                 MeasurementThresholdL1LoggedMDT,
    hysteresis                  Hysteresis,
    timeToTrigger               TimeToTrigger,
    iE-Extensions               ProtocolExtensionContainer { { EventL1LoggedMDTConfig-ExtIEs} } OPTIONAL,
    ...
}

EventL1LoggedMDTConfig-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

MeasurementThresholdL1LoggedMDT ::= CHOICE {
    threshold-RSRP              Threshold-RSRP,
    threshold-RSRQ              Threshold-RSRQ,
    choice-Extensions       ProtocolIE-SingleContainer { { MeasurementThresholdL1LoggedMDT-ExtIEs} }
}

MeasurementThresholdL1LoggedMDT-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

EquivalentSNPNsList ::= SEQUENCE (SIZE(1..maxnoofESNPNs)) OF EquivalentSNPNsItem

EquivalentSNPNsItem ::= SEQUENCE {
    plmnIdentity        PLMNIdentity,
    nID                 NID,
    iE-Extensions       ProtocolExtensionContainer { {EquivalentSNPNsItem-ExtIEs} } OPTIONAL,
    ...
}

EquivalentSNPNsItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::={
    ...
}

-- F

FailureIndication ::= SEQUENCE {
```

```
    uERLFReportContainer    UERLFReportContainer,
    iE-Extensions       ProtocolExtensionContainer { { FailureIndication-ExtIEs} }  OPTIONAL,
    ...
}

FailureIndication-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

FiveGCAction ::= CHOICE {
    hLComActivate           HLComActivate,
    hLComDeactivate         HLComDeactivate,
    choice-Extensions       ProtocolIE-SingleContainer { {FiveGCAction-ExtIEs} }
}

FiveGCAction-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

FiveG-ProSeAuthorized ::= SEQUENCE {
    fiveGProSeDirectDiscovery               FiveGProSeDirectDiscovery                       OPTIONAL,
    fiveGProSeDirectCommunication           FiveGProSeDirectCommunication                   OPTIONAL,
    fiveGProSeLayer2UEtoNetworkRelay        FiveGProSeLayer2UEtoNetworkRelay                OPTIONAL,
    fiveGProSeLayer3UEtoNetworkRelay        FiveGProSeLayer3UEtoNetworkRelay                OPTIONAL,
    fiveGProSeLayer2RemoteUE                FiveGProSeLayer2RemoteUE                        OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {FiveG-ProSeAuthorized-ExtIEs} }       OPTIONAL,
    ...
}

FiveG-ProSeAuthorized-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-FiveGProSeLayer2Multipath       CRITICALITY ignore  EXTENSION FiveGProSeLayer2Multipath       PRESENCE optional    }|
    { ID id-FiveGProSeLayer2UEtoUERelay     CRITICALITY ignore  EXTENSION FiveGProSeLayer2UEtoUERelay     PRESENCE optional    }|
    { ID id-FiveGProSeLayer2UEtoUERemote    CRITICALITY ignore  EXTENSION FiveGProSeLayer2UEtoUERemote    PRESENCE optional    }|
    { ID id-FiveGProSeLayer2MHUEtoNetworkRelay              CRITICALITY ignore  EXTENSION FiveGProSeLayer2MHUEtoNetworkRelay   PRESENCE optional}|
    { ID id-FiveGProSeLayer2MHIntermediateUEtoNetworkRelay  CRITICALITY ignore  EXTENSION FiveGProSeLayer2MHIntermediateUEtoNetworkRelay   PRESENCE
optional}|
    { ID id-FiveGProSeLayer2MHRemote                        CRITICALITY ignore  EXTENSION FiveGProSeLayer2MHRemote             PRESENCE optional}|
    { ID id-FiveGProSeLayer3MHUEtoNetworkRelay              CRITICALITY ignore  EXTENSION FiveGProSeLayer3MHUEtoNetworkRelay   PRESENCE optional},
    ...
}

FiveGProSeDirectDiscovery ::= ENUMERATED {
    authorized,
    not-authorized,
    ...
}

FiveGProSeDirectCommunication ::= ENUMERATED {
    authorized,
    not-authorized,
    ...
}

FiveGProSeLayer2UEtoNetworkRelay ::= ENUMERATED {
```

```
    authorized,
    not-authorized,
    ...
}

FiveGProSeLayer3UEtoNetworkRelay ::= ENUMERATED {
    authorized,
    not-authorized,
    ...
}

FiveGProSeLayer2RemoteUE ::= ENUMERATED {
    authorized,
    not-authorized,
    ...
}

FiveGProSeLayer2Multipath ::= ENUMERATED {
    authorized,
    not-authorized,
    ...
}

FiveGProSeLayer2UEtoUERelay ::= ENUMERATED {
    authorized,
    not-authorized,
    ...
}

FiveGProSeLayer2UEtoUERemote ::= ENUMERATED {
    authorized,
    not-authorized,
    ...
}

FiveGProSeLayer2MHUEtoNetworkRelay  ::= ENUMERATED {
    authorized,
    not-authorized,
    ...
}

FiveGProSeLayer2MHIntermediateUEtoNetworkRelay  ::= ENUMERATED {
    authorized,
    not-authorized,
    ...
}

FiveGProSeLayer2MHRemote    ::= ENUMERATED {
    authorized,
    not-authorized,
    ...
}

FiveGProSeLayer3MHUEtoNetworkRelay  ::= ENUMERATED {
```

```
    authorized,
    not-authorized,
    ...
}


FiveG-ProSePC5QoSParameters ::= SEQUENCE {
    fiveGProSepc5QoSFlowList                    FiveGProSePC5QoSFlowList,
    fiveGProSepc5LinkAggregateBitRates      BitRate                                             OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { FiveG-ProSePC5QoSParameters-ExtIEs} }    OPTIONAL,
    ...
}

FiveG-ProSePC5QoSParameters-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

FiveGProSePC5QoSFlowList ::= SEQUENCE (SIZE(1..maxnoofPC5QoSFlows)) OF FiveGProSePC5QoSFlowItem

FiveGProSePC5QoSFlowItem ::= SEQUENCE {
    fiveGproSepQI               FiveQI,
    fiveGproSepc5FlowBitRates   FiveGProSePC5FlowBitRates               OPTIONAL,
    fiveGproSerange             Range                                   OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { FiveGProSePC5QoSFlowItem-ExtIEs} }   OPTIONAL,
    ...
}

FiveGProSePC5QoSFlowItem-ExtIEs  NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

FiveGProSePC5FlowBitRates ::= SEQUENCE {
    fiveGproSeguaranteedFlowBitRate     BitRate,
    fiveGproSemaximumFlowBitRate        BitRate,
    iE-Extensions       ProtocolExtensionContainer { { FiveGProSePC5FlowBitRates-ExtIEs} }  OPTIONAL,
    ...
}

FiveGProSePC5FlowBitRates-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}


FiveG-S-TMSI ::= SEQUENCE {
    aMFSetID            AMFSetID,
    aMFPointer          AMFPointer,
    fiveG-TMSI          FiveG-TMSI,
    iE-Extensions       ProtocolExtensionContainer { {FiveG-S-TMSI-ExtIEs} }    OPTIONAL,
    ...
}

FiveG-S-TMSI-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}
```

```
FiveG-TMSI ::= OCTET STRING (SIZE(4))

FiveQI ::= INTEGER (0..255, ...)

ForbiddenAreaInformation ::= SEQUENCE (SIZE(1.. maxnoofEPLMNsPlusOne)) OF ForbiddenAreaInformation-Item

ForbiddenAreaInformation-Item ::= SEQUENCE {
    pLMNIdentity        PLMNIdentity,
    forbiddenTACs       ForbiddenTACs,
    iE-Extensions       ProtocolExtensionContainer { {ForbiddenAreaInformation-Item-ExtIEs} } OPTIONAL,
    ...
}

ForbiddenAreaInformation-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

ForbiddenTACs ::= SEQUENCE (SIZE(1..maxnoofForbTACs)) OF TAC

FromEUTRANtoNGRAN ::= SEQUENCE {
    sourceeNBID             IntersystemSONeNBID,
    targetNGRANnodeID       IntersystemSONNGRANnodeID,
    iE-Extensions           ProtocolExtensionContainer { { FromEUTRANtoNGRAN-ExtIEs} }          OPTIONAL
}

FromEUTRANtoNGRAN-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

FromNGRANtoEUTRAN ::= SEQUENCE {
    sourceNGRANnodeID       IntersystemSONNGRANnodeID,
    targeteNBID             IntersystemSONeNBID,
    iE-Extensions           ProtocolExtensionContainer { { FromNGRANtoEUTRAN-ExtIEs} }          OPTIONAL
}

FromNGRANtoEUTRAN-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

FurtherExtendedUEIdentityIndexValue ::= BIT STRING (SIZE(20))

-- G

GBR-QosInformation ::= SEQUENCE {
    maximumFlowBitRateDL        BitRate,
    maximumFlowBitRateUL        BitRate,
    guaranteedFlowBitRateDL     BitRate,
    guaranteedFlowBitRateUL     BitRate,
    notificationControl         NotificationControl                                 OPTIONAL,
    maximumPacketLossRateDL     PacketLossRate                                      OPTIONAL,
    maximumPacketLossRateUL     PacketLossRate                                      OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {GBR-QosInformation-ExtIEs} }  OPTIONAL,
    ...
```

```
}

GBR-QosInformation-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-AlternativeQoSParaSetList   CRITICALITY ignore  EXTENSION AlternativeQoSParaSetList PRESENCE optional  }|
    { ID id-MonitoringRequestonAvailableBitrate     CRITICALITY ignore  EXTENSION MonitoringRequestonAvailableBitrate  PRESENCE optional},
    ...
}

GeographyBasedMDT ::= SEQUENCE {
    nTN-Geographical-Area       NTN-Geographical-Area-List,
    nTN-PLMN-List               MDTPLMNList                                         OPTIONAL,
    iE-Extensions               ProtocolExtensionContainer { {GeographyBasedMDT-ExtIEs} }   OPTIONAL,
    ...
}

GeographyBasedMDT-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}


GlobalCable-ID ::= OCTET STRING

GlobalCable-ID-new ::= SEQUENCE {
    globalCable-ID          GlobalCable-ID,
    tAI                     TAI,
    iE-Extensions           ProtocolExtensionContainer { { GlobalCable-ID-new-ExtIEs} }     OPTIONAL,
    ...
}

GlobalCable-ID-new-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

GlobalENB-ID ::= SEQUENCE {
    pLMNidentity            PLMNIdentity,
    eNB-ID                  ENB-ID,
    iE-Extensions           ProtocolExtensionContainer { {GlobalENB-ID-ExtIEs} }        OPTIONAL,
    ...
}

GlobalENB-ID-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}


GlobalGNB-ID ::= SEQUENCE {
    pLMNIdentity        PLMNIdentity,
    gNB-ID              GNB-ID,
    iE-Extensions       ProtocolExtensionContainer { {GlobalGNB-ID-ExtIEs} } OPTIONAL,
    ...
}

GlobalGNB-ID-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
```

```
}

GlobalN3IWF-ID ::= SEQUENCE {
    pLMNIdentity        PLMNIdentity,
    n3IWF-ID            N3IWF-ID,
    iE-Extensions       ProtocolExtensionContainer { {GlobalN3IWF-ID-ExtIEs} } OPTIONAL,
    ...
}

GlobalN3IWF-ID-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

GlobalLine-ID ::= SEQUENCE {
    globalLineIdentity      GlobalLineIdentity,
    lineType                LineType                                            OPTIONAL,
    iE-Extensions           ProtocolExtensionContainer { {GlobalLine-ID-ExtIEs} }       OPTIONAL,
    ...
}

GlobalLine-ID-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-TAI             CRITICALITY ignore  EXTENSION TAI                       PRESENCE optional },
    ...
}

GlobalLineIdentity ::= OCTET STRING

GlobalNgENB-ID ::= SEQUENCE {
    pLMNIdentity        PLMNIdentity,
    ngENB-ID            NgENB-ID,
    iE-Extensions       ProtocolExtensionContainer { {GlobalNgENB-ID-ExtIEs} } OPTIONAL,
    ...
}

GlobalNgENB-ID-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

GlobalRANNodeID ::= CHOICE {
    globalGNB-ID            GlobalGNB-ID,
    globalNgENB-ID          GlobalNgENB-ID,
    globalN3IWF-ID          GlobalN3IWF-ID,
    choice-Extensions       ProtocolIE-SingleContainer { {GlobalRANNodeID-ExtIEs} }
}

GlobalRANNodeID-ExtIEs NGAP-PROTOCOL-IES ::= {
    { ID id-GlobalTNGF-ID       CRITICALITY reject  TYPE GlobalTNGF-ID          PRESENCE mandatory   }|
    { ID id-GlobalTWIF-ID       CRITICALITY reject  TYPE GlobalTWIF-ID          PRESENCE mandatory   }|
    { ID id-GlobalW-AGF-ID      CRITICALITY reject  TYPE GlobalW-AGF-ID         PRESENCE mandatory   },
    ...
}

GlobalTNGF-ID ::= SEQUENCE {
    pLMNIdentity        PLMNIdentity,
```

```
    tNGF-ID             TNGF-ID,
    iE-Extensions       ProtocolExtensionContainer { { GlobalTNGF-ID-ExtIEs} } OPTIONAL,
    ...
}

GlobalTNGF-ID-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}


GlobalTWIF-ID ::= SEQUENCE {
    pLMNIdentity        PLMNIdentity,
    tWIF-ID             TWIF-ID,
    iE-Extensions       ProtocolExtensionContainer { { GlobalTWIF-ID-ExtIEs} } OPTIONAL,
    ...
}

GlobalTWIF-ID-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}


GlobalW-AGF-ID ::= SEQUENCE {
    pLMNIdentity            PLMNIdentity,
    w-AGF-ID                W-AGF-ID,
    iE-Extensions           ProtocolExtensionContainer { { GlobalW-AGF-ID-ExtIEs} } OPTIONAL,
    ...
}

GlobalW-AGF-ID-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

GNB-ID ::= CHOICE {
    gNB-ID      BIT STRING (SIZE(22..32)),
    choice-Extensions       ProtocolIE-SingleContainer { {GNB-ID-ExtIEs} }
}

GNB-ID-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

GTP-TEID ::= OCTET STRING (SIZE(4))

GTPTunnel ::= SEQUENCE {
    transportLayerAddress       TransportLayerAddress,
    gTP-TEID                    GTP-TEID,
    iE-Extensions       ProtocolExtensionContainer { {GTPTunnel-ExtIEs} } OPTIONAL,
    ...
}

GTPTunnel-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}
```

```
GUAMI ::= SEQUENCE {
    pLMNIdentity        PLMNIdentity,
    aMFRegionID         AMFRegionID,
    aMFSetID            AMFSetID,
    aMFPointer          AMFPointer,
    iE-Extensions       ProtocolExtensionContainer { {GUAMI-ExtIEs} } OPTIONAL,
    ...
}

GUAMI-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

GUAMIType ::= ENUMERATED {native, mapped, ...}

GUAMIList ::= SEQUENCE (SIZE(1..maxnoofGUAMIs)) OF GUAMIList-Item

GUAMIList-Item ::= SEQUENCE {
    gUAMI               GUAMI,
    iE-Extensions       ProtocolExtensionContainer { {GUAMIList-Item-ExtIEs} }  OPTIONAL,
    ...
}

GUAMIList-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

GW-Context-Release-Indication ::= ENUMERATED {true, ...}

-- H

HandoverCommandTransfer ::= SEQUENCE {
    dLForwardingUP-TNLInformation       UPTransportLayerInformation                     OPTIONAL,
    qosFlowToBeForwardedList            QosFlowToBeForwardedList                        OPTIONAL,
    dataForwardingResponseDRBList       DataForwardingResponseDRBList                   OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {HandoverCommandTransfer-ExtIEs} } OPTIONAL,
    ...
}

HandoverCommandTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-AdditionalDLForwardingUPTNLInformation      CRITICALITY ignore  EXTENSION QosFlowPerTNLInformationList       PRESENCE optional    }|
    { ID id-ULForwardingUP-TNLInformation               CRITICALITY reject  EXTENSION UPTransportLayerInformation        PRESENCE optional    }|
    { ID id-AdditionalULForwardingUPTNLInformation      CRITICALITY reject  EXTENSION UPTransportLayerInformationList    PRESENCE optional    }|
    { ID id-DataForwardingResponseERABList              CRITICALITY ignore  EXTENSION DataForwardingResponseERABList     PRESENCE optional    }|
    { ID id-QosFlowFailedToSetupList                    CRITICALITY ignore  EXTENSION QosFlowListWithCause               PRESENCE optional    },
    ...
}

HandoverFlag ::= ENUMERATED {
    handover-preparation,
    ...
}
```

```
HandoverPreparationUnsuccessfulTransfer ::= SEQUENCE {
    cause               Cause,
    iE-Extensions       ProtocolExtensionContainer { {HandoverPreparationUnsuccessfulTransfer-ExtIEs} } OPTIONAL,
    ...
}

HandoverPreparationUnsuccessfulTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

HandoverRequestAcknowledgeTransfer ::= SEQUENCE {
    dL-NGU-UP-TNLInformation            UPTransportLayerInformation,
    dLForwardingUP-TNLInformation       UPTransportLayerInformation                                 OPTIONAL,
    securityResult                      SecurityResult                                              OPTIONAL,
    qosFlowSetupResponseList            QosFlowListWithDataForwarding,
    qosFlowFailedToSetupList            QosFlowListWithCause                                        OPTIONAL,
    dataForwardingResponseDRBList       DataForwardingResponseDRBList                               OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {HandoverRequestAcknowledgeTransfer-ExtIEs} }  OPTIONAL,
    ...
}

HandoverRequestAcknowledgeTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-AdditionalDLUPTNLInformationForHOList       CRITICALITY ignore  EXTENSION AdditionalDLUPTNLInformationForHOList    PRESENCE optional }|
    { ID id-ULForwardingUP-TNLInformation               CRITICALITY reject  EXTENSION UPTransportLayerInformation              PRESENCE optional }|
    { ID id-AdditionalULForwardingUPTNLInformation      CRITICALITY reject  EXTENSION UPTransportLayerInformationList          PRESENCE optional }|
    { ID id-DataForwardingResponseERABList              CRITICALITY ignore  EXTENSION DataForwardingResponseERABList           PRESENCE optional }|
    { ID id-RedundantDL-NGU-UP-TNLInformation           CRITICALITY ignore  EXTENSION UPTransportLayerInformation              PRESENCE optional }|
    { ID id-UsedRSNInformation                          CRITICALITY ignore  EXTENSION RedundantPDUSessionInformation           PRESENCE optional }|
    { ID id-GlobalRANNodeID                             CRITICALITY ignore  EXTENSION GlobalRANNodeID                          PRESENCE optional }|
    { ID id-MBS-SupportIndicator                        CRITICALITY ignore  EXTENSION MBS-SupportIndicator                     PRESENCE optional }|
    { ID id-PDUSetbasedHandlingIndicator                CRITICALITY ignore  EXTENSION PDUSetbasedHandlingIndicator             PRESENCE optional }|
    { ID id-ECNMarkingorCongestionInformationReportingStatus    CRITICALITY ignore  EXTENSION ECNMarkingorCongestionInformationReportingStatus
    PRESENCE optional },
    ...
}

HandoverRequiredTransfer ::= SEQUENCE {
    directForwardingPathAvailability        DirectForwardingPathAvailability                OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {HandoverRequiredTransfer-ExtIEs} }    OPTIONAL,
    ...
}

HandoverRequiredTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

HandoverResourceAllocationUnsuccessfulTransfer ::= SEQUENCE {
    cause                       Cause,
    criticalityDiagnostics      CriticalityDiagnostics                                                      OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {HandoverResourceAllocationUnsuccessfulTransfer-ExtIEs} }  OPTIONAL,
    ...
}

HandoverResourceAllocationUnsuccessfulTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
```

```
    ...
}

HandoverType ::= ENUMERATED {
    intra5gs,
    fivegs-to-eps,
    eps-to-5gs,
    ...,
    fivegs-to-utran
}

HashedUEIdentityIndexValue ::= BIT STRING (SIZE(13, ...))


HFCNode-ID ::= OCTET STRING

HFCNode-ID-new ::= SEQUENCE {
    hFCNode-ID          HFCNode-ID,
    tAI                 TAI,
    iE-Extensions       ProtocolExtensionContainer { { HFCNode-ID-new-ExtIEs} } OPTIONAL,
    ...
}

HFCNode-ID-new-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-GlobalCable-ID              CRITICALITY ignore  EXTENSION GlobalCable-ID             PRESENCE optional    },
    ...
}

HLComActivate ::= SEQUENCE {
    nR-Paging-Long-eDRX-Information-for-RRC-INACTIVE        NR-Paging-Long-eDRX-Information-for-RRC-INACTIVE,
    iE-Extensions                                           ProtocolExtensionContainer { { HLComActivate-ExtIEs} } OPTIONAL,
    ...
}

HLComActivate-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

HLComDeactivate ::= SEQUENCE {
    uEReachabilityIndication        ENUMERATED {true, ...},
    iE-Extensions       ProtocolExtensionContainer { { HLComDeactivate-ExtIEs} }    OPTIONAL,
    ...
}

HLComDeactivate-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

HOReport::= SEQUENCE {
    handoverReportType          ENUMERATED {ho-too-early, ho-to-wrong-cell, intersystem-ping-pong, ...},
    handoverCause               Cause,
    sourcecellCGI               NGRAN-CGI,
    targetcellCGI               NGRAN-CGI,
    reestablishmentcellCGI      NGRAN-CGI                                   OPTIONAL,
```

```
-- The above IE shall be present if the Handover Report Type IE is set to the value “HO to wrong cell”
    sourcecellC-RNTI            BIT STRING (SIZE(16))                       OPTIONAL,
    targetcellinE-UTRAN         EUTRA-CGI                                   OPTIONAL,
-- The above IE shall be present if the Handover Report Type IE is set to the value “Inter System ping-pong”
    mobilityInformation         MobilityInformation                         OPTIONAL,
    uERLFReportContainer        UERLFReportContainer                        OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { HOReport-ExtIEs} }   OPTIONAL,
    ...
}

HOReport-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-ExtendedMobilityInformation            CRITICALITY ignore  EXTENSION ExtendedMobilityInformation         PRESENCE optional    }|
    { ID id-TargetCellCRNTI                        CRITICALITY ignore  EXTENSION C-RNTI                              PRESENCE optional    }|
    { ID id-TimeSinceFailure                       CRITICALITY ignore  EXTENSION TimeSinceFailure                    PRESENCE optional    },
    ...
}


Hysteresis ::=                      INTEGER (0..30)

-- I

IAB-Authorized ::= ENUMERATED {
    authorized,
    not-authorized,
    ...
}

MobileIAB-MTUserLocationInformation ::= SEQUENCE {
    nRCGI                           NR-CGI,
    tAI                             TAI,
    iE-Extensions                   ProtocolExtensionContainer { { MobileIAB-MTUserLocationInformation-ExtIEs} } OPTIONAL,
    ...
}

MobileIAB-MTUserLocationInformation-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

IAB-Supported ::= ENUMERATED {
    true,
    ...
}

IABNodeIndication ::= ENUMERATED {
    true,
    ...
}

IMSVoiceSupportIndicator ::= ENUMERATED {
    supported,
    not-supported,
    ...
}
```

```
IndexToRFSP ::= INTEGER (1..256, ...)

Indication-of-Bitrate-Adaptation ::= ENUMERATED {uplink, ...}

InfoOnRecommendedCellsAndRANNodesForPaging ::= SEQUENCE {
    recommendedCellsForPaging       RecommendedCellsForPaging,
    recommendRANNodesForPaging      RecommendedRANNodesForPaging,
    iE-Extensions       ProtocolExtensionContainer { {InfoOnRecommendedCellsAndRANNodesForPaging-ExtIEs} } OPTIONAL,
    ...
}

InfoOnRecommendedCellsAndRANNodesForPaging-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}


IntegrityProtectionIndication ::= ENUMERATED {
    required,
    preferred,
    not-needed,
    ...
}

IntegrityProtectionResult ::= ENUMERATED {
    performed,
    not-performed,
    ...
}

IntendedNumberOfPagingAttempts ::= INTEGER (1..16, ...)

InterfacesToTrace ::= BIT STRING (SIZE(8))

ImmediateMDTNr ::= SEQUENCE {
    measurementsToActivate                  MeasurementsToActivate,
    m1Configuration                         M1Configuration                     OPTIONAL,
-- The above IE shall be present if the Measurements to Activate IE has the first bit set to “1”
    m4Configuration                         M4Configuration                     OPTIONAL,
-- The above IE shall be present if the Measurements to Activate IE has the third bit set to “1”
    m5Configuration                         M5Configuration                     OPTIONAL,
-- The above IE shall be present if the Measurements to Activate IE has the fourth bit set to “1”
    m6Configuration                         M6Configuration                     OPTIONAL,
-- The above IE shall be present if the Measurements to Activate IE has the fifth bit set to “1”
    m7Configuration                         M7Configuration                     OPTIONAL,
-- The above IE shall be present if the Measurements to Activate IE has the sixth bit set to “1”
    bluetoothMeasurementConfiguration       BluetoothMeasurementConfiguration   OPTIONAL,
    wLANMeasurementConfiguration            WLANMeasurementConfiguration        OPTIONAL,
    mDT-Location-Info                       MDT-Location-Info                   OPTIONAL,
    sensorMeasurementConfiguration          SensorMeasurementConfiguration      OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { ImmediateMDTNr-ExtIEs} } OPTIONAL,
    ...
}
```

```
ImmediateMDTNr-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

InterSystemFailureIndication ::= SEQUENCE {
    uERLFReportContainer        UERLFReportContainer    OPTIONAL,
    iE-Extensions           ProtocolExtensionContainer { { InterSystemFailureIndication-ExtIEs} }      OPTIONAL,
    ...
}

InterSystemFailureIndication-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

IntersystemSONConfigurationTransfer ::= SEQUENCE {
    transferType                IntersystemSONTransferType,
    intersystemSONInformation   IntersystemSONInformation,
    iE-Extensions           ProtocolExtensionContainer { { IntersystemSONConfigurationTransfer-ExtIEs} }        OPTIONAL,
    ...
}

IntersystemSONConfigurationTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

IntersystemSONTransferType ::= CHOICE {
    fromEUTRANtoNGRAN               FromEUTRANtoNGRAN,
    fromNGRANtoEUTRAN               FromNGRANtoEUTRAN,
    choice-Extensions       ProtocolIE-SingleContainer { { IntersystemSONTransferType-ExtIEs} }
}

IntersystemSONTransferType-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

IntersystemSONeNBID ::= SEQUENCE {
    globaleNBID             GlobalENB-ID,
    selectedEPSTAI          EPS-TAI,
    iE-Extensions           ProtocolExtensionContainer { { IntersystemSONeNBID-ExtIEs} }         OPTIONAL,
    ...
}

IntersystemSONeNBID-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

IntersystemSONNGRANnodeID ::= SEQUENCE {
    globalRANNodeID     GlobalRANNodeID,
    selectedTAI         TAI,
    iE-Extensions       ProtocolExtensionContainer { { IntersystemSONNGRANnodeID-ExtIEs} }       OPTIONAL,
    ...
}

IntersystemSONNGRANnodeID-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
```

```
    ...
}

IntersystemSONInformation ::= CHOICE {
    intersystemSONInformationReport     IntersystemSONInformationReport,
    choice-Extensions       ProtocolIE-SingleContainer { { IntersystemSONInformation-ExtIEs} }
}

IntersystemSONInformation-ExtIEs NGAP-PROTOCOL-IES ::= {
    { ID id-IntersystemSONInformationRequest        CRITICALITY ignore  TYPE IntersystemSONInformationRequest      PRESENCE mandatory }|
    { ID id-IntersystemSONInformationReply          CRITICALITY ignore  TYPE IntersystemSONInformationReply        PRESENCE mandatory },
    ...
}

-- ------------------------------------------------------------------
-- INTER SYSTEM SON INFORMATION REQUEST
-- ------------------------------------------------------------------

IntersystemSONInformationRequest ::= CHOICE {
    nGRAN-CellActivation        IntersystemCellActivationRequest,
    resourceStatus              IntersystemResourceStatusRequest,
    choice-Extensions       ProtocolIE-SingleContainer { { IntersystemSONInformationRequest-ExtIEs} }
}

IntersystemSONInformationRequest-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

IntersystemCellActivationRequest ::= SEQUENCE {
    activationID            INTEGER (0..16384, ...),
    cellsToActivateList     CellsToActivateList,
    iE-Extensions       ProtocolExtensionContainer { { IntersystemCellActivationRequest-ExtIEs} } OPTIONAL,
    ...
}

IntersystemCellActivationRequest-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

CellsToActivateList ::= SEQUENCE (SIZE(1..maxnoofCellsinNGRANNode)) OF NGRAN-CGI


-- ------------------------------------------------------------------
-- Inter System Resource Status Request
-- ------------------------------------------------------------------

IntersystemResourceStatusRequest ::= SEQUENCE {
    reportingSystem             ReportingSystem,
    reportCharacteristics       ReportCharacteristics,
    reportType                  ReportType,
    iE-Extensions       ProtocolExtensionContainer { { IntersystemResourceStatusRequest-ExtIEs} } OPTIONAL,
    ...
}
```

```
IntersystemResourceStatusRequest-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

ReportingSystem ::= CHOICE {
    eUTRAN          EUTRAN-ReportingSystemIEs,
    nGRAN           NGRAN-ReportingSystemIEs,
    noReporting     NULL,
    choice-Extensions       ProtocolIE-SingleContainer { { ReportingSystem-ExtIEs}}
}

ReportingSystem-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

EUTRAN-ReportingSystemIEs::= SEQUENCE {
    eUTRAN-CellToReportList             EUTRAN-CellToReportList,
    iE-Extensions       ProtocolExtensionContainer { {EUTRAN-ReportingSystemIEs-ExtIEs} } OPTIONAL,
    ...
}

EUTRAN-ReportingSystemIEs-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

NGRAN-ReportingSystemIEs ::= SEQUENCE {
    nGRAN-CellToReportList              NGRAN-CellToReportList,
    iE-Extensions       ProtocolExtensionContainer { {NGRAN-ReportingSystemIEs-ExtIEs} } OPTIONAL,
    ...
}

NGRAN-ReportingSystemIEs-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

EUTRAN-CellToReportList ::= SEQUENCE (SIZE(1..maxnoofReportedCells)) OF EUTRAN-CellToReportItem

EUTRAN-CellToReportItem::= SEQUENCE {
    eCGI                EUTRA-CGI,
    iE-Extensions       ProtocolExtensionContainer { {EUTRAN-CellToReportItem-ExtIEs} } OPTIONAL,
    ...
}

EUTRAN-CellToReportItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}


NGRAN-CellToReportList ::= SEQUENCE (SIZE(1.. maxnoofReportedCells)) OF NGRAN-CellToReportItem

NGRAN-CellToReportItem::= SEQUENCE {
    nGRAN-CGI               NGRAN-CGI,
    iE-Extensions       ProtocolExtensionContainer { {NGRAN-CellToReportItem-ExtIEs} } OPTIONAL,
    ...
```

```
}

NGRAN-CellToReportItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

ReportCharacteristics ::=  BIT STRING(SIZE(32))

ReportType ::= CHOICE {
    eventBasedReporting     EventBasedReportingIEs,
    periodicReporting       PeriodicReportingIEs,
    choice-Extensions       ProtocolIE-SingleContainer { { ReportType-ExtIEs}}
}

ReportType-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

EventBasedReportingIEs ::= SEQUENCE {
    intersystemResourceThresholdLow             IntersystemResourceThreshold,
    intersystemResourceThresholdHigh                IntersystemResourceThreshold,
    numberOfMeasurementReportingLevels              NumberOfMeasurementReportingLevels,
    iE-Extensions       ProtocolExtensionContainer { {EventBasedReportingIEs-ExtIEs} } OPTIONAL,
    ...
}

EventBasedReportingIEs-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

IntersystemResourceThreshold ::= INTEGER(0..100)

NumberOfMeasurementReportingLevels ::= ENUMERATED {n2, n3, n4, n5, n10, ..., n0}

PeriodicReportingIEs ::= SEQUENCE {
    reportingPeriodicity            ReportingPeriodicity,
    iE-Extensions       ProtocolExtensionContainer { {PeriodicReportingIEs-ExtIEs} } OPTIONAL,
    ...
}

PeriodicReportingIEs-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

ReportingPeriodicity ::= ENUMERATED {
    stop,
    single,
    ms1000,
    ms2000,
    ms5000,
    ms10000,
    ...
}
```

```
-- ********************************************************************
-- INTER SYSTEM SON INFORMATION REPLY
-- ********************************************************************

IntersystemSONInformationReply ::= CHOICE {
    nGRAN-CellActivation        IntersystemCellActivationReply,
    resourceStatus              IntersystemResourceStatusReply,
    choice-Extensions       ProtocolIE-SingleContainer { { IntersystemSONInformationReply-ExtIEs} }
}

IntersystemSONInformationReply-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

IntersystemCellActivationReply ::= SEQUENCE {
    activatedCellList       ActivatedCellList,
    activation-ID           INTEGER(0..16384, ...),
    iE-Extensions           ProtocolExtensionContainer { { IntersystemCellActivationReply-ExtIEs} } OPTIONAL,
    ...
}

IntersystemCellActivationReply-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

ActivatedCellList ::= SEQUENCE (SIZE(1..maxnoofCellsinNGRANNode)) OF NGRAN-CGI


-- ********************************************************************
-- Inter System Resource Status Reply
-- ********************************************************************

IntersystemResourceStatusReply ::= SEQUENCE {
    reportingsystem             ReportingSystem,
    iE-Extensions       ProtocolExtensionContainer { { IntersystemResourceStatusReply-ExtIEs} }   OPTIONAL,
    ...
}

IntersystemResourceStatusReply-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}


-- ********************************************************************
-- INTER SYSTEM SON INFORMATION REPORT
-- ********************************************************************

IntersystemSONInformationReport::= CHOICE {
    hOReportInformation             InterSystemHOReport,
    failureIndicationInformation    InterSystemFailureIndication,
    choice-Extensions       ProtocolIE-SingleContainer { { IntersystemSONInformationReport-ExtIEs} }
}
```

```
IntersystemSONInformationReport-ExtIEs NGAP-PROTOCOL-IES ::= {
    { ID id-EnergySavingIndication              CRITICALITY ignore  TYPE IntersystemCellStateIndication              PRESENCE mandatory }|
    { ID id-IntersystemResourceStatusUpdate     CRITICALITY ignore  TYPE IntersystemResourceStatusReport            PRESENCE mandatory },
    ...
}

IntersystemCellStateIndication ::= SEQUENCE {
    notificationCellList    NotificationCellList,
    iE-Extensions       ProtocolExtensionContainer { { IntersystemCellStateIndication-ExtIEs} } OPTIONAL,
    ...
}

IntersystemCellStateIndication-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

NotificationCellList ::= SEQUENCE (SIZE(1.. maxnoofCellsinNGRANNode)) OF NotificationCell-Item

NotificationCell-Item ::= SEQUENCE {
    nGRAN-CGI               NGRAN-CGI,
    notifyFlag              ENUMERATED {activated, deactivated, ...},
    iE-Extensions       ProtocolExtensionContainer { { NotificationCell-Item-ExtIEs} } OPTIONAL,
    ...
}

NotificationCell-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

-- ------------------------------------------------------------------
-- Inter System Resource Status Report
-- ------------------------------------------------------------------

IntersystemResourceStatusReport ::= SEQUENCE {
    reportingSystem     ResourceStatusReportingSystem,
    iE-Extensions                   ProtocolExtensionContainer { { IntersystemResourceStatusReport-ExtIEs} }    OPTIONAL,
    ...
}

IntersystemResourceStatusReport-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

ResourceStatusReportingSystem ::= CHOICE {
    eUTRAN-ReportingStatus      EUTRAN-ReportingStatusIEs,
    nGRAN-ReportingStatus       NGRAN-ReportingStatusIEs,
    choice-Extensions           ProtocolIE-SingleContainer { { ResourceStatusReportingSystem-ExtIEs}}
}

ResourceStatusReportingSystem-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

EUTRAN-ReportingStatusIEs::= SEQUENCE {
```

```
    eUTRAN-CellReportList                       EUTRAN-CellReportList,
    iE-Extensions       ProtocolExtensionContainer { {EUTRAN-ReportingStatusIEs-ExtIEs} }   OPTIONAL,
    ...
}

EUTRAN-ReportingStatusIEs-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

EUTRAN-CellReportList ::= SEQUENCE (SIZE(1..maxnoofReportedCells)) OF EUTRAN-CellReportItem

EUTRAN-CellReportItem ::= SEQUENCE {
    eCGI                                        EUTRA-CGI,
    eUTRAN-CompositeAvailableCapacityGroup      EUTRAN-CompositeAvailableCapacityGroup,
    eUTRAN-NumberOfActiveUEs                    EUTRAN-NumberOfActiveUEs                    OPTIONAL,
    eUTRAN-NoofRRCConnections                   NGRAN-NoofRRCConnections                    OPTIONAL,
    eUTRAN-RadioResourceStatus                  EUTRAN-RadioResourceStatus                  OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {EUTRAN-CellReportItem-ExtIEs} }       OPTIONAL,
    ...
}

EUTRAN-CellReportItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}


EUTRAN-CompositeAvailableCapacityGroup  ::= SEQUENCE {
    dL-CompositeAvailableCapacity                   CompositeAvailableCapacity,
    uL-CompositeAvailableCapacity                   CompositeAvailableCapacity,
    iE-Extensions       ProtocolExtensionContainer { { EUTRAN-CompositeAvailableCapacityGroup-ExtIEs} }    OPTIONAL,
    ...
}

EUTRAN-CompositeAvailableCapacityGroup-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

CompositeAvailableCapacity ::= SEQUENCE {
    cellCapacityClassValue      INTEGER (1..100, ...)               OPTIONAL,
    capacityValue               INTEGER (0..100),
    iE-Extensions       ProtocolExtensionContainer { {CompositeAvailableCapacity-ExtIEs} } OPTIONAL,
    ...
}

CompositeAvailableCapacity-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

EUTRAN-NumberOfActiveUEs ::= INTEGER (0..16777215, ...)

EUTRAN-RadioResourceStatus ::= SEQUENCE {
    dL-GBR-PRB-usage                            INTEGER (0..100),
    uL-GBR-PRB-usage                            INTEGER (0..100),
    dL-non-GBR-PRB-usage                        INTEGER (0..100),
```

```
    uL-non-GBR-PRB-usage                        INTEGER (0..100),
    dL-Total-PRB-usage                          INTEGER (0..100),
    uL-Total-PRB-usage                          INTEGER (0..100),
    dL-scheduling-PDCCH-CCE-usage               INTEGER (0..100)    OPTIONAL,
    uL-scheduling-PDCCH-CCE-usage               INTEGER (0..100)    OPTIONAL,
    iE-Extensions                               ProtocolExtensionContainer { {EUTRAN-RadioResourceStatus-ExtIEs} } OPTIONAL,
    ...
}

EUTRAN-RadioResourceStatus-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

NGRAN-ReportingStatusIEs ::= SEQUENCE {
    nGRAN-CellReportList                        NGRAN-CellReportList,
    iE-Extensions       ProtocolExtensionContainer { {NGRAN-ReportingStatusIEs-ExtIEs} }    OPTIONAL,
    ...
}

NGRAN-ReportingStatusIEs-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

NGRAN-CellReportList ::= SEQUENCE (SIZE(1..maxnoofReportedCells)) OF NGRAN-CellReportItem

NGRAN-CellReportItem ::= SEQUENCE {
    nGRAN-CGI                                   NGRAN-CGI,
    nGRAN-CompositeAvailableCapacityGroup       EUTRAN-CompositeAvailableCapacityGroup,
    nGRAN-NumberOfActiveUEs                     NGRAN-NumberOfActiveUEs                     OPTIONAL,
    nGRAN-NoofRRCConnections                    NGRAN-NoofRRCConnections                    OPTIONAL,
    nGRAN-RadioResourceStatus                   NGRAN-RadioResourceStatus                   OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {NGRAN-CellReportItem-ExtIEs} }        OPTIONAL,
    ...
}

NGRAN-CellReportItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}


NGRAN-NumberOfActiveUEs ::= INTEGER (0..16777215, ...)

NGRAN-NoofRRCConnections ::= INTEGER (1..65536, ...)

NGRAN-RadioResourceStatus   ::= SEQUENCE {
    dL-GBR-PRB-usage-for-MIMO               INTEGER (0..100),
    uL-GBR-PRB-usage-for-MIMO               INTEGER (0..100),
    dL-non-GBR-PRB-usage-for-MIMO           INTEGER (0..100),
    uL-non-GBR-PRB-usage-for-MIMO           INTEGER (0..100),
    dL-Total-PRB-usage-for-MIMO             INTEGER (0..100),
    uL-Total-PRB-usage-for-MIMO             INTEGER (0..100),
    iE-Extensions                           ProtocolExtensionContainer { { NGRAN-RadioResourceStatus-ExtIEs} }   OPTIONAL,
    ...
}
```

```
NGRAN-RadioResourceStatus-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

InterSystemHOReport ::= SEQUENCE {
    handoverReportType      InterSystemHandoverReportType,
    iE-Extensions           ProtocolExtensionContainer { { InterSystemHOReport-ExtIEs} }         OPTIONAL,
    ...
}

InterSystemHOReport-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

InterSystemHandoverReportType ::= CHOICE {
    tooearlyIntersystemHO               TooearlyIntersystemHO,
    intersystemUnnecessaryHO            IntersystemUnnecessaryHO,
    choice-Extensions       ProtocolIE-SingleContainer { { InterSystemHandoverReportType-ExtIEs} }
}

InterSystemHandoverReportType-ExtIEs NGAP-PROTOCOL-IES ::= {
    { ID id-IntersystemMobilityFailureforVoiceFallback  CRITICALITY ignore  TYPE  IntersystemMobilityFailureforVoiceFallback   PRESENCE mandatory
},
    ...
}

IntersystemMobilityFailureforVoiceFallback ::= SEQUENCE {
    sourcecellID                NGRAN-CGI,
    targetcellID                EUTRA-CGI,
    reconnectCellID         EUTRA-CGI                       OPTIONAL,
    uERLFReportContainer        UERLFReportContainer                OPTIONAL,
    iE-Extensions           ProtocolExtensionContainer { { IntersystemMobilityFailureforVoiceFallback-ExtIEs} }       OPTIONAL,
    ...
}

IntersystemMobilityFailureforVoiceFallback-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

IntersystemUnnecessaryHO ::= SEQUENCE {
    sourcecellID            NGRAN-CGI,
    targetcellID            EUTRA-CGI,
    earlyIRATHO             ENUMERATED {true, false, ...},
    candidateCellList       CandidateCellList,
    iE-Extensions           ProtocolExtensionContainer { { IntersystemUnnecessaryHO-ExtIEs} }       OPTIONAL,
    ...
}

IntersystemUnnecessaryHO-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

InventoryRequestTransfer ::= SEQUENCE {
```

```
    protocolIEs     ProtocolIE-Container        { { InventoryRequestTransferIEs} },
    ...
}

InventoryRequestTransferIEs NGAP-PROTOCOL-IES ::= {
    { ID id-AIoT-CorrelationIdentifier              CRITICALITY reject  TYPE AIoT-CorrelationIdentifier                PRESENCE mandatory   }|
    { ID id-AIoT-DeviceIdentificationRequested      CRITICALITY reject  TYPE AIoT-DeviceIdentificationRequested        PRESENCE mandatory   }|
    { ID id-AIoT-RequestedServiceAreaInformation    CRITICALITY reject  TYPE AIoT-RequestedServiceAreaInformation      PRESENCE mandatory   }|
    { ID id-AIoT-InventoryAssistanceInformation     CRITICALITY reject  TYPE AIoT-InventoryAssistanceInformation       PRESENCE mandatory   }|
    { ID id-AIoT-FollowonCommandIndication          CRITICALITY reject  TYPE AIoT-FollowonCommandIndication           PRESENCE optional    }|
    { ID id-AIoT-SecurityInfo                       CRITICALITY reject  TYPE AIoT-SecurityInfo                        PRESENCE mandatory   },
    ...
}

InventoryResponseTransfer ::= SEQUENCE {
    correlationIdentifier       AIoT-CorrelationIdentifier,
    criticalityDiagnostics      CriticalityDiagnostics                                          OPTIONAL,
    iE-Extensions               ProtocolExtensionContainer { { InventoryResponseTransfer-ExtIEs} }   OPTIONAL,
    ...
}

InventoryResponseTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

InventoryFailureTransfer ::= SEQUENCE {
    correlationIdentifier       AIoT-CorrelationIdentifier,
    cause                       Cause,
    criticalityDiagnostics      CriticalityDiagnostics                                          OPTIONAL,
    iE-Extensions               ProtocolExtensionContainer { { InventoryFailureTransfer-ExtIEs} }   OPTIONAL,
    ...
}

InventoryFailureTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

InventoryReportTransfer ::= SEQUENCE {
    correlationIdentifier           AIoT-CorrelationIdentifier,
    globalgNB-ID                    GlobalGNB-ID,
    readerReportList                AIoT-ReaderReportList                                       OPTIONAL,
    inventoryCompleteIndication     ENUMERATED {true, ...}                                      OPTIONAL,
    iE-Extensions                   ProtocolExtensionContainer { { InventoryReportTransfer-ExtIEs} }   OPTIONAL,
    ...
}

InventoryReportTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

-- J
-- K
-- L
```

```
LAC ::= OCTET STRING (SIZE (2))

LAI ::= SEQUENCE {
    pLMNidentity        PLMNIdentity,
    lAC                 LAC,
    iE-Extensions       ProtocolExtensionContainer { {LAI-ExtIEs} } OPTIONAL,
    ...
}

LAI-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

LastVisitedCellInformation ::= CHOICE {
    nGRANCell       LastVisitedNGRANCellInformation,
    eUTRANCell      LastVisitedEUTRANCellInformation,
    uTRANCell       LastVisitedUTRANCellInformation,
    gERANCell       LastVisitedGERANCellInformation,
    choice-Extensions       ProtocolIE-SingleContainer { {LastVisitedCellInformation-ExtIEs} }
}

LastVisitedCellInformation-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

LastVisitedCellItem ::= SEQUENCE {
    lastVisitedCellInformation      LastVisitedCellInformation,
    iE-Extensions       ProtocolExtensionContainer { {LastVisitedCellItem-ExtIEs} } OPTIONAL,
    ...
}

LastVisitedCellItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

LastVisitedEUTRANCellInformation ::= OCTET STRING

LastVisitedGERANCellInformation ::= OCTET STRING

LastVisitedNGRANCellInformation::= SEQUENCE {
    globalCellID                                NGRAN-CGI,
    cellType                                    CellType,
    timeUEStayedInCell                          TimeUEStayedInCell,
    timeUEStayedInCellEnhancedGranularity       TimeUEStayedInCellEnhancedGranularity           OPTIONAL,
    hOCauseValue                                Cause                                           OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {LastVisitedNGRANCellInformation-ExtIEs} } OPTIONAL,
    ...
}

LastVisitedNGRANCellInformation-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-LastVisitedPSCellList   CRITICALITY ignore  EXTENSION LastVisitedPSCellList PRESENCE optional },
    ...
}
```

```
LastVisitedPSCellList ::= SEQUENCE (SIZE(1..maxnoofPSCellsPerPrimaryCellinUEHistoryInfo)) OF LastVisitedPSCellInformation

LastVisitedPSCellInformation ::= SEQUENCE {
    pSCellID            NGRAN-CGI               OPTIONAL,
    timeStay            INTEGER (0..40950),
    iE-Extensions       ProtocolExtensionContainer { {LastVisitedPSCellInformation-ExtIEs} }    OPTIONAL,
    ...
}

LastVisitedPSCellInformation-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-SCGActivationTime   CRITICALITY ignore  EXTENSION SCGActivationTime PRESENCE optional },
    ...
}

LastVisitedUTRANCellInformation ::= OCTET STRING

LineType ::= ENUMERATED {
    dsl,
    pon,
    ...
}


LocationReportingAdditionalInfo ::= ENUMERATED {
    includePSCell,
    ...
}

LocationReportingReferenceID ::= INTEGER (1..64, ...)

LocationReportingRequestType ::= SEQUENCE {
    eventType                                   EventType,
    reportArea                                  ReportArea,
    areaOfInterestList                          AreaOfInterestList                          OPTIONAL,
    locationReportingReferenceIDToBeCancelled       LocationReportingReferenceID                OPTIONAL,
-- The above IE shall be present if the Event Type IE is set to the value “stop UE presence in the area of interest”
    iE-Extensions       ProtocolExtensionContainer { {LocationReportingRequestType-ExtIEs} }     OPTIONAL,
    ...
}

LocationReportingRequestType-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-LocationReportingAdditionalInfo CRITICALITY ignore  EXTENSION LocationReportingAdditionalInfo    PRESENCE optional }|
    { ID id-AdditionalCancelledlocationReportingReferenceIDList CRITICALITY reject  EXTENSION AdditionalCancelledlocationReportingReferenceIDList
PRESENCE optional }|
    { ID id-Aerial-UE-FlightInformationReportingControlList CRITICALITY ignore   EXTENSION Aerial-UE-FlightInformationReportingControlList PRESENCE
optional},
    ...
}


Aerial-UE-FlightInformationReportingControl ::= SEQUENCE {
    higher-Altitude-Threshold               Altitude,
    lower-Altitude-Threshold                Altitude,
    aerial-UE-report-periodicity                        AerialUEReportingPeriodicity            OPTIONAL,
```

```
    areaID                                  Area-ID,
    iE-Extensions       ProtocolExtensionContainer { {Aerial-UE-FlightInformationReportingControl-ExtIEs}} OPTIONAL,
    ...
}

Aerial-UE-FlightInformationReportingControl-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

Aerial-UE-FlightInformationReportingControlList::= SEQUENCE (SIZE(1.. maxnoofFlightInfoReportControl)) OF Aerial-UE-
FlightInformationReportingControlItem

Aerial-UE-FlightInformationReportingControlItem ::= SEQUENCE {
    aerial-UE-FlightInformationReportingControl     Aerial-UE-FlightInformationReportingControl,
    iE-Extensions       ProtocolExtensionContainer { {Aerial-UE-FlightInformationReportingControlItem-ExtIEs}} OPTIONAL,
    ...
}


Aerial-UE-FlightInformationReportingControlItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}


Area-ID ::= CHOICE {
    tAI             TAI,
    globalRANNodeID         GlobalRANNodeID,
    nR-CGI          NR-CGI,
    choice-Extensions       ProtocolIE-SingleContainer { {Area-ID-ExtIEs} }
}

Area-ID-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}


LoggedMDTNr ::= SEQUENCE {
    loggingInterval                     LoggingInterval,
    loggingDuration                     LoggingDuration,
    loggedMDTTrigger                    LoggedMDTTrigger,
    bluetoothMeasurementConfiguration   BluetoothMeasurementConfiguration   OPTIONAL,
    wLANMeasurementConfiguration        WLANMeasurementConfiguration        OPTIONAL,
    sensorMeasurementConfiguration      SensorMeasurementConfiguration      OPTIONAL,
    areaScopeOfNeighCellsList           AreaScopeOfNeighCellsList           OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {LoggedMDTNr-ExtIEs} } OPTIONAL,
    ...
}

LoggedMDTNr-ExtIEs  NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-EarlyMeasurement        CRITICALITY ignore  EXTENSION EarlyMeasurement      PRESENCE optional },
    ...
}

LoggingInterval ::= ENUMERATED {
```

```
    ms320, ms640, ms1280, ms2560, ms5120, ms10240, ms20480, ms30720, ms40960, ms61440,
    infinity,
    ...
}

LoggingDuration ::= ENUMERATED {m10, m20, m40, m60, m90, m120, ...}

Links-to-log ::= ENUMERATED {
    uplink,
    downlink,
    both-uplink-and-downlink,
    ...
}

LoggedMDTTrigger ::= CHOICE{
    periodical          NULL,
    eventTrigger            EventTrigger,
    choice-Extensions       ProtocolIE-SingleContainer { {LoggedMDTTrigger-ExtIEs} }
}

LoggedMDTTrigger-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

LPWUSPSAssistanceInformation ::= SEQUENCE {
    lPWUScNsubgroupID           LPWUSCNsubgroupID,
    iE-Extensions       ProtocolExtensionContainer { {LPWUSPSAssistanceInformation-ExtIEs} } OPTIONAL,
    ...
}

LPWUSPSAssistanceInformation-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

LPWUSCNsubgroupID ::= INTEGER (0..30, ...)

LPWUSDisableIndication ::= ENUMERATED {true, ...}

LTEM-Indication ::= ENUMERATED {lte-m,...}

LTEUERLFReportContainer ::= OCTET STRING

LTEV2XServicesAuthorized ::= SEQUENCE {
    vehicleUE           VehicleUE                                                   OPTIONAL,
    pedestrianUE        PedestrianUE                                                OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {LTEV2XServicesAuthorized-ExtIEs} }    OPTIONAL,
    ...
}

LTEV2XServicesAuthorized-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

LTEUESidelinkAggregateMaximumBitrate ::= SEQUENCE {
```

```
    uESidelinkAggregateMaximumBitRate       BitRate,
    iE-Extensions       ProtocolExtensionContainer { {LTEUE-Sidelink-Aggregate-MaximumBitrates-ExtIEs} } OPTIONAL,
    ...
}

LTEUE-Sidelink-Aggregate-MaximumBitrates-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

LTE-A2X-ServicesAuthorized ::= SEQUENCE {
    aerialUE                            ENUMERATED {authorized, not-authorized, ...}        OPTIONAL,
    aerialControllerUE                  ENUMERATED {authorized, not-authorized, ...}        OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {LTE-A2X-ServicesAuthorized-ExtIEs} }      OPTIONAL,
    ...
}

LTE-A2X-ServicesAuthorized-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

-- M

MaskedIMEISV ::= BIT STRING (SIZE(64))

MaximumDataBurstVolume ::= INTEGER (0..4095, ..., 4096.. 2000000)

MessageIdentifier ::= BIT STRING (SIZE(16))

MaximumIntegrityProtectedDataRate ::= ENUMERATED {
    bitrate64kbs,
    maximum-UE-rate,
    ...
}


MBS-AreaSessionID ::= INTEGER (0..65535, ...)

CommServiceType ::= ENUMERATED {mbs-broadcast, mbs-multicast, ..., unicast}

MBS-DataForwardingResponseMRBList ::= SEQUENCE (SIZE(1..maxnoofMRBs)) OF MBS-DataForwardingResponseMRBItem

MBS-DataForwardingResponseMRBItem ::= SEQUENCE {
    mRB-ID                              MRB-ID,
    dL-Forwarding-UPTNLInformation      UPTransportLayerInformation,
    mRB-ProgressInformation             MRB-ProgressInformation         OPTIONAL,
    iE-Extensions                       ProtocolExtensionContainer { { MBS-DataForwardingResponseMRBItem-ExtIEs} }  OPTIONAL,
    ...
}

MBS-DataForwardingResponseMRBItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

MBS-MappingandDataForwardingRequestList ::= SEQUENCE (SIZE(1..maxnoofMRBs)) OF MBS-MappingandDataForwardingRequestItem
```

```
MBS-MappingandDataForwardingRequestItem ::= SEQUENCE {
    mRB-ID                          MRB-ID,
    mBS-QoSFlowList                 MBS-QoSFlowList,
    mRB-ProgressInformation         MRB-ProgressInformation         OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { MBS-MappingandDataForwardingRequestItem-ExtIEs} }   OPTIONAL,
    ...
}

MBS-MappingandDataForwardingRequestItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

MBS-QoSFlowList ::= SEQUENCE (SIZE(1..maxnoofMBSQoSFlows)) OF QosFlowIdentifier

MRB-ProgressInformation ::= CHOICE {
    pDCP-SN-Length12                INTEGER (0..4095),
    pDCP-SN-Length18                INTEGER (0..262143),
    choice-Extensions       ProtocolIE-SingleContainer { { MRB-ProgressInformation-ExtIEs} }
}

MRB-ProgressInformation-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

MBS-QoSFlowsToBeSetupList ::= SEQUENCE (SIZE(1.. maxnoofMBSQoSFlows)) OF MBS-QoSFlowsToBeSetupItem

MBS-QoSFlowsToBeSetupItem ::= SEQUENCE {
    mBSqosFlowIdentifier            QosFlowIdentifier,
    mBSqosFlowLevelQosParameters    QosFlowLevelQosParameters,
    iE-Extensions                   ProtocolExtensionContainer { {MBS-QoSFlowsToBeSetupItem-ExtIEs} }  OPTIONAL,
    ...
}

MBS-QoSFlowsToBeSetupItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}


MBS-ServiceArea ::= CHOICE {
    locationindependent     MBS-ServiceAreaInformation,
    locationdependent       MBS-ServiceAreaInformationList,
    choice-Extensions       ProtocolIE-SingleContainer { {MBS-ServiceArea-ExtIEs} }
}

MBS-ServiceArea-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

MBS-ServiceAreaInformationList ::= SEQUENCE (SIZE(1..maxnoofMBSServiceAreaInformation)) OF MBS-ServiceAreaInformationItem


MBS-ServiceAreaInformationItem ::= SEQUENCE {
    mBS-AreaSessionID               MBS-AreaSessionID,
```

```
    mBS-ServiceAreaInformation      MBS-ServiceAreaInformation,
    iE-Extensions                   ProtocolExtensionContainer { {MBS-ServiceAreaInformationItem-ExtIEs} } OPTIONAL,
    ...
}

MBS-ServiceAreaInformationItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

MBS-ServiceAreaInformation ::= SEQUENCE {
   mBS-ServiceAreaCellList    MBS-ServiceAreaCellList                                          OPTIONAL,
   mBS-ServiceAreaTAIList     MBS-ServiceAreaTAIList                                           OPTIONAL,
   iE-Extensions              ProtocolExtensionContainer { {MBS-ServiceAreaInformation-ExtIEs} }  OPTIONAL,
   ...
}

MBS-ServiceAreaInformation-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
   { ID id-MBS-IntendedServiceAreaList   CRITICALITY ignore   EXTENSION MBS-IntendedServiceAreaList  PRESENCE optional },
   ...
}

MBS-ServiceAreaCellList ::= SEQUENCE (SIZE(1.. maxnoofCellsforMBS)) OF NR-CGI

MBS-ServiceAreaTAIList ::= SEQUENCE (SIZE(1.. maxnoofTAIforMBS)) OF TAI

MBS-IntendedServiceAreaList ::= SEQUENCE (SIZE(1..maxnoofIntendedAreasforMBS)) OF IntendedServiceAreaCoordinates

IntendedServiceAreaCoordinates ::= OCTET STRING

MBS-SessionID ::= SEQUENCE {
   tMGI                       TMGI,
   nID                        NID                                                    OPTIONAL,
   iE-Extensions              ProtocolExtensionContainer { {MBS-SessionID-ExtIEs} }  OPTIONAL,
   ...
}

MBS-SessionID-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
   ...
}

MBSSessionFailedtoSetupList ::= SEQUENCE (SIZE(1.. maxnoofMBSSessions)) OF MBSSessionFailedtoSetupItem

MBSSessionFailedtoSetupItem ::= SEQUENCE {
    mBS-SessionID           MBS-SessionID,
    mBS-AreaSessionID       MBS-AreaSessionID                                                  OPTIONAL,
    cause                   Cause,
    iE-Extensions           ProtocolExtensionContainer { { MBSSessionFailedtoSetupItem-ExtIEs} }    OPTIONAL,
    ...
}

MBSSessionFailedtoSetupItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}
```

```
MBS-ActiveSessionInformation-SourcetoTargetList ::= SEQUENCE (SIZE(1..maxnoofMBSSessionsofUE)) OF MBS-ActiveSessionInformation-SourcetoTargetItem

MBS-ActiveSessionInformation-SourcetoTargetItem ::= SEQUENCE {
    mBS-SessionID                           MBS-SessionID,
    mBS-AreaSessionID                       MBS-AreaSessionID                       OPTIONAL,
    mBS-ServiceArea                         MBS-ServiceArea                         OPTIONAL,
    mBS-QoSFlowsToBeSetupList               MBS-QoSFlowsToBeSetupList,
    mBS-MappingandDataForwardingRequestList MBS-MappingandDataForwardingRequestList OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { MBS-ActiveSessionInformation-SourcetoTargetItem-ExtIEs} } OPTIONAL,
    ...
}

MBS-ActiveSessionInformation-SourcetoTargetItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

MBS-ActiveSessionInformation-TargettoSourceList ::= SEQUENCE (SIZE(1..maxnoofMBSSessionsofUE)) OF MBS-ActiveSessionInformation-TargettoSourceItem

MBS-ActiveSessionInformation-TargettoSourceItem ::= SEQUENCE {
    mBS-SessionID                   MBS-SessionID,
    mBS-DataForwardingResponseMRBList   MBS-DataForwardingResponseMRBList                                   OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { MBS-ActiveSessionInformation-TargettoSourceItem-ExtIEs} }   OPTIONAL,
    ...
}

MBS-ActiveSessionInformation-TargettoSourceItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

MBS-AssistanceInformation ::= ENUMERATED {true, ...}

MBSSessionSetupOrModFailureTransfer ::= SEQUENCE {
    cause                   Cause,
    criticalityDiagnostics      CriticalityDiagnostics      OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { MBSSessionSetupOrModFailureTransfer-ExtIEs} } OPTIONAL,
    ...
}

MBSSessionSetupOrModFailureTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

MBSSessionSetupResponseList ::= SEQUENCE (SIZE(1.. maxnoofMBSSessions)) OF MBSSessionSetupResponseItem

MBSSessionSetupResponseItem ::= SEQUENCE {
    mBS-SessionID           MBS-SessionID,
    mBS-AreaSessionID       MBS-AreaSessionID                                       OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { MBSSessionSetupResponseItem-ExtIEs} }    OPTIONAL,
    ...
}

MBSSessionSetupResponseItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}
```

```
MBSSessionSetupOrModRequestTransfer ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {MBSSessionSetupOrModRequestTransferIEs} },
    ...
}

MBSSessionSetupOrModRequestTransferIEs NGAP-PROTOCOL-IES ::= {
    { ID id-MBS-SessionTNLInfo5GC               CRITICALITY reject  TYPE MBS-SessionTNLInfo5GC          PRESENCE optional    }|
    { ID id-MBS-QoSFlowsToBeSetupModList        CRITICALITY reject  TYPE MBS-QoSFlowsToBeSetupList      PRESENCE mandatory   }|
    { ID id-MBS-SessionFSAIDList                CRITICALITY ignore  TYPE MBS-SessionFSAIDList           PRESENCE optional    }|
    { ID id-SupportedUETypeList                 CRITICALITY ignore  TYPE SupportedUETypeList            PRESENCE optional    }|
    { ID id-MBS-NGUFailureIndication            CRITICALITY reject  TYPE MBS-NGUFailureIndication       PRESENCE optional    },
    ...
}
SupportedUETypeList ::= SEQUENCE (SIZE(1.. maxnoofUETypes)) OF SupportedUEType

SupportedUEType ::= ENUMERATED {non-RedCap-eRedCap-UE, redCap-eRedCap-UE, ...}

MBS-SessionFSAIDList ::= SEQUENCE (SIZE(1.. maxnoofMBSFSAs)) OF MBS-SessionFSAID

MBS-SessionFSAID ::= OCTET STRING (SIZE(3))

MBSSessionReleaseResponseTransfer ::= SEQUENCE {
    mBS-SessionTNLInfoNGRAN     MBS-SessionTNLInfoNGRAN             OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {MBSSessionReleaseResponseTransfer-ExtIEs} } OPTIONAL,
    ...
}

MBSSessionReleaseResponseTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

MBSSessionSetupOrModResponseTransfer ::= SEQUENCE {
    mBS-SessionTNLInfoNGRAN     MBS-SessionTNLInfoNGRAN                                             OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {MBSSessionSetupOrModResponseTransfer-ExtIEs} }    OPTIONAL,
    ...
}

MBSSessionSetupOrModResponseTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

MBS-SupportIndicator ::= ENUMERATED {
    multicast-supported,
    ...,
    multicast-supported-with-reception-in-RRC-inactive
}

MBS-SessionTNLInfo5GC ::= CHOICE {
    locationindependent         SharedNGU-MulticastTNLInformation,
    locationdependent           MBS-SessionTNLInfo5GCList,
    choice-Extensions       ProtocolIE-SingleContainer { {MBS-SessionTNLInfo5GC-ExtIEs} }
}
```

```
MBS-SessionTNLInfo5GC-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

MBS-SessionTNLInfo5GCList ::= SEQUENCE (SIZE(1..maxnoofMBSServiceAreaInformation)) OF MBS-SessionTNLInfo5GCItem

MBS-SessionTNLInfo5GCItem ::= SEQUENCE {
    mBS-AreaSessionID                       MBS-AreaSessionID,
    sharedNGU-MulticastTNLInformation       SharedNGU-MulticastTNLInformation,
    iE-Extensions       ProtocolExtensionContainer { {MBS-SessionTNLInfo5GCItem-ExtIEs} }   OPTIONAL,
    ...
}

MBS-SessionTNLInfo5GCItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

MBS-SessionTNLInfoNGRAN ::= CHOICE {
    locationindependent         UPTransportLayerInformation,
    locationdependent           MBS-SessionTNLInfoNGRANList,
    choice-Extensions       ProtocolIE-SingleContainer { {MBS-SessionTNLInfoNGRAN-ExtIEs} }
}

MBS-SessionTNLInfoNGRAN-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

MBS-SessionTNLInfoNGRANList ::= SEQUENCE (SIZE(1..maxnoofMBSServiceAreaInformation)) OF MBS-SessionTNLInfoNGRANItem

MBS-SessionTNLInfoNGRANItem ::= SEQUENCE {
    mBS-AreaSessionID                   MBS-AreaSessionID,
    sharedNGU-UnicastTNLInformation     UPTransportLayerInformation                             OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {MBS-SessionTNLInfoNGRANItem-ExtIEs} }     OPTIONAL,
    ...
}

MBS-SessionTNLInfoNGRANItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

MBS-DistributionReleaseRequestTransfer ::= SEQUENCE {
    mBS-SessionID                       MBS-SessionID,
    mBS-AreaSessionID                   MBS-AreaSessionID                                       OPTIONAL,
    sharedNGU-UnicastTNLInformation     UPTransportLayerInformation                             OPTIONAL,
    cause                               Cause,
    iE-Extensions       ProtocolExtensionContainer { { MBS-DistributionReleaseRequesTransfer-ExtIEs} }  OPTIONAL,
    ...
}

MBS-DistributionReleaseRequesTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

MBS-DistributionSetupRequestTransfer ::= SEQUENCE {
```

```
    mBS-SessionID                       MBS-SessionID,
    mBS-AreaSessionID                   MBS-AreaSessionID                                       OPTIONAL,
    sharedNGU-UnicastTNLInformation     UPTransportLayerInformation                             OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { MBS-DistributionSetupRequestTransfer-ExtIEs} }  OPTIONAL,
    ...
}

MBS-DistributionSetupRequestTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
{ ID id-TAIMBSSupportList       CRITICALITY ignore  EXTENSION TAIMBSSupportList     PRESENCE optional  },
    ...
}

MBS-DistributionSetupResponseTransfer ::= SEQUENCE {
    mBS-SessionID                           MBS-SessionID,
    mBS-AreaSessionID                       MBS-AreaSessionID                       OPTIONAL,
    sharedNGU-MulticastTNLInformation       SharedNGU-MulticastTNLInformation       OPTIONAL,
    mBS-QoSFlowsToBeSetupList               MBS-QoSFlowsToBeSetupList,
    mBSSessionStatus                        MBSSessionStatus,
    mBS-ServiceArea                         MBS-ServiceArea                         OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {MBS-DistributionSetupResponseTransfer-ExtIEs} }  OPTIONAL,
    ...
}

MBS-DistributionSetupResponseTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}


MBS-DistributionSetupUnsuccessfulTransfer ::= SEQUENCE {
    mBS-SessionID               MBS-SessionID,
    mBS-AreaSessionID           MBS-AreaSessionID                                               OPTIONAL,
    cause                       Cause,
    criticalityDiagnostics      CriticalityDiagnostics                                          OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { MBS-DistributionSetupUnsuccessfulTransfer-ExtIEs} }  OPTIONAL,
    ...
}

MBS-DistributionSetupUnsuccessfulTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

MBS-NGUFailureIndication ::= CHOICE {
    locationindependent         MBS-UP-FailureIndication,
    locationdependent           MBS-UP-FailureIndicationList,
    choice-Extensions       ProtocolIE-SingleContainer { {MBS-NGUFailureIndication-ExtIEs} }
}

MBS-NGUFailureIndication-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

MBS-UP-FailureIndicationList ::= SEQUENCE (SIZE(1..maxnoofMBSServiceAreaInformation)) OF MBS-UP-FailureIndicationItem

MBS-UP-FailureIndicationItem ::= SEQUENCE {
```

```
    mBS-AreaSessionID                   MBS-AreaSessionID,
    mBS-UP-FailureIndication            MBS-UP-FailureIndication,
    iE-Extensions       ProtocolExtensionContainer { {MBS-UP-FailureIndicationItem-ExtIEs} }    OPTIONAL,
    ...
}

MBS-UP-FailureIndicationItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

MBS-UP-FailureIndication ::= ENUMERATED {ng-u-path-failure-detected, ...}

MBSSessionSetupRequestList ::= SEQUENCE (SIZE(1..maxnoofMBSSessions)) OF MBSSessionSetupRequestItem

MBSSessionSetupRequestItem ::= SEQUENCE {
    mBS-SessionID                               MBS-SessionID,
    mBS-AreaSessionID                           MBS-AreaSessionID                                                   OPTIONAL,
    associatedMBSQosFlowSetupRequestList        AssociatedMBSQosFlowSetupRequestList                                OPTIONAL,
    iE-Extensions                               ProtocolExtensionContainer { { MBSSessionSetupRequestItem-ExtIEs} }     OPTIONAL,
    ...
}

MBSSessionSetupRequestItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-MBS-AssistanceInformation           CRITICALITY ignore  EXTENSION MBS-AssistanceInformation    PRESENCE optional    },
    ...
}

MBSSessionSetuporModifyRequestList ::= SEQUENCE (SIZE(1..maxnoofMBSSessions)) OF MBSSessionSetuporModifyRequestItem

MBSSessionSetuporModifyRequestItem ::= SEQUENCE {
    mBS-SessionID                                   MBS-SessionID,
    mBS-AreaSessionID                               MBS-AreaSessionID                               OPTIONAL,
    associatedMBSQosFlowSetuporModifyRequestList    AssociatedMBSQosFlowSetuporModifyRequestList    OPTIONAL,
    mBS-QosFlowToReleaseList                        QosFlowListWithCause                            OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer {{MBSSessionSetuporModifyRequestItem-ExtIEs}}    OPTIONAL,
    ...
}

MBSSessionSetuporModifyRequestItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-MBS-AssistanceInformation           CRITICALITY ignore  EXTENSION MBS-AssistanceInformation    PRESENCE optional    },
    ...
}


MBSSessionToReleaseList ::= SEQUENCE (SIZE(1..maxnoofMBSSessions)) OF MBSSessionToReleaseItem

MBSSessionToReleaseItem ::= SEQUENCE {
    mBS-SessionID       MBS-SessionID,
    cause               Cause,
    iE-Extensions       ProtocolExtensionContainer { { MBSSessionToReleaseItem-ExtIEs} }    OPTIONAL,
    ...
}

MBSSessionToReleaseItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
```

```
    ...
}

MBSSessionStatus ::= ENUMERATED {
    activated,
    deactivated,
    ...
}

MicoAllPLMN ::= ENUMERATED {
    true,
    ...
}


MICOModeIndication ::= ENUMERATED {
    true,
    ...
}

MobilityInformation ::= BIT STRING (SIZE(16))

ExtendedMobilityInformation ::= BIT STRING (SIZE(32))

MobilityRestrictionList ::= SEQUENCE {
    servingPLMN                 PLMNIdentity,
    equivalentPLMNs             EquivalentPLMNs                                     OPTIONAL,
    rATRestrictions             RATRestrictions                                     OPTIONAL,
    forbiddenAreaInformation    ForbiddenAreaInformation                            OPTIONAL,
    serviceAreaInformation      ServiceAreaInformation                              OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {MobilityRestrictionList-ExtIEs} } OPTIONAL,
    ...
}

MobilityRestrictionList-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-LastEUTRAN-PLMNIdentity             CRITICALITY ignore  EXTENSION PLMNIdentity                      PRESENCE optional    }|
    { ID id-CNTypeRestrictionsForServing        CRITICALITY ignore  EXTENSION CNTypeRestrictionsForServing      PRESENCE optional    }|
    { ID id-CNTypeRestrictionsForEquivalent     CRITICALITY ignore  EXTENSION CNTypeRestrictionsForEquivalent   PRESENCE optional    }|
    { ID id-NPN-MobilityInformation             CRITICALITY reject  EXTENSION NPN-MobilityInformation           PRESENCE optional    },
    ...
}

MDT-AlignmentInfo ::= CHOICE {
    s-basedMDT              NGRANTraceID,
    choice-Extensions       ProtocolIE-SingleContainer { { MDT-AlignmentInfo-ExtIEs} }
}

MDT-AlignmentInfo-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

MDTPLMNList ::= SEQUENCE (SIZE(1..maxnoofMDTPLMNs)) OF PLMNIdentity

MDTPLMNModificationList ::= SEQUENCE (SIZE(0..maxnoofMDTPLMNs)) OF PLMNIdentity
```

```
MDT-Configuration ::= SEQUENCE {
    mdt-Config-NR       MDT-Configuration-NR        OPTIONAL,
    mdt-Config-EUTRA    MDT-Configuration-EUTRA     OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { MDT-Configuration-ExtIEs} } OPTIONAL,
    ...
}

MDT-Configuration-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-MN-only-MDT-collection      CRITICALITY ignore  EXTENSION MN-only-MDT-collection     PRESENCE optional    },
    ...
}

MN-only-MDT-collection ::= ENUMERATED {mn-only, ...}

MDT-Configuration-NR ::= SEQUENCE {
    mdt-Activation              MDT-Activation,
    areaScopeOfMDT              AreaScopeOfMDT-NR,
    mDTModeNr                   MDTModeNr,
    signallingBasedMDTPLMNList  MDTPLMNList                                         OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { MDT-Configuration-NR-ExtIEs} }   OPTIONAL,
    ...
}

MDT-Configuration-NR-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-PNI-NPN-AreaScopeofMDT      CRITICALITY ignore  EXTENSION PNI-NPN-AreaScopeofMDT     PRESENCE optional    }|
    { ID id-NetworkSliceAreaScopeofMDT  CRITICALITY ignore  EXTENSION NetworkSliceAreaScopeofMDT  PRESENCE optional },
    ...
}

MDT-Configuration-EUTRA ::= SEQUENCE {
    mdt-Activation              MDT-Activation,
    areaScopeOfMDT              AreaScopeOfMDT-EUTRA,
    mDTMode                     MDTModeEutra,
    signallingBasedMDTPLMNList  MDTPLMNList                                             OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { MDT-Configuration-EUTRA-ExtIEs} }    OPTIONAL,
    ...
}

MDT-Configuration-EUTRA-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

MDT-Activation  ::= ENUMERATED {
    immediate-MDT-only,
    logged-MDT-only,
    immediate-MDT-and-Trace,
    ...
}

MDTModeNr ::= CHOICE {
    immediateMDTNr              ImmediateMDTNr,
    loggedMDTNr                 LoggedMDTNr,
    choice-Extensions       ProtocolIE-SingleContainer { {MDTModeNr-ExtIEs} }
```

```
}

MDTModeNr-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

MDTModeEutra ::= OCTET STRING

MeasurementsToActivate ::= BIT STRING(SIZE(8))

MobileIAB-Authorized ::= ENUMERATED {
    authorized,
    not-authorized,
    ...
}

MobileIABNodeIndication ::= ENUMERATED {
    true,
    ...
}

MobileIAB-Supported ::= ENUMERATED {
    true,
    ...
}

MonitoringRequestonAvailableBitrate ::= SEQUENCE {
    monitoringRequest                       MonitoringRequest,
    dlAvailableBitrateReportThresholds      AvailableBitrateReportThresholdList         OPTIONAL,
-- The above IE shall be present if the Monitoring Request IE is set to the value “dl” or “both”
    ulAvailableBitrateReportThresholds      AvailableBitrateReportThresholdList         OPTIONAL,
-- The above IE shall be present if the Monitoring Request IE is set to the value “ul” or “both”
    iE-Extensions                           ProtocolExtensionContainer { { MonitoringRequestonAvailableBitrate-ExtIEs} } OPTIONAL,
    ...
}

MonitoringRequestonAvailableBitrate-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

MonitoringRequest ::= ENUMERATED {ul, dl, both, stop,...}

MRB-ID ::= INTEGER (1..512, ...)

MulticastSessionActivationRequestTransfer ::= SEQUENCE {
    mBS-SessionID               MBS-SessionID,
    iE-Extensions               ProtocolExtensionContainer { { MulticastSessionActivationRequestTransfer-ExtIEs} } OPTIONAL,
    ...
}

MulticastSessionActivationRequestTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}
```

```
MulticastSessionDeactivationRequestTransfer ::= SEQUENCE {
    mBS-SessionID               MBS-SessionID,
    iE-Extensions               ProtocolExtensionContainer { { MulticastSessionDeactivationRequestTransfer-ExtIEs} }  OPTIONAL,
    ...
}

MulticastSessionDeactivationRequestTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

MulticastSessionUpdateRequestTransfer ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {MulticastSessionUpdateRequestTransferIEs} },
   ...
}

MulticastSessionUpdateRequestTransferIEs NGAP-PROTOCOL-IES ::= {
    { ID id-MBS-SessionID                       CRITICALITY reject  TYPE MBS-SessionID                PRESENCE mandatory   }|
    { ID id-MBS-ServiceArea                     CRITICALITY reject  TYPE MBS-ServiceArea              PRESENCE optional    }|
    { ID id-MBS-QoSFlowsToBeSetupModList        CRITICALITY reject  TYPE MBS-QoSFlowsToBeSetupList    PRESENCE optional    }|
    { ID id-MBS-QoSFlowToReleaseList            CRITICALITY reject  TYPE QosFlowListWithCause         PRESENCE optional    }|
    { ID id-MBS-SessionTNLInfo5GC               CRITICALITY reject  TYPE MBS-SessionTNLInfo5GC        PRESENCE optional    }|
    { ID id-MBS-UP-FailureIndication            CRITICALITY reject  TYPE MBS-UP-FailureIndication     PRESENCE optional    },
    ...
}


MulticastGroupPagingAreaList ::= SEQUENCE (SIZE(1..maxnoofPagingAreas)) OF MulticastGroupPagingAreaItem

MulticastGroupPagingAreaItem ::= SEQUENCE {
    multicastGroupPagingArea        MulticastGroupPagingArea,
    uE-PagingList                   UE-PagingList                                           OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { MulticastGroupPagingAreaItem-ExtIEs} }   OPTIONAL,
    ...
}

MulticastGroupPagingAreaItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

MBS-AreaTAIList ::= SEQUENCE (SIZE(1..maxnoofTAIforPaging)) OF TAI

MulticastGroupPagingArea ::= SEQUENCE {
    mBS-AreaTAIList     MBS-AreaTAIList,
    iE-Extensions       ProtocolExtensionContainer { { MulticastGroupPagingArea-ExtIEs} } OPTIONAL,
    ...
}

MulticastGroupPagingArea-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

UE-PagingList ::= SEQUENCE (SIZE(1..maxnoofUEsforPaging)) OF UE-PagingItem

UE-PagingItem ::= SEQUENCE {
```

```
    uEIdentityIndexValue        UEIdentityIndexValue,
    pagingDRX                   PagingDRX                                       OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { UE-PagingItem-ExtIEs} }  OPTIONAL,
    ...
}

UE-PagingItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

M1Configuration ::= SEQUENCE {
    m1reportingTrigger          M1ReportingTrigger,
    m1thresholdEventA2          M1ThresholdEventA2                                  OPTIONAL,
--  The above IE shall be present if the M1 Reporting Trigger IE is set to the value “A2event-triggered” or “A2event-triggered periodic”
    m1periodicReporting         M1PeriodicReporting                                 OPTIONAL,
--  The above IE shall be present if the M1 Reporting Trigger IE is set to the value “periodic” or “A2event-triggered periodic”
    iE-Extensions       ProtocolExtensionContainer { { M1Configuration-ExtIEs} }    OPTIONAL,
    ...
}

M1Configuration-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-IncludeBeamMeasurementsIndication       CRITICALITY ignore  EXTENSION IncludeBeamMeasurementsIndication   PRESENCE optional      }|
    { ID id-BeamMeasurementsReportConfiguration     CRITICALITY ignore  EXTENSION BeamMeasurementsReportConfiguration PRESENCE conditional   },
-- The above IE shall be present if the Include Beam Measurements Indication IE is set to the value “true”
    ...
}

IncludeBeamMeasurementsIndication ::= ENUMERATED {
    true,
    ...
}

MaxNrofRS-IndexesToReport ::= INTEGER (1..64, ...)

M1ReportingTrigger ::= ENUMERATED {
    periodic,
    a2eventtriggered,
    a2eventtriggered-periodic,
    ...
}

M1ThresholdEventA2 ::= SEQUENCE {
    m1ThresholdType     M1ThresholdType,
    iE-Extensions       ProtocolExtensionContainer { { M1ThresholdEventA2-ExtIEs} } OPTIONAL,
    ...
}

M1ThresholdEventA2-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

M1ThresholdType ::= CHOICE {
    threshold-RSRP              Threshold-RSRP,
    threshold-RSRQ              Threshold-RSRQ,
```

```
    threshold-SINR              Threshold-SINR,
    choice-Extensions       ProtocolIE-SingleContainer { {M1ThresholdType-ExtIEs} }
}

M1ThresholdType-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

M1PeriodicReporting ::= SEQUENCE {
    reportInterval              ReportIntervalMDT,
    reportAmount                ReportAmountMDT,
    iE-Extensions       ProtocolExtensionContainer { { M1PeriodicReporting-ExtIEs} } OPTIONAL,
    ...
}

M1PeriodicReporting-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    {ID id-ExtendedReportIntervalMDT        CRITICALITY ignore  EXTENSION ExtendedReportIntervalMDT     PRESENCE optional},
    ...
}

M4Configuration ::= SEQUENCE {
    m4period            M4period,
    m4-links-to-log     Links-to-log,
    iE-Extensions       ProtocolExtensionContainer { { M4Configuration-ExtIEs} } OPTIONAL,
    ...
}

M4Configuration-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-M4ReportAmount      CRITICALITY ignore  EXTENSION M4ReportAmountMDT     PRESENCE optional      },
    ...
}

M4ReportAmountMDT ::= ENUMERATED {r1, r2, r4, r8, r16, r32, r64, infinity, ...}

M4period ::= ENUMERATED {ms1024, ms2048, ms5120, ms10240, min1, ... }

M5Configuration ::= SEQUENCE {
    m5period            M5period,
    m5-links-to-log     Links-to-log,
    iE-Extensions       ProtocolExtensionContainer { { M5Configuration-ExtIEs} } OPTIONAL,
    ...
}

M5Configuration-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-M5ReportAmount      CRITICALITY ignore  EXTENSION M5ReportAmountMDT     PRESENCE optional      },
    ...
}

M5ReportAmountMDT ::= ENUMERATED {r1, r2, r4, r8, r16, r32, r64, infinity, ...}


M5period ::= ENUMERATED {ms1024, ms2048, ms5120, ms10240, min1, ... }

M6Configuration ::= SEQUENCE {
```

```
    m6report-Interval   M6report-Interval,
    m6-links-to-log     Links-to-log,
    iE-Extensions       ProtocolExtensionContainer { { M6Configuration-ExtIEs} } OPTIONAL,
    ...
}

M6Configuration-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-M6ReportAmount      CRITICALITY ignore  EXTENSION M6ReportAmountMDT     PRESENCE optional     }|
    { ID id-ExcessPacketDelayThresholdConfiguration CRITICALITY ignore  EXTENSION ExcessPacketDelayThresholdConfiguration   PRESENCE optional    },
    ...
}


M6ReportAmountMDT ::= ENUMERATED {r1, r2, r4, r8, r16, r32, r64, infinity, ...}

M6report-Interval ::= ENUMERATED {
    ms120, ms240, ms480, ms640, ms1024, ms2048, ms5120, ms10240, ms20480, ms40960, min1, min6, min12, min30,
    ...
}


M7Configuration ::= SEQUENCE {
    m7period            M7period,
    m7-links-to-log     Links-to-log,
    iE-Extensions       ProtocolExtensionContainer { { M7Configuration-ExtIEs} } OPTIONAL,
    ...
}

M7Configuration-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-M7ReportAmount      CRITICALITY ignore  EXTENSION M7ReportAmountMDT     PRESENCE optional     },
    ...
}

M7ReportAmountMDT ::= ENUMERATED {r1, r2, r4, r8, r16, r32, r64, infinity, ...}

M7period ::= INTEGER(1..60, ...)

MDT-circle ::= SEQUENCE {
    reference-location          OCTET STRING,
    distance-radius             INTEGER(1..65535),
    iE-Extensions               ProtocolExtensionContainer { {MDT-circle-ExtIEs} }  OPTIONAL,
    ...
}

MDT-circle-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

MDT-Location-Info ::= SEQUENCE {
    mDT-Location-Information    MDT-Location-Information,
    iE-Extensions       ProtocolExtensionContainer { { MDT-Location-Info-ExtIEs} } OPTIONAL,
    ...
}
```

```
MDT-Location-Info-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

MDT-Location-Information::= BIT STRING (SIZE (8))

MDT-polygon ::= OCTET STRING

MMSID ::= OCTET STRING (SIZE (1))

-- N

N3IWF-ID ::= CHOICE {
    n3IWF-ID                BIT STRING (SIZE(16)),
    choice-Extensions       ProtocolIE-SingleContainer { {N3IWF-ID-ExtIEs} }
}

N3IWF-ID-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

N6JitterInformation ::= SEQUENCE {
    n6JitterLowerBound      INTEGER (-127..127),
    n6JitterUpperBound      INTEGER (-127..127),
    iE-Extensions           ProtocolExtensionContainer { { N6JitterInformation-ExtIEs} }    OPTIONAL,
    ...
}

N6JitterInformation-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

NAS-PDU ::= OCTET STRING

NASSecurityParametersFromNGRAN ::= OCTET STRING

NB-IoT-DefaultPagingDRX ::= ENUMERATED {
    rf128, rf256, rf512, rf1024,
    ...
}

NB-IoT-PagingDRX ::= ENUMERATED {
    rf32, rf64, rf128, rf256, rf512, rf1024,
    ...
}

NB-IoT-Paging-eDRXCycle ::= ENUMERATED {
    hf2, hf4, hf6, hf8, hf10, hf12, hf14, hf16, hf32, hf64, hf128, hf256, hf512, hf1024,
    ...
}

NB-IoT-Paging-TimeWindow ::= ENUMERATED {
    s1, s2, s3, s4, s5, s6, s7, s8, s9, s10, s11, s12, s13, s14, s15, s16,
    ...
```

```
}

NB-IoT-Paging-eDRXInfo ::= SEQUENCE {
    nB-IoT-Paging-eDRXCycle     NB-IoT-Paging-eDRXCycle,
    nB-IoT-Paging-TimeWindow    NB-IoT-Paging-TimeWindow                                OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { NB-IoT-Paging-eDRXInfo-ExtIEs} } OPTIONAL,
    ...
}

NB-IoT-Paging-eDRXInfo-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

NB-IoT-UEPriority ::= INTEGER (0..255, ...)

NetworkControlledRepeaterAuthorized ::= ENUMERATED {authorized, not-authorized, ...}

NetworkInstance ::= INTEGER (1..256, ...)


NetworkSliceListforMDT ::= SEQUENCE (SIZE(1.. maxnoofMDTPLMNs)) OF NetworkSliceItemforMDT

NetworkSliceItemforMDT ::= SEQUENCE {
    plmnID                      PLMNIdentity,
    sliceMDTList                SliceMDTList,
    iE-Extensions               ProtocolExtensionContainer { {NetworkSliceItemforMDT-ExtIEs} }  OPTIONAL,
    ...
}

NetworkSliceItemforMDT-ExtIEs NGAP-PROTOCOL-EXTENSION ::={
    ...
}

NetworkSliceAreaScopeofMDT ::= SEQUENCE {
    networkSliceListforMDT      NetworkSliceListforMDT,
    iE-Extensions               ProtocolExtensionContainer { {NetworkSliceAreaScopeofMDT-ExtIEs} } OPTIONAL,
    ...
}

NetworkSliceAreaScopeofMDT-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

SliceMDTList ::= SEQUENCE (SIZE(1.. maxnoofSliceItemsforMDT)) OF SliceMDTItem

SliceMDTItem ::= SEQUENCE {
    sNSSAI                      S-NSSAI,
    iE-Extensions               ProtocolExtensionContainer { { SliceMDTItem-ExtIEs} }   OPTIONAL,
    ...
}

SliceMDTItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::={
    ...
}
```

```
NewSecurityContextInd ::= ENUMERATED {
    true,
    ...
}

NextHopChainingCount ::= INTEGER (0..7)

NextPagingAreaScope ::= ENUMERATED {
    same,
    changed,
    ...
}

NGAPIESupportInformationRequestList ::= SEQUENCE (SIZE(1.. maxnoofNGAPIESupportInfo)) OF NGAPIESupportInformationRequestItem

NGAPIESupportInformationRequestItem ::= SEQUENCE {
    ngap-ProtocolIE-Id      ProtocolIE-ID,
    iE-Extensions       ProtocolExtensionContainer { { NGAPIESupportInformationRequestItem-ExtIEs} } OPTIONAL,
    ...
}

NGAPIESupportInformationRequestItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

NGAPIESupportInformationResponseList ::= SEQUENCE (SIZE(1.. maxnoofNGAPIESupportInfo)) OF NGAPIESupportInformationResponseItem

NGAPIESupportInformationResponseItem ::= SEQUENCE {
    ngap-ProtocolIE-Id              ProtocolIE-ID,
    ngap-ProtocolIESupportInfo      ENUMERATED {supported, not-supported, ...},
    ngap-ProtocolIEPresenceInfo     ENUMERATED {present, not-present, ...},
    iE-Extensions       ProtocolExtensionContainer { { NGAPIESupportInformationResponseItem-ExtIEs} }   OPTIONAL,
    ...
}

NGAPIESupportInformationResponseItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

NgENB-ID ::= CHOICE {
    macroNgENB-ID           BIT STRING (SIZE(20)),
    shortMacroNgENB-ID      BIT STRING (SIZE(18)),
    longMacroNgENB-ID       BIT STRING (SIZE(21)),
    choice-Extensions       ProtocolIE-SingleContainer { {NgENB-ID-ExtIEs} }
}

NgENB-ID-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

NotifySourceNGRANNode ::= ENUMERATED {
    notifySource,
```

```
    ...
}

NGRAN-CGI ::= CHOICE {
    nR-CGI          NR-CGI,
    eUTRA-CGI       EUTRA-CGI,
    choice-Extensions       ProtocolIE-SingleContainer { {NGRAN-CGI-ExtIEs} }
}

NGRAN-CGI-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

NGRAN-TNLAssociationToRemoveList ::= SEQUENCE (SIZE(1..maxnoofTNLAssociations)) OF NGRAN-TNLAssociationToRemoveItem

NGRAN-TNLAssociationToRemoveItem::= SEQUENCE {
    tNLAssociationTransportLayerAddress         CPTransportLayerInformation,
    tNLAssociationTransportLayerAddressAMF      CPTransportLayerInformation                         OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { NGRAN-TNLAssociationToRemoveItem-ExtIEs} }   OPTIONAL
}

NGRAN-TNLAssociationToRemoveItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

NGRANTraceID ::= OCTET STRING (SIZE(8))

NID ::= BIT STRING (SIZE(44))

NonDynamic5QIDescriptor ::= SEQUENCE {
    fiveQI                      FiveQI,
    priorityLevelQos            PriorityLevelQos                                    OPTIONAL,
    averagingWindow             AveragingWindow                                     OPTIONAL,
    maximumDataBurstVolume      MaximumDataBurstVolume                              OPTIONAL,
    iE-Extensions   ProtocolExtensionContainer { {NonDynamic5QIDescriptor-ExtIEs} } OPTIONAL,
    ...
}

NonDynamic5QIDescriptor-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-CNPacketDelayBudgetDL   CRITICALITY ignore  EXTENSION ExtendedPacketDelayBudget     PRESENCE optional     }|
    { ID id-CNPacketDelayBudgetUL   CRITICALITY ignore  EXTENSION ExtendedPacketDelayBudget     PRESENCE optional     },
    ...
}

NoPDUSessionIndication ::= ENUMERATED {true, ...}

NotAllowedTACs ::= SEQUENCE (SIZE(1..maxnoofAllowedAreas)) OF TAC

NotificationCause ::= ENUMERATED {
    fulfilled,
    not-fulfilled,
    ... ,
    not-fulfilled-DL,
    not-fulfilled-UL
```

```
}

NotificationControl ::= ENUMERATED {
    notification-requested,
    ...
}

NPN-AccessInformation ::= CHOICE {
    pNI-NPN-Access-Information      CellCAGList,
    choice-Extensions               ProtocolIE-SingleContainer { {NPN-AccessInformation-ExtIEs} }
}

NPN-AccessInformation-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

NPN-MobilityInformation ::= CHOICE {
    sNPN-MobilityInformation        SNPN-MobilityInformation,
    pNI-NPN-MobilityInformation     PNI-NPN-MobilityInformation,
    choice-Extensions               ProtocolIE-SingleContainer { {NPN-MobilityInformation-ExtIEs} }
}

NPN-MobilityInformation-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}


NPN-PagingAssistanceInformation ::= CHOICE {
    pNI-NPN-PagingAssistance        Allowed-PNI-NPN-List,
    choice-Extensions               ProtocolIE-SingleContainer { {NPN-PagingAssistanceInformation-ExtIEs} }
}

NPN-PagingAssistanceInformation-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

NPN-Support ::= CHOICE {
    sNPN                    NID,
    choice-Extensions       ProtocolIE-SingleContainer { {NPN-Support-ExtIEs} }
}

NPN-Support-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

NRCellIdentity ::= BIT STRING (SIZE(36))

NR-CGI ::= SEQUENCE {
    pLMNIdentity        PLMNIdentity,
    nRCellIdentity      NRCellIdentity,
    iE-Extensions       ProtocolExtensionContainer { {NR-CGI-ExtIEs} } OPTIONAL,
    ...
}
```

```
NR-CGI-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

NR-CGIList ::= SEQUENCE (SIZE(1..maxnoofCellsingNB)) OF NR-CGI

NR-CGIListForWarning ::= SEQUENCE (SIZE(1..maxnoofCellIDforWarning)) OF NR-CGI

NR-PagingeDRXInformation ::= SEQUENCE {
    nR-paging-eDRX-Cycle        NR-Paging-eDRX-Cycle,
    nR-paging-Time-Window       NR-Paging-Time-Window                   OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {NR-PagingeDRXInformation-ExtIEs} }    OPTIONAL,
    ...
}

NR-PagingeDRXInformation-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

NR-Paging-eDRX-Cycle ::= ENUMERATED {
    hfquarter, hfhalf, hf1, hf2, hf4, hf8, hf16,
    hf32, hf64, hf128, hf256, hf512, hf1024,
    ...
}

NR-Paging-Long-eDRX-Information-for-RRC-INACTIVE ::= SEQUENCE {
    nR-paging-Long-eDRX-Cycle-for-RRC-INACTIVE      NR-Paging-Long-eDRX-Cycle-for-RRC-INACTIVE,
    nR-paging-Time-Window-for-RRC-INACTIVE          NR-Paging-Time-Window-for-RRC-INACTIVE,
    iE-Extensions       ProtocolExtensionContainer { {NR-Paging-Long-eDRX-Information-for-RRC-INACTIVE-ExtIEs} } OPTIONAL,
    ...
}

NR-Paging-Long-eDRX-Information-for-RRC-INACTIVE-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

NR-Paging-Long-eDRX-Cycle-for-RRC-INACTIVE  ::= ENUMERATED {
    hf2, hf4, hf8, hf16,
    hf32, hf64, hf128, hf256, hf512, hf1024,
    ...
}

NR-Paging-Time-Window ::= ENUMERATED {
    s1, s2, s3, s4, s5,
    s6, s7, s8, s9, s10,
    s11, s12, s13, s14, s15, s16,
    ...,
    s17, s18, s19, s20, s21, s22, s23, s24,
    s25, s26, s27, s28, s29, s30, s31, s32
}

NR-Paging-Time-Window-for-RRC-INACTIVE ::= ENUMERATED {
    s1, s2, s3, s4, s5,
    s6, s7, s8, s9, s10,
```

```
    s11, s12, s13, s14, s15, s16,
    s17, s18, s19, s20, s21, s22, s23, s24,
    s25, s26, s27, s28, s29, s30, s31, s32,
    ...
}

NRencryptionAlgorithms ::= BIT STRING (SIZE(16, ...))

NRintegrityProtectionAlgorithms ::= BIT STRING (SIZE(16, ...))

NRMobilityHistoryReport ::= OCTET STRING

NRPPa-PDU ::= OCTET STRING

NRUERLFReportContainer ::= OCTET STRING

NRNTNTAIInformation ::= SEQUENCE {
    servingPLMN                         PLMNIdentity,
    tACListInNRNTN                      TACListInNRNTN,
    uELocationDerivedTACInNRNTN         TAC                         OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { NRNTNTAIInformation-ExtIEs} } OPTIONAL,
    ...
}

NRNTNTAIInformation-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}


NumberOfBroadcasts ::= INTEGER (0..65535)

NumberOfBroadcastsRequested ::= INTEGER (0..65535)

NRARFCN ::= INTEGER (0.. maxNRARFCN)

NRFrequencyBand ::= INTEGER (1..1024, ...)

NRFrequencyBand-List ::= SEQUENCE (SIZE(1..maxnoofNRCellBands)) OF NRFrequencyBandItem

NRFrequencyBandItem ::= SEQUENCE {
    nr-frequency-band           NRFrequencyBand,
    iE-Extension        ProtocolExtensionContainer { {NRFrequencyBandItem-ExtIEs} }     OPTIONAL,
    ...
}

NRFrequencyBandItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

NRFrequencyInfo ::= SEQUENCE {
    nrARFCN             NRARFCN,
    frequencyBand-List      NRFrequencyBand-List,
    iE-Extension        ProtocolExtensionContainer { {NRFrequencyInfo-ExtIEs} }     OPTIONAL,
    ...
```

```
}

NRFrequencyInfo-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

NR-PCI ::= INTEGER (0..1007, ...)

NRV2XServicesAuthorized ::= SEQUENCE {
    vehicleUE           VehicleUE                                                   OPTIONAL,
    pedestrianUE        PedestrianUE                                                OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {NRV2XServicesAuthorized-ExtIEs} } OPTIONAL,
    ...
}

NRV2XServicesAuthorized-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

VehicleUE ::= ENUMERATED {
    authorized,
    not-authorized,
    ...
}

PedestrianUE ::= ENUMERATED {
    authorized,
    not-authorized,
    ...
}

NRUESidelinkAggregateMaximumBitrate ::= SEQUENCE {
    uESidelinkAggregateMaximumBitRate       BitRate,
    iE-Extensions       ProtocolExtensionContainer { {NRUESidelinkAggregateMaximumBitrate-ExtIEs} } OPTIONAL,
    ...
}

NRUESidelinkAggregateMaximumBitrate-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

NSAG-ID ::= INTEGER (0..255, ...)

NR-A2X-ServicesAuthorized ::= SEQUENCE {
    aerialUE                            ENUMERATED {authorized, not-authorized, ...}        OPTIONAL,
    aerialControllerUE                  ENUMERATED {authorized, not-authorized, ...}        OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {NR-A2X-ServicesAuthorized-ExtIEs} }       OPTIONAL,
    ...
}

NR-A2X-ServicesAuthorized-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}
```

```
NTN-Geographical-Area-List ::= SEQUENCE (SIZE(1..maxnoofAreaNTN)) OF NTN-Geographical-Area-Item

NTN-Geographical-Area-Item ::= CHOICE {
    circle                      MDT-circle,
    polygon                     MDT-polygon,
    choice-Extensions           ProtocolIE-SingleContainer { {NTN-Geographicla-Area-Item-ExtIEs} }
}

NTN-Geographicla-Area-Item-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

-- O

OnboardingSupport ::= ENUMERATED {
    true,
    ...
}

OverloadAction ::= ENUMERATED {
    reject-non-emergency-mo-dt,
    reject-rrc-cr-signalling,
    permit-emergency-sessions-and-mobile-terminated-services-only,
    permit-high-priority-sessions-and-mobile-terminated-services-only,
    ...
}

OverloadResponse ::= CHOICE {
    overloadAction          OverloadAction,
    choice-Extensions       ProtocolIE-SingleContainer { {OverloadResponse-ExtIEs} }
}

OverloadResponse-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

OverloadStartNSSAIList ::= SEQUENCE (SIZE (1..maxnoofSliceItems)) OF OverloadStartNSSAIItem

OverloadStartNSSAIItem ::= SEQUENCE {
    sliceOverloadList                       SliceOverloadList,
    sliceOverloadResponse                   OverloadResponse                            OPTIONAL,
    sliceTrafficLoadReductionIndication     TrafficLoadReductionIndication              OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {OverloadStartNSSAIItem-ExtIEs} }  OPTIONAL,
    ...
}

OverloadStartNSSAIItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

-- P

PacketDelayBudget ::= INTEGER (0..1023, ...)
```

```
PacketErrorRate ::= SEQUENCE {
    pERScalar       INTEGER (0..9, ...),
    pERExponent     INTEGER (0..9, ...),
    iE-Extensions       ProtocolExtensionContainer { {PacketErrorRate-ExtIEs} } OPTIONAL,
    ...
}

PacketErrorRate-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PacketLossRate ::= INTEGER (0..1000, ...)

PagingAssisDataforCEcapabUE ::= SEQUENCE {
    eUTRA-CGI                       EUTRA-CGI,
    coverageEnhancementLevel        CoverageEnhancementLevel,
    iE-Extensions                   ProtocolExtensionContainer { { PagingAssisDataforCEcapabUE-ExtIEs} } OPTIONAL,
    ...
}

PagingAssisDataforCEcapabUE-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PagingAttemptInformation ::= SEQUENCE {
    pagingAttemptCount              PagingAttemptCount,
    intendedNumberOfPagingAttempts  IntendedNumberOfPagingAttempts,
    nextPagingAreaScope             NextPagingAreaScope                             OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {PagingAttemptInformation-ExtIEs} }    OPTIONAL,
    ...
}

PagingAttemptInformation-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PagingAttemptCount ::= INTEGER (1..16, ...)

PagingCause ::= ENUMERATED {
    voice,
    ...
}

PagingCauseIndicationForVoiceService ::= ENUMERATED {
    supported,
    ...
}

PagingDRX ::= ENUMERATED {
    v32,
    v64,
    v128,
    v256,
    ...
```

```
}

PagingOrigin ::= ENUMERATED {
    non-3gpp,
    ...
}


PagingPolicyDifferentiation ::= SEQUENCE {
    pDUSessionForPagingList         PDUSessionForPagingList,
    iE-Extensions                   ProtocolExtensionContainer { { PagingPolicyDifferentiation-ExtIEs} }   OPTIONAL,
    ...
}

PagingPolicyDifferentiation-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PDUSessionForPagingList ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionForPagingItem

PDUSessionForPagingItem ::= SEQUENCE {
    pDUSessionID                    PDUSessionID,
    pagingPolicyDifferentiationList     PagingPolicyDifferentiationList,
    iE-Extensions                   ProtocolExtensionContainer { { PDUSessionForPagingItem-ExtIEs} }   OPTIONAL,
    ...
}

PDUSessionForPagingItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PagingPolicyDifferentiationList ::= SEQUENCE (SIZE(1..maxnoofQosFlows)) OF PagingPolicyDifferentiationItem

PagingPolicyDifferentiationItem ::= SEQUENCE {
    qosFlowIdentifier               QosFlowIdentifier               OPTIONAL,
    pagingPolicyIndicator           PagingPolicyIndicator           OPTIONAL,
    allocationAndRetentionPriority      AllocationAndRetentionPriority      OPTIONAL,
    fiveQI                          FiveQI                          OPTIONAL,
    dl-DataSize                     INTEGER (0..96000, ...)         OPTIONAL,
    iE-Extensions                   ProtocolExtensionContainer { { PagingPolicyDifferentiationItem-ExtIEs} } OPTIONAL,
    ...
}

PagingPolicyDifferentiationItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PagingPolicyIndicator ::= INTEGER (0..7, ...)

PagingPriority ::= ENUMERATED {
    priolevel1,
    priolevel2,
    priolevel3,
    priolevel4,
```

```
    priolevel5,
    priolevel6,
    priolevel7,
    priolevel8,
    ...
}

PagingProbabilityInformation ::= ENUMERATED {
    p00, p05, p10, p15, p20, p25, p30, p35, p40, p45, p50, p55, p60, p65, p70, p75, p80, p85, p90, p95, p100,
    ...
}

ParentTImeSource ::= ENUMERATED {synce, ptp, gnss, atomicclock, terrestrialradio, serialtimecode, ntp, handset, other, ...}

Partially-Allowed-NSSAI ::= SEQUENCE (SIZE(1.. maxnoofPartiallyAllowedS-NSSAIs)) OF PartiallyAllowedNSSAI-Item

PartiallyAllowedNSSAI-Item ::= SEQUENCE {
    s-NSSAI             S-NSSAI,
    iE-Extensions       ProtocolExtensionContainer { {PartiallyAllowedNSSAI-Item-ExtIEs} }  OPTIONAL,
    ...
}

PartiallyAllowedNSSAI-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PathSwitchRequestAcknowledgeTransfer ::= SEQUENCE {
    uL-NGU-UP-TNLInformation        UPTransportLayerInformation                                     OPTIONAL,
    securityIndication              SecurityIndication                                              OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {PathSwitchRequestAcknowledgeTransfer-ExtIEs} } OPTIONAL,
    ...
}

PathSwitchRequestAcknowledgeTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-AdditionalNGU-UP-TNLInformation             CRITICALITY ignore  EXTENSION UPTransportLayerInformationPairList   PRESENCE optional }|
    { ID id-RedundantUL-NGU-UP-TNLInformation           CRITICALITY ignore  EXTENSION UPTransportLayerInformation           PRESENCE optional }|
    { ID id-AdditionalRedundantNGU-UP-TNLInformation    CRITICALITY ignore  EXTENSION UPTransportLayerInformationPairList   PRESENCE optional }|
    { ID id-QosFlowParametersList                       CRITICALITY ignore  EXTENSION QosFlowParametersList                 PRESENCE optional },
    ...
}

PathSwitchRequestSetupFailedTransfer ::= SEQUENCE {
    cause               Cause,
    iE-Extensions       ProtocolExtensionContainer { {PathSwitchRequestSetupFailedTransfer-ExtIEs} } OPTIONAL,
    ...
}

PathSwitchRequestSetupFailedTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PathSwitchRequestTransfer ::= SEQUENCE {
    dL-NGU-UP-TNLInformation            UPTransportLayerInformation,
    dL-NGU-TNLInformationReused         DL-NGU-TNLInformationReused                         OPTIONAL,
```

```
    userPlaneSecurityInformation       UserPlaneSecurityInformation                      OPTIONAL,
    qosFlowAcceptedList                QosFlowAcceptedList,
    iE-Extensions       ProtocolExtensionContainer { {PathSwitchRequestTransfer-ExtIEs} }   OPTIONAL,
    ...
}

PathSwitchRequestTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-AdditionalDLQosFlowPerTNLInformation               CRITICALITY ignore  EXTENSION QosFlowPerTNLInformationList     PRESENCE optional }|
    { ID id-RedundantDL-NGU-UP-TNLInformation                  CRITICALITY ignore  EXTENSION UPTransportLayerInformation      PRESENCE optional }|
    { ID id-RedundantDL-NGU-TNLInformationReused               CRITICALITY ignore  EXTENSION DL-NGU-TNLInformationReused      PRESENCE optional }|
    { ID id-AdditionalRedundantDLQosFlowPerTNLInformation      CRITICALITY ignore  EXTENSION QosFlowPerTNLInformationList     PRESENCE optional }|
    { ID id-UsedRSNInformation                                 CRITICALITY ignore  EXTENSION RedundantPDUSessionInformation   PRESENCE optional }|
    { ID id-GlobalRANNodeID                                    CRITICALITY ignore  EXTENSION GlobalRANNodeID                  PRESENCE optional }|
    { ID id-MBS-SupportIndicator                               CRITICALITY ignore  EXTENSION MBS-SupportIndicator             PRESENCE optional }|
    { ID id-PDUSetbasedHandlingIndicator                       CRITICALITY ignore  EXTENSION PDUSetbasedHandlingIndicator     PRESENCE optional }|
    { ID id-ECNMarkingorCongestionInformationReportingStatus   CRITICALITY ignore  EXTENSION ECNMarkingorCongestionInformationReportingStatus
    PRESENCE optional },
    ...
}

PathSwitchRequestUnsuccessfulTransfer ::= SEQUENCE {
    cause               Cause,
    iE-Extensions       ProtocolExtensionContainer { {PathSwitchRequestUnsuccessfulTransfer-ExtIEs} }   OPTIONAL,
    ...
}

PathSwitchRequestUnsuccessfulTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PC5QoSParameters ::= SEQUENCE {
    pc5QoSFlowList              PC5QoSFlowList,
    pc5LinkAggregateBitRates    BitRate                                           OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { PC5QoSParameters-ExtIEs} }   OPTIONAL,
    ...
}

PC5QoSParameters-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PC5QoSFlowList ::= SEQUENCE (SIZE(1..maxnoofPC5QoSFlows)) OF PC5QoSFlowItem

PC5QoSFlowItem::= SEQUENCE {
    pQI                 FiveQI,
    pc5FlowBitRates     PC5FlowBitRates                                     OPTIONAL,
    range               Range                                               OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { PC5QoSFlowItem-ExtIEs} } OPTIONAL,
    ...
}

PC5QoSFlowItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}
```

```
PC5FlowBitRates ::= SEQUENCE {
    guaranteedFlowBitRate       BitRate,
    maximumFlowBitRate          BitRate,
    iE-Extensions       ProtocolExtensionContainer { { PC5FlowBitRates-ExtIEs} }    OPTIONAL,
    ...
}

PC5FlowBitRates-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}


PCIListForMDT ::= SEQUENCE (SIZE(1.. maxnoofNeighPCIforMDT)) OF NR-PCI

PrivacyIndicator ::= ENUMERATED {
    immediate-MDT,
    logged-MDT,
    ...
}

PDUSessionAggregateMaximumBitRate ::= SEQUENCE {
    pDUSessionAggregateMaximumBitRateDL     BitRate,
    pDUSessionAggregateMaximumBitRateUL     BitRate,
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionAggregateMaximumBitRate-ExtIEs} } OPTIONAL,
    ...
}

PDUSessionAggregateMaximumBitRate-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PDUSessionID ::= INTEGER (0..255)

PDUSessionPairID ::= INTEGER (0..255, ...)

PDUSessionResourceAdmittedList ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourceAdmittedItem

PDUSessionResourceAdmittedItem ::= SEQUENCE {
    pDUSessionID                            PDUSessionID,
    handoverRequestAcknowledgeTransfer      OCTET STRING (CONTAINING HandoverRequestAcknowledgeTransfer),
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceAdmittedItem-ExtIEs} }  OPTIONAL,
    ...
}

PDUSessionResourceAdmittedItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PDUSessionResourceFailedToModifyListModCfm ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourceFailedToModifyItemModCfm

PDUSessionResourceFailedToModifyItemModCfm ::= SEQUENCE {
    pDUSessionID                                                PDUSessionID,
    pDUSessionResourceModifyIndicationUnsuccessfulTransfer      OCTET STRING (CONTAINING PDUSessionResourceModifyIndicationUnsuccessfulTransfer),
```

```
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceFailedToModifyItemModCfm-ExtIEs} } OPTIONAL,
    ...
}

PDUSessionResourceFailedToModifyItemModCfm-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PDUSessionResourceFailedToModifyListModRes ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourceFailedToModifyItemModRes

PDUSessionResourceFailedToModifyItemModRes ::= SEQUENCE {
    pDUSessionID                                        PDUSessionID,
    pDUSessionResourceModifyUnsuccessfulTransfer        OCTET STRING (CONTAINING PDUSessionResourceModifyUnsuccessfulTransfer),
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceFailedToModifyItemModRes-ExtIEs} } OPTIONAL,
    ...
}

PDUSessionResourceFailedToModifyItemModRes-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PDUSessionResourceFailedToResumeListRESReq ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourceFailedToResumeItemRESReq

PDUSessionResourceFailedToResumeItemRESReq ::= SEQUENCE {
    pDUSessionID                        PDUSessionID,
    cause                               Cause,
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceFailedToResumeItemRESReq-ExtIEs} } OPTIONAL,
    ...
}

PDUSessionResourceFailedToResumeItemRESReq-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}


PDUSessionResourceFailedToResumeListRESRes ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourceFailedToResumeItemRESRes

PDUSessionResourceFailedToResumeItemRESRes ::= SEQUENCE {
    pDUSessionID                        PDUSessionID,
    cause                               Cause,
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceFailedToResumeItemRESRes-ExtIEs} } OPTIONAL,
    ...
}

PDUSessionResourceFailedToResumeItemRESRes-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PDUSessionResourceFailedToSetupListCxtFail ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourceFailedToSetupItemCxtFail

PDUSessionResourceFailedToSetupItemCxtFail ::= SEQUENCE {
    pDUSessionID                                    PDUSessionID,
    pDUSessionResourceSetupUnsuccessfulTransfer     OCTET STRING (CONTAINING PDUSessionResourceSetupUnsuccessfulTransfer),
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceFailedToSetupItemCxtFail-ExtIEs} } OPTIONAL,
```

```
    ...
}

PDUSessionResourceFailedToSetupItemCxtFail-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PDUSessionResourceFailedToSetupListCxtRes ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourceFailedToSetupItemCxtRes

PDUSessionResourceFailedToSetupItemCxtRes ::= SEQUENCE {
    pDUSessionID                                PDUSessionID,
    pDUSessionResourceSetupUnsuccessfulTransfer     OCTET STRING (CONTAINING PDUSessionResourceSetupUnsuccessfulTransfer),
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceFailedToSetupItemCxtRes-ExtIEs} } OPTIONAL,
    ...
}

PDUSessionResourceFailedToSetupItemCxtRes-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PDUSessionResourceFailedToSetupListHOAck ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourceFailedToSetupItemHOAck

PDUSessionResourceFailedToSetupItemHOAck ::= SEQUENCE {
    pDUSessionID                                PDUSessionID,
    handoverResourceAllocationUnsuccessfulTransfer      OCTET STRING (CONTAINING HandoverResourceAllocationUnsuccessfulTransfer),
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceFailedToSetupItemHOAck-ExtIEs} }   OPTIONAL,
    ...
}

PDUSessionResourceFailedToSetupItemHOAck-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PDUSessionResourceFailedToSetupListPSReq ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourceFailedToSetupItemPSReq

PDUSessionResourceFailedToSetupItemPSReq ::= SEQUENCE {
    pDUSessionID                        PDUSessionID,
    pathSwitchRequestSetupFailedTransfer        OCTET STRING (CONTAINING PathSwitchRequestSetupFailedTransfer),
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceFailedToSetupItemPSReq-ExtIEs} }   OPTIONAL,
    ...
}

PDUSessionResourceFailedToSetupItemPSReq-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PDUSessionResourceFailedToSetupListSURes ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourceFailedToSetupItemSURes

PDUSessionResourceFailedToSetupItemSURes ::= SEQUENCE {
    pDUSessionID                                PDUSessionID,
    pDUSessionResourceSetupUnsuccessfulTransfer     OCTET STRING (CONTAINING PDUSessionResourceSetupUnsuccessfulTransfer),
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceFailedToSetupItemSURes-ExtIEs} }   OPTIONAL,
    ...
}
```

```
PDUSessionResourceFailedToSetupItemSURes-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PDUSessionResourceHandoverList ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourceHandoverItem

PDUSessionResourceHandoverItem ::= SEQUENCE {
    pDUSessionID                        PDUSessionID,
    handoverCommandTransfer             OCTET STRING (CONTAINING HandoverCommandTransfer),
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceHandoverItem-ExtIEs} }  OPTIONAL,
    ...
}

PDUSessionResourceHandoverItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PDUSessionResourceInformationList ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourceInformationItem

PDUSessionResourceInformationItem ::= SEQUENCE {
    pDUSessionID                    PDUSessionID,
    qosFlowInformationList          QosFlowInformationList,
    dRBsToQosFlowsMappingList       DRBsToQosFlowsMappingList                                   OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceInformationItem-ExtIEs} } OPTIONAL,
    ...
}

PDUSessionResourceInformationItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PDUSessionResourceListCxtRelCpl ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourceItemCxtRelCpl

PDUSessionResourceItemCxtRelCpl ::= SEQUENCE {
    pDUSessionID        PDUSessionID,
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceItemCxtRelCpl-ExtIEs} } OPTIONAL,
    ...
}

PDUSessionResourceItemCxtRelCpl-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-PDUSessionResourceReleaseResponseTransfer   CRITICALITY ignore  EXTENSION OCTET STRING (CONTAINING
PDUSessionResourceReleaseResponseTransfer)  PRESENCE optional   },
    ...
}

PDUSessionResourceListCxtRelReq ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourceItemCxtRelReq

PDUSessionResourceItemCxtRelReq ::= SEQUENCE {
    pDUSessionID        PDUSessionID,
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceItemCxtRelReq-ExtIEs} } OPTIONAL,
    ...
}
```

```
PDUSessionResourceItemCxtRelReq-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PDUSessionResourceListHORqd ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourceItemHORqd

PDUSessionResourceItemHORqd ::= SEQUENCE {
    pDUSessionID                    PDUSessionID,
    handoverRequiredTransfer        OCTET STRING (CONTAINING HandoverRequiredTransfer),
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceItemHORqd-ExtIEs} } OPTIONAL,
    ...
}

PDUSessionResourceItemHORqd-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PDUSessionListMTCommHReq ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionListMTCommHReq-Item

PDUSessionListMTCommHReq-Item ::= SEQUENCE {
    pDUSessionID                    PDUSessionID,
    iE-Extensions       ProtocolExtensionContainer { { PDUSessionListMTCommHReq-Item-ExtIEs} }  OPTIONAL,
    ...
}

PDUSessionListMTCommHReq-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PDUSessionResourceModifyConfirmTransfer ::= SEQUENCE {
    qosFlowModifyConfirmList            QosFlowModifyConfirmList,
    uLNGU-UP-TNLInformation             UPTransportLayerInformation,
    additionalNG-UUPTNLInformation      UPTransportLayerInformationPairList                         OPTIONAL,
    qosFlowFailedToModifyList           QosFlowListWithCause                                        OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceModifyConfirmTransfer-ExtIEs} } OPTIONAL,
    ...
}

PDUSessionResourceModifyConfirmTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-RedundantUL-NGU-UP-TNLInformation           CRITICALITY ignore  EXTENSION UPTransportLayerInformation           PRESENCE optional }|
    { ID id-AdditionalRedundantNGU-UP-TNLInformation    CRITICALITY ignore  EXTENSION UPTransportLayerInformationPairList   PRESENCE optional },
    ...
}

PDUSessionResourceModifyIndicationUnsuccessfulTransfer ::= SEQUENCE {
    cause               Cause,
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceModifyIndicationUnsuccessfulTransfer-ExtIEs} }   OPTIONAL,
    ...
}

PDUSessionResourceModifyIndicationUnsuccessfulTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}
```

```
PDUSessionResourceModifyRequestTransfer ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {PDUSessionResourceModifyRequestTransferIEs} },
    ...
}

PDUSessionResourceModifyRequestTransferIEs NGAP-PROTOCOL-IES ::= {
    { ID id-PDUSessionAggregateMaximumBitRate           CRITICALITY reject  TYPE PDUSessionAggregateMaximumBitRate    PRESENCE optional    }|
    { ID id-UL-NGU-UP-TNLModifyList                     CRITICALITY reject  TYPE UL-NGU-UP-TNLModifyList              PRESENCE optional    }|
    { ID id-NetworkInstance                             CRITICALITY reject  TYPE NetworkInstance                      PRESENCE optional    }|
    { ID id-QosFlowAddOrModifyRequestList               CRITICALITY reject  TYPE QosFlowAddOrModifyRequestList        PRESENCE optional    }|
    { ID id-QosFlowToReleaseList                        CRITICALITY reject  TYPE QosFlowListWithCause                 PRESENCE optional    }|
    { ID id-AdditionalUL-NGU-UP-TNLInformation          CRITICALITY reject  TYPE UPTransportLayerInformationList      PRESENCE optional    }|
    { ID id-CommonNetworkInstance                       CRITICALITY ignore  TYPE CommonNetworkInstance                PRESENCE optional    }|
    { ID id-AdditionalRedundantUL-NGU-UP-TNLInformation CRITICALITY ignore  TYPE UPTransportLayerInformationList      PRESENCE optional    }|
    { ID id-RedundantCommonNetworkInstance              CRITICALITY ignore  TYPE CommonNetworkInstance                PRESENCE optional    }|
    { ID id-RedundantUL-NGU-UP-TNLInformation           CRITICALITY ignore  TYPE UPTransportLayerInformation          PRESENCE optional    }|
    { ID id-SecurityIndication                          CRITICALITY ignore  TYPE SecurityIndication                   PRESENCE optional    }|
    { ID id-MBSSessionSetuporModifyRequestList          CRITICALITY ignore  TYPE MBSSessionSetuporModifyRequestList   PRESENCE optional    }|
    { ID id-MBSSessionToReleaseList                     CRITICALITY ignore  TYPE MBSSessionToReleaseList              PRESENCE optional    }|
    { ID id-UserPlaneFailureIndication                  CRITICALITY ignore  TYPE UserPlaneFailureIndication           PRESENCE optional    },
    ...
}

PDUSessionResourceModifyResponseTransfer ::= SEQUENCE {
    dL-NGU-UP-TNLInformation                UPTransportLayerInformation                                 OPTIONAL,
    uL-NGU-UP-TNLInformation                UPTransportLayerInformation                                 OPTIONAL,
    qosFlowAddOrModifyResponseList          QosFlowAddOrModifyResponseList                              OPTIONAL,
    additionalDLQosFlowPerTNLInformation    QosFlowPerTNLInformationList                                OPTIONAL,
    qosFlowFailedToAddOrModifyList          QosFlowListWithCause                                        OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceModifyResponseTransfer-ExtIEs} }  OPTIONAL,
    ...
}

PDUSessionResourceModifyResponseTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-AdditionalNGU-UP-TNLInformation                 CRITICALITY ignore  EXTENSION UPTransportLayerInformationPairList  PRESENCE optional }|
    { ID id-RedundantDL-NGU-UP-TNLInformation               CRITICALITY ignore  EXTENSION UPTransportLayerInformation          PRESENCE optional }|
    { ID id-RedundantUL-NGU-UP-TNLInformation               CRITICALITY ignore  EXTENSION UPTransportLayerInformation          PRESENCE optional }|
    { ID id-AdditionalRedundantDLQosFlowPerTNLInformation   CRITICALITY ignore  EXTENSION QosFlowPerTNLInformationList         PRESENCE optional }|
    { ID id-AdditionalRedundantNGU-UP-TNLInformation        CRITICALITY ignore  EXTENSION UPTransportLayerInformationPairList  PRESENCE optional }|
    { ID id-SecondaryRATUsageInformation                    CRITICALITY ignore  EXTENSION SecondaryRATUsageInformation         PRESENCE optional }|
    { ID id-MBS-SupportIndicator                            CRITICALITY ignore  EXTENSION MBS-SupportIndicator                 PRESENCE optional }|
    { ID id-MBSSessionSetuporModifyResponseList             CRITICALITY ignore  EXTENSION MBSSessionSetupResponseList          PRESENCE optional }|
    { ID id-MBSSessionFailedtoSetuporModifyList             CRITICALITY ignore  EXTENSION MBSSessionFailedtoSetupList          PRESENCE optional }|
    { ID id-ECNMarkingorCongestionInformationReportingStatus    CRITICALITY ignore  EXTENSION ECNMarkingorCongestionInformationReportingStatus
    PRESENCE optional }|
    { ID id-PDUSetbasedHandlingIndicator                    CRITICALITY ignore  EXTENSION PDUSetbasedHandlingIndicator         PRESENCE optional }|
    { ID id-UserPlaneFailureIndicationReport                CRITICALITY ignore  EXTENSION UserPlaneFailureIndicationReport     PRESENCE optional },
    ...
}

PDUSessionResourceModifyIndicationTransfer ::= SEQUENCE {
    dLQosFlowPerTNLInformation                  QosFlowPerTNLInformation,
    additionalDLQosFlowPerTNLInformation        QosFlowPerTNLInformationList                                OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceModifyIndicationTransfer-ExtIEs} } OPTIONAL,
```

```
    ...
}

PDUSessionResourceModifyIndicationTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-SecondaryRATUsageInformation                    CRITICALITY ignore  EXTENSION SecondaryRATUsageInformation   PRESENCE optional }|
    { ID id-SecurityResult                                  CRITICALITY ignore  EXTENSION SecurityResult                 PRESENCE optional }|
    { ID id-RedundantDLQosFlowPerTNLInformation             CRITICALITY ignore  EXTENSION QosFlowPerTNLInformation       PRESENCE optional }|
    { ID id-AdditionalRedundantDLQosFlowPerTNLInformation   CRITICALITY ignore  EXTENSION QosFlowPerTNLInformationList   PRESENCE optional }|
    { ID id-GlobalRANNodeID                                 CRITICALITY ignore  EXTENSION GlobalRANNodeID                PRESENCE optional }|
    { ID id-ECNMarkingorCongestionInformationReportingStatus    CRITICALITY ignore  EXTENSION ECNMarkingorCongestionInformationReportingStatus
    PRESENCE optional },
    ...
}

PDUSessionResourceModifyListModCfm ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourceModifyItemModCfm

PDUSessionResourceModifyItemModCfm ::= SEQUENCE {
    pDUSessionID                            PDUSessionID,
    pDUSessionResourceModifyConfirmTransfer     OCTET STRING (CONTAINING PDUSessionResourceModifyConfirmTransfer),
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceModifyItemModCfm-ExtIEs} }   OPTIONAL,
    ...
}

PDUSessionResourceModifyItemModCfm-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PDUSessionResourceModifyListModInd ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourceModifyItemModInd

PDUSessionResourceModifyItemModInd ::= SEQUENCE {
    pDUSessionID                                PDUSessionID,
    pDUSessionResourceModifyIndicationTransfer      OCTET STRING (CONTAINING PDUSessionResourceModifyIndicationTransfer),
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceModifyItemModInd-ExtIEs} }   OPTIONAL,
    ...
}

PDUSessionResourceModifyItemModInd-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PDUSessionResourceModifyListModReq ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourceModifyItemModReq

PDUSessionResourceModifyItemModReq ::= SEQUENCE {
    pDUSessionID                            PDUSessionID,
    nAS-PDU                                 NAS-PDU                                             OPTIONAL,
    pDUSessionResourceModifyRequestTransfer     OCTET STRING (CONTAINING PDUSessionResourceModifyRequestTransfer),
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceModifyItemModReq-ExtIEs} }   OPTIONAL,
    ...
}

PDUSessionResourceModifyItemModReq-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-S-NSSAI                                     CRITICALITY reject  EXTENSION S-NSSAI               PRESENCE optional }|
    { ID id-PduSessionExpectedUEActivityBehaviour       CRITICALITY ignore  EXTENSION ExpectedUEActivityBehaviour  PRESENCE optional },
    ...
```

```
}

PDUSessionResourceModifyListModRes ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourceModifyItemModRes

PDUSessionResourceModifyItemModRes ::= SEQUENCE {
    pDUSessionID                                PDUSessionID,
    pDUSessionResourceModifyResponseTransfer    OCTET STRING (CONTAINING PDUSessionResourceModifyResponseTransfer),
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceModifyItemModRes-ExtIEs} }   OPTIONAL,
    ...
}

PDUSessionResourceModifyItemModRes-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PDUSessionResourceModifyUnsuccessfulTransfer ::= SEQUENCE {
    cause                       Cause,
    criticalityDiagnostics      CriticalityDiagnostics                                                  OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceModifyUnsuccessfulTransfer-ExtIEs} } OPTIONAL,
    ...
}

PDUSessionResourceModifyUnsuccessfulTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PDUSessionResourceNotifyList ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourceNotifyItem

PDUSessionResourceNotifyItem ::= SEQUENCE {
    pDUSessionID                        PDUSessionID,
    pDUSessionResourceNotifyTransfer    OCTET STRING (CONTAINING PDUSessionResourceNotifyTransfer),
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceNotifyItem-ExtIEs} }    OPTIONAL,
    ...
}

PDUSessionResourceNotifyItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PDUSessionResourceNotifyReleasedTransfer ::= SEQUENCE {
    cause               Cause,
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceNotifyReleasedTransfer-ExtIEs} }   OPTIONAL,
    ...
}

PDUSessionResourceNotifyReleasedTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-SecondaryRATUsageInformation        CRITICALITY ignore  EXTENSION SecondaryRATUsageInformation   PRESENCE optional }|
    { ID id-UserPlaneErrorIndicator             CRITICALITY ignore  EXTENSION UserPlaneErrorIndicator        PRESENCE optional },
    ...
}

UserPlaneErrorIndicator ::= ENUMERATED {
    gTP-U-error-indication-received,
    ...
```

```
}

PDUSessionResourceNotifyTransfer ::= SEQUENCE {
    qosFlowNotifyList       QosFlowNotifyList                                                   OPTIONAL,
    qosFlowReleasedList     QosFlowListWithCause                                                OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceNotifyTransfer-ExtIEs} }  OPTIONAL,
    ...
}

PDUSessionResourceNotifyTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-SecondaryRATUsageInformation        CRITICALITY ignore  EXTENSION SecondaryRATUsageInformation   PRESENCE optional }|
    { ID id-QosFlowFeedbackList                 CRITICALITY ignore  EXTENSION QosFlowFeedbackList            PRESENCE optional },
    ...
}

PDUSessionResourceReleaseCommandTransfer ::= SEQUENCE {
    cause               Cause,
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceReleaseCommandTransfer-ExtIEs} }   OPTIONAL,
    ...
}

PDUSessionResourceReleaseCommandTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-QosFlowAdditionalInfoList       CRITICALITY ignore  EXTENSION QosFlowAdditionalInfoListRelCom    PRESENCE optional },
    ...
}

PDUSessionResourceReleasedListNot ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourceReleasedItemNot

PDUSessionResourceReleasedItemNot ::= SEQUENCE {
    pDUSessionID                                PDUSessionID,
    pDUSessionResourceNotifyReleasedTransfer        OCTET STRING (CONTAINING PDUSessionResourceNotifyReleasedTransfer),
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceReleasedItemNot-ExtIEs} } OPTIONAL,
    ...
}

PDUSessionResourceReleasedItemNot-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PDUSessionResourceReleasedListPSAck ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourceReleasedItemPSAck

PDUSessionResourceReleasedItemPSAck ::= SEQUENCE {
    pDUSessionID                                PDUSessionID,
    pathSwitchRequestUnsuccessfulTransfer       OCTET STRING (CONTAINING PathSwitchRequestUnsuccessfulTransfer),
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceReleasedItemPSAck-ExtIEs} }  OPTIONAL,
    ...
}

PDUSessionResourceReleasedItemPSAck-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PDUSessionResourceReleasedListPSFail ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourceReleasedItemPSFail
```

```
PDUSessionResourceReleasedItemPSFail ::= SEQUENCE {
    pDUSessionID                                PDUSessionID,
    pathSwitchRequestUnsuccessfulTransfer       OCTET STRING (CONTAINING PathSwitchRequestUnsuccessfulTransfer),
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceReleasedItemPSFail-ExtIEs} } OPTIONAL,
    ...
}

PDUSessionResourceReleasedItemPSFail-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PDUSessionResourceReleasedListRelRes ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourceReleasedItemRelRes

PDUSessionResourceReleasedItemRelRes ::= SEQUENCE {
    pDUSessionID                                PDUSessionID,
    pDUSessionResourceReleaseResponseTransfer       OCTET STRING (CONTAINING PDUSessionResourceReleaseResponseTransfer),
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceReleasedItemRelRes-ExtIEs} } OPTIONAL,
    ...
}

PDUSessionResourceReleasedItemRelRes-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PDUSessionResourceReleaseResponseTransfer ::= SEQUENCE {
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceReleaseResponseTransfer-ExtIEs} }  OPTIONAL,
    ...
}

PDUSessionResourceReleaseResponseTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-SecondaryRATUsageInformation        CRITICALITY ignore  EXTENSION SecondaryRATUsageInformation    PRESENCE optional }|
    { ID id-QosFlowAdditionalInfoList       CRITICALITY ignore  EXTENSION QosFlowAdditionalInfoListRelRes    PRESENCE optional },
    ...
}

PDUSessionResourceResumeListRESReq ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourceResumeItemRESReq

PDUSessionResourceResumeItemRESReq ::= SEQUENCE {
    pDUSessionID                        PDUSessionID,
    uEContextResumeRequestTransfer      OCTET STRING (CONTAINING UEContextResumeRequestTransfer),
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceResumeItemRESReq-ExtIEs} }   OPTIONAL,
    ...
}

PDUSessionResourceResumeItemRESReq-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PDUSessionResourceResumeListRESRes ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourceResumeItemRESRes

PDUSessionResourceResumeItemRESRes ::= SEQUENCE {
    pDUSessionID                        PDUSessionID,
    uEContextResumeResponseTransfer     OCTET STRING (CONTAINING UEContextResumeResponseTransfer),
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceResumeItemRESRes-ExtIEs} }   OPTIONAL,
```

```
    ...
}

PDUSessionResourceResumeItemRESRes-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PDUSessionResourceSecondaryRATUsageList ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourceSecondaryRATUsageItem

PDUSessionResourceSecondaryRATUsageItem ::= SEQUENCE {
    pDUSessionID                        PDUSessionID,
    secondaryRATDataUsageReportTransfer     OCTET STRING (CONTAINING SecondaryRATDataUsageReportTransfer),
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceSecondaryRATUsageItem-ExtIEs} } OPTIONAL,
    ...
}

PDUSessionResourceSecondaryRATUsageItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PDUSessionResourceSetupListCxtReq ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourceSetupItemCxtReq

PDUSessionResourceSetupItemCxtReq ::= SEQUENCE {
    pDUSessionID                        PDUSessionID,
    nAS-PDU                             NAS-PDU                                         OPTIONAL,
    s-NSSAI                             S-NSSAI,
    pDUSessionResourceSetupRequestTransfer      OCTET STRING (CONTAINING PDUSessionResourceSetupRequestTransfer),
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceSetupItemCxtReq-ExtIEs} } OPTIONAL,
    ...
}

PDUSessionResourceSetupItemCxtReq-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-PduSessionExpectedUEActivityBehaviour           CRITICALITY ignore  EXTENSION ExpectedUEActivityBehaviour  PRESENCE optional },
    ...
}

PDUSessionResourceSetupListCxtRes ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourceSetupItemCxtRes

PDUSessionResourceSetupItemCxtRes ::= SEQUENCE {
    pDUSessionID                        PDUSessionID,
    pDUSessionResourceSetupResponseTransfer     OCTET STRING (CONTAINING PDUSessionResourceSetupResponseTransfer),
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceSetupItemCxtRes-ExtIEs} } OPTIONAL,
    ...
}

PDUSessionResourceSetupItemCxtRes-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PDUSessionResourceSetupListHOReq ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourceSetupItemHOReq

PDUSessionResourceSetupItemHOReq ::= SEQUENCE {
    pDUSessionID                PDUSessionID,
    s-NSSAI                     S-NSSAI,
```

```
    handoverRequestTransfer     OCTET STRING (CONTAINING PDUSessionResourceSetupRequestTransfer),
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceSetupItemHOReq-ExtIEs} }  OPTIONAL,
    ...
}

PDUSessionResourceSetupItemHOReq-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-PduSessionExpectedUEActivityBehaviour           CRITICALITY ignore  EXTENSION ExpectedUEActivityBehaviour  PRESENCE optional },
    ...
}

PDUSessionResourceSetupListSUReq ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourceSetupItemSUReq

PDUSessionResourceSetupItemSUReq ::= SEQUENCE {
    pDUSessionID                                PDUSessionID,
    pDUSessionNAS-PDU                           NAS-PDU                                         OPTIONAL,
    s-NSSAI                                     S-NSSAI,
    pDUSessionResourceSetupRequestTransfer      OCTET STRING (CONTAINING PDUSessionResourceSetupRequestTransfer),
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceSetupItemSUReq-ExtIEs} }  OPTIONAL,
    ...
}

PDUSessionResourceSetupItemSUReq-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-PduSessionExpectedUEActivityBehaviour           CRITICALITY ignore  EXTENSION ExpectedUEActivityBehaviour  PRESENCE optional },
    ...
}

PDUSessionResourceSetupListSURes ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourceSetupItemSURes

PDUSessionResourceSetupItemSURes ::= SEQUENCE {
    pDUSessionID                                PDUSessionID,
    pDUSessionResourceSetupResponseTransfer     OCTET STRING (CONTAINING PDUSessionResourceSetupResponseTransfer),
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceSetupItemSURes-ExtIEs} }  OPTIONAL,
    ...
}

PDUSessionResourceSetupItemSURes-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PDUSessionResourceSetupRequestTransfer ::= SEQUENCE {
    protocolIEs     ProtocolIE-Container        { {PDUSessionResourceSetupRequestTransferIEs} },
    ...
}

PDUSessionResourceSetupRequestTransferIEs NGAP-PROTOCOL-IES ::= {
    { ID id-PDUSessionAggregateMaximumBitRate           CRITICALITY reject  TYPE PDUSessionAggregateMaximumBitRate    PRESENCE optional    }|
    { ID id-UL-NGU-UP-TNLInformation                    CRITICALITY reject  TYPE UPTransportLayerInformation          PRESENCE mandatory   }|
    { ID id-AdditionalUL-NGU-UP-TNLInformation          CRITICALITY reject  TYPE UPTransportLayerInformationList      PRESENCE optional    }|
    { ID id-DataForwardingNotPossible                   CRITICALITY reject  TYPE DataForwardingNotPossible            PRESENCE optional    }|
    { ID id-PDUSessionType                              CRITICALITY reject  TYPE PDUSessionType                       PRESENCE mandatory   }|
    { ID id-SecurityIndication                          CRITICALITY reject  TYPE SecurityIndication                   PRESENCE optional    }|
    { ID id-NetworkInstance                             CRITICALITY reject  TYPE NetworkInstance                      PRESENCE optional    }|
    { ID id-QosFlowSetupRequestList                     CRITICALITY reject  TYPE QosFlowSetupRequestList              PRESENCE mandatory   }|
    { ID id-CommonNetworkInstance                       CRITICALITY ignore  TYPE CommonNetworkInstance                PRESENCE optional    }|
```

```
    { ID id-DirectForwardingPathAvailability           CRITICALITY ignore  TYPE DirectForwardingPathAvailability     PRESENCE optional   }|
    { ID id-RedundantUL-NGU-UP-TNLInformation          CRITICALITY ignore  TYPE UPTransportLayerInformation          PRESENCE optional   }|
    { ID id-AdditionalRedundantUL-NGU-UP-TNLInformation CRITICALITY ignore  TYPE UPTransportLayerInformationList      PRESENCE optional   }|
    { ID id-RedundantCommonNetworkInstance             CRITICALITY ignore  TYPE CommonNetworkInstance              PRESENCE optional   }|
    { ID id-RedundantPDUSessionInformation             CRITICALITY ignore  TYPE RedundantPDUSessionInformation     PRESENCE optional   }|
    { ID id-MBSSessionSetupRequestList                 CRITICALITY ignore  TYPE MBSSessionSetupRequestList         PRESENCE optional   }|
    { ID id-DownlinkTLContainer                        CRITICALITY ignore  TYPE TLContainer                        PRESENCE optional   },
    ...
}

PDUSessionResourceSetupResponseTransfer ::= SEQUENCE {
    dLQosFlowPerTNLInformation              QosFlowPerTNLInformation,
    additionalDLQosFlowPerTNLInformation    QosFlowPerTNLInformationList                                OPTIONAL,
    securityResult                          SecurityResult                                              OPTIONAL,
    qosFlowFailedToSetupList                QosFlowListWithCause                                        OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceSetupResponseTransfer-ExtIEs} }   OPTIONAL,
    ...
}

PDUSessionResourceSetupResponseTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-RedundantDLQosFlowPerTNLInformation             CRITICALITY ignore  EXTENSION QosFlowPerTNLInformation       PRESENCE optional   }|
    { ID id-AdditionalRedundantDLQosFlowPerTNLInformation   CRITICALITY ignore  EXTENSION QosFlowPerTNLInformationList   PRESENCE optional   }|
    { ID id-UsedRSNInformation                              CRITICALITY ignore  EXTENSION RedundantPDUSessionInformation PRESENCE optional   }|
    { ID id-GlobalRANNodeID                                 CRITICALITY ignore  EXTENSION GlobalRANNodeID                PRESENCE optional   }|
    { ID id-MBS-SupportIndicator                            CRITICALITY ignore  EXTENSION MBS-SupportIndicator           PRESENCE optional   }|
    { ID id-MBSSessionSetupResponseList                     CRITICALITY ignore  EXTENSION MBSSessionSetupResponseList    PRESENCE optional   }|
    { ID id-MBSSessionFailedtoSetupList                     CRITICALITY ignore  EXTENSION MBSSessionFailedtoSetupList    PRESENCE optional   }|
    { ID id-QoSFlowTSCList                                  CRITICALITY ignore  EXTENSION QoSFlowTSCList                 PRESENCE optional   }|
    { ID id-UplinkTLContainer                               CRITICALITY ignore  EXTENSION TLContainer                    PRESENCE optional   }|
    { ID id-ECNMarkingorCongestionInformationReportingStatus    CRITICALITY ignore  EXTENSION ECNMarkingorCongestionInformationReportingStatus
    PRESENCE optional }|
    { ID id-PDUSetbasedHandlingIndicator                    CRITICALITY ignore  EXTENSION PDUSetbasedHandlingIndicator   PRESENCE optional   },
    ...
}

PDUSessionResourceSetupUnsuccessfulTransfer ::= SEQUENCE {
    cause                       Cause,
    criticalityDiagnostics      CriticalityDiagnostics                                                  OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceSetupUnsuccessfulTransfer-ExtIEs} }  OPTIONAL,
    ...
}

PDUSessionResourceSetupUnsuccessfulTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PDUSessionResourceSuspendListSUSReq ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourceSuspendItemSUSReq

PDUSessionResourceSuspendItemSUSReq ::= SEQUENCE {
    pDUSessionID                        PDUSessionID,
    uEContextSuspendRequestTransfer     OCTET STRING (CONTAINING UEContextSuspendRequestTransfer),
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceSuspendItemSUSReq-ExtIEs} }  OPTIONAL,
    ...
}
```

```
PDUSessionResourceSuspendItemSUSReq-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PDUSessionResourceSwitchedList ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourceSwitchedItem

PDUSessionResourceSwitchedItem ::= SEQUENCE {
    pDUSessionID                                PDUSessionID,
    pathSwitchRequestAcknowledgeTransfer        OCTET STRING (CONTAINING PathSwitchRequestAcknowledgeTransfer),
    iE-Extensions       ProtocolExtensionContainer { { PDUSessionResourceSwitchedItem-ExtIEs} } OPTIONAL,
    ...
}

PDUSessionResourceSwitchedItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-PduSessionExpectedUEActivityBehaviour           CRITICALITY ignore  EXTENSION ExpectedUEActivityBehaviour  PRESENCE optional },
    ...
}

PDUSessionResourceToBeSwitchedDLList ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourceToBeSwitchedDLItem

PDUSessionResourceToBeSwitchedDLItem ::= SEQUENCE {
    pDUSessionID                    PDUSessionID,
    pathSwitchRequestTransfer       OCTET STRING (CONTAINING PathSwitchRequestTransfer),
    iE-Extensions       ProtocolExtensionContainer { { PDUSessionResourceToBeSwitchedDLItem-ExtIEs} }   OPTIONAL,
    ...
}

PDUSessionResourceToBeSwitchedDLItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PDUSessionResourceToReleaseListHOCmd ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourceToReleaseItemHOCmd

PDUSessionResourceToReleaseItemHOCmd ::= SEQUENCE {
    pDUSessionID                                PDUSessionID,
    handoverPreparationUnsuccessfulTransfer     OCTET STRING (CONTAINING HandoverPreparationUnsuccessfulTransfer),
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceToReleaseItemHOCmd-ExtIEs} } OPTIONAL,
    ...
}

PDUSessionResourceToReleaseItemHOCmd-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PDUSessionResourceToReleaseListRelCmd ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourceToReleaseItemRelCmd

PDUSessionResourceToReleaseItemRelCmd ::= SEQUENCE {
    pDUSessionID                                    PDUSessionID,
    pDUSessionResourceReleaseCommandTransfer        OCTET STRING (CONTAINING PDUSessionResourceReleaseCommandTransfer),
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionResourceToReleaseItemRelCmd-ExtIEs} }   OPTIONAL,
    ...
}
```

```
PDUSessionResourceToReleaseItemRelCmd-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PDUSessionType ::= ENUMERATED {
    ipv4,
    ipv6,
    ipv4v6,
    ethernet,
    unstructured,
    ...
}

PDUSessionUsageReport ::= SEQUENCE {
    rATType                             ENUMERATED {nr, eutra, ..., nr-unlicensed, e-utra-unlicensed},
    pDUSessionTimedReportList           VolumeTimedReportList,
    iE-Extensions       ProtocolExtensionContainer { {PDUSessionUsageReport-ExtIEs} } OPTIONAL,
    ...
}

PDUSessionUsageReport-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PDUsetQoSParameters ::= SEQUENCE {
    ulPDUSetQoSInformation  PDUsetQoSInformation    OPTIONAL,
    dlPDUSetQoSInformation  PDUsetQoSInformation    OPTIONAL,
    iE-Extensions           ProtocolExtensionContainer { { PDUsetQoSParameters-ExtIEs } }   OPTIONAL,
    ...
}

PDUsetQoSParameters-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PDUsetQoSInformation    ::= SEQUENCE {
    pduSetDelayBudget                       ExtendedPacketDelayBudget       OPTIONAL,
    pduSetErrorRate                         PacketErrorRate                 OPTIONAL,
    pduSetIntegratedHandlingInformation     ENUMERATED {true, false, ...}   OPTIONAL,
    iE-Extensions                           ProtocolExtensionContainer { { PDUsetQoSInformation-ExtIEs } } OPTIONAL,
    ...
}

PDUsetQoSInformation-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PDUSetbasedHandlingIndicator ::= ENUMERATED {supported, ...}

PEIPSassistanceInformation ::= SEQUENCE {
    cNsubgroupID            CNsubgroupID,
    iE-Extensions       ProtocolExtensionContainer { {PEIPSassistanceInformation-ExtIEs} } OPTIONAL,
    ...
}
```

```
PEIPSassistanceInformation-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

Periodicity ::= INTEGER (0..640000, ...)

PeriodicityBound ::= SEQUENCE {
    periodicityLowerBound                   Periodicity,
    periodicityUpperBound                   Periodicity,
    iE-Extensions               ProtocolExtensionContainer { {PeriodicityBound-ExtIEs} } OPTIONAL,
    ...
}

PeriodicityBound-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PeriodicityList ::= SEQUENCE {
    allowedPeriodicityList          AllowedPeriodicityList,
    iE-Extensions                   ProtocolExtensionContainer { {PeriodicityList-ExtIEs} } OPTIONAL,
    ...
}

PeriodicityList-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

AllowedPeriodicityList ::= SEQUENCE (SIZE(1..maxnoofPeriodicities)) OF Periodicity

PeriodicityRange ::= CHOICE {
    periodicityBound                PeriodicityBound,
    periodicityList                 AllowedPeriodicityList,
    choice-extensions               ProtocolIE-SingleContainer { {PeriodicityRange-ExtIEs} }
}

PeriodicityRange-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

PeriodicRegistrationUpdateTimer ::= BIT STRING (SIZE(8))

PLMNIdentity ::= OCTET STRING (SIZE(3))

PLMNAreaBasedQMC ::= SEQUENCE {
    plmnListforQMC      PLMNListforQMC,
    iE-Extensions       ProtocolExtensionContainer { {PLMNAreaBasedQMC-ExtIEs} } OPTIONAL,
    ...
}

PLMNAreaBasedQMC-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}
```

```
PLMNListforQMC ::= SEQUENCE (SIZE(1..maxnoofPLMNforQMC)) OF PLMNIdentity

PLMNSupportList ::= SEQUENCE (SIZE(1..maxnoofPLMNs)) OF PLMNSupportItem

PLMNSupportItem ::= SEQUENCE {
    pLMNIdentity            PLMNIdentity,
    sliceSupportList        SliceSupportList,
    iE-Extensions       ProtocolExtensionContainer { {PLMNSupportItem-ExtIEs} } OPTIONAL,
    ...
}

PLMNSupportItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-NPN-Support                     CRITICALITY reject  EXTENSION NPN-Support               PRESENCE optional }|
    { ID id-ExtendedSliceSupportList        CRITICALITY reject  EXTENSION ExtendedSliceSupportList  PRESENCE optional }|
    { ID id-OnboardingSupport               CRITICALITY ignore  EXTENSION OnboardingSupport         PRESENCE optional },
    ...
}

PNI-NPN-MobilityInformation ::= SEQUENCE {
    allowed-PNI-NPI-List        Allowed-PNI-NPN-List,
    iE-Extensions               ProtocolExtensionContainer { {PNI-NPN-MobilityInformation-ExtIEs} }  OPTIONAL,
    ...
}

PNI-NPN-MobilityInformation-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PortNumber ::= OCTET STRING (SIZE(2))

Pre-emptionCapability ::= ENUMERATED {
    shall-not-trigger-pre-emption,
    may-trigger-pre-emption,
    ...
}

Pre-emptionVulnerability ::= ENUMERATED {
    not-pre-emptable,
    pre-emptable,
    ...
}

PriorityLevelARP ::= INTEGER (1..15)

PriorityLevelQos ::= INTEGER (1..127, ...)

PWSFailedCellIDList ::= CHOICE {
    eUTRA-CGI-PWSFailedList     EUTRA-CGIList,
    nR-CGI-PWSFailedList        NR-CGIList,
    choice-Extensions       ProtocolIE-SingleContainer { {PWSFailedCellIDList-ExtIEs} }
}

PWSFailedCellIDList-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
```

```
}

PNI-NPN-AreaScopeofMDT ::= SEQUENCE {
    cAGListforMDT       CAGListforMDT,
    iE-Extensions       ProtocolExtensionContainer { {PNI-NPN-AreaScopeofMDT-ExtIEs} } OPTIONAL,
    ...
}

PNI-NPN-AreaScopeofMDT-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

PNI-NPNBasedMDT::= SEQUENCE {
    cAGListforMDT       CAGListforMDT,
    iE-Extensions       ProtocolExtensionContainer { {PNI-NPNBasedMDT-ExtIEs} } OPTIONAL,
    ...
}

PNI-NPNBasedMDT-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

-- Q

QMCConfigInfo ::= SEQUENCE {
    uEAppLayerMeasInfoList              UEAppLayerMeasInfoList,
    iE-Extensions       ProtocolExtensionContainer { { QMCConfigInfo-ExtIEs} } OPTIONAL,
    ...
}

QMCConfigInfo-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

QMCDeactivation ::= SEQUENCE {
    qoEReferenceList                QoEReferenceList,
    iE-Extensions       ProtocolExtensionContainer { { QMCDeactivation-ExtIEs} } OPTIONAL,
    ...
}

QMCDeactivation-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

QoEReferenceList ::= SEQUENCE (SIZE(1..maxnoofUEAppLayerMeas)) OF QoEReference

QoEReference ::= OCTET STRING (SIZE(6))

QoERVQoEReportingPaths ::= SEQUENCE {
    qoEReportingPath                    ENUMERATED{srb4, srb5, ...} OPTIONAL,
    rVQoEReportingPath                  ENUMERATED{srb4, srb5, ...} OPTIONAL,
    iE-Extensions                       ProtocolExtensionContainer { {QoERVQoEReportingPaths-ExtIEs} }    OPTIONAL,
    ...
}
```

```
QoERVQoEReportingPaths-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}


QosCharacteristics ::= CHOICE {
    nonDynamic5QI       NonDynamic5QIDescriptor,
    dynamic5QI          Dynamic5QIDescriptor,
    choice-Extensions       ProtocolIE-SingleContainer { {QosCharacteristics-ExtIEs} }
}

QosCharacteristics-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

QosFlowAcceptedList ::= SEQUENCE (SIZE(1..maxnoofQosFlows)) OF QosFlowAcceptedItem

QosFlowAcceptedItem ::= SEQUENCE {
    qosFlowIdentifier       QosFlowIdentifier,
    iE-Extensions       ProtocolExtensionContainer { {QosFlowAcceptedItem-ExtIEs} } OPTIONAL,
    ...
}

QosFlowAcceptedItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-CurrentQoSParaSetIndex  CRITICALITY ignore  EXTENSION AlternativeQoSParaSetIndex    PRESENCE optional  },
    ...
}

QosFlowAdditionalInfoListRelCom ::= SEQUENCE (SIZE(1..maxnoofQosFlows)) OF QosFlowAdditionalInfoItemRelCom

QosFlowAdditionalInfoItemRelCom ::= SEQUENCE {
    qosFlowIdentifier               QosFlowIdentifier,
    downlinkTLContainer             TLContainer                                     OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {QosFlowAdditionalInfoItemRelCom-ExtIEs} } OPTIONAL,
    ...
}

QosFlowAdditionalInfoItemRelCom-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

QosFlowAdditionalInfoListRelRes ::= SEQUENCE (SIZE(1..maxnoofQosFlows)) OF QosFlowAdditionalInfoItemRelRes

QosFlowAdditionalInfoItemRelRes ::= SEQUENCE {
    qosFlowIdentifier               QosFlowIdentifier,
    uplinkTLContainer               TLContainer                                     OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {QosFlowAdditionalInfoItemRelRes-ExtIEs} } OPTIONAL,
    ...
}

QosFlowAdditionalInfoItemRelRes-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}
```

```
QosFlowAddOrModifyRequestList ::= SEQUENCE (SIZE(1..maxnoofQosFlows)) OF QosFlowAddOrModifyRequestItem

QosFlowAddOrModifyRequestItem ::= SEQUENCE {
    qosFlowIdentifier               QosFlowIdentifier,
    qosFlowLevelQosParameters       QosFlowLevelQosParameters                                   OPTIONAL,
    e-RAB-ID                        E-RAB-ID                                                    OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {QosFlowAddOrModifyRequestItem-ExtIEs} }   OPTIONAL,
    ...
}

QosFlowAddOrModifyRequestItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    {ID id-TSCTrafficCharacteristics    CRITICALITY ignore  EXTENSION TSCTrafficCharacteristics     PRESENCE optional }|
    {ID id-RedundantQosFlowIndicator    CRITICALITY ignore  EXTENSION RedundantQosFlowIndicator     PRESENCE optional }|
    {ID id-UL-NGU-UP-TNLInformation     CRITICALITY ignore  EXTENSION UPTransportLayerInformation   PRESENCE optional }|
    {ID id-DownlinkTLContainer          CRITICALITY ignore  EXTENSION TLContainer                   PRESENCE optional }|
    {ID id-ECNMarkingorCongestionInformationReportingRequest    CRITICALITY ignore  EXTENSION ECNMarkingorCongestionInformationReportingRequest
    PRESENCE optional },
    ...
}

QosFlowAddOrModifyResponseList ::= SEQUENCE (SIZE(1..maxnoofQosFlows)) OF QosFlowAddOrModifyResponseItem

QosFlowAddOrModifyResponseItem ::= SEQUENCE {
    qosFlowIdentifier       QosFlowIdentifier,
    iE-Extensions       ProtocolExtensionContainer { {QosFlowAddOrModifyResponseItem-ExtIEs} }  OPTIONAL,
    ...
}

QosFlowAddOrModifyResponseItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-CurrentQoSParaSetIndex              CRITICALITY ignore  EXTENSION AlternativeQoSParaSetIndex           PRESENCE optional }|
    { ID id-TSCTrafficCharacteristicsFeedback   CRITICALITY ignore  EXTENSION TSCTrafficCharacteristicsFeedback    PRESENCE optional }|
    { ID id-UplinkTLContainer                   CRITICALITY ignore  EXTENSION TLContainer                          PRESENCE optional }|
    { ID id-DL-NGU-UP-TNLInformation            CRITICALITY ignore  EXTENSION UPTransportLayerInformation          PRESENCE optional }|
    { ID id-ANPacketDelayBudgetUL               CRITICALITY ignore  EXTENSION ExtendedPacketDelayBudget            PRESENCE optional },
    ...
}

QosFlowFeedbackList ::= SEQUENCE (SIZE(1..maxnoofQosFlows)) OF QosFlowFeedbackItem

QosFlowFeedbackItem ::= SEQUENCE {
    qosFlowIdentifier           QosFlowIdentifier,
    updateFeedback              UpdateFeedback                              OPTIONAL,
    cNpacketDelayBudgetDL       ExtendedPacketDelayBudget                   OPTIONAL,
    cNpacketDelayBudgetUL       ExtendedPacketDelayBudget                   OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {QosFlowFeedbackItem-ExtIEs} } OPTIONAL,
    ...
}

QosFlowFeedbackItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}
```

```
QosFlowIdentifier ::= INTEGER (0..63, ...)

QosFlowInformationList ::= SEQUENCE (SIZE(1..maxnoofQosFlows)) OF QosFlowInformationItem

QosFlowInformationItem ::= SEQUENCE {
    qosFlowIdentifier   QosFlowIdentifier,
    dLForwarding        DLForwarding                                                OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {QosFlowInformationItem-ExtIEs} }  OPTIONAL,
    ...
}

QosFlowInformationItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    {ID id-ULForwarding             CRITICALITY ignore  EXTENSION ULForwarding          PRESENCE optional}|
    {ID id-SourceTNLAddrInfo        CRITICALITY ignore  EXTENSION TransportLayerAddress PRESENCE optional}|
    {ID id-SourceNodeTNLAddrInfo    CRITICALITY ignore  EXTENSION TransportLayerAddress PRESENCE optional},
    ...
}

QosFlowLevelQosParameters ::= SEQUENCE {
    qosCharacteristics                  QosCharacteristics,
    allocationAndRetentionPriority      AllocationAndRetentionPriority,
    gBR-QosInformation                  GBR-QosInformation                              OPTIONAL,
    reflectiveQosAttribute              ReflectiveQosAttribute                          OPTIONAL,
    additionalQosFlowInformation        AdditionalQosFlowInformation                    OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {QosFlowLevelQosParameters-ExtIEs} }   OPTIONAL,
    ...
}

QosFlowLevelQosParameters-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    {ID id-QosMonitoringRequest             CRITICALITY ignore  EXTENSION QosMonitoringRequest            PRESENCE optional}|
    {ID id-QosMonitoringReportingFrequency  CRITICALITY ignore  EXTENSION QosMonitoringReportingFrequency PRESENCE optional}|
    {ID id-PDUsetQoSParameters              CRITICALITY ignore  EXTENSION PDUsetQoSParameters             PRESENCE optional}|
    {ID id-DLPDUSetInformationMarkingSupportIndication  CRITICALITY ignore  EXTENSION DLPDUSetInformationMarkingSupportIndication    PRESENCE
optional}|
    { ID id-MMSID                           CRITICALITY ignore  EXTENSION MMSID                           PRESENCE optional}|
    { ID id-Indication-of-Bitrate-Adaptation    CRITICALITY ignore  EXTENSION Indication-of-Bitrate-Adaptation  PRESENCE optional},
    ...
}


QosMonitoringRequest ::= ENUMERATED {ul, dl, both, ..., stop}

QosMonitoringReportingFrequency ::= INTEGER (1..1800, ...)

QoSFlowList ::= SEQUENCE (SIZE(1..maxnoofQosFlows)) OF QosFlowIdentifier

QosFlowListWithCause ::= SEQUENCE (SIZE(1..maxnoofQosFlows)) OF QosFlowWithCauseItem

QosFlowWithCauseItem ::= SEQUENCE {
    qosFlowIdentifier       QosFlowIdentifier,
    cause                   Cause,
    iE-Extensions       ProtocolExtensionContainer { {QosFlowWithCauseItem-ExtIEs} } OPTIONAL,
    ...
}
```

```
QosFlowWithCauseItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

QosFlowModifyConfirmList ::= SEQUENCE (SIZE(1..maxnoofQosFlows)) OF QosFlowModifyConfirmItem

QosFlowModifyConfirmItem ::= SEQUENCE {
    qosFlowIdentifier       QosFlowIdentifier,
    iE-Extensions       ProtocolExtensionContainer { {QosFlowModifyConfirmItem-ExtIEs} }    OPTIONAL,
    ...
}

QosFlowModifyConfirmItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

QosFlowNotifyList ::= SEQUENCE (SIZE(1..maxnoofQosFlows)) OF QosFlowNotifyItem

QosFlowNotifyItem ::= SEQUENCE {
    qosFlowIdentifier           QosFlowIdentifier,
    notificationCause           NotificationCause,
    iE-Extensions       ProtocolExtensionContainer { {QosFlowNotifyItem-ExtIEs} }   OPTIONAL,
    ...
}

QosFlowNotifyItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-CurrentQoSParaSetIndex              CRITICALITY ignore  EXTENSION AlternativeQoSParaSetNotifyIndex   PRESENCE optional }|
    { ID id-TSCTrafficCharacteristicsFeedback   CRITICALITY ignore  EXTENSION TSCTrafficCharacteristicsFeedback  PRESENCE optional },
    ...
}
QosFlowParametersList ::= SEQUENCE (SIZE(1..maxnoofQosFlows)) OF QosFlowParametersItem

QosFlowParametersItem ::= SEQUENCE {
    qosFlowIdentifier               QosFlowIdentifier,
    alternativeQoSParaSetList       AlternativeQoSParaSetList                           OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {QosFlowParametersItem-ExtIEs} }   OPTIONAL,
    ...
}

QosFlowParametersItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-CNPacketDelayBudgetDL           CRITICALITY ignore  EXTENSION ExtendedPacketDelayBudget     PRESENCE optional }|
    { ID id-CNPacketDelayBudgetUL           CRITICALITY ignore  EXTENSION ExtendedPacketDelayBudget     PRESENCE optional }|
    { ID id-BurstArrivalTimeDownlink        CRITICALITY ignore  EXTENSION BurstArrivalTime              PRESENCE optional },
    ...
}

QosFlowPerTNLInformation ::= SEQUENCE {
    uPTransportLayerInformation     UPTransportLayerInformation,
    associatedQosFlowList           AssociatedQosFlowList,
    iE-Extensions       ProtocolExtensionContainer { { QosFlowPerTNLInformation-ExtIEs} }   OPTIONAL,
    ...
}
```

```
QosFlowPerTNLInformation-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

QosFlowPerTNLInformationList ::= SEQUENCE (SIZE(1..maxnoofMultiConnectivityMinusOne)) OF QosFlowPerTNLInformationItem

QosFlowPerTNLInformationItem ::= SEQUENCE {
    qosFlowPerTNLInformation               QosFlowPerTNLInformation,
    iE-Extensions       ProtocolExtensionContainer { { QosFlowPerTNLInformationItem-ExtIEs} }   OPTIONAL,
    ...
}

QosFlowPerTNLInformationItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

QosFlowSetupRequestList ::= SEQUENCE (SIZE(1..maxnoofQosFlows)) OF QosFlowSetupRequestItem

QosFlowSetupRequestItem ::= SEQUENCE {
    qosFlowIdentifier               QosFlowIdentifier,
    qosFlowLevelQosParameters       QosFlowLevelQosParameters,
    e-RAB-ID                        E-RAB-ID                                            OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {QosFlowSetupRequestItem-ExtIEs} } OPTIONAL,
    ...
}

QosFlowSetupRequestItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    {ID id-TSCTrafficCharacteristics    CRITICALITY ignore  EXTENSION TSCTrafficCharacteristics   PRESENCE optional }|
    {ID id-RedundantQosFlowIndicator    CRITICALITY ignore  EXTENSION RedundantQosFlowIndicator   PRESENCE optional }|
    {ID id-ECNMarkingorCongestionInformationReportingRequest    CRITICALITY ignore  EXTENSION ECNMarkingorCongestionInformationReportingRequest
    PRESENCE optional },
    ...
}

QosFlowListWithDataForwarding ::= SEQUENCE (SIZE(1..maxnoofQosFlows)) OF QosFlowItemWithDataForwarding

QosFlowItemWithDataForwarding ::= SEQUENCE {
    qosFlowIdentifier           QosFlowIdentifier,
    dataForwardingAccepted      DataForwardingAccepted                                  OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {QosFlowItemWithDataForwarding-ExtIEs} }   OPTIONAL,
    ...
}

QosFlowItemWithDataForwarding-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-CurrentQoSParaSetIndex  CRITICALITY ignore  EXTENSION AlternativeQoSParaSetIndex    PRESENCE optional  },
    ...
}

QosFlowToBeForwardedList ::= SEQUENCE (SIZE(1..maxnoofQosFlows)) OF QosFlowToBeForwardedItem

QosFlowToBeForwardedItem ::= SEQUENCE {
    qosFlowIdentifier       QosFlowIdentifier,
    iE-Extensions       ProtocolExtensionContainer { {QosFlowToBeForwardedItem-ExtIEs} }    OPTIONAL,
    ...
```

```
}

QosFlowToBeForwardedItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

QoSFlowTSCList ::= SEQUENCE (SIZE(1..maxnoofQosFlows)) OF QoSFlowTSCItem

QoSFlowTSCItem ::= SEQUENCE {
    qosFlowIdentifier                   QosFlowIdentifier,
    tSCTrafficCharacteristicsFeedback   TSCTrafficCharacteristicsFeedback   OPTIONAL,
    aNPacketDelayBudgetUL               ExtendedPacketDelayBudget           OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {QoSFlowTSCItem-ExtIEs} }  OPTIONAL,
    ...
}

QoSFlowTSCItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

QoSFlowsUsageReportList ::= SEQUENCE (SIZE(1..maxnoofQosFlows)) OF QoSFlowsUsageReport-Item

QoSFlowsUsageReport-Item ::= SEQUENCE {
    qosFlowIdentifier                 QosFlowIdentifier,
    rATType                           ENUMERATED {nr, eutra, ..., nr-unlicensed, e-utra-unlicensed},
    qoSFlowsTimedReportList           VolumeTimedReportList,
    iE-Extensions       ProtocolExtensionContainer { {QoSFlowsUsageReport-Item-ExtIEs} } OPTIONAL,
    ...
}

QoSFlowsUsageReport-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

-- R

RANfeedbacktype ::= CHOICE {
    proactive                   RANfeedbacktype-proactive,
    reactive                    RANfeedbacktype-reactive,
    choice-extensions           ProtocolIE-SingleContainer { {RANfeedbacktype-ExtIEs} }
}

RANfeedbacktype-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

RANfeedbacktype-proactive ::= SEQUENCE {
    burstArrivalTimeWindow  BurstArrivalTimeWindow,
    periodicityRange        PeriodicityRange            OPTIONAL,
    iE-Extension            ProtocolExtensionContainer { {RANfeedbacktype-proactive-ExtIEs} }   OPTIONAL,
    ...
}

RANfeedbacktype-proactive-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
```

```
    ...
}

RANfeedbacktype-reactive ::= SEQUENCE {
    capabilityForBATAdaptation  ENUMERATED {true, ...},
    iE-Extension            ProtocolExtensionContainer { {RANfeedbacktype-reactive-ExtIEs} }    OPTIONAL,
    ...
}

RANfeedbacktype-reactive-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

Range ::= ENUMERATED {m50, m80, m180, m200, m350, m400, m500, m700, m1000, ...}

RANNodeName ::= PrintableString (SIZE(1..150, ...))

RANNodeNameVisibleString ::= VisibleString (SIZE(1..150, ...))

RANNodeNameUTF8String ::= UTF8String (SIZE(1..150, ...))

RANPagingPriority ::= INTEGER (1..256)

RANStatusTransfer-TransparentContainer ::= SEQUENCE {
    dRBsSubjectToStatusTransferList     DRBsSubjectToStatusTransferList,
    iE-Extensions       ProtocolExtensionContainer { {RANStatusTransfer-TransparentContainer-ExtIEs} }  OPTIONAL,
    ...
}

RANStatusTransfer-TransparentContainer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

RANTimingSynchronisationStatusInfo  ::= SEQUENCE {
    synchronisationState            ENUMERATED {locked, holdover, freerun, ...}                 OPTIONAL,
    traceabletoUTC                  ENUMERATED {true, false, ...}                               OPTIONAL,
    traceabletoGNSS                 ENUMERATED {true, false, ...}                               OPTIONAL,
    clockFrequencyStability         BIT STRING (SIZE(16))                                       OPTIONAL,
    clockAccuracy                   ClockAccuracy                                               OPTIONAL,
    parentTImeSource                ParentTImeSource                                            OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {RANTimingSynchronisationStatusInfo-ExtIEs} }   OPTIONAL,
    ...
}

RANTimingSynchronisationStatusInfo-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

RAN-TSSRequestType ::= ENUMERATED {start, stop, ...}


RAN-TSSScope    ::= CHOICE {
    rANNodeLevel            GlobalGNB-ID,
    cellListLevel           RANTSSCellList,
```

```
    choice-Extensions       ProtocolIE-SingleContainer { { RAN-TSSScope-ExtIEs} }
}

RAN-TSSScope-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

RANTSSCellList ::= SEQUENCE (SIZE(1..maxnoofCellsTSS)) OF RANTSSCellItem

RANTSSCellItem ::= SEQUENCE {
    nRCGI               NR-CGI,
    iE-Extensions       ProtocolExtensionContainer { {RANTSSCellItem-ExtIEs} }  OPTIONAL,
    ...
}

RANTSSCellItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

RAN-UE-NGAP-ID ::= INTEGER (0..4294967295)

RAT-Information ::= ENUMERATED {
    unlicensed,
    nb-IoT,
    ...,
    nR-LEO,
    nR-MEO,
    nR-GEO,
    nR-OTHERSAT
}

RATRestrictions ::= SEQUENCE (SIZE(1..maxnoofEPLMNsPlusOne)) OF RATRestrictions-Item

RATRestrictions-Item ::= SEQUENCE {
    pLMNIdentity                    PLMNIdentity,
    rATRestrictionInformation       RATRestrictionInformation,
    iE-Extensions       ProtocolExtensionContainer { {RATRestrictions-Item-ExtIEs} }        OPTIONAL,
    ...
}

RATRestrictions-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-ExtendedRATRestrictionInformation       CRITICALITY ignore  EXTENSION ExtendedRATRestrictionInformation   PRESENCE optional },
    ...
}

RATRestrictionInformation ::= BIT STRING (SIZE(8, ...))

RecommendedCellsForPaging ::= SEQUENCE {
    recommendedCellList         RecommendedCellList,
    iE-Extensions       ProtocolExtensionContainer { {RecommendedCellsForPaging-ExtIEs} }   OPTIONAL,
    ...
}

RecommendedCellsForPaging-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
```

```
    ...
}

RecommendedCellList ::= SEQUENCE (SIZE(1..maxnoofRecommendedCells)) OF RecommendedCellItem

RecommendedCellItem ::= SEQUENCE {
    nGRAN-CGI               NGRAN-CGI,
    timeStayedInCell        INTEGER (0..4095)       OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {RecommendedCellItem-ExtIEs} } OPTIONAL,
    ...
}

RecommendedCellItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

RecommendedRANNodesForPaging ::= SEQUENCE {
    recommendedRANNodeList      RecommendedRANNodeList,
    iE-Extensions       ProtocolExtensionContainer { {RecommendedRANNodesForPaging-ExtIEs} }    OPTIONAL,
    ...
}

RecommendedRANNodesForPaging-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

RecommendedRANNodeList::= SEQUENCE (SIZE(1..maxnoofRecommendedRANNodes)) OF RecommendedRANNodeItem

RecommendedRANNodeItem ::= SEQUENCE {
    aMFPagingTarget     AMFPagingTarget,
    iE-Extensions       ProtocolExtensionContainer { {RecommendedRANNodeItem-ExtIEs} }  OPTIONAL,
    ...
}

RecommendedRANNodeItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

RedCapIndication ::= ENUMERATED {
    redcap,
    ...
}

RedirectionVoiceFallback ::= ENUMERATED {
    possible,
    not-possible,
    ...
}

RedundantPDUSessionInformation ::= SEQUENCE {
    rSN                 RSN,
    iE-Extensions       ProtocolExtensionContainer { {RedundantPDUSessionInformation-ExtIEs} }  OPTIONAL,
    ...
}
```

```
RedundantPDUSessionInformation-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-PDUSessionPairID    CRITICALITY ignore  EXTENSION PDUSessionPairID  PRESENCE optional },
    ...
}

RedundantQosFlowIndicator ::= ENUMERATED {true, false}

ReflectiveQosAttribute ::= ENUMERATED {
    subject-to,
    ...
}

RelativeAMFCapacity ::= INTEGER (0..255)

ReportArea ::= ENUMERATED {
    cell,
    ...
}

ReportingThreshold  ::= INTEGER (0.. 4000000000, ...)

RepetitionPeriod ::= INTEGER (0..131071)

ResetAll ::= ENUMERATED {
    reset-all,
    ...
}

ReportAmountMDT ::= ENUMERATED {
    r1, r2, r4, r8, r16, r32, r64, rinfinity
}

ReportIntervalMDT ::= ENUMERATED {
    ms120, ms240, ms480, ms640, ms1024, ms2048, ms5120, ms10240, min1, min6, min12, min30, min60
}

ExtendedReportIntervalMDT ::= ENUMERATED {
    ms20480, ms40960, ...
}

RequestedNSSAI ::= SEQUENCE (SIZE(1..maxnoofRequestedSNSSAIs)) OF RequestedNSSAIItem

RequestedNSSAIItem ::= SEQUENCE {
    s-NSSAI             S-NSSAI,
    iE-Extensions       ProtocolExtensionContainer { {RequestedNSSAIItem-ExtIEs} }  OPTIONAL,
    ...
}

RequestedNSSAIItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

ResetType ::= CHOICE {
```

```
    nG-Interface            ResetAll,
    partOfNG-Interface      UE-associatedLogicalNG-connectionList,
    choice-Extensions       ProtocolIE-SingleContainer { {ResetType-ExtIEs} }
}

ResetType-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

RGLevelWirelineAccessCharacteristics ::= OCTET STRING

RNC-ID ::= INTEGER (0..4095)

RoutingID ::= OCTET STRING

RRCContainer ::= OCTET STRING

RRCEstablishmentCause ::= ENUMERATED {
    emergency,
    highPriorityAccess,
    mt-Access,
    mo-Signalling,
    mo-Data,
    mo-VoiceCall,
    mo-VideoCall,
    mo-SMS,
    mps-PriorityAccess,
    mcs-PriorityAccess,
    ...,
    notAvailable,
    mo-ExceptionData
}

RRCInactiveTransitionReportRequest ::= ENUMERATED {
    subsequent-state-transition-report,
    single-rrc-connected-state-report,
    cancel-report,
    ...
}

RRCState ::= ENUMERATED {
    inactive,
    connected,
    ...
}

RSN ::= ENUMERATED {v1, v2, ...}

RIMInformationTransfer ::= SEQUENCE {
    targetRANNodeID-RIM         TargetRANNodeID-RIM,
    sourceRANNodeID             SourceRANNodeID,
    rIMInformation              RIMInformation,
    iE-Extensions               ProtocolExtensionContainer { {RIMInformationTransfer-ExtIEs} }  OPTIONAL,
    ...
```

```
}

RIMInformationTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}


RIMInformation  ::= SEQUENCE        {
    targetgNBSetID          GNBSetID,
    rIM-RSDetection         ENUMERATED  {rs-detected, rs-disappeared, ...},
    iE-Extensions           ProtocolExtensionContainer { {RIMInformation-ExtIEs} }  OPTIONAL,
    ...
}

RIMInformation-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

GNBSetID ::= BIT STRING (SIZE(22))

RSPPQoSFlowList ::= SEQUENCE (SIZE(1..maxnoofRSPPQoSFlows)) OF RSPPQoSFlowItem

RSPPQoSFlowItem ::= SEQUENCE {
    pQI                 FiveQI,
    rSPPFlowBitRates    RSPPFlowBitRates                                        OPTIONAL,
    range               Range                                                   OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { RSPPQoSFlowItem-ExtIEs} }    OPTIONAL,
    ...
}

RSPPQoSFlowItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

RSPPFlowBitRates ::= SEQUENCE {
    guaranteedFlowBitRate       BitRate,
    maximumFlowBitRate          BitRate,
    iE-Extensions       ProtocolExtensionContainer { { RSPPFlowBitRates-ExtIEs} }   OPTIONAL,
    ...
}

RSPPFlowBitRates-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

RequestedTNLInfo ::= SEQUENCE {
    pLMNIdentity                    PLMNIdentity,
    iE-Extensions                   ProtocolExtensionContainer { { RequestedTNLInfo-ExtIEs} }   OPTIONAL,
    ...
}

RequestedTNLInfo-ExtIEs     NGAP-PROTOCOL-EXTENSION ::= {
    ...
}
```

```
-- S

ScheduledCommunicationTime ::= SEQUENCE {
    dayofWeek           BIT STRING (SIZE(7))                                        OPTIONAL,
    timeofDayStart      INTEGER (0..86399, ...)                                     OPTIONAL,
    timeofDayEnd        INTEGER (0..86399, ...)                                     OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { ScheduledCommunicationTime-ExtIEs}}  OPTIONAL,
    ...
}

ScheduledCommunicationTime-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

SCTP-TLAs   ::= SEQUENCE (SIZE(1..maxnoofXnTLAs)) OF TransportLayerAddress

SD ::= OCTET STRING (SIZE(3))

SecondaryRATUsageInformation ::= SEQUENCE {
    pDUSessionUsageReport       PDUSessionUsageReport                                   OPTIONAL,
    qosFlowsUsageReportList     QoSFlowsUsageReportList                                 OPTIONAL,
    iE-Extension        ProtocolExtensionContainer { {SecondaryRATUsageInformation-ExtIEs} }    OPTIONAL,
    ...
}

SecondaryRATUsageInformation-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

SecondaryRATDataUsageReportTransfer ::= SEQUENCE {
    secondaryRATUsageInformation        SecondaryRATUsageInformation                        OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {SecondaryRATDataUsageReportTransfer-ExtIEs} }  OPTIONAL,
    ...
}

SecondaryRATDataUsageReportTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

SecurityContext ::= SEQUENCE {
    nextHopChainingCount        NextHopChainingCount,
    nextHopNH                   SecurityKey,
    iE-Extensions       ProtocolExtensionContainer { {SecurityContext-ExtIEs} } OPTIONAL,
    ...
}

SecurityContext-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

SecurityIndication ::= SEQUENCE {
```

```
    integrityProtectionIndication              IntegrityProtectionIndication,
    confidentialityProtectionIndication        ConfidentialityProtectionIndication,
    maximumIntegrityProtectedDataRate-UL       MaximumIntegrityProtectedDataRate       OPTIONAL,
-- The above IE shall be present if the Integrity Protection Indication IE is set to the value “required” or “preferred”
    iE-Extensions       ProtocolExtensionContainer { {SecurityIndication-ExtIEs} }      OPTIONAL,
    ...
}

SecurityIndication-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-MaximumIntegrityProtectedDataRate-DL    CRITICALITY ignore  EXTENSION MaximumIntegrityProtectedDataRate PRESENCE optional },
    ...
}

SecurityKey ::= BIT STRING (SIZE(256))

SecurityResult ::= SEQUENCE {
    integrityProtectionResult          IntegrityProtectionResult,
    confidentialityProtectionResult    ConfidentialityProtectionResult,
    iE-Extensions       ProtocolExtensionContainer { {SecurityResult-ExtIEs} }  OPTIONAL,
    ...
}

SecurityResult-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

SensorMeasurementConfiguration ::=  SEQUENCE {
    sensorMeasConfig            SensorMeasConfig,
    sensorMeasConfigNameList    SensorMeasConfigNameList                                        OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {SensorMeasurementConfiguration-ExtIEs} }  OPTIONAL,
    ...
}

SensorMeasurementConfiguration-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

SensorMeasConfigNameList ::= SEQUENCE (SIZE(1..maxnoofSensorName)) OF SensorMeasConfigNameItem

SensorMeasConfigNameItem ::= SEQUENCE {
    sensorNameConfig        SensorNameConfig,
    iE-Extensions       ProtocolExtensionContainer { { SensorMeasConfigNameItem-ExtIEs } }  OPTIONAL,
    ...
}

SensorMeasConfigNameItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

SensorMeasConfig::= ENUMERATED {setup,...}

SensorNameConfig ::= CHOICE {
    uncompensatedBarometricConfig       ENUMERATED {true, ...},
    ueSpeedConfig                       ENUMERATED {true, ...},
```

```
    ueOrientationConfig                ENUMERATED {true, ...},
    choice-Extensions       ProtocolIE-SingleContainer { {SensorNameConfig-ExtIEs} }
}

SensorNameConfig-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

SerialNumber ::= BIT STRING (SIZE(16))

ServedGUAMIList ::= SEQUENCE (SIZE(1..maxnoofServedGUAMIs)) OF ServedGUAMIItem

ServedGUAMIItem ::= SEQUENCE {
    gUAMI               GUAMI,
    backupAMFName       AMFName                                                 OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {ServedGUAMIItem-ExtIEs} } OPTIONAL,
    ...
}

ServedGUAMIItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    {ID id-GUAMIType        CRITICALITY ignore  EXTENSION GUAMIType     PRESENCE optional   }|
    {ID id-ExtendedBackupAMFName    CRITICALITY ignore  EXTENSION Extended-AMFName  PRESENCE optional},
    ...
}

ServiceAreaInformation ::= SEQUENCE (SIZE(1.. maxnoofEPLMNsPlusOne)) OF ServiceAreaInformation-Item

ServiceAreaInformation-Item ::= SEQUENCE {
    pLMNIdentity        PLMNIdentity,
    allowedTACs         AllowedTACs                                                     OPTIONAL,
    notAllowedTACs      NotAllowedTACs                                                  OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {ServiceAreaInformation-Item-ExtIEs} }     OPTIONAL,
    ...
}

ServiceAreaInformation-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

ServiceType ::=  ENUMERATED {streaming, mTSI, vR, ...}

SgNB-UE-X2AP-ID ::= INTEGER (0..4294967295)

SharedNGU-MulticastTNLInformation ::= SEQUENCE {
   iP-MulticastAddress     TransportLayerAddress,
   iP-SourceAddress        TransportLayerAddress,
   gTP-TEID                GTP-TEID,
   iE-Extensions           ProtocolExtensionContainer { {SharedNGU-MulticastTNLInformation-ExtIEs} }    OPTIONAL,
   ...
}

SharedNGU-MulticastTNLInformation-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
   ...
}
```

```
SliceOverloadList ::= SEQUENCE (SIZE(1..maxnoofSliceItems)) OF SliceOverloadItem

SliceOverloadItem ::= SEQUENCE {
    s-NSSAI             S-NSSAI,
    iE-Extensions       ProtocolExtensionContainer { {SliceOverloadItem-ExtIEs} }   OPTIONAL,
    ...
}

SliceOverloadItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

SliceSupportList ::= SEQUENCE (SIZE(1..maxnoofSliceItems)) OF SliceSupportItem

SliceSupportItem ::= SEQUENCE {
    s-NSSAI             S-NSSAI,
    iE-Extensions       ProtocolExtensionContainer { {SliceSupportItem-ExtIEs} }    OPTIONAL,
    ...
}

SliceSupportItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

SliceSupportListQMC ::= SEQUENCE (SIZE(1..maxnoofSNSSAIforQMC)) OF SliceSupportQMC-Item

SliceSupportQMC-Item ::= SEQUENCE {
    s-NSSAI             S-NSSAI,
    iE-Extensions       ProtocolExtensionContainer { {SliceSupportQMC-Item-ExtIEs} }        OPTIONAL,
    ...
}

SliceSupportQMC-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

SNPN-MobilityInformation ::= SEQUENCE {
    serving-NID         NID,
    iE-Extensions       ProtocolExtensionContainer { {SNPN-MobilityInformation-ExtIEs} }    OPTIONAL,
    ...
}

SNPN-MobilityInformation-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    {ID id-EquivalentSNPNsList CRITICALITY reject EXTENSION EquivalentSNPNsList     PRESENCE optional},
    ...
}

S-NSSAI ::= SEQUENCE {
    sST                 SST,
    sD                  SD                                                  OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { S-NSSAI-ExtIEs} }    OPTIONAL,
    ...
}
```

```
S-NSSAI-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

SONConfigurationTransfer ::= SEQUENCE {
    targetRANNodeID-SON         TargetRANNodeID-SON,
    sourceRANNodeID             SourceRANNodeID,
    sONInformation              SONInformation,
    xnTNLConfigurationInfo      XnTNLConfigurationInfo                                      OPTIONAL,
-- The above IE shall be present if the SON Information IE contains the SON Information Request IE set to the value “Xn TNL Configuration Info”
    iE-Extensions       ProtocolExtensionContainer { {SONConfigurationTransfer-ExtIEs} }    OPTIONAL,
    ...
}

SONConfigurationTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    {ID id-RequestedTNLInfo     CRITICALITY ignore  EXTENSION RequestedTNLInfo                  PRESENCE optional},
    ...
}

SONInformation ::= CHOICE {
    sONInformationRequest       SONInformationRequest,
    sONInformationReply         SONInformationReply,
    choice-Extensions       ProtocolIE-SingleContainer { {SONInformation-ExtIEs} }
}

SONInformation-ExtIEs NGAP-PROTOCOL-IES ::= {
    { ID id-SONInformationReport        CRITICALITY ignore  TYPE SONInformationReport       PRESENCE mandatory  },
    ...
}

SONInformationReply ::= SEQUENCE {
    xnTNLConfigurationInfo      XnTNLConfigurationInfo                                  OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {SONInformationReply-ExtIEs} }     OPTIONAL,
    ...
}

SONInformationReply-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

SONInformationReport::= CHOICE {
    failureIndicationInformation    FailureIndication,
    hOReportInformation             HOReport,
    choice-Extensions       ProtocolIE-SingleContainer { { SONInformationReport-ExtIEs} }
}

SONInformationReport-ExtIEs NGAP-PROTOCOL-IES ::= {
    { ID id-SuccessfulHandoverReportList                CRITICALITY ignore  TYPE SuccessfulHandoverReportList      PRESENCE mandatory }|
    { ID id-SuccessfulPSCellChangeReportList            CRITICALITY ignore  TYPE SuccessfulPSCellChangeReportList  PRESENCE mandatory },
    ...
}

SNPN-CellBasedMDT::= SEQUENCE {
```

```
    sNPNcellIdListforMDT    SNPNCellIdListforMDT,
    iE-Extensions       ProtocolExtensionContainer { {SNPN-CellBasedMDT-ExtIEs} } OPTIONAL,
    ...
}

SNPN-CellBasedMDT-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

SNPNCellIdListforMDT ::= SEQUENCE (SIZE(1..maxnoofCellIDforMDT)) OF SNPNCellIdListforMDTItem

SNPNCellIdListforMDTItem ::= SEQUENCE {
    nR-CGI                          NR-CGI,
    nID                             NID,
    iE-Extensions       ProtocolExtensionContainer {{ SNPNCellIdListforMDTItem-ExtIEs}}     OPTIONAL,
    ...
}

SNPNCellIdListforMDTItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}


SNPN-TAIBasedMDT::= SEQUENCE {
    sNPNTAIListforMDT   SNPNTAIListforMDT,
    iE-Extensions       ProtocolExtensionContainer { {SNPN-TAIBasedMDT-ExtIEs} } OPTIONAL,
    ...
}

SNPN-TAIBasedMDT-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

SNPNTAIListforMDT ::= SEQUENCE (SIZE(1.. maxnoofTAforMDT)) OF SNPNTAIListforMDTItem

SNPNTAIListforMDTItem ::= SEQUENCE {
    tAI                             TAI,
    nID                             NID,
    iE-Extensions       ProtocolExtensionContainer {{ SNPNTAIListforMDTItem-ExtIEs}}        OPTIONAL,
    ...
}

SNPNTAIListforMDTItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

SNPN-BasedMDT::= SEQUENCE {
    sNPNListforMDT      SNPNListforMDT,
    iE-Extensions       ProtocolExtensionContainer { {SNPN-BasedMDT-ExtIEs} } OPTIONAL,
    ...
}

SNPN-BasedMDT-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
```

```
}

SNPNListforMDT ::= SEQUENCE (SIZE(1.. maxnoofMDTSNPNs)) OF SNPNListforMDTItem

SNPNListforMDTItem ::= SEQUENCE {
    pLMNIdentity                        PLMNIdentity,
    nID                                 NID,
    iE-Extensions       ProtocolExtensionContainer {{ SNPNListforMDTItem-ExtIEs}}       OPTIONAL,
    ...
}

SNPNListforMDTItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

-- ********************************************************************
-- SON Information Report
-- ********************************************************************

SuccessfulHandoverReportList ::= SEQUENCE (SIZE(1..maxnoofSuccessfulHOReports)) OF SuccessfulHandoverReport-Item

SuccessfulHandoverReport-Item ::= SEQUENCE {
    successfulHOReportContainer         OCTET STRING,
    iE-Extensions       ProtocolExtensionContainer { { SuccessfulHandoverReport-Item-ExtIEs} } OPTIONAL,
    ...
}

SuccessfulHandoverReport-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

SuccessfulPSCellChangeReportList ::= SEQUENCE (SIZE(1..maxnoofSuccessfulPSCellChangeReports)) OF SuccessfulPSCellChangeReport-Item

SuccessfulPSCellChangeReport-Item ::= SEQUENCE {
    successfulPSCellChangeReportContainer           OCTET STRING,
    iE-Extensions       ProtocolExtensionContainer { { SuccessfulPSCellChangeReport-Item-ExtIEs} } OPTIONAL,
    ...
}

SuccessfulPSCellChangeReport-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

SONInformationRequest ::= ENUMERATED {
    xn-TNL-configuration-info,
    ...
}

SourceNGRANNode-ToTargetNGRANNode-TransparentContainer ::= SEQUENCE {
    rRCContainer                            RRCContainer,
    pDUSessionResourceInformationList       PDUSessionResourceInformationList                                   OPTIONAL,
    e-RABInformationList                    E-RABInformationList                                                OPTIONAL,
    targetCell-ID                           NGRAN-CGI,
    indexToRFSP                             IndexToRFSP                                                         OPTIONAL,
```

```
    uEHistoryInformation                    UEHistoryInformation,
    iE-Extensions       ProtocolExtensionContainer { {SourceNGRANNode-ToTargetNGRANNode-TransparentContainer-ExtIEs} }OPTIONAL,
    ...
}

SourceNGRANNode-ToTargetNGRANNode-TransparentContainer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-SgNB-UE-X2AP-ID                             CRITICALITY ignore  EXTENSION SgNB-UE-X2AP-ID                    PRESENCE optional    }|
    { ID id-UEHistoryInformationFromTheUE               CRITICALITY ignore  EXTENSION UEHistoryInformationFromTheUE      PRESENCE optional    }|
    { ID id-SourceNodeID                                CRITICALITY ignore  EXTENSION SourceNodeID                       PRESENCE optional    }|
    { ID id-UEContextReferenceAtSource                  CRITICALITY ignore  EXTENSION RAN-UE-NGAP-ID                     PRESENCE optional    }|
    { ID id-MBS-ActiveSessionInformation-SourcetoTargetList CRITICALITY ignore  EXTENSION MBS-ActiveSessionInformation-SourcetoTargetList
    PRESENCE optional       }|
    { ID id-QMCConfigInfo                               CRITICALITY ignore  EXTENSION QMCConfigInfo                      PRESENCE optional    }|
    { ID id-NGAPIESupportInformationRequestList         CRITICALITY ignore  EXTENSION NGAPIESupportInformationRequestList PRESENCE optional   }|
    { ID id-CandidateRelayUEInformationList             CRITICALITY reject  EXTENSION CandidateRelayUEInformationList    PRESENCE optional    }|
    { ID id-TimeBasedHandoverInformation                CRITICALITY ignore  EXTENSION TimeBasedHandoverInformation       PRESENCE optional    }|
    { ID id-SourceSN-to-TargetSN-QMCInfo                CRITICALITY ignore  EXTENSION QMCConfigInfo                      PRESENCE optional    },
    ...
}

SourceNodeID ::= CHOICE {
    sourceengNB-ID          GlobalGNB-ID,
    choice-Extensions       ProtocolIE-SingleContainer { { SourceNodeID-ExtIEs} }
}

SourceNodeID-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

SourceOfUEActivityBehaviourInformation ::= ENUMERATED {
    subscription-information,
    statistics,
    ...
}

SourceRANNodeID ::= SEQUENCE {
    globalRANNodeID     GlobalRANNodeID,
    selectedTAI         TAI,
    iE-Extensions       ProtocolExtensionContainer { {SourceRANNodeID-ExtIEs} } OPTIONAL,
    ...
}

SourceRANNodeID-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

SourceToTarget-TransparentContainer ::= OCTET STRING
-- This IE includes a transparent container from the source RAN node to the target RAN node.
-- The octets of the OCTET STRING are encoded according to the specifications of the target system.

SourceToTarget-AMFInformationReroute ::= SEQUENCE {
    configuredNSSAI                 ConfiguredNSSAI                                         OPTIONAL,
    rejectedNSSAIinPLMN             RejectedNSSAIinPLMN                                     OPTIONAL,
    rejectedNSSAIinTA               RejectedNSSAIinTA                                       OPTIONAL,
```

```
    iE-Extensions       ProtocolExtensionContainer { {SourceToTarget-AMFInformationReroute-ExtIEs} } OPTIONAL,
    ...
}

SourceToTarget-AMFInformationReroute-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

-- This IE includes information from the source Core node to the target Core node for reroute information provide by NSSF.
-- The octets of the OCTET STRING are encoded according to the specifications of the Core network.

SRVCCOperationPossible ::= ENUMERATED {
    possible,
    notPossible,
    ...
}

ConfiguredNSSAI  ::=  OCTET STRING (SIZE(128))

RejectedNSSAIinPLMN ::= OCTET STRING (SIZE(32))

RejectedNSSAIinTA ::= OCTET STRING (SIZE(32))

SST ::= OCTET STRING (SIZE(1))

SupportedTAList ::= SEQUENCE (SIZE(1..maxnoofTACs)) OF SupportedTAItem

SupportedTAItem ::= SEQUENCE {
    tAC                     TAC,
    broadcastPLMNList       BroadcastPLMNList,
    iE-Extensions       ProtocolExtensionContainer { {SupportedTAItem-ExtIEs} } OPTIONAL,
    ...
}

SupportedTAItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    {ID id-ConfiguredTACIndication      CRITICALITY ignore  EXTENSION ConfiguredTACIndication   PRESENCE optional  }|
    {ID id-RAT-Information              CRITICALITY reject  EXTENSION RAT-Information           PRESENCE optional  },
    ...
}

SuspendIndicator ::= ENUMERATED {
    true,
    ...
}

Suspend-Request-Indication ::= ENUMERATED {
    suspend-requested,
    ...
}

Suspend-Response-Indication ::= ENUMERATED {
    suspend-indicated,
    ...
}
```

```
SurvivalTime ::= INTEGER (0..1920000, ...)

SLPositioningRangingServiceInfo ::= SEQUENCE{
    sLPositioningRangingAuthorized      SLPositioningRangingAuthorized,
    sLPositioningRangingQoSParameters   SLPositioningRangingQoSParameters   OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {SLPositioningRangingServiceInfo-ExtIEs} } OPTIONAL,
    ...
}

SLPositioningRangingServiceInfo-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}


SLPositioningRangingAuthorized ::= ENUMERATED {
    authorized,
    not-authorized,
    ...
}

SLPositioningRangingQoSParameters ::= SEQUENCE {
    rSPPQoSFlowList             RSPPQoSFlowList,
    rSPPLinkAggregateBitRates   BitRate                                             OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { SLPositioningRangingQoSParameters-ExtIEs} }   OPTIONAL,
    ...
}

SLPositioningRangingQoSParameters-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

SCGActivationTime ::= INTEGER (0..40950)

-- T

TAC ::= OCTET STRING (SIZE(3))

TACListInNRNTN ::= SEQUENCE (SIZE(1..maxnoofTACsinNTN)) OF TAC

TAI ::= SEQUENCE {
    pLMNIdentity        PLMNIdentity,
    tAC                 TAC,
    iE-Extensions       ProtocolExtensionContainer { {TAI-ExtIEs} } OPTIONAL,
    ...
}

TAI-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

TAIBroadcastEUTRA ::= SEQUENCE (SIZE(1..maxnoofTAIforWarning)) OF TAIBroadcastEUTRA-Item

TAIBroadcastEUTRA-Item ::= SEQUENCE {
```

```
    tAI                             TAI,
    completedCellsInTAI-EUTRA       CompletedCellsInTAI-EUTRA,
    iE-Extensions       ProtocolExtensionContainer { {TAIBroadcastEUTRA-Item-ExtIEs} } OPTIONAL,
    ...
}

TAIBroadcastEUTRA-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

TAIBroadcastNR ::= SEQUENCE (SIZE(1..maxnoofTAIforWarning)) OF TAIBroadcastNR-Item

TAIBroadcastNR-Item ::= SEQUENCE {
    tAI                         TAI,
    completedCellsInTAI-NR      CompletedCellsInTAI-NR,
    iE-Extensions       ProtocolExtensionContainer { {TAIBroadcastNR-Item-ExtIEs} } OPTIONAL,
    ...
}

TAIBroadcastNR-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

TAICancelledEUTRA ::= SEQUENCE (SIZE(1..maxnoofTAIforWarning)) OF TAICancelledEUTRA-Item

TAICancelledEUTRA-Item ::= SEQUENCE {
    tAI                             TAI,
    cancelledCellsInTAI-EUTRA       CancelledCellsInTAI-EUTRA,
    iE-Extensions       ProtocolExtensionContainer { {TAICancelledEUTRA-Item-ExtIEs} } OPTIONAL,
    ...
}

TAICancelledEUTRA-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

TAICancelledNR ::= SEQUENCE (SIZE(1..maxnoofTAIforWarning)) OF TAICancelledNR-Item

TAICancelledNR-Item ::= SEQUENCE {
    tAI                         TAI,
    cancelledCellsInTAI-NR      CancelledCellsInTAI-NR,
    iE-Extensions       ProtocolExtensionContainer { {TAICancelledNR-Item-ExtIEs} } OPTIONAL,
    ...
}

TAICancelledNR-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

TAIListForInactive ::= SEQUENCE (SIZE(1..maxnoofTAIforInactive)) OF TAIListForInactiveItem

TAIListForInactiveItem ::= SEQUENCE {
    tAI                 TAI,
    iE-Extensions       ProtocolExtensionContainer { {TAIListForInactiveItem-ExtIEs} } OPTIONAL,
```

```
    ...
}

TAIListForInactiveItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

TAIListForPaging ::= SEQUENCE (SIZE(1..maxnoofTAIforPaging)) OF TAIListForPagingItem

TAIListForPagingItem ::= SEQUENCE {
    tAI                 TAI,
    iE-Extensions       ProtocolExtensionContainer { {TAIListForPagingItem-ExtIEs} } OPTIONAL,
    ...
}

TAIListForPagingItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

TAIListForRestart ::= SEQUENCE (SIZE(1..maxnoofTAIforRestart)) OF TAI

TAIListForWarning ::= SEQUENCE (SIZE(1..maxnoofTAIforWarning)) OF TAI

TAINSAGSupportList ::= SEQUENCE (SIZE(1..maxnoofNSAGs)) OF TAINSAGSupportItem

TAINSAGSupportItem ::= SEQUENCE {
    nSAG-ID                     NSAG-ID,
    nSAGSliceSupportList        ExtendedSliceSupportList,
    iE-Extensions       ProtocolExtensionContainer { {TAINSAGSupportItem-ExtIEs} } OPTIONAL,
    ...
}

TAINSAGSupportItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

TAIMBSSupportItem ::= SEQUENCE {
    tAI                     TAI,
    iE-Extensions       ProtocolExtensionContainer { {TAIMBSSupportItem-ExtIEs} } OPTIONAL,
    ...
}

TAIMBSSupportItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}


TAIMBSSupportList ::= SEQUENCE (SIZE(1..maxnoofSupportedTAIforMBS)) OF TAIMBSSupportItem

TargeteNB-ID ::= SEQUENCE {
    globalENB-ID        GlobalNgENB-ID,
    selected-EPS-TAI    EPS-TAI,
    iE-Extensions       ProtocolExtensionContainer { {TargeteNB-ID-ExtIEs} } OPTIONAL,
    ...
```

```
}

TargeteNB-ID-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

TargetHomeENB-ID ::= SEQUENCE {
    pLMNidentity        PLMNIdentity,
    homeENB-ID          BIT STRING (SIZE(28)),
    selected-EPS-TAI    EPS-TAI,
    iE-Extensions       ProtocolExtensionContainer { {TargetHomeENB-ID-ExtIEs} } OPTIONAL,
    ...
}

TargetHomeENB-ID-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

TargetID ::= CHOICE {
    targetRANNodeID         TargetRANNodeID,
    targeteNB-ID            TargeteNB-ID,
    choice-Extensions       ProtocolIE-SingleContainer { {TargetID-ExtIEs} }
}

TargetID-ExtIEs NGAP-PROTOCOL-IES ::= {
    {ID id-TargetRNC-ID         CRITICALITY reject  TYPE TargetRNC-ID       PRESENCE mandatory }|
    {ID id-TargetHomeENB-ID     CRITICALITY reject  TYPE TargetHomeENB-ID   PRESENCE mandatory },
    ...
}

TargetNGRANNode-ToSourceNGRANNode-TransparentContainer ::= SEQUENCE {
    rRCContainer        RRCContainer,
    iE-Extensions       ProtocolExtensionContainer { {TargetNGRANNode-ToSourceNGRANNode-TransparentContainer-ExtIEs} } OPTIONAL,
    ...
}

TargetNGRANNode-ToSourceNGRANNode-TransparentContainer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-DAPSResponseInfoList                        CRITICALITY ignore  EXTENSION DAPSResponseInfoList                      PRESENCE optional
}|
    { ID id-DirectForwardingPathAvailability            CRITICALITY ignore  EXTENSION DirectForwardingPathAvailability          PRESENCE optional
}|
    { ID id-MBS-ActiveSessionInformation-TargettoSourceList CRITICALITY ignore  EXTENSION MBS-ActiveSessionInformation-TargettoSourceList
    PRESENCE optional }|
    { ID id-NGAPIESupportInformationResponseList        CRITICALITY ignore  EXTENSION NGAPIESupportInformationResponseList      PRESENCE optional
},
    ...
}

TargetNGRANNode-ToSourceNGRANNode-FailureTransparentContainer ::= SEQUENCE {
    cell-CAGInformation     Cell-CAGInformation         OPTIONAL,
    iE-Extensions           ProtocolExtensionContainer { {TargetNGRANNode-ToSourceNGRANNode-FailureTransparentContainer-ExtIEs} } OPTIONAL,
    ...
}
```

```
TargetNGRANNode-ToSourceNGRANNode-FailureTransparentContainer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-NGAPIESupportInformationResponseList    CRITICALITY ignore  EXTENSION NGAPIESupportInformationResponseList      PRESENCE optional },
    ...
}

TargetNSSAI ::= SEQUENCE (SIZE(1..maxnoofTargetS-NSSAIs)) OF TargetNSSAI-Item

TargetNSSAI-Item ::= SEQUENCE {
    s-NSSAI             S-NSSAI,
    iE-Extensions       ProtocolExtensionContainer { {TargetNSSAI-Item-ExtIEs} } OPTIONAL,
    ...
}

TargetNSSAI-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

TargetNSSAIInformation ::= SEQUENCE {
    targetNSSAI         TargetNSSAI,
    indexToRFSP         IndexToRFSP,
    iE-Extensions       ProtocolExtensionContainer { {TargetNSSAIInformation-Item-ExtIEs} } OPTIONAL,
    ...
}

TargetNSSAIInformation-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

TargetRANNodeID ::= SEQUENCE {
    globalRANNodeID     GlobalRANNodeID,
    selectedTAI         TAI,
    iE-Extensions       ProtocolExtensionContainer { {TargetRANNodeID-ExtIEs} } OPTIONAL,
    ...
}

TargetRANNodeID-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    {ID id-Selected-Target-SNPN-Identity CRITICALITY reject EXTENSION NID PRESENCE optional },
    ...
}

TargetRANNodeID-RIM ::= SEQUENCE {
    globalRANNodeID     GlobalRANNodeID,
    selectedTAI         TAI,
    iE-Extensions       ProtocolExtensionContainer { {TargetRANNodeID-RIM-ExtIEs} } OPTIONAL,
    ...
}

TargetRANNodeID-RIM-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

TargetRANNodeID-SON ::= SEQUENCE {
    globalRANNodeID     GlobalRANNodeID,
    selectedTAI         TAI,
```

```
    iE-Extensions       ProtocolExtensionContainer { {TargetRANNodeID-SON-ExtIEs} } OPTIONAL,
    ...
}

TargetRANNodeID-SON-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    {ID id-NR-CGI   CRITICALITY ignore  EXTENSION NR-CGI PRESENCE optional },
    ...
}

TargetRNC-ID ::= SEQUENCE {
    lAI                 LAI,
    rNC-ID              RNC-ID,
    extendedRNC-ID      ExtendedRNC-ID                                      OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {TargetRNC-ID-ExtIEs} }    OPTIONAL,
    ...
}

TargetRNC-ID-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

TargetToSource-TransparentContainer ::= OCTET STRING
-- This IE includes a transparent container from the target RAN node to the source RAN node.
-- The octets of the OCTET STRING are encoded according to the specifications of the target system.

TargettoSource-Failure-TransparentContainer ::= OCTET STRING
-- This IE includes a transparent container from the target RAN node to the source RAN node.
-- The octets of the OCTET STRING are encoded according to the specifications of the target system (if applicable).

TimeBasedHandoverInformation ::= SEQUENCE {
    hOWindowStart           HandoverWindowStart,
    hOWindowDuration        HandoverWindowDuration,
    iE-Extensions           ProtocolExtensionContainer { {TimeBasedHandoverInformation-ExtIEs} }  OPTIONAL,
    ...
}

TimeBasedHandoverInformation-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

HandoverWindowStart ::= INTEGER (0..549755813887)

HandoverWindowDuration ::= INTEGER (1..6000)

TimerApproachForGUAMIRemoval ::= ENUMERATED {
    apply-timer,
    ...
}

TimeSinceFailure ::= INTEGER (0..172800, ...)

TimeStamp ::= OCTET STRING (SIZE(4))

TimeSyncAssistanceInfo ::= SEQUENCE {
```

```
    timeDistributionIndication      ENUMERATED {enabled, disabled, ...},
    uUTimeSyncErrorBudget           INTEGER (1..1000000, ...)                           OPTIONAL,
-- The above IE shall be present if the Time Distribution Indication IE is set to the value “enabled”
    iE-Extensions       ProtocolExtensionContainer { {TimeSyncAssistanceInfo-ExtIEs} }  OPTIONAL,
    ...
}

TimeSyncAssistanceInfo-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-ClockQualityReportingControlInfo    CRITICALITY ignore  EXTENSION ClockQualityReportingControlInfo     PRESENCE optional},
    ...
}

TimeToWait ::= ENUMERATED {v1s, v2s, v5s, v10s, v20s, v60s, ...}

TimeUEStayedInCell ::= INTEGER (0..4095)

TimeUEStayedInCellEnhancedGranularity ::= INTEGER (0..40950)

TMGI ::=  OCTET STRING (SIZE(6))

TNAP-ID ::= OCTET STRING

TNGF-ID ::= CHOICE {
    tNGF-ID                 BIT STRING (SIZE(32, ...)),
    choice-Extensions       ProtocolIE-SingleContainer { {TNGF-ID-ExtIEs} }
}

TNGF-ID-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

TNLAddressWeightFactor ::= INTEGER (0..255)

TNLAssociationList ::= SEQUENCE (SIZE(1..maxnoofTNLAssociations)) OF TNLAssociationItem

TNLAssociationItem ::= SEQUENCE {
    tNLAssociationAddress       CPTransportLayerInformation,
    cause                       Cause,
    iE-Extensions       ProtocolExtensionContainer { {TNLAssociationItem-ExtIEs} } OPTIONAL,
    ...
}

TNLAssociationItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

TNLAssociationUsage ::= ENUMERATED {
    ue,
    non-ue,
    both,
    ...
}

TooearlyIntersystemHO::= SEQUENCE {
```

```
    sourcecellID            EUTRA-CGI,
    failurecellID           NGRAN-CGI,
    uERLFReportContainer    UERLFReportContainer        OPTIONAL,
    iE-Extensions           ProtocolExtensionContainer { { TooearlyIntersystemHO-ExtIEs} }       OPTIONAL,
    ...
}

TooearlyIntersystemHO-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

TraceActivation ::= SEQUENCE {
    nGRANTraceID                    NGRANTraceID,
    interfacesToTrace               InterfacesToTrace,
    traceDepth                      TraceDepth,
    traceCollectionEntityIPAddress  TransportLayerAddress,
    iE-Extensions       ProtocolExtensionContainer { {TraceActivation-ExtIEs} } OPTIONAL,
    ...
}

TraceActivation-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-MDTConfiguration            CRITICALITY ignore  EXTENSION MDT-Configuration     PRESENCE optional   }|
    { ID id-TraceCollectionEntityURI    CRITICALITY ignore  EXTENSION URI-address           PRESENCE optional   },
    ...
}

TraceDepth ::= ENUMERATED {
    minimum,
    medium,
    maximum,
    minimumWithoutVendorSpecificExtension,
    mediumWithoutVendorSpecificExtension,
    maximumWithoutVendorSpecificExtension,
    ... ,
    minimumOnlyVendorSpecificTraceRecord,
    mediumOnlyVendorSpecificTraceRecord,
    maximumOnlyVendorSpecificTraceRecord
}

TrafficLoadReductionIndication ::= INTEGER (1..99)

TransportLayerAddress ::= BIT STRING (SIZE(1..160, ...))

TypeOfError ::= ENUMERATED {
    not-understood,
    missing,
    ...
}

TAIBasedMDT ::= SEQUENCE {
    tAIListforMDT           TAIListforMDT,
    iE-Extensions           ProtocolExtensionContainer { {TAIBasedMDT-ExtIEs} } OPTIONAL,
    ...
}
```

```
TAIBasedMDT-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

TAIListforMDT ::= SEQUENCE (SIZE(1..maxnoofTAforMDT)) OF TAI

TAIBasedQMC ::= SEQUENCE {
    tAIListforQMC           TAIListforQMC,
    iE-Extensions           ProtocolExtensionContainer { {TAIBasedQMC-ExtIEs} } OPTIONAL,
    ...
}

TAIBasedQMC-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

TAIListforQMC ::= SEQUENCE (SIZE(1..maxnoofTAforQMC)) OF TAI

TABasedQMC ::= SEQUENCE {
    tAListforQMC            TAListforQMC,
    iE-Extensions       ProtocolExtensionContainer { {TABasedQMC-ExtIEs} } OPTIONAL,
    ...
}

TABasedQMC-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

TAListforQMC ::= SEQUENCE (SIZE(1..maxnoofTAforQMC)) OF TAC


TABasedMDT ::= SEQUENCE {
    tAListforMDT        TAListforMDT,
    iE-Extensions       ProtocolExtensionContainer { {TABasedMDT-ExtIEs} } OPTIONAL,
    ...
}

TABasedMDT-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

TAListforMDT ::= SEQUENCE (SIZE(1..maxnoofTAforMDT)) OF TAC

Threshold-RSRP ::= INTEGER(0..127)

Threshold-RSRQ ::= INTEGER(0..127)

Threshold-SINR ::= INTEGER(0..127)

TimeToTrigger ::= ENUMERATED {ms0, ms40, ms64, ms80, ms100, ms128, ms160, ms256, ms320, ms480, ms512, ms640, ms1024, ms1280, ms2560, ms5120}

TLContainer ::= OCTET STRING
```

```
TWAP-ID ::= OCTET STRING

TWIF-ID ::= CHOICE {
    tWIF-ID                 BIT STRING (SIZE(32, ...)),
    choice-Extensions       ProtocolIE-SingleContainer { {TWIF-ID-ExtIEs} }
}

TWIF-ID-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

TSCAssistanceInformation ::= SEQUENCE {
    periodicity             Periodicity,
    burstArrivalTime        BurstArrivalTime                                        OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {TSCAssistanceInformation-ExtIEs} }    OPTIONAL,
    ...
}

TSCAssistanceInformation-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-SurvivalTime        CRITICALITY ignore  EXTENSION SurvivalTime          PRESENCE optional}|
    { ID id-RANfeedbacktype     CRITICALITY ignore  EXTENSION RANfeedbacktype       PRESENCE optional}|
    { ID id-N6JitterInformation CRITICALITY ignore  EXTENSION N6JitterInformation   PRESENCE optional},
    ...
}

TSCTrafficCharacteristics ::= SEQUENCE {
    tSCAssistanceInformationDL      TSCAssistanceInformation                        OPTIONAL,
    tSCAssistanceInformationUL      TSCAssistanceInformation                        OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {TSCTrafficCharacteristics-ExtIEs} }   OPTIONAL,
    ...
}

TSCTrafficCharacteristics-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

TSCTrafficCharacteristicsFeedback ::= SEQUENCE {
    tSCFeedbackInformationDL        TSCFeedbackInformation                      OPTIONAL,
    tSCFeedbackInformationUL        TSCFeedbackInformation                      OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { TSCTrafficCharacteristicsFeedback-ExtIEs} }   OPTIONAL,
    ...
}

TSCTrafficCharacteristicsFeedback-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

TSCFeedbackInformation ::= SEQUENCE {
    burstArrivalTimeOffset                  INTEGER (-640000..640000, ...),
    adjustedPeriodicity                     Periodicity                         OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { TSCFeedbackInformation-ExtIEs} } OPTIONAL,
    ...
}
```

```
TSCFeedbackInformation-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

-- U

UEAggregateMaximumBitRate ::= SEQUENCE {
    uEAggregateMaximumBitRateDL     BitRate,
    uEAggregateMaximumBitRateUL     BitRate,
    iE-Extensions       ProtocolExtensionContainer { {UEAggregateMaximumBitRate-ExtIEs} } OPTIONAL,
    ...
}

UEAggregateMaximumBitRate-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

UEAppLayerMeasInfoList ::= SEQUENCE (SIZE(1..maxnoofUEAppLayerMeas)) OF UEAppLayerMeasInfoItem

UEAppLayerMeasInfoItem ::= SEQUENCE {
    uEAppLayerMeasConfigInfo        UEAppLayerMeasConfigInfo,
    iE-Extensions       ProtocolExtensionContainer { { UEAppLayerMeasInfoItem-ExtIEs} } OPTIONAL,
    ...
}

UEAppLayerMeasInfoItem-ExtIEs NGAP-PROTOCOL-EXTENSION::= {
    ...
}

UEAppLayerMeasConfigInfo ::= SEQUENCE {
    qoEReference                            QoEReference,
    serviceType                             ServiceType,
    areaScopeOfQMC                          AreaScopeOfQMC                          OPTIONAL,
    measCollEntityIPAddress                 TransportLayerAddress,
    qoEMeasurementStatus                    ENUMERATED {ongoing,...}                OPTIONAL,
    containerForAppLayerMeasConfig          OCTET STRING (SIZE(1..8000))            OPTIONAL,
    measConfigAppLayerID                    INTEGER (0..15, ...)                    OPTIONAL,
    sliceSupportListQMC                     SliceSupportListQMC                     OPTIONAL,
    mDT-AlignmentInfo                       MDT-AlignmentInfo                       OPTIONAL,
    availableRANVisibleQoEMetrics           AvailableRANVisibleQoEMetrics           OPTIONAL,
    iE-Extensions   ProtocolExtensionContainer { { UEAppLayerMeasConfigInfo-ExtIEs} }       OPTIONAL,
    ...
}

UEAppLayerMeasConfigInfo-ExtIEs NGAP-PROTOCOL-EXTENSION::= {
    { ID id-AssistanceInformationQoE-Meas       CRITICALITY ignore  EXTENSION AssistanceInformationQoE-Meas     PRESENCE optional }|
    { ID id-CommServiceType                     CRITICALITY ignore  EXTENSION CommServiceType                PRESENCE optional }|
    { ID id-QoERVQoEReportingPaths              CRITICALITY ignore  EXTENSION QoERVQoEReportingPaths            PRESENCE optional },
    ...
}

UE-associatedLogicalNG-connectionList ::= SEQUENCE (SIZE(1..maxnoofNGConnectionsToReset)) OF UE-associatedLogicalNG-connectionItem
```

```
UE-associatedLogicalNG-connectionItem ::= SEQUENCE {
    aMF-UE-NGAP-ID      AMF-UE-NGAP-ID                                                  OPTIONAL,
    rAN-UE-NGAP-ID      RAN-UE-NGAP-ID                                                  OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {UE-associatedLogicalNG-connectionItem-ExtIEs} }   OPTIONAL,
    ...
}

UE-associatedLogicalNG-connectionItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

UECapabilityInfoRequest ::= ENUMERATED {
    requested,
    ...
}

UEContextRequest ::= ENUMERATED {requested, ...}


UEContextResumeRequestTransfer ::= SEQUENCE {
    qosFlowFailedToResumeList               QosFlowListWithCause                                    OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {UEContextResumeRequestTransfer-ExtIEs} }    OPTIONAL,
    ...
}

UEContextResumeRequestTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

UEContextResumeResponseTransfer ::= SEQUENCE {
    qosFlowFailedToResumeList               QosFlowListWithCause                                    OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {UEContextResumeResponseTransfer-ExtIEs} }   OPTIONAL,
    ...
}

UEContextResumeResponseTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

UEContextSuspendRequestTransfer ::= SEQUENCE {
    suspendIndicator                SuspendIndicator                                        OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {UEContextSuspendRequestTransfer-ExtIEs} }   OPTIONAL,
    ...
}

UEContextSuspendRequestTransfer-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

UE-DifferentiationInfo ::= SEQUENCE {
    periodicCommunicationIndicator  ENUMERATED {periodically, ondemand, ... }                  OPTIONAL,
    periodicTime                    INTEGER (1..3600, ...)                                     OPTIONAL,
    scheduledCommunicationTime      ScheduledCommunicationTime                                 OPTIONAL,
    stationaryIndication            ENUMERATED {stationary, mobile, ...}                       OPTIONAL,
```

```
    trafficProfile                  ENUMERATED {single-packet, dual-packets, multiple-packets, ...}  OPTIONAL,
    batteryIndication               ENUMERATED {battery-powered, battery-powered-not-rechargeable-or-replaceable, not-battery-powered, ...}
    OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { UE-DifferentiationInfo-ExtIEs} } OPTIONAL,
    ...
}

UE-DifferentiationInfo-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

UEHistoryInformation ::= SEQUENCE (SIZE(1..maxnoofCellsinUEHistoryInfo)) OF LastVisitedCellItem

UEHistoryInformationFromTheUE ::= CHOICE {
    nR                      NRMobilityHistoryReport,
    choice-Extensions       ProtocolIE-SingleContainer { {UEHistoryInformationFromTheUE-ExtIEs} }
}

UEHistoryInformationFromTheUE-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

UEIdentityIndexValue ::= CHOICE {
    indexLength10           BIT STRING (SIZE(10)),
    choice-Extensions       ProtocolIE-SingleContainer { {UEIdentityIndexValue-ExtIEs} }
}

UEIdentityIndexValue-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

UE-NGAP-IDs ::= CHOICE {
    uE-NGAP-ID-pair     UE-NGAP-ID-pair,
    aMF-UE-NGAP-ID      AMF-UE-NGAP-ID,
    choice-Extensions       ProtocolIE-SingleContainer { {UE-NGAP-IDs-ExtIEs} }
}

UE-NGAP-IDs-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

UE-NGAP-ID-pair ::= SEQUENCE{
    aMF-UE-NGAP-ID      AMF-UE-NGAP-ID,
    rAN-UE-NGAP-ID      RAN-UE-NGAP-ID,
    iE-Extensions       ProtocolExtensionContainer { {UE-NGAP-ID-pair-ExtIEs} } OPTIONAL,
    ...
}

UE-NGAP-ID-pair-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

UEPagingIdentity ::= CHOICE {
    fiveG-S-TMSI        FiveG-S-TMSI,
```

```
    choice-Extensions       ProtocolIE-SingleContainer { {UEPagingIdentity-ExtIEs} }
    }

UEPagingIdentity-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

UEPresence ::= ENUMERATED {in, out, unknown, ...}

UEPresenceInAreaOfInterestList ::= SEQUENCE (SIZE(1..maxnoofAoI)) OF UEPresenceInAreaOfInterestItem

UEPresenceInAreaOfInterestItem ::= SEQUENCE {
    locationReportingReferenceID        LocationReportingReferenceID,
    uEPresence                          UEPresence,
    iE-Extensions       ProtocolExtensionContainer { {UEPresenceInAreaOfInterestItem-ExtIEs} }  OPTIONAL,
    ...
}

UEPresenceInAreaOfInterestItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

UERadioCapability ::= OCTET STRING

UERadioCapabilityForPaging ::= SEQUENCE {
    uERadioCapabilityForPagingOfNR          UERadioCapabilityForPagingOfNR                  OPTIONAL,
    uERadioCapabilityForPagingOfEUTRA       UERadioCapabilityForPagingOfEUTRA               OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {UERadioCapabilityForPaging-ExtIEs} }  OPTIONAL,
    ...
}

UERadioCapabilityForPaging-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-UERadioCapabilityForPagingOfNB-IoT      CRITICALITY ignore  EXTENSION UERadioCapabilityForPagingOfNB-IoT     PRESENCE optional },
    ...
}

UERadioCapabilityForPagingOfNB-IoT ::= OCTET STRING

UERadioCapabilityForPagingOfNR ::= OCTET STRING

UERadioCapabilityForPagingOfEUTRA ::= OCTET STRING

UERadioCapabilityID ::= OCTET STRING

UERetentionInformation ::= ENUMERATED {
    ues-retained,
    ...
}

UERLFReportContainer ::= CHOICE {
    nR          NRUERLFReportContainer,
    lTE         LTEUERLFReportContainer,
    choice-Extensions       ProtocolIE-SingleContainer { {UERLFReportContainer-ExtIEs} }
}
```

```
UERLFReportContainer-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

UESecurityCapabilities ::= SEQUENCE {
    nRencryptionAlgorithms                  NRencryptionAlgorithms,
    nRintegrityProtectionAlgorithms         NRintegrityProtectionAlgorithms,
    eUTRAencryptionAlgorithms               EUTRAencryptionAlgorithms,
    eUTRAintegrityProtectionAlgorithms      EUTRAintegrityProtectionAlgorithms,
    iE-Extensions       ProtocolExtensionContainer { {UESecurityCapabilities-ExtIEs} }  OPTIONAL,
    ...
}

UESecurityCapabilities-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

UESliceMaximumBitRateList ::= SEQUENCE (SIZE(1..maxnoofAllowedS-NSSAIs)) OF UESliceMaximumBitRateItem

UESliceMaximumBitRateItem ::= SEQUENCE {
    s-NSSAI                     S-NSSAI,
    uESliceMaximumBitRateDL     BitRate,
    uESliceMaximumBitRateUL     BitRate,
    iE-Extensions       ProtocolExtensionContainer { { UESliceMaximumBitRateItem-ExtIEs} } OPTIONAL,
    ...
}

UESliceMaximumBitRateItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}


UE-UP-CIoT-Support ::= ENUMERATED {supported, ...}

UL-CP-SecurityInformation ::= SEQUENCE {
    ul-NAS-MAC              UL-NAS-MAC,
    ul-NAS-Count            UL-NAS-Count,
    iE-Extensions           ProtocolExtensionContainer { { UL-CP-SecurityInformation-ExtIEs} }  OPTIONAL,
    ...
}

UL-CP-SecurityInformation-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

UL-NAS-MAC ::= BIT STRING (SIZE (16))

UL-NAS-Count ::= BIT STRING (SIZE (5))

UL-NGU-UP-TNLModifyList ::= SEQUENCE (SIZE(1..maxnoofMultiConnectivity)) OF UL-NGU-UP-TNLModifyItem

UL-NGU-UP-TNLModifyItem ::= SEQUENCE {
    uL-NGU-UP-TNLInformation        UPTransportLayerInformation,
```

```
    dL-NGU-UP-TNLInformation        UPTransportLayerInformation,
    iE-Extensions       ProtocolExtensionContainer { {UL-NGU-UP-TNLModifyItem-ExtIEs} } OPTIONAL,
    ...
}

UL-NGU-UP-TNLModifyItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-RedundantUL-NGU-UP-TNLInformation   CRITICALITY ignore  EXTENSION UPTransportLayerInformation    PRESENCE optional    }|
    { ID id-RedundantDL-NGU-UP-TNLInformation   CRITICALITY ignore  EXTENSION UPTransportLayerInformation    PRESENCE optional    },
    ...
}

UnavailableGUAMIList ::= SEQUENCE (SIZE(1..maxnoofServedGUAMIs)) OF UnavailableGUAMIItem

UnavailableGUAMIItem ::= SEQUENCE {
    gUAMI                           GUAMI,
    timerApproachForGUAMIRemoval        TimerApproachForGUAMIRemoval                    OPTIONAL,
    backupAMFName                       AMFName                                         OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {UnavailableGUAMIItem-ExtIEs} }    OPTIONAL,
    ...
}

UnavailableGUAMIItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    {ID id-ExtendedBackupAMFName    CRITICALITY ignore  EXTENSION Extended-AMFName  PRESENCE optional},
    ...
}

ULForwarding ::= ENUMERATED {
    ul-forwarding-proposed,
    ...
}

UpdateFeedback ::= BIT STRING (SIZE(8, ...))

UPTransportLayerInformation ::= CHOICE {
    gTPTunnel               GTPTunnel,
    choice-Extensions       ProtocolIE-SingleContainer { {UPTransportLayerInformation-ExtIEs} }
}

UPTransportLayerInformation-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

UPTransportLayerInformationList ::= SEQUENCE (SIZE(1..maxnoofMultiConnectivityMinusOne)) OF UPTransportLayerInformationItem

UPTransportLayerInformationItem ::= SEQUENCE {
    nGU-UP-TNLInformation       UPTransportLayerInformation,
    iE-Extensions       ProtocolExtensionContainer { {UPTransportLayerInformationItem-ExtIEs} } OPTIONAL,
    ...
}

UPTransportLayerInformationItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-CommonNetworkInstance               CRITICALITY ignore  EXTENSION  CommonNetworkInstance               PRESENCE optional    },
    ...
}
```

```
UPTransportLayerInformationPairList ::= SEQUENCE (SIZE(1..maxnoofMultiConnectivityMinusOne)) OF UPTransportLayerInformationPairItem

UPTransportLayerInformationPairItem ::= SEQUENCE {
    uL-NGU-UP-TNLInformation        UPTransportLayerInformation,
    dL-NGU-UP-TNLInformation        UPTransportLayerInformation,
    iE-Extensions       ProtocolExtensionContainer { {UPTransportLayerInformationPairItem-ExtIEs} } OPTIONAL,
    ...
}

UPTransportLayerInformationPairItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

URI-address ::= VisibleString

UserLocationInformation ::= CHOICE {
    userLocationInformationEUTRA    UserLocationInformationEUTRA,
    userLocationInformationNR       UserLocationInformationNR,
    userLocationInformationN3IWF-with-PortNumber    UserLocationInformationN3IWF-with-PortNumber,
    choice-Extensions       ProtocolIE-SingleContainer { {UserLocationInformation-ExtIEs} }
}

UserLocationInformation-ExtIEs NGAP-PROTOCOL-IES ::= {
    { ID id-UserLocationInformationTNGF     CRITICALITY ignore  TYPE UserLocationInformationTNGF     PRESENCE mandatory   }|
    { ID id-UserLocationInformationTWIF     CRITICALITY ignore  TYPE UserLocationInformationTWIF     PRESENCE mandatory   }|
    { ID id-UserLocationInformationW-AGF    CRITICALITY ignore  TYPE UserLocationInformationW-AGF    PRESENCE mandatory   }|
    { ID id-UserLocationInformationN3IWF-without-PortNumber CRITICALITY ignore  TYPE UserLocationInformationN3IWF-without-PortNumber    PRESENCE
mandatory   },
    ...
}

UserLocationInformationEUTRA ::= SEQUENCE {
    eUTRA-CGI           EUTRA-CGI,
    tAI                 TAI,
    timeStamp           TimeStamp                                                   OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {UserLocationInformationEUTRA-ExtIEs} }    OPTIONAL,
    ...
}

UserLocationInformationEUTRA-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-PSCellInformation   CRITICALITY ignore  EXTENSION NGRAN-CGI             PRESENCE optional},
    ...
}

UserLocationInformationN3IWF-with-PortNumber ::= SEQUENCE {
    iPAddress           TransportLayerAddress,
    portNumber          PortNumber,
    iE-Extensions       ProtocolExtensionContainer { {UserLocationInformationN3IWF-with-PortNumber-ExtIEs} }  OPTIONAL,
    ...
}

UserLocationInformationN3IWF-with-PortNumber-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
```

```
    { ID id-TAI         CRITICALITY ignore  EXTENSION TAI                           PRESENCE optional   },
    ...
}
UserLocationInformationN3IWF-without-PortNumber ::= SEQUENCE {
    iPAddress           TransportLayerAddress,
    tAI                 TAI                                 OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { UserLocationInformationN3IWF-without-PortNumber-ExtIEs} } OPTIONAL,
    ...
}

UserLocationInformationN3IWF-without-PortNumber-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

UserLocationInformationTNGF ::= SEQUENCE {
    tNAP-ID             TNAP-ID,
    iPAddress           TransportLayerAddress,
    portNumber          PortNumber                                                  OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {UserLocationInformationTNGF-ExtIEs} } OPTIONAL,
    ...
}

UserLocationInformationTNGF-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-TAI         CRITICALITY ignore  EXTENSION TAI                           PRESENCE optional   },
    ...
}

UserLocationInformationTWIF ::= SEQUENCE {
    tWAP-ID             TWAP-ID,
    iPAddress           TransportLayerAddress,
    portNumber          PortNumber                                                  OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {UserLocationInformationTWIF-ExtIEs} } OPTIONAL,
    ...
}

UserLocationInformationTWIF-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-TAI         CRITICALITY ignore  EXTENSION TAI                           PRESENCE optional   },
    ...
}

UserLocationInformationW-AGF ::= CHOICE {
    globalLine-ID   GlobalLine-ID,
    hFCNode-ID      HFCNode-ID,
    choice-Extensions       ProtocolIE-SingleContainer { { UserLocationInformationW-AGF-ExtIEs} }
}

UserLocationInformationW-AGF-ExtIEs NGAP-PROTOCOL-IES ::= {
    { ID id-GlobalCable-ID  CRITICALITY     ignore  TYPE    GlobalCable-ID      PRESENCE    mandatory }|
    { ID id-HFCNode-ID-new  CRITICALITY     ignore  TYPE    HFCNode-ID-new      PRESENCE    mandatory }|
    { ID id-GlobalCable-ID-new  CRITICALITY ignore  TYPE    GlobalCable-ID-new  PRESENCE    mandatory },
    ...
}

UserLocationInformationNR ::= SEQUENCE {
```

```
    nR-CGI              NR-CGI,
    tAI                 TAI,
    timeStamp           TimeStamp                                                   OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {UserLocationInformationNR-ExtIEs} }   OPTIONAL,
    ...
}

UserLocationInformationNR-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-PSCellInformation                       CRITICALITY ignore  EXTENSION NGRAN-CGI                             PRESENCE optional }|
    { ID id-NID                                     CRITICALITY reject  EXTENSION NID                                   PRESENCE optional }|
    { ID id-NRNTNTAIInformation                     CRITICALITY ignore  EXTENSION NRNTNTAIInformation                   PRESENCE optional }|
    { ID id-MobileIAB-MTUserLocationInformation     CRITICALITY ignore  EXTENSION MobileIAB-MTUserLocationInformation   PRESENCE optional }|
    { ID id-AdditionalULI                           CRITICALITY ignore  EXTENSION AdditionalULI                         PRESENCE optional }|
    { ID id-Aerial-UE-FlightInformationReporting    CRITICALITY ignore  EXTENSION Aerial-UE-FlightInformationReporting  PRESENCE optional },
    ...
}

Aerial-UE-FlightInformationReporting ::= SEQUENCE {
    altitude            Altitude,
    timeStamp           TimeStamp,
    iE-Extensions       ProtocolExtensionContainer { {Aerial-UE-FlightInformationReporting-ExtIEs} } OPTIONAL,
    ...
}


Aerial-UE-FlightInformationReporting-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

Altitude    ::= INTEGER (-420..10000, ...)

AerialUEReportingPeriodicity ::= ENUMERATED {ms120, ms240, ms480, ms640, ms1024, ms2048, ms5120, ms10240, ms20480, ms40960, min1, min6, min12,
min30, ...}

UserPlaneFailureIndication ::= SEQUENCE {
    userPlaneFailureType                UserPlaneFailureType,
    uL-NGU-UP-TNLInformation            UPTransportLayerInformation,
    dL-NGU-UP-TNLInformation            UPTransportLayerInformation,
    iE-Extensions       ProtocolExtensionContainer { { UserPlaneFailureIndication-ExtIEs} } OPTIONAL,
    ...
}

UserPlaneFailureIndication-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

UserPlaneFailureIndicationReport ::= ENUMERATED {
    qos-flows-and-tunnel-to-be-released,
    qoS-flows-to-be-moved,
    new-transport-address-allocated,
    ...
}
```

```
UserPlaneFailureType ::= ENUMERATED {
    gtp-u-error-indication-received,
    up-path-failure,
    ...
}

UserPlaneSecurityInformation ::= SEQUENCE {
    securityResult          SecurityResult,
    securityIndication      SecurityIndication,
    iE-Extensions       ProtocolExtensionContainer { {UserPlaneSecurityInformation-ExtIEs} }    OPTIONAL,
    ...
}

UserPlaneSecurityInformation-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

-- V

VolumeTimedReportList ::= SEQUENCE (SIZE(1..maxnoofTimePeriods)) OF VolumeTimedReport-Item

VolumeTimedReport-Item ::= SEQUENCE {
    startTimeStamp              OCTET STRING (SIZE(4)),
    endTimeStamp                OCTET STRING (SIZE(4)),
    usageCountUL                INTEGER (0..18446744073709551615),
    usageCountDL                INTEGER (0..18446744073709551615),
    iE-Extensions       ProtocolExtensionContainer { {VolumeTimedReport-Item-ExtIEs} } OPTIONAL,
    ...
}

VolumeTimedReport-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

-- W

W-AGF-ID ::= CHOICE {
    w-AGF-ID                BIT STRING (SIZE(16, ...)),
    choice-Extensions       ProtocolIE-SingleContainer { {W-AGF-ID-ExtIEs} }
}

W-AGF-ID-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

WarningAreaCoordinates ::= OCTET STRING (SIZE(1..1024))

WarningAreaList ::= CHOICE {
    eUTRA-CGIListForWarning         EUTRA-CGIListForWarning,
    nR-CGIListForWarning            NR-CGIListForWarning,
    tAIListForWarning               TAIListForWarning,
    emergencyAreaIDList             EmergencyAreaIDList,
    choice-Extensions       ProtocolIE-SingleContainer { {WarningAreaList-ExtIEs} }
}
```

```
WarningAreaList-ExtIEs NGAP-PROTOCOL-IES ::= {
    ...
}

WarningMessageContents ::= OCTET STRING (SIZE(1..9600))

WarningSecurityInfo ::= OCTET STRING (SIZE(50))

WarningType ::= OCTET STRING (SIZE(2))

WLANMeasurementConfiguration ::= SEQUENCE {
    wlanMeasConfig              WLANMeasConfig,
    wlanMeasConfigNameList      WLANMeasConfigNameList                                      OPTIONAL,
    wlan-rssi                   ENUMERATED {true, ...}                                      OPTIONAL,
    wlan-rtt                    ENUMERATED {true, ...}                                      OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { WLANMeasurementConfiguration-ExtIEs } }  OPTIONAL,
    ...
}

WLANMeasurementConfiguration-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

WLANMeasConfigNameList ::= SEQUENCE (SIZE(1..maxnoofWLANName)) OF WLANMeasConfigNameItem

WLANMeasConfigNameItem ::= SEQUENCE {
    wLANName            WLANName,
    iE-Extensions       ProtocolExtensionContainer { { WLANMeasConfigNameItem-ExtIEs } }    OPTIONAL,
    ...
}

WLANMeasConfigNameItem-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

WLANMeasConfig::= ENUMERATED {setup,...}

WLANName ::= OCTET STRING (SIZE (1..32))

WUS-Assistance-Information  ::= SEQUENCE {
    pagingProbabilityInformation            PagingProbabilityInformation,
    iE-Extensions       ProtocolExtensionContainer { { WUS-Assistance-Information-ExtIEs } } OPTIONAL,
    ...
}

WUS-Assistance-Information-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

-- X

XnExtTLAs ::= SEQUENCE (SIZE(1..maxnoofXnExtTLAs)) OF XnExtTLA-Item
```

```
XnExtTLA-Item ::= SEQUENCE {
    iPsecTLA                    TransportLayerAddress                           OPTIONAL,
    gTP-TLAs                    XnGTP-TLAs                                      OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {XnExtTLA-Item-ExtIEs} }   OPTIONAL,
    ...
}

XnExtTLA-Item-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    { ID id-SCTP-TLAs       CRITICALITY ignore  EXTENSION SCTP-TLAs     PRESENCE optional },
    ...
}

XnGTP-TLAs ::= SEQUENCE (SIZE(1..maxnoofXnGTP-TLAs)) OF TransportLayerAddress

XnTLAs ::= SEQUENCE (SIZE(1..maxnoofXnTLAs)) OF TransportLayerAddress

XnTNLConfigurationInfo ::= SEQUENCE {
    xnTransportLayerAddresses           XnTLAs,
    xnExtendedTransportLayerAddresses   XnExtTLAs                                       OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { {XnTNLConfigurationInfo-ExtIEs} }  OPTIONAL,
    ...
}

XnTNLConfigurationInfo-ExtIEs NGAP-PROTOCOL-EXTENSION ::= {
    ...
}

XrDeviceWith2Rx ::= ENUMERATED {true, ...}

-- Y
-- Z

END
-- ASN1STOP
```

9.4.6 Common Definitions

```
-- ASN1START
-- **************************************************************
--
-- Common definitions
--
-- **************************************************************

NGAP-CommonDataTypes {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
ngran-Access (22) modules (3) ngap (1) version1 (1) ngap-CommonDataTypes (3) }

DEFINITIONS AUTOMATIC TAGS ::=

BEGIN
```

```
Criticality     ::= ENUMERATED { reject, ignore, notify }

Presence        ::= ENUMERATED { optional, conditional, mandatory }

PrivateIE-ID    ::= CHOICE {
    local               INTEGER (0..65535),
    global              OBJECT IDENTIFIER
}

ProcedureCode       ::= INTEGER (0..255)

ProtocolExtensionID ::= INTEGER (0..65535)

ProtocolIE-ID       ::= INTEGER (0..65535)

TriggeringMessage   ::= ENUMERATED { initiating-message, successful-outcome, unsuccessful-outcome }

END
-- ASN1STOP
```

9.4.7 Constant Definitions

```
-- ASN1START
-- **************************************************************
--
-- Constant definitions
--
-- **************************************************************

NGAP-Constants {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
ngran-Access (22) modules (3) ngap (1) version1 (1) ngap-Constants (4) }

DEFINITIONS AUTOMATIC TAGS ::=

BEGIN

-- **************************************************************
--
-- IE parameter types from other modules.
--
-- **************************************************************

IMPORTS

    ProcedureCode,
    ProtocolIE-ID
FROM NGAP-CommonDataTypes;


-- **************************************************************
--
-- Elementary Procedures
```

```
--
-- ************************************************************

id-AMFConfigurationUpdate                   ProcedureCode ::= 0
id-AMFStatusIndication                      ProcedureCode ::= 1
id-CellTrafficTrace                         ProcedureCode ::= 2
id-DeactivateTrace                          ProcedureCode ::= 3
id-DownlinkNASTransport                     ProcedureCode ::= 4
id-DownlinkNonUEAssociatedNRPPaTransport    ProcedureCode ::= 5
id-DownlinkRANConfigurationTransfer         ProcedureCode ::= 6
id-DownlinkRANStatusTransfer                ProcedureCode ::= 7
id-DownlinkUEAssociatedNRPPaTransport       ProcedureCode ::= 8
id-ErrorIndication                          ProcedureCode ::= 9
id-HandoverCancel                           ProcedureCode ::= 10
id-HandoverNotification                     ProcedureCode ::= 11
id-HandoverPreparation                      ProcedureCode ::= 12
id-HandoverResourceAllocation               ProcedureCode ::= 13
id-InitialContextSetup                      ProcedureCode ::= 14
id-InitialUEMessage                         ProcedureCode ::= 15
id-LocationReportingControl                 ProcedureCode ::= 16
id-LocationReportingFailureIndication       ProcedureCode ::= 17
id-LocationReport                           ProcedureCode ::= 18
id-NASNonDeliveryIndication                 ProcedureCode ::= 19
id-NGReset                                  ProcedureCode ::= 20
id-NGSetup                                  ProcedureCode ::= 21
id-OverloadStart                            ProcedureCode ::= 22
id-OverloadStop                             ProcedureCode ::= 23
id-Paging                                   ProcedureCode ::= 24
id-PathSwitchRequest                        ProcedureCode ::= 25
id-PDUSessionResourceModify                 ProcedureCode ::= 26
id-PDUSessionResourceModifyIndication       ProcedureCode ::= 27
id-PDUSessionResourceRelease                ProcedureCode ::= 28
id-PDUSessionResourceSetup                  ProcedureCode ::= 29
id-PDUSessionResourceNotify                 ProcedureCode ::= 30
id-PrivateMessage                           ProcedureCode ::= 31
id-PWSCancel                                ProcedureCode ::= 32
id-PWSFailureIndication                     ProcedureCode ::= 33
id-PWSRestartIndication                     ProcedureCode ::= 34
id-RANConfigurationUpdate                   ProcedureCode ::= 35
id-RerouteNASRequest                        ProcedureCode ::= 36
id-RRCInactiveTransitionReport              ProcedureCode ::= 37
id-TraceFailureIndication                   ProcedureCode ::= 38
id-TraceStart                               ProcedureCode ::= 39
id-UEContextModification                    ProcedureCode ::= 40
id-UEContextRelease                         ProcedureCode ::= 41
id-UEContextReleaseRequest                  ProcedureCode ::= 42
id-UERadioCapabilityCheck                   ProcedureCode ::= 43
id-UERadioCapabilityInfoIndication          ProcedureCode ::= 44
id-UETNLABindingRelease                     ProcedureCode ::= 45
id-UplinkNASTransport                       ProcedureCode ::= 46
id-UplinkNonUEAssociatedNRPPaTransport      ProcedureCode ::= 47
id-UplinkRANConfigurationTransfer           ProcedureCode ::= 48
id-UplinkRANStatusTransfer                  ProcedureCode ::= 49
id-UplinkUEAssociatedNRPPaTransport         ProcedureCode ::= 50
```

```
id-WriteReplaceWarning                      ProcedureCode ::= 51
id-SecondaryRATDataUsageReport              ProcedureCode ::= 52
id-UplinkRIMInformationTransfer             ProcedureCode ::= 53
id-DownlinkRIMInformationTransfer           ProcedureCode ::= 54
id-RetrieveUEInformation                    ProcedureCode ::= 55
id-UEInformationTransfer                    ProcedureCode ::= 56
id-RANCPRelocationIndication                ProcedureCode ::= 57
id-UEContextResume                          ProcedureCode ::= 58
id-UEContextSuspend                         ProcedureCode ::= 59
id-UERadioCapabilityIDMapping               ProcedureCode ::= 60
id-HandoverSuccess                          ProcedureCode ::= 61
id-UplinkRANEarlyStatusTransfer             ProcedureCode ::= 62
id-DownlinkRANEarlyStatusTransfer           ProcedureCode ::= 63
id-AMFCPRelocationIndication                ProcedureCode ::= 64
id-ConnectionEstablishmentIndication        ProcedureCode ::= 65
id-BroadcastSessionModification             ProcedureCode ::= 66
id-BroadcastSessionRelease                  ProcedureCode ::= 67
id-BroadcastSessionSetup                    ProcedureCode ::= 68
id-DistributionSetup                        ProcedureCode ::= 69
id-DistributionRelease                      ProcedureCode ::= 70
id-MulticastSessionActivation               ProcedureCode ::= 71
id-MulticastSessionDeactivation             ProcedureCode ::= 72
id-MulticastSessionUpdate                   ProcedureCode ::= 73
id-MulticastGroupPaging                     ProcedureCode ::= 74
id-BroadcastSessionReleaseRequired          ProcedureCode ::= 75
id-TimingSynchronisationStatus              ProcedureCode ::= 76
id-TimingSynchronisationStatusReport        ProcedureCode ::= 77
id-MTCommunicationHandling                  ProcedureCode ::= 78
id-RANPagingRequest                         ProcedureCode ::= 79
id-BroadcastSessionTransport                ProcedureCode ::= 80
id-NGRemoval                                ProcedureCode ::= 81
id-InventoryRequest                         ProcedureCode ::= 82
id-InventoryReport                          ProcedureCode ::= 83
id-CommandRequest                           ProcedureCode ::= 84
id-AIOTSessionRelease                       ProcedureCode ::= 85
id-AIOTSessionReleaseRequest                ProcedureCode ::= 86



-- ************************************************************
--
-- Extension constants
--
-- ************************************************************

maxPrivateIEs                           INTEGER ::= 65535
maxProtocolExtensions                   INTEGER ::= 65535
maxProtocolIEs                          INTEGER ::= 65535

-- ************************************************************
--
-- Lists
--
-- ************************************************************
```

```
maxnoofAllowedAreas                          INTEGER ::= 16
maxnoofAllowedCAGsperPLMN                    INTEGER ::= 256
maxnoofAllowedS-NSSAIs                       INTEGER ::= 8
maxnoofBluetoothName                         INTEGER ::= 4
maxnoofBPLMNs                                INTEGER ::= 12
maxnoofCAGSperCell                           INTEGER ::= 64
maxnoofCellIDforMDT                          INTEGER ::= 32
maxnoofCellIDforWarning                      INTEGER ::= 65535
maxnoofCellinAoI                             INTEGER ::= 256
maxnoofCellinEAI                             INTEGER ::= 65535
maxnoofCellinTAI                             INTEGER ::= 65535
maxnoofCellsforMBS                           INTEGER ::= 8192
maxnoofCellsingNB                            INTEGER ::= 16384
maxnoofCellsinngeNB                          INTEGER ::= 256
maxnoofCellsinNGRANNode                      INTEGER ::= 16384
maxnoofCellsinUEHistoryInfo                  INTEGER ::= 16
maxnoofCellsUEMovingTrajectory               INTEGER ::= 16
maxnoofDRBs                                  INTEGER ::= 32
maxnoofEmergencyAreaID                       INTEGER ::= 65535
maxnoofEAIforRestart                         INTEGER ::= 256
maxnoofEPLMNs                                INTEGER ::= 15
maxnoofEPLMNsPlusOne                         INTEGER ::= 16
maxnoofE-RABs                                INTEGER ::= 256
maxnoofErrors                                INTEGER ::= 256
maxnoofExtSliceItems                         INTEGER ::= 65535
maxnoofForbTACs                              INTEGER ::= 4096
maxnoofFreqforMDT                            INTEGER ::= 8
maxnoofGUAMIs                                INTEGER ::= 1024
maxnoofMBSAreaSessionIDs                     INTEGER ::= 256
maxnoofMBSFSAs                               INTEGER ::= 64
maxnoofMBSQoSFlows                           INTEGER ::= 64
maxnoofMBSSessions                           INTEGER ::= 32
maxnoofMBSSessionsofUE                       INTEGER ::= 256
maxnoofMBSServiceAreaInformation             INTEGER ::= 256
maxnoofMDTPLMNs                              INTEGER ::= 16
maxnoofMRBs                                  INTEGER ::= 32
maxnoofMultiConnectivity                     INTEGER ::= 4
maxnoofMultiConnectivityMinusOne             INTEGER ::= 3
maxnoofNeighPCIforMDT                        INTEGER ::= 32
maxnoofNGAPIESupportInfo                     INTEGER ::= 32
maxnoofNGConnectionsToReset                  INTEGER ::= 65536
maxnoofNRCellBands                           INTEGER ::= 32
maxnoofNSAGs                                 INTEGER ::= 256
maxnoofPagingAreas                           INTEGER ::= 64
maxnoofPC5QoSFlows                           INTEGER ::= 2048
maxnoofPDUSessions                           INTEGER ::= 256
maxnoofPLMNs                                 INTEGER ::= 12
maxnoofPSCellsPerPrimaryCellinUEHistoryInfo  INTEGER ::= 8
maxnoofQosFlows                              INTEGER ::= 64
maxnoofQosParaSets                           INTEGER ::= 8
maxnoofRANNodeinAoI                          INTEGER ::= 64
maxnoofRecommendedCells                      INTEGER ::= 16
maxnoofRecommendedRANNodes                   INTEGER ::= 16
```

```
    maxnoofAoI                              INTEGER ::= 64
    maxnoofAoIMinusOne                      INTEGER ::= 63
    maxnoofFlightInfoReportControl          INTEGER ::= 64
    maxnoofReportedCells                    INTEGER ::= 256
    maxnoofSensorName                       INTEGER ::= 3
    maxnoofServedGUAMIs                     INTEGER ::= 256
    maxnoofSliceItems                       INTEGER ::= 1024
    maxnoofSuccessfulHOReports              INTEGER ::= 64
    maxnoofTACs                             INTEGER ::= 256
    maxnoofTACsinNTN                        INTEGER ::= 12
    maxnoofTAforMDT                         INTEGER ::= 8
    maxnoofTAIforInactive                   INTEGER ::= 16
    maxnoofSupportedTAIforMBS               INTEGER ::= 256
    maxnoofTAIforMBS                        INTEGER ::= 1024
    maxnoofTAIforPaging                     INTEGER ::= 16
    maxnoofTAIforRestart                    INTEGER ::= 2048
    maxnoofTAIforWarning                    INTEGER ::= 65535
    maxnoofTAIinAoI                         INTEGER ::= 16
    maxnoofTimePeriods                      INTEGER ::= 2
    maxnoofTNLAssociations                  INTEGER ::= 32
    maxnoofUEsforPaging                     INTEGER ::= 4096
    maxnoofUETypes                          INTEGER ::= 8
    maxnoofWLANName                         INTEGER ::= 4
    maxnoofXnExtTLAs                        INTEGER ::= 16
    maxnoofXnGTP-TLAs                       INTEGER ::= 16
    maxnoofXnTLAs                           INTEGER ::= 2
    maxnoofCandidateCells                   INTEGER ::= 32
    maxnoofTargetS-NSSAIs                   INTEGER ::= 8
    maxNRARFCN                              INTEGER ::= 3279165
    maxnoofCellIDforQMC                     INTEGER ::= 32
    maxnoofPLMNforQMC                       INTEGER ::= 16
    maxnoofUEAppLayerMeas                   INTEGER ::= 16
    maxnoofSNSSAIforQMC                     INTEGER ::= 16
    maxnoofTAforQMC                         INTEGER ::= 8
    maxnoofThresholdsForExcessPacketDelay   INTEGER ::= 255
    maxnoofESNPNs                           INTEGER ::= 15
    maxnoofCandidateRelayUEs                INTEGER ::= 32
    maxnoofSuccessfulPSCellChangeReports    INTEGER ::= 64
    maxnoofCellsTSS                         INTEGER ::= 16384
    maxnoofPeriodicities                    INTEGER ::= 8
    maxnoofCAGforMDT                        INTEGER ::= 256
    maxnoofMDTSNPNs                         INTEGER ::= 16
    maxnoofPartiallyAllowedS-NSSAIs         INTEGER ::= 8
    maxnoofRSPPQoSFlows                     INTEGER ::= 2048
    maxnoofSliceItemsforMDT                 INTEGER ::= 1024
    maxnoofAreaNTN                          INTEGER ::= 8
    maxnoofIntendedAreasforMBS              INTEGER ::= 65536
    maxnoofRequestedSNSSAIs                 INTEGER ::= 8
    maxnoofReaders                          INTEGER ::= 65535
    maxnoofDevices                          INTEGER ::= 65535
    maxnoofAIoTAreas                        INTEGER ::= 256
    maxnoofThresholds                       INTEGER ::= 8
```

```
-- ************************************************************
--
-- IEs
--
-- ************************************************************

    id-AllowedNSSAI                                         ProtocolIE-ID ::= 0
    id-AMFName                                              ProtocolIE-ID ::= 1
    id-AMFOverloadResponse                                  ProtocolIE-ID ::= 2
    id-AMFSetID                                             ProtocolIE-ID ::= 3
    id-AMF-TNLAssociationFailedToSetupList                  ProtocolIE-ID ::= 4
    id-AMF-TNLAssociationSetupList                          ProtocolIE-ID ::= 5
    id-AMF-TNLAssociationToAddList                          ProtocolIE-ID ::= 6
    id-AMF-TNLAssociationToRemoveList                       ProtocolIE-ID ::= 7
    id-AMF-TNLAssociationToUpdateList                       ProtocolIE-ID ::= 8
    id-AMFTrafficLoadReductionIndication                    ProtocolIE-ID ::= 9
    id-AMF-UE-NGAP-ID                                       ProtocolIE-ID ::= 10
    id-AssistanceDataForPaging                              ProtocolIE-ID ::= 11
    id-BroadcastCancelledAreaList                           ProtocolIE-ID ::= 12
    id-BroadcastCompletedAreaList                           ProtocolIE-ID ::= 13
    id-CancelAllWarningMessages                             ProtocolIE-ID ::= 14
    id-Cause                                                ProtocolIE-ID ::= 15
    id-CellIDListForRestart                                 ProtocolIE-ID ::= 16
    id-ConcurrentWarningMessageInd                          ProtocolIE-ID ::= 17
    id-CoreNetworkAssistanceInformationForInactive          ProtocolIE-ID ::= 18
    id-CriticalityDiagnostics                               ProtocolIE-ID ::= 19
    id-DataCodingScheme                                     ProtocolIE-ID ::= 20
    id-DefaultPagingDRX                                     ProtocolIE-ID ::= 21
    id-DirectForwardingPathAvailability                     ProtocolIE-ID ::= 22
    id-EmergencyAreaIDListForRestart                        ProtocolIE-ID ::= 23
    id-EmergencyFallbackIndicator                           ProtocolIE-ID ::= 24
    id-EUTRA-CGI                                            ProtocolIE-ID ::= 25
    id-FiveG-S-TMSI                                         ProtocolIE-ID ::= 26
    id-GlobalRANNodeID                                      ProtocolIE-ID ::= 27
    id-GUAMI                                                ProtocolIE-ID ::= 28
    id-HandoverType                                         ProtocolIE-ID ::= 29
    id-IMSVoiceSupportIndicator                             ProtocolIE-ID ::= 30
    id-IndexToRFSP                                          ProtocolIE-ID ::= 31
    id-InfoOnRecommendedCellsAndRANNodesForPaging           ProtocolIE-ID ::= 32
    id-LocationReportingRequestType                         ProtocolIE-ID ::= 33
    id-MaskedIMEISV                                         ProtocolIE-ID ::= 34
    id-MessageIdentifier                                    ProtocolIE-ID ::= 35
    id-MobilityRestrictionList                              ProtocolIE-ID ::= 36
    id-NASC                                                 ProtocolIE-ID ::= 37
    id-NAS-PDU                                              ProtocolIE-ID ::= 38
    id-NASSecurityParametersFromNGRAN                       ProtocolIE-ID ::= 39
    id-NewAMF-UE-NGAP-ID                                    ProtocolIE-ID ::= 40
    id-NewSecurityContextInd                                ProtocolIE-ID ::= 41
    id-NGAP-Message                                         ProtocolIE-ID ::= 42
    id-NGRAN-CGI                                            ProtocolIE-ID ::= 43
    id-NGRANTraceID                                         ProtocolIE-ID ::= 44
    id-NR-CGI                                               ProtocolIE-ID ::= 45
    id-NRPPa-PDU                                            ProtocolIE-ID ::= 46
```

```
    id-NumberOfBroadcastsRequested                  ProtocolIE-ID ::= 47
    id-OldAMF                                       ProtocolIE-ID ::= 48
    id-OverloadStartNSSAIList                       ProtocolIE-ID ::= 49
    id-PagingDRX                                    ProtocolIE-ID ::= 50
    id-PagingOrigin                                 ProtocolIE-ID ::= 51
    id-PagingPriority                               ProtocolIE-ID ::= 52
    id-PDUSessionResourceAdmittedList               ProtocolIE-ID ::= 53
    id-PDUSessionResourceFailedToModifyListModRes   ProtocolIE-ID ::= 54
    id-PDUSessionResourceFailedToSetupListCxtRes    ProtocolIE-ID ::= 55
    id-PDUSessionResourceFailedToSetupListHOAck     ProtocolIE-ID ::= 56
    id-PDUSessionResourceFailedToSetupListPSReq     ProtocolIE-ID ::= 57
    id-PDUSessionResourceFailedToSetupListSURes     ProtocolIE-ID ::= 58
    id-PDUSessionResourceHandoverList               ProtocolIE-ID ::= 59
    id-PDUSessionResourceListCxtRelCpl              ProtocolIE-ID ::= 60
    id-PDUSessionResourceListHORqd                  ProtocolIE-ID ::= 61
    id-PDUSessionResourceModifyListModCfm           ProtocolIE-ID ::= 62
    id-PDUSessionResourceModifyListModInd           ProtocolIE-ID ::= 63
    id-PDUSessionResourceModifyListModReq           ProtocolIE-ID ::= 64
    id-PDUSessionResourceModifyListModRes           ProtocolIE-ID ::= 65
    id-PDUSessionResourceNotifyList                 ProtocolIE-ID ::= 66
    id-PDUSessionResourceReleasedListNot            ProtocolIE-ID ::= 67
    id-PDUSessionResourceReleasedListPSAck          ProtocolIE-ID ::= 68
    id-PDUSessionResourceReleasedListPSFail         ProtocolIE-ID ::= 69
    id-PDUSessionResourceReleasedListRelRes         ProtocolIE-ID ::= 70
    id-PDUSessionResourceSetupListCxtReq            ProtocolIE-ID ::= 71
    id-PDUSessionResourceSetupListCxtRes            ProtocolIE-ID ::= 72
    id-PDUSessionResourceSetupListHOReq             ProtocolIE-ID ::= 73
    id-PDUSessionResourceSetupListSUReq             ProtocolIE-ID ::= 74
    id-PDUSessionResourceSetupListSURes             ProtocolIE-ID ::= 75
    id-PDUSessionResourceToBeSwitchedDLList         ProtocolIE-ID ::= 76
    id-PDUSessionResourceSwitchedList               ProtocolIE-ID ::= 77
    id-PDUSessionResourceToReleaseListHOCmd         ProtocolIE-ID ::= 78
    id-PDUSessionResourceToReleaseListRelCmd        ProtocolIE-ID ::= 79
    id-PLMNSupportList                              ProtocolIE-ID ::= 80
    id-PWSFailedCellIDList                          ProtocolIE-ID ::= 81
    id-RANNodeName                                  ProtocolIE-ID ::= 82
    id-RANPagingPriority                            ProtocolIE-ID ::= 83
    id-RANStatusTransfer-TransparentContainer       ProtocolIE-ID ::= 84
    id-RAN-UE-NGAP-ID                               ProtocolIE-ID ::= 85
    id-RelativeAMFCapacity                          ProtocolIE-ID ::= 86
    id-RepetitionPeriod                             ProtocolIE-ID ::= 87
    id-ResetType                                    ProtocolIE-ID ::= 88
    id-RoutingID                                    ProtocolIE-ID ::= 89
    id-RRCEstablishmentCause                        ProtocolIE-ID ::= 90
    id-RRCInactiveTransitionReportRequest           ProtocolIE-ID ::= 91
    id-RRCState                                     ProtocolIE-ID ::= 92
    id-SecurityContext                              ProtocolIE-ID ::= 93
    id-SecurityKey                                  ProtocolIE-ID ::= 94
    id-SerialNumber                                 ProtocolIE-ID ::= 95
    id-ServedGUAMIList                              ProtocolIE-ID ::= 96
    id-SliceSupportList                             ProtocolIE-ID ::= 97
    id-SONConfigurationTransferDL                   ProtocolIE-ID ::= 98
    id-SONConfigurationTransferUL                   ProtocolIE-ID ::= 99
    id-SourceAMF-UE-NGAP-ID                         ProtocolIE-ID ::= 100
```

```
    id-SourceToTarget-TransparentContainer                ProtocolIE-ID ::= 101
    id-SupportedTAList                                    ProtocolIE-ID ::= 102
    id-TAIListForPaging                                   ProtocolIE-ID ::= 103
    id-TAIListForRestart                                  ProtocolIE-ID ::= 104
    id-TargetID                                           ProtocolIE-ID ::= 105
    id-TargetToSource-TransparentContainer                ProtocolIE-ID ::= 106
    id-TimeToWait                                         ProtocolIE-ID ::= 107
    id-TraceActivation                                    ProtocolIE-ID ::= 108
    id-TraceCollectionEntityIPAddress                     ProtocolIE-ID ::= 109
    id-UEAggregateMaximumBitRate                          ProtocolIE-ID ::= 110
    id-UE-associatedLogicalNG-connectionList              ProtocolIE-ID ::= 111
    id-UEContextRequest                                   ProtocolIE-ID ::= 112
    id-UE-NGAP-IDs                                        ProtocolIE-ID ::= 114
    id-UEPagingIdentity                                   ProtocolIE-ID ::= 115
    id-UEPresenceInAreaOfInterestList                     ProtocolIE-ID ::= 116
    id-UERadioCapability                                  ProtocolIE-ID ::= 117
    id-UERadioCapabilityForPaging                         ProtocolIE-ID ::= 118
    id-UESecurityCapabilities                             ProtocolIE-ID ::= 119
    id-UnavailableGUAMIList                               ProtocolIE-ID ::= 120
    id-UserLocationInformation                            ProtocolIE-ID ::= 121
    id-WarningAreaList                                    ProtocolIE-ID ::= 122
    id-WarningMessageContents                             ProtocolIE-ID ::= 123
    id-WarningSecurityInfo                                ProtocolIE-ID ::= 124
    id-WarningType                                        ProtocolIE-ID ::= 125
    id-AdditionalUL-NGU-UP-TNLInformation                 ProtocolIE-ID ::= 126
    id-DataForwardingNotPossible                          ProtocolIE-ID ::= 127
    id-DL-NGU-UP-TNLInformation                           ProtocolIE-ID ::= 128
    id-NetworkInstance                                    ProtocolIE-ID ::= 129
    id-PDUSessionAggregateMaximumBitRate                  ProtocolIE-ID ::= 130
    id-PDUSessionResourceFailedToModifyListModCfm         ProtocolIE-ID ::= 131
    id-PDUSessionResourceFailedToSetupListCxtFail         ProtocolIE-ID ::= 132
    id-PDUSessionResourceListCxtRelReq                    ProtocolIE-ID ::= 133
    id-PDUSessionType                                     ProtocolIE-ID ::= 134
    id-QosFlowAddOrModifyRequestList                      ProtocolIE-ID ::= 135
    id-QosFlowSetupRequestList                            ProtocolIE-ID ::= 136
    id-QosFlowToReleaseList                               ProtocolIE-ID ::= 137
    id-SecurityIndication                                 ProtocolIE-ID ::= 138
    id-UL-NGU-UP-TNLInformation                           ProtocolIE-ID ::= 139
    id-UL-NGU-UP-TNLModifyList                            ProtocolIE-ID ::= 140
    id-WarningAreaCoordinates                             ProtocolIE-ID ::= 141
    id-PDUSessionResourceSecondaryRATUsageList            ProtocolIE-ID ::= 142
    id-HandoverFlag                                       ProtocolIE-ID ::= 143
    id-SecondaryRATUsageInformation                       ProtocolIE-ID ::= 144
    id-PDUSessionResourceReleaseResponseTransfer          ProtocolIE-ID ::= 145
    id-RedirectionVoiceFallback                           ProtocolIE-ID ::= 146
    id-UERetentionInformation                             ProtocolIE-ID ::= 147
    id-S-NSSAI                                            ProtocolIE-ID ::= 148
    id-PSCellInformation                                  ProtocolIE-ID ::= 149
    id-LastEUTRAN-PLMNIdentity                            ProtocolIE-ID ::= 150
    id-MaximumIntegrityProtectedDataRate-DL               ProtocolIE-ID ::= 151
    id-AdditionalDLForwardingUPTNLInformation             ProtocolIE-ID ::= 152
    id-AdditionalDLUPTNLInformationForHOList              ProtocolIE-ID ::= 153
    id-AdditionalNGU-UP-TNLInformation                    ProtocolIE-ID ::= 154
    id-AdditionalDLQosFlowPerTNLInformation               ProtocolIE-ID ::= 155
```

```
    id-SecurityResult                                   ProtocolIE-ID ::= 156
    id-ENDC-SONConfigurationTransferDL                  ProtocolIE-ID ::= 157
    id-ENDC-SONConfigurationTransferUL                  ProtocolIE-ID ::= 158
    id-OldAssociatedQosFlowList-ULendmarkerexpected     ProtocolIE-ID ::= 159
    id-CNTypeRestrictionsForEquivalent                  ProtocolIE-ID ::= 160
    id-CNTypeRestrictionsForServing                     ProtocolIE-ID ::= 161
    id-NewGUAMI                                         ProtocolIE-ID ::= 162
    id-ULForwarding                                     ProtocolIE-ID ::= 163
    id-ULForwardingUP-TNLInformation                    ProtocolIE-ID ::= 164
    id-CNAssistedRANTuning                              ProtocolIE-ID ::= 165
    id-CommonNetworkInstance                            ProtocolIE-ID ::= 166
    id-NGRAN-TNLAssociationToRemoveList                 ProtocolIE-ID ::= 167
    id-TNLAssociationTransportLayerAddressNGRAN         ProtocolIE-ID ::= 168
    id-EndpointIPAddressAndPort                         ProtocolIE-ID ::= 169
    id-LocationReportingAdditionalInfo                  ProtocolIE-ID ::= 170
    id-SourceToTarget-AMFInformationReroute             ProtocolIE-ID ::= 171
    id-AdditionalULForwardingUPTNLInformation           ProtocolIE-ID ::= 172
    id-SCTP-TLAs                                        ProtocolIE-ID ::= 173
    id-SelectedPLMNIdentity                             ProtocolIE-ID ::= 174
    id-RIMInformationTransfer                           ProtocolIE-ID ::= 175
    id-GUAMIType                                        ProtocolIE-ID ::= 176
    id-SRVCCOperationPossible                           ProtocolIE-ID ::= 177
    id-TargetRNC-ID                                     ProtocolIE-ID ::= 178
    id-RAT-Information                                  ProtocolIE-ID ::= 179
    id-ExtendedRATRestrictionInformation                ProtocolIE-ID ::= 180
    id-QosMonitoringRequest                             ProtocolIE-ID ::= 181
    id-SgNB-UE-X2AP-ID                                  ProtocolIE-ID ::= 182
    id-AdditionalRedundantDL-NGU-UP-TNLInformation      ProtocolIE-ID ::= 183
    id-AdditionalRedundantDLQosFlowPerTNLInformation    ProtocolIE-ID ::= 184
    id-AdditionalRedundantNGU-UP-TNLInformation         ProtocolIE-ID ::= 185
    id-AdditionalRedundantUL-NGU-UP-TNLInformation      ProtocolIE-ID ::= 186
    id-CNPacketDelayBudgetDL                            ProtocolIE-ID ::= 187
    id-CNPacketDelayBudgetUL                            ProtocolIE-ID ::= 188
    id-ExtendedPacketDelayBudget                        ProtocolIE-ID ::= 189
    id-RedundantCommonNetworkInstance                   ProtocolIE-ID ::= 190
    id-RedundantDL-NGU-TNLInformationReused             ProtocolIE-ID ::= 191
    id-RedundantDL-NGU-UP-TNLInformation                ProtocolIE-ID ::= 192
    id-RedundantDLQosFlowPerTNLInformation              ProtocolIE-ID ::= 193
    id-RedundantQosFlowIndicator                        ProtocolIE-ID ::= 194
    id-RedundantUL-NGU-UP-TNLInformation                ProtocolIE-ID ::= 195
    id-TSCTrafficCharacteristics                        ProtocolIE-ID ::= 196
    id-RedundantPDUSessionInformation                   ProtocolIE-ID ::= 197
    id-UsedRSNInformation                               ProtocolIE-ID ::= 198
    id-IAB-Authorized                                   ProtocolIE-ID ::= 199
    id-IAB-Supported                                    ProtocolIE-ID ::= 200
    id-IABNodeIndication                                ProtocolIE-ID ::= 201
    id-NB-IoT-PagingDRX                                 ProtocolIE-ID ::= 202
    id-NB-IoT-Paging-eDRXInfo                           ProtocolIE-ID ::= 203
    id-NB-IoT-DefaultPagingDRX                          ProtocolIE-ID ::= 204
    id-Enhanced-CoverageRestriction                     ProtocolIE-ID ::= 205
    id-Extended-ConnectedTime                           ProtocolIE-ID ::= 206
    id-PagingAssisDataforCEcapabUE                      ProtocolIE-ID ::= 207
    id-WUS-Assistance-Information                       ProtocolIE-ID ::= 208
    id-UE-DifferentiationInfo                           ProtocolIE-ID ::= 209
```

```
id-NB-IoT-UEPriority                                ProtocolIE-ID ::= 210
id-UL-CP-SecurityInformation                        ProtocolIE-ID ::= 211
id-DL-CP-SecurityInformation                        ProtocolIE-ID ::= 212
id-TAI                                              ProtocolIE-ID ::= 213
id-UERadioCapabilityForPagingOfNB-IoT               ProtocolIE-ID ::= 214
id-LTEV2XServicesAuthorized                         ProtocolIE-ID ::= 215
id-NRV2XServicesAuthorized                          ProtocolIE-ID ::= 216
id-LTEUESidelinkAggregateMaximumBitrate             ProtocolIE-ID ::= 217
id-NRUESidelinkAggregateMaximumBitrate              ProtocolIE-ID ::= 218
id-PC5QoSParameters                                 ProtocolIE-ID ::= 219
id-AlternativeQoSParaSetList                        ProtocolIE-ID ::= 220
id-CurrentQoSParaSetIndex                           ProtocolIE-ID ::= 221
id-CEmodeBrestricted                                ProtocolIE-ID ::= 222
id-EUTRA-PagingeDRXInformation                      ProtocolIE-ID ::= 223
id-CEmodeBSupport-Indicator                         ProtocolIE-ID ::= 224
id-LTEM-Indication                                  ProtocolIE-ID ::= 225
id-EndIndication                                    ProtocolIE-ID ::= 226
id-EDT-Session                                      ProtocolIE-ID ::= 227
id-UECapabilityInfoRequest                          ProtocolIE-ID ::= 228
id-PDUSessionResourceFailedToResumeListRESReq       ProtocolIE-ID ::= 229
id-PDUSessionResourceFailedToResumeListRESRes       ProtocolIE-ID ::= 230
id-PDUSessionResourceSuspendListSUSReq              ProtocolIE-ID ::= 231
id-PDUSessionResourceResumeListRESReq               ProtocolIE-ID ::= 232
id-PDUSessionResourceResumeListRESRes               ProtocolIE-ID ::= 233
id-UE-UP-CIoT-Support                               ProtocolIE-ID ::= 234
id-Suspend-Request-Indication                       ProtocolIE-ID ::= 235
id-Suspend-Response-Indication                      ProtocolIE-ID ::= 236
id-RRC-Resume-Cause                                 ProtocolIE-ID ::= 237
id-RGLevelWirelineAccessCharacteristics             ProtocolIE-ID ::= 238
id-W-AGFIdentityInformation                         ProtocolIE-ID ::= 239
id-GlobalTNGF-ID                                    ProtocolIE-ID ::= 240
id-GlobalTWIF-ID                                    ProtocolIE-ID ::= 241
id-GlobalW-AGF-ID                                   ProtocolIE-ID ::= 242
id-UserLocationInformationW-AGF                     ProtocolIE-ID ::= 243
id-UserLocationInformationTNGF                      ProtocolIE-ID ::= 244
id-AuthenticatedIndication                          ProtocolIE-ID ::= 245
id-TNGFIdentityInformation                          ProtocolIE-ID ::= 246
id-TWIFIdentityInformation                          ProtocolIE-ID ::= 247
id-UserLocationInformationTWIF                      ProtocolIE-ID ::= 248
id-DataForwardingResponseERABList                   ProtocolIE-ID ::= 249
id-IntersystemSONConfigurationTransferDL            ProtocolIE-ID ::= 250
id-IntersystemSONConfigurationTransferUL            ProtocolIE-ID ::= 251
id-SONInformationReport                             ProtocolIE-ID ::= 252
id-UEHistoryInformationFromTheUE                    ProtocolIE-ID ::= 253
id-ManagementBasedMDTPLMNList                       ProtocolIE-ID ::= 254
id-MDTConfiguration                                 ProtocolIE-ID ::= 255
id-PrivacyIndicator                                 ProtocolIE-ID ::= 256
id-TraceCollectionEntityURI                         ProtocolIE-ID ::= 257
id-NPN-Support                                      ProtocolIE-ID ::= 258
id-NPN-AccessInformation                            ProtocolIE-ID ::= 259
id-NPN-PagingAssistanceInformation                  ProtocolIE-ID ::= 260
id-NPN-MobilityInformation                          ProtocolIE-ID ::= 261
id-TargettoSource-Failure-TransparentContainer      ProtocolIE-ID ::= 262
id-NID                                              ProtocolIE-ID ::= 263
```

```
    id-UERadioCapabilityID                                  ProtocolIE-ID ::= 264
    id-UERadioCapability-EUTRA-Format                       ProtocolIE-ID ::= 265
    id-DAPSRequestInfo                                     ProtocolIE-ID ::= 266
    id-DAPSResponseInfoList                                 ProtocolIE-ID ::= 267
    id-EarlyStatusTransfer-TransparentContainer             ProtocolIE-ID ::= 268
    id-NotifySourceNGRANNode                                ProtocolIE-ID ::= 269
    id-ExtendedSliceSupportList                             ProtocolIE-ID ::= 270
    id-ExtendedTAISliceSupportList                          ProtocolIE-ID ::= 271
    id-ConfiguredTACIndication                              ProtocolIE-ID ::= 272
    id-Extended-RANNodeName                                 ProtocolIE-ID ::= 273
    id-Extended-AMFName                                     ProtocolIE-ID ::= 274
    id-GlobalCable-ID                                       ProtocolIE-ID ::= 275
    id-QosMonitoringReportingFrequency                      ProtocolIE-ID ::= 276
    id-QosFlowParametersList                                ProtocolIE-ID ::= 277
    id-QosFlowFeedbackList                                  ProtocolIE-ID ::= 278
    id-BurstArrivalTimeDownlink                             ProtocolIE-ID ::= 279
    id-ExtendedUEIdentityIndexValue                         ProtocolIE-ID ::= 280
    id-PduSessionExpectedUEActivityBehaviour                ProtocolIE-ID ::= 281
    id-MicoAllPLMN                                          ProtocolIE-ID ::= 282
    id-QosFlowFailedToSetupList                             ProtocolIE-ID ::= 283
    id-SourceTNLAddrInfo                                    ProtocolIE-ID ::= 284
    id-ExtendedReportIntervalMDT                            ProtocolIE-ID ::= 285
    id-SourceNodeID                                         ProtocolIE-ID ::= 286
    id-NRNTNTAIInformation                                  ProtocolIE-ID ::= 287
    id-UEContextReferenceAtSource                           ProtocolIE-ID ::= 288
    id-LastVisitedPSCellList                                ProtocolIE-ID ::= 289
    id-IntersystemSONInformationRequest                     ProtocolIE-ID ::= 290
    id-IntersystemSONInformationReply                       ProtocolIE-ID ::= 291
    id-EnergySavingIndication                               ProtocolIE-ID ::= 292
    id-IntersystemResourceStatusUpdate                      ProtocolIE-ID ::= 293
    id-SuccessfulHandoverReportList                         ProtocolIE-ID ::= 294
    id-MBS-AreaSessionID                                    ProtocolIE-ID ::= 295
    id-MBS-QoSFlowsToBeSetupList                            ProtocolIE-ID ::= 296
    id-MBS-QoSFlowsToBeSetupModList                         ProtocolIE-ID ::= 297
    id-MBS-ServiceArea                                      ProtocolIE-ID ::= 298
    id-MBS-SessionID                                        ProtocolIE-ID ::= 299
    id-MBS-DistributionReleaseRequestTransfer               ProtocolIE-ID ::= 300
    id-MBS-DistributionSetupRequestTransfer                 ProtocolIE-ID ::= 301
    id-MBS-DistributionSetupResponseTransfer                ProtocolIE-ID ::= 302
    id-MBS-DistributionSetupUnsuccessfulTransfer            ProtocolIE-ID ::= 303
    id-MulticastSessionActivationRequestTransfer            ProtocolIE-ID ::= 304
    id-MulticastSessionDeactivationRequestTransfer          ProtocolIE-ID ::= 305
    id-MulticastSessionUpdateRequestTransfer                ProtocolIE-ID ::= 306
    id-MulticastGroupPagingAreaList                         ProtocolIE-ID ::= 307
    id-MBS-SupportIndicator                                 ProtocolIE-ID ::= 309
    id-MBSSessionFailedtoSetupList                          ProtocolIE-ID ::= 310
    id-MBSSessionFailedtoSetuporModifyList                  ProtocolIE-ID ::= 311
    id-MBSSessionSetupResponseList                          ProtocolIE-ID ::= 312
    id-MBSSessionSetuporModifyResponseList                  ProtocolIE-ID ::= 313
    id-MBSSessionSetupFailureTransfer                       ProtocolIE-ID ::= 314
    id-MBSSessionSetupRequestTransfer                       ProtocolIE-ID ::= 315
    id-MBSSessionSetupResponseTransfer                      ProtocolIE-ID ::= 316
    id-MBSSessionToReleaseList                              ProtocolIE-ID ::= 317
    id-MBSSessionSetupRequestList                           ProtocolIE-ID ::= 318
```

```
    id-MBSSessionSetuporModifyRequestList                 ProtocolIE-ID ::= 319
    id-MBS-ActiveSessionInformation-SourcetoTargetList    ProtocolIE-ID ::= 323
    id-MBS-ActiveSessionInformation-TargettoSourceList    ProtocolIE-ID ::= 324
    id-OnboardingSupport                                  ProtocolIE-ID ::= 325
    id-TimeSyncAssistanceInfo                             ProtocolIE-ID ::= 326
    id-SurvivalTime                                       ProtocolIE-ID ::= 327
    id-QMCConfigInfo                                      ProtocolIE-ID ::= 328
    id-QMCDeactivation                                    ProtocolIE-ID ::= 329
    id-PDUSessionPairID                                   ProtocolIE-ID ::= 331
    id-NR-PagingeDRXInformation                           ProtocolIE-ID ::= 332
    id-RedCapIndication                                   ProtocolIE-ID ::= 333
    id-TargetNSSAIInformation                             ProtocolIE-ID ::= 334
    id-UESliceMaximumBitRateList                          ProtocolIE-ID ::= 335
    id-M4ReportAmount                                     ProtocolIE-ID ::= 336
    id-M5ReportAmount                                     ProtocolIE-ID ::= 337
    id-M6ReportAmount                                     ProtocolIE-ID ::= 338
    id-M7ReportAmount                                     ProtocolIE-ID ::= 339
    id-IncludeBeamMeasurementsIndication                  ProtocolIE-ID ::= 340
    id-ExcessPacketDelayThresholdConfiguration            ProtocolIE-ID ::= 341
    id-PagingCause                                        ProtocolIE-ID ::= 342
    id-PagingCauseIndicationForVoiceService               ProtocolIE-ID ::= 343
    id-PEIPSassistanceInformation                         ProtocolIE-ID ::= 344
    id-FiveG-ProSeAuthorized                              ProtocolIE-ID ::= 345
    id-FiveG-ProSeUEPC5AggregateMaximumBitRate            ProtocolIE-ID ::= 346
    id-FiveG-ProSePC5QoSParameters                        ProtocolIE-ID ::= 347
    id-MBSSessionModificationFailureTransfer              ProtocolIE-ID ::= 348
    id-MBSSessionModificationRequestTransfer              ProtocolIE-ID ::= 349
    id-MBSSessionModificationResponseTransfer             ProtocolIE-ID ::= 350
    id-MBS-QoSFlowToReleaseList                           ProtocolIE-ID ::= 351
    id-MBS-SessionTNLInfo5GC                              ProtocolIE-ID ::= 352
    id-TAINSAGSupportList                                 ProtocolIE-ID ::= 353
    id-SourceNodeTNLAddrInfo                              ProtocolIE-ID ::= 354
    id-NGAPIESupportInformationRequestList                ProtocolIE-ID ::= 355
    id-NGAPIESupportInformationResponseList               ProtocolIE-ID ::= 356
    id-MBS-SessionFSAIDList                               ProtocolIE-ID ::= 357
    id-MBSSessionReleaseResponseTransfer                  ProtocolIE-ID ::= 358
    id-ManagementBasedMDTPLMNModificationList             ProtocolIE-ID ::= 359
    id-EarlyMeasurement                                   ProtocolIE-ID ::= 360
    id-BeamMeasurementsReportConfiguration                ProtocolIE-ID ::= 361
    id-HFCNode-ID-new                                     ProtocolIE-ID ::= 362
    id-GlobalCable-ID-new                                 ProtocolIE-ID ::= 363
    id-TargetHomeENB-ID                                   ProtocolIE-ID ::= 364
    id-HashedUEIdentityIndexValue                         ProtocolIE-ID ::= 365
    id-ExtendedMobilityInformation                        ProtocolIE-ID ::= 366
    id-NetworkControlledRepeaterAuthorized                ProtocolIE-ID ::= 367
    id-AdditionalCancelledlocationReportingReferenceIDList ProtocolIE-ID ::= 368
    id-Selected-Target-SNPN-Identity                      ProtocolIE-ID ::= 369
    id-EquivalentSNPNsList                                ProtocolIE-ID ::= 370
    id-SelectedNID                                        ProtocolIE-ID ::= 371
    id-SupportedUETypeList                                ProtocolIE-ID ::= 372
    id-AerialUEsubscriptionInformation                    ProtocolIE-ID ::= 373
    id-NR-A2X-ServicesAuthorized                          ProtocolIE-ID ::= 374
    id-LTE-A2X-ServicesAuthorized                         ProtocolIE-ID ::= 375
    id-NR-A2X-UE-PC5-AggregateMaximumBitRate              ProtocolIE-ID ::= 376
```

```
    id-LTE-A2X-UE-PC5-AggregateMaximumBitRate               ProtocolIE-ID ::= 377
    id-A2X-PC5-QoS-Parameters                               ProtocolIE-ID ::= 378
    id-FiveGProSeLayer2Multipath                            ProtocolIE-ID ::= 379
    id-FiveGProSeLayer2UEtoUERelay                          ProtocolIE-ID ::= 380
    id-FiveGProSeLayer2UEtoUERemote                         ProtocolIE-ID ::= 381
    id-CandidateRelayUEInformationList                      ProtocolIE-ID ::= 382
    id-SuccessfulPSCellChangeReportList                     ProtocolIE-ID ::= 383
    id-IntersystemMobilityFailureforVoiceFallback           ProtocolIE-ID ::= 384
    id-TargetCellCRNTI                                      ProtocolIE-ID ::= 385
    id-TimeSinceFailure                                     ProtocolIE-ID ::= 386
    id-RANTimingSynchronisationStatusInfo                   ProtocolIE-ID ::= 387
    id-RAN-TSSRequestType                                   ProtocolIE-ID ::= 388
    id-RAN-TSSScope                                         ProtocolIE-ID ::= 389
    id-ClockQualityReportingControlInfo                     ProtocolIE-ID ::= 390
    id-RANfeedbacktype                                      ProtocolIE-ID ::= 391
    id-QoSFlowTSCList                                       ProtocolIE-ID ::= 392
    id-TSCTrafficCharacteristicsFeedback                    ProtocolIE-ID ::= 393
    id-DownlinkTLContainer                                  ProtocolIE-ID ::= 394
    id-UplinkTLContainer                                    ProtocolIE-ID ::= 395
    id-ANPacketDelayBudgetUL                                ProtocolIE-ID ::= 396
    id-QosFlowAdditionalInfoList                            ProtocolIE-ID ::= 397
    id-AssistanceInformationQoE-Meas                        ProtocolIE-ID ::= 398
    id-CommServiceType                                  ProtocolIE-ID ::= 399
    id-MobileIAB-Authorized                                 ProtocolIE-ID ::= 400
    id-MobileIAB-MTUserLocationInformation                  ProtocolIE-ID ::= 401
    id-MobileIABNodeIndication                              ProtocolIE-ID ::= 402
    id-NoPDUSessionIndication                               ProtocolIE-ID ::= 403
    id-MobileIAB-Supported                                  ProtocolIE-ID ::= 404
    id-CN-MT-CommunicationHandling                          ProtocolIE-ID ::= 405
    id-FiveGCAction                                         ProtocolIE-ID ::= 406
    id-PagingPolicyDifferentiation                          ProtocolIE-ID ::= 407
    id-DL-Signalling                                        ProtocolIE-ID ::= 408
    id-PNI-NPN-AreaScopeofMDT                               ProtocolIE-ID ::= 409
    id-PNI-NPNBasedMDT                                      ProtocolIE-ID ::= 410
    id-SNPN-CellBasedMDT                                    ProtocolIE-ID ::= 411
    id-SNPN-TAIBasedMDT                                     ProtocolIE-ID ::= 412
    id-SNPN-BasedMDT                                        ProtocolIE-ID ::= 413
    id-Partially-Allowed-NSSAI                              ProtocolIE-ID ::= 414
    id-AssociatedSessionID                                  ProtocolIE-ID ::= 415
    id-MBS-AssistanceInformation                            ProtocolIE-ID ::= 416
    id-BroadcastTransportFailureTransfer                    ProtocolIE-ID ::= 417
    id-BroadcastTransportRequestTransfer                    ProtocolIE-ID ::= 418
    id-BroadcastTransportResponseTransfer                   ProtocolIE-ID ::= 419
    id-TimeBasedHandoverInformation                         ProtocolIE-ID ::= 420
    id-DLDiscarding                                         ProtocolIE-ID ::= 421
    id-PDUsetQoSParameters                                  ProtocolIE-ID ::= 422
    id-PDUSetbasedHandlingIndicator                         ProtocolIE-ID ::= 423
    id-N6JitterInformation                                  ProtocolIE-ID ::= 424
    id-ECNMarkingorCongestionInformationReportingRequest    ProtocolIE-ID ::= 425
    id-ECNMarkingorCongestionInformationReportingStatus     ProtocolIE-ID ::= 426
    id-ERedCapIndication                                    ProtocolIE-ID ::= 427
    id-XrDeviceWith2Rx                                      ProtocolIE-ID ::= 428
    id-UserPlaneErrorIndicator                              ProtocolIE-ID ::= 429
    id-SLPositioningRangingServiceInfo                      ProtocolIE-ID ::= 430
```

```
    id-PDUSessionListMTCommHReq                                 ProtocolIE-ID ::= 431
    id-MaximumDataBurstVolume                                   ProtocolIE-ID ::= 432
    id-MN-only-MDT-collection                                   ProtocolIE-ID ::= 433
    id-MBS-NGUFailureIndication                                 ProtocolIE-ID ::= 434
    id-UserPlaneFailureIndication                               ProtocolIE-ID ::= 435
    id-UserPlaneFailureIndicationReport                         ProtocolIE-ID ::= 436
    id-SourceSN-to-TargetSN-QMCInfo                             ProtocolIE-ID ::= 437
    id-QoERVQoEReportingPaths                                   ProtocolIE-ID ::= 438
    id-UserLocationInformationN3IWF-without-PortNumber          ProtocolIE-ID ::= 439
    id-AUN3DeviceAccessInfo                                     ProtocolIE-ID ::= 440
    id-TAIMBSSupportList                                        ProtocolIE-ID ::= 441
    id-ExtendedBackupAMFName                                    ProtocolIE-ID ::= 442
    id-ExtendedOldAMF                                           ProtocolIE-ID ::= 443
    id-MBS-UP-FailureIndication                                 ProtocolIE-ID ::= 444
    id-RequestedTNLInfo                                         ProtocolIE-ID ::= 445
    id-Aerial-UE-FlightInformationOngoingReporting-failed       ProtocolIE-ID ::= 446
    id-NetworkSliceAreaScopeofMDT                               ProtocolIE-ID ::= 447
    id-GeographyBasedMDT                                        ProtocolIE-ID ::= 448
    id-MBS-IntendedServiceAreaList                              ProtocolIE-ID ::= 449
    id-AMF-UE-NGAP-ID2                                          ProtocolIE-ID ::= 450
    id-GUAMIList                                                ProtocolIE-ID ::= 451
    id-GW-Context-Release-Indication                            ProtocolIE-ID ::= 452
    id-SourceAMF-GUAMI                                          ProtocolIE-ID ::= 453
    id-RequestedNSSAI                                           ProtocolIE-ID ::= 454
    id-Target-RAN-Node-ID                                       ProtocolIE-ID ::= 455
    id-InventoryRequestTransfer                                 ProtocolIE-ID ::= 456
    id-InventoryResponseTransfer                                ProtocolIE-ID ::= 457
    id-InventoryFailureTransfer                                 ProtocolIE-ID ::= 458
    id-InventoryReportTransfer                                  ProtocolIE-ID ::= 459
    id-CommandRequestTransfer                                   ProtocolIE-ID ::= 460
    id-CommandResponseTransfer                                  ProtocolIE-ID ::= 461
    id-CommandFailureTransfer                                   ProtocolIE-ID ::= 462
    id-AIOTSessionReleaseCommandTransfer                        ProtocolIE-ID ::= 463
    id-AIOTSessionReleaseCompleteTransfer                       ProtocolIE-ID ::= 464
    id-AIOTSessionReleaseRequestTransfer                        ProtocolIE-ID ::= 465
    id-AIoT-CorrelationIdentifier                               ProtocolIE-ID ::= 466
    id-AIOTFIdentifier                                          ProtocolIE-ID ::= 467
    id-AIoT-DeviceIdentificationRequested                       ProtocolIE-ID ::= 468
    id-AIoT-RequestedServiceAreaInformation                     ProtocolIE-ID ::= 469
    id-AIoT-InventoryAssistanceInformation                      ProtocolIE-ID ::= 470
    id-AIoT-FollowonCommandIndication                           ProtocolIE-ID ::= 471
    id-RAN-AIOT-Device-NGAP-ID                                  ProtocolIE-ID ::= 472
    id-AIoT-CommandAssistanceInformation                        ProtocolIE-ID ::= 473
    id-AIoT-NASPDU                                              ProtocolIE-ID ::= 474
    id-AIoT-Support                                             ProtocolIE-ID ::= 475
    id-AIOTFName                                                ProtocolIE-ID ::= 476
    id-LPWUSPSAssistanceInformation                             ProtocolIE-ID ::= 477
    id-FurtherExtendedUEIdentityIndexValue                      ProtocolIE-ID ::= 478
    id-FiveGProSeLayer2MHUEtoNetworkRelay                       ProtocolIE-ID ::= 479
    id-FiveGProSeLayer2MHIntermediateUEtoNetworkRelay           ProtocolIE-ID ::= 480
    id-FiveGProSeLayer2MHRemote                                 ProtocolIE-ID ::= 481
    id-FiveGProSeLayer3MHUEtoNetworkRelay                       ProtocolIE-ID ::= 482
    id-AdditionalULI                                            ProtocolIE-ID ::= 483
    id-PduSetDelayBudgetDownlink                                ProtocolIE-ID ::= 484
```

```
    id-PduSetDelayBudgetUplink                              ProtocolIE-ID ::= 485
    id-PduSetErrorRateDownlink                              ProtocolIE-ID ::= 486
    id-PduSetErrorRateUplink                                ProtocolIE-ID ::= 487
    id-DLPDUSetInformationMarkingSupportIndication          ProtocolIE-ID ::= 488
    id-MonitoringRequestonAvailableBitrate                  ProtocolIE-ID ::= 489
    id-MMSID                                                ProtocolIE-ID ::= 490
    id-Indication-of-Bitrate-Adaptation                     ProtocolIE-ID ::= 491
    id-SCGActivationTime                                    ProtocolIE-ID ::= 492
    id-Aerial-UE-FlightInformationReporting                 ProtocolIE-ID ::= 493
    id-Aerial-UE-FlightInformationReportingControlList      ProtocolIE-ID ::= 494
    id-LPWUSDisableIndication                               ProtocolIE-ID ::= 495
    id-AIoT-SecurityInfo                                    ProtocolIE-ID ::= 496



END
-- ASN1STOP
```

9.4.8 Container Definitions

```
-- ASN1START
-- **************************************************************
--
-- Container definitions
--
-- **************************************************************

NGAP-Containers {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
ngran-Access (22) modules (3) ngap (1) version1 (1) ngap-Containers (5) }

DEFINITIONS AUTOMATIC TAGS ::=

BEGIN

-- **************************************************************
--
-- IE parameter types from other modules.
--
-- **************************************************************

IMPORTS

    Criticality,
    Presence,
    PrivateIE-ID,
    ProtocolExtensionID,
    ProtocolIE-ID
FROM NGAP-CommonDataTypes

    maxPrivateIEs,
    maxProtocolExtensions,
```

```
    maxProtocolIEs
FROM NGAP-Constants;

-- ************************************************************
--
-- Class Definition for Protocol IEs
--
-- ************************************************************

NGAP-PROTOCOL-IES ::= CLASS {
    &id             ProtocolIE-ID                   UNIQUE,
    &criticality    Criticality,
    &Value,
    &presence       Presence
}
WITH SYNTAX {
    ID              &id
    CRITICALITY     &criticality
    TYPE            &Value
    PRESENCE        &presence
}

-- ************************************************************
--
-- Class Definition for Protocol IEs
--
-- ************************************************************

NGAP-PROTOCOL-IES-PAIR ::= CLASS {
    &id                 ProtocolIE-ID               UNIQUE,
    &firstCriticality   Criticality,
    &FirstValue,
    &secondCriticality  Criticality,
    &SecondValue,
    &presence           Presence
}
WITH SYNTAX {
    ID                      &id
    FIRST CRITICALITY       &firstCriticality
    FIRST TYPE              &FirstValue
    SECOND CRITICALITY      &secondCriticality
    SECOND TYPE             &SecondValue
    PRESENCE                &presence
}

-- ************************************************************
--
-- Class Definition for Protocol Extensions
--
-- ************************************************************

NGAP-PROTOCOL-EXTENSION ::= CLASS {
    &id             ProtocolExtensionID         UNIQUE,
    &criticality    Criticality,
```

```
    &Extension,
    &presence       Presence
}
WITH SYNTAX {
    ID              &id
    CRITICALITY     &criticality
    EXTENSION       &Extension
    PRESENCE        &presence
}

-- **************************************************************
--
-- Class Definition for Private IEs
--
-- **************************************************************

NGAP-PRIVATE-IES ::= CLASS {
    &id             PrivateIE-ID,
    &criticality    Criticality,
    &Value,
    &presence       Presence
}
WITH SYNTAX {
    ID              &id
    CRITICALITY     &criticality
    TYPE            &Value
    PRESENCE        &presence
}

-- **************************************************************
--
-- Container for Protocol IEs
--
-- **************************************************************

ProtocolIE-Container {NGAP-PROTOCOL-IES : IEsSetParam} ::=
    SEQUENCE (SIZE (0..maxProtocolIEs)) OF
    ProtocolIE-Field {{IEsSetParam}}

ProtocolIE-SingleContainer {NGAP-PROTOCOL-IES : IEsSetParam} ::=
    ProtocolIE-Field {{IEsSetParam}}

ProtocolIE-Field {NGAP-PROTOCOL-IES : IEsSetParam} ::= SEQUENCE {
    id              NGAP-PROTOCOL-IES.&id               ({IEsSetParam}),
    criticality     NGAP-PROTOCOL-IES.&criticality      ({IEsSetParam}{@id}),
    value           NGAP-PROTOCOL-IES.&Value            ({IEsSetParam}{@id})
}

-- **************************************************************
--
-- Container for Protocol IE Pairs
--
-- **************************************************************
```

```
ProtocolIE-ContainerPair {NGAP-PROTOCOL-IES-PAIR : IEsSetParam} ::=
    SEQUENCE (SIZE (0..maxProtocolIEs)) OF
    ProtocolIE-FieldPair {{IEsSetParam}}

ProtocolIE-FieldPair {NGAP-PROTOCOL-IES-PAIR : IEsSetParam} ::= SEQUENCE {
    id                  NGAP-PROTOCOL-IES-PAIR.&id                  ({IEsSetParam}),
    firstCriticality    NGAP-PROTOCOL-IES-PAIR.&firstCriticality    ({IEsSetParam}{@id}),
    firstValue          NGAP-PROTOCOL-IES-PAIR.&FirstValue          ({IEsSetParam}{@id}),
    secondCriticality   NGAP-PROTOCOL-IES-PAIR.&secondCriticality   ({IEsSetParam}{@id}),
    secondValue         NGAP-PROTOCOL-IES-PAIR.&SecondValue         ({IEsSetParam}{@id})
}

-- ************************************************************
--
-- Container Lists for Protocol IE Containers
--
-- ************************************************************

ProtocolIE-ContainerList {INTEGER : lowerBound, INTEGER : upperBound, NGAP-PROTOCOL-IES : IEsSetParam} ::=
    SEQUENCE (SIZE (lowerBound..upperBound)) OF
    ProtocolIE-SingleContainer {{IEsSetParam}}

ProtocolIE-ContainerPairList {INTEGER : lowerBound, INTEGER : upperBound, NGAP-PROTOCOL-IES-PAIR : IEsSetParam} ::=
    SEQUENCE (SIZE (lowerBound..upperBound)) OF
    ProtocolIE-ContainerPair {{IEsSetParam}}

-- ************************************************************
--
-- Container for Protocol Extensions
--
-- ************************************************************

ProtocolExtensionContainer {NGAP-PROTOCOL-EXTENSION : ExtensionSetParam} ::=
    SEQUENCE (SIZE (1..maxProtocolExtensions)) OF
    ProtocolExtensionField {{ExtensionSetParam}}

ProtocolExtensionField {NGAP-PROTOCOL-EXTENSION : ExtensionSetParam} ::= SEQUENCE {
    id                  NGAP-PROTOCOL-EXTENSION.&id             ({ExtensionSetParam}),
    criticality         NGAP-PROTOCOL-EXTENSION.&criticality    ({ExtensionSetParam}{@id}),
    extensionValue      NGAP-PROTOCOL-EXTENSION.&Extension      ({ExtensionSetParam}{@id})
}

-- ************************************************************
--
-- Container for Private IEs
--
-- ************************************************************

PrivateIE-Container {NGAP-PRIVATE-IES : IEsSetParam } ::=
    SEQUENCE (SIZE (1..maxPrivateIEs)) OF
    PrivateIE-Field {{IEsSetParam}}

PrivateIE-Field {NGAP-PRIVATE-IES : IEsSetParam} ::= SEQUENCE {
    id                  NGAP-PRIVATE-IES.&id                ({IEsSetParam}),
```

```
    criticality         NGAP-PRIVATE-IES.&criticality       ({IEsSetParam}{@id}),
    value               NGAP-PRIVATE-IES.&Value             ({IEsSetParam}{@id})
}

END
-- ASN1STOP
```

9.5 Message Transfer Syntax

NGAP shall use the ASN.1 Basic Packed Encoding Rules (BASIC-PER) Aligned Variant as transfer syntax as specified in ITU-T Rec. X.691 [4].

9.6 Timers

$TNG_{RELOCprep}$

- Specifies the maximum time for the Handover Preparation procedure in the source NG-RAN node.

$TNG_{RELOCoverall}$

- Specifies the maximum time for the protection of the overall handover procedure in the source NG-RAN node.

$TXn_{RELOCOverall}$

- Specified in TS 38.423 [24].

10 Handling of Unknown, Unforeseen and Erroneous Protocol Data

10.1 General

Protocol Error cases can be divided into three classes:

- Transfer Syntax Error.
- Abstract Syntax Error.
- Logical Error.

Protocol errors can occur in the following functions within a receiving node:

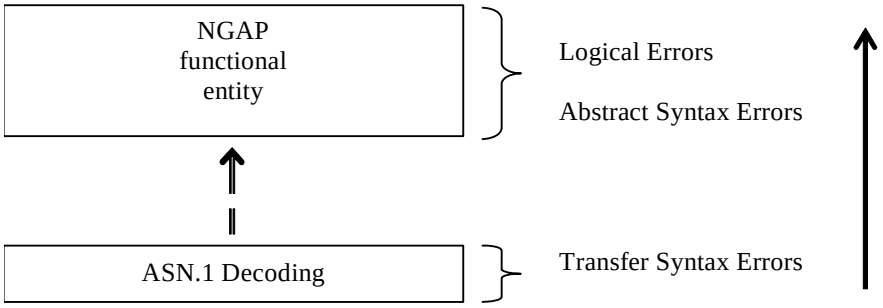


Figure 10.1-1: Protocol Errors in NGAP.

The information stated in clauses 10.2, 10.3 and 10.4, to be included in the message used when reporting an error, is what at minimum shall be included. Other optional information elements within the message may also be included, if available. This is also valid for the case when the reporting is done with a response message. The latter is an exception to what is stated in clause 4.1.

10.2 Transfer Syntax Error

A Transfer Syntax Error occurs when the receiver is not able to decode the received physical message. Transfer syntax errors are always detected in the process of ASN.1 decoding. If a Transfer Syntax Error occurs, the receiver should initiate Error Indication procedure with appropriate cause value for the Transfer Syntax protocol error.

Examples for Transfer Syntax Errors are:

- Violation of value ranges in ASN.1 definition of messages. E.g., if an IE has a defined value range of 0 to 10 (ASN.1: INTEGER (0..10)), and 12 will be received, then this will be treated as a transfer syntax error.
- Violation in list element constraints. E.g., if a list is defined as containing 1 to 10 elements, and 12 elements will be received, then this case will be handled as a transfer syntax error.
- Missing mandatory elements in ASN.1 SEQUENCE definitions (as sent by the originator of the message).
- Wrong order of elements in ASN.1 SEQUENCE definitions (as sent by the originator of the message).

10.3 Abstract Syntax Error

10.3.1 General

An Abstract Syntax Error occurs when the receiving functional NGAP entity:

1. receives IEs or IE groups that cannot be understood (unknown IE ID);

2. receives IEs for which the logical range is violated (e.g., ASN.1 definition: 0 to 15, the logical range is 0 to 10, while values 11 to 15 are undefined), and 12 will be received; this case will be handled as an abstract syntax error using criticality information sent by the originator of the message);

3. does not receive IEs or IE groups but according to the specified presence of the concerning object, the IEs or IE groups should have been present in the received message.

4. receives IEs or IE groups that are defined to be part of that message in wrong order or with too many occurrences of the same IE or IE group;

5. receives IEs or IE groups but according to the conditional presence of the concerning object and the specified condition, the IEs or IE groups should not have been present in the received message.

6. receives IEs or IE groups for a functionality that is not supported.

Cases 1, 2 and 6 (not comprehended IE/IE group) are handled based on received Criticality information. Case 3 (missing IE/IE group) is handled based on Criticality information and Presence information for the missing IE/IE group specified in the version of the specification used by the receiver. Case 4 (IEs or IE groups in wrong order or with too many occurrences) and Case 5 (erroneously present conditional IEs or IE groups) result in rejecting the procedure.

If an Abstract Syntax Error occurs, the receiver shall read the remaining message and shall then for each detected Abstract Syntax Error that belong to cases 1-3 and 6 act according to the Criticality Information and Presence Information for the IE/IE group due to which Abstract Syntax Error occurred in accordance with clauses 10.3.4 and 10.3.5. The handling of cases 4 and 5 is specified in clause 10.3.6.

10.3.2 Criticality Information

In the NGAP messages there is criticality information set for individual IEs and/or IE groups. This criticality information instructs the receiver how to act when receiving an IE or an IE group that is not comprehended, i.e., the entire item (IE or IE group) which is not (fully or partially) comprehended shall be treated in accordance with its own criticality information as specified in clause 10.3.4.

In addition, the criticality information is used in case of the missing IE/IE group abstract syntax error (see clause 10.3.5).

The receiving node shall take different actions depending on the value of the Criticality Information. The three possible values of the Criticality Information for an IE/IE group are:

- Reject IE.
- Ignore IE and Notify Sender.
- Ignore IE.

The comprehension of different IEs or IE groups within a standard version or between standard versions is not mandated. Any IE or IE group that is not supported shall be considered not comprehended, even if another IE or IE group for that EP from that standard version is comprehended, and action based on criticality shall be applied.

The comprehension of different EPs within a standard version or between different standard versions is not mandated. Any EP that is not supported shall be considered not comprehended, even if another EP from that standard version is comprehended, and action based on criticality shall be applied.

10.3.3 Presence Information

For many IEs/IE groups which are optional according to the ASN.1 transfer syntax, NGAP specifies separately if the presence of these IEs/IE groups is optional or mandatory with respect to RNS application by means of the presence field of the concerning object of class NGAP-PROTOCOL-IES, NGAP-PROTOCOL-IES-PAIR, NGAP-PROTOCOL-EXTENSION or NGAP-PRIVATE-IES.

The presence field of the indicated classes supports three values:

1. Optional;
2. Conditional;

3. Mandatory.

If an IE/IE group is not included in a received message and the presence of the IE/IE group is mandatory or the presence is conditional and the condition is true according to the version of the specification used by the receiver, an abstract syntax error occurs due to a missing IE/IE group.

If an IE/IE group is included in a received message and the presence of the IE/IE group is conditional and the condition is false according to the version of the specification used by the receiver, an abstract syntax error occurs due to this erroneously present conditional IE/IE group.

10.3.4 Not comprehended IE/IE group

10.3.4.1 Procedure Code

The receiving node shall treat the different types of received criticality information of the *Procedure Code* IE according to the following:

Reject IE:

- If a message is received with a *Procedure Code* IE marked with "*Reject IE*" which the receiving node does not comprehend, the receiving node shall reject the procedure using the Error Indication procedure.

Ignore IE and Notify Sender:

- If a message is received with a *Procedure Code* IE marked with "*Ignore IE and Notify Sender*" which the receiving node does not comprehend, the receiving node shall ignore the procedure and initiate the Error Indication procedure.

Ignore IE:

- If a message is received with a *Procedure Code* IE marked with "*Ignore IE*" which the receiving node does not comprehend, the receiving node shall ignore the procedure.

When using the Error Indication procedure to reject a procedure or to report an ignored procedure it shall include the *Procedure Code* IE, the *Triggering Message* IE, and the *Procedure Criticality* IE in the *Criticality Diagnostics* IE.

10.3.4.1A Type of Message

When the receiving node cannot decode the *Type of Message* IE, the Error Indication procedure shall be initiated with an appropriate cause value.

10.3.4.2 IEs other than the Procedure Code and Type of Message

The receiving node shall treat the different types of received criticality information of an IE/IE group other than the *Procedure Code* IE and *Type of Message* IE according to the following:

Reject IE:

- If a message *initiating* a procedure is received containing one or more IEs/IE group marked with "*Reject IE*" which the receiving node does not comprehend; none of the functional requests of the message shall be executed. The receiving node shall reject the procedure and report the rejection of one or more IEs/IE group using the message normally used to report unsuccessful outcome of the procedure. In case the information received in the initiating message was insufficient to determine a value for all IEs that are required to be present in the message used to report the unsuccessful outcome of the procedure, the receiving node shall instead terminate the procedure and initiate the Error Indication procedure.

- If a message *initiating* a procedure that does not have a message to report unsuccessful outcome is received containing one or more IEs/IE groups marked with "*Reject IE*" which the receiving node does not comprehend, the receiving node shall terminate the procedure and initiate the Error Indication procedure.

- If a *response* message is received containing one or more IEs marked with "*Reject IE*", that the receiving node does not comprehend, the receiving node shall consider the procedure as unsuccessfully terminated and initiate local error handling.

Ignore IE and Notify Sender:

- If a message *initiating* a procedure is received containing one or more IEs/IE groups marked with "*Ignore IE and Notify Sender*" which the receiving node does not comprehend, the receiving node shall ignore the content of the not comprehended IEs/IE groups, continue with the procedure as if the not comprehended IEs/IE groups were not received (except for the reporting) using the understood IEs/IE groups, and report in the response message of the procedure that one or more IEs/IE groups have been ignored. In case the information received in the initiating message was insufficient to determine a value for all IEs that are required to be present in the response message, the receiving node shall instead terminate the procedure and initiate the Error Indication procedure.

- if a message *initiating* a procedure that does not have a message to report the outcome of the procedure is received containing one or more IEs/IE groups marked with "*Ignore IE and Notify Sender*" which the receiving node does not comprehend, the receiving node shall ignore the content of the not comprehended IEs/IE groups, continue with the procedure as if the not comprehended IEs/IE groups were not received (except for the reporting) using the understood IEs/IE groups, and initiate the Error Indication procedure to report that one or more IEs/IE groups have been ignored.

- If a *response* message is received containing one or more IEs/IE groups marked with "*Ignore IE and Notify Sender*" which the receiving node does not comprehend, the receiving node shall ignore the content of the not comprehended IEs/IE groups, continue with the procedure as if the not comprehended IEs/IE groups were not received (except for the reporting) using the understood IEs/IE groups and initiate the Error Indication procedure.

Ignore IE:

- If a message *initiating* a procedure is received containing one or more IEs/IE groups marked with "*Ignore IE*" which the receiving node does not comprehend, the receiving node shall ignore the content of the not comprehended IEs/IE groups and continue with the procedure as if the not comprehended IEs/IE groups were not received using the understood IEs/IE groups.

- If a *response* message is received containing one or more IEs/IE groups marked with "*Ignore IE*" which the receiving node does not comprehend, the receiving node shall ignore the content of the not comprehended IEs/IE groups and continue with the procedure as if the not comprehended IEs/IE groups were not received using the understood IEs/IE groups.

When reporting not comprehended IEs/IE groups marked with "*Reject IE*" or "*Ignore IE and Notify Sender*" using a response message defined for the procedure, the *Information Element Criticality Diagnostics* IE shall be included in the *Criticality Diagnostics* IE for each reported IE/IE group.

When reporting not comprehended IEs/IE groups marked with "*Reject IE*" or "*Ignore IE and Notify Sender*" using the Error Indication procedure, the *Procedure Code* IE, the *Triggering Message* IE, *Procedure Criticality* IE, and the *Information Element Criticality Diagnostics* IE shall be included in the *Criticality Diagnostics* IE for each reported IE/IE group.

10.3.5 Missing IE or IE group

The receiving node shall treat the missing IE/IE group according to the criticality information for the missing IE/IE group in the received message specified in the version of this specification used by the receiver:

Reject IE:

- if a received message *initiating* a procedure is missing one or more IEs/IE groups with specified criticality "*Reject IE*"; none of the functional requests of the message shall be executed. The receiving node shall reject the procedure and report the missing IEs/IE groups using the message normally used to report unsuccessful outcome of the procedure. In case the information received in the initiating message was insufficient to determine a value for all IEs that are required to be present in the message used to report the unsuccessful outcome of the procedure, the receiving node shall instead terminate the procedure and initiate the Error Indication procedure.

- if a received message *initiating* a procedure that does not have a message to report unsuccessful outcome is missing one or more IEs/IE groups with specified criticality "*Reject IE*", the receiving node shall terminate the procedure and initiate the Error Indication procedure.

- if a received *response* message is missing one or more IEs/IE groups with specified criticality "*Reject IE*, the receiving node shall consider the procedure as unsuccessfully terminated and initiate local error handling.

Ignore IE and Notify Sender:

- if a received message *initiating* a procedure is missing one or more IEs/IE groups with specified criticality "*Ignore IE and Notify Sender*", the receiving node shall ignore that those IEs are missing and continue with the procedure based on the other IEs/IE groups present in the message and report in the response message of the procedure that one or more IEs/IE groups were missing. In case the information received in the initiating message was insufficient to determine a value for all IEs that are required to be present in the response message, the receiving node shall instead terminate the procedure and initiate the Error Indication procedure.

- if a received message *initiating* a procedure that does not have a message to report the outcome of the procedure is missing one or more IEs/IE groups with specified criticality "*Ignore IE and Notify Sender*", the receiving node shall ignore that those IEs are missing and continue with the procedure based on the other IEs/IE groups present in the message and initiate the Error Indication procedure to report that one or more IEs/IE groups were missing.

- if a received *response* message is missing one or more IEs/IE groups with specified criticality "*Ignore IE and Notify Sender*", the receiving node shall ignore that those IEs are missing and continue with the procedure based on the other IEs/IE groups present in the message and initiate the Error Indication procedure to report that one or more IEs/IE groups were missing.

Ignore IE:

- if a received message *initiating* a procedure is missing one or more IEs/IE groups with specified criticality "*Ignore IE*", the receiving node shall ignore that those IEs are missing and continue with the procedure based on the other IEs/IE groups present in the message.

- if a received *response* message is missing one or more IEs/IE groups with specified criticality "*Ignore IE*", the receiving node shall ignore that those IEs/IE groups are missing and continue with the procedure based on the other IEs/IE groups present in the message.

When reporting missing IEs/IE groups with specified criticality "*Reject IE*" or "*Ignore IE and Notify Sender*" using a response message defined for the procedure, the *Information Element Criticality Diagnostics* IE shall be included in the *Criticality Diagnostics* IE for each reported IE/IE group.

When reporting missing IEs/IE groups with specified criticality "*Reject IE*" or "*Ignore IE and Notify Sender*" using the Error Indication procedure, the *Procedure Code* IE, the *Triggering Message* IE, *Procedure Criticality* IE, and the *Information Element Criticality Diagnostics* IE shall be included in the *Criticality Diagnostics* IE for each reported IE/IE group.

10.3.6 IEs or IE groups received in wrong order or with too many occurrences or erroneously present

If a message with IEs or IE groups in wrong order or with too many occurrences is received or if IEs or IE groups with a conditional presence are present when the condition is not met (i.e., erroneously present), the receiving node shall behave according to the following:

- If a message *initiating* a procedure is received containing IEs or IE groups in wrong order or with too many occurrences or erroneously present, none of the functional requests of the message shall be executed. The receiving node shall reject the procedure and report the cause value "Abstract Syntax Error (Falsely Constructed Message)" using the message normally used to report unsuccessful outcome of the procedure. In case the information received in the initiating message was insufficient to determine a value for all IEs that are required to be present in the message used to report the unsuccessful outcome of the procedure, the receiving node shall instead terminate the procedure and initiate the Error Indication procedure.

- If a message *initiating* a procedure that does not have a message to report unsuccessful outcome is received containing IEs or IE groups in wrong order or with too many occurrences or erroneously present, the receiving node shall terminate the procedure and initiate the Error Indication procedure, and use cause value "Abstract Syntax Error (Falsely Constructed Message)".

- If a *response* message is received containing IEs or IE groups in wrong order or with too many occurrences or erroneously present, the receiving node shall consider the procedure as unsuccessfully terminated and initiate local error handling.

When determining the correct order only the IEs specified in the specification version used by the receiver shall be considered.

10.4 Logical Error

Logical error situations occur when a message is comprehended correctly, but the information contained within the message is not valid (i.e., semantic error), or describes a procedure which is not compatible with the state of the receiver. In these conditions, the following behaviour shall be performed (unless otherwise specified) as defined by the class of the elementary procedure, irrespective of the criticality information of the IEs/IE groups containing the erroneous values.

Class 1:

Where the logical error occurs in a request message of a class 1 procedure, and the procedure has a message to report this unsuccessful outcome, this message shall be sent with an appropriate cause value. Typical cause values are:

- Semantic Error.
- Message not compatible with receiver state.

Where the logical error is contained in a request message of a class 1 procedure, and the procedure does not have a message to report this unsuccessful outcome, the procedure shall be terminated and the Error Indication procedure shall be initiated with an appropriate cause value. The *Procedure Code* IE and the *Triggering Message* IE within the *Criticality Diagnostics* IE shall then be included in order to identify the message containing the logical error.

Where the logical error exists in a response message of a class 1 procedure, the procedure shall be considered as unsuccessfully terminated and local error handling shall be initiated.

Class 2:

Where the logical error occurs in a message of a class 2 procedure, the procedure shall be terminated and the Error Indication procedure shall be initiated with an appropriate cause value. The *Procedure Code* IE and the *Triggering Message* IE within the *Criticality Diagnostics* IE shall then be included in order to identify the message containing the logical error.

10.5 Exceptions

The error handling for all the cases described hereafter shall take precedence over any other error handling described in the other subclauses of clause 10.

- If any type of error (Transfer Syntax Error, Abstract Syntax Error or Logical Error) is detected in the ERROR INDICATION message, it shall not trigger the Error Indication procedure in the receiving Node but local error handling.
- In case a response message or Error Indication message needs to be returned, but the information necessary to determine the receiver of that message is missing, the procedure shall be considered as unsuccessfully terminated and local error handling shall be initiated.
- If an error that terminates a procedure occurs, the returned cause value shall reflect the error that caused the termination of the procedure even if one or more abstract syntax errors with criticality "ignore and notify" have earlier occurred within the same procedure.
- If an AP ID error is detected, the error handling as described in clause 10.6 shall be applied.

10.6 Handling of AP ID

NOTE: The "first message", the "first returned message" and the "last message" as used below correspond to messages for a UE-associated logical connection. The "first message" has a new AP ID from the sending node and the "first returned message" is the first response message, which has a new AP ID from the node sending the "first returned message". Thereafter the two AP IDs are included in all messages over the UE-associated logical connection unless otherwise allowed by the specification. The "last message" is a message sent by a node in order to complete the termination of a given UE-associated logical connection, such that no other messages for the same connection are expected in either direction. The nodes should ensure as far as possible that previously allocated AP ID are not immediately reused.

If a node receives a first returned message that includes an unknown local AP ID, the receiving node shall initiate an Error Indication procedure with inclusion of the received AP IDs from the peer node and an appropriate cause value. Both nodes shall initiate a local release of any established UE-associated logical connection (for the same NG interface) having these AP IDs as local or remote identifier.

If a node receives a message (other than the first or first returned messages) including an erroneous AP ID that is either an unknown local AP ID, or an inconsistent remote AP ID (i.e. it is different to the remote AP ID stored previously for this UE-associated logical connection) for the same NG interface:

- if this message is not the last message for this UE-associated logical connection, the node shall initiate an Error Indication procedure with inclusion of the received AP ID(s) from the peer node and an appropriate cause value. Both nodes shall initiate a local release of any established UE-associated logical connection (for the same NG interface) having the erroneous AP ID as either the local or remote identifier.

- if this message is the last message for this UE-associated logical connection, the receiving node shall initiate a local release of any established UE-associated logical connection (for the same NG interface) having the erroneous AP ID as either the local or remote identifier.

Annex A (informative): Change history

Change history							
Date	Meeting	Tdoc	CR	Rev	Cat	Subject/Comment	New version
2017-04	R3#95b	R3-171209	-	-	-	TS skeleton	0.0.0
2017-04	R3#95b	R3-171311	-	-	-	Incorporated agreed TPs from R3#95b	0.0.1
2017-05	R3#96	R3-171480	-	-	-	Update of title page and change history	0.0.2
2017-05	R3#96	R3-171975	-	-	-	Incorporated agreed TPs from R3#96	0.1.0
2017-07	R3 NR#2	R3-172604	-	-	-	Incorporated agreed TPs from R3 NR#2 Adhoc	0.2.0
2017-08	R3#97	R3-173447	-	-	-	Incorporated agreed TPs from R3#97	0.3.0
2017-10	R3#97b	R3-174239	-	-	-	Incorporated agreed TPs from R3#97b	0.4.0
2017-12	R3#98	R3-175056	-	-	-	Incorporated agreed TPs from R3#98	0.5.0
2018-01	R3 NR#1	R3-180651	-	-	-	Incorporated agreed TPs from R3 NR Adhoc 1801	0.6.0
2018-03	R3#99	R3-181588	-	-	-	Incorporated agreed TPs from R3#99	0.7.0
2018-04	R3#99b	R3-182524	-	-	-	Incorporated agreed TPs from R3#99b	0.8.0
2018-05	R3#100	R3-183592	-	-	-	Incorporated agreed TPs from R3#100	0.9.0
2018-06	RAN#80	RP-180737	-	-	-	For approval	1.0.0
2018-06	RAN#80	-	-	-	-	Specification approved at TSG-RAN and placed under change control	15.0.0
2018-09	RAN#81	RP-181922	0001	2	F	NR Corrections (38.413 Baseline CR covering RAN3-101 agreements)	15.1.0
2018-12	RAN#82	RP-182448	0003	2	F	Baseline CR for TS 38.413	15.2.0
2019-03	RAN#83	RP-190556	0005	3	F	NGAP Corrections for UP Security Handling in DC during PDU Session Lifetime	15.3.0
2019-03	RAN#83	RP-190555	0008	2	F	Separate UL/DL limits for UE's maximum IP rate	15.3.0
2019-03	RAN#83	RP-190554	0009	1	F	Data volume reporting for MR-DC with 5GC	15.3.0
2019-03	RAN#83	RP-190554	0010	3	F	Correction of PDU Session split at handover	15.3.0
2019-03	RAN#83	RP-190556	0011	1	F	Correction of EPS Voice Fallback	15.3.0
2019-03	RAN#83	RP-190556	0012	-	F	Correction of slice support over NG	15.3.0
2019-03	RAN#83	RP-190556	0014	1	F	Rapporteur updates for TS 38.413	15.3.0
2019-03	RAN#83	RP-190556	0015	-	F	Correction of User Location Information IE presence in HANDOVER NOTIFY	15.3.0
2019-03	RAN#83	RP-190556	0019	1	F	Correction to RRC state report	15.3.0
2019-03	RAN#83	RP-190555	0021	-	F	Support of RAN initiated multiple SCTP associations	15.3.0
2019-03	RAN#83	RP-190556	0023	-	F	Corrections on RAN/AMF Configuration Update	15.3.0
2019-03	RAN#83	RP-190556	0024	2	F	Correction of EPC interworking	15.3.0
2019-03	RAN#83	RP-190556	0025	1	F	Correction of Emergency Fallback	15.3.0
2019-03	RAN#83	RP-190202	0027	3	F	Transfer of the PSCell information to Core Network	15.3.0
2019-03	RAN#83	RP-190558	0028	1	F	Release due to pre-emption	15.3.0
2019-03	RAN#83	RP-190558	0029	-	F	Handling of APID for the first returned message	15.3.0
2019-03	RAN#83	RP-190556	0037	-	F	Clarification on the usage of TNL information	15.3.0
2019-03	RAN#83	RP-190556	0044	1	F	NG Setup Correction and UE context retention	15.3.0
2019-03	RAN#83	RP-190556	0045	1	F	UE AMBR handling in PDU Session Resouce Setup procedure	15.3.0
2019-03	RAN#83	RP-190556	0046	1	F	Remove the second tunnel in the PDU session split, 5GC initiated	15.3.0
2019-03	RAN#83	RP-190556	0048	1	F	When NG-RAN node fails to set up a QoS flow for IMS voice	15.3.0
2019-03	RAN#83	RP-190556	0052	-	F	Correction of ASN.1 for PDU Session Resource Modify Response	15.3.0
2019-03	RAN#83	RP-190556	0053	1	F	Cause value in RRC fallback case	15.3.0
2019-03	RAN#83	RP-190556	0058	2	F	S-NSSAI update during EPS to 5GS handover	15.3.0
2019-03	RAN#83	RP-190561	0064	1	F	Introduction of TNL Address discovery for EN-DC (using new container)	15.3.0
2019-03	RAN#83	RP-190200	0066	-	F	Correction of ASN.1 for SON Configuration Transfer and PDU Session Resource Modify Request Transfer	15.3.0
2019-07	RAN#84	RP-191394	0099	1	F	Rapporteur updates for TS 38.413	15.4.0
2019-07	RP-84	RP-191397	0041	2	F	Support of ongoing re-mapping on source side during SDAP mobility	15.4.0
2019-07	RP-84	RP-191397	0067	1	F	NGAP Further Clarification of S-NSSAI Update for EPS to 5GS HO	15.4.0
2019-07	RP-84	RP-191394	0071	-	F	CR38413 for Clarification on PDU Session resource modify	15.4.0
2019-07	RP-84	RP-191397	0075	1	F	Correction of Core Network Type Restrictions	15.4.0
2019-07	RP-84	RP-191394	0077	1	F	Correction of PDU Session Release	15.4.0
2019-07	RP-84	RP-191395	0084	2	F	Removal of multiple SCTP associations PS: This CR was not implemented as it was not based on the latest version of the spec.	15.4.0
2019-07	RP-84	RP-191394	0095		F	Correction on Error Indication procedure	15.4.0
2019-07	RP-84	RP-191394	0096		F	Location Report Request Type	15.4.0
2019-07	RP-84	RP-191394	0101	2	F	GUAMI update in case of AMF change	15.4.0
2019-07	RP-84	RP-191397	0102	2	F	Data forwarding and QoS flow remapping	15.4.0
2019-07	RP-84	RP-191397	0111	1	F	Correction of CN Assistance Information	15.4.0
2019-07	RP-84	RP-191397	0112		F	Correction of Network Instance	15.4.0
2019-07	RP-84	RP-191394	0117	1	F	Correction of AMF UE NGAP ID	15.4.0
2019-07	RP-84	RP-191394	0130	1	F	Adding PSCell to the User Location Information	15.4.0
2019-07	RP-84	RP-191394	0135		F	Correction on Handover Command message	15.4.0
2019-07	RP-84	RP-191394	0148		F	Correction of duplicated descriptions on additional UL tunnel information	15.4.0
2019-09	RP-85	RP-192167	0084	4	F	Removal of multiple SCTP associations	15.5.0

2019-09	RP-85	RP-192166	0161	2	F	Correction of secured signalling connection	15.5.0
2019-09	RP-85	RP-192167	0178	1	F	PDU Session fail in Path Switch Request procedure	15.5.0
2019-09	RP-85	RP-192167	0195	2	F	Reroute NSSF provided information	15.5.0
2019-09	RP-85	RP-192166	0199		F	Correction of Handover Command message	15.5.0
2019-09	RP-85	RP-192167	0220	1	F	NGAP correction of Initial Context Setup procedure text	15.5.0
2019-09	RP-85	RP-192167	0226	1	F	Rapporteur cleanup of IE semantics descriptions	15.5.0
2019-12	RP-86	RP-192915	0256	1	F	Correction of NAS transparent container	15.6.0
2019-12	RP-86	RP-192915	0258	1	F	Missing procedural texts for NG interface	15.6.0
2019-12	RP-86	RP-192915	0261		F	Correction of Handover Command	15.6.0
2019-12	RP-86	RP-192915	0262	1	F	Correction of S-NSSAI coding	15.6.0
2019-12	RP-86	RP-192916	0269	1	F	Correction of Port Number IE in tabular	15.6.0
2019-12	RP-86	RP-192915	0276	2	F	Enable inclusion of the Backup AMF Name IE	15.6.0
2019-12	RP-86	RP-192916	0281		F	Correction of NG Handover	15.6.0
2019-12	RP-86	RP-192896	0286	3	F	Addition of abnormal cases for location report procedure	15.6.0
2019-12	RP-86	RP-192916	0300	2	F	CR to 38.413 on clarifications to Xn TNL Configuration Info	15.6.0
2019-12	RP-86	RP-192916	0303		F	CR for Clarification on purpose of path switch request	15.6.0
2019-12	RP-86	RP-193055	0304	-	F	Correction of Xn TNL Configuration Info	15.6.0
2019-12	RP-86	RP-192912	0051	7	B	Support of Direct Data forwarding for handover between 4G and 5G	16.0.0
2019-12	RP-86	RP-192908	0137	6	B	CR to 38.413 for signalling design for RIM	16.0.0
2019-12	RP-86	RP-192916	0143	3	B	The GUAMI and GUMMEI usage for EPS/5GS interworking	16.0.0
2019-12	RP-86	RP-192913	0266	1	C	Extending the MDBV Range	16.0.0
2020-03	RP-87-e	RP-200424	0234	6	B	Support of SRVCC from 5G to 3G	16.1.0
2020-03	RP-87-e	RP-200422	0291	2	B	Introduction of NR-U	16.1.0
2020-03	RP-87-e	RP-200425	0314	1	F	Addition of the PSCell information in the path update procedure	16.1.0
2020-03	RP-87-e	RP-200428	0317		A	Correction of Warning Security Information in ETWS primary notification	16.1.0
2020-03	RP-87-e	RP-200429	0319		A	Correction of tabular for Xn TNL Configuration Info	16.1.0
2020-03	RP-87-e	RP-200425	0320	1	F	NGAP Rapporteur corrections	16.1.0
2020-03	RP-87-e	RP-200475	0329	4	B	E2E delay measurement for QoS monitoring for URLLC	16.1.0
2020-03	RP-87-e	RP-200419	0331	1	B	Inter-system direct forwarding with shared SgNB/gNB	16.1.0
2020-03	RP-87-e	RP-200428	0335		A	Correction of RAN paging priority	16.1.0
2020-03	RP-87-e	RP-200428	0337	1	A	PDU session resource in UE context release	16.1.0
2020-03	RP-87-e	RP-200423	0347	2	B	Introducing Radio Capability Optimisation (RACS) (The CR is not implemented. The CR was marked agreed by mistake while the WI is not yet complete)	16.1.0
2020-07	RP-88-e	RP-201077	0063	13	B	BL CR to 38.413: Support for IAB	16.2.0
2020-07	RP-88-e	RP-201079	0082	15	B	Introduction of NR_IIOT support to TS 38.413	16.2.0
2020-07	RP-88-e	RP-201088	0120	10	B	Introduction of NB-IoT Paging and eDRX aspects	16.2.0
2020-07	RP-88-e	RP-201086	0153	11	B	Common CP/UP aspects of CIoT UEs when connected to 5GC	16.2.0
2020-07	RP-88-e	RP-201335	0156	11	B	Introduction of NB-IoT related NG-AP procedures	16.2.0
2020-07	RP-88-e	RP-201088	0157	9	B	Introduction of CP UP NB-IoT Others	16.2.0
2020-07	RP-88-e	RP-201074	0168	10	B	Support of NR V2X over NG	16.2.0
2020-07	RP-88-e	RP-201087	0172	10	B	Introduction of eMTC connected to 5GC	16.2.0
2020-07	RP-88-e	RP-201086	0173	8	B	Introduction of Control Plane CIoT 5GS Optimisation for NB-IOT and eMTC	16.2.0
2020-07	RP-88-e	RP-201086	0188	10	B	Introduction of Suspend-Resume	16.2.0
2020-07	RP-88-e	RP-201081	0192	11	B	CR for introducing WWC in RAN	16.2.0
2020-07	RP-88-e	RP-201082	0237	10	B	Addition of SON features	16.2.0
2020-07	RP-88-e	RP-201082	0280	7	B	Addition of MDT feature	16.2.0
2020-07	RP-88-e	RP-201080	0290	9	B	Introduction of Non-Public Networks	16.2.0
2020-07	RP-88-e	RP-201079	0313	4	B	Support of Ethernet Header Compression	16.2.0
2020-07	RP-88-e	RP-201078	0347	6	B	Introducing Radio Capability Optimisation (RACS)	16.2.0
2020-07	RP-88-e	RP-201091	0357	2	A	Clarification the usage of the New AMF UE NGAP ID included in the UE CONTEXT MODIFICATION REQUEST message	16.2.0
2020-07	RP-88-e	RP-201075	0362	5	B	Baseline CR for introducing Rel-16 NR mobility enhancement	16.2.0
2020-07	RP-88-e	RP-201083	0364		F	ASN.1 Correction of the Data Forwarding Response E-RAB List IE	16.2.0
2020-07	RP-88-e	RP-201085	0365		F	NGAP Rapporteur corrections	16.2.0
2020-07	RP-88-e	RP-201091	0371	1	A	Correction of Revoke E-RAB ID	16.2.0
2020-07	RP-88-e	RP-200795	0372	3	F	Voice fallback triggered by PDU session resource setup	16.2.0
2020-07	RP-88-e	RP-201091	0379	1	A	Correction on AS rekeying handling	16.2.0
2020-07	RP-88-e	RP-201090	0389	3	A	Correction to PDU SESSION RESOURCE MODIFY CONFIRM	16.2.0
2020-07	RP-88-e	RP-201092	0392	1	A	Selected PLMN ID for untrusted non-3GPP access	16.2.0
2020-07	RP-88-e	RP-201090	0395	2	A	Correstion on PDU Session Resrouce Modification Procedures	16.2.0
2020-07	RP-88-e	RP-201085	0401	1	F	QoS monitoring for URLLC	16.2.0
2020-07	RP-88-e	RP-201090	0408	4	F	Correction of S-NSSAI range	16.2.0
2020-09	RP-89-e	RP-201955	0383	3	F	Support of PSCell/SCell-only operation mode	16.3.0
2020-09	RP-89-e	RP-201945	0396	4	B	Update of the NRPPa Transport procedure to support NR positioning	16.3.0
2020-09	RP-89-e	RP-201948	0416	-	F	NGAP tabular corrections and asn.1 review	16.3.0
2020-09	RP-89-e	RP-201950	0417	1	F	Rapporteur cleanup of NGAP	16.3.0
2020-09	RP-89-e	RP-201955	0425	1	F	Correction of NAS PDU in PDU Session Modify	16.3.0
2020-09	RP-89-e	RP-201948	0427	1	F	Correction of NPN CAG Cells and non-CAG Cells	16.3.0

2020-09	RP-89-e	RP-201955	0443	1	A	Failure case of user location report	16.3.0
2020-09	RP-89-e	RP-201955	0445	1	A	Multiple location reporting requests and report	16.3.0
2020-09	RP-89-e	RP-201955	0462	-	F	Correction of asn.1 in NGAP Elementary Procedure List	16.3.0
2020-09	RP-89-e	RP-201955	0463	1	F	Corrections to 38.413 on node name type	16.3.0
2020-12	RP-90-e	RP-202314	0410	1	F	Correction on Coverage Enhancement Restrictions	16.4.0
2020-12	RP-90-e	RP-202314	0411	2	F	Correction on immediate suspension	16.4.0
2020-12	RP-90-e	RP-202310	0414	1	F	Add the support for updating RG Level Wireline Access Characteristics and Global Cable ID	16.4.0
2020-12	RP-90-e	RP-202314	0483	2	F	Correction of usage of the Extended Connected Time	16.4.0
2020-12	RP-90-e	RP-202312	0484	1	F	Support of release on CAG subscription change	16.4.0
2020-12	RP-90-e	RP-202313	0485	-	F	Removal of duplicate import	16.4.0
2020-12	RP-90-e	RP-202311	0486	1	F	Correction of Redundant Tunnel Setup	16.4.0
2020-12	RP-90-e	RP-202314	0499	1	F	CR38413 for clarification on UE-associated signalling for NBIOT procedures in Rel-16	16.4.0
2020-12	RP-90-e	RP-202315	0501	1	F	CR38413 for clarification on UE-associated signalling in Rel-16	16.4.0
2020-12	RP-90-e	RP-202315	0505	1	A	Clarification on an abnormal condition in PDU Session Resource Modify Procedure	16.4.0
2020-12	RP-90-e	RP-202313	0507	1	F	Introduction of reporting frequency for Qos monitoring for URLLC	16.4.0
2020-12	RP-90-e	RP-202310	0511	1	F	Introducing AQP in path switch request acknowledge message	16.4.0
2020-12	RP-90-e	RP-202312	0512	1	F	Introducing UE radio capability ID in Connection Establishment Indication	16.4.0
2020-12	RP-90-e	RP-202314	0514		F	Correction of RAN CP Relocation	16.4.0
2021-03	RP-91-e	RP-210239	0355	5	A	Clarification of AS re-keying in the UE Context Modification procedure	16.5.0
2021-03	RP-91-e	RP-210235	0508	4	F	Introducing QoS parameters update at Xn handover	16.5.0
2021-03	RP-91-e	RP-210239	0520	2	F	Including the Redundant UL NG-U UP TNL Information in the Modify Request	16.5.0
2021-03	RP-91-e	RP-210232	0533	1	F	Correction of SNPN failures	16.5.0
2021-03	RP-91-e	RP-210239	0534	1	F	Update on QoS monitoring control	16.5.0
2021-03	RP-91-e	RP-210237	0537	2	F	Correction on RAT Information Handling	16.5.0
2021-03	RP-91-e	RP-210230	0541	-	F	Correction to NRPPa Transport procedure description	16.5.0
2021-03	RP-91-e	RP-210237	0544	-	F	Correction on UE identity index for eMTC UE in RRC_INACTIVE	16.5.0
2021-03	RP-91-e	RP-210235	0557	2	F	Clarification of Secondary RAT in mobility restrictions	16.5.0
2021-06	RP-92-e	RP-211315	0477	3	F	Clarification on TAI Slice Support List	16.6.0
2021-06	RP-92-e	RP-211333	0522	3	F	Introducing Maximum Integrity Protected Data Rate after EPC to 5GC handover	16.6.0
2021-06	RP-92-e	RP-211333	0547	2	F	Supporting use of UE Radio Capability for Paging in RRC_INACTIVE	16.6.0
2021-06	RP-92-e	RP-211333	0556	2	A	Interactions with other procedures for the UE TNLA BINDING RELEASE	16.6.0
2021-06	RP-92-e	RP-211333	0574	1	F	Correction of PDU Session Resource Modification	16.6.0
2021-06	RP-92-e	RP-211334	0583	1	A	Correction on Abnormal Conditions in Handover Preparation Procedure for R16	16.6.0
2021-06	RP-92-e	RP-211334	0603	2	F	Cause value on NG for insufficient UE capabilities CR 38.413	16.6.0
2021-06	RP-92-e	RP-211333	0610	-	F	Correction on the use of the Core Network Assistance Information for RRC INACTIVE IE	16.6.0
2021-06	RP-92-e	RP-211324	0614	2	F	Correction on Extended UE Identity Index Value	16.6.0
2021-09	RP-93-e	RP-211882	0376	7	F	NAS Non-Delivery	16.7.0
2021-09	RP-93-e	RP-211881	0431	4	F	Correction on Expected UE activity behaviour	16.7.0
2021-09	RP-93-e	RP-211881	0626		F	Correction of MICO mode	16.7.0
2021-09	RP-93-e	RP-211876	0631	-	F	Correcting Presence of the Cell CAG Information IE in ASN.1	16.7.0
2021-09	RP-93-e	RP-211882	0633	1	A	Deactivation of the MICO mode indication	16.7.0
2021-09	RP-93-e	RP-211881	0637	1	F	Correction of NAS PDU Non Delivery	16.7.0
2021-09	RP-93-e	RP-211882	0641	1	F	On IEs with reject criticality in the source and target transparent container	16.7.0
2021-09	RP-93-e	RP-211881	0645	1	F	Missing QoS Flows not Admitted List in HANDOVER COMMAND	16.7.0
2021-09	RP-93-e	RP-211883	0646	-	F	Clarification on the specified maximum length of the Routing ID Octet String	16.7.0
2021-09	RP-93-e	RP-211882	0660		F	Correction CR on Network instance	16.7.0
2021-12	RP-94-e	RP-212863	0663	1	F	Correction of Data Volume Report	16.8.0
2021-12	RP-94-e	RP-212863	0671	1	F	Adding reference for coding of Common Network Instance	16.8.0
2021-12	RP-94-e	RP-212869	0679	1	F	Clarification of UE with CAG information in UE subscription	16.8.0
2021-12	RP-94-e	RP-212868	0688	1	F	(NGAP CR) support the UE Radio Capability for Paging in RACS context	16.8.0
2021-12	RP-94-e	RP-212871	0693	1	F	Redundant network instance for split PDU session	16.8.0
2021-12	RP-94-e	RP-212864	0713	1	F	Allocation of TNL addresses for intra-system data forwarding	16.8.0
2022-03	RP-95-e	RP-220278	0619	3	F	Support of dynamic ACL during handover and dual connectivity	16.9.0
2022-03	RP-95-e	RP-220243	0691	2	F	Direct data forwarding for 4G to 5G handover	16.9.0
2022-03	RP-95-e	RP-220280	0727	1	F	Propagation of user consent related information during Xn inter-PLMN handover	16.9.0
2022-03	RP-95-e	RP-220278	0735		F	Correction on PDU Session Resource Setup procedure	16.9.0
2022-03	RP-95-e	RP-220279	0742	2	F	Correction of SNPN setup failure	16.9.0

2022-03	RP-95-e	RP-220280	0746	1	F	Value range misalignment for MDT M1, M8 and M9 configuration	16.9.0
2022-03	RP-95-e	RP-220279	0751	1	F	Clarification of the usage of an IE in case of DAPS HO	16.9.0
2022-03	RP-95-e	RP-220277	0752	1	F	Correction of intra-system Data Forwarding	16.9.0
2022-03	RP-95-e	RP-220243	0760	2	F	Direct data forwarding for mobility between DC and SA	16.9.0
2022-03	RP-95-e	RP-220225	0490	10	B	Introduction of NTN	17.0.0
2022-03	RP-95-e	RP-220221	0530	10	B	BLCR to 38.413_Addition of SON features enhancement	17.0.0
2022-03	RP-95-e	RP-220224	0548	7	B	BL CR for NR MBS for 38.413	17.0.0
2022-03	RP-95-e	RP-220236	0558	5	F	Correction for clause 10	17.0.0
2022-03	RP-95-e	RP-220220	0594	8	B	Supporting enhanced private network	17.0.0
2022-03	RP-95-e	RP-220223	0598	8	B	Introduction of enhanced Industrial IoT over NG	17.0.0
2022-03	RP-95-e	RP-220229	0615	8	B	CR to 38.413 on QoE measurement configuration	17.0.0
2022-03	RP-95-e	RP-220294	0647	3	B	Support for Enhancement of Redundant PDU Sessions [Paired_ID]	17.0.0
2022-03	RP-95-e	RP-220230	0664	6	B	Support for Redcap UEs	17.0.0
2022-03	RP-95-e	RP-220236	0666	3	D	NGAP rapporteur corrections	17.0.0
2022-03	RP-95-e	RP-220236	0669	3	C	Support for mapping complete security capabilities from NAS [UE_Sec_Caps]	17.0.0
2022-03	RP-95-e	RP-220232	0682	5	B	Supporting network slicing enhancement	17.0.0
2022-03	RP-95-e	RP-220221	0718	4	B	BLCR to 38.413: Support of MDT enhancement	17.0.0
2022-03	RP-95-e	RP-220219	0724	3	B	Introduction of Multi-SIM Support over NG	17.0.0
2022-03	RP-95-e	RP-220235	0725	3	B	Support for UE Power Saving Enhancements	17.0.0
2022-03	RP-95-e	RP-220231	0743	5	B	Support of 5G ProSe Authorization for NG-AP	17.0.0
2022-03	RP-95-e	RP-220228	0754	-	B	Introduction of NR positioning enhancements to NGAP	17.0.0
2022-06	RP-96	RP-221811	0571	8	B	Support for handling unknown length of gNB identifier [gNB_ID_Length]	17.1.0
2022-06	RP-96	RP-221134	0764	2	F	NGAP ASN.1 review for MBS	17.1.0
2022-06	RP-96	RP-221145	0765	1	D	NGAP rapporteur corrections	17.1.0
2022-06	RP-96	RP-221134	0766	-	D	Moving MBS Session TNL-related IEs to the correct subclause	17.1.0
2022-06	RP-96	RP-221127	0776	1	F	Adding serving PLMN information in ULI for NTN	17.1.0
2022-06	RP-96	RP-221141	0777	-	F	Alignment of ASN.1 and tabular for inter-RAT MLB solution	17.1.0
2022-06	RP-96	RP-221150	0784	1	A	Correction of NAS PDU Delivery	17.1.0
2022-06	RP-96	RP-221129	0785	2	F	Correction of Slice Group Configuration	17.1.0
2022-06	RP-96	RP-221150	0791	3	A	NGAP CR for ACL remaining issues	17.1.0
2022-06	RP-96	RP-221139	0793	1	F	Corrections on NR SL relay for 38.413	17.1.0
2022-06	RP-96	RP-221133	0798		F	UE Power Saving Correction in NGAP	17.1.0
2022-06	RP-96	RP-221145	0800	4	B	Exchange of protocol support at target RAN node for NG handover [PROT_SUP]	17.1.0
2022-06	RP-96	RP-221134	0801	2	F	MBS NGAP Corrections	17.1.0
2022-06	RP-96	RP-221141	0807	1	F	NGAP Inter-System Load Balancing corrections for procedure and IEs	17.1.0
2022-06	RP-96	RP-221141	0808	1	D	NGAP rapporteur corrections for SON	17.1.0
2022-06	RP-96	RP-221137	0811	2	F	MUSIM Correction on NGAP	17.1.0
2022-06	RP-96	RP-221134	0813	1	F	Correction of MBS Session Management	17.1.0
2022-06	RP-96	RP-221143	0821	2	F	CR to 38.413 for Corrections on NR QoE Capability	17.1.0
2022-06	RP-96	RP-221134	0828	1	F	NGAP corrections on MBS feature	17.1.0
2022-06	RP-96	RP-221134	0829	1	F	Remaining issues over NGAP for NR MBS	17.1.0
2022-06	RP-96	RP-221141	0832	1	F	Correction on R17 SON MDT for 38.413	17.1.0
2022-06	RP-96	RP-221143	0841	2	F	CR to 38.413 on corrections to configuration details	17.1.0
2022-06	RP-96	RP-221134	0843	1	F	Introduction of broadcast session release required procedure	17.1.0
2022-06	RP-96	RP-221153	0851	2	A	Correction to Frequency Band Info in MDT Configuration	17.1.0
2022-06	RP-96	RP-221141	0853	-	F	Inter-system energy saving corrections	17.1.0
2022-06	RP-96	RP-221141	0854	-	F	Correction on user consent modification	17.1.0
2022-06						Table of Contents error update	17.1.1
2022-09	RP-97-e	RP-222191	0855	1	F	Correction of Inter-system Resource Status Reporting	17.2.0
2022-09	RP-97-e	RP-222191	0856	-	F	ASN.1 correction for Inter-system Resource Status Report	17.2.0
2022-09	RP-97-e	RP-222188	0857	1	F	Correction on other leftover issues on NGAP for MBS	17.2.0
2022-09	RP-97-e	RP-222199	0859	1	A	CAG access control without mobility restrictions	17.2.0
2022-09	RP-97-e	RP-222188	0864	1	F	Further Corrections for NR MBS	17.2.0
2022-09	RP-97-e	RP-222088	0866	1	F	Correction of Paging eDRX Information	17.2.0
2022-09	RP-97-e	RP-222192	0868	1	F	Correction to R17 QoE	17.2.0
2022-09	RP-97-e	RP-222188	0870	1	F	Correction on Multicast Session Deactivation procedure	17.2.0
2022-09	RP-97-e	RP-222188	0871	1	F	Introduction of MBS specific cause values	17.2.0
2022-09	RP-97-e	RP-222188	0872	1	F	Correction on Multicast Group Paging	17.2.0
2022-09	RP-97-e	RP-222198	0875	1	A	Addition of Masked IMEISV for UEs using CP CIoT 5GS optimisation	17.2.0
2022-09	RP-97-e	RP-222191	0881	-	F	Correction to early measurement collection	17.2.0
2022-09	RP-97-e	RP-222627	0882	2	F	Collection on beam measurement report configuration in M1	17.2.0
2022-12	RP-98-e	RP-222882	0796	5	F	Correction on User Inactivity for Multicast Session	17.3.0
2022-12	RP-98-e	RP-222893	0901	1	F	Additional ULI provision with PScell information	17.3.0
2022-12	RP-98-e	RP-223477	0922	6	F	NGAP Corrections for Excess Packet Delay	17.3.0
2023-03	RAN#99	RP-230593	0888	2	F	Correction of inter-system handover to open access HeNB	17.4.0
2023-03	RAN#99	RP-230584	0920	2	F	Correction on the user consent in PATH SWITCH REQUEST ACKNOWLEDGE message (REL-17)	17.4.0

2023-03	RAN#99	RP-230596	0927	1	A	Clarification on IAB Authorized IE in UE Context Modification procedure	17.4.0
2023-03	RAN#99	RP-230589	0929	2	F	Correction on the UE identity index for paging RedCap UE to TS38.413	17.4.0
2023-03	RAN#99	RP-230593	0930	-	F	Correction of references to RRC protocol elements	17.4.0
2023-03	RAN#99	RP-230593	0947	-	F	Correction of ULI for non-3GPP access	17.4.0
2023-03	RAN#99	RP-230584	0949	-	F	Correction on SON Configuration Transfer	17.4.0
2023-03	RAN#99	RP-230593	0952	1	F	Correction to Global eNB ID in NGAP	17.4.0
2023-03	RAN#99	RP-230593	0963	2	F	Correction on UP security procedure	17.4.0
2023-06	RAN#100	RP-231073	0931	2	F	Correction of Burst Arrival Time semantics description	17.5.0
2023-06	RAN#100	RP-231075	0940	3	A	Corrections on TNL association addition, update and removal	17.5.0
2023-06	RAN#100	RP-231069	0946	2	F	Correction of NB-IoT CP optimization during AMF change	17.5.0
2023-06	RAN#100	RP-231069	0968	2	A	Correction of RRC Resume Cause in PATH SWITCH REQUEST message	17.5.0
2023-06	RAN#100	RP-231067	0976	3	F	Introduction of Hashed UE Identity Index Value for RRC_INATIVE with eDRX	17.5.0
2023-06	RAN#100	RP-231071	0979	2	F	Correction on Event-based Reporting for Inter-system Resource Status Request	17.5.0
2023-06	RAN#100	RP-231076	0987	2	F	Correction on Extended Packet Delay Budget	17.5.0
2023-06	RAN#100	RP-231072	0996	0	A	Clarify the usage of IAB Supported IE	17.5.0
2023-06	RAN#100	RP-231078	1001	1	F	Correction on the QoE Area Scope IE in QMC Configuration Information	17.5.0
2023-09	RAN#101	RP-231900	0954	6	A	Clarification on maximum length of Routing ID	17.6.0
2023-09	RAN#101	RP-231902	1012	1	A	Correction of Mobility Information	17.6.0
2023-09	RAN#101	RP-231896	1014	1	F	Transferring of IAB authorized info during inter-CU topology adaptation and backhaul RLF recovery procedure	17.6.0
2023-09	RAN#101	RP-231897	1017	-	F	Correction on the sharedNGU-MulticastTNLInformation	17.6.0
2023-09	RAN#101	RP-231897	1018	-	F	ASN.1 and tabular alignment for Broadcast related messages	17.6.0
2023-12	RAN#102	RP-233854	1028	2	F	Support of multiple Trace activations	17.7.0
2023-12	RAN#102	RP-233854	1036	1	F	Correction of Interaction with PDU Session Resource Indication	17.7.0
2023-12	RAN#102	RP-233824	0618	14	B	Introduction of Aerial authorization information and A2X services support	18.0.0
2023-12	RAN#102	RP-233845	0877	5	B	Correction on Location Reporting Control [LRC-Enh]	18.0.0
2023-12	RAN#102	RP-233814	0890	8	B	Network-Controlled Repeaters Authorization	18.0.0
2023-12	RAN#102	RP-233845	0911	4	B	Location Reporting Enhancements [LRC-Enh]	18.0.0
2023-12	RAN#102	RP-233822	0928	9	B	Support for NR Sidelink Relay Enhancements	18.0.0
2023-12	RAN#102	RP-233832	0964	8	B	Support for SON over NG	18.0.0
2023-12	RAN#102	RP-233838	0972	9	B	Introduction of 5G Timing Resiliency and URLLC enhancements	18.0.0
2023-12	RAN#102	RP-233833	0984	8	B	Introduction of R18 QoE measurement enhancements	18.0.0
2023-12	RAN#102	RP-233840	0985	10	B	Support of the enhanced NPN phase 2	18.0.0
2023-12	RAN#102	RP-233834	0988	6	B	(CR to 38.413) Support for mobile IAB	18.0.0
2023-12	RAN#102	RP-233815	0989	7	B	Introduction of NR Redcap Enhancement	18.0.0
2023-12	RAN#102	RP-233832	0990	8	B	Introduction of MDT enhancements to support Non-Public Networks	18.0.0
2023-12	RAN#102	RP-233839	1006	6	B	Introduction of Enhancement of RAN Slicing for NR	18.0.0
2023-12	RAN#102	RP-233828	1007	7	B	Introduction of NR MBS enhancements	18.0.0
2023-12	RAN#102	RP-233826	1008	8	B	CR for NR NTN	18.0.0
2023-12	RAN#102	RP-233844	1019	5	F	Solving Misalignment in UE Context Release procedure	18.0.0
2023-12	RAN#102	RP-233830	1025	4	B	(CR to 38.413) Support for NR XR	18.0.0
2023-12	RAN#102	RP-233843	1041	1	B	Correction of user location information for wireline access	18.0.0
2023-12	RAN#102	RP-233845	1044	1	B	Introduction of RedCap UE MBS Broadcast reception [RedcapMBS]	18.0.0
2024-03	RAN#103	RP-240620	0991	10	B	Support of NR Positioning Enhancements	18.1.0
2024-03	RAN#103	RP-240622	1052	1	F	Corrections on NR NTN	18.1.0
2024-03	RAN#103	RP-240644	1054	1	A	Correction for QoE measurement activation	18.1.0
2024-03	RAN#103	RP-240643	1061	3	A	IAB-node authorization	18.1.0
2024-03	RAN#103	RP-240622	1066	-	F	ASN.1 and tabular alignment for NR NTN	18.1.0
2024-03	RAN#103	RP-240637	1071	1	F	Transfer of mobile IAB authorization state in NGAP DOWNLINK NAS TRANSPORT	18.1.0
2024-03	RAN#103	RP-240625	1073	3	F	eRedCap UE access control	18.1.0
2024-03	RAN#103	RP-240639	1074	-	F	Correction for procedural text of TL Containers	18.1.0
2024-03	RAN#103	RP-240640	1075	1	F	ASN.1 corrections for Partially Allowed NSSAI	18.1.0
2024-03	RAN#103	RP-240617	1076	1	D	NGAP rapporteur corrections	18.1.0
2024-03	RAN#103	RP-240635	1077	-	F	Correction on Inter-system HO Report over NG	18.1.0
2024-03	RAN#103	RP-240633	1084	1	F	Correction of MBS Assistance Information Support	18.1.0
2024-03	RAN#103	RP-240634	1085	1	F	Introduction of separate uplink and downlink PDU set QoS parameters	18.1.0
2024-03	RAN#103	RP-240635	1086	2	F	ASN.1 corrections for MDT enhancements to support NPN	18.1.0
2024-03	RAN#103	RP-240618	1090	2	B	Introduction of 2Rx relaxation for XR devices [2Rx_XR_Device]	18.1.0
2024-03	RAN#103	RP-240634	1091	1	F	Correction on ECN marking reporting request	18.1.0
2024-03	RAN#103	RP-240634	1094	2	F	Report the ECN Marking or Congestion Information Reporting Status during Xn-HO and NG-HO	18.1.0
2024-03	RAN#103	RP-240631	1095	1	F	Correction on IE names in TS 38413 for UAV	18.1.0
2024-03	RAN#103	RP-240634	1099	-	F	Correction on the behavior description of ECN Marking or Congestion Information Reporting over NGAP	18.1.0

2024-03	RAN#103	RP-240625	1101	1	F	Adding DL data size in RAN PAGING REQUEST message	18.1.0
2024-03	RAN#103	RP-240633	1105	1	F	Removing superfluous procedure text concerning "not established" Shared NG-U resources for NR MBS	18.1.0
2024-03	RAN#103	RP-240637	1106	3	F	Rel-18 Corrections of mIAB	18.1.0
2024-03	RAN#103	RP-240644	1109	2	A	Mobility Restrictions with NR NTN - NGAP Impacts	18.1.0
2024-03	RAN#103	RP-240646	1114	4	F	NG-RAN indicates to SMF when a GTP-U Error Indication is received	18.1.0
2024-03	RAN#103	RP-240636	1118	1	F	Miscellaneous corrections on R18 QoE enhancements	18.1.0
2024-03	RAN#103	RP-240639	1119	1	F	Introducing Routing ID in TRS procedures	18.1.0
2024-06	RAN#104	RP-241100	1102	3	F	Correction of MT Communication Handling procedure	18.2.0
2024-06	RAN#104	RP-241111	1129	1	F	Correction for RAN TSS reporting for multiple TSCTSF	18.2.0
2024-06	RAN#104	RP-241113	1133	2	F	Correction for 38.413 Reference specification	18.2.0
2024-06	RAN#104	RP-241100	1136	2	F	UL SDT for MT communication handling	18.2.0
2024-06	RAN#104	RP-241105	1137	2	F	Introduction of MDBV in the Alternative QoS	18.2.0
2024-06	RAN#104	RP-241113	1140	2	F	Correction on IAB-node de-registration handling	18.2.0
2024-06	RAN#104	RP-241109	1141	2	F	Correction on mobility support for mobile IAB without PDU session	18.2.0
2024-06	RAN#104	RP-241112	1142	2	B	Introduction of 2Rx XR support [2Rx_XR_Device]	18.2.0
2024-06	RAN#104	RP-241116	1144	2	A	Support of no PDU session for IAB-MT during Path Switch Request procedure	18.2.0
2024-06	RAN#104	RP-241107	1150	1	F	ASN.1 correction of CAG List for MDT	18.2.0
2024-06	RAN#104	RP-241113	1155	-	D	NGAP rapporteur corrections	18.2.0
2024-06	RAN#104	RP-241107	1156	2	F	Correction on MDT configuration in MR-DC	18.2.0
2024-06	RAN#104	RP-241104	1159	2	F	Correction of N3mb Path Failure	18.2.0
2024-06	RAN#104	RP-241113	1167	3	F	Correction of Recovery of split PDU Session	18.2.0
2024-06	RAN#104	RP-241108	1171	2	F	Correction on NGAP to support the QoE mobility during NG-based inter-MN HO	18.2.0
2024-06	RAN#104	RP-241107	1174	1	F	Corrections on MDT for PNI-NPN	18.2.0
2024-06	RAN#104	RP-241119	1175	-	A	Correct the description of the selected PLMN indication in INITIAL UE MESSAGE	18.2.0
2024-09	RAN#105	RP-241876	1176	1	A	Correction of Extended UE Identity Index Value	18.3.0
2024-09	RAN#105	RP-241873	1177	3	F	Correction of Recovery of Split PDU Session	18.3.0
2024-09	RAN#105	RP-241878	1179	-	F	Adding ECN reporting status in RAN-triggered modification procedure	18.3.0
2024-09	RAN#105	RP-241875	1180	-	F	Changing presence of IE extension for QoE related IE	18.3.0
2024-12	RAN#106	RP-243103	1197	3	A	Correction of N3IWF user location information	18.4.0
2024-12	RAN#106	RP-243096	1198	1	B	Introduction of AUN3 device access	18.4.0
2024-12	RAN#106	RP-243103	1199	1	F	Clarification of the usage of the UE History Information	18.4.0
2024-12	RAN#106	RP-243107	1207	2	F	Correction on broadcast reception for eRedCap UE [RedcapMBS]	18.4.0
2024-12	RAN#106	RP-243098	1218	1	F	Correction on AMF CP Relocation Indication	18.4.0
2024-12	RAN#106	RP-243098	1231		A	Correction on CIoT optimization with 5GC	18.4.0
2025-03	RAN#107	RP-250140	1234	-	F	Correction on AMF Name	18.5.0
2025-03	RAN#107	RP-250139	1238	1	F	Correction of Paging Policy Differentiation	18.5.0
2025-06	RAN#108	RP-251156	1241	4	F	Correction of Old AMF and Backup AMF Name	18.6.0
2025-06	RAN#108	RP-251145	1265	3	F	Correction of RRC Establishment Cause for CIoT	18.6.0
2025-06	RAN#108	RP-251151	1269	3	A	Correction of MBS Distribution Setup	18.6.0
2025-06	RAN#108	RP-251155	1273	2	F	Correction for MDBV in alternative QoS	18.6.0
2025-09	RAN#109	RP-252690	1315	2	A	Correction on UE radio capability for paging information	18.7.0
2025-09	RAN#109	RP-252681	1189	8	B	Addition of MDT enhancements	19.0.0
2025-09	RAN#109	RP-252678	1212	10	B	Support for Regenerative Payload and MBS broadcast in NR NTN	19.0.0
2025-09	RAN#109	RP-252687	1220	5	F	Support of Multicast MBS session restoration procedure for N3mb path failure	19.0.0
2025-09	RAN#109	RP-252683	1232	6	B	Support of NR Femto architecture with NR Femto Gateway	19.0.0
2025-09	RAN#109	RP-252685	1235	4	F	Xn TNL address exchange	19.0.0
2025-09	RAN#109	RP-252687	1259	8	B	Support Aerial UE Flight Information Reporting to CN	19.0.0
2025-09	RAN#109	RP-252676	1260	7	B	Introduction of Ambient IoT	19.0.0
2025-09	RAN#109	RP-252674	1261	5	B	Introduction of low-power wake-up signal and receiver for NR	19.0.0
2025-09	RAN#109	RP-252680	1262	4	B	Support of Multi-hop relay	19.0.0
2025-09	RAN#109	RP-252683	1263	5	B	Support for Wireless Access Backhaul	19.0.0
2025-09	RAN#109	RP-252685	1264	2	F	Correction on UE Radio Capability Retrieval	19.0.0
2025-09	RAN#109	RP-252687	1266	2	B	Trace Depth for Vendor Specific Trace Record	19.0.0
2025-09	RAN#109	RP-252685	1270	4	F	Correction of the interaction with other procedures related to the User Plane Failure	19.0.0
2025-09	RAN#109	RP-252679	1282	4	B	Support of XR enhancements	19.0.0
2025-09	RAN#109	RP-252673	1285	2	B	Support of Case 3a	19.0.0
2025-09	RAN#109	RP-252681	1286	2	B	Addition of SON enhancements	19.0.0
2025-09	RAN#109	RP-252687	1296	2	B	Support Aerial UE Flight Information Failure Reporting in FAILURE INDICATION message	19.0.0
2025-12	RAN#110	RP-253342	1288	2	F	Specifying procedure texts for the Core Network Assistance Information for RRC INACTIVE IE	19.1.0
2025-12	RAN#110	RP-253352	1318	1	F	Correction of the description of the geographical area scope	19.1.0
2025-12	RAN#110	RP-253347	1319	2	F	Corrections to A-IoT procedure texts	19.1.0
2025-12	RAN#110	RP-253347	1321	3	F	Correction on A-IoT leftovers on IE details	19.1.0
2025-12	RAN#110	RP-253347	1322	2	F	Correction on Interface Management procedures for A-IoT	19.1.0
2025-12	RAN#110	RP-253354	1328	2	F	Correction on NR femto procedures	19.1.0

2025-12	RAN#110	RP-253354	1340	2	F	Correction on the NG Setup related to WAB	19.1.0
2025-12	RAN#110	RP-253354	1348	3	F	Clarification of handover for WAB-MT	19.1.0
2025-12	RAN#110	RP-253349	1351	2	F	Adding Extended AMF Name to NG REMOVAL RESPONSE message	19.1.0
2025-12	RAN#110	RP-253354	1353	4	F	Corrections for Femto	19.1.0
2025-12	RAN#110	RP-253345	1354	1	F	Introducing of LP-WUS disabling	19.1.0
2025-12	RAN#110	RP-253350	1358	2	F	Add procedure texts on XR uplink rate control in NGAP	19.1.0
2025-12	RAN#110	RP-253358	1366	2	A	Correction of UE Radio Capability for Paging	19.1.0
2025-12	RAN#110	RP-253350	1369	2	F	Correction on the Notification Cause IE in NGAP	19.1.0
2025-12	RAN#110	RP-253347	1372	1	F	Correction on A-IoT dedicated Cause values	19.1.0
2025-12	RAN#110	RP-253347	1373	1	F	Correction on the presence of Reader Report List	19.1.0
2025-12	RAN#110	RP-253341	1380		D	Rapporteur corrections	19.1.0
2025-12	RAN#110	RP-253358	1387	1	A	Correction of URCP for RAN paging	19.1.0
2026-03	RAN#111	RP-260276	1377	3	A	Correction on prioritized alternative QoS profile	19.2.0
2026-03	RAN#111	RP-260273	1411	-	A	Beam measurement report quantity	19.2.0
2026-03	RAN#111	RP-260269	1412	2	F	Correction on command failure in A-IoT	19.2.0
2026-03	RAN#111	RP-260269	1413	-	F	Correction on A-IoT Device Identification Requested	19.2.0
2026-03	RAN#111	RP-260269	1415	2	F	Correction on the inclusion of security parameter for A-IoT	19.2.0
2026-03	RAN#111	RP-260269	1422	1	F	Correction on A-IoT related NGAP procedures	19.2.0
2026-03	RAN#111	RP-260268	1430	3	F	Correction on Aerial UE Flight Information Reporting Control IE	19.2.0
2026-03	RAN#111	RP-260269	1432	-	F	Correction on the description of NGAP Services	19.2.0
2026-06	RAN#112	RP-261201	1420	3	F	Correction on NR Femto awareness at CN	19.3.0
2026-06	RAN#112	RP-261204	1421	2	F	Correction on the LP-WUS disable indication	19.3.0
2026-06	RAN#112	RP-261201	1438	1	F	Correction on A-IoT aspects	19.3.0
2026-06	RAN#112	RP-261211	1451	2	A	Correction on QoE communication service type	19.3.0
2026-06	RAN#112	RP-261206	1454	1	F	Correction on Error Indication procedure	19.3.0
2026-06	RAN#112	RP-261201	1455	0	F	Miscellaneous corrections on A-IoT aspects	19.3.0
2026-06	RAN#112	RP-261206	1457	1	F	Clarification on Reporting Area	19.3.0
2026-09	RAN#113	RP-262148	1463	1	A	Correction on PDU set based handling indicator during mobility	19.4.0

History

Version	Date	Status
V19.0.0	October 2025	Publication
V19.1.0	February 2026	Publication
V19.2.0	April 2026	Publication
V19.3.0	July 2026	Publication
V19.4.0	September 2026	Publication