
Rectification

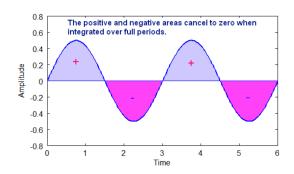

- Ac signals have zero average or dc value. To create dc levels, rectification is necessary.
- Rectifications are of two types
 - Half wave
 - Full wave