
BACK HINGE ASSEMBLY


Required 3D printed parts: 1x Faceplate 1x Back Hinge 1x Backplate

Install heat set insert into the faceplate Insert the M3 screw through the faceplate and the back hinge

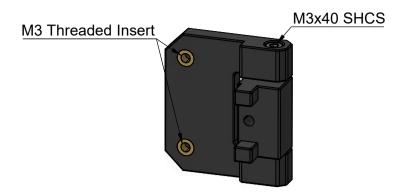

Note: Push the M3 screw from below to remove the panel

Insert the M3x12 SHCS

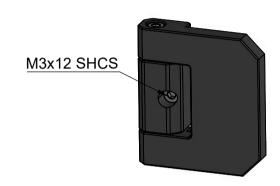

Install the drilled panel (not shown) and the backplate Secure them by screwing 2x M3x8 SHCS to the faceplate

