BACK HINGE ASSEMBLY

3D printed parts required:

1x Faceplate V1 or V2


1x Back Hinge

1x Backplate


Install heat set insert into the faceplate Insert the M3 screw suitable to your version

FACEPLATE V1

FACEPLATE V2

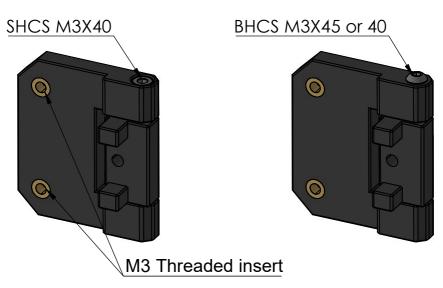

Insert the M3x10 SHCS

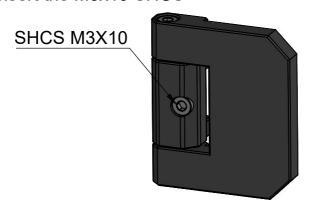

Install the drilled panel (not shown) and the backplate Secure them by screwing 2x M3x8 SHCS to the faceplate

