

PŪDORYS 1:100


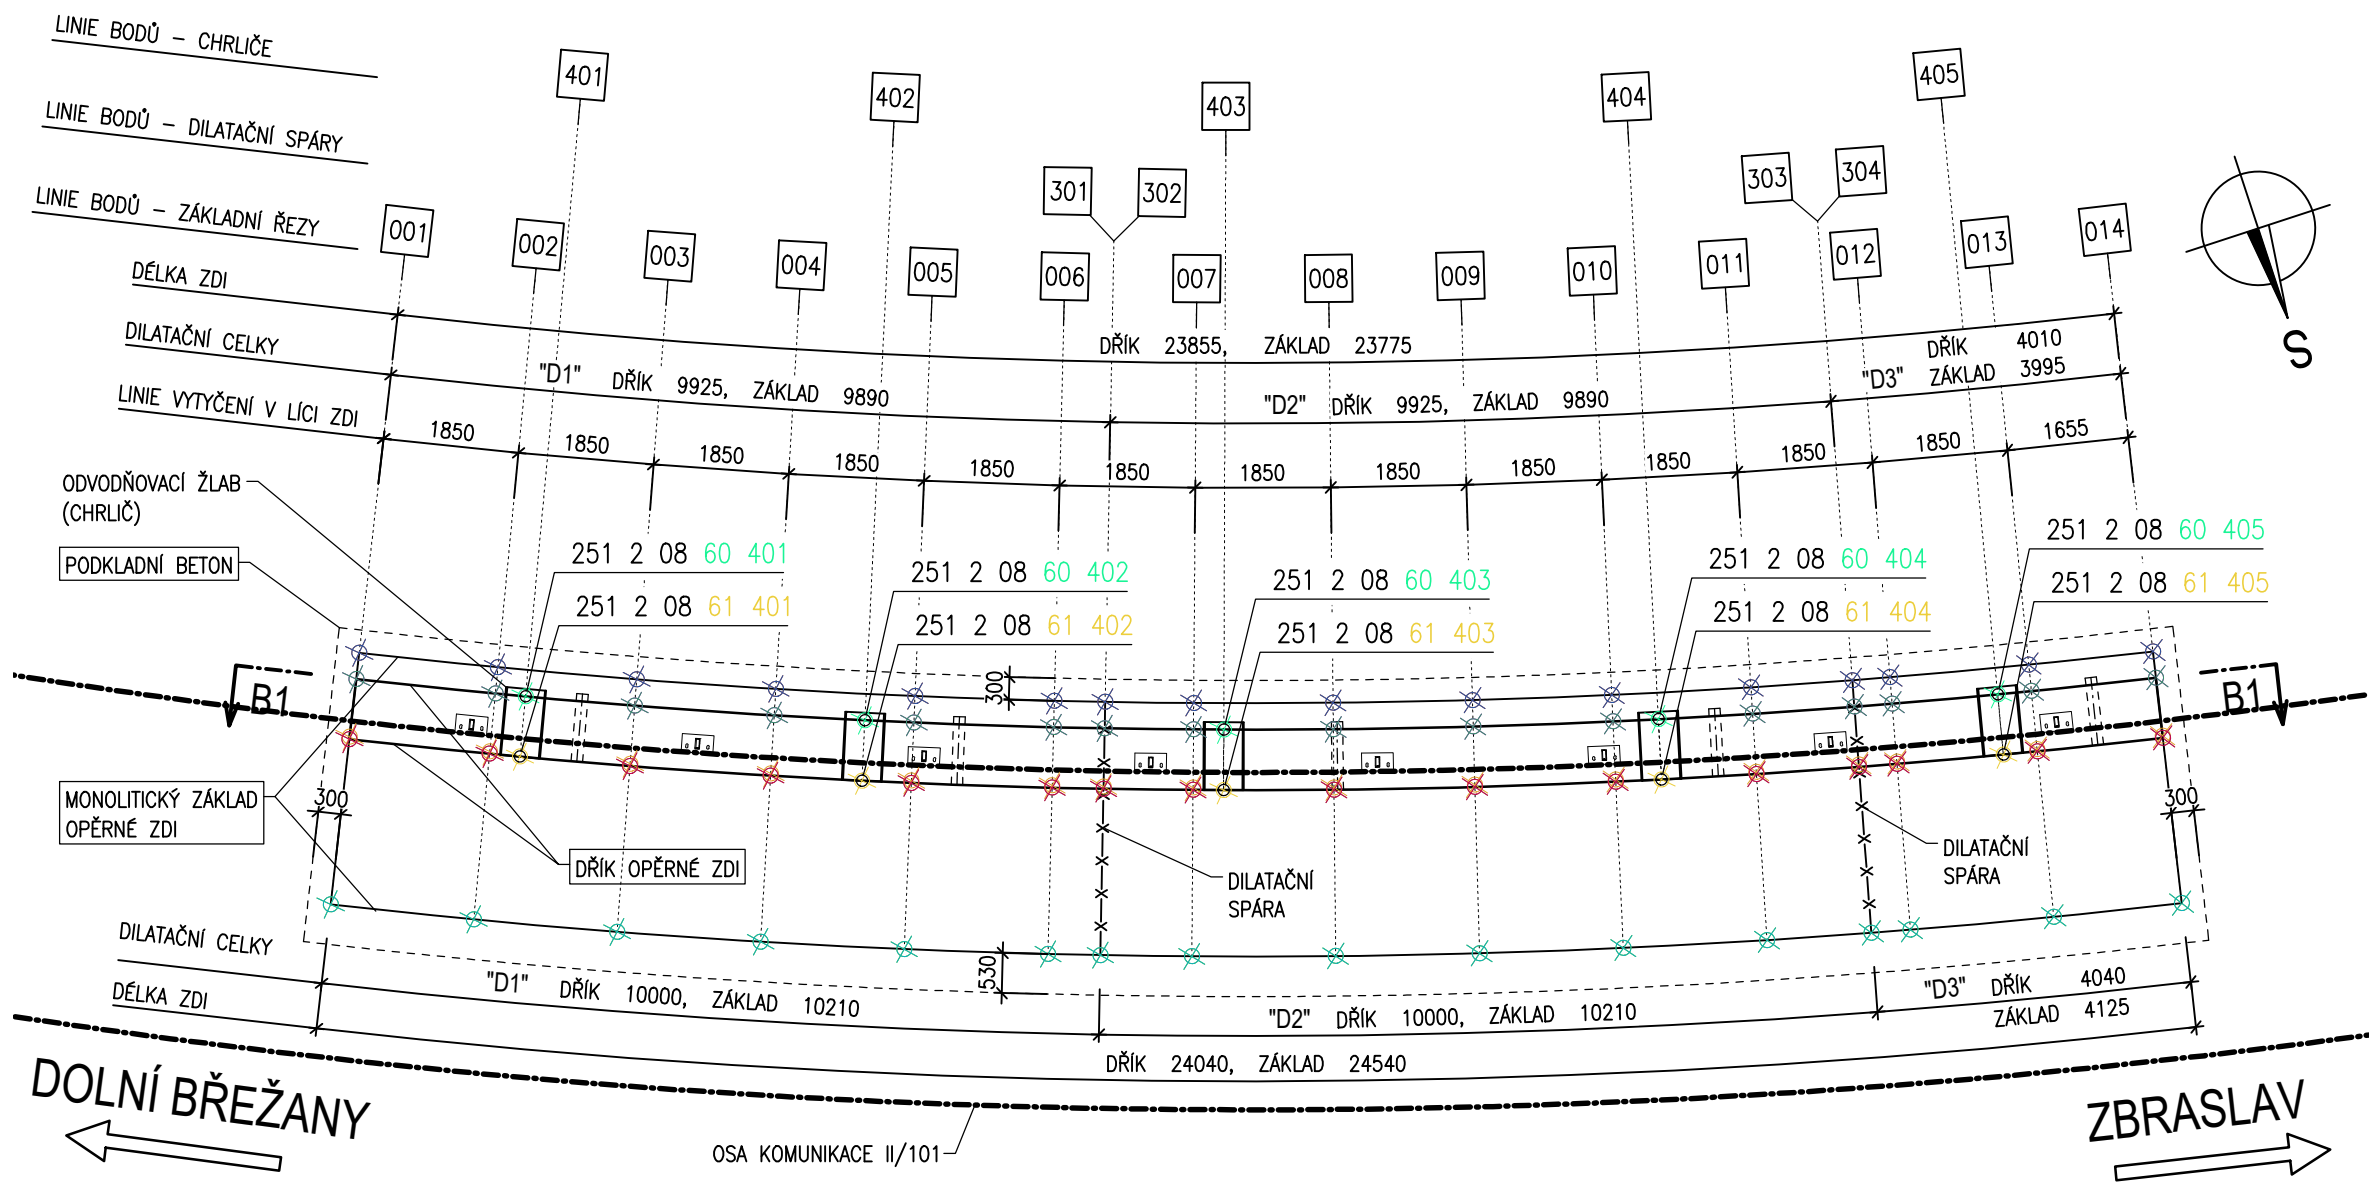


SCHÉMA ČÍSLOVÁNÍ BODŮ P1-P1 1:25

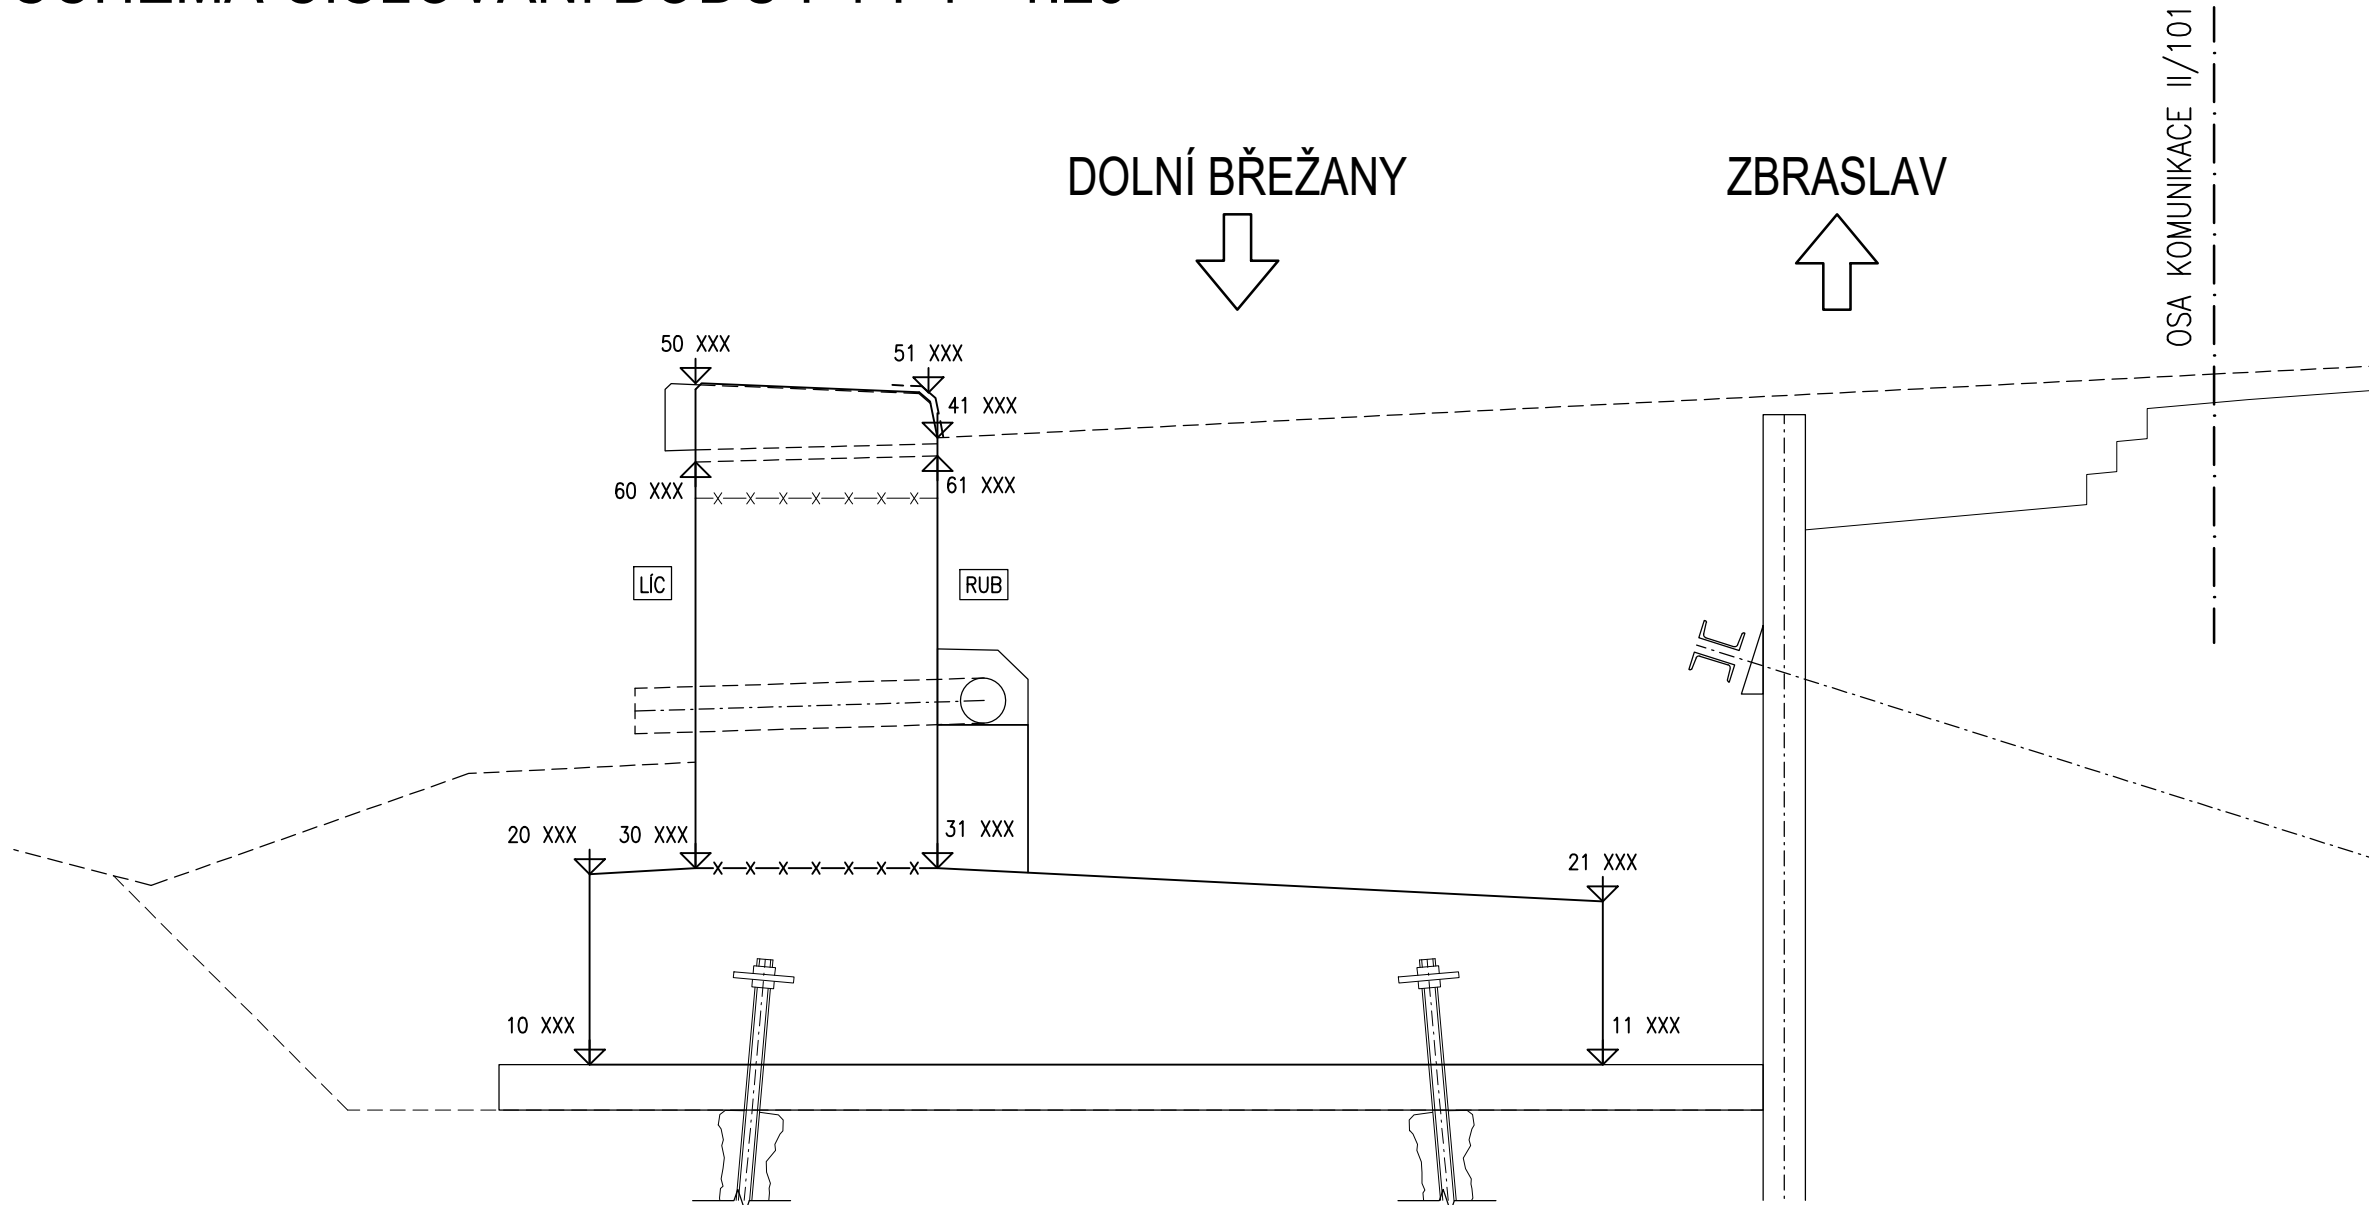

SEZNAM SOUŘADNIC

Vytýčení tvaru opěrné zdi					
Opěrná zeď č. 8 - vytýčení tvaru					SO 251.2_08
OPĚRNÁ ZEĎ 08					
ŘÁDA BODŮ	Označ. Bodu dle půdorysu	Číslo bodu	SOUDRŽNICE		Poznámky
			Y	X	
			[m]	[m]	
60	401	251.3 08 60 401	744016,853	1056973,884	CHRLIČE
	402	251.3 08 60 402	744021,022	1056972,187	
	403	251.3 08 60 403	744025,496	1056970,591	
	404	251.3 08 60 404	744031,001	1056968,934	
	405	251.3 08 60 405	744035,369	1056967,849	

Vytýčení tvaru opěrné zdi						SO 251.2_08
Opěrná zeď č. 8 - vytýčení tvaru						OPĚRNÁ ZĚď 08
ŘÁDA BODŮ	Označ. Bodu dle půdorysu	Číslo bodu	SOUDADNICE		Poznámky	
			Y	X		
			[m]	[m]		
61	401	251 3 08 61 401	744015,535	1056773,150	CHRLIČE	
	402	251 3 08 61 402	744020,735	1056771,440		
	403	251 3 08 61 403	744025,243	1056769,832		
	404	251 3 08 61 404	744030,791	1056768,162		
	405	251 3 08 61 405	744035,192	1056767,069		

Vytýčení tvaru opěrné zdi						SO 251.2_08	
Opěrná zed č. 8 - vytýčení tvaru							
OPĚRNÁ ZED						08	
ŘÁDA BODU	Označ. Bodu dle půdorysu	Číslo bodu	SOUDADNICE		VÝŠKA	Poznámky	
			Y [m]	X [m]			Z [m.n.m.]
51	001	251 3 08 51 001	744014,477	1058774,009	273,784		
	002	251 3 08 51 002	744016,178	1058773,338	273,721		
	003	251 3 08 51 003	744017,892	1058772,607	273,659		
	004	251 3 08 51 004	744019,619	1058771,908	273,596		
	005	251 3 08 51 005	744021,357	1058771,238	273,534		
	006	251 3 08 51 006	744023,108	1058770,597	273,472		
	007	251 3 08 51 007	744024,869	1058769,998	273,409		
	008	251 3 08 51 008	744026,641	1058769,411	273,346	ZÁKLADNÍ LINIE	
	009	251 3 08 51 009	744028,423	1058768,896	273,284		
	010	251 3 08 51 010	744030,215	1058768,352	273,221		
	011	251 3 08 51 011	744032,015	1058767,869	273,158		
	012	251 3 08 51 012	744033,823	1058767,419	273,096		
	013	251 3 08 51 013	744035,639	1058767,000	273,034		
	014	251 3 08 51 014	744037,271	1058766,653	272,978		
	301	251 3 08 51 301	744023,749	1058770,371	273,449	DILATAČNÍ SPÁRA "D1"	
	302	251 3 08 51 302	744023,749	1058770,371	273,449	DILATAČNÍ SPÁRA "D2"	
303	251 3 08 51 303	744033,332	1058767,538	273,113	DILATAČNÍ SPÁRA "D2"		
304	251 3 08 51 304	744033,332	1058767,538	273,113	DILATAČNÍ SPÁRA "D3"		

Vytýčení tvaru opěrné zdi						SO 251.2_08	
Opěrná zeď č. 8 - vytýčení tvaru						OPĚRNÁ ZEĎ 08	
ŘÁDA BODŮ	Označ. Bodu dle podíry	Číslo bodu	SOURADNICE		VÝŠKA Z [m.n.m.]	Poznámky	
			Y [m]	X [m]			
10	001	251 3 08 10 001	744014.943	1056775.117	271.400	ZAKLADNÍ LINIE	
	002	251 3 08 10 002	744016.626	1056774.364	271.400		
	003	251 3 08 10 003	744018.322	1056773.641	271.400		
	004	251 3 08 10 004	744020.031	1056772.948	271.400		
	005	251 3 08 10 005	744021.751	1056772.284	271.400		
	006	251 3 08 10 006	744023.483	1056771.652	271.400		
	007	251 3 08 10 007	744025.226	1056771.050	271.000		
	008	251 3 08 10 008	744026.979	1056770.479	271.000		
	009	251 3 08 10 009	744028.742	1056769.939	271.000		
	010	251 3 08 10 010	744030.514	1056769.431	271.000		
	011	251 3 08 10 011	744032.295	1056768.953	271.000		
	012	251 3 08 10 012	744034.084	1056768.506	270.800		
	013	251 3 08 10 013	744035.881	1056768.094	270.800		
	014	251 3 08 10 014	744037.497	1056767.750	270.800		
	301	251 3 08 10 301	744024.117	1056771.429	271.400		DILATAČNÍ SPÁRA "D1"
302	251 3 08 10 302	744024.117	1056771.429	271.000	DILATAČNÍ SPÁRA "D2"		
303	251 3 08 10 303	744033.599	1056768.625	271.000	DILATAČNÍ SPÁRA "D3"		
304	251 3 08 10 304	744033.599	1056768.625	270.800	DILATAČNÍ SPÁRA "D3"		

Vytýčení tvaru opěrné zdi							SO 251.2.08	
Opěrná zď č. 8 - vytýčení tvaru								
OPĚRNÁ ZĚD							08	
ŘÁDA BODŮ	Označ. Bodu dle půdorysu	Číslo bodu	SOUDARNICE		VÝŠKA Z [m.m.]	Poznámky		
			Y [m]	X [m]				
11	001	251 3 08 11 001	744013.548	1056772.072	271,400			
	002	251 3 08 11 002	744015.285	1056771.295	271,400			
	003	251 3 08 11 003	744017.035	1056770.548	271,400			
	004	251 3 08 11 004	744018.799	1056769.832	271,400			
	005	251 3 08 11 005	744020.574	1056769.148	271,400			
	006	251 3 08 11 006	744022.362	1056768.495	271,400			
	007	251 3 08 11 007	744024.160	1056767.874	271,000			
	008	251 3 08 11 008	744025.970	1056767.285	271,000			
	009	251 3 08 11 009	744027.790	1056766.728	271,000			
	010	251 3 08 11 010	744029.619	1056766.203	271,000			
	011	251 3 08 11 011	744031.457	1056765.710	271,000			
	012	251 3 08 11 012	744033.303	1056765.250	270,800			
	013	251 3 08 11 013	744035.158	1056764.823	270,800			
	014	251 3 08 11 014	744036.822	1056764.469	270,800			
	301	251 3 08 11 301	744023.014	1056768.266	271,400		DILATAČNÍ SPÁRA "D1"	
302	251 3 08 11 302	744023.014	1056768.266	271,000		DILATAČNÍ SPÁRA "D2"		
303	251 3 08 11 303	744032.800	1056765.372	271,000		DILATAČNÍ SPÁRA "D2"		
304	251 3 08 11 304	744032.800	1056765.372	270,800		DILATAČNÍ SPÁRA "D3"		

Opěrná zeď č. 8 - vytyčení tvaru							SO 251.2.08	
OPĚRNÁ ZEĎ 08								
ŘÁD BODŮ	Označ. Bodu dle půdorysu	Číslo bodu	SOUDADNICE		VÝŠKA	Poznámky		
			Y	X				
			[m]	[m.m.]				
20	001	251 3 08 20 001	744014,943	1056775,117	272,030	ZÁKLADNÍ LINIE		
	002	251 3 08 20 002	744018,628	1056774,384	272,030			
	003	251 3 08 20 003	744018,322	1056773,841	272,030			
	004	251 3 08 20 004	744020,031	1056772,946	272,030			
	005	251 3 08 20 005	744021,751	1056772,284	272,030			
	006	251 3 08 20 006	744023,483	1056771,652	272,030			
	007	251 3 08 20 007	744025,226	1056771,050	271,630			
	008	251 3 08 20 008	744026,979	1056770,479	271,630			
	009	251 3 08 20 009	744028,742	1056769,939	271,630			
	010	251 3 08 20 010	744030,514	1056769,431	271,630			
	011	251 3 08 20 011	744032,295	1056768,953	271,630			
	012	251 3 08 20 012	744034,084	1056768,508	271,430			
	013	251 3 08 20 013	744035,881	1056768,094	271,430			
	014	251 3 08 20 014	744037,497	1056767,750	271,430			
	301	251 3 08 20 301	744024,117	1056771,429	272,030		DILATAČNÍ SPÁRA "D1"	
302	251 3 08 20 302	744024,117	1056771,429	271,630	DILATAČNÍ SPÁRA "D2"			
303	251 3 08 20 303	744033,599	1056768,625	271,630	DILATAČNÍ SPÁRA "D2"			
304	251 3 08 20 304	744033,599	1056768,625	271,430	DILATAČNÍ SPÁRA "D3"			

Opěrná zeď č. 8 - vytyčení trasu							SO 251.2.08	
OPĚRNÁ ZEĎ 08								
ŘÁDOVÝ BOD	Označ. Bodu dle přílohy	Číslo bodu	SOUDADNICE		VÝŠKA Z [m.n.m.]	Poznámky		
			Y [m]	X [m]				
21	001	251 3 08 21 001	744013,548	1056772,072	271,940	ZÁKLADNÍ LINIE		
	002	251 3 08 21 002	744015,285	1056771,295	271,940			
	003	251 3 08 21 003	744017,035	1056770,548	271,940			
	004	251 3 08 21 004	744018,799	1056769,832	271,940			
	005	251 3 08 21 005	744020,574	1056769,148	271,940			
	006	251 3 08 21 006	744022,362	1056768,495	271,940			
	007	251 3 08 21 007	744024,160	1056767,874	271,540			
	008	251 3 08 21 008	744025,970	1056767,285	271,540			
	009	251 3 08 21 009	744027,790	1056766,728	271,540			
	010	251 3 08 21 010	744029,619	1056766,203	271,540			
	011	251 3 08 21 011	744031,457	1056765,710	271,540			
	012	251 3 08 21 012	744033,303	1056765,250	271,340			
	013	251 3 08 21 013	744035,158	1056764,823	271,340			
	014	251 3 08 21 014	744036,822	1056764,469	271,340			
	301	251 3 08 21 301	744023,014	1056768,266	271,940	DILATAČNÍ SPÁRA "D1"		
302	251 3 08 21 302	744023,014	1056768,266	271,540	DILATAČNÍ SPÁRA "D2"			
303	251 3 08 21 303	744032,800	1056765,372	271,540	DILATAČNÍ SPÁRA "D2"			
304	251 3 08 21 304	744032,800	1056765,372	271,340	DILATAČNÍ SPÁRA "D3"			

Vytýčení tvaru opěrné zdi							SO 251.2_08	
Opěrná zď č. 8 - vytýčení tvaru								
OPĚRNÁ ZĚď 08								
ŘÁDA BODŮ	Označ. Bodu dle půdorysu	Číslo bodu	SOURADNICE		VÝŠKA	Poznámky		
			Y [m.m.]	X [m.]	Z [m.m.]			
30	001	251 3 08 30 001	740114,798	1056774,709	272,050	ZÁKLADNÍ LINIE		
	002	251 3 08 30 002	740116,486	1056774,044	272,050			
	003	251 3 08 30 003	740116,188	1056773,316	272,050			
	004	251 3 08 30 004	740119,902	1056772,622	272,050			
	005	251 3 08 30 005	74021,628	1056771,957	272,050			
	006	251 3 08 30 006	74023,396	1056771,322	272,050			
	007	251 3 08 30 007	74025,115	1056770,716	271,650			
	008	251 3 08 30 008	74026,874	1056770,145	271,650			
	009	251 3 08 30 009	74028,643	1056769,804	271,650			
	010	251 3 08 30 010	74030,421	1056769,093	271,650			
	011	251 3 08 30 011	74032,208	1056768,615	271,650			
	012	251 3 08 30 012	74034,003	1056768,167	271,450			
	013	251 3 08 30 013	74035,806	1056767,752	271,450			
	014	251 3 08 30 014	74037,426	1056767,407	271,450			
	301	251 3 08 30 301	74024,002	1056771,098	272,050		DILATAČNÍ SPÁRA "D1"	
	302	251 3 08 30 302	74024,002	1056771,098	271,650		DILATAČNÍ SPÁRA "D2"	
303	251 3 08 30 303	74033,516	1056768,285	271,650	DILATAČNÍ SPÁRA "D3"			
304	251 3 08 30 304	74033,516	1056768,285	271,450	DILATAČNÍ SPÁRA "D3"			

Vytýčení tvaru opěrné zdi							SO 251.2_08	
Opěrná zeď č. 8 - vytýčení tvaru								
OPĚRNÁ ZEĎ 08								
ŘÁDOVÝ BOD	Označ. Bodu dle podkladu	Číslo bodu	SOUDRNICE		VÝŠKA [m.n.m.]	Poznámky		
			Y [m]	X [m]			Z [m.n.m.]	
31	001	251 3 08 31 001	744014.484	1056774.072	272,050	ZÁKLADNÍ LINIE		
	002	251 3 08 31 002	744016.186	1056773.311	272,050			
	003	251 3 08 31 003	744017.880	1056772.579	272,050			
	004	251 3 08 31 004	744019.607	1056771.878	272,050			
	005	251 3 08 31 005	744021.347	1056771.208	272,050			
	006	251 3 08 31 006	744023.098	1056770.588	272,050			
	007	251 3 08 31 007	744024.860	1056769.960	271,850			
	008	251 3 08 31 008	744026.632	1056769.383	271,850			
	009	251 3 08 31 009	744028.415	1056768.837	271,850			
	010	251 3 08 31 010	744030.207	1056768.323	271,850			
	011	251 3 08 31 011	744032.007	1056767.840	271,650			
	012	251 3 08 31 012	744033.816	1056767.389	271,450			
	013	251 3 08 31 013	744035.632	1056766.971	271,450			
	014	251 3 08 31 014	744037.265	1056766.623	271,450			
	301	251 3 08 31 301	744023.739	1056770.343	272,050		DILATAČNÍ SPÁRA "D1"	
	302	251 3 08 31 302	744023.739	1056770.343	271,650		DILATAČNÍ SPÁRA "D2"	
303	251 3 08 31 303	744033.325	1056767.509	271,650	DILATAČNÍ SPÁRA "D2"			
304	251 3 08 31 304	744033.325	1056767.509	271,450	DILATAČNÍ SPÁRA "D3"			

Vytýčení tvaru opěrné zdi						SO 251.2_08	
Opěrná zed č. 8 - vytýčení tvaru							
OPĚRNÁ ZED						08	
ŘÁDA BODŮ	Označ. Bodu dle podkladu	Číslo bodu	SOURADNICE		VÝŠKA	Poznámky	
			Y [m]	X [m]	Z [m.n.m.]		
41	001	251 3 08 41 001	744014,464	1056774,072	273,634	ZÁKLADNÍ LINIE	
	002	251 3 08 41 002	744016,166	1056773,311	273,571		
	003	251 3 08 41 003	744017,880	1056772,579	273,509		
	004	251 3 08 41 004	744019,607	1056771,678	273,446		
	005	251 3 08 41 005	744021,347	1056771,206	273,384		
	006	251 3 08 41 006	744023,098	1056770,508	273,322		
	007	251 3 08 41 007	744024,860	1056769,960	273,259		
	008	251 3 08 41 008	744026,632	1056769,383	273,196		
	009	251 3 08 41 009	744028,415	1056768,837	273,134		
	010	251 3 08 41 010	744030,207	1056768,323	273,071		
	011	251 3 08 41 011	744032,007	1056767,840	273,008		
	012	251 3 08 41 012	744033,816	1056767,389	272,946		
	013	251 3 08 41 013	744035,632	1056766,971	272,884		
	014	251 3 08 41 014	744037,265	1056766,623	272,828		
	301	251 3 08 41 301	744023,739	1056770,343	273,299		DILATAČNÍ SPÁRA "D1"
	302	251 3 08 41 302	744023,739	1056770,343	273,299		DILATAČNÍ SPÁRA "D2"
303	251 3 08 41 303	744033,325	1056767,509	272,963	DILATAČNÍ SPÁRA "D3"		
304	251 3 08 41 304	744033,325	1056767,509	272,963	DILATAČNÍ SPÁRA "D2"		