


MPD HOLLOW BACKLIT RETROFIT

OBJECTIVE:

As per the requirement of Retrofit RVI, MPD hollow space is to be lit up by backlit LED. This requires electrical connection through the MPD to provide power supply to LED Adaptor placed at MPD hollow.

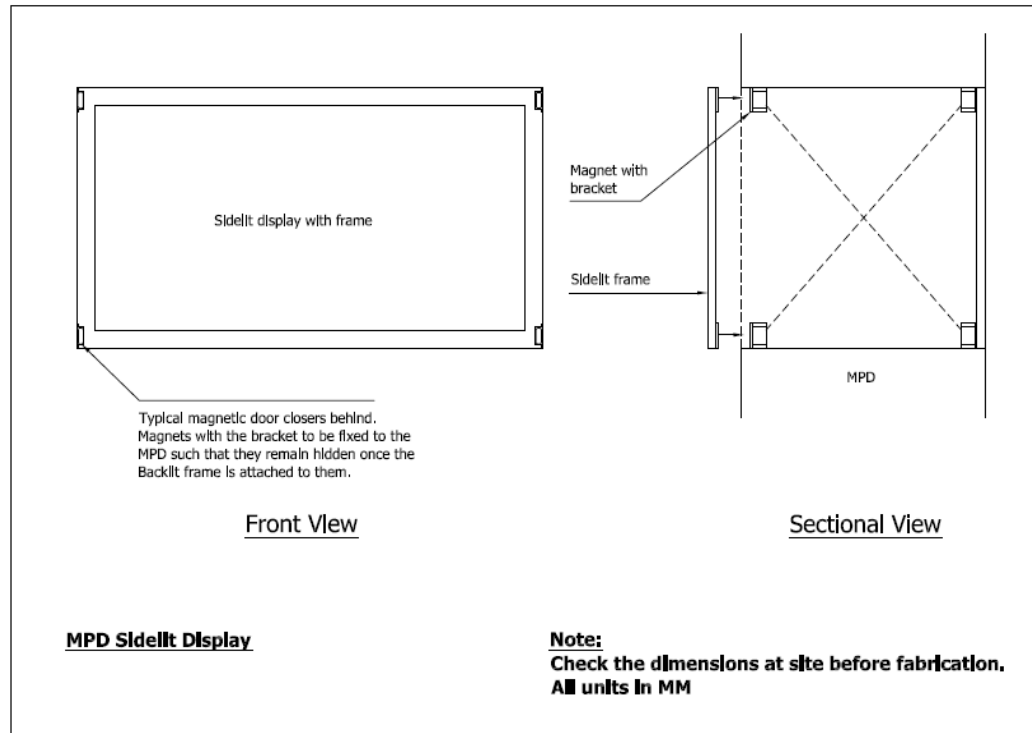


ISSUES:

- Loose wiring outside MPD/Hanging Cables from spreader gives shabby look and also cause safety threat in fuelling zone
- Cable taken through MPD requires drilling on the plate of MPD which compromises its safety. Even if taken along MPD Body does post safety issues in Zone 0.
- Laying Separate Cable to each MPD thru conduit shall be capital intensive and also affects Sale at running site owing to Driveway work

MODUS OPERANDI:

- In order to provide power to LED lights in MPD hollow, main power cable is splitted through 3-Way FLP junction box.
- One cable for powering MPD, other to Light up Back Lit LED in MPD hollows.

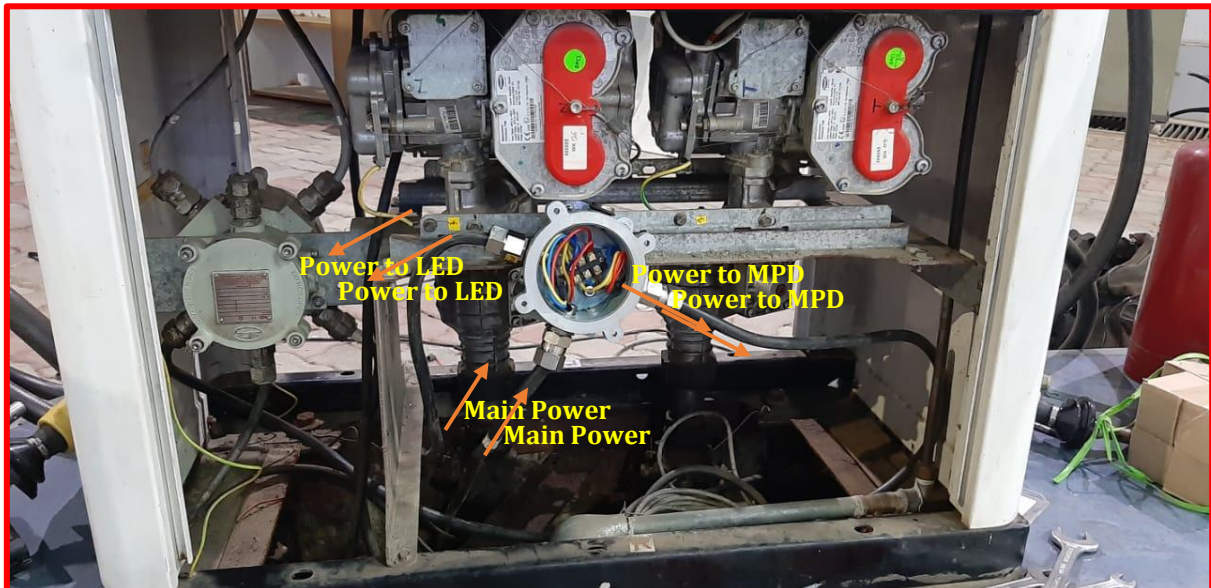

- Power cable for Backlit LED is taken through MPD side to MPD hollow space by drilling through plate. It is same as Copper tubing done for return Vapor Line for VRS Stage II.
- Proper flameproof gland to be used while taking cable through drilled hole.



- Polycarbonate Junction box is used for incorporating Fuse in setup so that in case of power surge or short circuit, fuse blows up and surge doesn't reaches UPS and trip the MPD.



- LED Backlit Power Adaptor is connected after fuse through 1.5x3 cable.



DETAILS OF SERVICE NO. USED IN PROVIDING POWER TO MPD BACKLIT LED:

Sr. No.	Service No	Description of Item	Qty. Requisite
1	7006458	3 way FLP Junction Box	One per MPD
2	7006488	3 x 1.5 sq. mm Cu Conduction armoured cable	As per requirement
3	7006543	FLP Cable Gland	As per requirement
4	9016152	Nylon Cable Gland 20 mm	As per requirement
5	9016063	Polycarbonate junction box	One per MPD
6	7006788	Fuse unit	One per MPD

SAFETY PRECAUTIONS:

- MPD should not be in operation while setting up power connection
- Glands should be properly tightened over the cable
- No loose joints must be kept during connection
- Proper precaution like secluding the area should be done while drilling in MPD cover to restrict the spark movement, if any.
- All MPD Panels should be OPEN to ventilate before doing connection
- Junction box should be firmly tightened on MPD frame by clamps
- While connecting power cable to LED Driver/adapter, proper connection should be maintained to avoid any loose connection and power failure