



Internal Corners Must Have Fillet Radii

POOR DESIGN

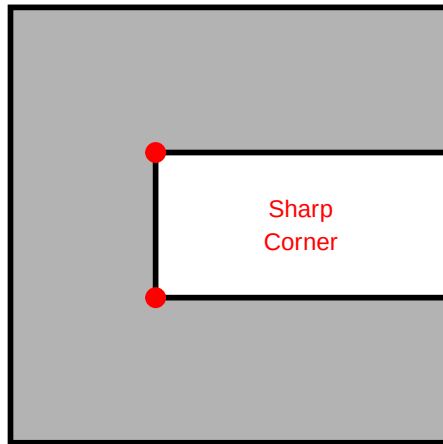

GOOD DESIGN

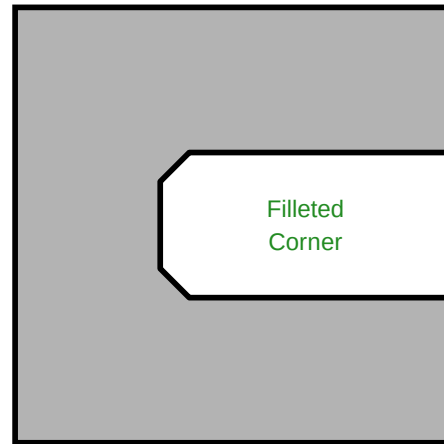

R = Tool
Radius