



Internal Corners Must Have Fillet Radii

POOR DESIGN

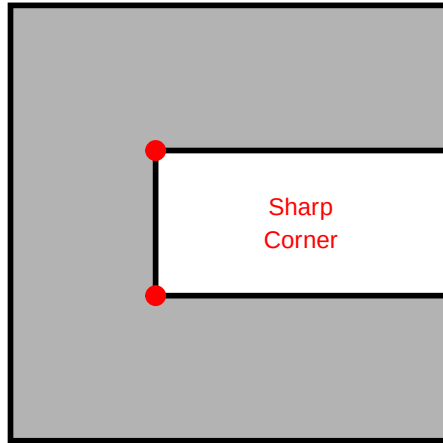

Sharp
Corner

GOOD DESIGN

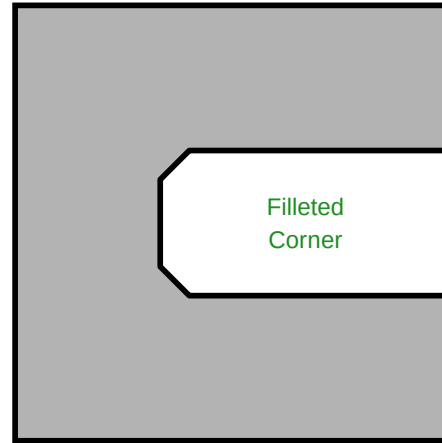

Filletted
Corner

R = Tool
Radius