


Internal Corners Must Have Fillet Radii

POOR DESIGN

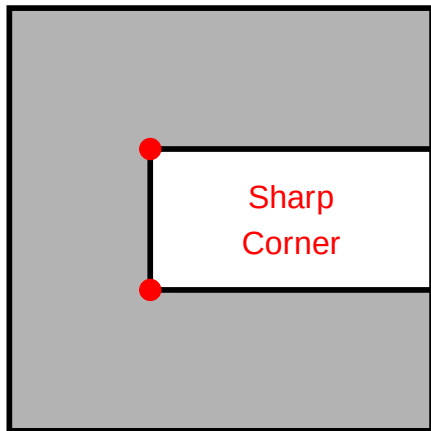

GOOD DESIGN

R = Tool
Radius

