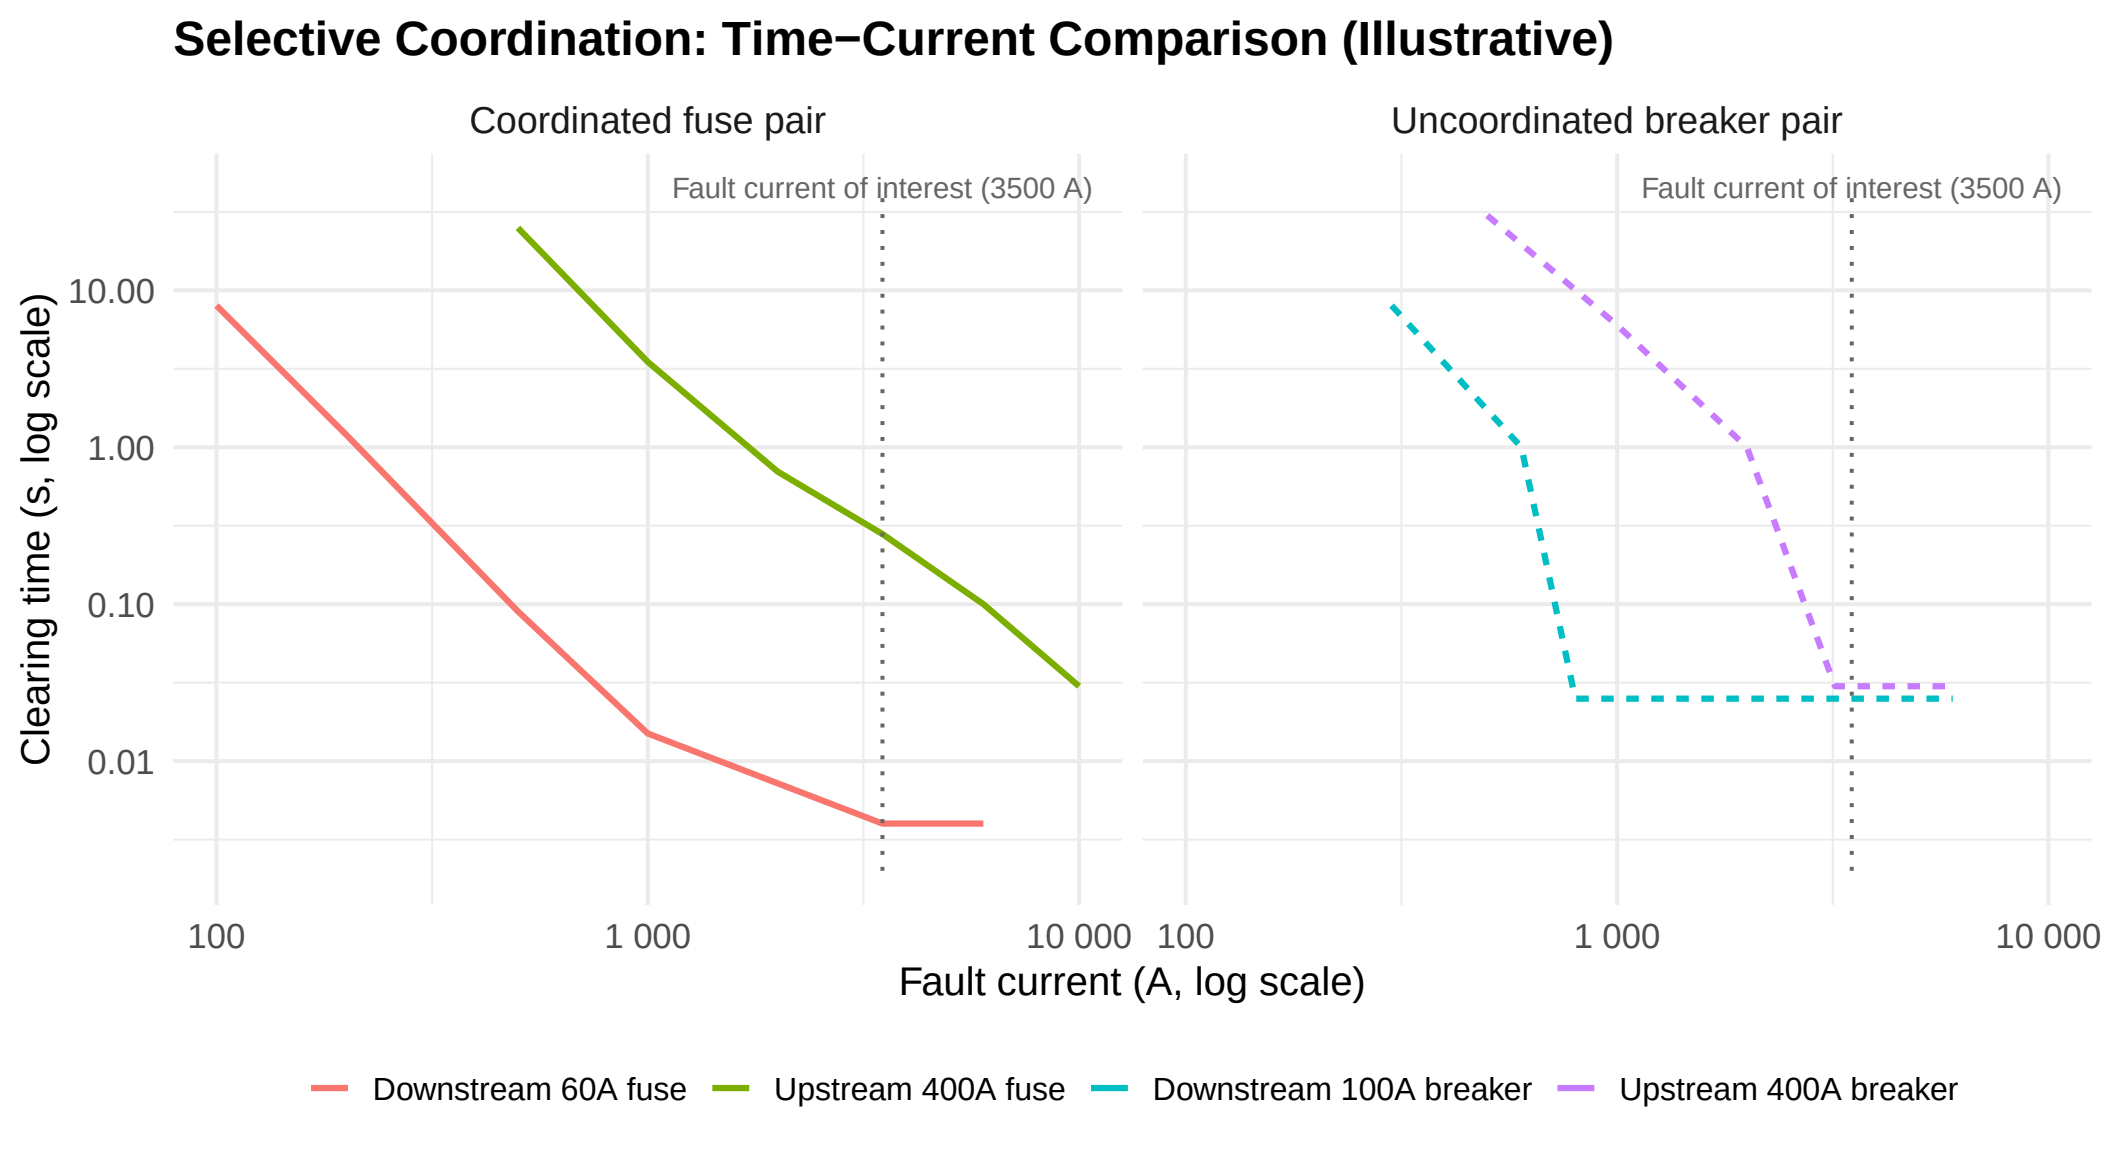
Selective Coordination: Time−Current Comparison (Illustrative)
Coordinated fuse pair
Uncoordinated breaker pair
Fault current of interest (3500 A)
Fault current of interest (3500 A)
Clearing time (s, log scale)
10.00
1.00
0.10
0.01
100
1 000
10 000
100
1 000
10 000
Fault current (A, log scale)
Downstream 60A fuse
Upstream 400A fuse
Downstream 100A breaker
Upstream 400A breaker