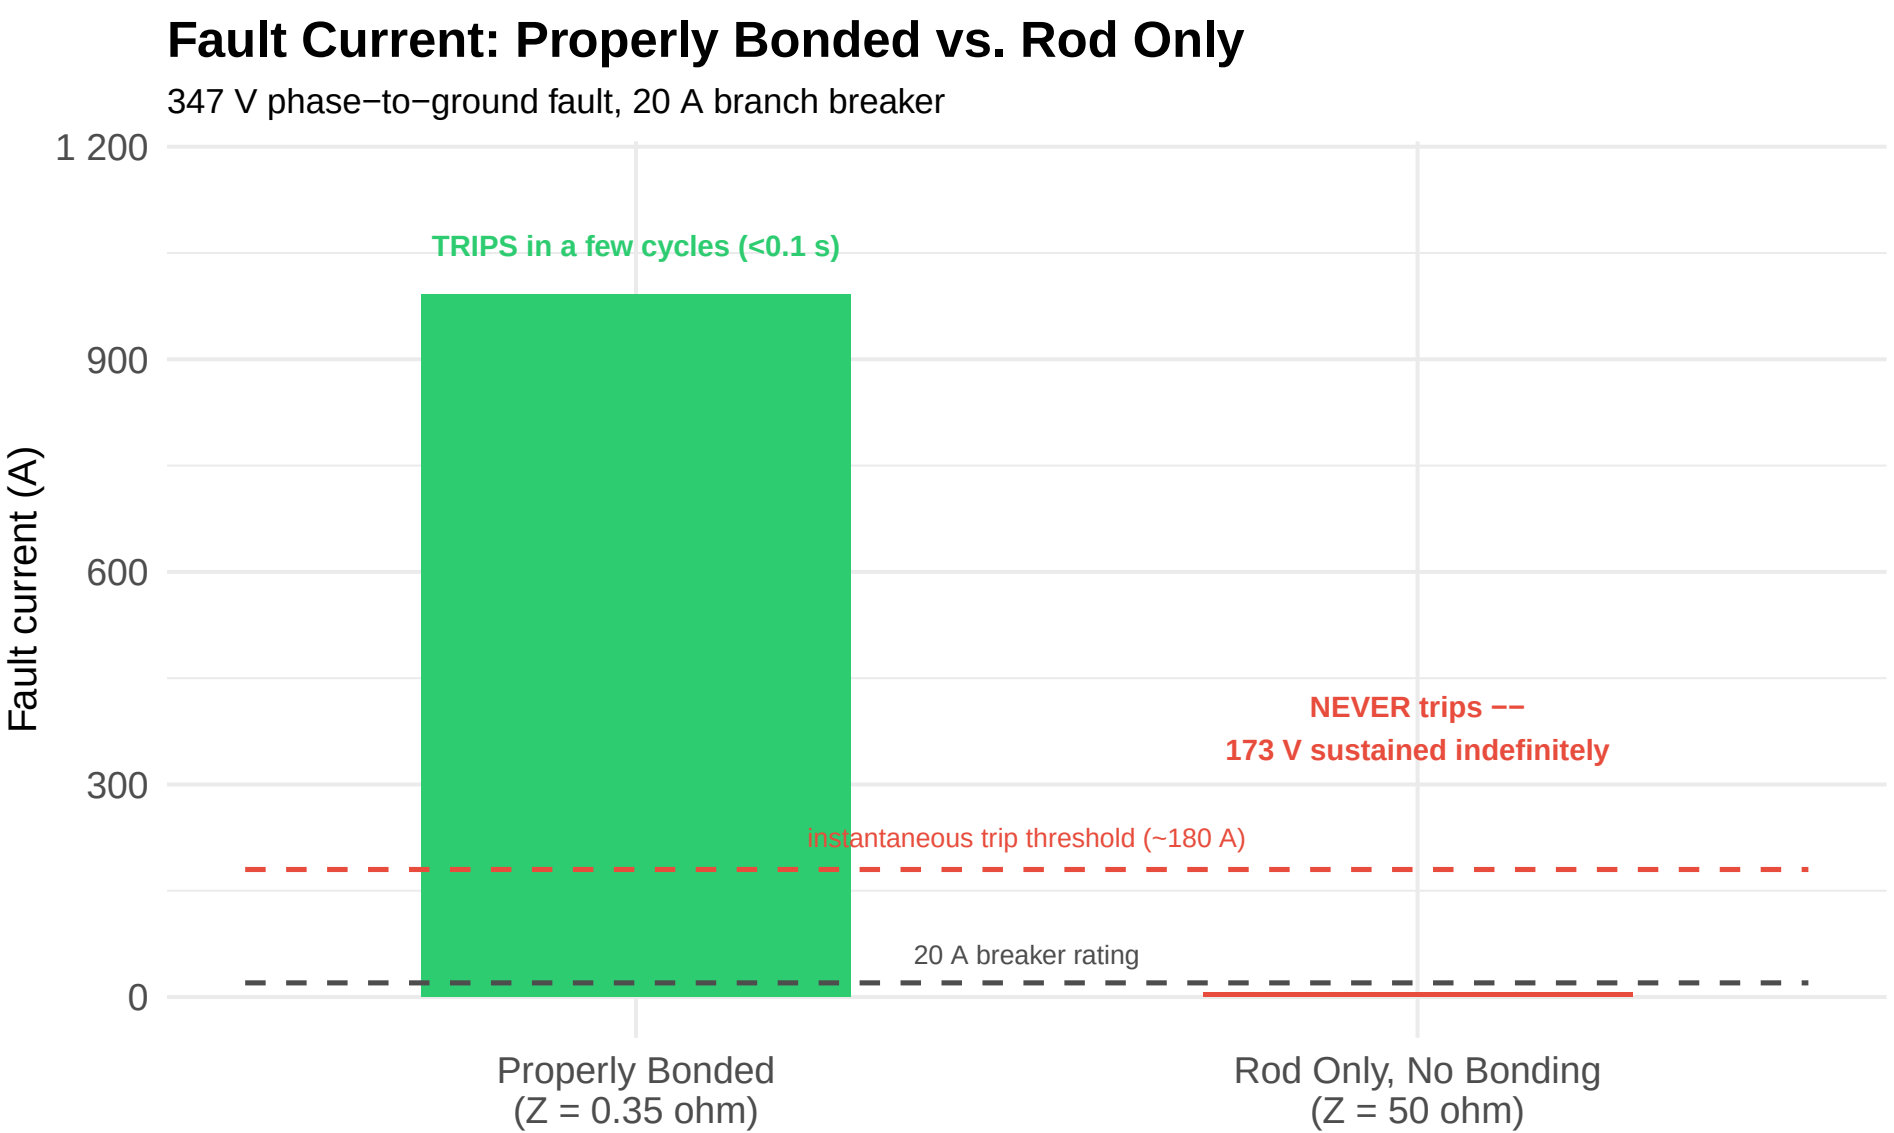
Fault Current: Properly Bonded vs. Rod Only
347 V phase−to−ground fault, 20 A branch breaker
1 200
900
600
300
0
Fault current (A)
TRIPS in a few cycles (<0.1 s)
NEVER trips −−
173 V sustained indefinitely
instantaneous trip threshold (~180 A)
20 A breaker rating
Properly Bonded
(Z = 0.35 ohm)
Rod Only, No Bonding
(Z = 50 ohm)