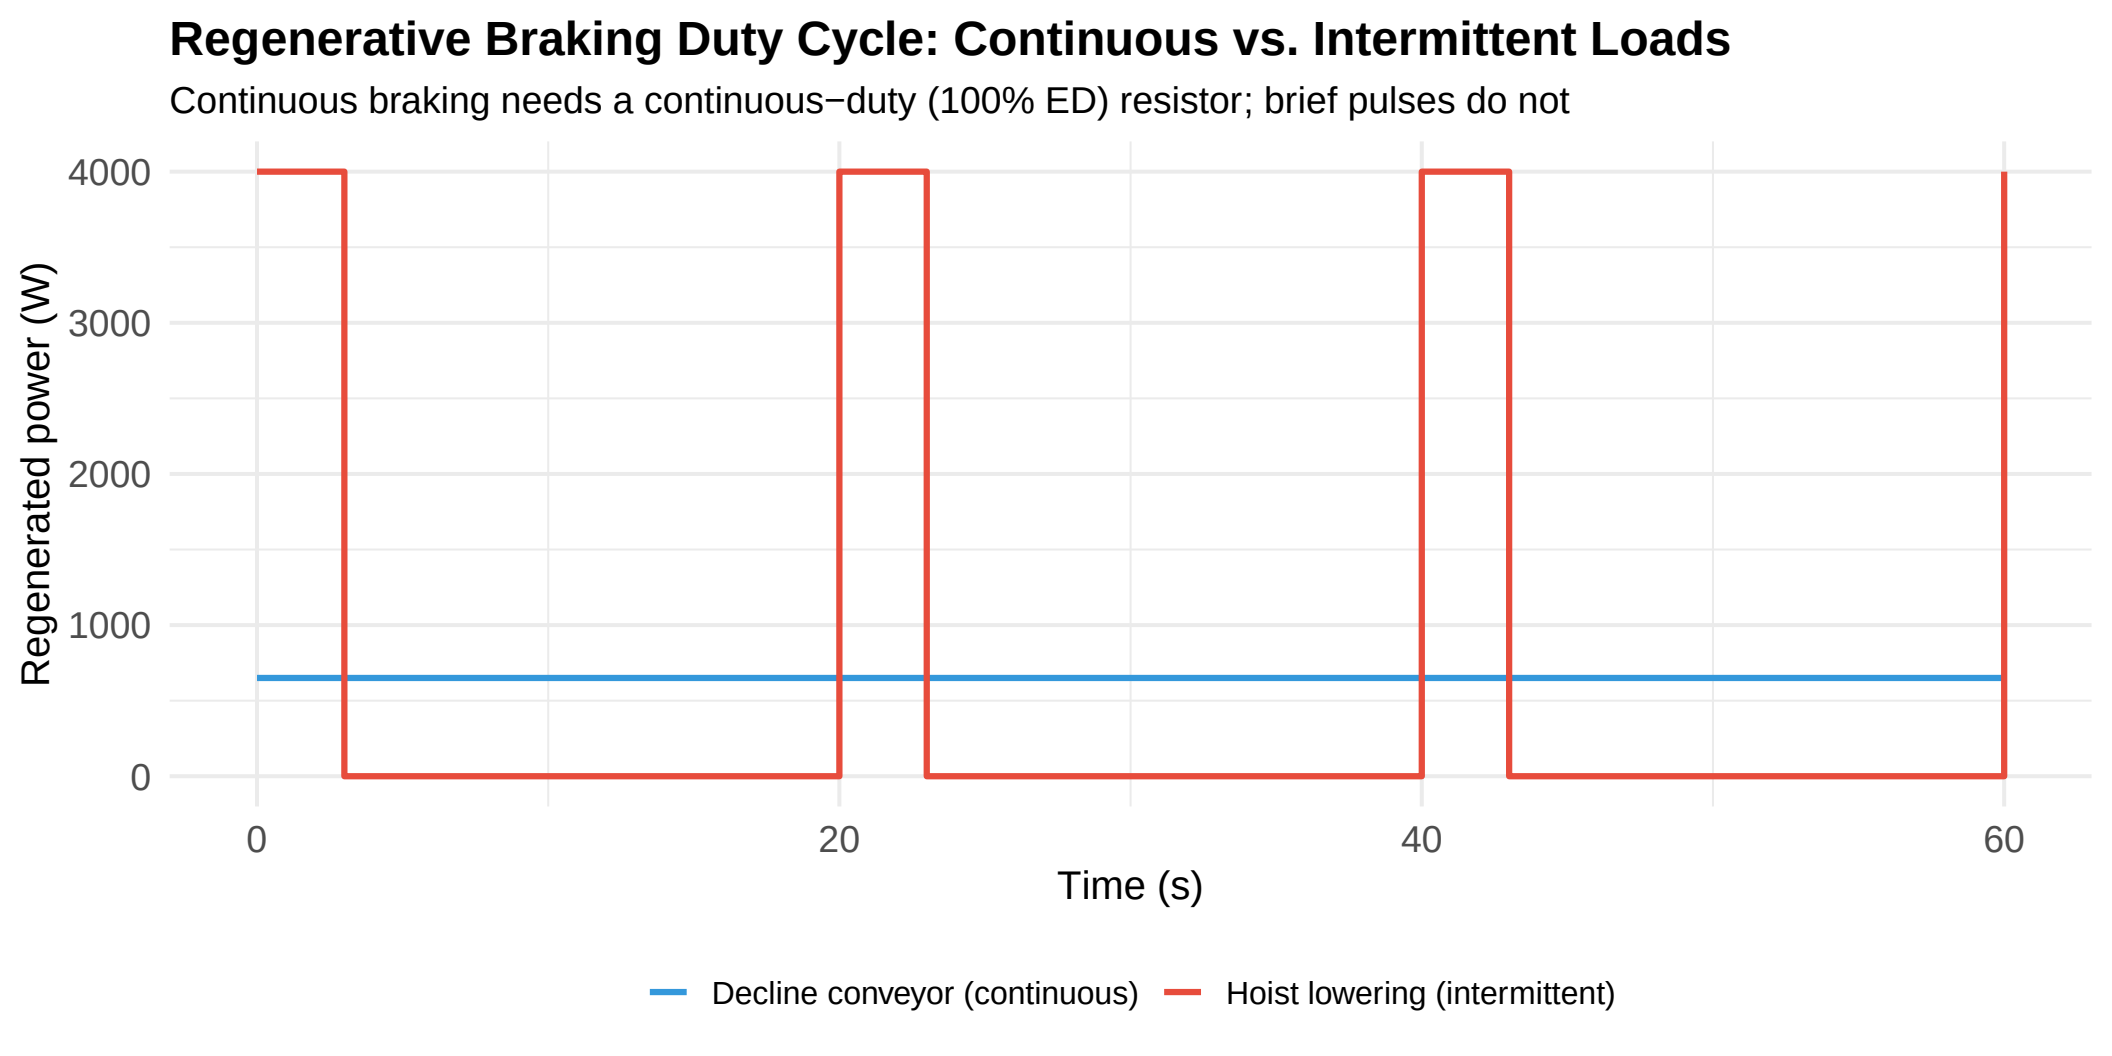
Regenerative Braking Duty Cycle: Continuous vs. Intermittent Loads
Continuous braking needs a continuous−duty (100% ED) resistor; brief pulses do not
Regenerated power (W)
4000
3000
2000
1000
0
0
20
40
60
Time (s)
Decline conveyor (continuous)
Hoist lowering (intermittent)