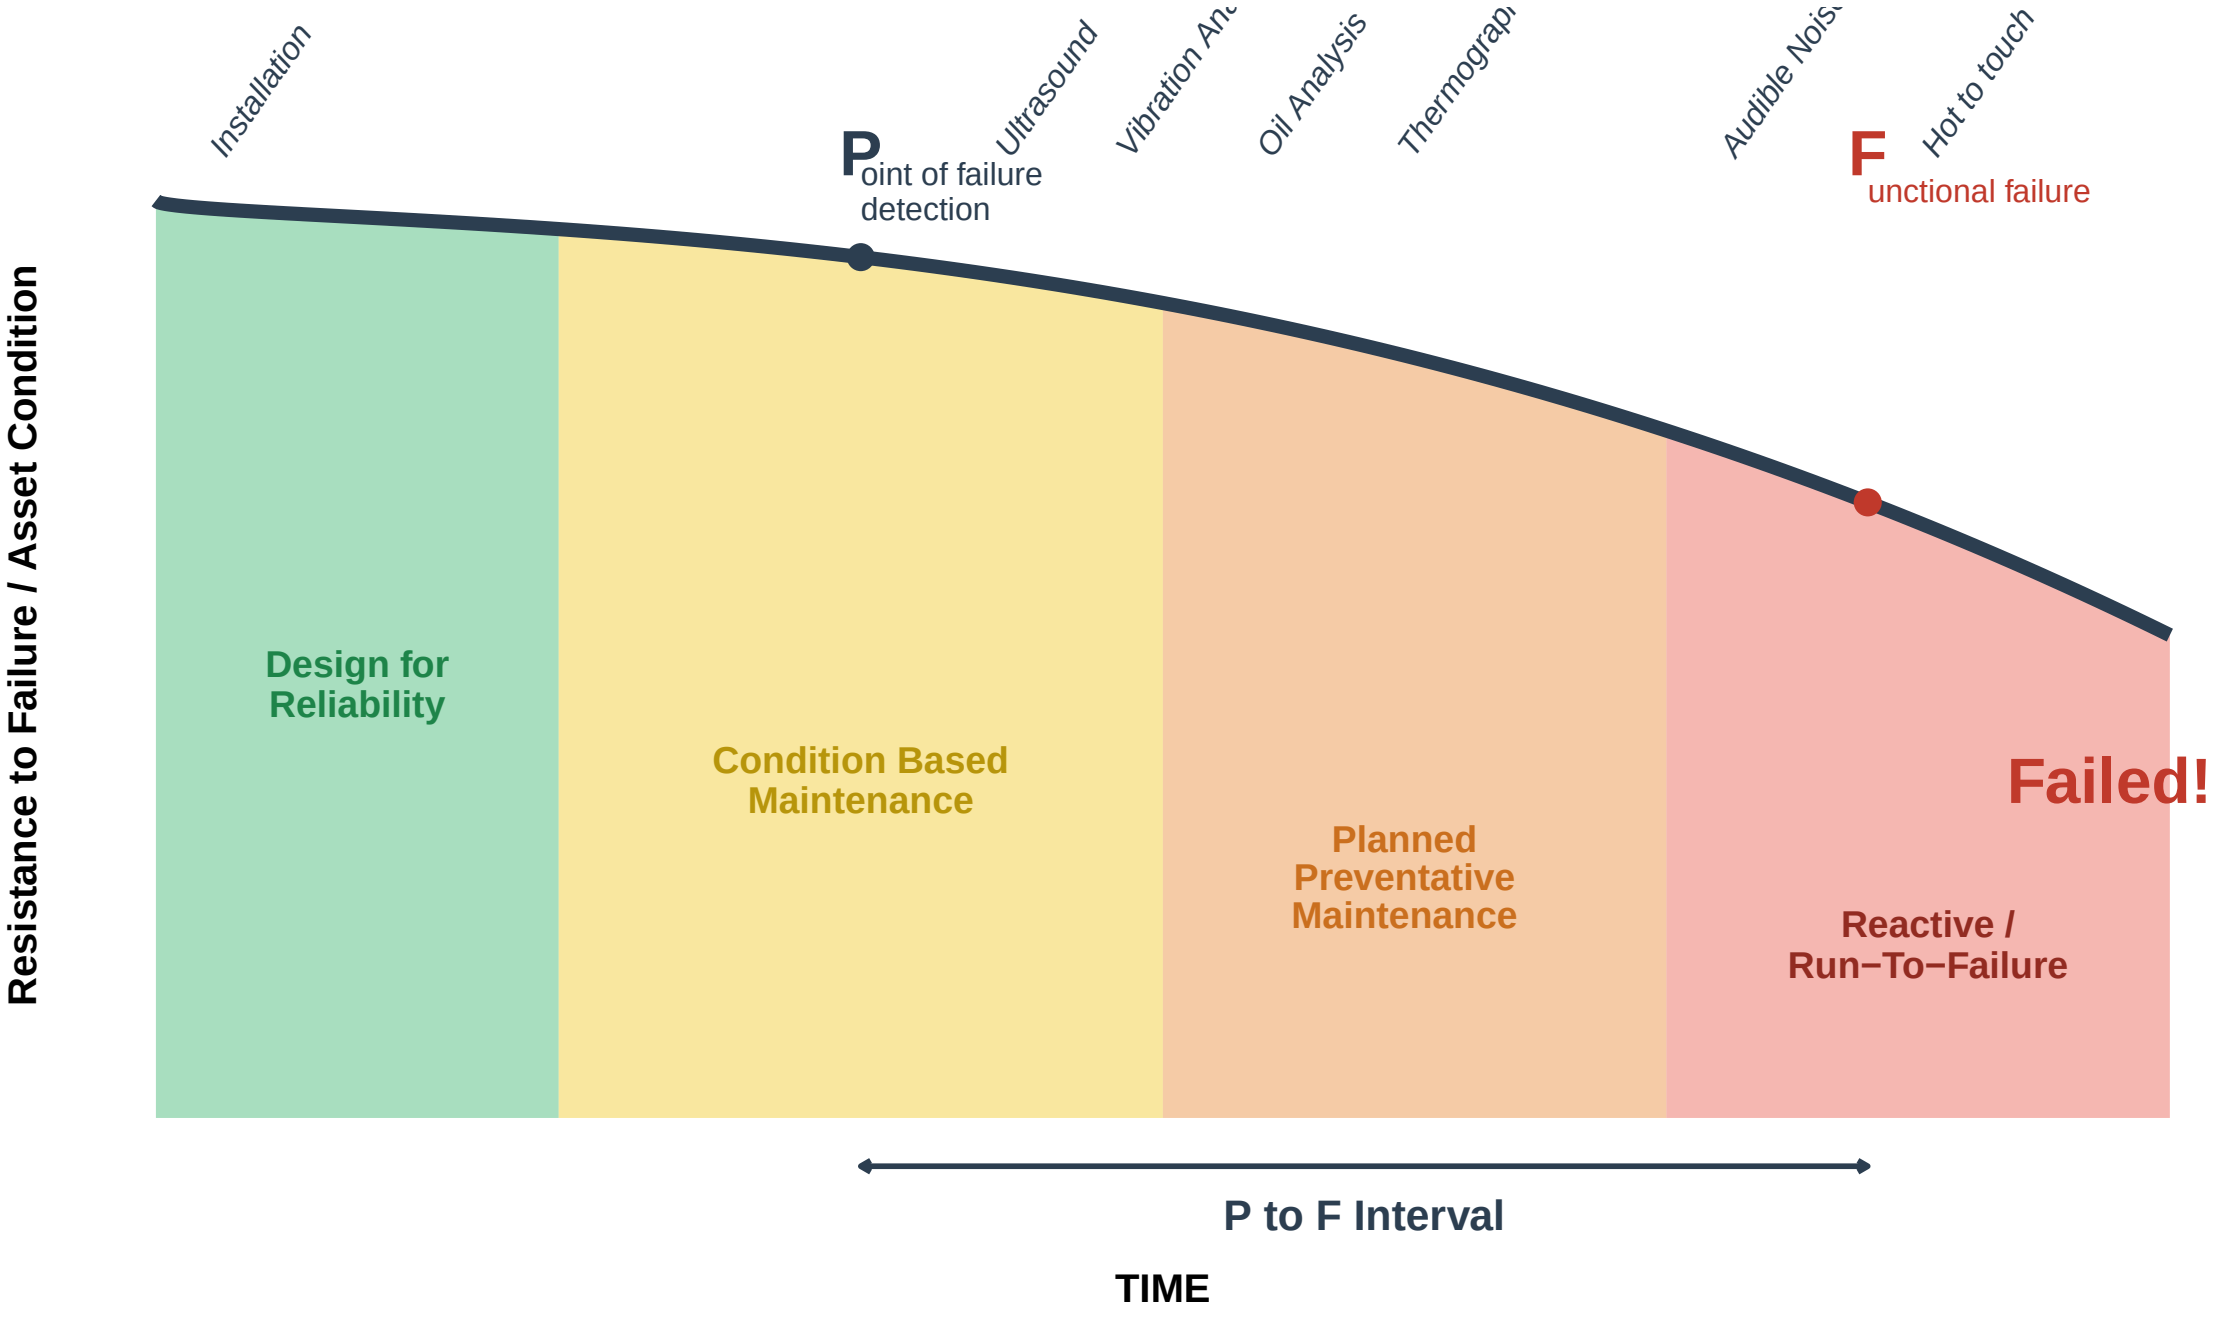
Installation
Ultrasound
Vibration An
Oil Analysis
Thermograp
Audible Nois
Hot to touch
Point of failure detection
Functional failure
Resistance to Failure / Asset Condition
Design for Reliability
Condition Based Maintenance
Planned Preventative Maintenance
Reactive / Run−To−Failure
Failed!
P to F Interval
TIME