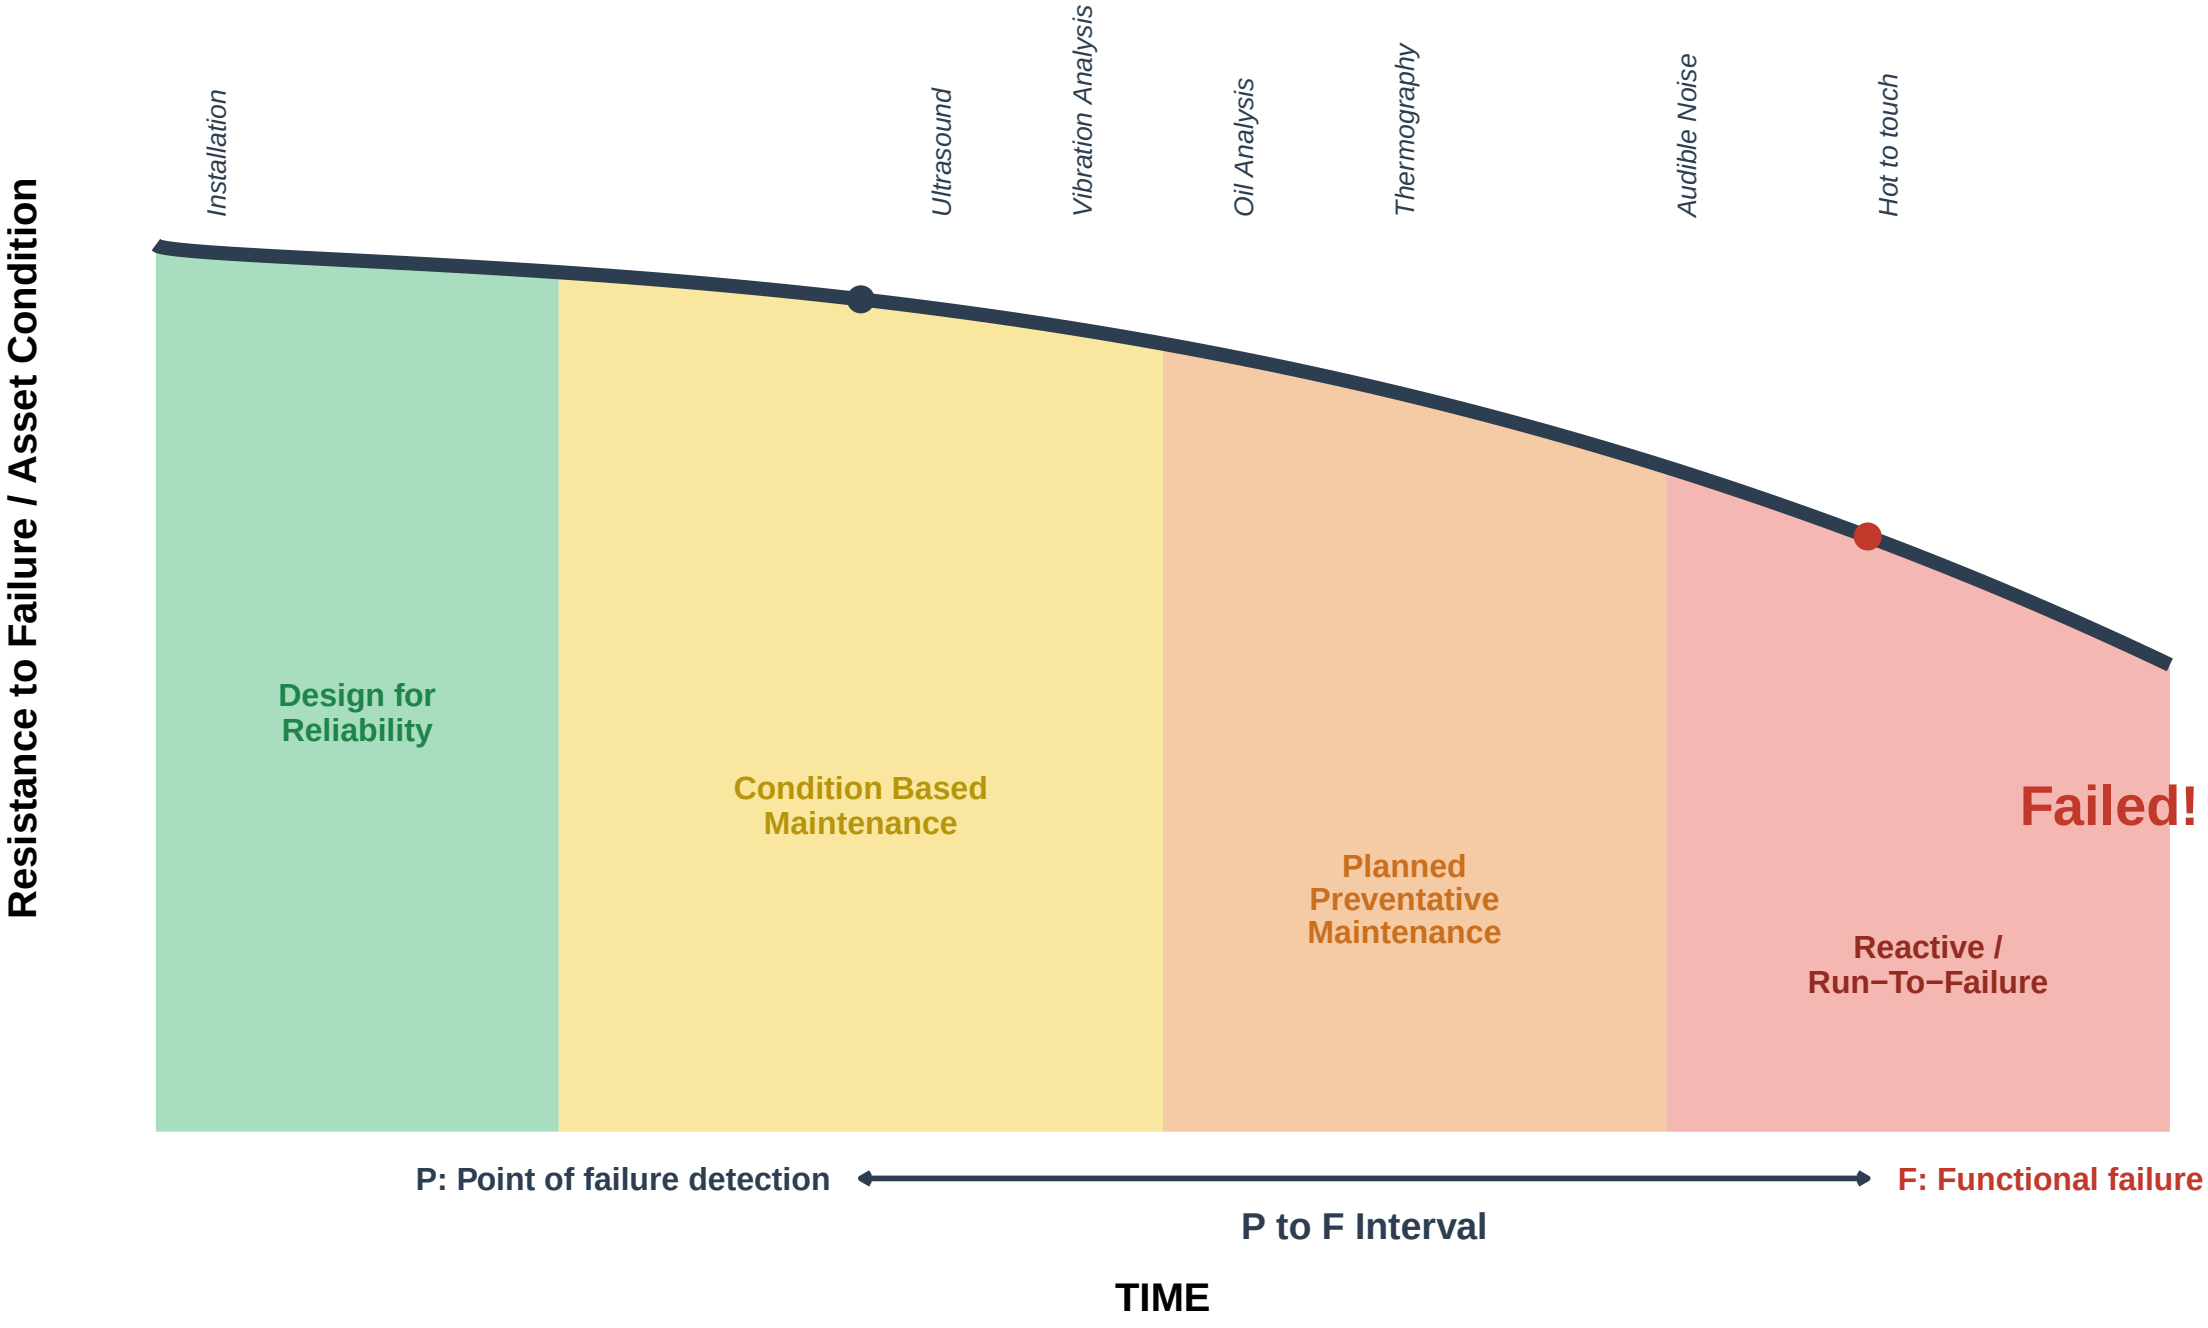
Resistance to Failure / Asset Condition
Installation
Ultrasound
Vibration Analysis
Oil Analysis
Thermography
Audible Noise
Hot to touch
Design for Reliability
Condition Based Maintenance
Planned Preventative Maintenance
Reactive / Run−To−Failure
Failed!
P: Point of failure detection
F: Functional failure
P to F Interval
TIME