


Converting the Phono input of the Quad 34 to a 300 (or 500) mV line input

This can be useful if an external Phono-preamp is to be connected to the Quad 34 Disc input

On the Quad 34 main board:

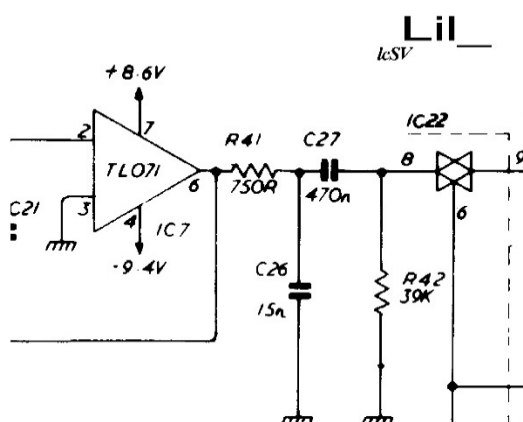

Left channel:


Replace R41 with 39k; connect one end to C27, the other to a wire → left (white) RCA input terminal.

Remove C26

Replace C27 with 680nF

Replace R42 with 10k (500mV) or

Replace R42 with 18k (300mV)

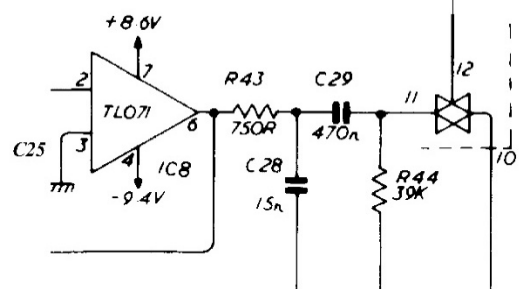

Right channel:


Replace R43 with 39k; connect one end to C29, the other end to a wire → right (red) RCA input terminal.



Remove C28

Replace C29 with 680nF

Replace R44 with 10k (500 mV) or

Replace R44 with 18k (300 mV)

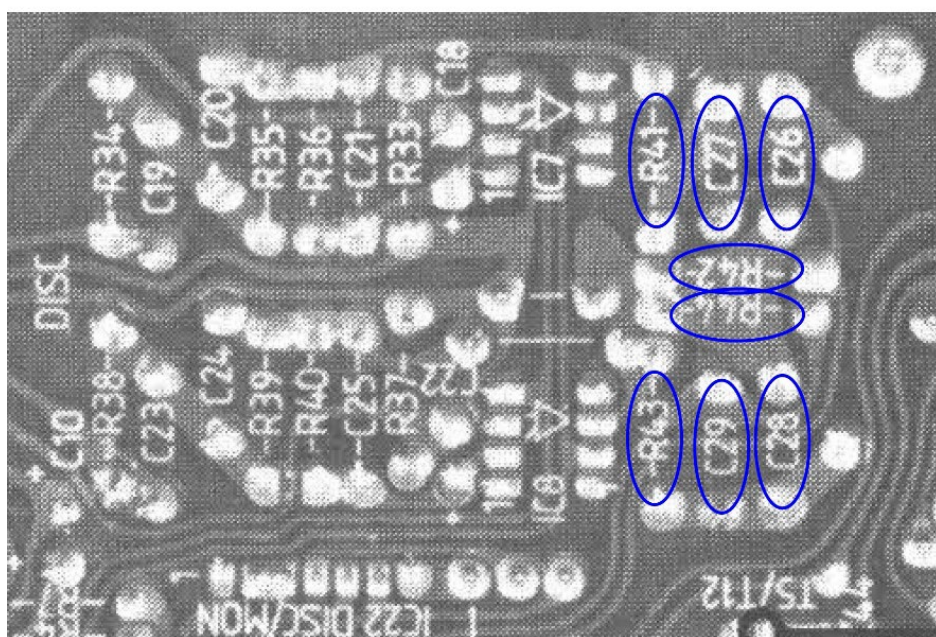

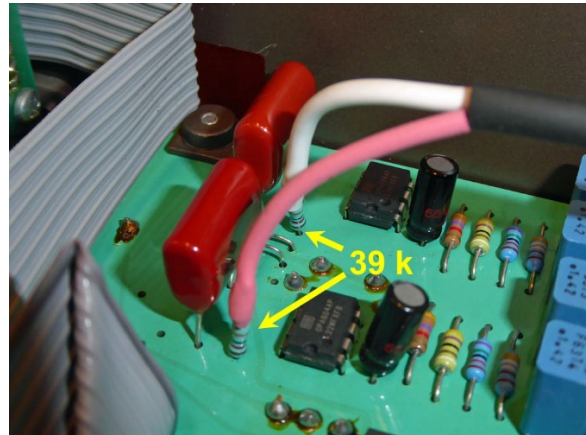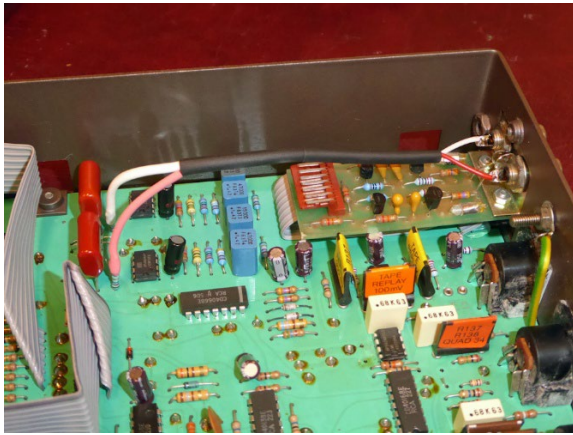

On the Phono module PCB:

Disconnect the flat cable from the Phono module and remove the two short signal leads from the RCA terminals to the module's PCB.

Install the Phono module PCB with the flat cable securely folded under it (the flat cable no longer has a function).

Solder the new wires from for the signal input to R41 (left) and 43 (right) onto the white and red RCA terminals.

Install a new ground wire from the RCA negative connections to the nearby ground terminal.



Testing (practical)

Connect the Qaud 34 to a power amplifier and connect a "CD/AUX type" signal input to the (no longer functional) Phono module.

Switch on the system while the volume control is set at 0 (zero). Press the disc button on the 34 and turn the volume control up one notch. The audio signal should be reproduced without any distortion and without a hum. Adjust the volume as desired.

