AN11088 PTN3460 DP to LVDS PCB layout guidelines Rev. 1 — 25 October 2012

Application note

Document information

Info	Content
Keywords	DisplayPort, LVDS, PTN3460, PCB, Layout, signal integrity, symmetry, loss, jitter
Abstract	This document provides a practical guideline for incorporating the DisplayPort receiver and LVDS transmitter ICs layout into PCB designs.



PTN3460 DP to LVDS PCB layout guidelines

Revision history

Rev	Date	Description
v.1	20121025	application note; initial release

Contact information

For more information, please visit: http://www.nxp.com

For sales office addresses, please send an email to: salesaddresses@nxp.com


PTN3460 DP to LVDS PCB layout guidelines

1. Introduction

This document provides a practical guideline for incorporating the NXP DisplayPort (DP) to LVDS bridge IC's layout into a Printed-Circuit Board (PCB) design.

DisplayPort interconnect is a point-to-point layout of serial differential signal trace pairs. The document provides guidelines for DP lane connection for the PCB traces, vias and AC coupling capacitors. The most important considerations are to minimize loss and jitter, and to maintain signal integrity.

These are general guidelines only. Board designers should carefully weigh design trade-offs and use simulation analysis to ensure a successful implementation.

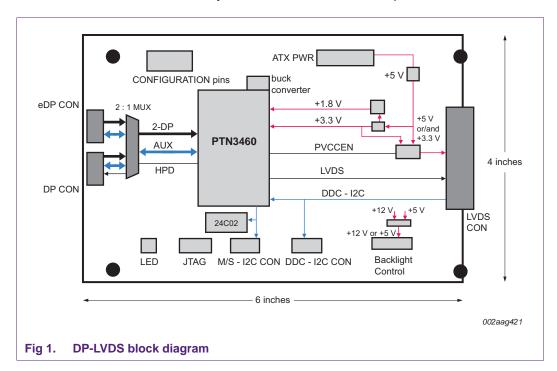

PTN3460 DP to LVDS PCB layout guidelines

2. Layout and design for optimum performance and EMI

DisplayPort is a scalable digital display interface. The interface is designed to support both internal chip-to-chip and external box-to-box digital display connections. The Main Link consists of one, two or four AC-coupled, doubly terminated differential pairs (lanes). Two link rates are supported: 2.7 Gbit/s (HBR) and 1.62 Gbit/s per lane (RBR).

2.1 Reference plane partitioning and overall supply and grounding

DisplayPort requires no new PCB technology. Generally PC system boards are designed with 4-layer FR4 stack-up, with 1080 prepreg and 47 mil core, and a 0.062 inch nominal thickness.

To minimize loss and jitter, the most important considerations are to design to a target impedance and to keep tolerance small.

A signal pair should avoid discontinuities in the reference plane, such as splits and voids. When a signal changes layers, the ground stitching vias should be placed close to the signal vias. A minimum of 1 to 3 stitching vias per pair of signals is recommended. Never route a trace so that it straddles a plane split.

2.2 PCB stack-ups

- Layer 1: Top signal layer, some ground islands for PTN3460 center pad.
- Layer 2: Solid ground plane.
- Layer 3: Split power plane for 3.3 V, 1.8 V and 5 V. Some ground islands for DP, LVDS traces layout.
- Layer 4: Bottom signal layer. Ground island around LVDS connector.

PTN3460 DP to LVDS PCB layout guidelines



Fig 2. DP-LVDS PCB stack-up example

PTN3460 DP to LVDS PCB layout guidelines

2.3 Traces

2.3.1 Impedance

PTN3460 I/O impedance is targeted at 50 Ω single-ended and 100 Ω differential. It is recommended that DP link PCB traces maintains 50 Ω ± 15 % single-ended and 100 Ω ± 20 % differential impedance to maintain signal integrity.

In 'Eaglelake platform design guide', Intel recommends 95 Ω ± 15 % differential impedance for DP and HDMI/DVI signals, and 85 Ω ± 15 % for PCIe.

The impedance target has been lowered in the Calpella platform, which is for year 2009, including docking and add-in card. For all differential signals, DP, HDMI/DVI, and PCIe, impedance is targeted at 85 Ω ± 15 %.

There are two reasons mainly for this non-100 Ω recommendation. One is the signal loss. The higher the impedance is, the more the loss is. The trace length between the chip set and the connector may be as long as 2 inches to 4 inches, which may contribute a significant amount of loss.

2.3.2 Width and spacing

The coupling of the intra-pair differential signals and increased spacing to neighboring signals help to minimize harmful crosstalk impacts and Electro-Magnetic Interference (EMI) effects. In the microstrip case, a differential trace should be 5 mils wide, with a 7 mil wide air gap spacing between the two traces of a pair.


The spacing between pairs and to all non-DP/LVDS signals should be at least four times the dielectric height. If the non-DP/LVDS signals have significantly higher voltage levels or edge rate than the DP/LVDS signal, the space should increase to 30 mils in order to avoid coupling.

2.3.3 Length and length matching

Trace length greatly affects the loss and jitter budgets of the interconnection. The PCB trace may introduce 1 ps to 5 ps of jitter and 0.35 dB to 0.50 dB of loss per inch.

Long distance traces should be routed at an off-angle to the X-Y axis of a PCB layer, in order to distribute the effects of fiberglass bundle weaves and resin-rich areas of the dielectric.


The two traces of a pair should be symmetrically routed.

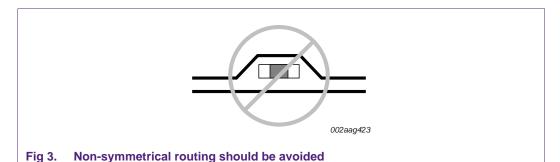

PTN3460 DP to LVDS PCB layout guidelines

The length difference between a differential pair should be limited to 5 mils maximum. Length matching is required per segment, and any length added (typically a 'serpentine' section) for the sake of matching a pair should be added near the location where the mismatch occurs.

Keep the delta in each inter-pair to be less than 0.1 inch (0.254 cm).

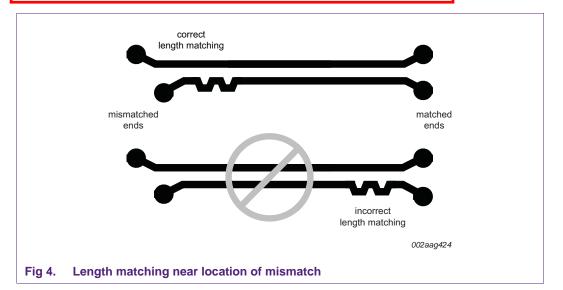


2.3.4 **Bends**

The use of bends should be kept to a minimum since a bend can introduce common mode noise into the system, which will affect the signal integrity and EMI of the differential pair.

Bends on traces should be $\geq 135^{\circ}$. Tighter bends should be avoided because they impact the loss and jitter budgets.

If bends are used, the following guidelines are recommended to avoid tight bends (see Figure 5).


- Keep all angles between traces (α) ≥ 135°.
- Maintain an air gap (A) of ≥ 20 mils.
- Segments such as B and C, which flank a bend, should have a length ≥ 1.5 times the
 width of the trace.

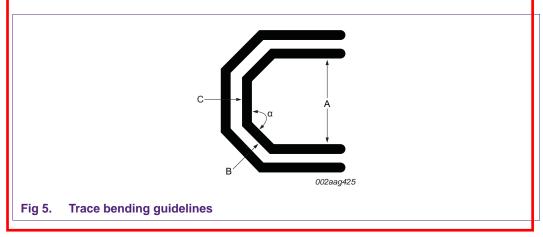


PTN3460 DP to LVDS PCB layout guidelines

The number of left and right bends should be as close to equal as possible, to minimize the length mismatch.

When a serpentine section is used to match one length to another, as shown in <u>Figure 6</u>, the length of each jog must be at least three times the trace width. The maximum distance between traces in a serpentine section should be less than two times the distance between traces in a non-serpentine section.

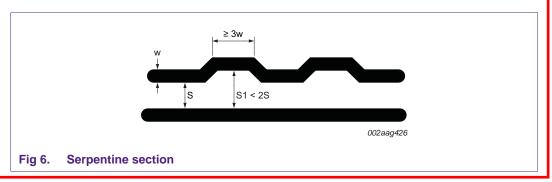

An uncoupled section of trace routing into a pin or a ball should be \leq 45 mils when using multiple bends, as shown in Figure 7.

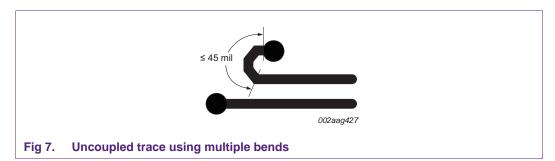


PTN3460 DP to LVDS PCB layout guidelines

3. Power supply


External power supply is required to power DP-LVDS application board.

First application board is for AIO (All In One) AUO 21.5" panel, which draws a lot of power, hence an ATX switching power supply is used to anticipate the power hunger of AUO panel.

Second application board is targeted for NoteBook application, hence NB battery pack will be used for a more compact design.

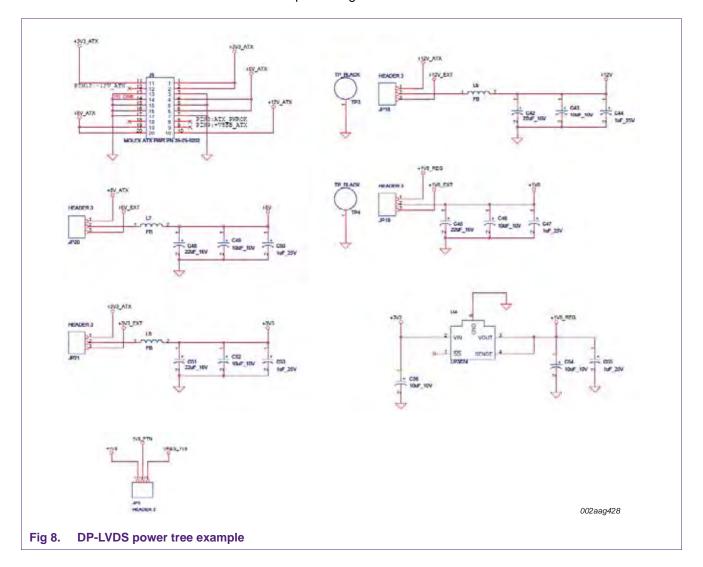

PTN3460 DP to LVDS PCB layout guidelines

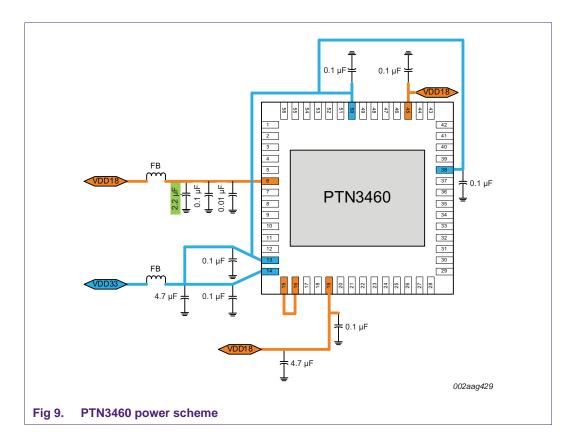

3.1 Power supply filtering and bypass capacitors

The main power of DP-LVDS is 3.3 V. Core voltage 1.8 V can come from system board, or it can be generated from internal LDOs inside PTN3460.




PTN3460 DP to LVDS PCB layout guidelines

Use only X5R or X7R type decoupling capacitors (do not use Z5U or Y5U types). Z5U or Y5U will lose 20 % to 30 % of its capacitance value at high temperature.

Also use 10 nF (103 pF) to help suppress high frequency noise.

Bypass capacitor on 3.3 V power supply pin should be connected to the pin with a wide trace.

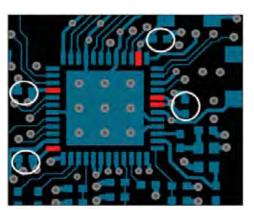


002aag431

Fig 11. Power supply filtering and bypass layout example

PTN3460 DP to LVDS PCB layout guidelines

4. PTN3460 HVQFN56 package

PTN3460 is packaged in an HVQFN56 package (plastic thermal enhanced thin quad flat package; no leads; 56 terminals; body 7 mm \times 7 mm \times 0.85 mm; 0.4 mm pitch.

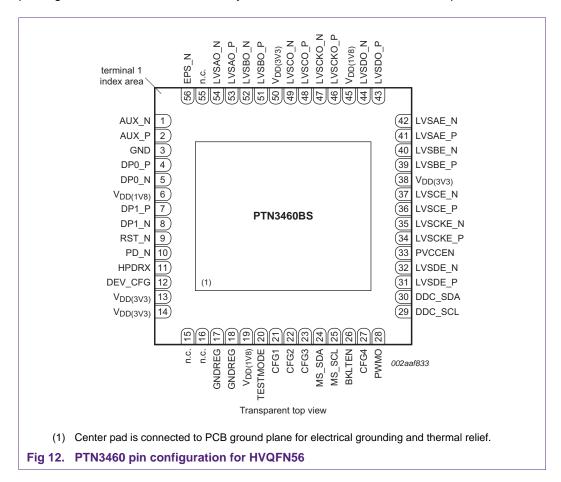

4.1 HVQFN exposed center pad solder lands


PTN3460 uses HVQFN56 package.

The HVQFN package exposed center pad must be soldered to a corresponding solder land on the board for enhanced thermal, as well as electrical ground, performance.


During reflow soldering, solder past melts and gas or trapped air is released, causing splattering or solder balling. Solder balling and splatter can be minimized if the solder past is printed as a number of individual dots, instead of one large deposit, and if the solder past is kept at a sufficient distance from the edge of the solder land.

The solder paste pattern area should cover 35 % of the solder land area. When printing solder past on the exposed die pad solder land, the solder past dot area should cover not more than 20 % of this solder land area. Furthermore, the paste should be printed away from the solder land edges. This is illustrated in Figure 13; the solder paste pattern area lies within the boundary indicated by the red line and it is divided by the entire solder land area.

PTN3460 DP to LVDS PCB layout guidelines

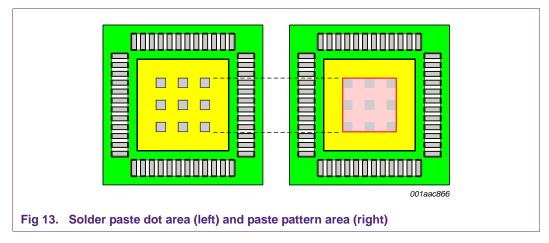

The PTN3460 exposed center pad should be connected to the ground plane as illustrated in Figure 14.

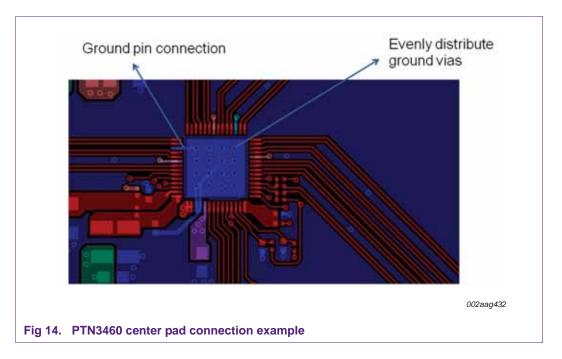


5. Test points, vias and pads

Signal vias affect the overall loss and jitter budgets. Each via pair may contribute 0.25 dB of loss in some corner cases. Vias may limit the achievable maximum routing length.

Vias should have a pad size of 25 mils or less, and a finished hole size of 14 mils or less. Two vias must be placed as a symmetric pair in the same location.

Test points (which can be vias, pads or components) and probe pads should be placed symmetrically in series. Stubs should not be introduced on differential pairs. Refer to Figure 15 for illustrations of correct and incorrect placements.

PTN3460 DP to LVDS PCB layout guidelines

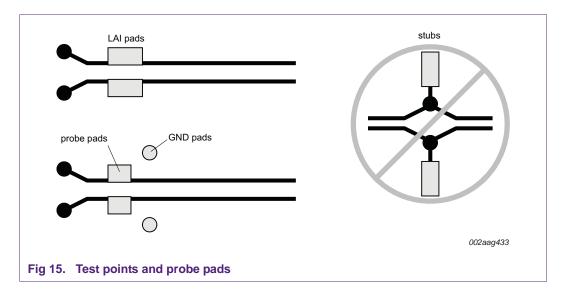


6. DisplayPort receiver interface

Main differential pairs and AUX channel are routed with 100 Ω impedance. The important parameters to calculate the impedance are:

- PCB thickness
- Distance to ground plane
- Trace width
- Trace spacing
- PCB permittivity

Guard grounds are used to isolate the pair. This helps to eliminate crosstalk between traces. Trace lengths are matched on the same pair.

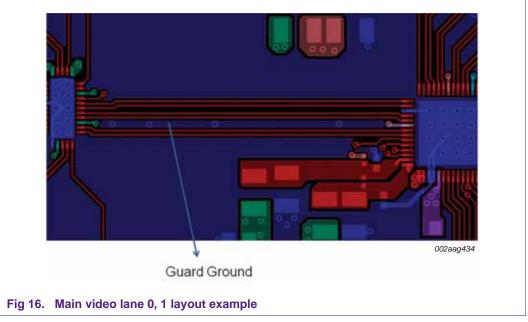


PTN3460 DP to LVDS PCB layout guidelines

7. AC coupling capacitors

DP requires AC coupling between transmitter and receiver. The AC coupling capacitors for both differential pair signals must be the same value, same package size, and have symmetric placement. If possible, TX traces should route on the top layer.


The capacitor value must be in the range of 75 nF to 200 nF (100 nF is best). The 0402 package size is preferred, and 0603 is acceptable. C-pack is not allowed.

The breakout into and out of capacitors should be symmetrical for both signal lines in a differential pair. The trace separation for routing to pads must be minimized in order to optimize tight coupling between the signal pairs.

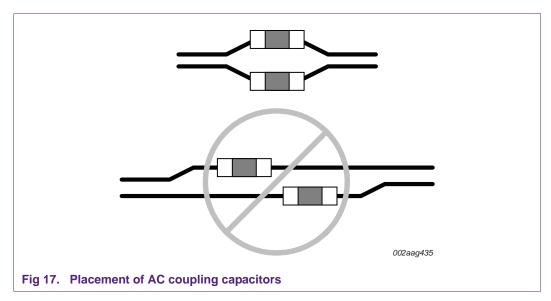

Capacitors for AUX pair should be placed close to the DP receptacle next to pin 15 and pin 17.

When signals change planes, the ground plane needs to move along to keep constant trace impedance. On DPVGA a ground island is inserted on the V_{CC} plane for this purpose.

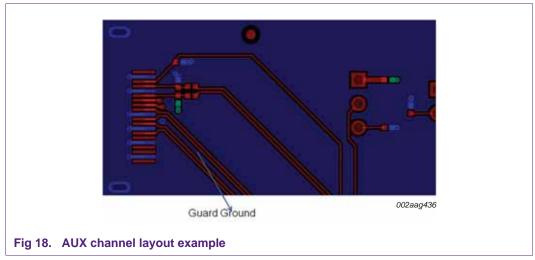

PTN3460 DP to LVDS PCB layout guidelines

Ground pads of the DP plug footprint should be connected directly to ground plane with short traces.

8. LVDS transmitter interface

Similar to DisplayPort receiver signals, LVDS also utilizes a differential transmission scheme, two lines for every LVDS signal. They should be routed with 100 Ω impedance. For successful transmission of LVDS signals over differential traces, the following guidelines should be followed while laying out the board:

- Run the differential traces as closely as possible after they leave the driving IC to
 ensure minimal reflections and maintain the receiver's common mode noise rejection.
 Also, maintain constant distance between the differential LVDS signals over the entire
 length of the traces to avoid discontinuities in the differential impedance.
- Keep the electrical lengths between the differential LVDS traces the same to minimize skew.
- Minimize the number of vias or other discontinuities on the signal path.
- Any parasitic loading, such as capacitance, must be present in equal amounts to each line of the differential pair.
- To avoid signal discontinuities, arcs or 45° traces are recommended instead of 90° turns.


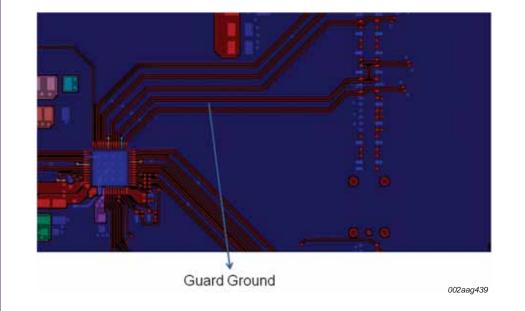


Fig 19. LVDS layout example

PTN3460 DP to LVDS PCB layout guidelines

8.1 Impedance matching

Impedance matching is very important for LVDS, even for very short runs. Any discontinuities in the differential LVDS traces will cause signal reflections, thereby degrading the signal quality. These discontinuities also increase the common mode noise and will be radiated as EMI. The LVDS outputs, being current mode outputs, need a termination resistor to close the loop and will not work without the resistor termination. The termination resistor is chosen to match the differential impedance of the transmission line and can range from 90 Ω to 110 Ω (typically 100 Ω). This termination resistor should be placed between the differential lines and close to the LVDS receiver buffer. See illustration below in Figure 19.

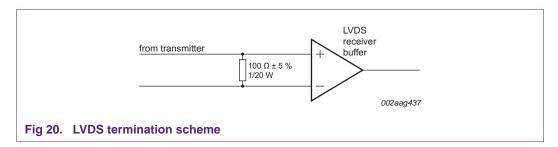


8.2 Crosstalk between LVDS and single-ended signals

To reduce crosstalk between LVDS and single-ended signals, such as LVTTL, SSTL-2 and similar standards, the differential LVDS signals must be isolated from single-ended signals. On the same PCB layer, the single-ended signals should be placed at least 12 mm from the LVDS signals to avoid crosstalk effects. The V_{CC} and ground planes can also be used to isolate the LVDS signals from the single-ended signal layers.

8.3 LVDS connectors

Connectors can be used to connect the LVDS signals from one board to another.

Figure 21 is an illustration of good connector and bad connector for LVDS.

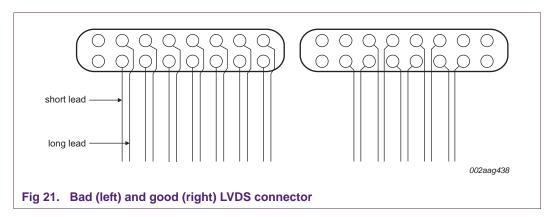

PTN3460 DP to LVDS PCB layout guidelines

9. General high-speed board design guidelines

The DP signals on the board work at 1.6/2.7 Gbit/s speed, the LVDS data rate can be as high as 112 MHz \times 7 \times 3 = 2.352 Gbit/s (112 MHz \times 7 \times 4 = 3.136 Gbit/s) per lane. The high data rate requires some specific implementations in the PCB layout design. The following is the summary of guideline:

- The differential pair must be routed symmetrically. Keep all differential signal traces the same length. The difference in intra-pair trace length should be less than 5 mils. The delta in inter-pair trace length should be less than 0.1 inch.
- Maintain 50 Ω ± 15 % single-ended and 100 Ω ± 20 % differential impedance.
- Do not route high speed signals over any plane split; use only one ground plane underneath the differential signals.
- Avoid any discontinuity for signal integrity. Differential pairs should be routed on the same layer. The number of vias on the differential traces should be minimized. Test points should be placed in series and symmetrically. Stubs should not be introduced on the differential pairs.
- Use caution with the exposed center pad solder land for HVQFN package.

10. Abbreviations

Table 1. Abbreviations

Table 1.	Appleviations
Acronym	Description
AUO	AU Optronics
AUX	Auxiliary channel
ATX	Advanced Technology Extended
DDC	Direct Display Control
DP	DisplayPort
DPVGA	DisplayPort Video Graphics Array
DVI	Digital Visual Interface
HBR	High Bit Rate
HDMI	High Definition Media Interface
I/O	Input/Output
IC	Integrated Circuit
LDO	Low-DropOut regulator
LVDS	Low Voltage Differential Signaling
NB	Note Book
PCB	Printed-Circuit Board
PCle	PCI (Peripheral Component Interconnect) Express
RGB	Red, Green, Blue (refers to analog video component signals)
RBR	Reduced Bit Rate
TTL	Transistor-Transistor Logic

PTN3460 DP to LVDS PCB layout guidelines

11. References

- [1] Eaglelake platform design guide Rev. 1.1.1, Sept. 2007
- [2] Calpella platform design guide Rev.0.8, Aug. 2008
- [3] DisplayPort Standard Version 1.1a
- [4] Huron River platform design guide Rev. 0.9, Mar. 2011
- [5] Philips AN10366 HVQFN application information Rev.02
- [6] DisplayPort Interoperability Guideline V1_1a, by VESA, February 5, 2009
- [7] AN10798, DisplayPort PCB layout guidelines NXP, Rev 1, 5 March 2009
- [8] AN10897, A guide to designing for ESD NXP, Rev 1, 14 December 2009
- [9] PTN3460 Objective Data Sheet Rev 1.7 June 2011

PTN3460 DP to LVDS PCB layout guidelines

12. Legal information

12.1 Definitions

Draft — The document is a draft version only. The content is still under internal review and subject to formal approval, which may result in modifications or additions. NXP Semiconductors does not give any representations or warranties as to the accuracy or completeness of information included herein and shall have no liability for the consequences of use of such information.

12.2 Disclaimers

Limited warranty and liability — Information in this document is believed to be accurate and reliable. However, NXP Semiconductors does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information. NXP Semiconductors takes no responsibility for the content in this document if provided by an information source outside of NXP Semiconductors.

In no event shall NXP Semiconductors be liable for any indirect, incidental, punitive, special or consequential damages (including - without limitation - lost profits, lost savings, business interruption, costs related to the removal or replacement of any products or rework charges) whether or not such damages are based on tort (including negligence), warranty, breach of contract or any other legal theory.

Notwithstanding any damages that customer might incur for any reason whatsoever, NXP Semiconductors' aggregate and cumulative liability towards customer for the products described herein shall be limited in accordance with the *Terms and conditions of commercial sale* of NXP Semiconductors.

Right to make changes — NXP Semiconductors reserves the right to make changes to information published in this document, including without limitation specifications and product descriptions, at any time and without notice. This document supersedes and replaces all information supplied prior to the publication hereof.

Suitability for use — NXP Semiconductors products are not designed, authorized or warranted to be suitable for use in life support, life-critical or safety-critical systems or equipment, nor in applications where failure or malfunction of an NXP Semiconductors product can reasonably be expected to result in personal injury, death or severe property or environmental damage. NXP Semiconductors and its suppliers accept no liability for inclusion and/or use of NXP Semiconductors products in such equipment or applications and therefore such inclusion and/or use is at the customer's own risk.

Applications — Applications that are described herein for any of these products are for illustrative purposes only. NXP Semiconductors makes no representation or warranty that such applications will be suitable for the specified use without further testing or modification.

Customers are responsible for the design and operation of their applications and products using NXP Semiconductors products, and NXP Semiconductors accepts no liability for any assistance with applications or customer product design. It is customer's sole responsibility to determine whether the NXP Semiconductors product is suitable and fit for the customer's applications and products planned, as well as for the planned application and use of customer's third party customer(s). Customers should provide appropriate design and operating safeguards to minimize the risks associated with their applications and products.

NXP Semiconductors does not accept any liability related to any default, damage, costs or problem which is based on any weakness or default in the customer's applications or products, or the application or use by customer's third party customer(s). Customer is responsible for doing all necessary testing for the customer's applications and products using NXP Semiconductors products in order to avoid a default of the applications and the products or of the application or use by customer's third party customer(s). NXP does not accept any liability in this respect.

Export control — This document as well as the item(s) described herein may be subject to export control regulations. Export might require a prior authorization from competent authorities.

Translations — A non-English (translated) version of a document is for reference only. The English version shall prevail in case of any discrepancy between the translated and English versions.

12.3 Licenses

Purchase of NXP ICs with HDMI technology

Use of an NXP IC with HDMI technology in equipment that complies with the HDMI standard requires a license from HDMI Licensing LLC, 1060 E. Arques Avenue Suite 100, Sunnyvale CA 94085, USA, e-mail: admin@hdmi.org.

12.4 Trademarks

Notice: All referenced brands, product names, service names and trademarks are the property of their respective owners.

13. Contents

1	Introduction 3
2	Layout and design for optimum performance and EMI
2.1	and EMI
2.1	supply and grounding 4
2.2	PCB stack-ups 4
2.3	Traces 6
2.3.1	Impedance 6
2.3.2	Width and spacing 6
2.3.3	Length and length matching 6
2.3.4	Bends
3	Power supply
3.1	Power supply filtering and bypass
	capacitors
4	PTN3460 HVQFN56 package
4.1	HVQFN exposed center pad solder lands 12
5	Test points, vias and pads 13
6	DisplayPort receiver interface 14
7	AC coupling capacitors
8	LVDS transmitter interface 16
8.1	Impedance matching
8.2	Crosstalk between LVDS and single-ended
	signals 17
8.3	LVDS connectors
9	General high-speed board design
	guidelines 18
10	Abbreviations
11	References
12	Legal information 20
12.1	Definitions
12.2	Disclaimers
12.3	Licenses
12.4	Trademarks20
13	Contents

Please be aware that important notices concerning this document and the product(s) described herein, have been included in section 'Legal information'.

PTN3460 DP to LVDS PCB layout guidelines