

# *An Introduction to Combustion*

---

Concepts and Applications

*second edition*



Stephen R. Turns



McGRAW-HILL INTERNATIONAL EDITIONS  
Mechanical Engineering Series

# **AN INTRODUCTION TO COMBUSTION**

*Concepts and Applications*

---

## **McGraw-Hill Series in Mechanical Engineering**

### **Consulting Editors**

**Jack P. Holman, Southern Methodist University**  
**John Lloyd, Michigan State University**

**Anderson:** *Computational Fluid Dynamics: The Basics with Applications*

**Anderson:** *Modern Compressible Flow: With Historical Perspective*

**Arora:** *Introduction to Optimum Design*

**Borman and Ragland:** *Combustion Engineering*

**Cengel:** *Thermodynamics: An Engineering Approach*

**Cengel:** *Heat Transfer: A Practical Approach*

**Cengel:** *Introduction to Thermodynamics & Heat Transfer*

**Culp:** *Principles of Energy Conversion*

**Dieter:** *Engineering Design: A Materials & Processing Approach*

**Doebelin:** *Engineering Experimentation: Planning, Execution, Reporting*

**Driels:** *Linear Control Systems Engineering*

**Edwards and McKee:** *Fundamentals of Mechanical Component Design*

**Gibson:** *Principles of Composite Material Mechanics*

**Hamrock:** *Fundamentals of Fluid Film Lubrication*

**Heywood:** *Internal Combustion Engine Fundamentals*

**Histand and Alciatore:** *Introduction to Mechatronics and Measurement Systems*

**Holman:** *Experimental Methods for Engineers*

**Jaluria:** *Design and Optimization of Thermal Systems*

**Kays and Crawford:** *Convective Heat and Mass Transfer*

**Kelly:** *Fundamentals of Mechanical Vibrations*

**Kimbrell:** *Kinematics Analysis and Synthesis*

**Kreider and Rabl:** *Heating and Cooling of Buildings*

**Martin:** *Kinematics and Dynamics of Machines*

**Mattingly:** *Elements of Gas Turbine Propulsion*

**Modest:** *Radiative Heat Transfer*

**Norton:** *Design of Machinery*

**Oosthuizen and Carscallen:** *Compressible Fluid Flow*

**Oosthuizen and Naylor:** *Introduction to Convective Heat Transfer Analysis*

**Reddy:** *An Introduction to Finite Element Method*

**Rosenberg and Karnopp:** *Introduction to Physical Systems Dynamics*

**Schlichting:** *Boundary-Layer Theory*

**Shames:** *Mechanics of Fluids*

**Shigley:** *Kinematic Analysis of Mechanisms*

**Shigley and Mischke:** *Mechanical Engineering Design*

**Shigley and Uicker:** *Theory of Machines and Mechanisms*

**Stoecker:** *Design of Thermal Systems*

**Stoecker and Jones:** *Refrigeration and Air Conditioning*

**Turns:** *An Introduction to Combustion: Concepts and Applications*

**Ullman:** *The Mechanical Design Process*

**Wark:** *Advanced Thermodynamics for Engineers*

**Wark and Richards:** *Thermodynamics*

**White:** *Fluid Mechanics*

**White:** *Viscous Fluid Flow*

**Zeid:** *CAD/CAM Theory and Practice*



# **AN INTRODUCTION TO COMBUSTION**

*Concepts and Applications*

---

**SECOND EDITION**

**Stephen R. Turns**

*Propulsion Engineering Research Center  
and*

*Department of Mechanical and Nuclear Engineering  
The Pennsylvania State University*



Boston • Burr Ridge, IL • Dubuque, IA • Madison, WI  
New York • San Francisco • St. Louis

Bangkok • Bogotá • Caracas • Lisbon • London • Madrid • Mexico City  
Milan • New Delhi • Seoul • Singapore • Sydney • Taipei • Toronto

**McGraw-Hill Higher Education**



*A Division of The McGraw-Hill Companies*

**AN INTRODUCTION TO COMBUSTION: CONCEPTS AND APPLICATIONS**  
International Editions 2000

Exclusive rights by McGraw-Hill Book Co – Singapore, for manufacture and export. This book cannot be re-exported from the country to which it is consigned by McGraw-Hill.

Copyright © 2000, 1996 by The McGraw-Hill Companies, Inc. All rights reserved. Except as permitted under the United States Copyright Act of 1976, no part of this publication may be reproduced or distributed in any form or by any means, or stored in a data base or retrieval system, without the prior written permission of the publisher.

10 9 8 7 6 5 4 3 2 1  
20 9 8 7 6 5 4 3 2 1 0 9  
CTP SLP

ISBN 0-07-230096-5 (book)  
ISBN 0-07-230098-1 (disk)  
ISBN 0-07-235044-X (book bound with disk)

**Library of Congress Cataloging-in-Publication Data**

Turns, Stephen R.

An introduction to combustion : concepts and applications / Stephen R. Turns. – 2nd ed.

p. cm. – (McGraw-Hill series in mechanical engineering)

ISBN 0-07-230096-5

1. Combustion engineering. I. Title. II. Series.

TJ254.5.T88 2000

621.402'3–dc21

99-25421

CIP

**www.mhhe.com**

**When ordering this title, use ISBN 0-07-116910-5**

Printed in Singapore

## **ABOUT THE AUTHOR**

**Stephen R. Turns** received degrees in mechanical engineering from The Pennsylvania State University (B.S., 1970), Wayne State University (M.S., 1974), and the University of Wisconsin at Madison (Ph.D., 1979). He was a research engineer at General Motors Research Laboratories from 1970 to 1975. He joined the Penn State faculty in 1979 and is currently Professor of Mechanical Engineering. Dr. Turns teaches a wide variety of courses in the thermal sciences and has received several awards for teaching excellence at Penn State. He is an active combustion researcher, publishing widely, and is an active member of The Combustion Institute, the American Society of Mechanical Engineers, and the Society of Automotive Engineers.

*This Book Is Dedicated to  
My Wife, Joan, and Our Sons,  
Matthew and Michael  
—SRT*

By contrast, the first fires flickering at a cave mouth  
are our own discovery, our own triumph, our grasp upon  
invisible chemical power. Fire contained, in that place of  
brutal darkness and leaping shadows, the crucible and the  
chemical retort, steam and industry. It contained the entire  
human future.

*Loren Eiseley*  
*The Unexpected Universe*



## PREFACE TO THE SECOND EDITION

This second edition retains the same primary objectives as the original text: first, to present basic combustion concepts using relatively simple and easy-to-understand analyses; and second, to introduce a wide variety of practical applications that motivate or relate to the various theoretical concepts. The overarching goal is to provide a textbook that is useful for both formal undergraduate study in mechanical engineering and related fields, and informal study by practicing engineers.

The author, as well as many of his colleagues around the world, also have found the book to be useful in a first course in combustion at the graduate level. In this usage, however, the book alone did not suffice: more detailed treatments and advanced topics needed to be developed by the instructor to supplement the text. Nevertheless, many have reported success in using the book in this manner. The second edition specifically addresses this need for additional topics and greater depth in some areas. Chapter 7 now contains a section dealing with multicomponent diffusion, including thermal diffusion. The development of the one-dimensional energy conservation equation is expanded in Chapters 7 and 8 to include multicomponent and thermal diffusion in a form consistent with that used in the various flame codes developed at Sandia National Laboratories, Livermore, CA. This provides a good link for those instructors who use such codes in conjunction with CHEMKIN software in their courses. In the same spirit, Chapter 9 now includes a section on counterflow diffusion flames. None of these additions detract in any way from the ability to use the book at a lower level. The more advanced topics are arranged so that they can be skipped with no loss in continuity. Furthermore, these additions, in general, are not particularly lengthy—thus, the overall length of the text is not greatly increased, and the book retains its original comfortable, compact feel.

Changes to the basic text include a brief discussion of the molecular structure of fuels in an appendix to Chapter 2. This appendix provides information useful for appreciating many of the thermochemical concepts of Chapter 2, as well as providing background information useful for understanding some of the chemical-kinetic concepts developed in Chapters 4 and 5. Chapter 4 now includes a section on partial equilibrium and a discussion of characteristic chemical time scales, while Chapter 5 has been updated to include the latest advances in methane kinetics (GRI-Mech). Reaction pathway diagrams for CH<sub>4</sub>-air combustion are also included to give a much clearer—and holistic—picture of methane combustion kinetics. Chapter 6 sees the addition of a well-stirred-reactor example that employs detailed kinetics, providing yet another link to CHEMKIN software. In Chapter 8, the discussion of premixed

flame structure is expanded to give a much clearer, and detailed, view of this important subject. A chapter on detonations (Chapter 16) also has been added to meet the needs of those desiring to include this topic in their courses. Logically, this material could be included following Chapter 2 or Chapter 8. New problems have been added to many chapters and several additional examples are included. Those problems requiring, or benefiting from, the use of a computer for their solution are indicated. The computer software has been updated to be compatible with Windows.

The author hopes that this new edition will continue to serve well those who desire to use the book at its most basic level and that the additional topics presented in this edition also will make the book more useful at a somewhat more advanced level.

*Stephen R. Turns  
University Park, PA*

## PREFACE TO THE FIRST EDITION

High interest in combustion and combustion applications exists among many engineering students. Although undergraduate, senior-level courses in combustion and combustion-related areas are offered at many institutions, finding an appropriate textbook for such courses is difficult, at best. The need for an introductory text on combustion, specifically structured for an undergraduate readership, has served as the motivation for writing this book. The offering of an introductory course at Penn State and the development of an introductory textbook were conceived jointly, and this book is the result of those developments.

Although the primary audience is intended to be senior-level students in mechanical and related engineering majors, others may find the text useful as a bridge between the basic undergraduate thermal sciences and advanced treatments of combustion. Many examples and problems are presented to aid in understanding and to relate to practical applications. Thus, it is hoped that both first-year graduate students and practicing engineers can benefit from the material presented here.

In its organization, the text provides flexibility. The 15 chapters provide much more material than can be covered in a single-semester course; this overkill makes it easy for an instructor to tailor a course to a particular theme or set of topics, while allowing the theme to evolve or change from one course offering to another. For example, a one-semester course providing a general overview could cover Chapters 1–6, 15, 8, 9, and 14; while a course with some emphasis on spark-ignition engines could cover Chapters 1–6, 8, 11, 12, 15, and 9.

Located in Chapters 1–3 are topics considered essential for an undergraduate course. Chapter 1 defines combustion and the types of flames, and introduces the effects and control of combustion-generated air pollution, which is treated in greater detail in Chapter 15.

The thermochemistry needed for a study of combustion is presented in Chapter 2. This chapter emphasizes the importance of chemical equilibrium to combustion. Software provided with this book provides students with a simple means of calculating complex equilibria for combustion gases; this software can be put to good use in many interesting and pedagogically helpful projects. Chapter 3 introduces mass transfer. The approach taken here, and throughout the book, is to simplify theoretical developments by treating all mass transfer within the context of simple binary systems. Except for a brief mention in Chapter 7, the treatment of multicomponent diffusion is left to more advanced texts. Such an approach allows students with no previous exposure to mass transfer to gain an appreciation of the subject without getting

bogged down in its inherent complexities. Chapter 3 uses both the classical Stefan problem and simple droplet evaporation to illustrate mass-transfer theory.

Onward to the subject of chemistry, Chapters 4 and 5 deal with chemical kinetics by presenting basic concepts (Chapter 4) and discussing chemical mechanisms of importance to combustion and combustion-generated air pollution (Chapter 5). In addition to showing the unavoidable complexity of hydrocarbon combustion chemistry, simple single- and multistep kinetics are presented that can be used to incorporate chemical kinetic effects in simple analyses or models, recognizing, of course, the pitfalls of simplified kinetics.

The interrelation of chemical kinetics and thermodynamic modeling is the subject of Chapter 6. Here, models of constant-pressure and constant-volume reactors, and well-stirred and plug-flow reactors, are developed. These simple models allow a student to grasp clearly how chemical kinetics fits into the bigger picture. This chapter also offers many opportunities for projects involving reactor analysis and/or design. Both the usefulness and uniqueness of this chapter make it a lot of fun.

Having completed our study of thermochemistry, molecular transport, and chemical kinetics, we devote Chapter 7 to the development of the simplified conservation equations for reacting systems used in subsequent chapters. The conserved-scalar concept is introduced here. This chapter is intended to provide a background from which more rigorous developments can be followed. For an undergraduate course, this chapter is clearly optional, and is probably best skipped; however, for an introductory graduate-level course, the chapter may be quite useful.

Elementary treatments of flames are presented in Chapters 8–13. Laminar premixed flames are discussed in Chapter 8, and laminar nonpremixed flames in Chapters 9 and 10; turbulent flames are dealt with in Chapter 12 (premixed) and Chapter 13 (nonpremixed). Topics treated include flame propagation, ignition and quenching, and flame stabilization. Simplified analyses are presented wherever possible, and practical applications emphasized. In all cases, rigorous mathematical development is eschewed in favor of developing the most basic understanding. This approach has the shortcoming of not being able to deal with some phenomena at all, and others, incompletely at best. Usually in these areas, warnings are given and references cited to help the reader who seeks a more complete understanding. Because the wealth of material in these chapters, one can conveniently choose to cover only laminar flames (Chapters 8, 9, and 10) or to focus only on premixed flames (Chapters 8, 11, and 12) or nonpremixed flames (Chapters 9, 10, and 13). Particular emphases on specific applications might suggest which topics to cover.

Linking droplet vaporization theory to practical devices is the subject of the second half of Chapter 10, where a model of a one-dimensional vaporization-controlled combustor is developed. The primary purposes of this section are to reinforce previous concepts of equilibrium and evaporation, help develop students' powers of analysis, and provide ideas and concepts that

can be used in applications-oriented projects. Design projects can easily be fitted into the framework of Chapter 10. Depending on course objectives, this section of Chapter 10 can be treated as optional.

In Chapter 14, burning of solids is introduced, using carbon combustion as the archetypical system. Again, simplified analyses are presented to illuminate heterogeneous combustion concepts and to introduce the ideas of diffusionally and kinetically controlled combustion. This chapter also acquaints the student with coal combustion and its applications.

Omitting a treatment of combustion-generated pollutants would be unthinkable in a modern book on combustion. Chapter 15 focuses on this topic. This chapter introduces the reader to the quantification of emissions and discusses the mechanisms of pollutant formation and their control. This chapter emphasizes applications and should be of particular interest to the intended readers of this book. The placement of this chapter does not suggest its relative importance. Depending on course objectives, the material here could be covered following Chapters 1–6.

Now, in summary, this book attempts to present an introduction to combustion at a level easily comprehended by students nearing the completion of an undergraduate study in mechanical engineering and related fields. Through the use of examples and homework problems, students can develop confidence in their understanding and go on to apply this to various projects and “real world” problems. It is hoped that this text will fit the needs of instructors, and others, who desire simplified and appropriately structured materials for an introductory study of the fascinating field of combustion.

*Stephen R. Turns  
University Park, PA*



## **ACKNOWLEDGMENTS**

Many people contributed their support, time, and psychic energy to either the first or second edition of this book. First, I would like to thank the many reviewers who contributed along the way; in particular, Jim Driscoll, The University of Michigan; Norm Laurendeau, Purdue University; John Lloyd, Michigan State University; Michel Louge, Cornell University; Jon Van Gerpen, Iowa State University; and Carl Wikstrom, University of Arkansas, all provided many useful comments on early drafts of the first edition. Also, the detailed comments of Steve Goebel and Alan Feitelberg, who used various versions of the book in teaching a course at Rensselaer Polytechnic Institute, were extremely valuable. They also generously shared some interesting end-of-chapter problems, which have been incorporated into the second edition. My friend and colleague, Chuck Merkle, continually provided moral support and served as a sounding board for ideas on both content and pedagogy in the first edition. Many students at Penn State contributed in various ways, and I want to acknowledge the particular contributions of Jeff Brown, Jongguen Lee, and Don Michael. Sankaran Venkateswaran deserves special thanks for providing the turbulent jet-flame model calculations, as does Dave Crandall for his assistance with the software for the second edition. A major debt of thanks is owed to Donn Mueller, who painstakingly solved all of the first-edition end-of-chapter problems. Thanks are also due to my dear friend Kathy Wendland for her editorial help with the second edition. I would also like to thank the Gas Research Institute for their support of my research activities through the years, as it was these activities that provided the initial inspiration and impetus to write this book. Invaluable to my efforts throughout was the unflagging support of my family. They tolerated amazingly well the time spent writing on weekends and holiday breaks—time that I could have spent with them. The last acknowledgment is reserved for Cheryl Adams. How either edition could have been completed without her is difficult to conceive. She typed and word-processed the many drafts and created many of the line drawings that appear in the text. Cheryl's skill and dependability contributed greatly to making the writing of this book an enjoyable experience.



# CONTENTS

Preface to the Second Edition	x <sup>i</sup>	Flue- (or Exhaust-) Gas Recirculation	58
Preface to the First Edition	xiii	Summary	66
Acknowledgments	xvii	Nomenclature	66
<b>1 Introduction</b>	1	References	68
Motivation to Study Combustion	1	Review Questions	69
A Definition of Combustion	6	Problems	70
Combustion Modes and Flame Types	6	Appendix 2A — Some Fuel Chemistry	78
Approach to Our Study	8	<b>3 Introduction to Mass Transfer</b>	83
References	8	Overview	83
<b>2 Combustion and Thermochemistry</b>	9	Rudiments of Mass Transfer	83
Overview	9	Mass Transfer Rate Laws	84
Review of Property Relations	9	Species Conservation	90
Extensive and Intensive Properties	9	Some Applications of Mass Transfer	92
Equation of State	10	The Stefan Problem	92
Calorific Equations of State	11	Liquid–Vapor Interface Boundary Conditions	94
Ideal–Gas Mixtures	13	Droplet Evaporation	98
Latent Heat of Vaporization	15	Summary	105
First Law of Thermodynamics	16	Nomenclature	105
First Law—Fixed Mass	16	References	107
First Law—Control Volume	17	Review Questions	107
Reactant and Product Mixtures	18	Problems	108
Stoichiometry	18	<b>4 Chemical Kinetics</b>	111
Absolute (or Standardized) Enthalpy and Enthalpy of Formation	24	Overview	111
Enthalpy of Combustion and Heating Values	27	Global versus Elementary Reactions	112
Adiabatic Flame Temperatures	32	Elementary Reaction Rates	113
Chemical Equilibrium	36	Bimolecular Reactions and Collision Theory	113
Second-Law Considerations	36	Other Elementary Reactions	118
Gibbs Function	38	Rates of Reaction for Multistep Mechanisms	119
Complex Systems	44	Net Production Rates	119
Equilibrium Products of Combustion	45	Compact Notation	121
Full Equilibrium	45	Relation between Rate Coefficients and Equilibrium Constants	122
Water-Gas Equilibrium	47	Steady-State Approximation	125
Pressure Effects	51	The Mechanism for Unimolecular Reactions	126
Some Applications	52	Chain and Chain-Branching Reactions	127
Recuperation and Regeneration	52		

Chemical Time Scales	133
Partial Equilibrium	138
Summary	140
Nomenclature	140
References	141
Questions and Problems	143

## 5 Some Important Chemical Mechanisms 148

Overview	148
The H <sub>2</sub> -O <sub>2</sub> System	148
Carbon Monoxide Oxidation	152
Oxidation of Higher Paraffins	153
General Scheme	153
Global and Quasi-global Mechanism	156
Methane Combustion	158
Complex Mechanism	158
High-Temperature Reaction Pathway Analysis	158
Low-Temperature Reaction Pathway Analysis	166
Oxides of Nitrogen Formation	168
Summary	171
References	172
Questions and Problems	174

## 6 Coupling Chemical and Thermal Analyses of Reacting Systems 178

Overview	178
Constant-Pressure, Fixed-Mass Reactor	179
Application of Conservation Laws	179
Reactor Model Summary	182
Constant-Volume, Fixed-Mass Reactor	182
Application of Conservation Laws	182
Reactor Model Summary	183
Well-Stirred Reactor	189
Application of Conservation Laws	190
Reactor Model Summary	192
Plug-Flow Reactor	200
Assumptions	200
Application of Conservation Laws	201
Applications to Combustion System Modeling	205
Summary	206
Nomenclature	206

References	208
Problems and Projects	209
Appendix 6A—Some Useful Relationships among Mass Fractions, Mole Fractions, Molar Concentrations, and Mixture Molecular Weights	214

## 7 Simplified Conservation Equations for Reacting Flows 215

Overview	215
Overall Mass Conservation (Continuity)	216
Species Mass Conservation (Species Continuity)	218
Multicomponent Diffusion	221
General Formulations	222
Calculation of Multicomponent Diffusion Coefficients	223
Simplified Approach	226
Momentum Conservation	229
One-Dimensional Forms	229
Two-Dimensional Forms	230
Energy Conservation	234
General One-Dimensional Form	234
Shvab-Zeldovich Forms	236
Useful Form for Flame Calculations	240
The Concept of a Conserved Scalar	241
Definition of Mixture Fraction	241
Conservation of Mixture Fraction	242
Conserved Scalar Energy Equation	246
Summary	247

Nomenclature	248
References	249
Review Questions	250
Problems	251

## 8 Laminar Premixed Flames 253

Overview	253
Physical Description	254
Definition	254
Principal Characteristics	254
Typical Laboratory Flames	256
Simplified Analysis	261
Assumptions	262
Conservation Laws	262
Solution	264
Detailed Analysis	269

Governing Equations	269	Structure of CH <sub>4</sub> -Air Flame	350
Boundary Conditions	270	Summary	354
Structure of CH <sub>4</sub> -Air Flame	271	Nomenclature	354
Factors Influencing Flame Velocity and Thickness	274	References	356
Temperature	274	Review Questions	359
Pressure	277	Problems	359
Equivalence Ratio	278		
Fuel Type	278		
Flame Speed Correlations for Selected Fuels	278		
Quenching, Flammability, and Ignition	283		
Quenching by a Cold Wall	284		
Flammability Limits	289		
Ignition	291		
Flame Stabilization	294	Simple Model of Droplet Evaporation	367
Summary	298	Assumptions	370
Nomenclature	299	Gas-Phase Analysis	372
References	300	Droplet Lifetimes	375
Review Questions	302	Simple Model of Droplet Burning	378
Problems	302	Assumptions	379
<b>9 Laminar Diffusion Flames</b>	<b>305</b>	Problem Statement	380
Overview	305	Mass Conservation	381
Nonreacting Constant-Density Laminar Jet	306	Species Conservation	381
Physical Description	306	Energy Conservation	383
Assumptions	307	Summary and Solution	389
Conservation Laws	308	Burning Rate Constant and Droplet Lifetimes	391
Boundary Conditions	308	Extension to Convective Environments	395
Solution	309	Additional Factors	398
Jet Flame Physical Description	314	One-Dimensional Vaporization-Controlled Combustion	399
Simplified Theoretical Descriptions	317	Physical Model	399
Primary Assumptions	318	Assumptions	401
Basic Conservation Equations	318	Mathematical Problem Statement	401
Additional Relations	319	Analysis	402
Conserved Scalar Approach	320	Model Summary	410
Various Solutions	327	Summary	410
Flame Lengths for Circular-Port and Slot Burners	331	Nomenclature	413
Roper's Correlations	331	References	415
Flowrate and Geometry Effects	336	Problems	418
Factors Affecting Stoichiometry	336	Projects	420
Soot Formation and Destruction	343	Appendix 10A—Sir Harry R. Ricardo's Description of Combustion in Diesel Engines	421
Counterflow Flames	347		
Mathematical Description	348		

**11 Introduction to Turbulent Flows 423**

- Overview 423
- Definition of Turbulence 424
- Length Scales in Turbulent Flows 427
  - Four Length Scales 427
  - Turbulence Reynolds Numbers 430
- Analyzing Turbulent Flows 434
  - Reynolds Averaging and Turbulent Stresses 435
  - The Closure Problem 437
- Axisymmetric Turbulent Jet 441
- Beyond the Simplest Model 444
- Summary 445
- Nomenclature 446
- References 447
- Questions and Problems 449

**12 Turbulent Premixed Flames 450**

- Overview 450
- Some Applications 450
  - Spark-Ignition Engines 450
  - Gas-Turbine Engines 451
  - Industrial Gas Burners 452
- Definition of Turbulent Flame Speed 454
- Structure of Turbulent Premixed Flames 456
  - Experimental Observations 456
  - Three Flame Regimes 457
- Wrinkled Laminar-Flame Regime 462
- Distributed-Reaction Regime 466
- Flamelets-in-Eddies Regime 468
- Flame Stabilization 470
  - Bypass Ports 470
  - Burner Tiles 471
  - Bluff Bodies 471
  - Swirl or Jet-Induced Recirculating Flows 473
- Summary 474
- Nomenclature 475
- References 476
- Problems 478

**13 Turbulent Nonpremixed Flames 481**

- Overview 481
- Jet Flames 484

General Observations 484

Simplified Analysis 489

Flame Length 495

Flame Radiation 501

Liftoff and Blowout 504

Other Configurations 509

Summary 512

Nomenclature 513

References 514

Review Questions 517

Problems 517

**14 Burning of Solids 519**

- Overview 519
- Coal-Fired Boilers 520
- Heterogeneous Reactions 520
- Burning of Carbon 522
  - Overview 523
  - One-Film Model 524
  - Two-Film Model 536
  - Particle Burning Times 542
- Coal Combustion 544
- Other Solids 545
- Summary 545
- Nomenclature 546
- References 547
- Questions and Problems 548

**15 Pollutant Emissions 550**

- Overview 550
- Effects of Pollutants 551
- Quantification of Emissions 553
  - Emission Indices 553
  - Corrected Concentrations 555
  - Various Specific Emission Measures 558
- Emissions from Premixed Combustion 559
  - Oxides of Nitrogen 559
  - Carbon Monoxide 567
  - Unburned Hydrocarbons 568
  - Catalytic Aftertreatment 569
  - Particulate Matter 571
- Emissions from Nonpremixed Combustion 572
  - Oxides of Nitrogen 573
  - Unburned Hydrocarbons and Carbon Monoxide 584

Particulate Matter 586  
Oxides of Sulfur 586  
Summary 587  
Nomenclature 588  
References 589  
Questions and Problems 594

## 16 Detonations 598

Overview 598  
Physical Description 598  
    Definition 598  
    Principal Characteristics 599  
One-Dimensional Analysis 600  
    Assumptions 600  
    Conservation Laws 601  
    Combined Relations 602  
Detonation Velocities 609  
Structure of Detonation Waves 613  
Summary 617  
Nomenclature 618  
References 619  
Problems 620

**Appendix A** Selected Thermodynamic Properties of Gases Comprising C–H–O–N System 621

**Appendix B** Fuel Properties 648

**Appendix C** Selected Properties of Air, Nitrogen, and Oxygen 653

**Appendix D** Binary Diffusion Coefficients and Methodology for their Estimation 656

**Appendix E** Generalized Newton's Method for the Solution of Nonlinear Equations 659

**Appendix F** Computer Codes for Equilibrium Products of Hydrocarbon–Air Combustion 662

Index 665



---

**chapter****1**

# Introduction

---

## MOTIVATION TO STUDY COMBUSTION

Combustion and its control are essential to our existence on this planet as we know it. In 1996, approximately 85 percent of the energy used in the United States came from combustion sources [1, 2] (Table 1.1). A quick glance around your local environment shows the importance of combustion in your daily life. More than likely, the heat for your room or home comes directly from combustion (either a gas- or oil-fired furnace or boiler), or, indirectly, through electricity that was generated by burning a fossil fuel. Our nation's electrical needs are met primarily by combustion. Presently, only 32.7 percent of the electrical generating capability is nuclear or hydroelectric, while more than

**Table 1.1** U.S. energy consumption estimates by source and end-use sector, 1996<sup>a</sup>

Sources	Quadrillion BTU (%)	End-use sector	Quadrillion BTU (%)
Coal	20.99 (22.4)	Residential & Commercial	33.88 (36.1)
Natural gas	22.59 (24.1)	Industrial	35.43 (37.8)
Petroleum	35.72 (38.1)	Transportation	24.44 (26.1)
Nuclear electric power	7.17 (7.6)		
Hydroelectric power	3.91 (4.2)		
Other <sup>b</sup>	3.43 (3.7)		
Total <sup>c</sup>	93.81 (100)	Total	93.81 (100)

<sup>a</sup>SOURCE: Data from Ref. [1].

<sup>b</sup>Electricity generated for distribution from wood and waste, geothermal, wind, photovoltaic, and solar thermal energy.

<sup>c</sup>Totals may not equal sum of components due to independent rounding.

**Table 1.2** 1996 U.S. electricity generation [1]

	Billion kW-hr	(%)
Coal	1,735.9	56.4
Nuclear	674.8	21.9
Hydro	331.9	10.8
Gas	263.3	8.6
Oil	67.9	2.2
Other	4.1	0.1
Total	3,077.9	100.0

half is provided by burning coal, as shown in Table 1.2 [1]. Our transportation system relies almost entirely on combustion. In the United States in 1989, ground vehicles and aircraft burned 3991 million barrels of various petroleum products annually [3], or approximately two-thirds of all of the petroleum imported or produced in the United States. Aircraft are entirely powered by on-board fuel burning, and most trains are diesel-engine powered. Recent times have also seen the rise of gasoline-engine driven appliances such as lawn mowers, leaf blowers, chain saws, weed-whackers, and the like.

Industrial processes rely heavily on combustion. Iron, steel, aluminum, and other metals-refining industries employ furnaces for producing the raw product, while heat-treating and annealing furnaces or ovens are used downstream to add value to the raw material as it is converted into a finished product. Other industrial combustion devices include boilers, refinery and chemical fluid heaters, glass melters, solids dryers, surface-coating curing and drying ovens, and organic fume incinerators [4], to give just a few examples. The cement manufacturing industry is a heavy user of heat energy delivered by combustion. Rotary kilns, in which the cement clinker is produced, use over 0.4 quads<sup>1</sup> of energy, or roughly 1.4 percent of the total industrial energy use in the United States in 1989. At present, rotary kilns are rather inefficient devices, and potentially great energy savings could be made by improving these devices [5].

In addition to helping us make products, combustion is used at the other end of the product life cycle as a means of waste disposal. Incineration is an old method, but it is receiving renewed interest because of the limited availability of landfill sites in densely populated areas. Also, incineration is attractive for its ability to dispose of toxic wastes safely. Currently, siting of incinerators is a politically controversial and sensitive issue.


Having briefly reviewed how combustion is beneficial, we now look at the downside issue associated with combustion—environmental pollution. The major pollutants produced by combustion are unburned and partially burned hydrocarbons, nitrogen oxides (NO and NO<sub>2</sub>), carbon monoxide, sulfur oxides

| <sup>1</sup>quad = 1 quadrillion BTU = 10<sup>15</sup> BTU.


**Table 1.3** Typical pollutants of concern from selected sources

Source	Pollutants				
	Unburned Hydrocarbons	Oxides of Nitrogen	Carbon Monoxide	Sulfur Oxides	Particulate Matter
Spark-ignition engines	+	+	+	-	-
Diesel engines	+	+	+	-	+
Gas-turbine engines	+	+	+	-	+
Coal-burning utility boilers	-	+	-	+	+
Gas-burning appliances	-	+	+	-	-

(SO<sub>2</sub> and SO<sub>3</sub>), and particulate matter in various forms. Table 1.3 shows which pollutants are typically associated with various combustion devices and, in most cases, subjected to legislated controls. Primary pollution concerns relate to specific health hazards, smogs, acid rain, global warming, and ozone depletion. National trends for pollutant emissions from 1940–1996, showing the contributions from various sources, are presented in Figs. 1.1 to 1.5 [6]. The impact of the Clean Air Act Amendments of 1970 can be clearly seen in these figures.

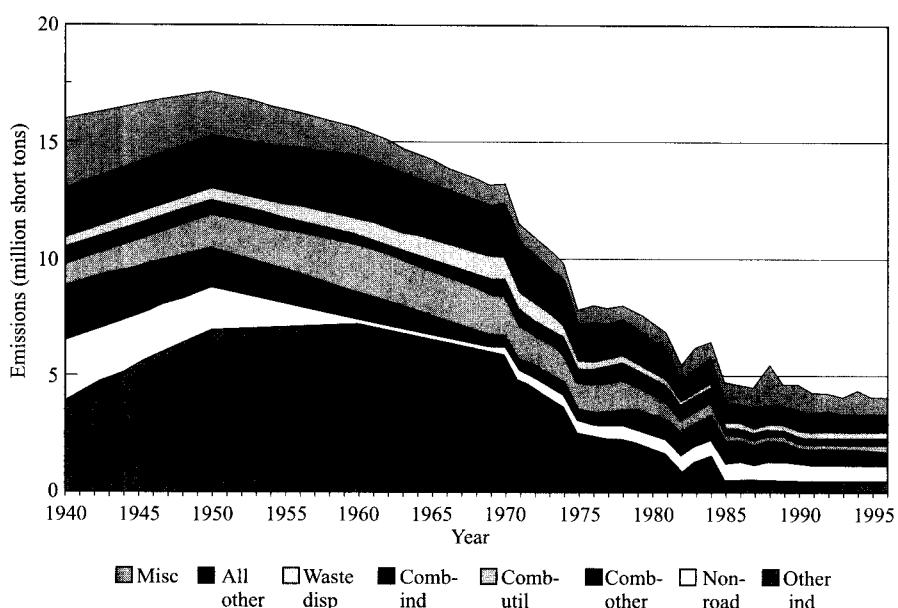
**Figure 1.1** Trends in emissions of particulate matter for the United States, 1940–1996.  
Reading legend left to right corresponds to plotted series top to bottom.

| SOURCE: From Ref. [6].

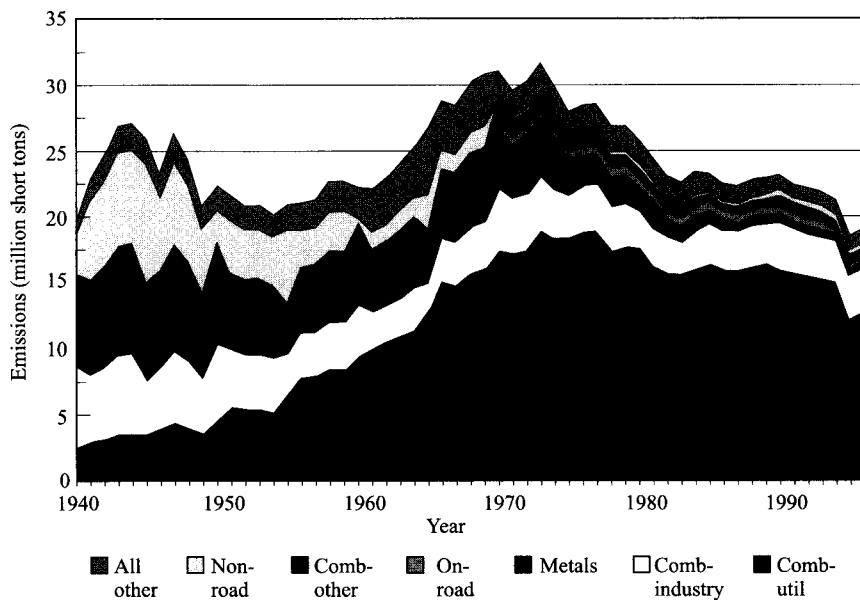


**Figure 1.2** Trends in emissions of sulfur oxides for the United States, 1940–1996. Reading legend left to right corresponds to plotted series top to bottom.

| SOURCE: From Ref. [6].

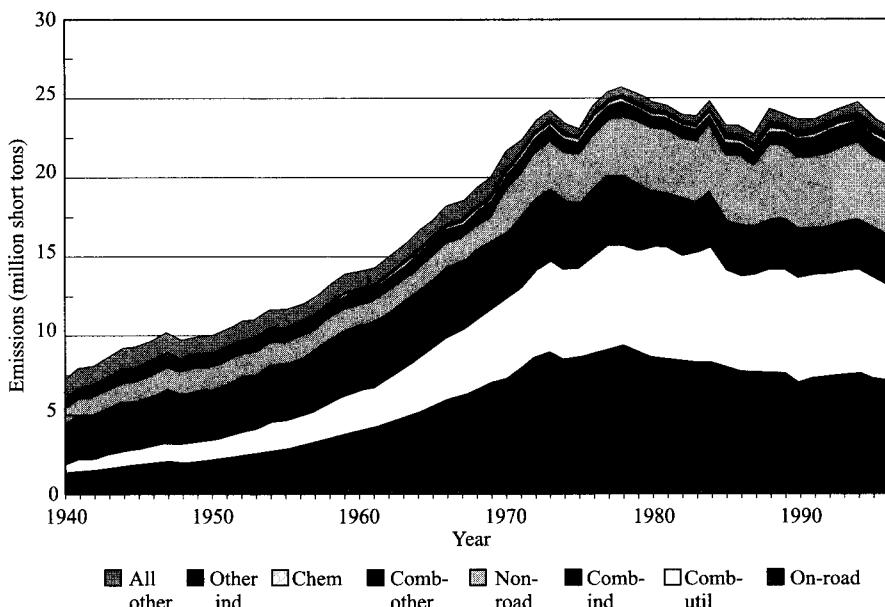


**Figure 1.3** Trends in emissions of nitrogen oxides for the United States, 1940–1996. Reading legend left to right corresponds to plotted series top to bottom.

| SOURCE: From Ref. [6].

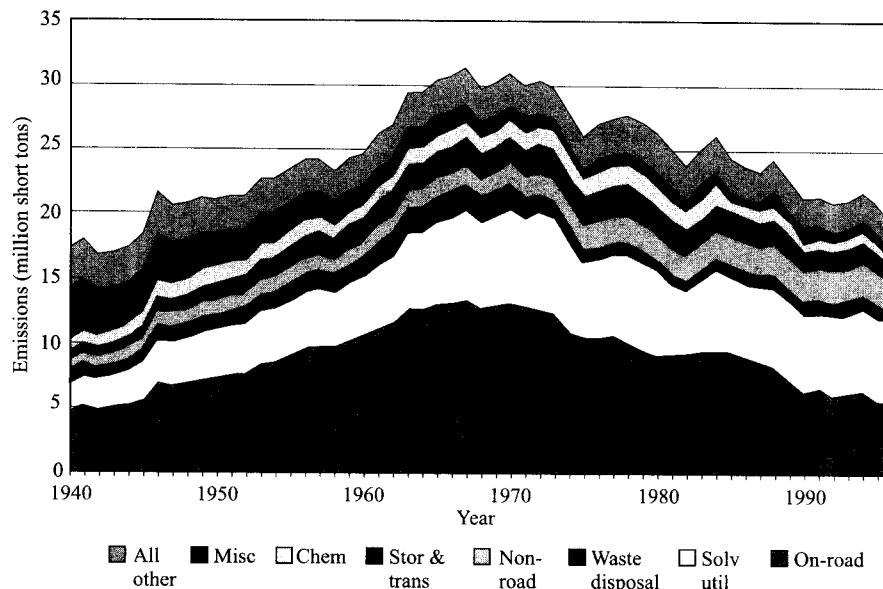

**Figure 1.4** Trends in emissions of volatile organic compounds for the United States, 1940–1996. Reading legend left to right corresponds to plotted series top to bottom.  
| SOURCE: From Ref. [6].

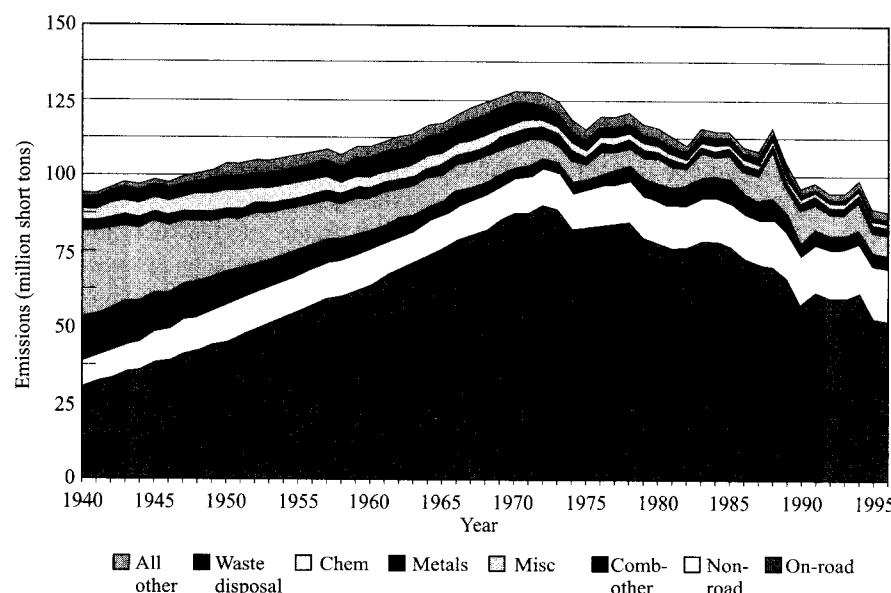

**Figure 1.5** Trends in emissions of carbon monoxide for the United States, 1940–1996. Reading legend left to right corresponds to plotted series top to bottom.  
| SOURCE: From Ref. [6].

Considering the importance of combustion in our society, it is somewhat surprising that very few engineers have more than a cursory knowledge of combustion phenomena. However, with an already demanding curriculum, it is unrealistic to expect the subject to be given more attention than it presently receives. Therefore, engineers with some background in combustion may find many opportunities to use their expertise. Aside from the purely practical motivations for studying combustion, the subject is in itself intellectually stimulating in that it integrates all of the thermal sciences nicely, as well as bringing chemistry into the practical realm of engineering.

---

## A DEFINITION OF COMBUSTION

Webster's Dictionary provides a useful starting point for a definition of **combustion** as "*rapid oxidation generating heat, or both light and heat; also, slow oxidation accompanied by relatively little heat and no light.*" For our purposes, we will restrict the definition to include only the rapid oxidation portion, since most practical combustion devices belong in this realm.


This definition emphasizes the intrinsic importance of chemical reactions to combustion. It also emphasizes why combustion is so very important: combustion transforms energy stored in chemical bonds to heat that can be utilized in a variety of ways. Throughout this book, we illustrate the many practical applications of combustion.

---

## COMBUSTION MODES AND FLAME TYPES

Combustion can occur in either a **flame** or **nonflame** mode, and flames, in turn, are categorized as being either **premixed flames** or **nonpremixed (diffusion) flames**. The difference between flame and nonflame modes of combustion can be illustrated by the processes occurring in a knocking spark-ignition engine (Fig. 1.6). In Fig. 1.6a, we see a thin zone of intense chemical reaction propagating through the unburned fuel-air mixture. The thin reaction zone is what we commonly refer to as a flame. Behind the flame are the hot products of combustion. As the flame moves across the combustion space, the temperature and pressure rise in the unburned gas. Under certain conditions (Fig. 1.6b), rapid oxidation reactions occur at many locations within the unburned gas, leading to very rapid combustion throughout the volume. This essentially volumetric heat release in an engine is called **autoignition**, and the very rapid pressure rise leads to the characteristic sound of engine knock. Knock is undesirable, and a recent challenge to engine designers has been how to minimize the occurrence of knock while operating with lead-free gasolines.<sup>2</sup> In

<sup>2</sup>The discovery that tetraethyl lead reduces knock, made by Thomas Midgley in 1921, allowed engine compression ratios to be increased, and thereby improved efficiency and power.

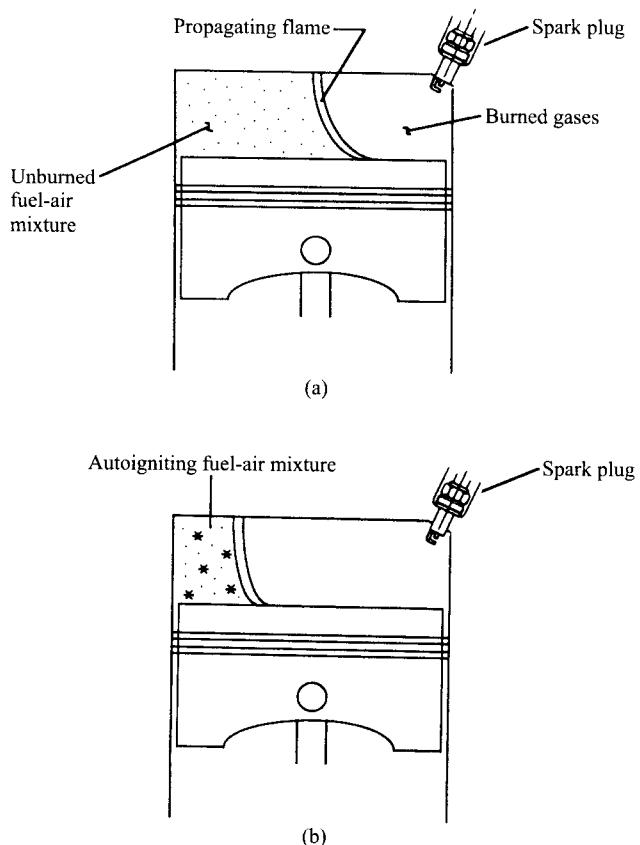

**Figure 1.6** (a) Flame and (b) nonflame modes of combustion in a spark-ignition engine.

compression-ignition or diesel engines, however, autoignition initiates the combustion process by design.

The two classes of flames, premixed and nonpremixed (or diffusion), are related to the state of mixedness of the reactants, as suggested by their names. In a premixed flame, the fuel and the oxidizer are mixed at the molecular level prior to the occurrence of any significant chemical reaction. The spark-ignition engine is an example where premixed flames occur. Contrarily, in a diffusion flame, the reactants are initially separated, and reaction occurs only at the interface between the fuel and oxidizer, where mixing and reaction both take place. An example of a diffusion flame is a simple candle. In practical devices, both types of flames may be present in various degrees. Diesel-engine combustion is generally considered to have significant amounts of both premixed and nonpremixed or diffusion burning. The term “diffusion” applies strictly to the molecular diffusion of chemical species, i.e., fuel molecules diffuse toward the

flame from one direction while oxidizer molecules diffuse toward the flame from the opposite direction. In turbulent nonpremixed flames, turbulent convection mixes the fuel and air together on a macroscopic basis. Molecular mixing at the small scales, i.e., molecular diffusion, then completes the mixing process so that chemical reactions can take place.

---

## APPROACH TO OUR STUDY

We begin our study of combustion by investigating the key physical processes, or sciences, which form the fundamental framework of combustion science: **thermochemistry** in Chapter 2; **molecular transport of mass (and heat)** in Chapter 3; **chemical kinetics** in Chapters 4 and 5; and, in Chapters 6 and 7, the coupling of all of these with **fluid mechanics**. In subsequent chapters, we apply these fundamentals to develop an understanding of laminar premixed flames (Chapter 8) and laminar diffusion flames (Chapters 9 and 10). In these laminar flames, it is relatively easy to see how basic conservation principles can be applied. Most practical combustion devices operate with turbulent flows, however, and the application of theoretical concepts to these is much more difficult. Chapters 11, 12, and 13 deal with turbulent flames and their practical applications. The final chapters concern the combustion of solids, as exemplified by carbon combustion (Chapter 14); pollutant emissions (Chapter 15); and detonations (Chapter 16).

A major goal of this book is to provide a treatment of combustion that is sufficiently simple so that students with no prior introduction to the subject can appreciate both the fundamental and practical aspects. It is hoped, moreover, that as a result, some may be motivated to learn more about this fascinating field, either through more advanced study, or as a practicing engineer.

---

## REFERENCES

1. U.S. Department of Energy, "1996 Annual Energy Review," DOE/EIA-0384(96), 1996. (See also <http://www.eia.doe.gov/bookshelf.html>.)
2. Corporation for Public Access to Science and Technology, <http://www.cpast.org/>.
3. U.S. Department of Energy, "State Energy Data Report, Consumption Estimates 1960–1989," DOE/EIA-0214(89), May 1991.
4. Bluestein, J., "NO<sub>x</sub> Controls for Gas-Fired Industrial Boilers and Combustion Equipment: A Survey of Current Practices," Gas Research Institute, GRI-92/0374, October 1992.
5. Tresouthick, S. W., "The SUBJET Process for Portland Cement Clinker Production," presented at the 1991 Air Products International Combustion Symposium, 24–27 March 1991.
6. U.S. Environmental Protection Agency, "National Air Pollutant Emission Trends, 1940–1996," EPA-454/R-97-011, December 1997.

**2**

# Combustion and Thermochemistry

---

## OVERVIEW

In this chapter, we examine several thermodynamic concepts that are important in the study of combustion. We first briefly review basic property relations for ideal gases and ideal-gas mixtures and the first law of thermodynamics. Although these concepts are likely to be familiar to you from a previous study of thermodynamics, we present them here since they are an integral part of our study of combustion. We next focus on thermodynamic topics related specifically to combustion and reacting systems: concepts and definitions related to element conservation; a definition of enthalpy that accounts for chemical bonds; and first-law concepts defining heat of reaction, heating values, etc., and adiabatic flame temperatures. Chemical equilibrium, a second-law concept, is developed and applied to combustion-product mixtures. We emphasize equilibrium because, in many combustion devices, a knowledge of equilibrium states is sufficient to define many performance parameters of the device; for example, the temperature and major species at the outlet of a steady-flow combustor are likely to be governed by equilibrium considerations. Several examples are presented to illustrate these principles.

---

## REVIEW OF PROPERTY RELATIONS

### Extensive and Intensive Properties

The numerical value of an **extensive property** depends on the amount (mass or number of moles) of the substance considered. Extensive properties are usually denoted with capital letters; for example,  $V$  ( $\text{m}^3$ ) for volume,  $U$  (J) for internal

energy,  $H$  (J) ( $= U + PV$ ) for enthalpy, etc. An **intensive property**, on the other hand, is expressed per unit mass (or per mole), and its numerical value is independent of the amount of substance present. Mass-based intensive properties are generally denoted with lower-case letters; for example,  $v$  ( $\text{m}^3/\text{kg}$ ) for specific volume,  $u$  (J/kg) for specific internal energy,  $h$  (J/kg) ( $= u + Pv$ ) for specific enthalpy, etc. Important exceptions to this lower-case convention are the intensive properties temperature  $T$  and pressure  $P$ . Molar-based intensive properties are indicated in this book with an overbar, e.g.,  $\bar{u}$  and  $\bar{h}$  (J/kmol). Extensive properties are obtained simply from the corresponding intensive properties by multiplying the property value per unit mass (or mole) by the amount of mass (or number of moles); i.e.,

$$\begin{aligned} V &= mv \text{ (or } N\bar{v}) \\ U &= mu \text{ (or } N\bar{u}) \\ H &= mh \text{ (or } N\bar{h}), \text{ etc.} \end{aligned} \quad (2.1)$$

In the following developments, we will use either mass- or molar-based intensive properties, depending on which is most appropriate to a particular situation.

### Equation of State

An **equation of state** provides the relationship among the pressure,  $P$ , temperature,  $T$ , and volume  $V$  (or specific volume  $v$ ) of a substance. For ideal-gas behavior, i.e., a gas that can be modeled by neglecting intermolecular forces and the volume of the molecules, the following equivalent forms of the equation of state apply:

$$PV = NR_u T, \quad (2.2a)$$

$$PV = mRT, \quad (2.2b)$$

$$Pv = RT, \quad (2.2c)$$

or

$$P = \rho RT, \quad (2.2d)$$

where the specific gas constant  $R$  is related to the universal gas constant  $R_u$  ( $= 8315 \text{ J/kmol-K}$ ) and the gas molecular weight  $MW$  by

$$R = R_u/MW. \quad (2.3)$$

The density  $\rho$  in Eqn. 2.2d is the reciprocal of the specific volume ( $\rho = 1/v = m/V$ ). Throughout this book, we assume ideal-gas behavior for all gaseous species and gas mixtures. This assumption is appropriate for nearly all of the systems we wish to consider since the high temperatures associated with combustion generally result in sufficiently low densities for ideal-gas behavior to be a reasonable approximation.

## Calorific Equations of State

Expressions relating internal energy (or enthalpy) to pressure and temperature are called **calorific equations of state**, i.e.,

$$u = u(T, v) \quad (2.4a)$$

$$h = h(T, P). \quad (2.4b)$$

The word “calorific” relates to expressing energy in units of calories, which has been superseded by the use of joules in the SI system.

General expressions for a differential change in  $u$  or  $h$  can be expressed by differentiating Eqns. 2.4a and b:

$$du = \left(\frac{\partial u}{\partial T}\right)_v dT + \left(\frac{\partial u}{\partial v}\right)_T dv \quad (2.5a)$$

$$dh = \left(\frac{\partial h}{\partial T}\right)_P dT + \left(\frac{\partial h}{\partial P}\right)_T dP. \quad (2.5b)$$

In the above, we recognize the partial derivatives with respect to temperature to be the **constant-volume** and **constant-pressure specific heats**, respectively, i.e.,

$$c_v \equiv \left(\frac{\partial u}{\partial T}\right)_v \quad (2.6a)$$

$$c_p \equiv \left(\frac{\partial h}{\partial T}\right)_P. \quad (2.6b)$$


For an ideal gas, the partial derivatives with respect to specific volume,  $(\partial u / \partial v)_T$ , and pressure,  $(\partial h / \partial P)_T$ , are zero. Using this knowledge, we integrate Eqn. 2.5, substituting Eqn. 2.6 to provide the following ideal-gas calorific equations of state:

$$u(T) - u_{\text{ref}} = \int_{T_{\text{ref}}}^T c_v dT \quad (2.7a)$$


$$h(T) - h_{\text{ref}} = \int_{T_{\text{ref}}}^T c_p dT. \quad (2.7b)$$

In a subsequent section, we will define an appropriate reference state that accounts for the different bond energies of various compounds.

For both real **and** ideal gases, the specific heats  $c_v$  and  $c_p$  are generally functions of temperature. This is a consequence of the internal energy of a molecule consisting of three components: translational, vibrational, and rotational; and the fact that, as a consequence of quantum theory, the vibrational and rotational energy storage modes become increasingly active as temperature increases. Figure 2.1 schematically illustrates these three energy storage modes by contrasting a monatomic species, whose internal energy consists solely of translational kinetic energy, and a diatomic molecule, which stores energy in a

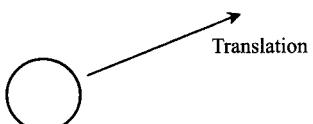

(a) Monatomic species

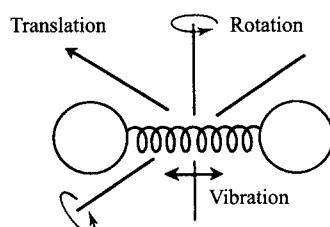


(b) Diatomic species

**Figure 2.1** (a) The internal energy of monatomic species consists only of translational (kinetic) energy, while (b) a diatomic species' internal energy results from translation together with energy from vibration (potential and kinetic) and rotation (kinetic).

vibrating chemical bond, represented as a spring between the two nuclei, and by rotation about two orthogonal axes, as well as possessing kinetic energy from translation. With these simple models (Fig. 2.1), we would expect the specific heats of diatomic molecules to be greater than monatomic species. In general, the more complex the molecule, the greater its molar specific heat. This can be seen clearly in Fig. 2.2, where molar specific heats for a number of combustion product species are shown as functions of temperature. As a group, the triatomics have the greatest specific heats, followed by the diatomics, and, lastly, the monatomics. Note that the triatomic molecules also have a greater temperature dependence than the diatomics, a consequence of the greater number of vibrational and rotational modes that are available to become activated as temperature is increased. In comparison, the monatomic species have nearly constant specific heats over a wide range of temperatures; in fact, the H-atom specific heat is constant ( $\bar{c}_p = 20.786 \text{ kJ/kmol-K}$ ) from 200 K to 5000 K.

Constant-pressure molar specific heats are tabulated as a function of temperature for various species in Tables A.1 to A.12 in Appendix A. Also provided in Appendix A are the curvefit coefficients, taken from the Chemkin thermodynamic database [1], which were used to generate the tables. These coefficients can be easily used with spreadsheet software to obtain  $\bar{c}_p$  values at any temperature within the given temperature range.

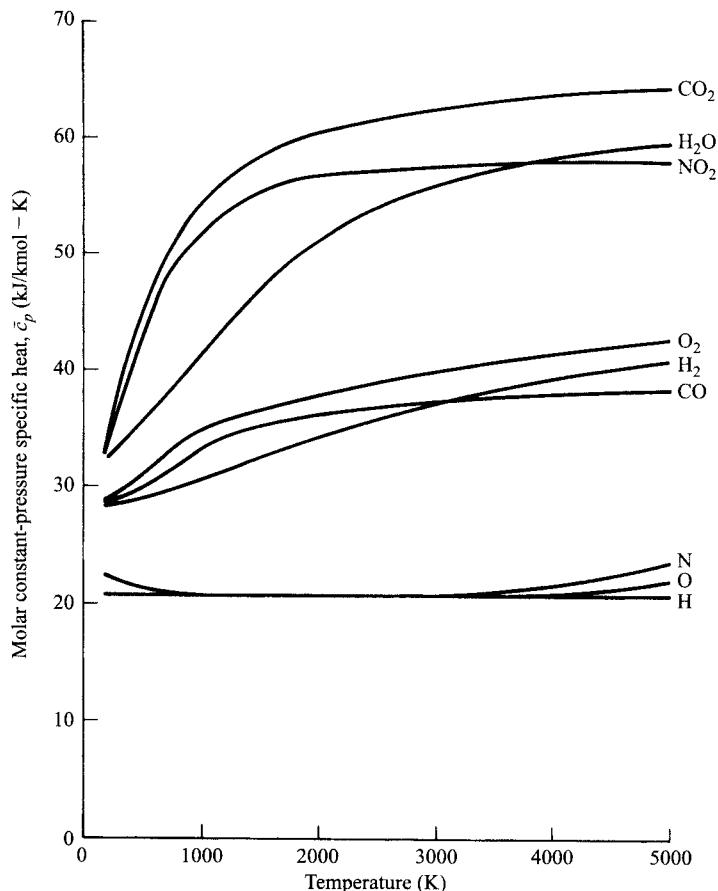

**Figure 2.2** Molar constant-pressure specific heats as functions of temperature for monatomic (H, N, and O), diatomic (CO, H<sub>2</sub>, and O<sub>2</sub>), and triatomic (CO<sub>2</sub>, H<sub>2</sub>O, and NO<sub>2</sub>) species. Values are from Appendix A.

## Ideal-Gas Mixtures

Two important and useful concepts used to characterize the composition of a mixture are the constituent mole fractions and mass fractions. Consider a multicomponent mixture of gases composed of  $N_1$  moles of species 1,  $N_2$  moles of species 2, etc. The **mole fraction of species  $i$** ,  $\chi_i$ , is defined as the fraction of the total number of moles in the system that are species  $i$ ; i.e.,

$$\chi_i \equiv \frac{N_i}{N_1 + N_2 + \dots + N_i + \dots} = \frac{N_i}{N_{\text{tot}}} . \quad (2.8)$$

Similarly, the **mass fraction of species  $i$** ,  $Y_i$ , is the amount of mass of species  $i$  compared with the total mixture mass:

$$Y_i \equiv \frac{m_i}{m_1 + m_2 + \dots + m_i + \dots} = \frac{m_i}{m_{\text{tot}}}. \quad (2.9)$$

Note that, by definition, the sum of all the constituent mole (or mass) fractions must be unity, i.e.,

$$\sum_i \chi_i = 1 \quad (2.10\text{a})$$

$$\sum_i Y_i = 1. \quad (2.10\text{b})$$

Mole fractions and mass fractions are readily converted from one to another using the molecular weights of the species of interest and of the mixture:

$$Y_i = \chi_i MW_i / MW_{\text{mix}} \quad (2.11\text{a})$$

$$\chi_i = Y_i MW_{\text{mix}} / MW_i. \quad (2.11\text{b})$$

The **mixture molecular weight**,  $MW_{\text{mix}}$ , is easily calculated from a knowledge of either the species mole or mass fractions:

$$MW_{\text{mix}} = \sum_i \chi_i MW_i \quad (2.12\text{a})$$

$$MW_{\text{mix}} = \frac{1}{\sum_i (Y_i / MW_i)}. \quad (2.12\text{b})$$

Species mole fractions are also used to determine corresponding species partial pressures. The **partial pressure of the  $i$ th species**,  $P_i$ , is the pressure of the  $i$ th species if it were isolated from the mixture at the same temperature and volume as the mixture. For ideal gases, the mixture pressure is the sum of the constituent partial pressures:

$$P = \sum_i P_i. \quad (2.13)$$

The partial pressure can be related to the mixture composition and total pressure as

$$P_i = \chi_i P. \quad (2.14)$$

For ideal-gas mixtures, many **mass- (or molar-) specific mixture properties** are calculated simply as mass (or mole) fraction weighted sums of the individual species-specific properties. For example, mixture enthalpies are calculated as

$$h_{\text{mix}} = \sum_i Y_i h_i \quad (2.15\text{a})$$

$$\bar{h}_{\text{mix}} = \sum_i \chi_i \bar{h}_i. \quad (2.15\text{b})$$

Other frequently used properties that can be treated in this same manner are internal energies,  $u$  and  $\bar{u}$ . Note that, with our ideal-gas assumption, neither the pure-species properties ( $u_i$ ,  $\bar{u}_i$ ,  $h_i$ ,  $\bar{h}_i$ ) nor the mixture properties depend on pressure.

The mixture entropy also is calculated as a weighted sum of the constituents:

$$s_{\text{mix}}(T, P) = \sum_i Y_i s_i(T, P_i) \quad (2.16\text{a})$$

$$\bar{s}_{\text{mix}}(T, P) = \sum_i \chi_i \bar{s}_i(T, P_i). \quad (2.16\text{b})$$

In this case, however, the pure-species entropies ( $s_i$  and  $\bar{s}_i$ ) depend on the species partial pressures as indicated in Eqn. 2.16. The constituent entropies in Eqn. 2.16 can be evaluated from standard-state ( $P_{\text{ref}} \equiv P^o = 1 \text{ atm}$ ) values as

$$s_i(T, P_i) = s_i(T, P_{\text{ref}}) - R \ln \frac{P_i}{P_{\text{ref}}} \quad (2.17\text{a})$$

$$\bar{s}_i(T, P) = \bar{s}_i(T, P_{\text{ref}}) = R_u \ln \frac{P_i}{P_{\text{ref}}}. \quad (2.17\text{b})$$

Standard-state molar specific entropies are tabulated in Appendix A for many species of interest to combustion.

## Latent Heat of Vaporization

In many combustion processes, a liquid–vapor phase change is important. For example, a liquid fuel droplet must first vaporize before it can burn; and, if cooled sufficiently, water vapor can condense from combustion products. Formally, we define the **latent heat vaporization**,  $h_{fg}$ , as the heat required in a constant-pressure process to completely vaporize a unit mass of liquid at a given temperature, i.e.,

$$h_{fg}(T, P) \equiv h_{\text{vapor}}(T, P) - h_{\text{liquid}}(T, P), \quad (2.18)$$

where  $T$  and  $P$  are the corresponding saturation temperature and pressure, respectively. The latent heat of vaporization is also known as the **enthalpy of vaporization**. Latent heats of vaporization for various fuels at their normal (1 atm) boiling points are tabulated in Table B.1 (Appendix B).

The latent heat of vaporization at a given saturation temperature and pressure is frequently used with the **Clausius–Clapeyron equation** to estimate saturation pressure variation with temperature:

$$\frac{dP_{\text{sat}}}{P_{\text{sat}}} = \frac{h_{fg}}{R} \frac{dT_{\text{sat}}}{T_{\text{sat}}^2}. \quad (2.19)$$

This equation assumes that the specific volume of the liquid phase is negligible compared with that of the vapor and that the vapor behaves as an ideal gas. Assuming  $h_{fg}$  is constant, Eqn. 2.19 can be integrated from  $(P_{\text{sat},1}, T_{\text{sat},1})$  to  $(P_{\text{sat},2}, T_{\text{sat},2})$  in order to permit, for example,  $P_{\text{sat},2}$  to be estimated from a knowledge of  $P_{\text{sat},1}$ ,  $T_{\text{sat},1}$ , and  $T_{\text{sat},2}$ . We will employ this approach in our discussion of droplet evaporation (Chapter 3) and combustion (Chapter 10).

## FIRST LAW OF THERMODYNAMICS

### First Law—Fixed Mass

Conservation of energy is the fundamental principle embodied in the first law of thermodynamics. For a **fixed mass**, i.e., a **system**, (Fig. 2.3a), energy conservation is expressed for a finite change between two states, 1 and 2, as


$$_1Q_2 - _1W_2 = \Delta E_{1-2} \quad (2.20)$$

Head added to system in going from state 1 to state 2	Work done by system on surroundings in going from state 1 to state 2	Change in total system energy in going from state 1 to state 2
---	--	--

Both  $_1Q_2$  and  $_1W_2$  are path functions and occur only at the system boundaries;  $\Delta E_{1-2} (\equiv E_2 - E_1)$  is the change in the total energy of the system, which is the sum of the internal, kinetic, and potential energies, i.e.,

$$E = m(u + \frac{1}{2}v^2 + gz). \quad (2.21)$$

Mass-specific system internal energy	Mass-specific system kinetic energy	Mass-specific system potential energy
---	--	--

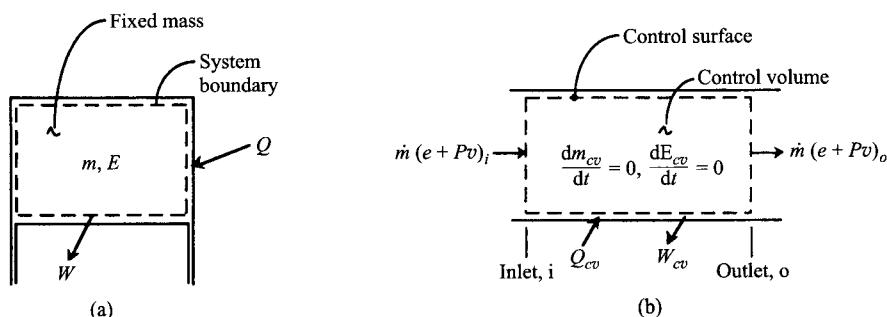

**Figure 2.3** (a) Schematic of fixed-mass system with moving boundary above piston. (b) Control volume with fixed boundaries and steady flow.

The system energy is a state variable and, as such,  $\Delta E$  does not depend on the path taken to execute a change in state. Equation 2.20 can be converted to unit mass basis or expressed to represent an instant in time. These forms are

$$1q_2 - 1w_2 = \Delta e_{1-2} = e_2 - e_1 \quad (2.22)$$

and

$\dot{Q}$	-	$\dot{W}$	=	$dE/dt$	$(2.23)$
Instantaneous rate of heat transferred into system		Instantaneous rate of work done by system, or power		Instantaneous time rate of change of system energy	

or

$$\dot{q} - \dot{w} = de/dt, \quad (2.24)$$

where lower-case letters are used to denote mass-specific quantities, e.g.,  $e \equiv E/m$ .

## First Law—Control Volume

We next consider a control volume, illustrated in Fig. 2.3b, in which fluid may flow across the boundaries. The steady-state, steady-flow (SSSF) form of the first law is particularly useful for our purposes and should be reasonably familiar to you from previous studies of thermodynamics [2–4]. Because of its importance, however, we present a brief discussion here. The SSSF first law is expressed as

$\dot{Q}_{cv}$	-	$\dot{W}_{cv}$	=	$\dot{m}e_o$	-	$\dot{m}e_i$	+	$\dot{m}(P_o v_o - P_i v_i)$ ,	$(2.25)$
Rate of heat transferred across the control surface from the surroundings, to the control volume		Rate of all work done by the control volume, including shaft work, but excluding flow work		Rate of energy flowing out of the control volume		Rate of energy flowing into the control volume		Net rate of work associated with pressure forces where fluid crosses the control surface, flow work	

where the subscripts  $o$  and  $i$  denote the outlet and inlet, respectively, and  $\dot{m}$  is the mass flowrate. Before rewriting Eqn. 2.25 in a more convenient form, it is appropriate to list the principal assumptions embodied in this relation:

1. *The control volume is fixed relative to the coordinate system.* This eliminates any work interactions associated with a moving boundary, as well as eliminating the need to consider changes in the kinetic and potential energies of the control volume itself.
2. *The properties of the fluid at each point within the control volume, or on the control surface, do not vary with time.* This assumption allows us to treat all processes as steady.

3. *Fluid properties are uniform over the inlet and outlet flow areas.* This allows us to use single values, rather than integrating over the area, for the inlet and exit stream properties.
4. *There is only one inlet and one exit stream.* This assumption is invoked to keep the final result in a simple form and can be easily relaxed to allow multiple inlet/exit streams.

The specific energy  $e$  of the inlet and outlet streams consists of the specific internal, kinetic, and potential energies, i.e.,

$$e = u + \frac{1}{2}v^2 + gz, \quad (2.26)$$

Total energy per unit mass	Internal energy per unit mass	Kinetic energy per unit mass	Potential energy per unit mass
-------------------------------	----------------------------------	---------------------------------	-----------------------------------

where  $v$  and  $z$  are the velocity and elevation, respectively, of the stream where it crosses the control surface.

The pressure–specific volume product terms associated with the flow work in Eq. 2.25 can be combined with the specific internal energy of Eqn. 2.26, which we recognize as the useful property, enthalpy:

$$h \equiv u + Pv = u + P/\rho. \quad (2.27)$$

Combining Eqns. 2.25–2.27, and rearranging, yields our final form of energy conservation for a control volume:

$$\dot{Q}_{cv} - \dot{W}_{cv} = \dot{m}[(h_o - h_i) + \frac{1}{2}(v_o^2 - v_i^2) + g(z_o - z_i)]. \quad (2.28)$$

The first law can also be expressed on a mass-specific basis by dividing Eqn. 2.28 by the mass flowrate  $\dot{m}$ , i.e.,

$$q_{cv} - w_{cv} = h_o - h_i + \frac{1}{2}(v_o^2 - v_i^2) + g(z_o - z_i). \quad (2.29)$$


In Chapter 7, we present more complete expressions of energy conservation that are subsequently simplified for our objectives in this book. For the time being, however, Eqn. 2.28 suits our needs.

## REACTANT AND PRODUCT MIXTURES

### Stoichiometry

The **stoichiometric** quantity of oxidizer is just that amount needed to completely burn a quantity of fuel. If more than a stoichiometric quantity of oxidizer is supplied, the mixture is said to be fuel lean, or just **lean**; while supplying less than the stoichiometric oxidizer results in a fuel-rich, or **rich** mixture. The stoichiometric oxidizer–(or air–) fuel ratio (mass) is determined by writing simple atom balances, assuming that the fuel reacts to form an ideal

set of products. For a hydrocarbon fuel given by  $C_xH_y$ , the stoichiometric relation can be expressed as

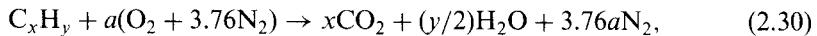

where

$$a = x + y/4. \quad (2.31)$$

For simplicity, we assume throughout this book that the simplified composition for air is 21 percent  $O_2$  and 79 percent  $N_2$  (by volume), i.e., that for each mole of  $O_2$  in air, there are 3.76 moles of  $N_2$ .

The **stoichiometric air-fuel ratio** can be found as

$$(A/F)_{\text{stoic}} = \left( \frac{m_{\text{air}}}{m_{\text{fuel}}} \right)_{\text{stoic}} = \frac{4.76a}{1} \frac{MW_{\text{air}}}{MW_{\text{fuel}}}, \quad (2.32)$$

where  $MW_{\text{air}}$  and  $MW_{\text{fuel}}$  are the molecular weights of the air and fuel, respectively. Table 2.1 shows stoichiometric air-fuel ratios for methane and solid carbon. Also shown is the oxygen-fuel ratio for combustion of  $H_2$  in pure  $O_2$ . For all of these systems, we see that there is many times more oxidizer than fuel.

**Table 2.1** Some combustion properties of methane, hydrogen, and solid carbon for reactants at 298 K

	$\Delta h_R$ (kJ/kg <sub>fuel</sub> )	$\Delta h_R$ (kJ/kg <sub>mix</sub> )	$(O/F)_{\text{stoic}}^{\text{a}}$ (kg/kg)	$T_{ad,eq}$ (K)
CH <sub>4</sub> + air	-55,528	-3,066	17.11	2,226
H <sub>2</sub> + O <sub>2</sub>	-142,919	-15,880	8.0	3,079
C(s) + air	-32,794	-2,645	11.4	2,301

<sup>a</sup>O/F is the oxidizer-fuel ratio, where for combustion with air, the air is the oxidizer not just the oxygen in the air.

The **equivalence ratio**,  $\Phi$ , is commonly used to indicate quantitatively whether a fuel-oxidizer mixture is rich, lean, or stoichiometric. The equivalence ratio is defined as

$$\Phi = \frac{(A/F)_{\text{stoic}}}{(A/F)} = \frac{(F/A)}{(F/A)_{\text{stoic}}} \quad (2.33a)$$

From this definition, we see that for fuel-rich mixtures,  $\Phi > 1$ , and for fuel-lean mixtures,  $\Phi < 1$ . For a stoichiometric mixture,  $\Phi$  equals unity. In many combustion applications, the equivalence ratio is the single most important factor in determining a system's performance. Other parameters frequently used to define relative stoichiometry are **percent stoichiometric air**, which relates to the equivalence ratio as

$$\% \text{ stoichiometric air} = \frac{100\%}{\Phi} \quad (2.33b)$$

and **percent excess air**, or

$$\% \text{ excess air} = \frac{(1 - \Phi)}{\Phi} \cdot 100\%. \quad (2.33c)$$

**Example 2.1**

A small, low-emission, stationary gas-turbine engine (see Fig. 2.4) operates at full load (3950 kW) at an equivalence ratio of 0.286 with an air flowrate of 15.9 kg/s. The equivalent composition of the fuel (natural gas) is  $\text{C}_{1.16}\text{H}_{4.32}$ . Determine the fuel mass flowrate and the operating air-fuel ratio for the engine.

**Solution**

Given:  $\Phi = 0.286$ ,  $MW_{\text{air}} = 28.85$ ,  
 $\dot{m}_{\text{air}} = 15.9 \text{ kg/s}$ ,  $MW_{\text{fuel}} = 1.16(12.01) + 4.32(1.008) = 18.286$   
Find:  $\dot{m}_{\text{fuel}}$  and  $(A/F)$ .

We will proceed by first finding  $(A/F)$  and then  $\dot{m}_{\text{fuel}}$ . The solution requires only the application of definitions expressed in Eqns. 2.32 and 2.33, i.e.,

$$(A/F)_{\text{stoic}} = 4.76a \frac{MW_{\text{air}}}{MW_{\text{fuel}}},$$

where  $a = x + y/4 = 1.16 + 4.32/4 = 2.24$ . Thus,

$$(A/F)_{\text{stoic}} = 4.76(2.24) \frac{28.85}{18.286} = 16.82,$$

and, from Eqn. 2.33,

$$(A/F) = \frac{(A/F)_{\text{stoic}}}{\Phi} = \frac{16.82}{0.286} = [58.8]$$

Since  $(A/F)$  is the ratio of the air flowrate to the fuel flowrate,

$$[\dot{m}_{\text{fuel}}] = \frac{\dot{m}_{\text{air}}}{(A/F)} = \frac{15.9 \text{ kg/s}}{58.8} = [0.270 \text{ kg/s}]$$

**Comment**

Note that even at full power, a large quantity of excess air is supplied to the engine.


**Example 2.2**

A natural gas-fired industrial boiler (see Fig. 2.5) operates with an oxygen concentration of 3 mole percent in the flue gases. Determine the operating air-fuel ratio and the equivalence ratio. Treat the natural gas as methane.

**Solution**


Given:  $x_{\text{O}_2} = 0.03$ ,  $MW_{\text{fuel}} = 16.04$ ,  
 $MW_{\text{air}} = 28.85$ .  
Find:  $(A/F)$  and  $\Phi$ .

We can use the given  $\text{O}_2$  mole fraction to find the air-fuel ratio by writing an overall combustion equation assuming “complete combustion,” i.e., no dissociation (all fuel C is found in  $\text{CO}_2$  and all fuel H is found in  $\text{H}_2\text{O}$ ):

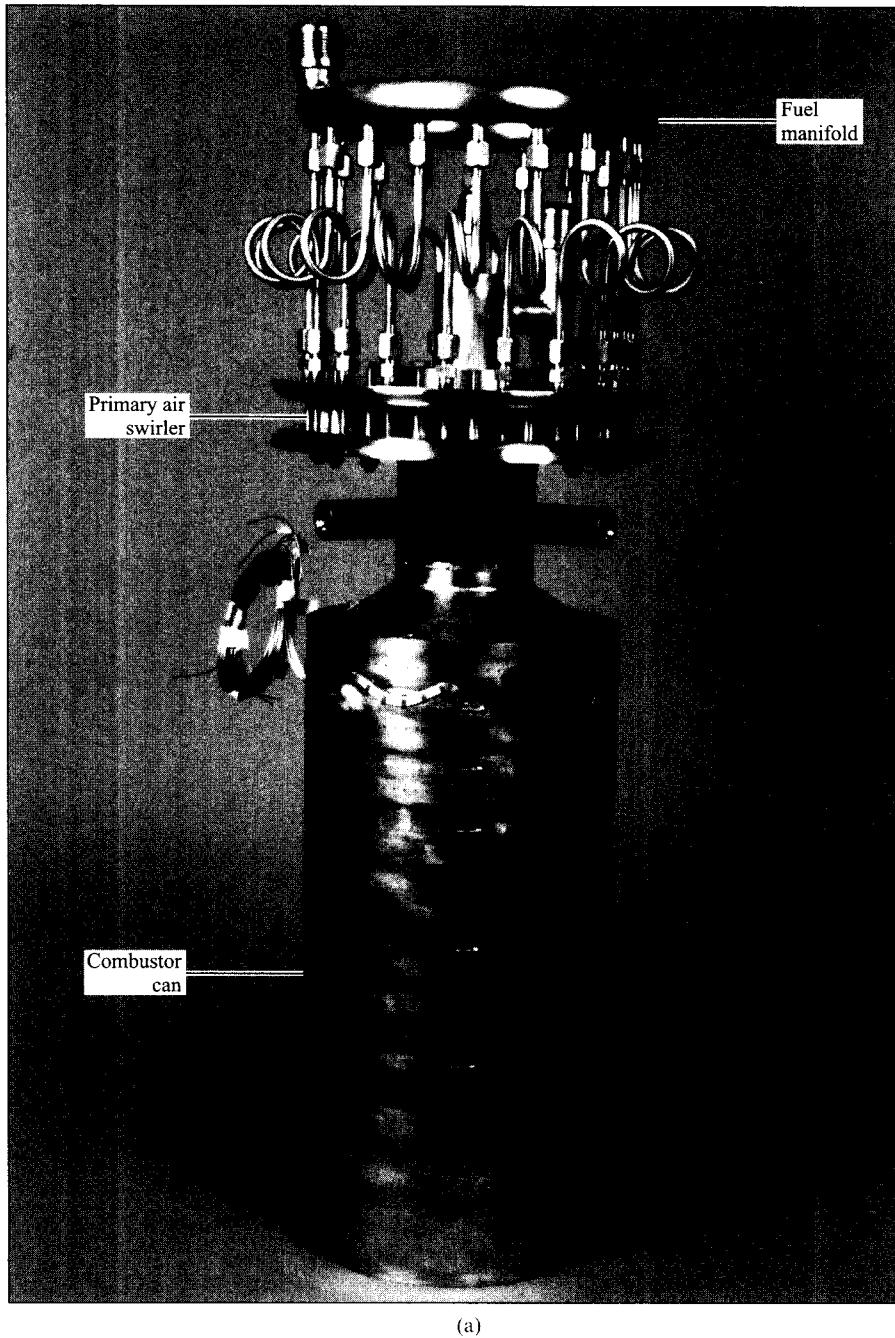


**Figure 2.4** (a) Experimental low- $\text{NO}_x$  gas-turbine combustor can and (b)(c) fuel and air mixing system. Eight cans are used in a 3950-kW engine.


SOURCE: Copyright © 1987, Electric Power Research Institute, EPRI AP-5347,  $\text{NO}_x$  Reduction for Small Gas Turbine Power Plants; reprinted with permission.

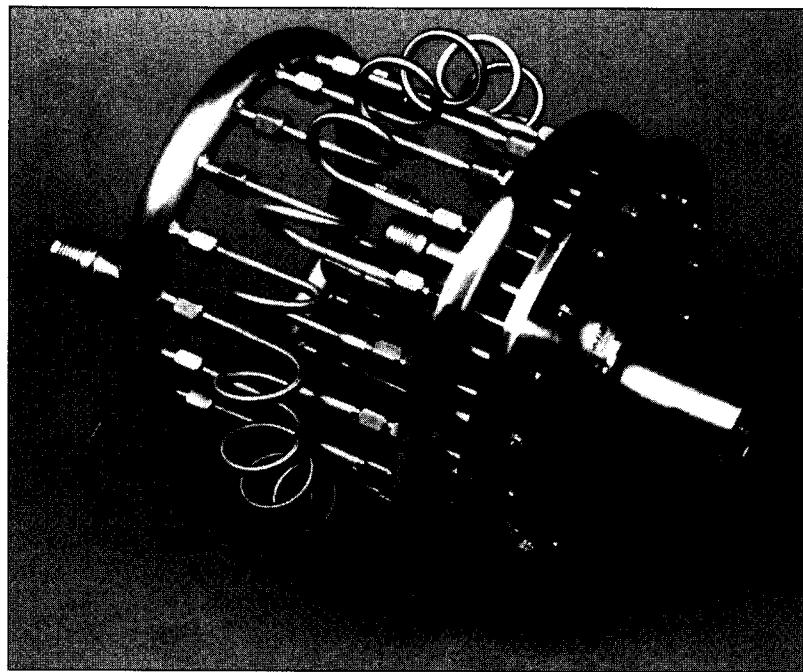

(b)

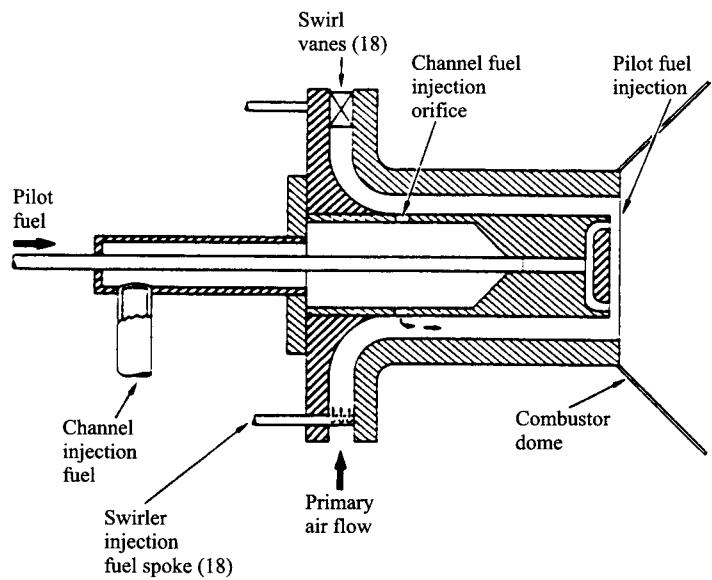

(c)

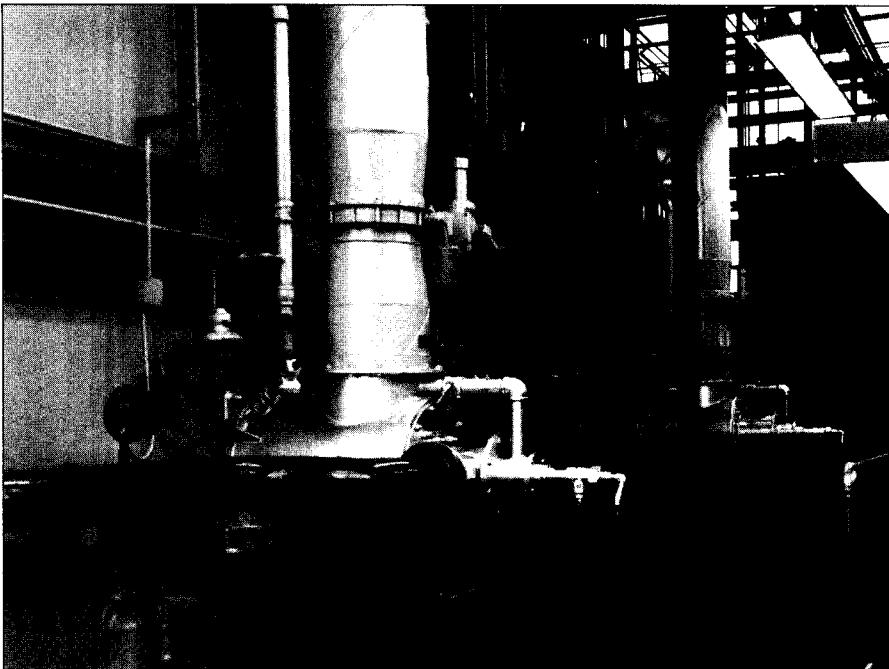

**Figure 2.5** Two 10-MW (34 million BTU/hr) natural-gas burners fire into a boiler combustion chamber 3 m deep. Air enters the burners through the large vertical pipes, while the natural gas enters through the horizontal pipe on the left.

| SOURCE: Courtesy of North American Manufacturing Co.



where  $a$  and  $b$  are related from conservation of O atoms,

$$2a = 2 + 2 + 2b$$

or

$$b = a - 2.$$

From the definition of a mole fraction (Eqn. 2.8),

$$\chi_{\text{O}_2} = \frac{N_{\text{O}_2}}{N_{\text{mix}}} = \frac{b}{1 + 2 + b + 3.76a} = \frac{a - 2}{1 + 4.76a}.$$

Substituting the known value of  $\chi_{\text{O}_2}$  (= 0.03) and then solving for  $a$  yields

$$0.03 = \frac{a - 2}{1 + 4.76a}$$

or

$$a = 2.368.$$

The mass air-fuel ratio, in general, is expressed as

$$(A/F) = \frac{N_{\text{air}}}{N_{\text{fuel}}} \frac{MW_{\text{air}}}{MW_{\text{fuel}}},$$

so

$$(A/F) = \frac{4.76a}{1} \frac{MW_{\text{air}}}{MW_{\text{fuel}}}$$

$$\boxed{(A/F)} = \frac{4.76(2.368)(28.85)}{16.04} = \boxed{20.3}$$

To find  $\Phi$ , we need to determine  $(A/F)_{\text{stoic}}$ . From Eq. 2.31,  $a = 2$ ; hence,

$$(A/F)_{\text{stoic}} = \frac{4.76(2)28.85}{16.04} = 17.1$$

Applying the definition of  $\Phi$  (Eqn. 2.33),

$$\boxed{\Phi} = \frac{(A/F)_{\text{stoic}}}{(A/F)} = \frac{17.1}{20.3} = \boxed{0.84}$$

#### Comment

In the solution, we assumed that the  $O_2$  mole fraction was on a “wet basis,” i.e., moles of  $O_2$  per mole of moisture-containing flue gases. Frequently, in the measurement of exhaust species, moisture is removed to prevent condensation in the analyzers; thus,  $x_{O_2}$  can also be reported on a “dry basis” (see Chapter 15).

## Absolute (or Standardized) Enthalpy and Enthalpy of Formation

In dealing with chemically reacting systems, the concept of absolute enthalpies is extremely valuable. For any species, we can define an **absolute (or standardized) enthalpy** that is the sum of an enthalpy that takes into account the energy associated with chemical bonds (or lack thereof), the **enthalpy of formation**,  $h_f$ , and an enthalpy that is associated only with the temperature, the **sensible enthalpy change**,  $\Delta h_s$ . Thus, we can write the molar absolute enthalpy for species  $i$  as

$$\bar{h}_i(T) = \bar{h}_{f,i}^o(T_{\text{ref}}) + \Delta \bar{h}_{s,i}(T_{\text{ref}}), \quad (2.34)$$

Absolute enthalpy at temperature $T$	$\bar{h}_{f,i}^o(T_{\text{ref}})$ Enthalpy of formation at standard reference state ( $T_{\text{ref}}, P^o$ )	$+ \Delta \bar{h}_{s,i}(T_{\text{ref}})$ Sensible enthalpy change in going from $T_{\text{ref}}$ to $T$
---	--	--

where  $\Delta \bar{h}_{s,i} \equiv \bar{h}_i(T) - \bar{h}_{f,i}^o(T_{\text{ref}})$ .

To make practical use of Eqn. 2.34, it is necessary to define a **standard reference state**. We employ a standard-state temperature,  $T_{\text{ref}} = 25^\circ\text{C}$  (298.15 K), and standard-state pressure,  $P_{\text{ref}} = P^o = 1 \text{ atm}$  (101,325 Pa), consistent with the Chemkin [1] and NASA [5] thermodynamic databases. Furthermore, we adopt the convention that enthalpies of formation are zero for the elements in their naturally occurring state at the reference state

temperature and pressure. For example, at 25°C and 1 atm, oxygen exists as diatomic molecules; hence,

$$(\bar{h}_{f,O_2}^o)_{298} = 0,$$


where the superscript *o* is used to denote that the value is for the standard-state pressure.

To form oxygen atoms at the standard state requires the breaking of a rather strong chemical bond. The bond dissociation energy for O<sub>2</sub> at 298 K is 498,390 kJ/kmol<sub>O<sub>2</sub></sub>. Breaking this bond creates two O atoms; thus, the enthalpy of formation for atomic oxygen is half the value of the O<sub>2</sub> bond dissociation energy, i.e.,

$$(\bar{h}_{f,O}^o) = 249,195 \text{ kJ/kmol}_O.$$

Thus, enthalpies of formation have a clear physical interpretation as the net change in enthalpy associated with breaking the chemical bonds of the standard state elements and forming new bonds to create the compound of interest.

Representing the absolute enthalpy graphically provides a useful way to understand and use this concept. In Fig. 2.6, the absolute enthalpies of atomic oxygen (O) and diatomic oxygen (O<sub>2</sub>) are plotted versus temperature starting from absolute zero. At 298.15 K, we see that  $\bar{h}_{O_2}$  is zero (by definition of the standard-state reference condition) and the absolute enthalpy of atomic oxygen equals its enthalpy of formation, since the sensible enthalpy at 298.15 K is zero. At the temperature indicated (4000 K), we see the additional sensible enthalpy contribution to the absolute enthalpy. In Appendix A, enthalpies of formation

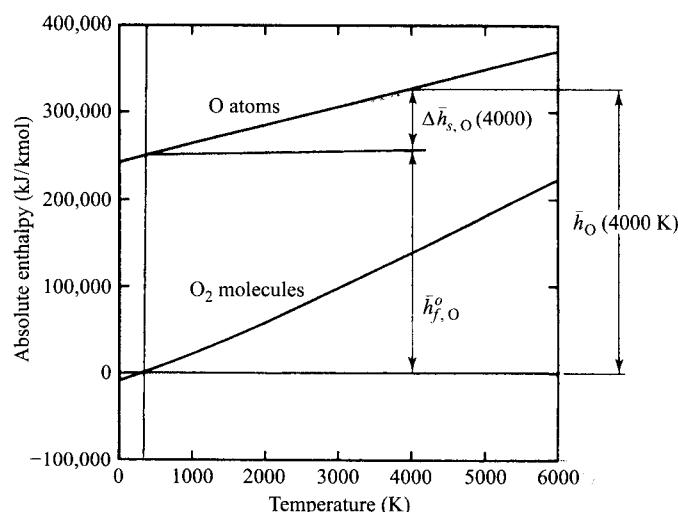

**Figure 2.6** Graphical interpretation of absolute enthalpy, heat of formation, and sensible enthalpy.

at the reference state are given, and sensible enthalpies are tabulated as a function of temperature for a number of species of importance in combustion. Enthalpies of formation for reference temperatures other than the standard state 298.15 K are also tabulated.

**Example 2.3**

A gas stream at 1 atm contains a mixture of CO, CO<sub>2</sub>, and N<sub>2</sub> in which the CO mole fraction is 0.10 and the CO<sub>2</sub> mole fraction is 0.20. The gas-stream temperature is 1200 K. Determine the absolute enthalpy of the mixture on both a mole basis (kJ/kmol) and a mass basis (kJ/kg). Also determine the mass fractions of the three component gases.

**Solution**

Given:  $\chi_{\text{CO}} = 0.10$ ,  $T = 1200 \text{ K}$ ,  
 $\chi_{\text{CO}_2} = 0.20$ ,  $P = 1 \text{ atm}$ .

Find:  $\bar{h}_{\text{mix}}$ ,  $h_{\text{mix}}$ ,  $Y_{\text{CO}}$ ,  $Y_{\text{CO}_2}$ , and  $Y_{\text{N}_2}$ .

Finding  $\bar{h}_{\text{mix}}$  requires the straightforward application of the ideal-gas mixture law, Eqn. 2.15, and, to find  $\chi_{\text{N}_2}$ , the knowledge that  $\sum \chi_i = 1$  (Eqn. 2.10). Thus,

$$\chi_{\text{N}_2} = 1 - \chi_{\text{CO}_2} = 0.70$$

and

$$\begin{aligned}\bar{h}_{\text{mix}} &= \sum \chi_i \bar{h}_i \\ &= \chi_{\text{CO}} [\bar{h}_{f,\text{CO}}^o + (\bar{h}(T) - \bar{h}_{f,298}^o)_{\text{CO}}] \\ &\quad + \chi_{\text{CO}_2} [\bar{h}_{f,\text{CO}_2}^o + (\bar{h}(T) - \bar{h}_{f,298}^o)_{\text{CO}_2}] \\ &\quad + \chi_{\text{N}_2} [\bar{h}_{f,\text{N}_2}^o + (\bar{h}(T) - \bar{h}_{f,298}^o)_{\text{N}_2}].\end{aligned}$$

Substituting values from Appendix A (Table A.1 for CO, Table A.2 for CO<sub>2</sub>, and Table A.7 for N<sub>2</sub>):

$$\begin{aligned}\bar{h}_{\text{mix}} &= 0.10[-110,541 + 28,440] \\ &\quad + 0.20[-393,546 + 44,488] \\ &\quad + 0.70[0 + 28,118] \\ \boxed{\bar{h}_{\text{mix}} &= -58,339.1 \text{ kJ/kmol}_{\text{mix}}}\end{aligned}$$

To find  $h_{\text{mix}}$ , we need to determine the molecular weight of the mixture:

$$\begin{aligned}MW_{\text{mix}} &= \sum \chi_i MW_i \\ &= 0.10(28.01) + 0.20(44.01) + 0.70(28.013) \\ &= 31.212.\end{aligned}$$

Then,

$$\boxed{h_{\text{mix}}} = \frac{\bar{h}_{\text{mix}}}{MW_{\text{mix}}} = \frac{-58,339.1}{31.212} = \boxed{-1869.12 \text{ kJ/kg}_{\text{mix}}}$$

Since we have previously found  $MW_{\text{mix}}$ , calculation of the individual mass fractions follows simply from their definitions (Eqn. 2.11):

$$\boxed{\begin{aligned} Y_{CO} &= 0.10 \frac{28.01}{31.212} = 0.0897 \\ Y_{CO_2} &= 0.20 \frac{44.01}{31.212} = 0.2820 \\ Y_{N_2} &= 0.70 \frac{28.013}{31.212} = 0.6282 \end{aligned}}$$

As a check, we see that  $0.0897 + 0.2820 + 0.6282 = 1.000$ , as required.

#### Comment

Both molar and mass units are frequently used in combustion. Because of this, you should be quite comfortable with their interconversions.

---


### Enthalpy of Combustion and Heating Values

Knowing how to express the enthalpy for mixtures of reactants and mixtures of products allows us to define the enthalpy of reaction, or, when dealing specifically with combustion reactions, the enthalpy of combustion. Consider the steady-flow reactor, shown in Fig. 2.7, in which a stoichiometric mixture of reactants enters and products exits, both at standard-state conditions ( $25^\circ\text{C}$ , 1 atm). The combustion process is assumed to be complete, i.e., all of the fuel carbon is converted to  $\text{CO}_2$  and all of the fuel hydrogen is converted to  $\text{H}_2\text{O}$ . For the products to exit at the same temperature as the entering reactants, heat must be removed from the reactor. The amount of heat removed can be related to the reactant and product absolute enthalpies by applying the steady-flow form of the first law (Eqn. 2.29):

$$q_{cv} = h_o - h_i = h_{\text{prod}} - h_{\text{reac}}. \quad (2.35)$$

The definition of the **enthalpy of reaction**, or the **enthalpy of combustion**,  $\Delta h_R$  (per mass of mixture), is

$$\Delta h_R \equiv q_{cv} = h_{\text{prod}} - h_{\text{reac}}, \quad (2.36a)$$

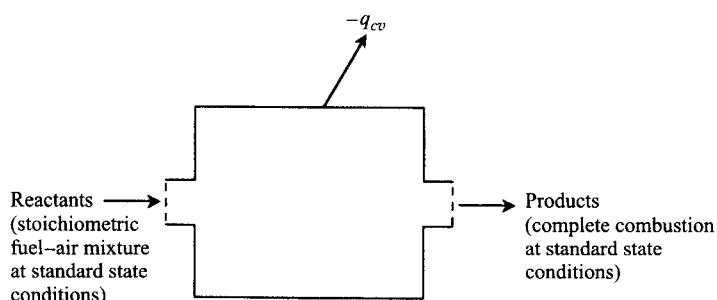

**Figure 2.7** Steady-flow reactor used to determine enthalpy of combustion.

or, in terms of extensive properties,

$$\Delta H_R = H_{\text{prod}} - H_{\text{reac}}. \quad (2.36b)$$

The enthalpy of combustion can be illustrated graphically, as shown in Fig. 2.8. Consistent with the heat transfer being negative, the absolute enthalpy of the products lies below that of the reactants. For example, at 25°C and 1 atm, the reactants enthalpy of a stoichiometric mixture of CH<sub>4</sub> and air, where 1 kmol of fuel reacts, is -74,831 kJ. At the same conditions (25°C, 1 atm), the combustion products have an absolute enthalpy of -877,236 kJ. Thus,


$$\Delta H_R = -877,236 - (-74,831) = -802,405 \text{ kJ}.$$

This value can be adjusted to a per-mass-of-fuel basis:

$$\Delta h_R \left( \frac{\text{kJ}}{\text{kg}_{\text{fuel}}} \right) = \Delta H_R / MW_{\text{fuel}} \quad (2.37)$$

or

$$\Delta h_R \left( \frac{\text{kJ}}{\text{kg}_{\text{fuel}}} \right) = (-802,405 / 16.043) = -50,016.$$

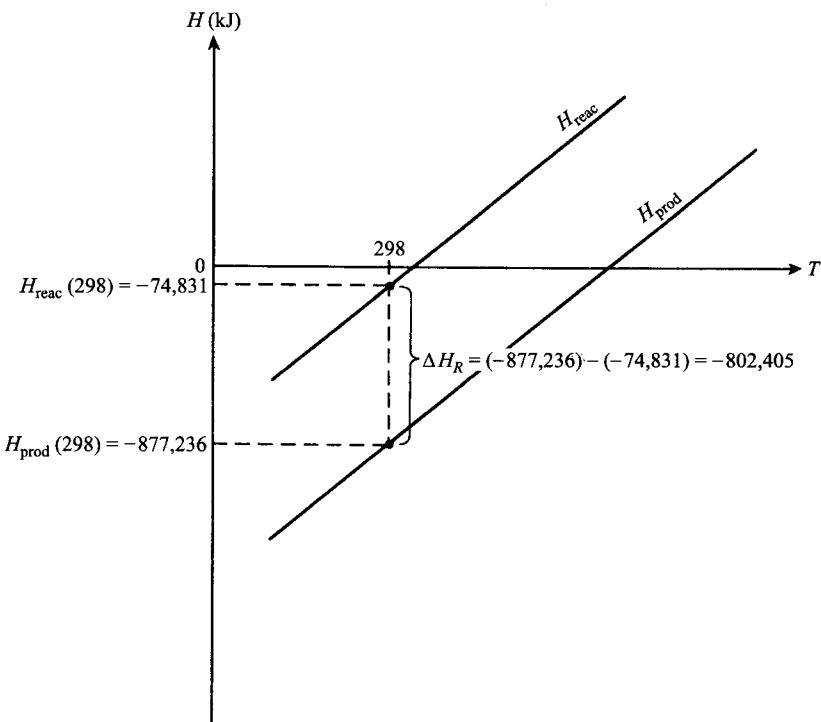

**Figure 2.8** Enthalpy of reaction using representative values for a stoichiometric methane-air mixture. The water in the products is assumed to be in the vapor state.

This value can, in turn, be converted to a per-unit-mass-of-mixture basis:

$$\Delta h_R \left( \frac{\text{kJ}}{\text{kg}_{\text{mix}}} \right) = \Delta h_R \left( \frac{\text{kJ}}{\text{kg}_{\text{fuel}}} \right) \frac{m_{\text{fuel}}}{m_{\text{mix}}}, \quad (2.38)$$

where

$$\frac{m_{\text{fuel}}}{m_{\text{mix}}} = \frac{m_{\text{fuel}}}{m_{\text{air}} + m_{\text{fuel}}} = \frac{1}{(A/F) + 1}. \quad (2.39)$$

From Table 2.1, we see that the stoichiometric air–fuel ratio for CH<sub>4</sub> is 17.11; thus,

$$\Delta h_R \left( \frac{\text{kJ}}{\text{kg}_{\text{mix}}} \right) = \frac{-50,016}{17.11 + 1} = -2761.8.$$

Note that the value of the enthalpy of combustion depends on the temperature chosen for its evaluation since the enthalpies of both the reactants and products vary with temperature; i.e., the distance between the  $H_{\text{prod}}$  and  $H_{\text{reac}}$  lines in Fig. 2.8 is not constant.

The **heat of combustion**,  $\Delta h_c$  (known also as the **heating value**), is numerically equal to the enthalpy of reaction, but with opposite sign. The **upper or higher heating value, HHV**, is the heat of combustion calculated assuming that all of the water in the products has condensed to liquid. This scenario liberates the most amount of energy, hence the designation “upper.” The **lower heating value, LHV**, corresponds to the case where none of the water is assumed to condense. For CH<sub>4</sub>, the upper heating value is approximately 11 percent larger than the lower. Standard-state heating values for a variety of hydrocarbon fuels are given in Appendix B.

- A. Determine the upper and lower heating values at 298 K of gaseous *n*-decane, C<sub>10</sub>H<sub>22</sub>, per kilomole of fuel and per kilogram of fuel. The molecular weight of *n*-decane is 142.284.
- B. If the enthalpy of vaporization of *n*-decane is 359 kJ/kg<sub>fuel</sub> at 298 K, what are the upper and lower heating values of liquid *n*-decane?

#### Example 2.4

##### Solution

- A. For 1 mole of C<sub>10</sub>H<sub>22</sub>, the combustion equation can be written as



For either the upper or lower heating value,

$$\Delta H_c = -\Delta H_R = H_{\text{reac}} - H_{\text{prod}},$$

where the numerical value of  $H_{\text{prod}}$  depends on whether the H<sub>2</sub>O in the products is liquid (determining higher heating value) or gaseous (determining lower heating value). The sensible enthalpies for all species involved are zero since we desire  $\Delta H_c$  at the reference state (298 K). Furthermore, the enthalpies of formation of the O<sub>2</sub> and N<sub>2</sub> are also zero at 298 K. Recognizing that

$$H_{\text{reac}} = \sum_{\text{reac}} N_i \bar{h}_i \quad \text{and} \quad H_{\text{prod}} = \sum_{\text{prod}} N_i \bar{h}_i,$$

we obtain

$$\Delta H_{c,\text{H}_2\text{O(l)}} = \text{HHV} = (1) \bar{h}_{f,\text{C}_{10}\text{H}_{22}}^o - [10 \bar{h}_{f,\text{CO}_2}^o + 11 \bar{h}_{f,\text{H}_2\text{O(l)}}^o].$$

Table A.6 (Appendix A) gives the enthalpy of formation for gaseous water and the enthalpy of vaporization. With these values, we can calculate the enthalpy of formation for the liquid water (Eqn. 2.18):

$$\bar{h}_{f,\text{H}_2\text{O(l)}}^o = \bar{h}_{f,\text{H}_2\text{O(g)}}^o - \bar{h}_{fg} = -241,847 - 44,010 = -285,857 \text{ kJ/kmol.}$$

Using this value, together with enthalpies of formation given in Appendices A and B, we obtain the higher heating value:

$$\begin{aligned} \Delta H_{c,\text{H}_2\text{O,(l)}} &= (1) \left( -249,659 \frac{\text{kJ}}{\text{kmol}} \right) \\ &\quad - \left[ 10 \left( -393,546 \frac{\text{kJ}}{\text{kmol}} \right) + 11 \left( -285,857 \frac{\text{kJ}}{\text{kmol}} \right) \right] \\ &= 6,830,096 \text{ kJ} \end{aligned}$$

and

$$\boxed{\Delta \bar{h}_c = \frac{\Delta H_c}{N_{\text{C}_{10}\text{H}_{22}}} = \frac{6,830,096 \text{ kJ}}{1 \text{ kmol}} = 6,830,096 \text{ kJ/kmol}_{\text{C}_{10}\text{H}_{22}}}$$

or

$$\boxed{\Delta h_c = \frac{\Delta \bar{h}_c}{MW_{\text{C}_{10}\text{H}_{22}}} = \frac{6,830,096}{142.284} \frac{\text{kJ}}{\frac{\text{kg}}{\text{kmol}}} = 48,003 \text{ kJ/kg}_{\text{C}_{10}\text{H}_{22}}}$$

For the lower heating value, we use  $\bar{h}_{f,\text{H}_2\text{O(g)}}^o = -241,847 \text{ kJ/kmol}$  in place of  $\bar{h}_{f,\text{H}_2\text{O(l)}}^o = -285,857 \text{ kJ/kmol}$ . Thus,

$$\boxed{\Delta \bar{h}_c = 6,345,986 \text{ kJ/kmol}_{\text{C}_{10}\text{H}_{22}}}$$

or


$$\boxed{\Delta h_c = 44,601 \text{ kJ/kg}_{\text{C}_{10}\text{H}_{22}}}$$

B. For  $\text{C}_{10}\text{H}_{22}$ , in the liquid state,

$$H_{\text{reac}} = (1)(\bar{h}_{f,\text{C}_{10}\text{H}_{22(g)}}^o - \bar{h}_{fg}),$$

or

$$\Delta h_c \left( \begin{array}{l} \text{liquid} \\ \text{fuel} \end{array} \right) = \Delta h_c \left( \begin{array}{l} \text{gaseous} \\ \text{fuel} \end{array} \right) - h_{fg}.$$

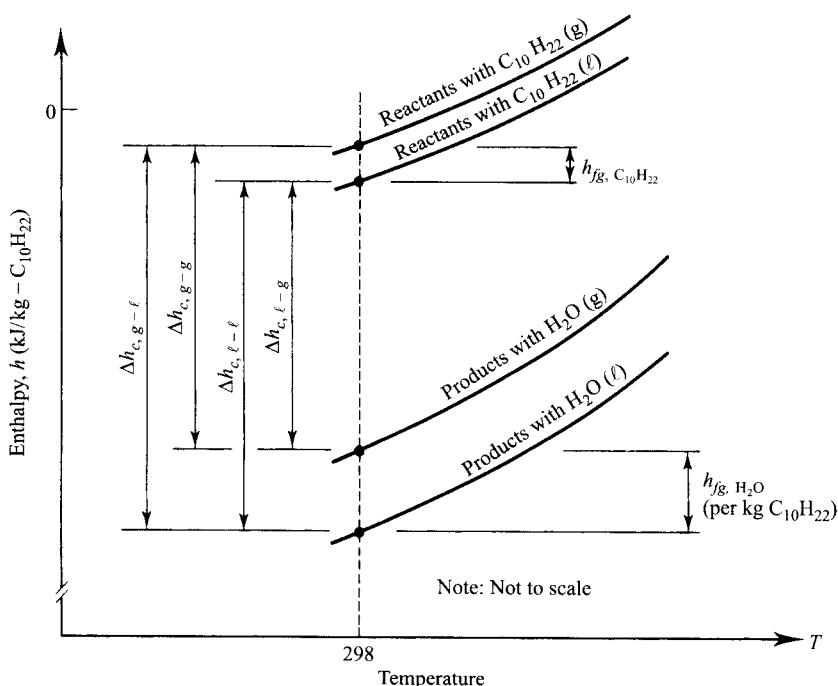

**Figure 2.9** Enthalpy-temperature plot illustrating calculation of heating values in Example 2.4.

Thus,

$$\begin{aligned}\Delta h_c & (\text{higher}) = 48,003 - 359 \\&= 47,644 \text{ kJ/kg}_{C_{10}H_{22}} \\ \Delta h_c & (\text{lower}) = 44,601 - 359 \\&= 44,242 \text{ kJ/kg}_{C_{10}H_{22}}\end{aligned}$$

### Comment

Graphical representations of the various definitions and/or thermodynamic processes are valuable aids in setting up problems or in checking their solutions. Figure 2.9 illustrates, on  $h$ - $T$  coordinates, the important quantities used in this example. Note that the enthalpy of vaporization given for *n*-decane is for the standard-state temperature (298.15 K), while the value given in Appendix B is at the boiling point (447.4 K).

## ADIABATIC FLAME TEMPERATURES


We define two adiabatic flame temperatures: one for constant-pressure combustion and one for constant-volume. If a fuel-air mixture burns adiabatically at constant pressure, the absolute enthalpy of the reactants at the initial state (say,  $T = 298 \text{ K}$ ,  $P = 1 \text{ atm}$ ) equals the absolute enthalpy of the products at the final state ( $T = T_{ad}$ ,  $P = 1 \text{ atm}$ ), i.e., application of Eqn. 2.28 results in

$$H_{\text{reac}}(T_i, P) = H_{\text{prod}}(T_{ad}, P), \quad (2.40\text{a})$$

or, equivalently, on a per-mass-of-mixture basis,

$$h_{\text{reac}}(T_i, P) = h_{\text{prod}}(T_{ad}, P). \quad (2.40\text{b})$$

This first-law statement, Eqn. 2.40, defines what is called the **constant-pressure adiabatic flame temperature**. This definition is illustrated graphically in Fig. 2.10. Conceptually, the adiabatic flame temperature is simple; however, evaluating this quantity requires knowledge of the composition of the combustion products. At typical flame temperatures, the products dissociate and the

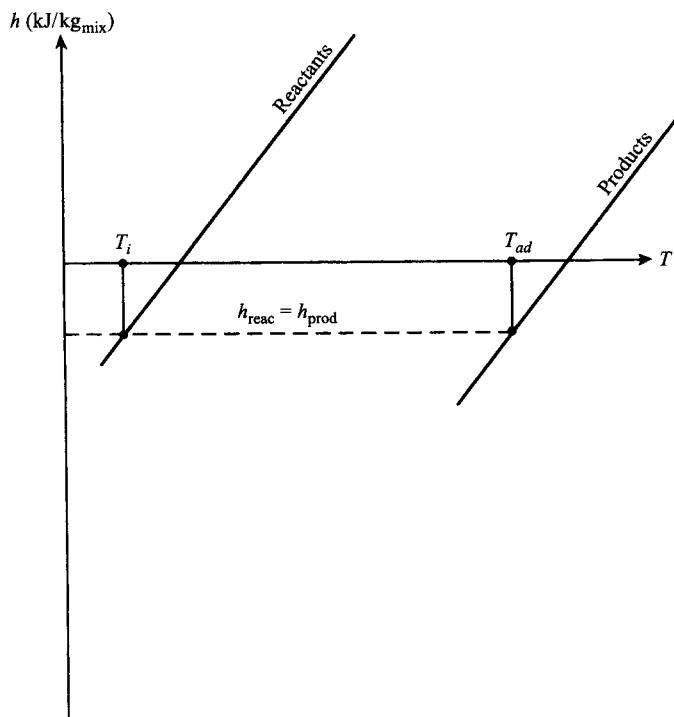

**Figure 2.10** Illustration of constant-pressure adiabatic flame temperature on  $h$ - $T$  coordinates.

mixture comprises many species. As shown in Table 2.1 and Table B.1 in Appendix B, flame temperatures are typically several thousand kelvins. Calculating the complex composition by invoking chemical equilibrium is the subject of the next section. The following example illustrates the fundamental concept of constant-pressure adiabatic flame temperatures, while making crude assumptions regarding the product mixture composition and evaluation of the product mixture enthalpy.

Estimate the constant-pressure adiabatic flame temperature for the combustion of a stoichiometric CH<sub>4</sub>-air mixture. The pressure is 1 atm and the initial reactant temperature is 298 K.


**Example 2.5**

Use the following assumptions:

1. “Complete combustion” (no dissociation), i.e., the product mixture consists of only CO<sub>2</sub>, H<sub>2</sub>O, and N<sub>2</sub>.
2. The product mixture enthalpy is estimated using constant specific heats evaluated at 1200 K ( $\approx 0.5(T_i + T_{ad})$ , where  $T_{ad}$  is guessed to be about 2100 K).

**Solution**

Mixture composition:

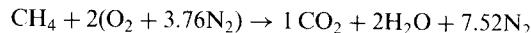

$$N_{\text{CO}_2} = 1, N_{\text{H}_2\text{O}} = 2, N_{\text{N}_2} = 7.52.$$

Properties (Appendices A and B):

Species	Enthalpy of Formation @ 298 K $\bar{h}_{f,i}^{\circ}$ (kJ/kmol)	Specific Heat @ 1200 K $\bar{c}_{p,i}$ (kJ/kmol-K)
CH <sub>4</sub>	-74,831	—
CO <sub>2</sub>	-393,546	56.21
H <sub>2</sub> O	-241,845	43.87
N <sub>2</sub>	0	33.71
O <sub>2</sub>	0	—

First law (Eqn. 2.40):

$$\begin{aligned} H_{\text{react}} &= \sum_{\text{react}} N_i \bar{h}_i = H_{\text{prod}} = \sum_{\text{prod}} N_i \bar{h}_i \\ H_{\text{react}} &= (1)(-74,831) + 2(0) + 7.52(0) \\ &= -74,831 \text{ kJ} \\ H_{\text{prod}} &= \sum N_i [\bar{h}_{f,i}^{\circ} + \bar{c}_{p,i}(T_{ad} - 298)] \\ &= (1)[-393,546 + 56.21(T_{ad} - 298)] \\ &\quad + (2)[-241,845 + 43.87(T_{ad} - 298)] \\ &\quad + (7.52)[0 + 33.71(T_{ad} - 298)]. \end{aligned}$$

Equating  $H_{\text{react}}$  to  $H_{\text{prod}}$  and solving for  $T_{ad}$  yields

$$T_{ad} = 2318 \text{ K}$$

### Comments

Comparing the above result with the equilibrium-composition based computation shown in Table 2.1 ( $T_{ad,eq} = 2226\text{ K}$ ) shows that the simplified approach overestimates  $T_{ad}$  by slightly less than 100 K. Considering the crudeness of the assumptions, this appears to be rather surprisingly good agreement. Removing assumption 2 and recalculating  $T_{ad}$  using variable specific heats, i.e.,

$$\bar{h}_i = \bar{h}_{f,i}^o + \int_{298}^T \bar{c}_{p,i} \, dT,$$

yields  $T_{ad} = 2328\text{ K}$ . (Note that Appendix A provides tabulations of these integrated quantities. Similar tabulations are found in the JANAF tables [6].) Since this result is quite close to our constant- $c_p$  solution, we conclude that the  $\sim 100\text{ K}$  difference is the result of neglecting dissociation. Note that dissociation causes a lowering of  $T_{ad}$  since more energy is tied up in chemical bonds (enthalpies of formation) at the expense of the sensible enthalpy.

In the above, we dealt with a constant-pressure system, which would be appropriate in dealing with a gas-turbine combustor, or a furnace. Let us look now at **constant-volume adiabatic flame temperatures**, which we might require in an ideal Otto-cycle analysis, for example. The first law of thermodynamics (Eqn. 2.20) requires

$$U_{\text{reac}}(T_{\text{init}}, P_{\text{init}}) = U_{\text{prod}}(T_{ad}, P_f), \quad (2.41)$$

where  $U$  is the absolute (or standardized) internal energy of the mixture. Graphically, Eqn. 2.41 resembles the sketch (Fig. 2.10) used to illustrate the constant-pressure adiabatic flame temperature, except the internal energy replaces the enthalpy. Since most compilations or calculations of thermodynamic properties provide values for  $H$  (or  $h$ ) rather than  $U$  (or  $u$ ) [1, 6], we can rearrange Eqn. 2.41 to the following form:

$$H_{\text{reac}} - H_{\text{prod}} - V(P_{\text{init}} - P_f) = 0. \quad (2.42)$$

We can apply the ideal-gas law to eliminate the  $PV$  terms:

$$P_{\text{init}} V = \sum_{\text{reac}} N_i R_u T_{\text{init}} = N_{\text{reac}} R_u T_{\text{init}}$$

$$P_f V = \sum_{\text{prod}} N_i R_u T_{ad} = N_{\text{prod}} R_u T_{ad}.$$

Thus,

$$H_{\text{reac}} - H_{\text{prod}} - R_u(N_{\text{reac}} T_{\text{init}} - N_{\text{prod}} T_{ad}) = 0. \quad (2.43)$$

An alternative form of Eqn. 2.43, on a per-mass-of-mixture basis, can be obtained by dividing Eqn. 2.43 by the mass of mixture,  $m_{\text{mix}}$ , and recognizing that

$$m_{\text{mix}}/N_{\text{reac}} \equiv MW_{\text{reac}}$$

or

$$m_{\text{mix}}/N_{\text{prod}} \equiv MW_{\text{prod}}.$$

We thus obtain

$$h_{\text{reac}} - h_{\text{prod}} - R_u \left( \frac{T_{\text{init}}}{MW_{\text{reac}}} - \frac{T_{ad}}{MW_{\text{prod}}} \right) = 0. \quad (2.44)$$

Since the equilibrium composition of the product mixture depends upon both temperature and pressure, as we will see in the next section, utilizing Eqn. 2.43 or 2.44 with the ideal-gas law and appropriate calorific equations of state, e.g.,  $h = h(T, P) = h$  ( $T$  only, ideal gas), to find  $T_{ad}$  is straightforward, but non-trivial.

Estimate the constant-volume adiabatic flame temperature for a stoichiometric CH<sub>4</sub>-air mixture using the same assumptions as in Example 2.5. Initial conditions are  $T_i = 298$  K,  $P = 1$  atm (= 101,325 Pa).

### Example 2.6

#### Solution

The same composition and properties used in Example 2.5 apply here. We note, however, that the  $c_{p,i}$  values should be evaluated at a temperature somewhat greater than 1200 K, since the constant-volume  $T_{ad}$  will be higher than the constant-pressure  $T_{ad}$ . Nonetheless, we will use the same values as before.

First law (Eqn. 2.43):

$$H_{\text{reac}} - H_{\text{prod}} - R_u(N_{\text{reac}}T_{\text{init}} - N_{\text{prod}}T_{ad}) = 0$$

or

$$\sum_{\text{reac}} N_i \bar{h}_i - \sum_{\text{prod}} N_i \bar{h}_i - R_u(N_{\text{reac}}T_{\text{init}} - N_{\text{prod}}T_{ad}) = 0.$$

Substituting numerical values, we have

$$\begin{aligned} H_{\text{react}} &= (1)(-74,831) + 2(0) + 7.52(0) \\ &= -74,831 \text{ kJ} \\ H_{\text{prod}} &= (1)[-393,546 + 56.21(T_{ad} - 298)] \\ &\quad + (2)[-241,845 + 43.87(T_{ad} - 298)] \\ &\quad + (7.52)[0 + 33.71(T_{ad} - 298)] \\ &= -877,236 + 397.5(T_{ad} - 298) \text{ kJ} \end{aligned}$$

and

$$R_u(N_{\text{reac}}T_{\text{init}} - N_{\text{prod}}T_{ad}) = 8.315(10.52)(298 - T_{ad}),$$

where  $N_{\text{reac}} = N_{\text{prod}} = 10.52$  kmol.

Reassembling Eqn. 2.43 and solving for  $T_{ad}$  yields

$$T_{ad} = 2889 \text{ K}$$

**Comments**

- (i) For the same initial conditions, constant-volume combustion results in much higher temperatures (571 K higher in this example) than for constant-pressure combustion. This is a consequence of the pressure forces doing no work when the volume is fixed. (ii) Note, also, that the number of moles was conserved in going from the initial to final state. This is a fortuitous result for CH<sub>4</sub> and does not occur for other fuels. (iii) The final pressure is well above the initial pressure:  $P_f = P_{\text{init}}(T_{\text{ad}}/T_{\text{init}}) = 9.69 \text{ atm}$ .
- 

## CHEMICAL EQUILIBRIUM

In high-temperature combustion processes, the products of combustion are not a simple mixture of ideal products, as may be suggested by the simple atom-balance used to determine stoichiometry (cf. Eqn. 2.30). Rather, the major species **dissociate**, producing a host of minor species. Under some conditions, what ordinarily might be considered a minor species is actually present in rather large quantities. For example, the ideal combustion products for burning a hydrocarbon with air are CO<sub>2</sub>, H<sub>2</sub>O, O<sub>2</sub>, and N<sub>2</sub>. Dissociation of these species and reactions among the dissociation products yields the following species: H<sub>2</sub>, OH, CO, H, O, N, NO, and possibly others. The problem we address in this section is the calculation of the mole fractions of all of the product species at a given temperature and pressure, subject to the constraint of conserving the number of moles of each of the elements present in the initial mixture. This element constraint merely says that the number of C, H, O, and N atoms is constant, regardless of how they are combined in the various species.


There are several ways to approach the calculation of equilibrium composition. To be consistent with the treatment of equilibrium in most undergraduate thermodynamics courses, we focus on the equilibrium-constant approach and limit our discussion to the application of ideal gases. For descriptions of other methods, the interested reader is referred to the literature [5, 7].

### Second-Law Considerations

The concept of chemical equilibrium has its roots in the second law of thermodynamics. Consider a fixed-volume, adiabatic reaction vessel in which a fixed mass of reactants form products. As the reactions proceed, both the temperature and pressure rise until a final equilibrium condition is reached. This final state (temperature, pressure, and composition) is not governed solely by first-law considerations, but necessitates invoking the second law. Consider the combustion reaction



If the final temperature is high enough, the  $\text{CO}_2$  will dissociate. Assuming the products to consist only of  $\text{CO}_2$ ,  $\text{CO}$ , and  $\text{O}_2$ , we can write

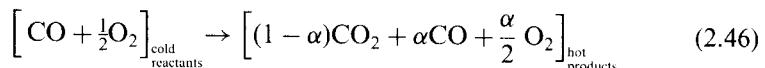


where  $\alpha$  is the fraction of the  $\text{CO}_2$  dissociated. We can calculate the adiabatic flame temperature as a function of the dissociation fraction,  $\alpha$ , using Eqn. 2.42. For example, with  $\alpha = 1$ , no heat is released and the mixture temperature, pressure, and composition remain unchanged; while with  $\alpha = 0$ , the maximum amount of heat release occurs and the temperature and pressure would be the highest possible allowed by the first law. This variation in temperature with  $\alpha$  is plotted in Fig. 2.11.

What constraints are imposed by the second law on this thought experiment where we vary  $\alpha$ ? The entropy of the product mixture can be calculated by summing the product species entropies, i.e.,

$$S_{\text{mix}}(T_f, P) = \sum_{i=1}^3 N_i \bar{s}_i(T_f, P_i) = (1 - \alpha)\bar{s}_{\text{CO}_2} + \alpha\bar{s}_{\text{CO}} + \frac{\alpha}{2}\bar{s}_{\text{O}_2}, \quad (2.47)$$

where  $N_i$  is the number of moles of species  $i$  in the mixture. The individual species entropies are obtained from

$$\bar{s}_i = \bar{s}_i^0(T_{\text{ref}}) + \int_{T_{\text{ref}}}^{T_f} \bar{c}_{p,i} \frac{dT}{T} - R_u \ln \frac{P_i}{P_i^0}, \quad (2.48)$$

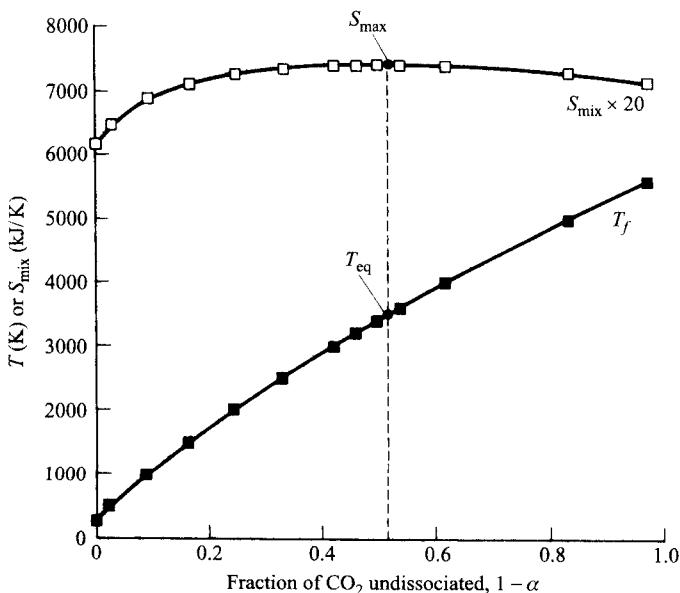

**Figure 2.11** Illustration of chemical equilibrium for a fixed-mass isolated system.

where ideal-gas behavior is assumed, and  $P_i$  is the partial pressure of the  $i$ th species. Plotting the mixture entropy (Eqn. 2.47) as a function of the dissociation fraction, we see that a maximum value is reached at some intermediate value of  $\alpha$ . For the reaction chosen,  $\text{CO} + \frac{1}{2}\text{O}_2 \rightarrow \text{CO}_2$ , the maximum entropy occurs near  $1 - \alpha = 0.5$ .

For our choice of conditions (constant  $U$ ,  $V$ , and  $m$ , which implies no heat or work interactions), the second law requires that the entropy change internal to the system

$$dS \geq 0. \quad (2.49)$$

Thus, we see that the composition of the system will spontaneously shift toward the point of maximum entropy when approaching from either side, since  $dS$  is positive. Once the maximum entropy is reached, no further change in composition is allowed, since this would require the system entropy to decrease in violation of the second law (Eqn. 2.49). Formally, the condition for equilibrium can be written

$$(dS)_{U,V,m} = 0. \quad (2.50)$$

In summary, if we fix the internal energy, volume, and mass of an isolated system, the application of Eqn. 2.49 (second law), Eqn. 2.41 (first law), and Eqn. 2.2 (equation of state) define the equilibrium temperature, pressure, and chemical composition.

## Gibbs Function

Although the foregoing was useful in illustrating how the second law comes into play in establishing chemical equilibrium, the use of an isolated (fixed-energy) system of fixed mass and volume is not particularly useful for many of the typical problems involving chemical equilibrium. For example, there is frequently a need to calculate the composition of a mixture at a given temperature, pressure, and stoichiometry. For this problem, the **Gibbs free energy**,  $G$ , replaces the entropy as the important thermodynamic property.

As you may recall from your previous study of thermodynamics, the Gibbs free energy is defined in terms of other thermodynamic properties as

$$G \equiv H - TS. \quad (2.51)$$

The second law can then be expressed as

$$(dG)_{T,P,m} \leq 0, \quad (2.52)$$

which states that the Gibbs function always decreases for a spontaneous, isothermal, isobaric change of a fixed-mass system in the absence of all work effects except boundary ( $P-dV$ ) work. This principle allows us to calculate the equilibrium composition of a mixture at a given temperature and pressure. The Gibbs function attains a minimum in equilibrium, in contrast to the max-

imum in entropy we saw for the fixed-energy and fixed-volume case (Fig. 2.11). Thus, at equilibrium,

$$(dG)_{T,P,m} = 0. \quad (2.53)$$

For a mixture of ideal gases, the Gibbs function for the  $i$ th species is given by

$$\bar{g}_{i,T} = \bar{g}_i^o + R_u T \ln(P_i/P^o) \quad (2.54)$$

where  $\bar{g}_i^o$  is the Gibbs function of the pure species at the standard-state pressure (i.e.,  $P_i = P^o$ ) and  $P_i$  is the partial pressure. The standard-state pressure,  $P^o$ , by convention taken to be 1 atm, appears in the denominator of the logarithm term. In dealing with reacting systems, a **Gibbs function of formation**,  $\bar{g}_{f,i}^o$ , is frequently employed:

$$\bar{g}_{f,i}^o(T) \equiv \bar{g}_i^o(T) - \sum_{j \text{ elements}} v_j' \bar{g}_j^o(T), \quad (2.55)$$

where the  $v_j'$  are the stoichiometric coefficients of the elements required to form one mole of the compound of interest. For example, the coefficients are  $v_{O_2}' = \frac{1}{2}$  and  $v_C' = 1$  for forming a mole of CO from O<sub>2</sub> and C, respectively. As with enthalpies, the Gibbs functions of formation of the naturally occurring elements are assigned values of zero at the reference state. Appendix A provides tabulations of Gibbs function of formation over a range of temperatures for selected species. Having tabulations of  $\bar{g}_{f,i}^o(T)$  as a function of temperature is quite useful. In later calculations, we will need to evaluate differences in  $\bar{g}_{i,T}^o$  between different species at the same temperature. These differences can be obtained easily by using the Gibbs function of formation at the temperature of interest, values of which are provided in Appendix A. Tabulations for over 1,000 species can be found in the JANAF tables [6].

The Gibbs function for a mixture of ideal gases can be expressed as

$$G_{\text{mix}} = \sum N_i \bar{g}_{i,T} = \sum N_i [\bar{g}_i^o + R_u T \ln(P_i/P^o)] \quad (2.56)$$

where  $N_i$  is the number of moles of the  $i$ th species.

For fixed temperature and pressure, the equilibrium condition becomes

$$dG_{\text{mix}} = 0 \quad (2.57)$$


or

$$\sum dN_i [\bar{g}_{i,T}^o + R_u T \ln(P_i/P^o)] + \sum N_i d[\bar{g}_{i,T}^o + R_u T \ln(P_i/P^o)] = 0. \quad (2.58)$$

The second term in Eqn. 2.58 can be shown to be zero by recognizing that  $d(\ln P_i) = dP_i/P_i$  and that  $\sum dP_i = 0$ , since all changes in the partial pressures must sum to zero because the total pressure is constant. Thus,

$$dG_{\text{mix}} = 0 = \sum dN_i [\bar{g}_{i,T}^o + R_u T \ln(P_i/P^o)]. \quad (2.59)$$

For the general system, where

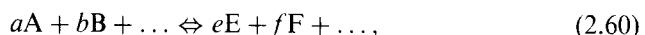

the change in the number of moles of each species is directly proportional to its stoichiometric coefficient, i.e.,

$$\begin{aligned} dN_A &= -\kappa a & (2.61) \\ dN_B &= -\kappa b \\ &\vdots & \vdots \\ dN_E &= +\kappa e \\ dN_F &= +\kappa f \\ &\vdots & \vdots \end{aligned}$$

Substituting Eqn. 2.61 into Eqn. 2.59 and canceling the proportionality constant  $\kappa$ , we obtain

$$\begin{aligned} -a[\bar{g}_{A,T}^o + R_u T \ln(P_A/P^o)] - b[\bar{g}_{B,T}^o + R_u T \ln(P_B/P^o)] - \dots & (2.62) \\ + e[\bar{g}_{E,T}^o + R_u T \ln(P_E/P^o)] + f[\bar{g}_{F,T}^o + R_u T \ln(P_F/P^o)] + \dots = 0. \end{aligned}$$

Equation 2.62 can be rearranged and the log terms grouped together to yield

$$\begin{aligned} -(\bar{g}_{E,T}^o + f\bar{g}_{F,T}^o + \dots - a\bar{g}_{A,T}^o - b\bar{g}_{B,T}^o - \dots) & (2.63) \\ = R_u T \ln \frac{(P_E/P^o)^e \cdot (P_F/P^o)^f \cdot \text{etc.}}{(P_A/P^o)^a \cdot (P_B/P^o)^b \cdot \text{etc.}} \end{aligned}$$

The term in parentheses on the left-hand-side of Eqn. 2.63 is called the **standard-state Gibbs function change**  $\Delta G_T^o$ , i.e.,

$$\Delta G_T^o = (\bar{g}_{E,T}^o + f\bar{g}_{F,T}^o + \dots - a\bar{g}_{A,T}^o - b\bar{g}_{B,T}^o - \dots) \quad (2.64a)$$

or, alternately,

$$\Delta G_T^o \equiv (\bar{g}_{f,E}^o + f\bar{g}_{f,F}^o + \dots - a\bar{g}_{f,A}^o - b\bar{g}_{f,B}^o - \dots)_T. \quad (2.64b)$$

The argument of the natural logarithm is defined as the **equilibrium constant**  $K_p$  for the reaction expressed in Eqn. 2.60, i.e.,

$$K_p = \frac{(P_E/P^o)^e \cdot (P_F/P^o)^f \cdot \text{etc.}}{(P_A/P^o)^a \cdot (P_B/P^o)^b \cdot \text{etc.}}. \quad (2.65)$$

With these definitions, Eqn. 2.63, our statement of chemical equilibrium at constant temperature and pressure, is given by

$$\Delta G_T^o = -R_u T \ln K_p, \quad (2.66a)$$

or

$$K_p = \exp(-\Delta G_T^o / R_u T). \quad (2.66b)$$

From the definition of  $K_p$  (Eqn. 2.65) and its relation to  $\Delta G_T^o$  (Eqn. 2.66), we can obtain a qualitative indication of whether a particular reaction favors products (goes strongly to completion) or reactants (very little reaction occurs)

at equilibrium. If  $\Delta G_T^\circ$  is positive, reactants will be favored since  $\ln K_p$  is negative, which requires that  $K_p$  itself is less than unity. Similarly, if  $\Delta G_T^\circ$  is negative, the reaction tends to favor products. Physical insight to this behavior can be obtained by appealing to the definition of  $\Delta G$  in terms of the enthalpy and entropy changes associated with the reaction. From Eqn. 2.51, we can write

$$\Delta G_T^\circ = \Delta H^\circ - T\Delta S^\circ,$$

which can be substituted into Eqn. 2.66b:

$$K_p = e^{-\Delta H^\circ / R_u T} \cdot e^{\Delta S^\circ / R_u}.$$

For  $K_p$  to be greater than unity, which favors products, the enthalpy change for the reaction,  $\Delta H^\circ$ , should be negative, i.e., the reaction is exothermic and the system energy is lowered. Also, positive changes in entropy, which indicate greater molecular chaos, lead to values of  $K_p > 1$ .

Consider the dissociation of  $\text{CO}_2$  as a function of temperature and pressure,


**Example 2.7**


Find the composition of the mixture, i.e., the mole fractions of  $\text{CO}_2$ ,  $\text{CO}$ , and  $\text{O}_2$ , that results from subjecting originally pure  $\text{CO}_2$  to various temperatures ( $T = 1500, 2000, 2500$ , and  $3000\text{ K}$ ) and pressures (0.1, 1, 10, and 100 atm).

**Solution**

To find the three unknown mole fractions,  $x_{\text{CO}_2}$ ,  $x_{\text{CO}}$ , and  $x_{\text{O}_2}$ , we will need three equations. The first equation will be an equilibrium expression, Eqn. 2.66. The other two equations will come from element conservation expressions that state that the total amounts of C and O are constant, regardless of how they are distributed among the three species, since the original mixture was pure  $\text{CO}_2$ .

To implement Eqn. 2.66, we recognize that  $a = 1$ ,  $b = 1$ , and  $c = \frac{1}{2}$ , since

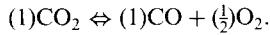

Thus, we can evaluate the standard-state Gibbs function change. For example, at  $T = 2500\text{ K}$ ,

$$\begin{aligned}\Delta G_T^\circ &= [(\frac{1}{2})\bar{g}_{f,\text{O}_2}^\circ + (1)\bar{g}_{f,\text{CO}}^\circ - (1)\bar{g}_{f,\text{CO}_2}^\circ]_{T=2500} \\ &= (\frac{1}{2})0 + (1)(-327,245) - (-396,152) \\ &= 68,907\text{ kJ/kmol}.\end{aligned}$$

The values above are taken from Appendix Tables A.1, A.2, and A.11.

From the definition of  $K_p$ , we have

$$K_p = \frac{(P_{\text{CO}}/P^\circ)^1 (P_{\text{O}_2}/P^\circ)^{0.5}}{(P_{\text{CO}_2}/P^\circ)^1}.$$

We can rewrite  $K_p$  in terms of the mole fractions by recognizing that  $P_i = \chi_i P$ . Thus,

$$K_p = \frac{\chi_{\text{CO}} \chi_{\text{O}_2}^{0.5}}{\chi_{\text{CO}_2}} \cdot (P/P^\circ)^{0.5}$$

Substituting the above into Eqn. 2.66b, we have

$$\begin{aligned} \frac{\chi_{\text{CO}} \chi_{\text{O}_2}^{0.5} (P/P^\circ)^{0.5}}{\chi_{\text{CO}_2}} &= \exp \left[ \frac{-\Delta G_T^\circ}{R_u T} \right] \\ &= \exp \left[ \frac{-68,907}{(8.315)(2500)} \right] \\ \frac{\chi_{\text{CO}} \chi_{\text{O}_2}^{0.5} (P/P^\circ)^{0.5}}{\chi_{\text{CO}_2}} &= 0.03635. \end{aligned} \quad (\text{I})$$

We create a second equation to express **conservation of elements**:

$$\frac{\text{No. of carbon atoms}}{\text{No. of oxygen atoms}} = \frac{1}{2} = \frac{\chi_{\text{CO}} + \chi_{\text{CO}_2}}{\chi_{\text{CO}} + 2\chi_{\text{CO}_2} + 2\chi_{\text{O}_2}}.$$

We can make the problem more general by defining the C/O ratio to be a parameter  $Z$  that can take on different values depending on the initial composition of the mixture:

$$Z = \frac{\chi_{\text{CO}} + \chi_{\text{CO}_2}}{\chi_{\text{CO}} + 2\chi_{\text{CO}_2} + 2\chi_{\text{O}_2}}$$

or

$$(Z - 1)\chi_{\text{CO}} + (2Z - 1)\chi_{\text{CO}_2} + 2Z\chi_{\text{O}_2} = 0. \quad (\text{II})$$

To obtain a third and final equation, we require that all of the mole fractions sum to unity:

$$\sum_i \chi_i = 1$$

or

$$\chi_{\text{CO}} + \chi_{\text{CO}_2} + \chi_{\text{O}_2} = 1. \quad (\text{III})$$

Simultaneous solution of Eqns. I, II, and III for selected values of  $P$ ,  $T$ , and  $Z$  yield values for the mole fractions  $\chi_{\text{CO}}$ ,  $\chi_{\text{CO}_2}$ , and  $\chi_{\text{O}_2}$ . Using Eqns. II and III to eliminate  $\chi_{\text{CO}_2}$  and  $\chi_{\text{O}_2}$ , Eqn. I becomes

$$\chi_{\text{CO}}(1 - 2Z + Z\chi_{\text{CO}})^{0.5}(P/P^\circ)^{0.5} - [2Z - (1 + Z)\chi_{\text{CO}}]\exp(-\Delta G_T^\circ/R_u T) = 0.$$

The above expression is easily solved for  $\chi_{\text{CO}}$  by applying Newton–Raphson iteration, which can be implemented simply using spreadsheet software. The other unknowns,  $\chi_{\text{CO}}$  and  $\chi_{\text{O}_2}$ , are then recovered using Equations II and III.


Results are shown in Table 2.2 for four levels each of temperature and pressure. Figure 2.12 shows the CO mole fractions over the range of parameters investigated.

#### Comments

Two general observations concerning these results can be made. First, at any fixed temperature, increasing the pressure suppresses the dissociation of  $\text{CO}_2$  into  $\text{CO}$  and  $\text{O}_2$ ; second, increasing the temperature at a fixed pressure promotes the dissociation. Both of these trends are consistent with the **principle of Le Châtelier** that states that any

**Table 2.2** Equilibrium compositions at various temperatures and pressures for  
 $\text{CO}_2 \rightleftharpoons \text{CO} + \frac{1}{2}\text{O}_2$

	$P = 0.1 \text{ atm}$	$P = 1 \text{ atm}$	$P = 10 \text{ atm}$	$P = 100 \text{ atm}$
$T = 1500 \text{ K}, \Delta G_f^\circ = 1.5268 \cdot 10^8 \text{ J/kmol}$				
$\chi_{\text{CO}}$	$7.755 \cdot 10^{-4}$	$3.601 \cdot 10^{-4}$	$1.672 \cdot 10^{-4}$	$7.76 \cdot 10^{-5}$
$\chi_{\text{CO}_2}$	0.9988	0.9994	0.9997	0.9999
$\chi_{\text{O}_2}$	$3.877 \cdot 10^{-4}$	$1.801 \cdot 10^{-4}$	$8.357 \cdot 10^{-5}$	$3.88 \cdot 10^{-5}$
$T = 2000 \text{ K}, \Delta G_f^\circ = 1.10462 \cdot 10^8 \text{ J/kmol}$				
$\chi_{\text{CO}}$	0.0315	0.0149	$6.96 \cdot 10^{-3}$	$3.243 \cdot 10^{-3}$
$\chi_{\text{CO}_2}$	0.9527	0.9777	0.9895	0.9951
$\chi_{\text{O}_2}$	0.0158	0.0074	$3.48 \cdot 10^{-3}$	$1.622 \cdot 10^{-3}$
$T = 2500 \text{ K}, \Delta G_f^\circ = 6.8907 \cdot 10^7 \text{ J/kmol}$				
$\chi_{\text{CO}}$	0.2260	0.1210	0.0602	0.0289
$\chi_{\text{CO}_2}$	0.6610	0.8185	0.9096	0.9566
$\chi_{\text{O}_2}$	0.1130	0.0605	0.0301	0.0145
$T = 3000 \text{ K}, \Delta G_f^\circ = 2.7878 \cdot 10^7 \text{ J/kmol}$				
$\chi_{\text{CO}}$	0.5038	0.3581	0.2144	0.1138
$\chi_{\text{CO}_2}$	0.2443	0.4629	0.6783	0.8293
$\chi_{\text{O}_2}$	0.2519	0.1790	0.1072	0.0569

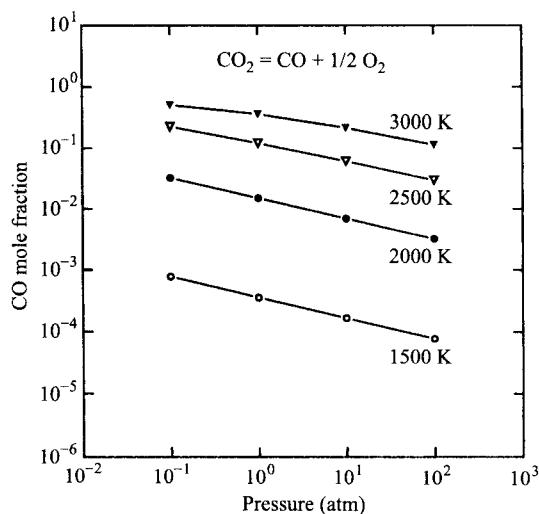

**Figure 2.12** The CO mole fractions resulting from dissociation of pure  $\text{CO}_2$  at various pressures and temperatures.

system initially in a state of equilibrium when subjected to a change (e.g., increasing pressure or temperature) will shift in composition in such a way as to minimize the change. For an increase in pressure, this translates to the equilibrium shifting in the direction to produce fewer moles. For the  $\text{CO}_2 \rightleftharpoons \text{CO} + \frac{1}{2}\text{O}_2$  reaction, this means a shift to the left, to the  $\text{CO}_2$  side. For equimolar reactions, pressure has no effect. When the temperature is increased, the composition shifts in the endothermic direction. Since heat is absorbed when  $\text{CO}_2$  breaks down into  $\text{CO}$  and  $\text{O}_2$ , increasing the temperature produces a shift to the right, to the  $\text{CO} + \frac{1}{2}\text{O}_2$  side.

---

## Complex Systems

The preceding sections focused on simple situations involving a single equilibrium reaction; however, in most combustion systems, many species and several simultaneous equilibrium reactions are important. In principle, the previous example could be extended to include additional reactions. For example, the reaction  $\text{O}_2 \rightleftharpoons 2\text{O}$  is likely to be important at the temperatures considered. Including this reaction introduces only one additional unknown,  $\chi_{\text{O}}$ . We easily add an additional equation to account for the  $\text{O}_2$  dissociation:

$$(\chi_{\text{O}}^2/\chi_{\text{O}_2})P/P^\circ = \exp(-\Delta G_T^{\circ\prime}/R_u T),$$

where  $\Delta G_T^{\circ\prime}$  is the appropriate standard-state Gibbs function change for the  $\text{O}_2 \rightleftharpoons 2\text{O}$  reaction. The element-conservation expression (Eqn. II) is modified to account for the additional O-containing species,

$$\frac{\text{No. of C atoms}}{\text{No. of O atoms}} = \frac{\chi_{\text{CO}} + \chi_{\text{CO}_2}}{\chi_{\text{CO}} + 2\chi_{\text{CO}_2} + 2\chi_{\text{O}_2} + \chi_{\text{O}}},$$

and Eqn. III becomes

$$\chi_{\text{CO}} + \chi_{\text{CO}_2} + \chi_{\text{O}_2} + \chi_{\text{O}} = 1.$$

We now have a new set of four equations with four unknowns to solve. Since two of the four equations are nonlinear, it is likely that some method of simultaneously solving nonlinear equations would be applied. Appendix E presents the **generalized Newton's method**, which is easily applied to such systems.

An example of the above approach being applied to the C, H, N, O system is the computer code developed by Olikara and Borman [8]. This code solves for 12 species, invoking seven equilibrium reactions and four atom-conservation relations, one each for C, O, H, and N. This code was developed specifically for internal combustion engine simulations and is readily imbedded as a subroutine in simulation codes. This code is used in the software provided with this book, as explained in Appendix F.

One of the most frequently used general equilibrium codes is the powerful NASA Chemical Equilibrium Code [5], designated CEC86. The code is frequently updated so the "86" represents the update year. This code is capable of handling over 400 different species, and many special problem features are

built into it. For example, rocket nozzle performance and shock calculations can be performed. The theoretical approach to the equilibrium calculation does not employ equilibrium constants, but rather techniques are applied to minimize either the Gibbs or Helmholtz energies, subject to atom-balance constraints.

A more recent arrival on the equilibrium-calculation scene is the PC-based STANJAN code [7]. This is an efficient, user-friendly code available as freeware through Stanford University. This robust and flexible code uses the element potential method to calculate equilibrium compositions.

---


## EQUILIBRIUM PRODUCTS OF COMBUSTION

### Full Equilibrium

When we combine the first law with complex chemical equilibrium principles, the adiabatic flame temperature and the detailed composition of the products of combustion can be obtained by solving Eqns. 2.40 (or 2.41) and 2.66 simultaneously, with appropriate atom-conservation constants. An example of such a calculation for constant-pressure (1 atm) combustion of propane with air is shown in Figs. 2.13 and 2.14, where it has been assumed that the only products occurring are CO<sub>2</sub>, CO, H<sub>2</sub>O, H<sub>2</sub>, H, OH, O<sub>2</sub>, O, NO, N<sub>2</sub>, and N.


In Fig. 2.13, we see the adiabatic flame temperature and the **major species** as functions of equivalence ratio. Major products of lean combustion are H<sub>2</sub>O, CO<sub>2</sub>, O<sub>2</sub>, and N<sub>2</sub>; while for rich combustion, they are H<sub>2</sub>O, CO<sub>2</sub>, CO, H<sub>2</sub>, and N<sub>2</sub>. It is interesting to note that the maximum flame temperature, 2278.4 K, occurs not at stoichiometric, but, rather, at a slightly rich equivalence ratio ( $\Phi \approx 1.05$ ), as does the water mole fraction ( $\Phi \approx 1.15$ ). That the maximum temperature is at a slightly rich equivalence ratio is a consequence of both the heat combustion and heat capacity of the products ( $N_{\text{prod}} \cdot \bar{c}_{p,\text{prod}}$ ) declining beyond  $\Phi = 1$ . For equivalence ratios between  $\Phi = 1$  and  $\Phi(T_{\max})$ , the heat capacity decreases more rapidly with  $\Phi$  than  $\Delta H_c$ ; while beyond  $\Phi(T_{\max})$ ,  $\Delta H_c$  falls more rapidly than does the heat capacity. The decrease in heat capacity is dominated by the decrease in number of product moles formed per mole of fuel burned, with the decrease in the mean specific heat being less significant. Also in Fig. 2.13, we see, as a result of dissociation, the simultaneous presence of O<sub>2</sub>, CO, and H<sub>2</sub> at stoichiometric conditions ( $\Phi = 1$ ). Under conditions of “complete combustion,” i.e., no dissociation, all three of these species would be zero; thus, we expose the approximate nature of the “complete-combustion” assumption. Later, we will quantify this effect.

Some of the **minor species** of equilibrium combustion of hydrocarbons in air are shown in Fig. 2.14. Here, we see the atoms O and H and the diatomic species OH and NO, all below the 4000 ppm level, and we see that CO is a

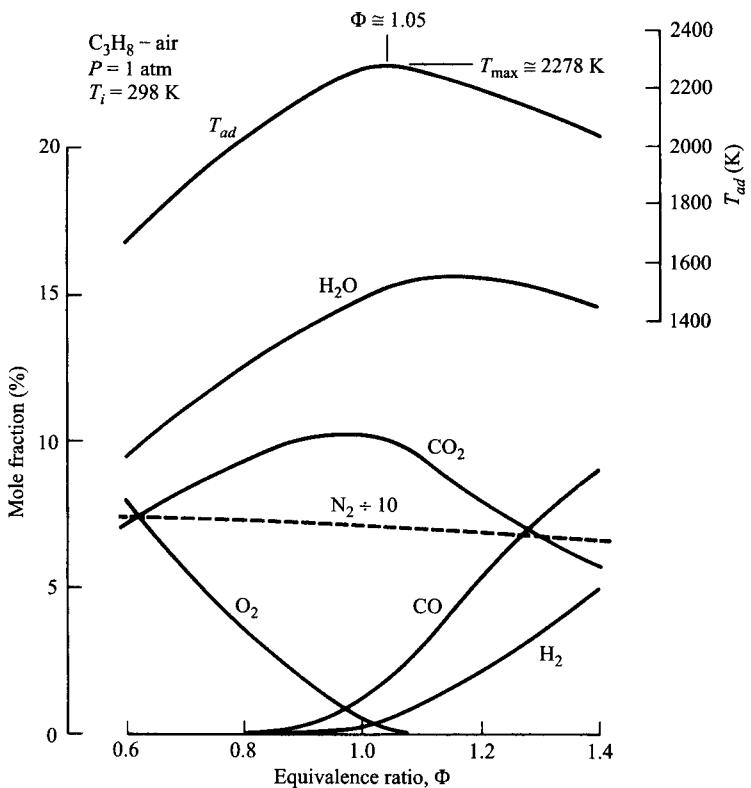

**Figure 2.13** Equilibrium adiabatic flame temperatures and major product species for propane-air combustion at 1 atm.

minor species in lean products, and, conversely, that  $O_2$  is a minor product of rich combustion. The  $CO$  and  $O_2$  concentrations, however, head through the top of the graph on their way to becoming major species in rich and lean products, respectively. It is interesting to note that the level of the hydroxyl radical  $OH$  is more than an order of magnitude greater than the  $O$  atom, and that both peak slightly lean of stoichiometric conditions. Furthermore, although not shown,  $N$ -atom concentrations are several orders of magnitude less than those of the  $O$  atom. The lack of dissociation of the  $N_2$  molecule is a result of the strong triple covalent bond. The  $O$  and  $OH$  maxima in the lean region have implications for the kinetics of NO formation. Equilibrium NO concentrations are rather flat and peak in the lean region, falling rapidly in the rich region. In most combustion systems, NO levels are well below the equilibrium concentrations shown, because of the relatively slow formation reactions, as we will see in Chapters 4 and 5.

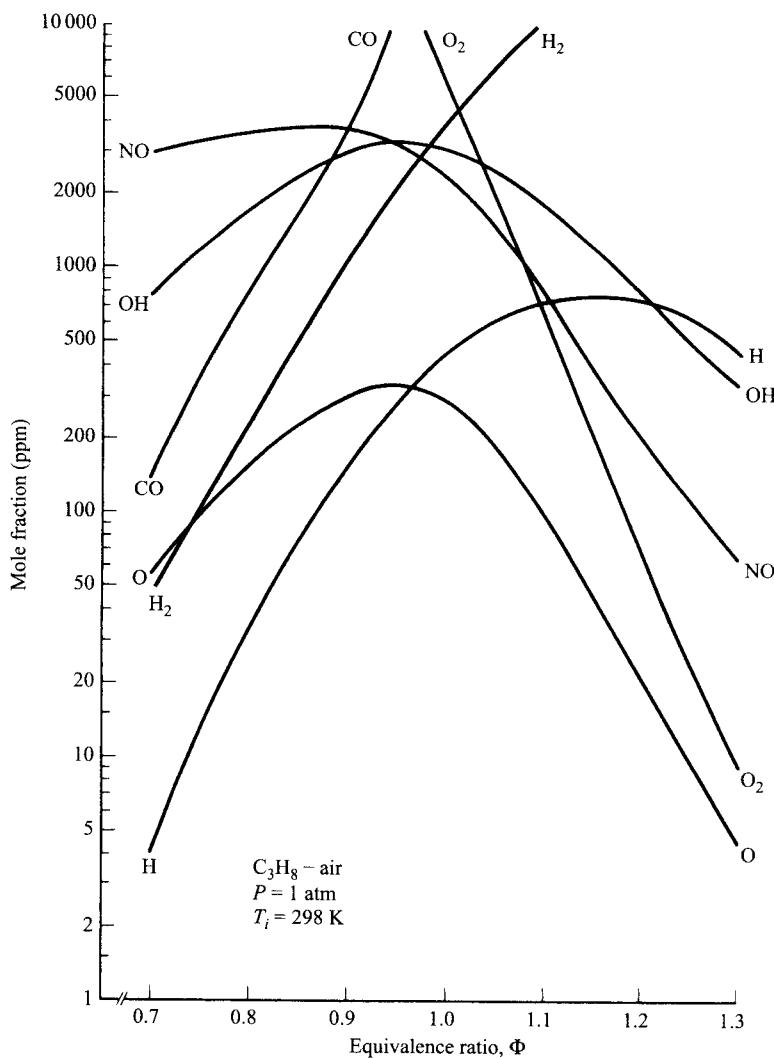


**Figure 2.14** Minor species distributions for propane–air combustion at 1 atm.

## Water-Gas Equilibrium


In this section, we will develop simple relations that allow the calculation of the ideal products of combustion (no dissociation producing minor species) for both lean and rich conditions. For lean combustion, nothing new is involved as we need employ only atom balances; for rich combustion, however, we employ a single equilibrium reaction,  $\text{CO} + \text{H}_2\text{O} \rightleftharpoons \text{CO}_2 + \text{H}_2$ , the so-called **water-gas shift reaction**, to account for the simultaneous presence of the

incomplete products of combustion, CO and H<sub>2</sub>. This water-gas equilibrium is central to steam reforming of CO in the petroleum industry.


Assuming no dissociation, the combustion of an arbitrary hydrocarbon with our simplified air can be represented as

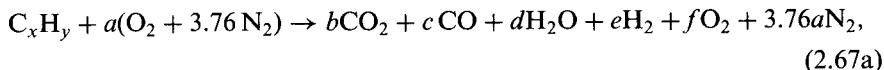

which for *lean or stoichiometric conditions* ( $\Phi \leq 1$ ) becomes

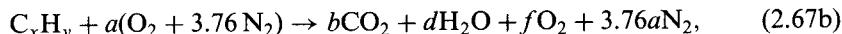

or for *rich conditions* ( $\Phi > 1$ ) becomes

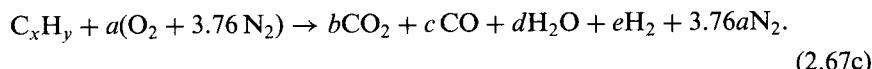

Since the coefficient  $a$  represents the ratio of the number of moles of O<sub>2</sub> in the reactants to the number of moles of fuel, we can relate  $a$  to the equivalence ratio by using Eqn. 2.31, i.e.,

$$a = \frac{x + y/4}{\Phi}; \quad (2.68)$$

thus, given the fuel type and  $\Phi$ ,  $a$  is a known quantity.

Our objective is to find the mole fractions of all of the product species. For lean or stoichiometric combustion, the coefficients  $c$  and  $e$  are zero because there is sufficient O<sub>2</sub> to have all the fuel C and H react to form CO<sub>2</sub> and H<sub>2</sub>O, respectively. The coefficients  $b$ ,  $d$ , and  $f$  can be found by C-, H-, and O-atom balances, respectively; thus,

$$b = x, \quad (2.69\text{a})$$

$$c = 0, \quad (2.69\text{b})$$

$$d = y/2, \quad (2.69\text{c})$$

$$e = 0, \quad (2.69\text{d})$$

$$f = \left( \frac{1 - \Phi}{\Phi} \right) (x + y/4). \quad (2.69\text{e})$$

The total number of moles of products (per mole of fuel burned) can be found by summing the above coefficients together with the  $3.76a$  moles of N<sub>2</sub>:

$$N_{\text{TOT}} = x + y/2 + \left( \frac{x + y/4}{\Phi} \right) (1 - \Phi + 3.76). \quad (2.70)$$

The mole fractions are then determined by dividing each of the coefficients above by  $N_{\text{TOT}}$ :

*Lean or stoichiometric ( $\Phi \leq 1$ )*

$$\chi_{\text{CO}_2} = x/N_{\text{TOT}}, \quad (2.71\text{a})$$

$$\chi_{\text{CO}} = 0, \quad (2.71\text{b})$$

$$\chi_{\text{H}_2\text{O}} = (y/2)/N_{\text{TOT}}, \quad (2.71\text{c})$$

$$\chi_{\text{H}_2} = 0, \quad (2.71\text{d})$$

$$\chi_{\text{O}_2} = \left(\frac{1 - \Phi}{\Phi}\right)(x + y/4)/N_{\text{TOT}}, \quad (2.71\text{e})$$

$$\chi_{\text{N}_2} = 3.76(x + y/4)/(\Phi N_{\text{TOT}}). \quad (2.71\text{f})$$

For rich combustion ( $\Phi > 1$ ), no oxygen appears, so the coefficient  $f$  is zero. That leaves us with four unknowns ( $b$ ,  $c$ ,  $d$ , and  $e$ ). To solve for these, we employ the three element balances (C, H, and O) and the water-gas shift equilibrium,

$$K_p = \frac{(P_{\text{CO}_2}/P^o) \cdot (P_{\text{H}_2}/P^o)}{(P_{\text{CO}}/P^o) \cdot (P_{\text{H}_2\text{O}}/P^o)} = \frac{b \cdot e}{c \cdot d}. \quad (2.72)$$

The use of Eqn. 2.72 causes the system of equations for  $b$ ,  $c$ ,  $d$ , and  $e$  to be nonlinear (quadratic). Solving the element balances in terms of the unknown coefficient  $b$  results in

$$c = x - b \quad (2.73\text{a})$$

$$d = 2a - b - x \quad (2.73\text{b})$$

$$e = -2a + b + x + y/2 \quad (2.73\text{c})$$

Substituting Eqns. 2.73a–c into Eqn. 2.72 yields a quadratic equation in  $b$ , the solution of which is:

$$b = \frac{2a(K_p - 1) + x + y/2}{2(K_p - 1)} \quad (2.74)$$

$$- \frac{1}{2(K_p - 1)} [(2a(K_p - 1) + x + y/2)^2 - 4K_p(K_p - 1)(2ax - x^2)]^{1/2},$$

where the negative root is selected to yield physically realistic (positive) values of  $b$ . Again,

$$N_{\text{TOT}} = b + c + d + e + 3.76a = x + y/2 + 3.76a, \quad (2.75)$$

and the various mole fractions are expressed in terms of  $b$  (Eqn. 2.74):

*Rich* ( $\Phi > 1$ )

$$\chi_{\text{CO}_2} = b/N_{\text{TOT}}, \quad (2.76\text{a})$$

$$\chi_{\text{CO}} = c/N_{\text{TOT}} = (x - b)/N_{\text{TOT}}, \quad (2.76\text{b})$$

$$\chi_{\text{H}_2\text{O}} = d/N_{\text{TOT}} = (2a - b - x)/N_{\text{TOT}}, \quad (2.76\text{c})$$

$$\chi_{\text{H}_2} = e/N_{\text{TOT}} = (-2a + b + x + y/2)/N_{\text{TOT}}, \quad (2.76\text{d})$$

$$\chi_{\text{O}_2} = 0, \quad (2.76\text{e})$$

$$\chi_{\text{N}_2} = 3.76a/N_{\text{TOT}}, \quad (2.76\text{f})$$

where  $a$  is evaluated from Eqn. 2.68. Spreadsheet software can be used conveniently to solve Eqns. 2.76a–f and their ancillary relations for the mole fractions for various fuels (values of  $x$  and  $y$ ) and equivalence ratios. Since  $K_p$  is a function of temperature, an appropriate temperature must be selected; however, at typical combustion temperatures, say 2000–2400 K, the mole fractions are not strongly dependent on the choice of temperature. Selected values of  $K_p$  are shown in Table 2.3.

**Table 2.3** Selected values of equilibrium constant  $K_p$  for water-gas shift reaction,  
 $\text{CO} + \text{H}_2\text{O} \leftrightarrow \text{CO}_2 + \text{H}_2$

$T$ (K)	$K_p$	$T$ (K)	$K_p$
298	$1.05 \cdot 10^5$	2,000	0.2200
500	138.3	2,500	0.1635
1,000	1.443	3,000	0.1378
1,500	0.3887	3,500	0.1241

Table 2.4 shows comparisons between the full-equilibrium calculations and the approximate method above for CO and H<sub>2</sub> mole fractions for propane-air combustion products. The equilibrium constant for the water-gas shift was evaluated at 2200 K for all equivalence ratios. Here, we see that for  $\Phi \geq 1.2$ , the full-equilibrium and approximate methods yield concentrations that differ by only a few percent. As  $\Phi$  approaches unity, the simple method becomes increasingly inaccurate, because dissociation was neglected.

To quantify the degree of dissociation at  $\Phi = 1$ , Table 2.5 shows CO<sub>2</sub> and H<sub>2</sub>O mole fractions calculated using both full equilibrium and the assumption of no dissociation. Here, we see that at 1 atm, approximately 12 percent of the CO<sub>2</sub> dissociates, while just over 4 percent of the H<sub>2</sub>O dissociates.

**Table 2.4** CO and H<sub>2</sub> mole fractions for rich combustion, C<sub>3</sub>H<sub>8</sub>-air, P = 1 atm

$\Phi$	$\chi_{\text{CO}}$			$\chi_{\text{H}_2}$		
	Full Equilibrium	Water-Gas Equilibrium <sup>a</sup>	% Difference	Full Equilibrium	Water-Gas Equilibrium <sup>a</sup>	% Difference
1.1	0.0317	0.0287	-9.5	0.0095	0.0091	-4.2
1.2	0.0537	0.0533	-0.5	0.0202	0.0203	+0.5
1.3	0.0735	0.0741	+0.8	0.0339	0.0333	-1.8
1.4	0.0903	0.0920	+1.9	0.0494	0.0478	-3.4

| <sup>a</sup>For K<sub>p</sub> = 0.193 (T = 2200 K).

**Table 2.5** Degree of dissociation for propane-air combustion products (P = 1 atm,  $\Phi = 1$ )

Species	Mole Fraction		
	Full Equilibrium	No Dissociation	% Dissociated
CO <sub>2</sub>	0.1027	0.1163	11.7
H <sub>2</sub> O	0.1484	0.1550	4.3

## Pressure Effects

Pressure has a significant effect on dissociation. Table 2.6 shows the decreasing degree of CO<sub>2</sub> dissociation with pressure. Since the only other carbon-containing species allowed in the product mixture is CO, the effect shown in Table 2.5 results from the equilibrium reaction  $\text{CO}_2 \rightleftharpoons \text{CO} + \frac{1}{2}\text{O}_2$ . Since the dissociation of CO<sub>2</sub> results in an increase in the total number of moles present, the pressure effect shown is consistent with the principle of Le Châtelier discussed previously. The H<sub>2</sub>O dissociation is more complex in that, in addition to H<sub>2</sub>O, elemental hydrogen is present as OH, H<sub>2</sub>, and H; thus, we cannot isolate the pressure effect on H<sub>2</sub>O in a single equilibrium expression, but need to simultaneously consider other reactions. The net effect of pressure results in a decrease in the H<sub>2</sub>O dissociation, as expected. We note also that the temperature increases as the dissociation is suppressed by increased pressure in accord with Le Châtelier's principle.

**Table 2.6** Effect of pressure on dissociation of propane-air combustion products ( $\Phi = 1$ )

Pressure (atm)	T <sub>ad</sub> (K)	$\chi_{\text{CO}_2}$	% Dissociation	$\chi_{\text{H}_2\text{O}}$	% Dissociation
0.1	2198	0.0961	17.4	0.1444	6.8
1.0	2268	0.1027	11.7	0.1484	4.3
10	2319	0.1080	7.1	0.1512	2.5
100	2353	0.1116	4.0	0.1530	1.3


## SOME APPLICATIONS

In this section, we present two practical applications: the use of recuperation or regeneration to improve energy utilization and/or increase flame temperatures, and the use of flue (or exhaust) gas recirculation to lower flame temperatures. Our intent here is to apply to “real-world” examples the concepts previously developed in this chapter and to illustrate the use of some of the software included with this book.


### Recuperation and Regeneration

A **recuperator** is a heat exchanger in which energy from a steady flow of hot combustion products, i.e., flue gases, is transferred to the air supplied to the combustion process. A general flow diagram is shown in Fig. 2.15. A wide variety of recuperators is used in practice, many of which employ radiation heat transfer from the flue gases, as well as convection. An example of a recuperator for an indirect-fired application is illustrated in Fig. 2.16.

A **regenerator** also transfers energy from the flue gases to the incoming combustion air, but, in this case, an energy storage medium, such as a corrugated steel or ceramic matrix, is alternately heated by the hot gases and cooled by the air. Figure 2.17 illustrates the application of a spinning-disk regenerator to an automotive gas-turbine engine, and Fig. 2.18 shows a similar concept applied to an industrial furnace. In other regenerator concepts, the flow paths are switched alternately to heat and cool the thermal storage medium.

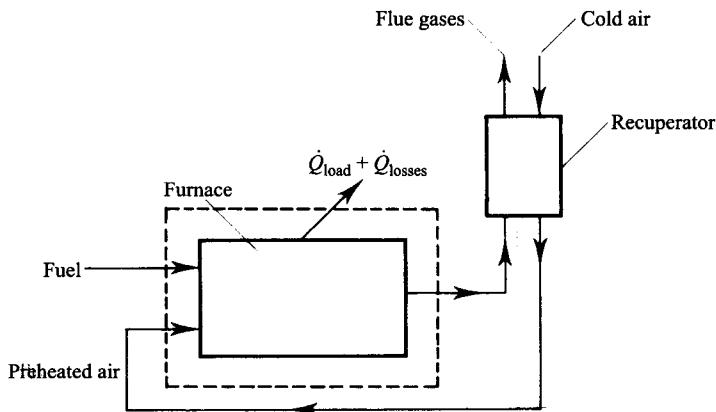

**Figure 2.15** Schematic of furnace with air preheated by recuperation or regeneration. Dashed line indicates the control volume employed in Example 2.8.

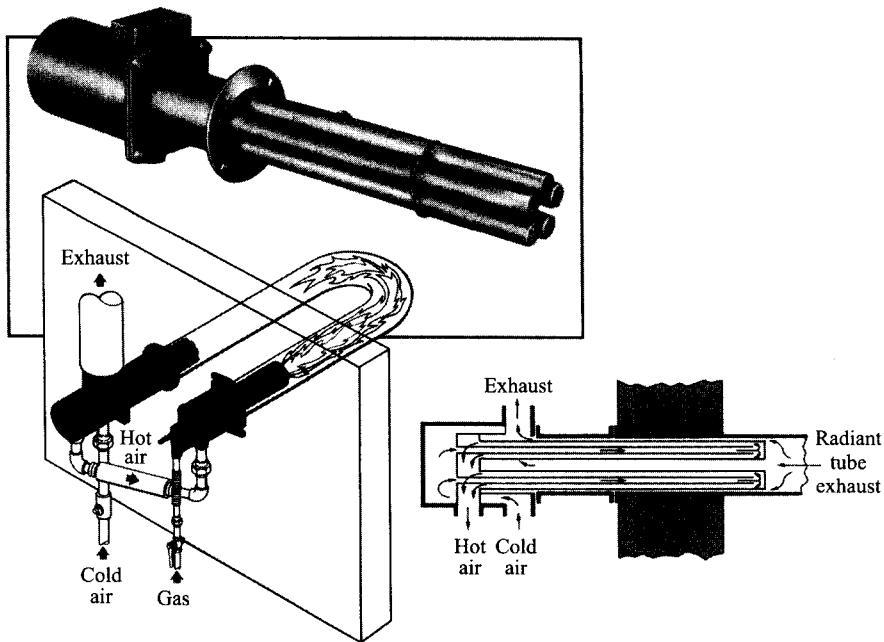

**Figure 2.16** Radiant-tube burner with coupled recuperator for indirect firing. Note that all the flue gases pass through the recuperator.

| SOURCE: Courtesy of Eclipse Combustion.

A recuperator, such as shown in Fig. 2.16, is employed in a natural-gas-fired heat-treating furnace. The furnace operates at atmospheric pressure with an equivalence ratio of 0.9. The fuel gas enters the burner at 298 K, while the air is preheated.


#### Example 2.8

- Determine the effect of air preheat on the adiabatic temperature of the flame zone for a range of inlet air temperatures from 298 K to 1000 K.
- What fuel savings result from preheating the air from 298 K to 600 K? Assume that the temperature of the flue gases at the furnace exit, prior to entering the recuperator, is 1700 K, both with and without air preheat.

#### Solution (Part A)


We will employ the Fortran program HPFLAME, which incorporates the Olikara and Borman equilibrium routines [8], to solve the first-law problem,  $H_{\text{reac}} = H_{\text{prod}}$ . The input file for the program requires the definition of the fuel by providing the number of carbon, hydrogen, oxygen, and nitrogen atoms constituting the fuel molecule, the equivalence ratio, a guess for the adiabatic flame temperature, the pressure, and the reactants' enthalpy. The input file for this example, treating natural gas as methane, is shown below:

Adiabatic Flame Calculation for Specified Fuel, Phi, P, & Reactant  
Enthalpy Using Olikara & Borman Equilibrium Routines

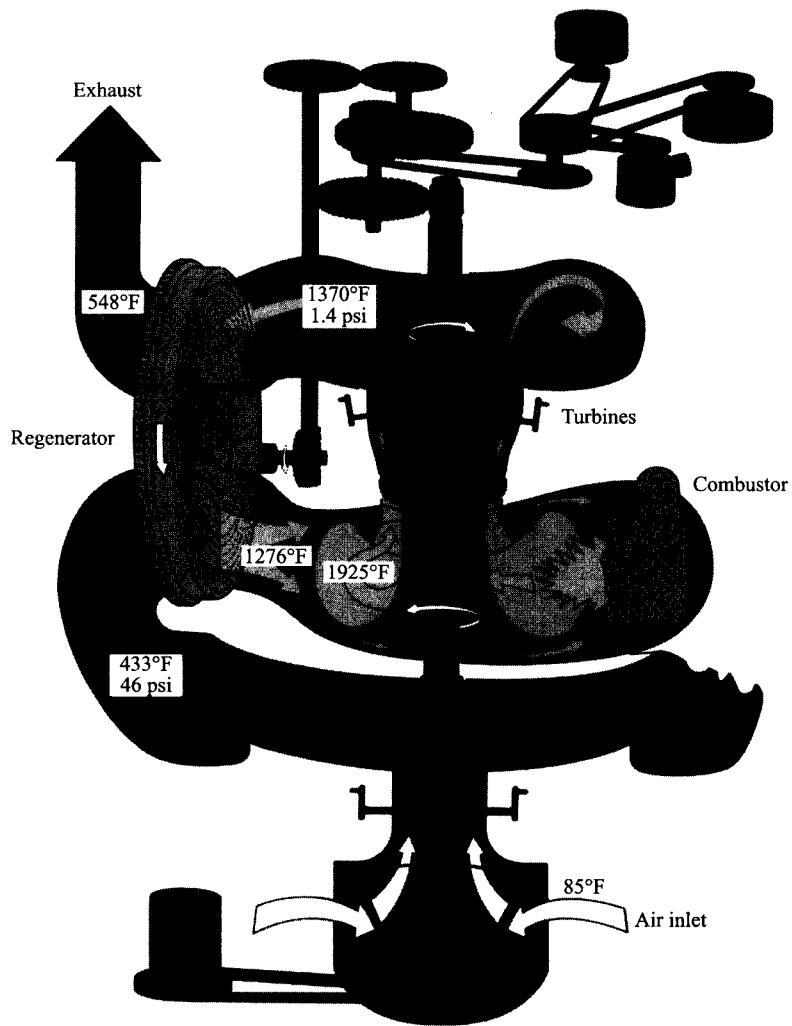


**Figure 2.17** Flow schematic for automotive gas-turbine engine with spinning-disk regenerator. Ambient air is compressed to 46 psi and 433°F before passing through the regenerator. The thermal energy given up by the regenerator heats the air to 1276°F prior to combustion. After the products of combustion expand through the two turbines, they enter the opposite side of the regenerator at 1370°F, returning energy to the spinning disk, and exhaust at 548°F.

SOURCE: Courtesy of Chrysler Corporation.

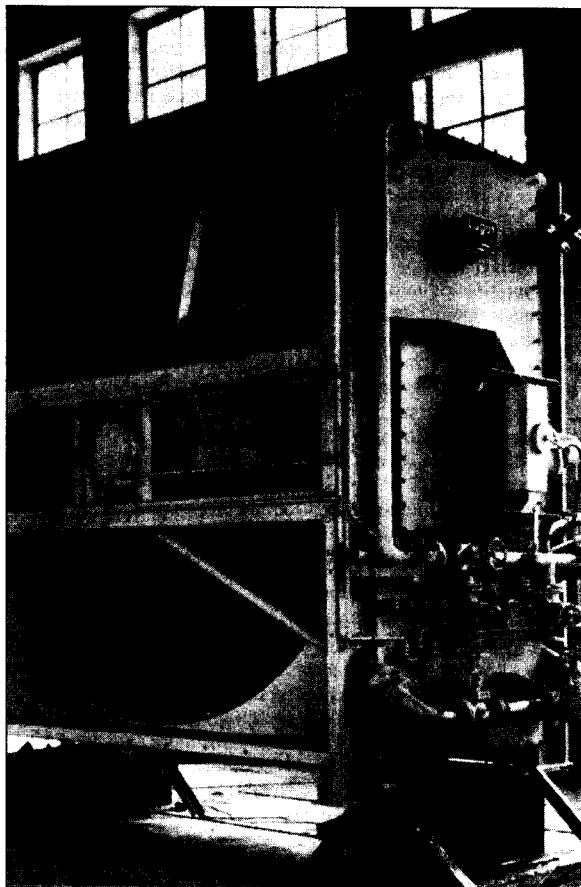

(a)

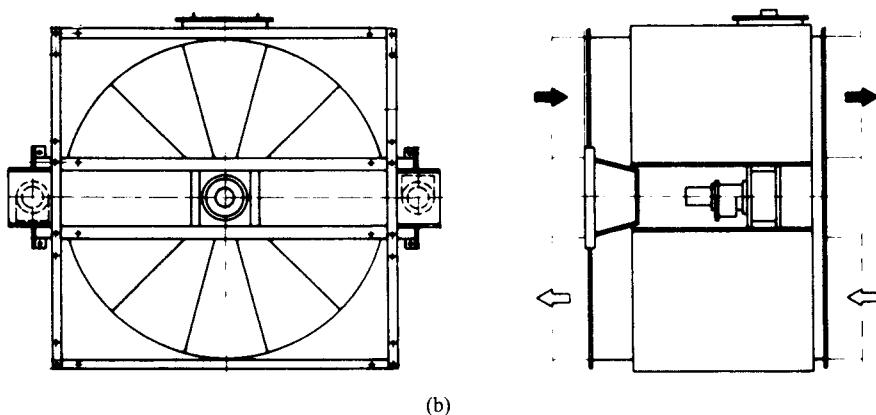

(b)


**Figure 2.18** (a) Steel rotary regenerator used in industrial furnace applications. (b) Flow paths are indicated by the arrows in the sketch.

SOURCE: From Ref. [9]. Courtesy of Industrial Heating Equipment Association.

## Problem Title: EXAMPLE 2.8 Air Preheat at 1000 K

01 /CARBON ATOMS IN FUEL  
 04 /HYDROGEN ATOMS IN FUEL  
 00 /OXYGEN ATOMS IN FUEL  
 00 /NITROGEN ATOMS IN FUEL  
 0.900 /EQUIVALENCE RATIO  
 2000. /TEMPERATURE (K) (Initial Guess)  
 101325.0 /PRESSURE (Pa)  
 155037.0 /ENTHALPY OF REACTANTS PER KMOL FUEL (kJ/kmol-fuel)


The only quantity requiring calculation is the reactants' enthalpy, expressed as kJ/kmol of fuel. To find the number of moles of O<sub>2</sub> and N<sub>2</sub> supplied per mole of fuel, we write our combustion equation as

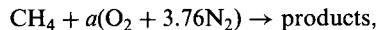

where (Eqn. 2.68)

$$a = \frac{x + y/4}{\Phi} = \frac{(1 + 4/4)}{0.9} = 2.22.$$

Thus,

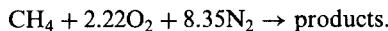

The reactants' enthalpy (per mole of fuel) is then

$$H_{\text{reac}} = \bar{h}_{f,\text{CH}_4}^o + 2.22\Delta\bar{h}_{s,\text{O}_2} + 8.35\Delta\bar{h}_{s,\text{N}_2}.$$


Using Tables A.7, A.11, and B.1, the above expression can be evaluated for various air temperatures, as shown in the following table.

T (K)	$\Delta\bar{h}_{s,\text{O}_2}$ (kJ/kmol)	$\Delta\bar{h}_{s,\text{N}_2}$ (kJ/kmol)	$H_{\text{reac}}$ (kJ/kmol_fuel)	$T_{ad}$ (K)
298	0	0	-74,831	2,134
400	3,031	2,973	-45,254	2,183
600	9,254	8,905	+20,140	2,283
800	15,838	15,046	+86,082	2,373
1,000	22,721	21,468	+155,037	2,456

Using the  $H_{\text{reac}}$  values from the table, the constant-pressure adiabatic flame temperatures are calculated using HPFLAME. These results also are given in the table and plotted in Fig. 2.19.

**Comment (Part A)**

We note from Fig. 2.19 that, for the range of preheat temperatures investigated, a 100 K increase in air temperature results in about a 50 K increase in flame temperature. This effect can be attributed to dissociation and to the larger specific heat of the product gases compared with the air.

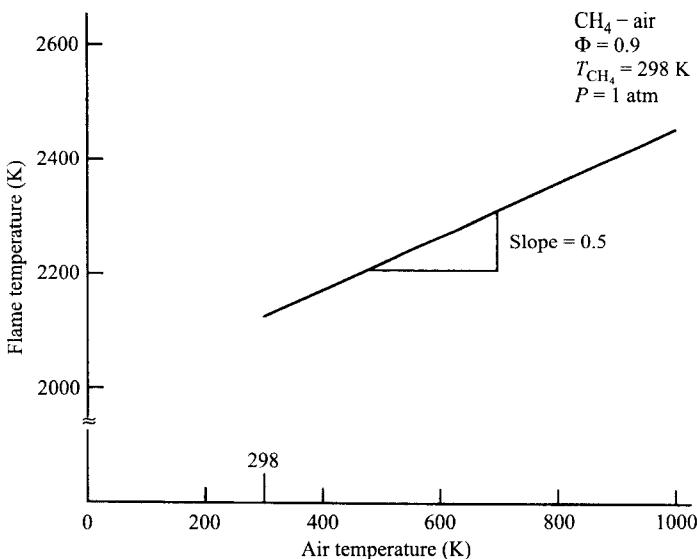

**Figure 2.19** Effect of combustion air preheat on adiabatic flame temperature for methane combustion ( $\Phi = 0.9$ ,  $P = 1 \text{ atm}$ ).

#### Solution (Part B)

To determine the amount of fuel saved as a result of preheating the air to 600 K, we will write an energy balance for the control volume indicated in Fig. 2.15, assuming both the heat transferred to the load and the heat losses are the same, with and without preheat. Assuming steady flow, we apply Eqn. 2.28, recognizing that heat is transferred out of the control volume:

$$\begin{aligned} -\dot{Q} &= -\dot{Q}_{\text{load}} - \dot{Q}_{\text{loss}} = \dot{m}(h_{\text{prod}} - h_{\text{reac}}) \\ &= (\dot{m}_A + \dot{m}_F)h_{\text{prod}} - \dot{m}_Fh_F - \dot{m}_Ah_A. \end{aligned}$$

For convenience, we define a fuel utilization efficiency as

$$\eta \equiv \frac{\dot{Q}}{\dot{m}_F \text{LHV}} = \frac{-([(A/F) + 1]h_{\text{prod}} - (A/F)h_A - h_F)}{\text{LHV}}.$$

To evaluate the above, we require:

$$(A/F) = \frac{(A/F)_{\text{stoic}}}{\Phi} = \frac{17.1}{0.9} = 19.0$$

$$h_F = \tilde{h}_{f,F}^o / MW_F = \frac{-74,831}{16.043} = -4664.4 \text{ kJ/kg}$$

$$h_{\text{prod}} = -923 \text{ kJ/kg} \quad (\text{calculated by TPEQUIL code; see Appendix F})$$

$$h_{A@298 \text{ K}} = 0$$

$$\begin{aligned} h_{A@600\text{K}} &= (0.21\Delta\bar{h}_{s,\text{O}_2} + 0.79\Delta\bar{h}_{s,\text{N}_2})/MW_A \\ &= \frac{0.21(9254) + 0.79(8905)}{28.85} \\ &= 311.2 \text{ kJ/kg.} \end{aligned}$$

Thus, with air entering at 298 K,

$$\begin{aligned} \eta_{298} &= \frac{-[(19+1)(-923) - 19(0) - (-4664.4)]}{50,016} \\ &= 0.276 \end{aligned}$$

and, for air entering at 600 K,

$$\begin{aligned} \eta_{600} &= \frac{-1[(19+1)(-923) - 19(311.2) - (-4664.4)]}{50,016} \\ &= 0.394. \end{aligned}$$

We now calculate the fuel savings, defined as

$$\begin{aligned} \text{Savings} &\equiv \frac{\dot{m}_{F,600} - \dot{m}_{F,298}}{\dot{m}_{F,298}} = 1 - \frac{\eta_{298}}{\eta_{600}} \\ &= 1 - \frac{0.276}{0.394} = 0.30 \end{aligned}$$

or, expressed as a percentage,

Savings = 30%.


#### **Comment (Part B)**

We see that substantial fuel savings can be realized by using recuperators to return some of the energy that would normally go up the stack. Note that the nitric oxide emissions may be affected, since peak temperatures will increase as a result of preheat. With air entering at 600 K, the adiabatic flame temperature increases 150 K (7.1 percent) above the 298 K air case.

---

### **Flue- (or Exhaust-) Gas Recirculation**

In one strategy to decrease the amount of oxides of nitrogen ( $\text{NO}_x$ ) formed and emitted from certain combustion devices, a portion of the burned product gases is recirculated and introduced with the air and fuel. This emission control strategy, and others, is discussed in Chapter 15. The effect of the recirculated gases is to decrease the maximum temperatures in the flame zone. Decreased flame temperatures result in less  $\text{NO}_x$  being formed. Figure 2.20a schematically illustrates the application of flue-gas recirculation (FGR) in a boiler or furnace, while Fig. 2.20b shows the exhaust-gas recirculation (EGR) system used in automotive engines. The following example shows how the principle of conservation of energy can be applied to determine the effect of product gas recirculation on flame temperatures.

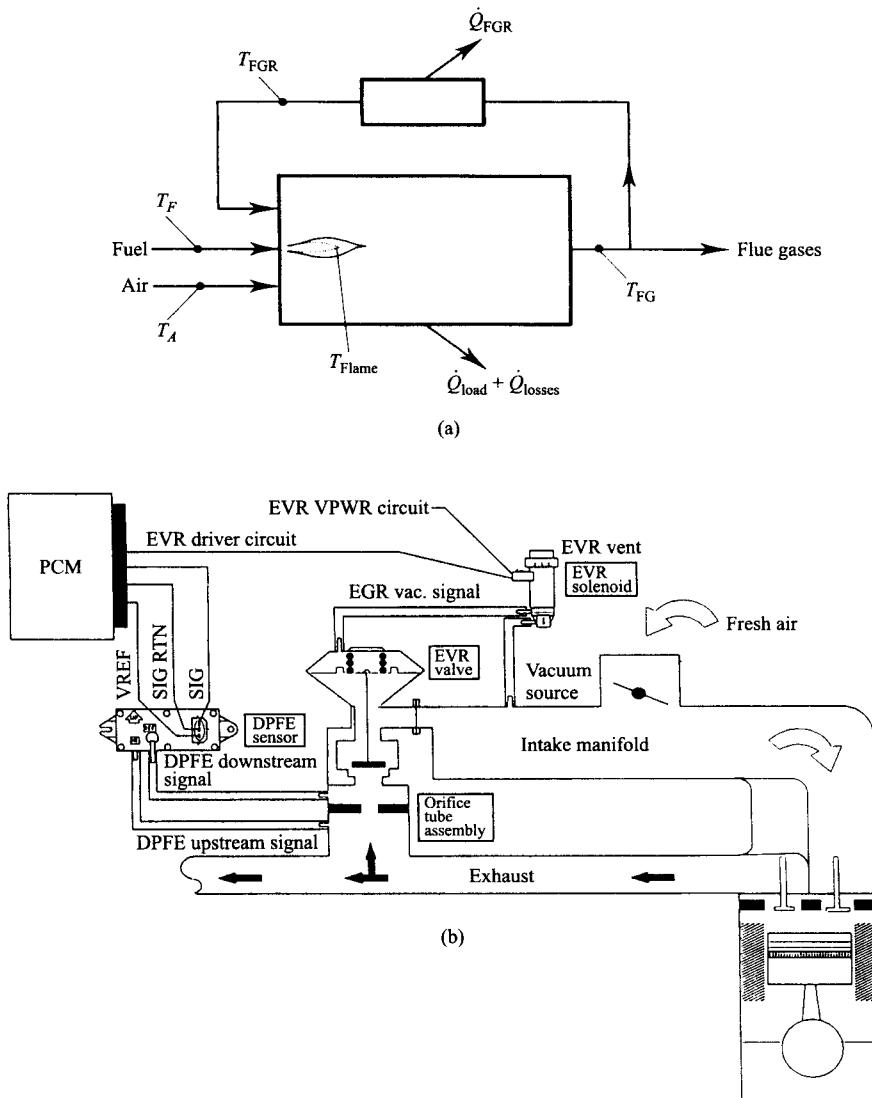


**Figure 2.20** (a) Schematic of flue-gas recirculation applied to boiler or furnace. (b)

Exhaust-gas recirculation system for spark-ignition engine.

| SOURCE: (b) Courtesy of Ford Motor Company.

**Example 2.9**

Consider a spark-ignition engine whose compression and combustion processes have been idealized as a polytropic compression from bottom-dead-center (state 1) to top-dead-center (state 2) and constant-volume combustion (state 2 to state 3), respectively, as shown in the sketch below. Determine the effect of EGR (0–20 percent, expressed as a volume percentage of the air and fuel) on the adiabatic flame temperature and pressure at state 3. The engine compression ratio ( $CR \equiv V_1/V_2$ ) is 8.0, the polytropic exponent is 1.3, and the initial pressure and temperature (state 1) are fixed at 0.5 atm and 298 K, respectively, regardless of the quantity of recirculated gas. The fuel is isoctane and the equivalence ratio is unity.

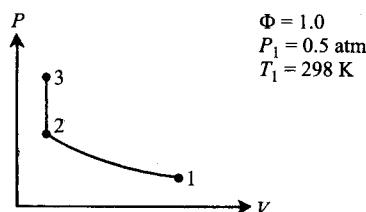
**Solution**

To determine the initial temperature and pressure for the start of combustion (state 2), we apply the polytropic relations:

$$T_2 = T_1(V_1/V_2)^{n-1} = 298(8)^{0.3} = 556 \text{ K}$$

$$P_2 = P_1(V_1/V_2)^n = 0.5(8)^{1.3} = 7.46 \text{ atm (755,885 Pa)}.$$

To analyze the combustion process, we will employ the code UVFLAME. Inputs required for the code that need to be calculated are  $H_{\text{reac}}$  (kJ/kmol—fuel),  $N_{\text{reac}}/N_{\text{fuel}}$ , and  $MW_{\text{reac}}$ . Each of these quantities will vary as percent EGR is changed, although the temperature and pressure remain fixed. To determine these inputs, we first determine the composition of the recycled gases, assuming that they consist of undissociated products of the reaction

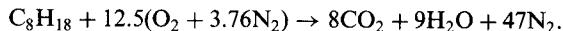

Thus,

$$\begin{aligned}\chi_{\text{CO}_2} &= \frac{8}{8+9+47} = \frac{8}{64} = 0.1250 \\ \chi_{\text{H}_2\text{O}} &= \frac{9}{64} = 0.1406 \\ \chi_{\text{N}_2} &= \frac{47}{64} = 0.7344.\end{aligned}$$

Using Tables A.2, A.6, and A.7, we evaluate the molar specific enthalpy of the recycled gases at  $T_2$  (= 556 K):

$$\begin{aligned}\bar{h}_{\text{EGR}} &= 0.1250(-382,707) + 0.1406(-232,906) + 0.7344(7588) \\ &= -75,012.3 \text{ kJ/kmol}_{\text{EGR}}.\end{aligned}$$

The molar specific enthalpy of the air at  $T_2$  (= 556 K) is

$$\bar{h}_A = 0.21(7853) + 0.79(7588) = 7643.7 \text{ kJ/kmol}_{\text{air}}.$$

The fuel enthalpy at  $T_2$  is calculated from the curvefit coefficients given in Table B.2. Note that the enthalpy generated from these coefficients is the sum of both the enthalpy of formation and sensible enthalpy:

$$\bar{h}_F = -161,221 \text{ kJ/kmol}_{\text{fuel}}.$$

The enthalpy of the reactants at state 2 can now be calculated:

$$H = N_F \bar{h}_F + N_A \bar{h}_A + N_{\text{EGR}} \bar{h}_{\text{EGR}},$$

where, by definition,

$$N_{\text{EGR}} \equiv (N_A + N_F) \% \text{EGR} / 100\%.$$

From the stoichiometry given,  $N_A = 12.5(4.76) = 59.5 \text{ kmol}$ ; thus,

$$H_{\text{reac}} = (1)\bar{h}_F + (59.5)\bar{h}_A + 60.5(\% \text{EGR})\bar{h}_{\text{EGR}/100\%}.$$

Values of  $H_{\text{reac}}$  for various percent EGR are shown in the following table.

The reactant mixture molecular weight is

$$MW_{\text{reac}} = \frac{N_F MW_F + N_A MW_A + N_{\text{EGR}} MW_{\text{EGR}}}{N_F + N_A + N_{\text{EGR}}},$$

where

$$\begin{aligned} MW_{\text{EGR}} &= \sum_{\text{EGR}} \chi_i MW_i \\ &= 0.1250(44.011) + 0.1406(18.016) + 0.7344(28.013) \\ &= 29.607 \text{ kg/kmol}_{\text{EGR}}. \end{aligned}$$


Values for  $MW_{\text{reac}}$  and  $N_{\text{tot}} (= N_F + N_A + N_{\text{EGR}})$  are also shown in the following table.

%EGR	$N_{\text{EGR}}$	$N_{\text{tot}}$	$MW_{\text{reac}}$	$H_{\text{reac}}(\text{kJ/kmol}_{\text{fuel}})$
0	0	60.50	30.261	+293,579
5	3.025	63.525	30.182	+66,667
10	6.050	66.55	30.111	-160,245
15	9.075	69.575	30.045	-387,158
20	12.100	72.60	29.98	-614,070

Using the above information, we exercise the code UVFLAME and calculate the following adiabatic temperatures and the corresponding pressures at state 3.

%EGR	$T_{ad}(= T_3) (\text{K})$	$P_3 (\text{atm})$
0	2,804	40.51
5	2,742	39.41
10	2,683	38.38
15	2,627	37.12
20	2,573	36.51

These results are plotted in Fig. 2.21.

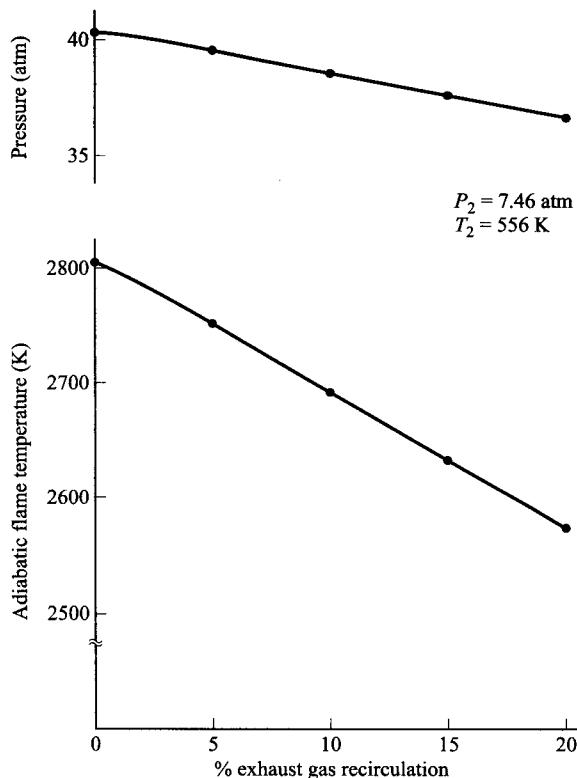

**Figure 2.21** Calculated adiabatic flame temperatures and peak pressures for constant-volume combustion, with combustion products recycled with the fresh air and fuel (Example 2.9).

#### Comments

From the table and the graph, we see that EGR can have a pronounced effect on peak temperatures, with 20 percent EGR resulting in a drop of about 275 K from the zero recycle condition. As we shall see in Chapters 4, 5, and 15, such temperature decreases can have a dramatic effect on  $\text{NO}_x$  formation.

We should note that in real applications, the temperature of the recycled gases is likely to vary with the amount recycled, which, in turn, affects the final peak temperature. Furthermore, we did not check to see if the initial (state 1) temperature was below the dew point of the recycled gases, as condensed water would be undesirable in a real EGR system.

#### Example 2.10

A package boiler, fueled by natural gas ( $\text{CH}_4$ ), operates with a stack-gas  $\text{O}_2$  concentration of 1.5 percent (by volume). The fuel gas is supplied at 298 K, while the air is preheated to 400 K. Determine the adiabatic flame temperature and the equilibrium NO concentration for operation with 15 percent FGR, where the FGR is expressed

as a volume percentage of the fuel and air. The recirculated gases enter the combustion chamber at 600 K. Compare these results with those for operation without FGR.

### Solution

We start by determining the equivalence ratio. For both cases, the overall stoichiometry is the same and can be written as



An O-atom balance yields

$$2a = 2 + 2 + 2x$$

or

$$x = a - 2.$$

Since  $\chi_{\text{O}_2} = 0.015$ , then

$$0.015 = \frac{x}{1 + 2 + x + 3.76a}.$$

Solving the above two relationships simultaneously yields

$$x = 0.1699 \quad \text{and} \quad a = 2.1699.$$

For stoichiometric ( $\Phi = 1$ ) conditions,  $a = 2$ ; thus, the operating equivalence ratio is simply

$$\Phi = \frac{2}{a} = \frac{2}{2.1699} = 0.9217,$$

which follows from Eqns. 2.32 and 2.33a.

We consider first the case without FGR and employ the code HPFLAME to calculate the adiabatic flame temperature and the equilibrium  $\chi_{\text{NO}}$ . To use this code requires the reactants' enthalpy per mole of fuel:

$$H_{\text{reac}} = N_F \bar{h}_F + N_{\text{O}_2} \bar{h}_{\text{O}_2} + N_{\text{N}_2} \bar{h}_{\text{N}_2},$$

where

$$N_F = 1 \text{ (required by kmol-of-fuel basis),}$$

$$N_{\text{O}_2} = a = 2.1699,$$

$$N_{\text{N}_2} = 3.76a = 8.1589.$$

Using Appendix Tables B.1, A.11, and A.7, we evaluate the specific molar enthalpies of the  $\text{CH}_4$ ,  $\text{O}_2$ , and  $\text{N}_2$  at their respective temperatures to obtain the reactant mixture enthalpy:

$$\begin{aligned} H_{\text{reac}} &= 1(-74,831) + 2.1699(3031) + 8.1589(2973) \\ &= -43,997 \text{ kJ.} \end{aligned}$$

Since the boiler operates at essentially atmospheric pressure, the required input file for HPFLAME is then

Adiabatic Flame Calculation for Specified Fuel, Phi, P, & Reactant  
Enthalpy Using Olikara & Borman Equilibrium Routines  
Problem Title: **EXAMPLE 2.10 Case without FGR**

```

01      /CARBON ATOMS IN FUEL
04      /HYDROGEN ATOMS IN FUEL
00      /OXYGEN ATOMS IN FUEL
00      /NITROGEN ATOMS IN FUEL
0.9217  /EQUIVALENCE RATIO
2000.   /TEMPERATURE (K) (Initial Guess)
101325.0 /PRESSURE (Pa)
-43997.0 /ENTHALPY OF REACTANTS PER KMOL FUEL (kJ/kmol-fuel)

```

Running HPFLAME yields

$$T_{ad} = 2209.8 \text{ K}$$

$$\chi_{\text{NO}} = 0.003497 \quad \text{or} \quad 3497 \text{ ppm.}$$

For the 15 percent FGR case, there are several ways to calculate the adiabatic flame temperature using the codes supplied with this book. Our approach will be first to determine the reactant mixture enthalpy (fuel, air, and FGR) per unit mass of mixture and then to employ Eqn. 2.40b:

$$h_{\text{reac}} = h_{\text{prod}}(T_{ad}).$$

We will use TPEQUIL to calculate  $h_{\text{prod}}(T_{ad})$  for assumed values of  $T_{ad}$  and iterate to obtain a final result.

As we have previously calculated the reactant fuel and air enthalpies, we need only to add to these the FGR enthalpy to obtain the total reactants' enthalpy; i.e.,

$$H_{\text{reac}} = N_F \bar{h}_F + N_{O_2} \bar{h}_{O_2} + N_{N_2} \bar{h}_{N_2} + N_{\text{FGR}} \bar{h}_{\text{FGR}},$$

Rather than calculating  $\bar{h}_{\text{FGR}}$  by hand, we employ TPEQUIL with  $T = 600 \text{ K}$ ,  $\Phi = 0.9217$ , and  $P = 101,325 \text{ Pa}$ . This yields

$$h_{\text{FGR}} = -2.499 \cdot 10^3 \text{ kJ/kg}$$

with

$$MW_{\text{FGR}} = 27.72 \text{ kg/kmol.}$$

Thus,

$$\bar{h}_{\text{FGR}} = h_{\text{FGR}} MW_{\text{FGR}} = -67,886 \text{ kJ/kmol}_{\text{FGR}}.$$

We obtain the number of moles of FGR from the definition

$$\begin{aligned} N_{\text{FGR}} &= (N_F + N_A)\%_{\text{FGR}}/100\% \\ &= [1 + (2.1699)4.76]0.15 \\ &= 1.6993 \text{ kmol.} \end{aligned}$$

The reactant mixture enthalpy is

$$\begin{aligned} H_{\text{reac}} &= -43,997 + 1.6993(-67,886) \\ &= -159,356 \text{ kJ,} \end{aligned}$$

and the mass-specific enthalpy is

$$\begin{aligned} h_{\text{reac}} &= \frac{H_{\text{reac}}}{m_{\text{reac}}} = \frac{H_{\text{reac}}}{N_F MW_F + N_A MW_A + N_{\text{FGR}} MW_{\text{FGR}}} \\ &= \frac{-159,356}{1(16.043) + 10.329(28.85) + 1.6993(27.72)} \\ &= -441.3 \text{ kJ/kg}. \end{aligned}$$

We now employ Eqn. 2.40b using TPEQUIL. Knowing that  $T_{ad}$  must be less than the zero-FGR value of 2209.8 K, we guess at 2100 K. With this temperature as input to TPEQUIL, the output value for  $h_{\text{prod}}$  (2100 K) is -348.0 kJ/kg. A second guess of 2000 K yields  $h_{\text{prod}}$  (2000 K) = -519.2 kJ/kg. With these two values bracketing the desired value, we linearly interpolate to obtain  $T_{ad} = 2045.5$  K. Further iteration using TPEQUIL yields the final value:

$$T_{ad} = 2046.5 \text{ K}$$

with

$$X_{\text{NO}} = 0.002297 \quad \text{or} \quad 2297 \text{ ppm}.$$

Comparing these results with those without FGR, we see that 15 percent FGR results in an adiabatic flame temperature drop of approximately 163 K, while equilibrium NO mole fractions decrease by 34 percent.

### Comments

This problem can be solved directly using HPFLAME, provided the correct value of reactants' enthalpy is used. Since the code assumes that the reactants consist only of fuel and air, the FGR must be treated, on an element basis, to be fuel and air; thus, the number of moles of fuel in the reactants exceeds unity. The number of moles of "fuel" from the FGR is the number of moles of FGR divided by the number of moles of products formed per mole of CH<sub>4</sub> burned, as determined by the combustion equation given at the start of the solution; i.e.,

$$N_{\text{"Fuel" from FGR}} = \frac{N_{\text{FGR}}}{N_{\text{prod}}/N_{\text{CH}_4}},$$

and the appropriate input enthalpy for HPFLAME is

$$\bar{h}_{\text{reac}} (\text{kJ/kmol-fuel"}) = \frac{H_{\text{reac}}}{1 + N_{\text{"Fuel" from FGR}}}.$$

For our specific problem,  $N_{\text{"Fuel" from FGR}} = 1.6993(0.0883) = 0.15$  and  $\bar{h}_{\text{reac}} = -159,356/1.15 = -138,571 \text{ kJ/kmol}_{\text{fuel}}$ . Using this value with HPFLAME yields the same result for  $T_{ad}$  as obtained above, but without iteration. For the constant-volume combustion process (see Example 2.9), the code UVFLAME works directly on a mass basis using the values input for the total number of moles and the molecular weight of the reactants; therefore, no correction to the reactant enthalpy is required when dealing with FGR or EGR when using UVFLAME.

We note that the NO mole fractions calculated are *equilibrium* values. In a practical application, the NO concentrations in the combustion chamber and the flue are determined by chemical kinetics (Chapters 4 and 5) as, in most cases, insufficient time is available to achieve equilibrium; nevertheless, the differences between the equilibrium

NO values with and without FGR indicate the potential for the reduction of kinetically determined NO by FGR (see Chapter 15).

---

## SUMMARY

All of the concepts presented in this chapter are of fundamental importance to a study of combustion. We began this chapter with a brief review of basic thermodynamic properties of simple substances and ideal-gas mixtures. We also reviewed the conservation of energy principle, the first law of thermodynamics. The first law in its various forms should be an old friend by now. You should be familiar with the equivalence ratio and how it is used to define rich, lean, and stoichiometric mixtures. Other important thermodynamic properties defined include absolute (or standardized) enthalpies, which are used with the first law to define enthalpies of reaction, heating values, and constant-pressure and constant-volume adiabatic flame temperatures. You should be able to illustrate all of these properties graphically on appropriate thermodynamic coordinates ( $h-T$  or  $u-T$ ). In our discussion of chemical equilibrium, we introduced the Gibbs function and demonstrated its utility in calculating the equilibrium composition of ideal-gas mixtures. You should be able to calculate equilibrium compositions for simple mixtures using equilibrium-constants ( $K_p$ ), together with element conservation. You should also be able to formulate the more complex problems; however, a familiarity with one or more equilibrium computer codes is useful for their solution. The final topics in this chapter dealt with the variation of combustion product mixture composition with equivalence ratio and the importance of dissociation. You should understand which species may be considered major and which minor, and have an appreciation for the order of magnitude of the mole fractions of the 11 important species we considered. Also shown was the usefulness of water-gas equilibrium for dealing with rich product mixtures in a simplified way. You should be able to calculate the composition of combustion product mixtures assuming no dissociation. Although many seemingly diverse topics were discussed, you should appreciate how the principles of the first and second laws of thermodynamics underpin these topics.

---

## NOMENCLATURE

$a$	Molar oxygen-fuel ratio (kmol/kmol)
$A/F$	Mass air-fuel ratio (kg/kg)
$c_p, \bar{c}_p,$	Constant-pressure specific heat (J/kg-K or J/kmol-K)
$c_v, \bar{c}_v$	Constant-volume specific heat (J/kg-K or J/kmol-K)
$E, e$	Total energy (J or J/kg)
$F/A$	Mass fuel-air ratio (kg/kg)

$g$	Gravitational acceleration ( $\text{m/s}^2$ )
$\bar{g}_f^o$	Pure-species Gibbs function ( $\text{J/kmol}$ )
$\bar{g}_f^o$	Gibbs function of formation ( $\text{J/kmol}$ )
$G, \bar{g}$	Gibbs function or free energy ( $\text{J or J/kmol}$ )
$\Delta G^o$	Standard-state Gibbs function change, Eqn. 2.64 ( $\text{J/kmol}$ )
$h_f^o, \bar{h}_f^o$	Enthalpy of formation ( $\text{J/kg or J/kmol}$ )
$H, h, \bar{h}$	Enthalpy ( $\text{J or J/kg or J/kmol}$ )
$\Delta H_c, \Delta h_c, \Delta \bar{h}_c$	Heat of combustion (heating value) ( $\text{J or J/kg or J/kmol}$ )
$\Delta H_R, \Delta h, \Delta \bar{h}_R$	Enthalpy of reaction ( $\text{J or J/kg or J/kmol}$ )
HHV	Higher heating value ( $\text{J/kg}$ )
$K_p$	Equilibrium constant, Eqn. 2.65 (dimensionless)
LHV	Lower heating value ( $\text{J/kg}$ )
$m$	Mass ( $\text{kg}$ )
$\dot{m}$	Mass flowrate ( $\text{kg/s}$ )
$MW$	Molecular weight ( $\text{kg/kmol}$ )
$N$	Number of moles ( $\text{kmol}$ )
$P$	Pressure ( $\text{Pa}$ )
$Q, q$	Heat ( $\text{J or J/kg}$ )
$\dot{Q}, \dot{q}$	Heat-transfer rate ( $\text{J/s = W or W/kg}$ )
$R$	Specific gas constant ( $\text{J/kg-K}$ )
$R_u$	Universal gas constant ( $\text{J/kmol-K}$ )
$S, s, \bar{s}$	Entropy ( $\text{J/K or J/kg-K or J/kmol-K}$ )
$t$	Time ( $\text{s}$ )
$T$	Temperature ( $\text{K}$ )
$U, u, \bar{u}$	Internal energy ( $\text{J or J/kg or J/kmol}$ )
$v$	Velocity ( $\text{m/s}$ )
$V, v$	Volume ( $\text{m}^3$ or $\text{m}^3/\text{kg}$ )
$W, w$	Work ( $\text{J or J/kg}$ )
$\dot{W}, \dot{w}$	Rate of work or power ( $\text{J/s = W or W/kg}$ )
$x$	Number of carbon atoms in fuel
$y$	Number of hydrogen atoms in fuel
$Y$	Mass fraction ( $\text{kg/kg}$ )
$z$	Elevation ( $\text{m}$ )
$Z$	Element ratio

### ***Greek Symbols***

$\alpha$	Fraction dissociated
$\kappa$	Proportionality constant, Eqn. 2.61
$\rho$	Density ( $\text{kg/m}^3$ )
$\Phi$	Equivalence ratio
$\chi$	Mole fraction

### ***Subscripts***

$ad$	Adiabatic
$A$	Air

<i>cv</i>	Control volume
<i>f</i>	Final or formation
<i>F</i>	Fuel
<i>g</i>	Gas
<i>i</i>	<i>i</i> th species or inlet
init	Initial
<i>l</i>	Liquid
mix	Mixture
<i>o</i>	Outlet
prod	Product
reac	Reactant
ref	Reference
<i>s</i>	Sensible
sat	Saturation state
stoic	Stoichiometric
<i>T</i>	At temperature <i>T</i>

***Superscripts***

*o* Denotes standard-state pressure ( $P^o = 1 \text{ atm}$ )

## REFERENCES



1. Kee, R. J., Rupley, F. M., and Miller, J. A., "The Chemkin Thermodynamic Data Base," Sandia National Laboratories Report SAND87-8215 B, March 1991.
2. Moran, M. J., and Shapiro, H. N., *Fundamentals of Engineering Thermodynamics*, Wiley, New York, 1988.
3. Wark, K. Jr., *Thermodynamics*, 5th Ed., McGraw-Hill, New York, 1988.
4. Çengel, Y. A., and Boles, M. A., *Thermodynamics: An Engineering Approach*, McGraw-Hill, New York, 1989.
5. Gordon, S., and McBride, B. J., "Computer Program for Calculation of Complex Chemical Equilibrium Compositions, Rocket Performance, Incident and Reflected Shocks, and Chapman-Jouguet Detonations," NASA SP-273, 1976.
6. Stull, D. R., and Prophet, H., "JANAF Thermochemical Tables," 2nd Ed., NSRDS-NBS 37, National Bureau of Standards, June 1971. (The 3rd Ed. is available from NIST.)
7. Reynolds, W. C., "The Element Potential Method for Chemical Equilibrium Analysis: Implementation in the Interactive Program STANJAN," Department of Mechanical Engineering, Stanford University, January 1986.
8. Olikara, C., and Borman, G. L., "A Computer Program for Calculating Properties of Equilibrium Combustion Products with Some Applications to I. C. Engines," SAE Paper 750468, 1975.

9. Industrial Heating Equipment Association, *Combustion Technology Manual*, 4th Ed., IHEA, Arlington, VA, 1988.
10. Obert, E. F., *Internal Combustion Engines and Air Pollution*, Harper & Row, New York, 1973.
11. Lefebvre, A. H., *Gas Turbine Combustion*, Taylor & Francis, Bristol, PA, 1983.

---

## REVIEW QUESTIONS

1. Make a list of all of the bold faced words in Chapter 2. Make sure you understand the meaning of each.
2. Describe the temperature dependence of the specific heats of monatomic and polyatomic gases. What is the underlying cause of this dependence? What implications does the temperature dependence have for combustion?
3. Why is the equivalence ratio frequently more meaningful than the air-fuel (or fuel-air) ratio when comparing different fuels?
4. What three conditions define the standard reference state?
5. Sketch a graph showing  $H_{\text{reac}}$  and  $H_{\text{prod}}$  as functions of temperature, taking into account nonconstant specific heats.
6. Using your sketch from question 5, illustrate the effect of preheating the reactants on the constant-pressure adiabatic flame temperature.
7. Describe the effect of pressure on the equilibrium mole fractions for the following reactions:

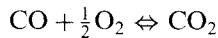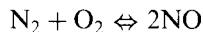

What is the effect of temperature?

8. Make a list of the major and minor species associated with combustion products at high temperature, ranking them from the highest to the lowest concentrations (mole fraction) and giving an approximate numerical value for each at  $\Phi = 0.7$ . Repeat for  $\Phi = 1.3$ . Compare your lists.
9. What is the significance of the water-gas shift reaction?
10. Describe the effect of increasing temperature on the equilibrium composition of combustion products.
11. Describe the effect of increasing pressure on the equilibrium composition of combustion products.
12. Why does flue-gas recirculation decrease flame temperatures? What happens if the flue gas recirculated is at the flame temperature?

## PROBLEMS

- 2.1** Determine the mass fraction of O<sub>2</sub> and N<sub>2</sub> in air, assuming the molar composition is 21 percent O<sub>2</sub> and 79 percent N<sub>2</sub>.

- 2.2** A mixture is composed of the following number of moles of various species:

Species	No. of moles
CO	0.095
CO <sub>2</sub>	6
H <sub>2</sub> O	7
N <sub>2</sub>	34
NO	0.005

- A. Determine the mole fraction of nitric oxide (NO) in the mixture. Also, express your result as mole percent, and as parts-per-million.
- B. Determine the molecular weight of the mixture.
- C. Determine the mass fraction of each constituent.
- 2.3** Consider a gaseous mixture consisting of 5 kmol of H<sub>2</sub> and 3 kmol of O<sub>2</sub>. Determine the H<sub>2</sub> and O<sub>2</sub> mole fractions, the molecular weight of the mixture, and the H<sub>2</sub> and O<sub>2</sub> mass fractions.
- 2.4** Consider a binary mixture of oxygen and methane. The methane mole fraction is 0.2. The mixture is at 300 K and 100 kPa. Determine the methane mass fraction in the mixture and the methane molar concentration in kmol of methane per m<sup>3</sup> of mixture.
- 2.5** Consider a mixture of N<sub>2</sub> and Ar in which there are three times as many moles of N<sub>2</sub> as there are moles of Ar. Determine the mole fractions of N<sub>2</sub> and Ar, the molecular weight of the mixture, the mass fractions of N<sub>2</sub> and Ar, and the molar concentration of N<sub>2</sub> in kmol/m<sup>3</sup> for a temperature of 500 K and a pressure of 250 kPa.
- 2.6** Determine the absolute (standardized) enthalpy in J/kmol<sub>mix</sub> of a mixture of CO<sub>2</sub> and O<sub>2</sub> where  $\chi_{\text{CO}_2} = 0.10$  and  $\chi_{\text{O}_2} = 0.90$  at a temperature of 400 K.
- 2.7** Determine the molecular weight of a stoichiometric ( $\Phi = 1.0$ ) methane-air mixture.
- 2.8** Determine the stoichiometric air-fuel ratio (mass) for propane (C<sub>3</sub>H<sub>8</sub>).
- 2.9** Propane burns in a premixed flame at an air-fuel ratio (mass) of 18:1. Determine the equivalence ratio  $\Phi$ .
- 2.10** For an equivalence ratio of  $\Phi = 0.6$ , determine the associated air-fuel ratios (mass) for methane, propane, and decane (C<sub>10</sub>H<sub>22</sub>).
- 2.11** In a propane-fueled truck, 3 percent (by volume) oxygen is measured in the exhaust stream of the running engine. Assuming “complete” combustion without dissociation, determine the air-fuel ratio (mass) supplied to the engine.

- 2.12** Assuming “complete” combustion, write out a stoichiometric balance equation, like Eqn. 2.30, for 1 mol of an arbitrary alcohol  $C_xH_yO_z$ . Determine the number of moles of air required to burn 1 mol of fuel.
- 2.13** Using the results of problem 2.12, determine the stoichiometric air–fuel ratio (mass) for methanol ( $CH_3OH$ ). Compare your result with the stoichiometric ratio for methane ( $CH_4$ ). What implications does this comparison have?
- 2.14** Consider a stoichiometric mixture of iso-octane and air. Calculate the enthalpy of the mixture at the standard-state temperature (298.15 K) on a per-kmol-of-fuel basis (kJ/kmol<sub>fuel</sub>), on a per-kmol-of-mixture basis (kJ/kmol<sub>mix</sub>), and on a per-mass-of-mixture basis (kJ/kg<sub>mix</sub>).
- 2.15** Repeat problem 2.14 for a temperature of 500 K.
- 2.16** Repeat problem 2.15, but now let the equivalence ratio  $\Phi = 0.7$ . How do these results compare with those of problem 2.15?
- 2.17** Consider a fuel which is an equimolar mixture of propane ( $C_3H_8$ ) and natural gas ( $CH_4$ ). Write out the complete stoichiometric combustion reaction for this fuel burning with air and determine the stoichiometric fuel–air ratio on a molar basis. Also, determine the molar air–fuel ratio for combustion at an equivalence ratio,  $\Phi$ , of 0.8.
- 2.18** Determine the enthalpy of the products of “ideal” combustion, i.e., no dissociation, resulting from the combustion of an iso-octane–air mixture for an equivalence ratio of 0.7. The products are at 1000 K and 1 atm. Express your result using the following three bases: per kmol-of-fuel, per kg-of-fuel, and per kg-of-mixture. *Hint:* You may find Eqns. 2.68 and 2.69 useful; however, you should be able to derive these from atom-conservation considerations.
- 2.19** Butane ( $C_4H_{10}$ ) burns with air at an equivalence ratio of 0.75. Determine the number of **moles** of air required per mole of fuel.
- 2.20** A glass melting furnace is burning ethene ( $C_2H_4$ ) in pure oxygen (not air). The furnace operates at an equivalence ratio of 0.9 and consumes 30 kmol/hr of ethene.
- Determine the energy input rate based on the LHV of the fuel. Express your result in both kW and Btu/hr.
  - Determine the  $O_2$  consumption rate in kmol/hr and kg/s.
- 2.21** Methyl alcohol ( $CH_3OH$ ) burns with excess air at an air–fuel ratio (mass) of 8.0. Determine the equivalence ratio,  $\Phi$ , and the mole fraction of  $CO_2$  in the product mixture assuming complete combustion, i.e., no dissociation.
- 2.22** The lower heating value of vapor *n*-decane is 44,597 kJ/kg at  $T = 298$  K. The enthalpy of vaporization of *n*-decane is 276.8 kJ/kg of *n*-decane. The enthalpy of vaporization of water at 298 K is 2442.2 kJ/kg of water.

- A. Determine the lower heating value of liquid *n*-decane. Use units of kJ/kg *n*-decane to express your result.
- B. Determine the higher heating value of vapor *n*-decane at 298 K.
- 2.23** Determine the enthalpy of formation in kJ/kmol for methane, given the lower heating value of 50,016 kJ/kg at 298 K.
- 2.24** Determine the absolute enthalpy of the mixture given in problem 2.2 for a temperature of 1000 K. Express your result in kJ/kmol of mixture.
- 2.25** The lower heating value of methane is 50,016 kJ/kg (of methane). Determine the heating value:
- per mass of mixture.
  - per mole of air-fuel mixture.
  - per cubic meter of air-fuel mixture.
- 2.26** The higher heating value for liquid octane ( $C_8H_{18}$ ) at 298 K is 47,893 kJ/kg and the heat of vaporization is 363 kJ/kg. Determine the enthalpy of formation at 298 K for octane vapor.
- 2.27** Verify the information in Table 2.1 under the headings  $\Delta h_R$  (kJ/kg of fuel),  $\Delta h_R$  (kJ/kg of mix), and  $(O/F)_{\text{stoic}}$  for the following:
- $CH_4$ -air
  - $H_2-O_2$ .
  - $C(s)$ -air.
- Note that any  $H_2O$  in the product is assumed to be in the liquid state.
- 2.28** Generate the same information requested in problem 2.27 for a stoichiometric mixture of  $C_3H_8$  (propane) and air.
- 2.29** Consider a liquid fuel. Draw a sketch on *h-T* coordinates illustrating the following quantities:  $h_f(T)$ ;  $h_v(T)$ ; heat of vaporization,  $h_{fg}$ ; heat of formation for fuel vapor; enthalpy of formation for fuel liquid; lower heating value; higher heating value.
- 2.30** Determine the adiabatic flame temperature for constant-pressure combustion of a stoichiometric propane-air mixture assuming reactants at 298 K, no dissociation of the products, and constant specific heats evaluated at 298 K.
- 2.31** Repeat problem 2.30, but using constant specific heats evaluated at 2000 K. Compare your result with that of problem 2.30 and discuss.
- 2.32** Repeat problem 2.30, but now use property tables (Appendix A) to evaluate the sensible enthalpies.
- 2.33\*** Once more, repeat problem 2.30, but eliminate the unrealistic assumptions, i.e., allow for dissociation of the products and variable specific heats. Use

| \*Indicates required or optional use of computer.

HPFLAME (Appendix F), or other appropriate software. Compare and contrast the results of problems 2.30–2.33. Explain why they differ.


- 2.34** Using the data in Appendix A, calculate the adiabatic constant-pressure flame temperature for a boiler operating with the fuel blend and equivalence ratio given in problem 2.17. Assume complete combustion to  $\text{CO}_2$  and  $\text{H}_2\text{O}$  and neglect any dissociation. Also, assume the heat capacity of the combustion products is constant at 1200 K. The boiler operates at 1 atm, and both the air and fuel enter at 298 K.
- 2.35** Repeat problem 2.30, but for constant-volume combustion. Also, determine the final pressure.
- 2.36\*** Use the condition given in problem 2.33, but calculate the constant-volume adiabatic flame temperature using UVFLAME (Appendix F), or other appropriate software. Also, determine the final pressure. Compare your results with those of problem 2.35 and discuss.
- 2.37** Derive the equivalent system (fixed mass) form of the first law corresponding to Eqn. 2.35, which is used to define the heat of reaction. Treat the system as constant pressure with initial and final temperatures equal.
- 2.38** A furnace, operating at 1 atm, uses preheated air to improve its fuel efficiency. Determine the adiabatic flame temperature when the furnace is run at a mass air-fuel ratio of 18 for air preheated to 800 K. The fuel enters at 450 K. Assume the following simplified thermodynamic properties:

$$\begin{aligned} T_{\text{ref}} &= 300 \text{ K}, \\ MW_{\text{fuel}} &= MW_{\text{air}} = MW_{\text{prod}} = 29 \text{ kJ/mol}, \\ c_{p,\text{fuel}} &= 3500 \text{ J/kg-K}; c_{p,\text{air}} = c_{p,\text{prod}} = 1200 \text{ J/kg-K}, \\ \bar{h}_{f,\text{air}}^o &= \bar{h}_{f,\text{prod}}^o = 0, \\ \bar{h}_{f,\text{fuel}}^o &= 1.16 \cdot 10^9 \text{ J/kmol}. \end{aligned}$$

- 2.39** Consider the constant-pressure, adiabatic combustion of a stoichiometric ( $\Phi = 1$ ) fuel-air mixture where  $(A/F)_{\text{stoic}} = 15$ . Assume the following simplified properties for the fuel, air, and products, with  $T_{\text{ref}} = 300 \text{ K}$ :

	Fuel	Air	Products
$c_p$ (J/kg-K)	3500	1200	1500
$\bar{h}_{f,300}^o$ (J/kg)	$2 \cdot 10^7$	0	$-1.25 \cdot 10^6$

- A. Determine the adiabatic flame temperature for a mixture initially at 600 K.  
 B. Determine the heating value of the fuel at 600 K. Give units.
- 2.40** Consider the combustion of hydrogen ( $\text{H}_2$ ) with oxygen ( $\text{O}_2$ ) in a steady-flow reactor as shown in the sketch. The heat loss through the reactor walls per unit mass flow ( $\dot{Q}/\dot{m}$ ) is 187 kJ/kg. The equivalence ratio is 0.5 and the pressure is 5 atm.

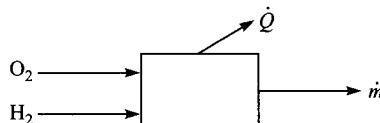

For a zero-Kelvin reference state, approximate enthalpies-of-formation are

$$\begin{aligned}\bar{h}_{f,H_2}^o(0) &= \bar{h}_{f,O_2}^o(0) = 0 \text{ kJ/kmol}, \\ \bar{h}_{f,H_2O}^o(0) &= -238,000 \text{ kJ/kmol}, \\ \bar{h}_{f,OH}^o(0) &= -38,600 \text{ kJ/mol}.\end{aligned}$$

- A. Determine the mean molecular weight of the combustion product gases in the outlet stream, assuming no dissociation.
- B. For the same assumption as in part A, determine the mass fractions of the species in the outlet stream.
- C. Determine the temperature in the product stream at the reactor outlet, again assuming no dissociation. Furthermore, assume that all species have the same constant molar specific heats,  $\bar{c}_{p,i}$ , equal to 40 kJ/kmol-K. The H<sub>2</sub> enters at 300 K and the O<sub>2</sub> at 800 K.
- D. Now assume that dissociation occurs, but that the only minor product is OH. Write out all of the equations necessary to calculate the outlet temperature. List the unknowns in your equation set.

- 2.41** Verify that the results given in Table 2.2 satisfy Eqns. 2.64 and 2.65 for the following conditions:

- A.  $T = 2000 \text{ K}$ ,  $P = 0.1 \text{ atm}$ .
- B.  $T = 2500 \text{ K}$ ,  $P = 100 \text{ atm}$ .
- C.  $T = 3000 \text{ K}$ ,  $P = 1 \text{ atm}$ .

- 2.42** Consider the equilibrium reaction  $O_2 \rightleftharpoons 2O$  in a closed vessel. Assume the vessel contains 1 mol of O<sub>2</sub> when there is no dissociation. Calculate the mole fractions of O<sub>2</sub> and O for the following conditions:

- A.  $T = 2500 \text{ K}$ ,  $P = 1 \text{ atm}$ .
- B.  $T = 2500 \text{ K}$ ,  $P = 3 \text{ atm}$ .

- 2.43** Repeat problem 2.42A, but add 1 mol of an inert diluent to the mixture, e.g., argon. What is the influence of the diluent? Discuss.

- 2.44** Consider the equilibrium reaction  $CO_2 \rightleftharpoons CO + \frac{1}{2}O_2$ . At 10 atm and 3000 K, the equilibrium mole fractions of a particular mixture of CO<sub>2</sub>, CO, and O<sub>2</sub> are 0.6783, 0.2144, and 0.1072, respectively. Determine the equilibrium constant  $K_p$  for this situation.

- 2.45** Consider the equilibrium reaction  $H_2O \rightleftharpoons H_2 + \frac{1}{2}O_2$ . At 0.8 atm, the mole fractions are  $\chi_{H_2O} = 0.9$ ,  $\chi_{H_2} = 0.03$ , and  $\chi_{O_2} = 0.07$ . Determine the equilibrium constant  $K_p$  for this situation.

- 2.46** Consider the equilibrium reaction  $\text{H}_2\text{O} + \text{CO} \rightleftharpoons \text{CO}_2 + \text{H}_2$  at a particular temperature  $T$ . At  $T$ , the enthalpies-of-formation of each species are as follows:

$$\begin{aligned}\bar{h}_{\text{H}_2\text{O}}^{\circ} &= -251,700 \text{ kJ/kmol}, & \bar{h}_{f,\text{CO}_2}^{\circ} &= -396,600 \text{ kJ/kmol}, \\ \bar{h}_{f,\text{CO}}^{\circ} &= -118,700 \text{ kJ/kmol}, & \bar{h}_{f,\text{H}_2}^{\circ} &= 0.\end{aligned}$$

- A. What is the effect of pressure on the equilibrium? Explain.  
 B. What is the effect of temperature on the equilibrium? Explain (calculation required).

- 2.47** Calculate the equilibrium composition for the reaction  $\text{H}_2 + \frac{1}{2}\text{O}_2 \rightleftharpoons \text{H}_2\text{O}$  when the ratio of the number of moles of elemental hydrogen to elemental oxygen is unity. The temperature is 2000 K, and the pressure is 1 atm.

- 2.48\*** Calculate the equilibrium composition for the reaction  $\text{H}_2\text{O} \rightleftharpoons \text{H}_2 + \frac{1}{2}\text{O}_2$  when the ratio of the number of moles of elemental hydrogen to elemental oxygen,  $Z$ , is varied. Let  $Z = 0.5, 1.0$ , and  $2.0$ . The temperature is 2000 K, and the pressure is 1 atm. Plot your results and discuss. *Hint:* Use spreadsheet software to perform your calculations.

- 2.49\*** Calculate the equilibrium composition for the reaction  $\text{H}_2\text{O} \rightleftharpoons \text{H}_2 + \frac{1}{2}\text{O}_2$  when the ratio of the number of moles of elemental hydrogen to elemental oxygen,  $Z$ , is fixed at  $Z = 2.0$ , while the pressure is varied. Let  $P = 0.5, 1.0$ , and  $2.0$  atm. The temperature is 2000 K. Plot your results and discuss. *Hint:* Use spreadsheet software to perform your calculations.

- 2.50** Reformulate problem 2.47 to include the species OH, O, and H. Identify the number of equations and the number of unknowns. They should, of course, be equal. Do not solve your system.

- 2.51\*** Use STANJAN or other appropriate software to calculate the complete equilibrium for the H–O system using the conditions and atom constraints given in problem 2.47.

- 2.52\*** For the conditions given below, list from highest to lowest the mole fractions of  $\text{CO}_2$ , CO,  $\text{H}_2\text{O}$ ,  $\text{H}_2$ , OH, H,  $\text{O}_2$ , O,  $\text{N}_2$ , NO, and N. Also, give approximate values.

- A. Propane–air constant-pressure combustion products at their adiabatic flame temperature for  $\Phi = 0.8$ .  
 B. As in part A, but for  $\Phi = 1.2$ .  
 C. Indicate which species may be considered major and which minor in parts A and B.

- 2.53\*** Consider the adiabatic, constant-pressure combustion of *n*-decane ( $\text{C}_{10}\text{H}_{22}$ ) with air for reactants at 298.15 K. Use HPFLAME (Appendix F) to calculate  $T_{ad}$  and species mole fractions for  $\text{O}_2$ ,  $\text{H}_2\text{O}$ ,  $\text{CO}_2$ ,  $\text{N}_2$ , CO,  $\text{H}_2$ , OH, and NO. Use equivalence ratios of 0.75, 1.00, and 1.25 and evaluate each condition for three pressure levels: 1, 10, and 100 atm. Construct a table showing your results

and discuss the effects of equivalence ratio and pressure on  $T_{ad}$  and the product mixture composition.

- 2.54\*** Consider the combustion products of decane ( $C_{10}H_{22}$ ) with air at an equivalence ratio of 1.25, pressure of 1 atm, and temperature of 2200 K. Estimate the mixture composition assuming no dissociation except for the water-gas shift equilibrium. Compare with results of TPEQUIL.
- 2.55\*** A natural gas-fired industrial boiler operates with excess air such that the  $O_2$  concentration in the flue gases is 2 percent (vol.), measured after removal of the moisture in the combustion products. The flue gas temperature is 700 K without air preheat.
- Determine the equivalence ratio for the system assuming that the properties of natural gas are the same as methane.
  - Determine the thermal efficiency of the boiler, assuming that both the air and fuel enter at 298 K.
  - With air preheat, the flue gases are at 433 K (320°F) after passing through the air preheater. Again, determine the thermal efficiency of the boiler for both air and fuel entering at the preheater and burner, respectively, at 298 K.
  - Assuming premixed operation of the burners, estimate the maximum temperature in the combustion space ( $P = 1$  atm) with air preheat.
- 2.56** The equivalence ratio of a combustion process is often determined by extracting a sample of the exhaust gas and measuring the concentrations of major species. In a combustion experiment using isoctane ( $C_8H_{18}$ ), continuous gas analyzers monitor the exhaust gas and measure a  $CO_2$  concentration of 6 percent by volume and a CO concentration of 1 percent by volume. The sample gas is not dried before the measurements are made.
- What is the equivalence ratio associated with this combustion process? Assume the process is overall lean.
  - If an  $O_2$  analyzer was monitoring the exhaust gas, what would it be reading?
- 2.57** An inventor has devised an atmospheric-pressure process to manufacture methanol. The inventor claims he has developed a catalyst that promotes the economical reaction of CO and  $H_2$  to yield methanol; however, a cheap supply of CO and  $H_2$  is needed. The inventor proposes burning natural gas ( $CH_4$ ) in oxygen under fuel-rich conditions to yield a gas mixture of CO,  $CO_2$ ,  $H_2O$ , and  $H_2$ .
- If methane burns in oxygen at an equivalence ratio  $\Phi = 1.5$ , and the combustion reactions go to equilibrium, what will be the resulting gas composition? Assume the combustion temperature is controlled to 1500 K.
  - What would be the composition if the temperature were controlled to 2500 K?

- 2.58\*** Consider the combustion of 1 kmol of propane with air at 1 atm. Construct a single graph using  $H-T$  coordinates that shows the following:
- Reactants' enthalpy,  $H$ , in kJ versus temperature, over the range of 298–800 K for  $\Phi = 1.0$ .
  - Repeat part A for  $\Phi = 0.75$ .
  - Repeat part A for  $\Phi = 1.25$ .
  - Products' enthalpy,  $H$ , for ideal combustion (no dissociation) versus temperature, over the range of 298–3500 K for  $\Phi = 1.0$ .
  - Repeat part D for  $\Phi = 0.75$ .
  - Repeat part D for  $\Phi = 1.25$ , using the water-gas equilibrium to account for incomplete combustion.
- 2.59** Using the graph constructed in problem 2.58, estimate the constant-pressure adiabatic flame temperatures for the following conditions:
- For reactants at 298 K with  $\Phi = 0.75, 1.0$ , and  $1.25$ .
  - For  $\Phi = 1.0$  with reactants' temperatures of 298 K, 600 K, and 800 K.
  - Discuss your results from parts A and B.
- 2.60\*** Repeat problem 2.58, but use the code TPEQUIL (Appendix F) to calculate the products'  $H$  versus  $T$  curves. Use the same scales as you did in problem 2.58 so that the results can be overlaid for comparison. Discuss the differences associated with the product enthalpy curves for the ideal combustion case compared with the equilibrium case. *Hint:* Make sure the basis for all the enthalpies is per mole of methane. You will have to convert the results from TPEQUIL to this basis.
- 2.61** Repeat parts A and B of problem 2.59 using the graph obtained in problem 2.60. Compare your results with those of problem 2.59 and discuss.
- 2.62\*** Use the code HPFLAME (Appendix F) to determine the adiabatic flame temperature for the conditions given in parts A and B of problem 2.59. Compare your results with those of problems 2.59 and 2.61. Discuss.
- 2.63** A furnace uses preheated air to improve its fuel efficiency. Determine the adiabatic flame temperature when the furnace is operating at a mass air-fuel ratio of 16 for air preheated to 600 K. The fuel enters at 300 K. Assume the following simplified thermodynamic properties:

$$T_{\text{ref}} = 300 \text{ K},$$

$$MW_{\text{fuel}} = MW_{\text{air}} = MW_{\text{prod}} = 29 \text{ kg/kmol},$$

$$c_{p,\text{fuel}} = c_{p,\text{air}} = c_{p,\text{prod}} = 1200 \text{ J/kg-K},$$

$$h_{f,\text{air}}^o = h_{f,\text{prod}}^o = 0,$$

$$h_{f,\text{fuel}}^o = 4 \cdot 10^7 \text{ J/kg}.$$

- 2.64\*** In one strategy to decrease the amount of oxides of nitrogen ( $\text{NO}_x$ ) formed and emitted from boilers, a portion of the flue gases is recirculated and introduced with the air and fuel, as shown in Fig. 2.20a. The effect of the recirculated gases is to decrease the maximum temperatures in the flame zone. Decreased flame temperatures result in less  $\text{NO}_x$  being formed. To increase the effectiveness of a given amount of recycled gases, the gases may be cooled. Your job is to determine what combinations of percent FGR and  $T_{\text{FGR}}$  result in maximum (adiabatic) flame temperatures of approximately 1950 K.

Your design should be based on the following constraints and assumptions: the fuel enters the burner at 298 K and 1 atm; the air enters the burner at 325 K and 1 atm; the oxygen ( $\text{O}_2$ ) mole fraction in the cold, i.e., undissociated, flue gases is  $\chi_{\text{O}_2} = 0.02$ ; the flue gas composition can be approximated as “complete” combustion products for all conditions, with the equivalence ratio determined from the flue-gas  $\text{O}_2$  content; the percent FGR is defined as the molar percentage of fuel and air supplied; the natural gas can be treated as methane; and the maximum flue-gas temperature is 1200 K.

Use graphs and tables as appropriate to present your results. Also, discuss the practical ramifications of adding FGR (pumping requirements, capital equipment costs, etc.). How might these considerations affect the choice of operating conditions (%FGR,  $T_{\text{EGR}}$ )?

---

## APPENDIX 2A SOME FUEL CHEMISTRY

The purpose of this appendix is to acquaint the reader with some of the common hydrocarbons and alcohols used as fuels or in fuel blends. Here, we present naming conventions, fuel molecular structures, and related information on several fuel classes. For a more comprehensive treatment of fuels, particularly those used in engines, the reader is referred to the chapters in Obert [10] and Lefebvre [11].

The various hydrocarbon families (Table 2A.1) are differentiated by whether the fuel molecules consist entirely of single carbon–carbon bonds (C–C) or contain one double (C=C) or one triple (C≡C) bond, and whether the molecules are open chains (all chain ends unconnected) or form rings. The **alkanes**, **alkenes**, and **alkynes** are all open-chain structures, while the **cyclanes** and **aromatics** exhibit ring structures.


For the open-chain families (alkanes, alkenes, and alkynes), the following nomenclature is used to denote the number of carbon atoms contained in a particular family member:

1—meth	5—pent	9—non
2—eth	6—hex	10—dec
3—prop	7—hept	11—undec
4—but	8—oct	12—dodec

**Table 2A.1** Basic hydrocarbon families

Family Name	Other Designations	Molecular Formula	Carbon–Carbon Bonding	Primary Molecular Structure
Alkanes	Paraffins	$C_nH_{2n+2}$	Single bonds only	Straight or branched open chains
Alkenes	Olefins	$C_nH_{2n}$	One double bond, remainder single	Straight or branched open chains
Alkynes	Acetylenes	$C_nH_{2n-2}$	One triple bond, remainder single	Straight or branched open chains
Cyclanes	Cycloalkanes, Cycloparaffins, Naphthenes	$C_2H_{2n}$ or $(CH_2)_n$	Single bonds only	Closed rings
Aromatics	Benzene family	$C_nH_{2n-6}$	Resonance hybrid bonds (Aromatic bonds)	Closed rings

Using this nomenclature, and knowing that the word endings **-ane**, **-ene**, and **-yne** indicate how the carbon atoms are bound in the molecule, alkane, alkene, and alkyne family members containing three carbon atoms, for example, would be given as

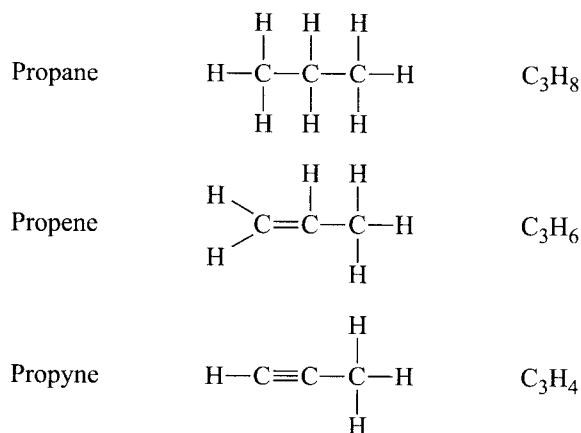


Note that the older conventions can sometimes complicate fuel names for alkene and alkyne family members that have two, three, or four carbon atoms:


	<b>C<sub>1</sub></b>	<b>C<sub>2</sub></b>	<b>C<sub>3</sub></b>	<b>C<sub>4</sub></b>
<b>Alkanes</b>	Methane	Ethane	Propane	Butane
<b>Alkenes</b>	—	Ethene	Propene	Butene
	—	Ethylene	Propylene	Butylene
<b>Alkynes</b>	—	Ethyne	Propyne	Butyne
	—	Acetylene	Methyl acetylene	Ethyl acetylene

The adjective **saturated** is used to denote hydrocarbon molecules in which the maximum number of hydrogen atoms is associated with the carbon atoms. Alkanes are saturated in that it is not possible to add another H atom without breaking a chain; on the other hand, both the alkenes and alkynes are **unsaturated** in that one or two additional H atoms could be added, respectively, by converting the double and triple carbon–carbon bonds to single bonds and using the valence electrons thus freed to form carbon–hydrogen bonds. Using the C<sub>3</sub> families above as examples, we see that propene can be saturated by the addition of two H atoms: C<sub>3</sub>H<sub>6</sub> + H<sub>2</sub> → C<sub>3</sub>H<sub>8</sub>; while propyne is saturated with the addition of four H atoms: C<sub>3</sub>H<sub>4</sub> + 2H<sub>2</sub> → C<sub>3</sub>H<sub>8</sub>.


Many of the higher hydrocarbons (carbon atom number  $n \geq 3$ ) appear as **branched chains** rather than simple **straight chains**. Compounds with straight chains are denoted as **normal**, or with the prefix *n*-. For example, normal-pentane, or *n*-pentane, is represented as

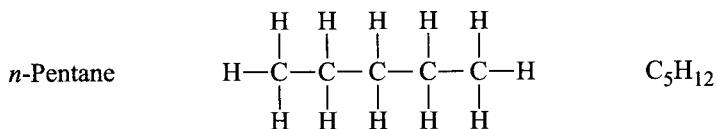

Alternatively, compounds having the same number of carbon and hydrogen atoms can be formed using branched chains. Such compounds are referred to as **isomers**. For example,

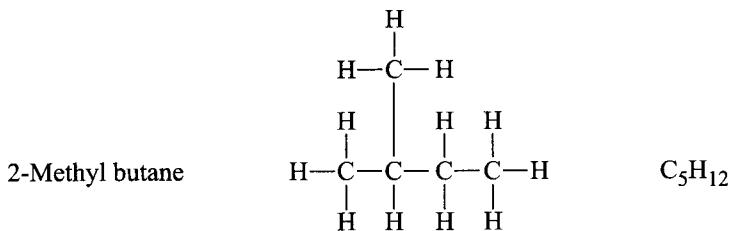


is the branched-chain isomer of pentane: 2-methyl butane. The generic formula for both *n*-pentane and 2-methyl butane is C<sub>5</sub>H<sub>12</sub>. The “2” in 2-methyl butane refers to the carbon atom position (numbering from left to right) where the chain branch is attached. In this example, note that, by symmetry, the same molecular structure obtains with the addition of the chain at either the second or the third carbon atom; thus, it makes no sense to refer to 3-methyl butane. One alkene isomer of particular engineering importance is **2,2,4-trimethyl pentane**, which is often denoted simply as **isoctane**:

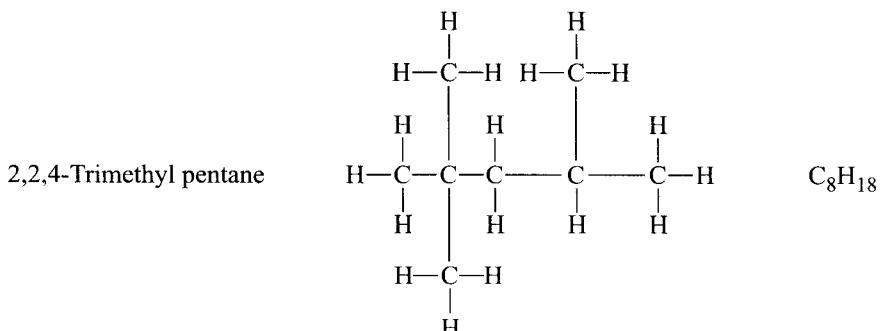


This compound is used as a reference fuel in the knock rating of spark-ignition engines and is assigned an **octane rating** of 100. Fuels more prone to knock than iso-octane thus have octane numbers less than 100, while fuels with greater knock resistance than iso-octane have octane numbers greater than 100.

The basic molecular structure of the **cyclanes** is a closed ring, with all carbon atoms singly bonded; for example, cyclopropane and cyclohexane have the following structures (hydrogen atoms not shown):

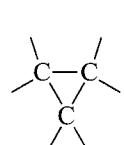


### Cyclopropane, C<sub>3</sub>H<sub>6</sub>

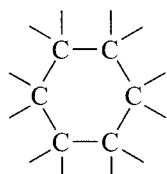

### Cyclohexane, C<sub>6</sub>H<sub>12</sub>


Note that the cyclanes are unsaturated; by breaking the ring, two additional hydrogen atoms could be added to saturate any cyclane. More complex cyclanes are formed by the substitution of paraffinic groups for H atoms.

The **aromatic**, or **benzene derivative**, family is based on a ring of six carbon atoms, but with only one hydrogen atom associated with each carbon atom. The resulting six free valence electrons form so-called resonance hybrid bonds among the six carbon atoms in the ring. The six carbon–carbon bonds are all equivalent, with the bonding electrons delocalized over several atoms. The following diagrams are frequently used to indicate this special kind of bonding:

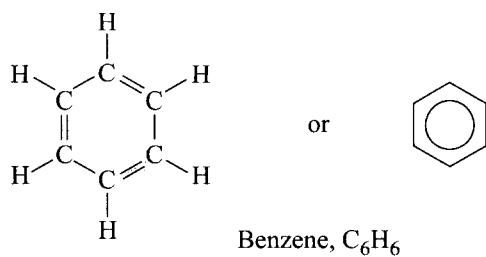

Benzene rings can combine to form polycyclic aromatics, and side chains may be substituted for hydrogen atoms.

Common **alcohols** are formed by the substitution of a hydroxyl group ( $\text{OH}$ ) for an H atom in an alkane molecule. For example, the one-, two-, and three-carbon alcohols are given as

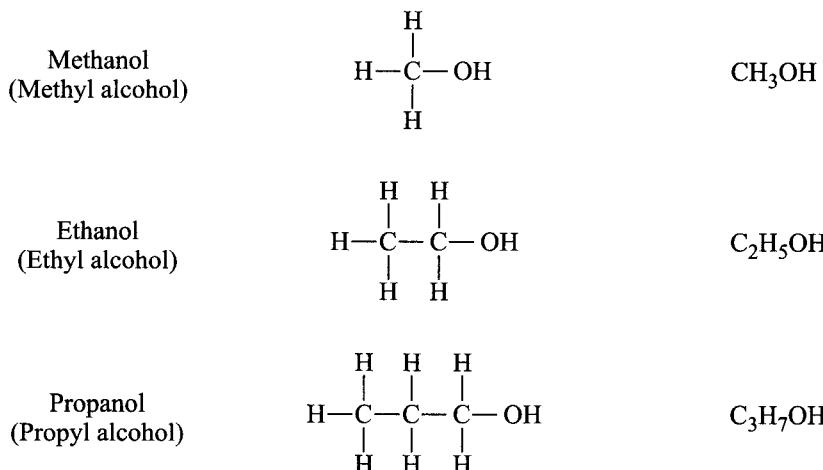

Alcohols are also generically designated as  $\text{ROH}$ , where R is the parent hydrocarbon radical.

# 3

## Introduction to Mass Transfer

---

### OVERVIEW

As indicated in Chapter 1, understanding combustion requires a combined knowledge of thermodynamics (Chapter 2), heat and mass transfer, and chemical reaction rate theory, or chemical kinetics (Chapter 4). Since most readers of this book are unlikely to have had much, if any, exposure to the subject of mass transfer, we present in this chapter a brief introduction to this topic. Mass transfer, a fundamental topic in chemical engineering, is quite complex, much more so than is suggested by the following discussion. We provide here only a rudimentary treatment of the fundamental rate laws and conservation principles governing mass transfer, leaving a more comprehensive treatment of mass transfer until Chapter 7 and to other textbooks [1–4]. To develop some physical insight into mass transfer, we briefly examine the process from a molecular point of view. This has the added advantage of showing the fundamental similarity of mass transfer and heat conduction in gases. Lastly, we illustrate the application of mass transfer concepts to the mathematical descriptions of the evaporation of a liquid layer and a droplet.

---

### RUDIMENTS OF MASS TRANSFER

Imagine opening a bottle of perfume and placing the opened bottle in the center of a room. Using your nose as a sensor, the presence of perfume molecules in the immediate vicinity of the bottle can be detected shortly after the bottle is opened. At a later time, you will find the perfume odor everywhere in the room. The processes whereby the perfume molecules are transported from a region of high concentration, near the bottle, to a region of low concentration, far from

the bottle, are the subject of **mass transfer**. Like heat transfer and momentum transfer, mass may be transported by molecular processes (e.g., collisions in an ideal gas) and/or turbulent processes. The molecular processes are relatively slow and operate on small spatial scales, while turbulent transport depends upon the velocity and size of an eddy carrying the transported material. Our focus here is on molecular transport, while Chapters 11, 12, and 13 deal with the turbulent processes.

## Mass Transfer Rate Laws

**Fick's Law of Diffusion** Let us consider a nonreacting gas mixture comprising just two molecular species: species A and B. **Fick's law** describes the rate at which one species diffuses through the other. For the case of **one-dimensional binary diffusion**, Fick's law on a mass basis is

$$\dot{m}_A'' = Y_A (\dot{m}_A'' + \dot{m}_B'') - \rho D_{AB} \frac{dY_A}{dx}, \quad (3.1)$$

Mass flow of species A per unit area      Mass flow of species A associated with bulk flow per unit area      Mass flow of species A associated with molecular diffusion per unit area

where  $\dot{m}_A''$  is the mass flux of species A and  $Y_A$  is the mass fraction. In this book, the **mass flux** is defined as the mass flowrate of species A per unit area perpendicular to the flow:

$$\dot{m}_A'' = \dot{m}_A / A. \quad (3.2)$$

The units of  $\dot{m}_A''$  are  $\text{kg}/\text{s}\cdot\text{m}^2$ . The idea of a “flux” should be familiar to you since the “heat flux” is the rate at which energy is transported per unit area; i.e.,  $\dot{Q}'' = \dot{Q}/A$  with units of  $\text{J}/\text{s}\cdot\text{m}^2$  or  $\text{W}/\text{m}^2$ . The **binary diffusivity**,  $D_{AB}$ , is a property of the mixture and has units of  $\text{m}^2/\text{s}$ . Values for some binary diffusion coefficients, i.e., diffusivities, at 1 atm are provided in Appendix D.

Equation 3.1 states that species A is transported by two means: the first term on the right-hand-side representing the transport of A resulting from the bulk motion of the fluid, and the second term representing the diffusion of A superimposed on the bulk flow. In the absence of diffusion, we obtain the obvious result that

$$\dot{m}_A'' = Y_A (\dot{m}_A'' + \dot{m}_B'') = Y_A \dot{m}'' \equiv \text{Bulk flux of species A}, \quad (3.3a)$$

where  $\dot{m}''$  is the mixture mass flux. The diffusional flux adds an additional component to the flux of A:

$$-\rho D_{AB} \frac{dY_A}{dx} \equiv \text{Diffusional flux of species A, } \dot{m}_{A,\text{diff}}''. \quad (3.3b)$$

This expression says that the **diffusional flux of A**,  $\dot{m}_{A,\text{diff}}''$ , is proportional to the gradient of the mass fraction, where the constant of proportionality is  $-\rho D_{AB}$ . Thus, we see that species A preferentially moves from a region of high

concentration to a region of low concentration, analogous to energy traveling in the direction from high temperature to low. Note that the negative sign causes the flux to be positive in the  $x$ -direction when the concentration gradient is negative. An analogy between the diffusion of mass and the diffusion of heat (conduction) can be drawn by comparing **Fourier's law of conduction**,

$$\dot{Q}_x'' = -k \frac{dT}{dx}, \quad (3.4)$$

with Fick's law of diffusion in the absence of bulk flow, Eqn. 3.3b. Both expressions indicate a flux ( $\dot{m}_{A,\text{diff}}''$  or  $\dot{Q}_x''$ ) being proportional to the gradient of a scalar quantity (( $dY_A/dx$ ) or ( $dT/dx$ )). We will explore this analogy further when we discuss the physical significance of the **transport properties**,  $\rho\mathcal{D}$  and  $k$ , the proportionality constants in Eqns. 3.3b and 3.4, respectively.

Equation 3.1 is the one-dimensional component of the more general expression

$$\dot{\mathbf{m}}''_A = Y_A(\dot{\mathbf{m}}''_A + \dot{\mathbf{m}}''_B) - \rho\mathcal{D}_{AB}\nabla Y_A, \quad (3.5)$$

where the bold symbols represent vector quantities. In many instances, the molar form of Eqn. 3.5 is useful:

$$\dot{N}_A'' = \chi_A(\dot{N}_A'' + \dot{N}_B'') - c\mathcal{D}_{AB}\nabla\chi_A, \quad (3.6)$$

where  $\dot{N}_A''$  is the molar flux ( $\text{kmol}/\text{s-m}^2$ ) of species A,  $\chi_A$  is the mole fraction, and  $c$  is the mixture molar concentration ( $\text{kmol}_{\text{mix}}/\text{m}^3$ ).

The meanings of bulk flow and diffusional flux become clearer if we express the total mass flux for a binary mixture as the sum of the mass flux of species A and the mass flux of species B:

$$\begin{array}{ccc} \dot{m}'' & = & \dot{m}_A'' + \dot{m}_B''. \\ \text{Mixture} & & \text{Species A} & \text{Species B} \\ \text{mass flux} & & \text{mass flux} & \text{mass flux} \end{array} \quad (3.7)$$

The mixture mass flux on the left-hand-side of Eqn. 3.7 is the total mixture flowrate  $\dot{m}$  per unit of area perpendicular to the flow. This is the  $\dot{m}$  that you are familiar with from previous studies in thermodynamics, etc. Assuming one-dimensional flow for convenience, we now substitute the appropriate expressions for the individual species mass fluxes (Eqn. 3.1) into Eqn. 3.7 and obtain

$$\dot{m}'' = Y_A\dot{m}'' - \rho\mathcal{D}_{AB}\frac{dY_A}{dx} + Y_B\dot{m}'' - \rho\mathcal{D}_{BA}\frac{dY_B}{dx} \quad (3.8a)$$

or

$$\dot{m}'' = (Y_A + Y_B)\dot{m}'' - \rho\mathcal{D}_{AB}\frac{dY_A}{dx} - \rho\mathcal{D}_{BA}\frac{dY_B}{dx}. \quad (3.8b)$$

For a binary mixture,  $Y_A + Y_B = 1$  (Eqn. 2.10); thus,

$$-\rho D_{AB} \frac{dY_A}{dx} - \rho D_{BA} \frac{dY_B}{dx} = 0, \quad (3.9)$$

Diffusional flux  
of species A      Diffusional flux  
of species B

i.e., the sum of the diffusional fluxes of the species is zero. In general, overall mass conservation requires that  $\sum \dot{m}_{i,\text{diff}}'' = 0$ .

It is important at this point to emphasize that we are assuming a binary gas and that species diffusion is a result of concentration gradients only, which is termed **ordinary diffusion**. Real mixtures of interest in combustion contain many components, not just two. Our binary gas assumption, however, allows us to understand the essential physics of many situations without the complications inherent in an analysis of multicomponent diffusion. Also, gradients of temperature and pressure can produce species diffusion, i.e., the **thermal diffusion (Soret)** and **pressure diffusion** effects, respectively. In many systems of interest, these effects are usually small, and, again, their neglect allows us to understand more clearly the essential physics of a problem.

**Molecular Basis of Diffusion** To obtain insight into the molecular processes that result in the macroscopic laws of mass diffusion (Fick's law) and heat diffusion or conduction (Fourier's law), we apply some concepts from the kinetic theory of gases (e.g., [5, 6]). Consider a stationary (no bulk flow) plane layer of a binary gas mixture consisting of rigid, nonattracting molecules in which the molecular mass of each species A and B is essentially equal. A concentration (mass-fraction) gradient exists in the gas layer in the  $x$ -direction and is sufficiently small that the mass-fraction distribution can be considered linear over a distance of a few molecular mean free paths,  $\lambda$ , as illustrated in Fig. 3.1. With these assumptions, we can define the following average molecular properties derived from kinetic theory [1, 5, 6]:


$$\bar{v} \equiv \text{Mean speed of species A molecules} = \left( \frac{8k_B T}{\pi m_A} \right)^{1/2}, \quad (3.10a)$$

$$Z_A'' \equiv \text{Wall collision frequency of A molecules per unit area} = \frac{1}{4} \left( \frac{n_A}{V} \right) \bar{v}, \quad (3.10b)$$

$$\lambda \equiv \text{Mean free path} = \frac{1}{\sqrt{2\pi} \left( \frac{n_{\text{tot}}}{V} \right) \sigma^2}, \quad (3.10c)$$

$$a \equiv \text{Average perpendicular distance from plane of last collision to plane where next collision occurs} = \frac{2}{3} \lambda, \quad (3.10d)$$

where  $k_B$  is Boltzmann's constant,  $m_A$  the mass of a single A molecule,  $n_A/V$  the number of A molecules per unit volume,  $n_{\text{tot}}/V$  the total number of molecules per unit volume, and  $\sigma$  the diameter of both A and B molecules.

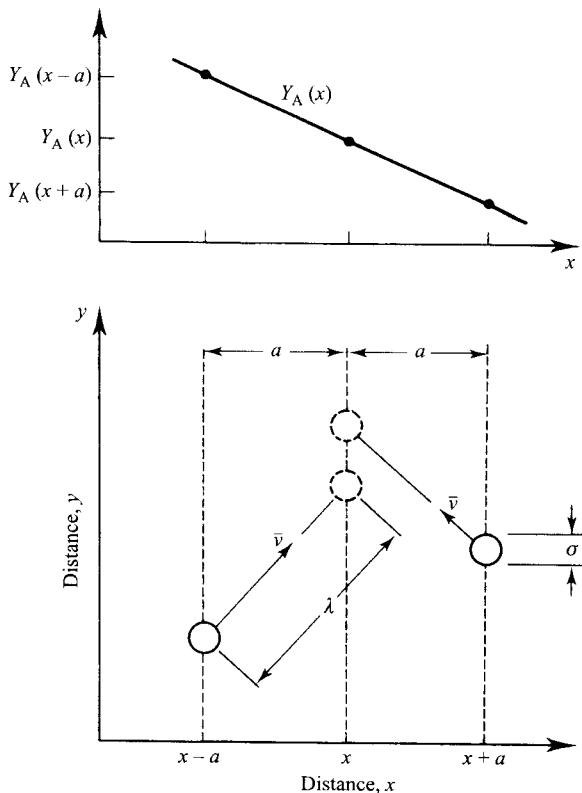

**Figure 3.1** Schematic diagram illustrating mass diffusion of species A molecules from a region of high concentration to low concentration. Mass-fraction distribution is shown at the top.

Assuming no bulk flow for simplicity, the net flux of A molecules at the  $x$ -plane is the difference between the flux of A molecules in the positive  $x$ -direction and the flux of A molecules in the negative  $x$ -direction:

$$\dot{m}_A'' = \dot{m}_{A,(+),x\text{-dir}}'' - \dot{m}_{A,(-),x\text{-dir}}'', \quad (3.11)$$

which, when expressed in terms of the collision frequency, becomes

$$\begin{aligned} \dot{m}_A'' &= (Z_A'')_{x-a} m_A - (Z_A'')_{x+a} m_A. \quad (3.12) \\ \left( \begin{array}{l} \text{Net mass} \\ \text{flux of} \\ \text{species A} \end{array} \right) &\left( \begin{array}{l} \text{Number of A} \\ \text{molecules crossing} \\ \text{plane at } x \text{ originating} \\ \text{from plane at } x-a \end{array} \right) \left( \begin{array}{l} \text{Mass of} \\ \text{single} \\ \text{molecule} \end{array} \right) \\ &\left( \begin{array}{l} \text{Number of A} \\ \text{molecules crossing} \\ \text{plane at } x \text{ originating} \\ \text{from plane at } x+a \end{array} \right) \left( \begin{array}{l} \text{Mass of} \\ \text{single} \\ \text{molecule} \end{array} \right) \end{aligned}$$

We can use the definition of density ( $\rho \equiv m_{\text{tot}}/V_{\text{tot}}$ ) to relate  $Z''_A$  (Eqn. 3.10b) to the mass fraction of A molecules:

$$Z''_A m_A = \frac{1}{4} \frac{n_A m_A}{m_{\text{tot}}} \rho \bar{v} = \frac{1}{4} Y_A \rho \bar{v}. \quad (3.13)$$

Substituting Eqn. 3.13 into Eqn. 3.12 and treating the mixture density and mean molecular speeds as constants yields

$$\dot{m}_A'' = \frac{1}{4} \rho \bar{v} (Y_{A,x-a} - Y_{A,x+a}). \quad (3.14)$$

With our assumption of a linear concentration distribution,

$$\frac{dY_A}{dx} = \frac{Y_{A,x+a} - Y_{A,x-a}}{2a} = \frac{Y_{A,x+a} - Y_{A,x-a}}{4\lambda/3}. \quad (3.15)$$

Solving Eqn. 3.15 for the concentration difference and substituting into Eqn. 3.14, we obtain our final result:

$$\dot{m}_A'' = -\rho \frac{\bar{v}\lambda}{3} \frac{dY_A}{dx}. \quad (3.16)$$

Comparing Eqn. 3.16 with Eqn. 3.3b, we identify the binary diffusivity  $D_{AB}$  as

$$D_{AB} = \frac{\bar{v}\lambda}{3}. \quad (3.17)$$

Using the definitions of the mean molecular speed (Eqn. 3.10a) and mean free path (Eqn. 3.10c), together with the ideal-gas equation of state  $PV = nk_B T$ , the temperature and pressure dependence of  $D_{AB}$  can easily be determined, i.e.,

$$D_{AB} = \frac{2}{3} \left( \frac{k_B^3 T}{\pi^3 m_A} \right)^{1/2} \frac{T}{\sigma^2 P} \quad (3.18a)$$

or

$$D_{AB} \propto T^{3/2} P^{-1}. \quad (3.18b)$$

Thus, we see that the diffusivity depends strongly on temperature (to the  $\frac{3}{2}$  power) and inversely with pressure. The mass flux of species A, however, depends on the product  $\rho D_{AB}$ , which has a square-root temperature dependence and is independent of pressure:

$$\rho D_{AB} \propto T^{1/2} P^0 = T^{1/2}. \quad (3.18c)$$

In many simplified analyses of combustion processes, the weak temperature dependence is neglected and  $\rho D$  is treated as a constant.


**Comparison with Heat Conduction** To see clearly the relationship between mass and heat transfer, we now apply kinetic theory to the transport of energy. We assume a homogeneous gas consisting of rigid nonattracting molecules in which a temperature gradient exists. Again, the gradient is sufficiently small

that the temperature distribution is essentially linear over several mean free paths, as illustrated in Fig. 3.2. The mean molecular speed and mean free path have the same definitions as given in Eqns. 3.10a and 3.10c, respectively; however, the molecular collision frequency of interest is now based on the total number density of molecules,  $n_{\text{tot}}/V$ , i.e.,

$$Z'' \equiv \frac{\text{Average wall collision frequency per unit area}}{\text{ }} = \frac{1}{4} \left( \frac{n_{\text{tot}}}{V} \right) \bar{v}. \quad (3.19)$$

In our no-interaction-at-a-distance hard-sphere model of the gas, the only energy storage mode is molecular translational, i.e., kinetic, energy. We write an energy balance at the  $x$ -plane (see Fig. 3.2) where the net energy flow (per unit area) in the  $x$ -direction is the difference between the kinetic energy flux associated with molecules traveling from  $x - a$  to  $x$  and those traveling from  $x + a$  to  $x$ :

$$\dot{Q}_x'' = Z''(ke)_{x-a} - Z''(ke)_{x+a}. \quad (3.20)$$

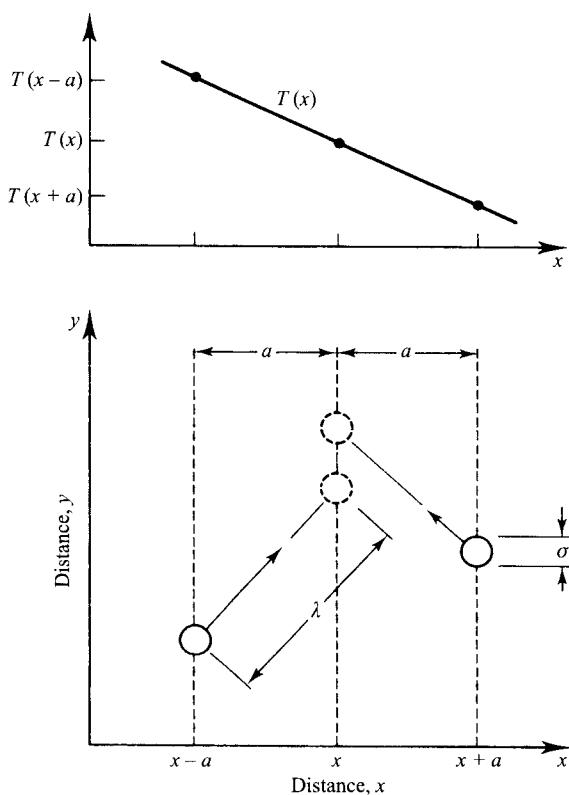

**Figure 3.2** Schematic diagram illustrating energy transfer (heat conduction) associated with molecular motion in a gas. The temperature distribution is shown at the top.

Since the mean kinetic energy of a molecule is given by [5]

$$ke = \frac{1}{2}m\bar{v}^2 = \frac{3}{2}k_B T, \quad (3.21)$$

the heat flux can be related to the temperature as

$$\dot{Q}_x'' = \frac{3}{2}k_B Z''(T_{x-a} - T_{x+a}). \quad (3.22)$$

The temperature difference in Eqn. 3.22 relates to the temperature gradient following the same form as Eqn. 3.15, i.e.,

$$\frac{dT}{dx} = \frac{T_{x+a} - T_{x-a}}{2a}. \quad (3.23)$$

Substituting Eqn. 3.23 into Eqn. 3.22, employing the definitions of  $Z''$  and  $a$ , we obtain our final result for the heat flux:

$$\dot{Q}_x'' = -\frac{1}{2}k_B \left(\frac{n}{V}\right) \bar{v} \lambda \frac{dT}{dx}. \quad (3.24)$$

Comparing the above with Fourier's law of heat conduction (Eqn. 3.4), we can identify the thermal conductivity  $k$  as

$$k = \frac{1}{2}k_B \left(\frac{n}{V}\right) \bar{v} \lambda. \quad (3.25)$$

Expressed in terms of  $T$  and molecular mass and size, the thermal conductivity is

$$k = \left(\frac{k_B^3}{\pi^3 m \sigma^4}\right)^{1/2} T^{1/2}. \quad (3.26)$$

The thermal conductivity is thus proportional to the square-root of temperature,


$$k \propto T^{1/2}, \quad (3.27)$$

as is the  $\rho D_{AB}$  product. For real gases, the true temperature dependence is greater.

## Species Conservation

In this section, we employ the rate law of species transport (Fick's law) to develop a basic species mass conservation expression. Consider the one-dimensional control volume of Fig. 3.3, a plane layer  $\Delta x$  thick. Species A flows into and out of the control volume as a result of the combined action of bulk flow and diffusion. Within the control of volume, species A may be created or destroyed as a result of chemical reaction.

The net rate of increase in the mass of A within the control volume relates to the mass fluxes and reaction rate as follows:

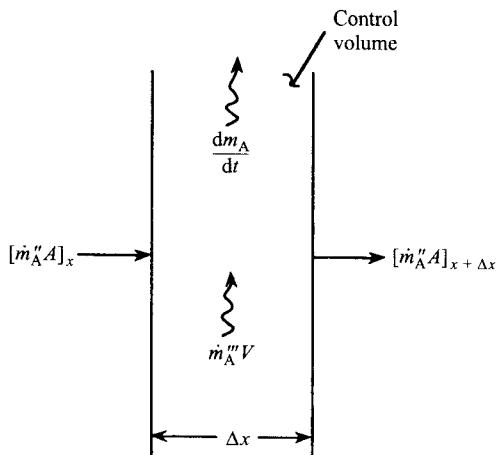

**Figure 3.3** Control volume for one-dimensional analysis of conservation of species A.

$$\frac{dm_{A,cv}}{dt} = [\dot{m}_A'' A]_x - [\dot{m}_A'' A]_{x+\Delta x} + \dot{m}_A''' V, \quad (3.28)$$

Rate of increase of mass of A within control volume	Mass flow of A into the control volume	Mass flow of A out of the control volume	Mass production rate of species A by chemical reaction
---	--	--	--

where the species mass flux  $\dot{m}_A''$  is given by Eqn. 3.1, and  $\dot{m}_A'''$  is the mass production rate of species A per unit volume ( $\text{kg}_A/\text{m}^3\text{-s}$ ). In Chapter 5, we specifically deal with how to determine  $\dot{m}_A'''$ . Recognizing that the mass of A within the control volume is  $m_{A,cv} = Y_A m_{cv} = Y_A \rho V_{cv}$  and that the volume  $V_{cv} = A \Delta x$ , Eqn. 3.28 can be rewritten:

$$A \Delta x \frac{\partial(\rho Y_A)}{\partial t} = A \left[ Y_A \dot{m}'' - \rho D_{AB} \frac{\partial Y_A}{\partial x} \right]_x - A \left[ Y_A \dot{m}'' - \rho D_{AB} \frac{\partial Y_A}{\partial x} \right]_{x+\Delta x} + \dot{m}_A''' A \Delta x. \quad (3.29)$$

Dividing through by  $A \Delta x$  and taking the limit as  $\Delta x \rightarrow 0$ , Eqn. 3.29 becomes

$$\frac{\partial(\rho Y_A)}{\partial t} = - \frac{\partial}{\partial x} \left[ Y_A \dot{m}'' - \rho D_{AB} \frac{\partial Y_A}{\partial x} \right] + \dot{m}_A''' \quad (3.30)$$

or, for the case of steady flow where  $\partial(\rho Y_A)/\partial t = 0$ ,

$$\dot{m}_A''' - \frac{d}{dx} \left[ Y_A \dot{m}'' - \rho D_{AB} \frac{d Y_A}{d x} \right] = 0. \quad (3.31)$$

Equation 3.31 is the steady-flow, one-dimensional form of species conservation for a binary gas mixture, assuming species diffusion occurs only as a result of concentration gradients; i.e., only ordinary diffusion is considered. For the

multidimensional case, Eqn. 3.31 can be generalized as

$$\dot{m}_A''' - \nabla \cdot \dot{m}_A'' = 0. \quad (3.32)$$


Net rate of production of species A by chemical reaction, per unit volume	Net flow of species A out of control volume, per unit volume
--	--

In Chapter 7, we will employ Eqns. 3.31 and 3.32 to develop the conservation of energy principle for a reacting system. Chapter 7 also provides a more detailed treatment of mass transfer, extending the present development to multicomponent (nonbinary) mixtures and including thermal diffusion.

## SOME APPLICATIONS OF MASS TRANSFER

### The Stefan Problem

Consider liquid A, maintained at a fixed height in a glass cylinder as illustrated in Fig. 3.4. A mixture of gas A and gas B flow across the top of the cylinder. If the concentration of A in the flowing gas is less than the concentration of A at the liquid–vapor interface, a driving force for mass transfer exists and species A will diffuse from the liquid–gas interface to the open end of the cylinder. If we assume a steady state exists (i.e., the liquid is replenished at a rate to keep the liquid level constant, or the interface regresses so slowly that its movement can

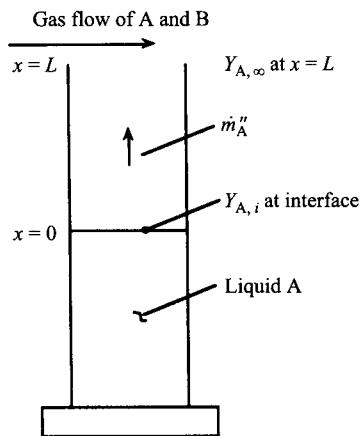

**Figure 3.4** Diffusion of vapor A through a stagnant column of gas B, i.e., the Stefan problem.

be neglected) and, furthermore, assume that B is insoluble in liquid A, then there will be no net transport of B in the tube, producing a stagnant layer of B in the column.

Mathematically, the overall conservation of mass for this system can be expressed as

$$\dot{m}''(x) = \text{constant} = \dot{m}_A'' + \dot{m}_B'' \quad (3.33)$$

Since  $\dot{m}_B'' = 0$ , then

$$\dot{m}_A'' = \dot{m}''(x) = \text{constant} \quad (3.34)$$

Equation 3.1 now becomes

$$\dot{m}_A'' = Y_A \dot{m}_A'' - \rho D_{AB} \frac{dY_A}{dx} \quad (3.35)$$

Rearranging and separating variables, we obtain

$$-\frac{\dot{m}_A''}{\rho D_{AB}} dx = \frac{dY_A}{1 - Y_A} \quad (3.36)$$

Assuming the product  $\rho D_{AB}$  to be constant, Eqn. 3.36 can be integrated to yield

$$-\frac{\dot{m}_A''}{\rho D_{AB}} x = -\ln[1 - Y_A] + C \quad (3.37)$$

where  $C$  is the constant of integration. With the boundary condition

$$Y_A(x = 0) = Y_{A,i} \quad (3.38)$$

we eliminate  $C$  and obtain the following mass-fraction distribution after removing the logarithm by exponentiation:

$$Y_A(x) = 1 - (1 - Y_{A,i}) \exp\left[\frac{\dot{m}_A'' x}{\rho D_{AB}}\right] \quad (3.39)$$

The mass flux of A,  $\dot{m}_A''$ , can be found by letting  $Y_A(x = L) = Y_{A,\infty}$  in Eqn. 3.39. Thus,

$$\dot{m}_A'' = \frac{\rho D_{AB}}{L} \ln\left[\frac{1 - Y_{A,\infty}}{1 - Y_{A,i}}\right] \quad (3.40)$$

From Eqn. 3.40, we see that the mass flux is directly proportional to the product of the density,  $\rho$ , and the mass diffusivity,  $D_{AB}$ , and inversely proportional to the length,  $L$ . Larger diffusivities thus produce larger mass fluxes.

To see the effects of the concentrations at the interface and at the top of the tube, let the mass fraction of A in the freestream flow be zero, while arbitrarily varying  $Y_{A,i}$ , the interface mass fraction, from zero to unity. Physically, this could correspond to an experiment in which dry nitrogen is blown across the tube outlet and the interface mass fraction is controlled by the partial pressure of the liquid, which, in turn, is varied by changing the temperature. Table 3.1

**Table 3.1** Effect of interface mass fraction on mass flux

$Y_{A,i}$	$\dot{m}_A''/(\rho D_{AB}/L)$
0	0
0.05	0.0513
0.10	0.1054
0.20	0.2231
0.50	0.6931
0.90	2.303
0.999	6.908

shows that at small values of  $Y_{A,i}$ , the dimensionless mass flux is essentially proportional to  $Y_{A,i}$ . For  $Y_{A,i}$  greater than about 0.5, the mass flux increases very rapidly.

### Liquid–Vapor Interface Boundary Conditions

In the example above, we treated the gas-phase mass fraction of the diffusing species at the liquid–vapor interface,  $Y_{A,i}$ , as a known quantity. Unless this mass fraction is measured, which is unlikely, some means must be found to calculate or estimate its value. This can be done by assuming equilibrium exists between the liquid and vapor phases of species A. With this equilibrium assumption, and the assumption of ideal gases, the partial pressure of species A on the gas side of the interface must equal the saturation pressure associated with the temperature of the liquid, i.e.,


$$P_{A,i} = P_{\text{sat}}(T_{\text{liq},i}). \quad (3.41)$$

The partial pressure,  $P_{A,i}$ , can be related to the mole fraction of species A,  $\chi_{A,i} = P_{\text{sat}}/P$ , and to the mass fraction:

$$Y_{A,i} = \frac{P_{\text{sat}}(T_{\text{liq},i})}{P} \frac{MW_A}{MW_{\text{mix},i}}, \quad (3.42)$$

where the molecular weight of the mixture also depends on  $\chi_{A,i}$ , and, hence, on  $P_{\text{sat}}$ .

The above analysis has transformed the problem of finding the vapor mass fraction at the interface to the problem of finding the temperature at the interface. In some cases, the interface temperature may be given or known, but, in general, the interface temperature must be found by writing energy balances for the liquid and gas phases and solving them with appropriate boundary conditions, including that at the interface. In the following, we will establish this interface boundary condition, but leave the gas-phase and liquid-phase energy balances for later.

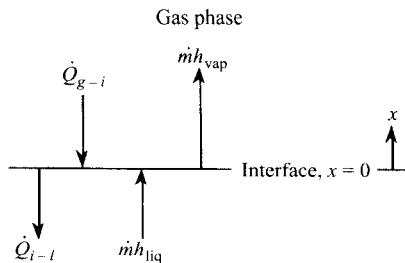

**Figure 3.5** Energy balance at the surface of evaporating fluid.

In crossing the liquid–vapor boundary, we maintain continuity of temperature, i.e.,

$$T_{\text{liq},i}(x = 0^-) = T_{\text{vap},i}(x = 0^+) = T(0), \quad (3.43)$$

and energy is conserved at the interface as illustrated in Fig. 3.5. Heat is transferred from the gas to the liquid surface,  $\dot{Q}_{g-i}$ . Some of this energy goes into heating the liquid,  $\dot{Q}_{i-l}$ , while the remainder causes the phase change. This energy balance is expressed as

$$\dot{Q}_{g-i} - \dot{Q}_{i-l} = \dot{m}(h_{\text{vap}} - h_{\text{liq}}) = \dot{m}h_{fg} \quad (3.44)$$

or

$$\dot{Q}_{\text{net}} = \dot{m}h_{fg}. \quad (3.45)$$

Equation 3.45 can be used to calculate the net heat transferred to the interface if the evaporation rate,  $\dot{m}$ , is known. Conversely, if  $\dot{Q}_{\text{net}}$  is known, the evaporation rate can be determined.

Liquid benzene ( $C_6H_6$ ), at 298 K, is contained in a 1-cm-diameter glass tube and maintained at a level 10 cm below the top of the tube, which is open to the atmosphere. The following properties of benzene are given:

**Example 3.1**

$$\begin{aligned} T_{\text{boil}} &= 353 \text{ K} @ 1 \text{ atm}, \\ h_{fg} &= 393 \text{ kJ/kg} @ T_{\text{boil}}, \\ MW &= 78.108 \text{ kg/kmol}, \\ \rho_l &= 879 \text{ kg/m}^3, \\ D_{C_6H_6-\text{air}} &= 0.88 \cdot 10^{-5} \text{ m}^2/\text{s} @ 298 \text{ K}. \end{aligned}$$

- Determine the mass evaporation rate (kg/s) of the benzene.
- How long does it take to evaporate  $1 \text{ cm}^3$  of benzene?
- Compare the evaporation rate of benzene with that of water. Assume  $D_{H_2O-\text{air}} = 2.6 \cdot 10^{-5} \text{ m}^2/\text{s}$ .

**Solution**A. Find  $\dot{m}_{C_6H_6}$ .

Since the configuration given represents the Stefan problem, we can apply Eqn. 3.40:

$$\dot{m}_{C_6H_6}'' = \frac{\bar{\rho}D_{C_6H_6-air}}{L} \ln \left[ \frac{1 - Y_{C_6H_6,\infty}}{1 - Y_{C_6H_6,i}} \right].$$

In the above,  $D$ ,  $L$ , and  $Y_{C_6H_6,\infty}(= 0)$  are all known; however, we need to evaluate the benzene mass fraction at the interface,  $Y_{C_6H_6,i}$ , and an appropriate mean density,  $\bar{\rho}$ , before proceeding.

From Eqn. 3.42, we know that

$$Y_{C_6H_6,i} = \chi_{C_6H_6,i} \frac{MW_{C_6H_6}}{MW_{\text{mix},i}}$$

where

$$\chi_{C_6H_6,i} = \frac{P_{\text{sat}}(T_{\text{liq},i})}{P}.$$

To evaluate  $P_{\text{sat}}/P$ , we integrate the Clausius–Clapeyron equation, Eqn. 2.19,

$$\frac{dP}{P} = \frac{h_{fg}}{R_u/MW_{C_6H_6}} \frac{dT}{T^2},$$

from the reference state ( $P = 1 \text{ atm}$ ,  $T = T_{\text{boil}} = 353 \text{ K}$ ) to the state at 298 K, i.e.,

$$\frac{P_{\text{sat}}}{P(= 1 \text{ atm})} = \exp \left[ - \frac{h_{fg}}{(R_u/MW_{C_6H_6})} \left( \frac{1}{T} - \frac{1}{T_{\text{boil}}} \right) \right].$$

Evaluating the above,

$$\begin{aligned} \frac{P_{\text{sat}}}{P(= 1 \text{ atm})} &= \exp \left[ \frac{-393,000}{(8315/78.108)} \left( \frac{1}{298} - \frac{1}{353} \right) \right] \\ &= \exp(-1.93) = 0.145. \end{aligned}$$

So,  $P_{\text{sat}} = 0.145 \text{ atm}$  and  $\chi_{C_6H_6} = 0.145$ . The interface mixture molecular weight is then

$$\begin{aligned} MW_{\text{mix},i} &= 0.145(78.108) + (1 - 0.145)28.85 \\ &= 35.99 \text{ kg/kmol}, \end{aligned}$$

where the simplified composition of air is assumed. The interface benzene mass fraction is then

$$Y_{C_6H_6,i} = 0.145 \frac{78.108}{35.99} = 0.3147.$$

For isothermal, isobaric conditions, we can estimate the mean gas density in the tube by using the ideal-gas law and the mean mixture molecular weight as follows:

$$\bar{\rho} = \frac{P}{(R_u/MW)T},$$

where

$$\begin{aligned}\overline{MW} &= \frac{1}{2}(MW_{\text{mix},i} + MW_{\text{mix},\infty}) \\ &= \frac{1}{2}(35.99 + 28.85) = 32.42.\end{aligned}$$

Thus,

$$\bar{\rho} = \frac{101,325}{\left(\frac{8315}{32.42}\right)298} = 1.326 \text{ kg/m}^3.$$

We can now evaluate the benzene mass flux (Eqn. 3.40):

$$\begin{aligned}\dot{m}_{C_6H_6}'' &= \frac{1.326(0.88 \cdot 10^{-5})}{0.1} \ln\left[\frac{1-0}{1-0.3147}\right] \\ &= 1.167 \cdot 10^{-4} \ln(1.459) \\ &= 1.167 \cdot 10^{-4}(0.378) = 4.409 \cdot 10^{-5} \text{ kg/s-m}^2\end{aligned}$$

and

$$\boxed{\dot{m}_{C_6H_6}} = \dot{m}_{C_6H_6}'' \frac{\pi D^2}{4} = 4.409 \cdot 10^{-5} \frac{\pi(0.01)^2}{4} = \boxed{3.46 \cdot 10^{-9} \text{ kg/s}}$$

B. Find the time needed to evaporate 1 cm<sup>3</sup> of benzene.

Since the liquid level is maintained, the mass flux is constant during the time to evaporate the 1 cm<sup>3</sup>; thus,

$$\begin{aligned}t &= \frac{m_{\text{evap}}}{\dot{m}_{C_6H_6}} = \frac{\rho_{\text{liq}} V}{\dot{m}_{C_6H_6}}, \\ t &= \frac{879(\text{kg/m}^3)1 \cdot 10^{-6}(\text{m}^3)}{3.46 \cdot 10^{-9} \text{ (kg/s)}} = \boxed{2.54 \cdot 10^5 \text{ s or } 70.6 \text{ hr}}\end{aligned}$$

C. Find  $\dot{m}_{C_6H_6}/\dot{m}_{H_2O}$ .

Finding  $\dot{m}_{H_2O}$  follows the above; however, the problem is simplified since we can use the steam tables (e.g., [7]), to find  $P_{\text{sat}}$  at 298 K rather than invoking the Clausius–Clapeyron approximation.

From the steam tables,

$$P_{\text{sat}}(298 \text{ K}) = 3.169 \text{ kPa}$$

so

$$\chi_{H_2O,i} = \frac{3169}{101,325} = 0.03128$$

and

$$MW_{\text{mix},i} = 0.03128(18.016) + (1 - 0.03128)28.85 = 28.51.$$

Thus,

$$Y_{H_2O,i} = \chi_{H_2O,i} \frac{MW_{H_2O}}{MW_{\text{mix},i}} = 0.03128 \frac{18.016}{28.51} = 0.01977.$$

The mean molecular weight and mean density in the tube are

$$\overline{MW} = \frac{1}{2}(28.51 + 28.85) = 28.68$$

$$\bar{\rho} = \frac{101,325}{\left(\frac{8315}{28.68}\right)^{298}} = 1.173 \text{ kg/m}^3,$$

where we assume the air outside of the tube is dry.

The evaporation flux is then

$$\dot{m}_{\text{H}_2\text{O}}'' = \frac{1.173(2.6 \cdot 10^{-5})}{0.1} \ln \left[ \frac{1 - 0}{1 - 0.01977} \right]$$

$$= 3.050 \cdot 10^{-4} \ln(1.020)$$

$$= 3.050 \cdot 10^{-4}(0.01997) = 6.09 \cdot 10^{-6} \text{ kg/s-m}^2$$

so,

$$\boxed{\frac{\dot{m}_{\text{C}_6\text{H}_6}}{\dot{m}_{\text{H}_2\text{O}}''}} = \frac{4.409 \cdot 10^{-5}}{6.09 \cdot 10^{-6}} = \boxed{7.2}$$

#### Comment


Comparing the details of the calculations in parts A and C, we see that the higher vapor pressure of the benzene dominates over the higher diffusivity of the water, thus causing the benzene to evaporate more than seven times faster than the water.

## Droplet Evaporation

The problem of the evaporation of a single liquid droplet in a quiescent environment is just the Stefan problem for a spherically symmetric coordinate system. Our treatment of droplet evaporation illustrates the application of mass-transfer concepts to a problem of practical interest. In Chapter 10, we will deal with the droplet evaporation/combustion problem in greater detail; however, we foreshadow the Chapter 10 development by introducing the concept of an evaporation constant and droplet lifetimes.

Figure 3.6 defines the spherically symmetric coordinate system. The radius  $r$  is the only coordinate variable. It has its origin at the center of the droplet, and the droplet radius at the liquid–vapor interface is denoted  $r_s$ . Very far from the droplet surface ( $r \rightarrow \infty$ ), the mass fraction of droplet vapor is  $Y_{F,\infty}$ .

Physically, heat from the ambient environment supplies the energy necessary to vaporize the liquid, and the vapor then diffuses from the droplet surface into the ambient gas. The mass loss causes the droplet radius to shrink with time until the droplet is completely evaporated ( $r_s = 0$ ). The problem that we wish to solve is the determination of the mass flowrate of the vapor from the surface at any instant in time. Knowledge of this will then enable us to calculate the droplet radius as a function of time and the droplet lifetime.

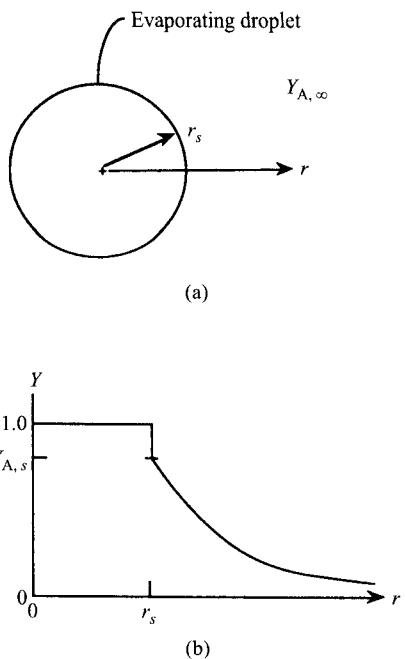

**Figure 3.6** Evaporation of a liquid droplet in a quiescent environment.

To mathematically describe this process completely, the following conservation laws are required:

*Droplet:* mass conservation, energy conservation.

*Droplet vapor/ambient gas mixture ( $r_s < r < \infty$ ):* overall mass conservation, droplet vapor (species) conservation, and energy conservation.

Thus, we see that for this complete description we need at least five equations. These equations, in general, take the form of either ordinary or partial differential equations, depending on the simplifying assumptions applied.

**Assumptions** For our brief treatment here, we can greatly reduce the number of unknowns and, hence, the number of equations, by invoking the same assumptions that we employed in the one-dimensional cartesian problem.

1. The evaporation process is quasi-steady. This means that, at any instant in time, the process can be described as if it were in steady state. This assumption eliminates the need to deal with partial differential equations.
2. The droplet temperature is uniform and, furthermore, the temperature is assumed to be some fixed value below the boiling point of the liquid. In

many problems, the transient heating of the liquid does not greatly affect the droplet lifetime. Determination of the temperature at the droplet surface depends on the heat-transfer rate to the droplet. Thus, our assumption of a specified temperature eliminates the need to apply conservation of energy to the gas phase surrounding the liquid droplet and to the droplet itself. As will be shown in Chapter 10, heat-transfer considerations frequently dominate the droplet evaporation problem.

3. The mass fraction of vapor at the droplet surface is determined by liquid–vapor equilibrium at the droplet temperature.
4. We also assume that all thermophysical properties—specifically, the  $\rho D$  product—are constant. Although properties may vary greatly as we move through the gas phase from the droplet surface to the faraway surroundings, constant properties allow a simple closed-form solution.

**Evaporation Rate** With the above assumptions, we can find the mass evaporation rate,  $\dot{m}$ , and the droplet radius history,  $r_s(t)$ , by writing a droplet vapor species conservation equation, and a droplet liquid mass conservation equation. From species conservation, we determine the evaporation rate  $\dot{m}$ , and thus, knowing  $\dot{m}(t)$ , we can easily find the drop size as a function of time.

As in the cartesian-coordinate Stefan problem, the species originally in the liquid phase is the species transported, while the ambient fluid is stagnant. Thus, our previous analysis (Eqns. 3.33–3.35) needs only to be modified to take into account the change in coordinate system. Overall mass conservation is expressed as

$$\dot{m}(r) = \text{constant} = 4\pi r^2 \dot{m}'', \quad (3.46)$$

where  $\dot{m}'' = \dot{m}_A'' + \dot{m}_B'' = \dot{m}_A''$ , since  $\dot{m}_B = 0$ . Note that it is the mass flowrate, not the mass flux, that is constant. Species conservation for the droplet vapor (Eqn. 3.5) becomes

$$\dot{m}_A'' = Y_A \dot{m}_A'' - \rho D_{AB} \frac{dY_A}{dr}. \quad (3.47)$$

Substituting Eqn. 3.46 into Eqn. 3.47, and rearranging to solve for the evaporation rate  $\dot{m}(= \dot{m}_A)$ , yields

$$\dot{m} = -4\pi r^2 \frac{\rho D_{AB}}{1 - Y_A} \frac{dY_A}{dr}. \quad (3.48)$$

Integrating Eqn. 3.48 and applying the boundary condition that at the droplet surface the vapor mass fraction is  $Y_{A,s}$ , i.e.,

$$Y_A(r = r_s) = Y_{A,s}, \quad (3.49)$$

yields

$$Y_A(r) = 1 - \frac{(1 - Y_{A,s}) \exp[-\dot{m}/(4\pi\rho D_{AB}r)]}{\exp[-\dot{m}/(4\pi\rho D_{AB}r_s)]}. \quad (3.50)$$

The evaporation rate can be determined from Eqn. 3.50 by letting  $Y_A = Y_{A,\infty}$  for  $r \rightarrow \infty$  and solving for  $\dot{m}$ :

$$\dot{m} = 4\pi r_s \rho D_{AB} \ln \left[ \frac{(1 - Y_{A,\infty})}{(1 - Y_{A,s})} \right]. \quad (3.51)$$

This result (Eqn. 3.51) is analogous to Eqn. 3.40 for the cartesian problem.

To see more conveniently how the vapor mass fractions at the droplet surface,  $Y_{A,s}$ , and far from the surface,  $Y_{A,\infty}$ , affect the evaporation rate, the argument of the logarithm in Eqn. 3.51 is used to define the dimensionless **transfer number**,  $B_Y$ :

$$1 + B_Y \equiv \frac{1 - Y_{A,\infty}}{1 - Y_{A,s}} \quad (3.52a)$$

or

$$B_Y = \frac{Y_{A,s} - Y_{A,\infty}}{1 - Y_{A,s}}. \quad (3.52b)$$

Using the transfer number,  $B_Y$ , the evaporation rate is expressed as

$$\dot{m} = 4\pi r_s \rho D_{AB} \ln(1 + B_Y). \quad (3.53)$$

From this result, we see that when the transfer number is zero, the evaporation rate is zero; and, correspondingly, as the transfer number increases, so does the evaporation rate. This makes physical sense in that, from the appearance of the mass-fraction difference  $Y_{A,s} - Y_{A,\infty}$  in its definition,  $B_Y$  can be interpreted as a “driving potential” for mass transfer.

**Droplet Mass Conservation** We obtain the droplet radius (or diameter) history by writing a mass balance that states that the rate at which the mass of the droplet decreases is equal to the rate at which the liquid is vaporized; i.e.,

$$\frac{dm_d}{dt} = -\dot{m}, \quad (3.54)$$

where the droplet mass,  $m_d$ , is given by

$$m_d = \rho_l V = \rho_l \pi D^3 / 6, \quad (3.55)$$

and  $V$  and  $D (= 2r_s)$  are the droplet volume and diameter, respectively.

Substituting eqns. 3.55 and 3.53 into Eqn. 3.54 and performing the differentiation yields

$$\frac{dD}{dt} = -\frac{4\rho D_{AB}}{\rho_l D} \ln(1 + B_Y). \quad (3.56)$$

In the combustion literature, however, Eqn. 3.56 is more commonly expressed in terms of  $D^2$  rather than  $D$ . This form is


$$\frac{dD^2}{dt} = -\frac{8\rho D_{AB}}{\rho_l} \ln(1 + B_Y). \quad (3.57)$$

Equation 3.57 tells us that the time derivative of the square of the droplet diameter is constant; hence,  $D^2$  varies linearly with  $t$  with the slope  $-(8\rho D_{AB}/\rho_l) \ln(1 + B_Y)$ , as illustrated in Fig. 3.7a. This slope is defined to be the **evaporation constant  $K$** :


$$K = \frac{8\rho D_{AB}}{\rho_l} \ln(1 + B_Y). \quad (3.58)$$

We can use Eqn. 3.57 (or 3.56) to find the time it takes a droplet of given initial size to evaporate completely; i.e., the droplet lifetime,  $t_d$ . Thus,

$$\int_{D_0^2}^0 dD^2 = - \int_0^{t_d} K dt, \quad (3.59)$$

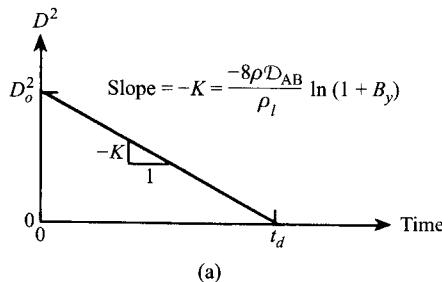

(a)

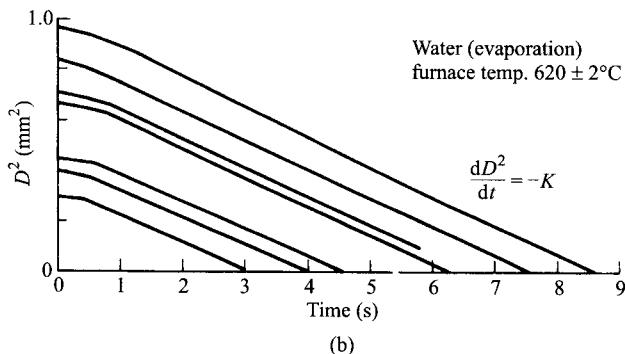

(b)

**Figure 3.7** The  $D^2$  law for droplet evaporation. (a) Simplified analysis. (b) Experimental data from Ref. [8] for water droplets with  $T_\infty = 620^\circ\text{C}$ .

| Reprinted by permission of The Combustion Institute.

which yields

$$t_d = D_0^2/K. \quad (3.60)$$

We can change the upper limits in Eqn. 3.59 to provide a general relationship expressing the variation of  $D$  with time ( $t$ ):

$$D^2(t) = D_0^2 - Kt. \quad (3.61)$$

Equation 3.61 is referred to as the  **$D^2$  law** for droplet evaporation. Experimental data show that the  $D^2$  law holds after an initial transient period as shown in Fig. 3.7b. The  $D^2$  law is also used to describe burning of fuel droplets, which is discussed in Chapter 10.

In mass-diffusion-controlled evaporation of a fuel droplet, the droplet surface temperature is an important parameter. Estimate the droplet lifetime of a 100- $\mu\text{m}$ -diameter *n*-dodecane droplet evaporating in dry nitrogen at 1 atm if the droplet temperature is 10 K below the dodecane boiling point. Repeat the calculation for a temperature 20 K below the boiling point, and compare the results. For simplicity, assume that, in both cases, the mean gas density is that of nitrogen at a mean temperature of 800 K. Use this same temperature to estimate the fuel vapor diffusivity. The density of liquid dodecane is 749 kg/m<sup>3</sup>.

### Example 3.2

Given: *n*-dodecane droplet

$$D = 100 \mu\text{m},$$

$$P = 1 \text{ atm},$$

$$\rho_l = 749 \text{ kg/m}^3.$$

$$T_s = T_{\text{boil}} - 10 \text{ (or } 20),$$

$$\rho = \rho_{\text{N}_2} @ \bar{T} = 800 \text{ K}.$$

Find: droplet lifetime,  $t_d$ .

#### Solution

We can estimate the droplet lifetimes by employing Eqn. 3.60, after calculating the evaporation rate constants,  $K$ , from Eqn. 3.58. Evaluation of properties will be important in our solution.

Properties required:

$$T_{\text{boil}} = 216.3^\circ\text{C} + 273.15 = 489.5 \text{ K (Appendix Table B.1)},$$

$$h_{fg} = 256 \text{ kJ/kg (Appendix Table B.1)},$$

$$MW_A = 170.337,$$

$$D_{AB} = 8.1 \cdot 10^{-6} \text{ m}^2/\text{s} @ 399 \text{ K (Appendix Table D.1)}.$$

We start by calculating  $B_Y$ , which requires knowledge of the fuel mass fraction at the surface. As in Example 3.1, we integrate the Clausius–Clapeyron equation to find the saturation pressure at the given droplet surface temperature. For  $T = T_{\text{boil}} - 10$  (= 479.5 K),

$$\frac{P_{\text{sat}}}{P(=1 \text{ atm})} = \exp \left[ \frac{-256,000}{(8315/170.337)} \left( \frac{1}{479.5} - \frac{1}{489.5} \right) \right] = 0.7998$$

so  $P_{\text{sat}} = 0.7998$  and  $\chi_A (= \chi_{\text{dodecane}}) = 0.7998$ . We employ Eqn. 2.11 to calculate the fuel mass fraction at the surface:

$$Y_{A,s} = 0.7998 \frac{170.337}{0.7998(170.337) + (1 - 0.7998)28.014} = 0.9605.$$

We now evaluate the transfer number  $B_Y$  (Eqn. 3.52b):

$$B_Y = \frac{Y_{A,s} - Y_{A,\infty}}{1 - Y_{A,s}} = \frac{0.9605 - 0}{1 - 0.9605} = 24.32.$$

To evaluate the evaporation constant, we need to estimate  $\rho D_{AB}$ , which we treat as  $\bar{\rho}_{N_2} D_{AB}(\bar{T} = 800 \text{ K})$ . Extrapolating the tabulated value to 800 K using Eqn. 3.18b gives

$$D_{AB}(\bar{T}) = 8.1 \cdot 10^{-6} \left( \frac{800}{399} \right)^{3/2} = 23.0 \cdot 10^{-6} \text{ m}^2/\text{s},$$

and using the ideal-gas law to evaluate  $\bar{\rho}_{N_2}$ :

$$\bar{\rho}_{N_2} = \frac{101,325}{(8315/28.014)800} = 0.4267 \text{ kg/m}^3.$$

Thus,

$$\begin{aligned} K &= \frac{8\bar{\rho}D_{AB}}{\rho_l} \ln(1 + B_Y) \\ &= \frac{8(0.4267)23.0 \cdot 10^{-6}}{749} \ln(1 + 24.32) \\ &= 3.39 \cdot 10^{-7} \text{ m}^2/\text{s} \end{aligned}$$

and the droplet lifetime is

$$\begin{aligned} t_d &= D^2/K = \frac{(100 \cdot 10^{-6})^2}{3.39 \cdot 10^{-7}} \\ t_d &= 0.030 \text{ s}. \end{aligned}$$

Repeating the calculations for  $T = T_{\text{boil}} - 20 = 469.5 \text{ K}$ , we can compare the various parameters:

$\Delta T$ (K)	$T$ (K)	$P_{\text{sat}}$ (atm)	$Y_s$	$B_Y$	$K$ ( $\text{m}^2/\text{s}$ )	$t_d$ (s)
10	479.5	0.7998	0.9605	24.32	$3.39 \cdot 10^{-7}$	0.030
20	469.5	0.6336	0.9132	10.52	$2.56 \cdot 10^{-7}$	0.039

From the above table, we see that about a 2 percent change in the droplet surface temperature results in a 30 percent increase in the droplet lifetime. This large effect of temperature manifests itself in the  $B_Y$  term, where the denominator,  $1 - Y_{A,s}$ , is clearly sensitive to temperature when  $Y_{A,s}$  is large.

### Comments

Evaporation of fuel droplets at elevated temperatures is important for many practical devices, particularly gas-turbine engines and diesel engines. In these devices, evaporation occurs when droplets are injected into hot compressed air or into zones where combustion is already in progress. In spark-ignition engines employing fuel injection, temperatures in the intake system are typically much closer to ambient levels and pressures are subatmospheric. In most cases, forced-convection effects are important in the evaporation process. These effects will be discussed in Chapter 10, which focuses on droplet combustion.

---

## SUMMARY

In this chapter, you were introduced to the concept of mass diffusion or mass transfer, and Fick's law governing the rate of species mass transfer in a binary mixture was presented. A new transport property, the mass diffusivity, provides the proportionality between the species diffusional flux and the species concentration gradient, analogous to the kinematic viscosity and thermal diffusivity in momentum and heat transfer, respectively. You should be familiar with the physical interpretation of Fick's law and how to apply it to simple binary systems. As an example of simple binary diffusion, the Stefan problem was developed. From this example, you saw how overall mass and species mass conservation equations apply to a single species diffusing through a stagnant layer of a second species. With application of appropriate boundary conditions, we were able to solve for the liquid evaporation rate. A similar analysis was performed for the spherically symmetric problem of droplet evaporation. You should have some physical appreciation for this problem, as well as being familiar with how to calculate droplet evaporation rates and droplet lifetimes.

---

## NOMENCLATURE

$a$	Defined in Eqn. 3.10d
$A$	Area ( $\text{m}^2$ )
$B_Y$	Dimensionless transfer number or Spalding number, Eqn. 3.52
$c$	Molar concentration ( $\text{kmol}/\text{m}^3$ )
$D$	Diameter (m)
$D_{AB}$	Binary diffusivity or diffusion coefficient ( $\text{m}^2/\text{s}$ )
$h$	Enthalpy ( $\text{J}/\text{kg}$ )
$h_{fg}$	Heat of vaporization ( $\text{J}/\text{kg}$ )
$k$	Thermal conductivity ( $\text{W}/(\text{m}\cdot\text{K})$ )
$k_B$	Boltzmann constant
$ke$	Kinetic energy (J)
$K$	Evaporation constant, Eqn. 3.58 ( $\text{m}^2/\text{s}$ )

$L$	Tube height (m)
$m$	Mass (kg)
$\dot{m}$	Mass flowrate (kg/s)
$\dot{m}''$	Mass flux (kg/s-m <sup>2</sup> )
$MW$	Molecular weight (kg/kmol)
$n$	Number of molecules
$N$	Number of moles
$\dot{N}$	Molar flowrate (kmol/s)
$\dot{N}''$	Molar flux (kmol/s-m <sup>2</sup> )
$P$	Pressure (Pa)
$\dot{Q}$	Heat-transfer rate (W)
$\dot{Q}''$	Heat flux (W/m <sup>2</sup> )
$r$	Radius (m)
$R_u$	Universal gas constant
$t$	Time (s)
$T$	Temperature (K)
$\bar{v}$	Average molecular speed (m/s)
$V$	Volume (m <sup>3</sup> )
$x$	Cartesian coordinate (m)
$y$	Cartesian coordinate (m)
$Y$	Mass fraction (kg/kg)
$Z''$	Molecular collision frequency per unit area (no./m <sup>2</sup> -s)

### Greek Symbols

$\lambda$	Molecular mean free path (m)
$\rho$	Density (kg/m <sup>3</sup> )
$\sigma$	Molecular diameter (m)
$\chi$	Mole fraction (kmol/kmol)

### Subscripts

$A$	Species A
$B$	Species B
boil	Boiling point
$cv$	Control volume
$d$	Droplet
diff	Diffusion
evap	Evaporation
$g$	Gas
$i$	Interface
$l, \text{liq}$	Liquid
mix	Mixture
$s$	Surface
sat	Saturation
tot	Total
vap	Vapor
$\infty$	Freestream or far removed from surface

---

## REFERENCES

1. Bird, R. B., Stewart, W. E., and Lightfoot, E. N., *Transport Phenomena*, John Wiley & Sons, New York, 1960.
2. Thomas, L. C., *Heat Transfer–Mass Transfer Supplement*, Prentice-Hall, Englewood Cliffs, NJ, 1991.
3. Williams, F. A., *Combustion Theory*, 2nd Ed., Addison-Wesley, Redwood City, CA, 1985.
4. Kuo, K. K., *Principles of Combustion*, John Wiley & Sons, New York, 1986.
5. Pierce, F. J., *Microscopic Thermodynamics*, International, Scranton, PA, 1968.
6. Daniels, F., and Alberty, R. A., *Physical Chemistry*, 4th Ed., John Wiley & Sons, New York, 1975.
7. Irvine, T. F., Jr., and Hartnett, J. P. (eds.), *Steam and Air Tables in SI Units*, Hemisphere, Washington, 1976.
8. Nishiwaki, N., “Kinetics of Liquid Combustion Processes: Evaporation and Ignition Lag of Fuel Droplets,” *Fifth Symposium (International) on Combustion*, Reinhold, New York, pp. 148–158, 1955.

---

## REVIEW QUESTIONS

1. Make a list of all of the bold-faced words in Chapter 3. Make sure you understand the meaning of each.
2. Assuming constant properties, recast Eqn. 3.4 into a form where the constant of proportionality in Fourier’s law is the thermal diffusivity,  $\alpha = k/\rho c_p$ , rather than  $k$ . The gradient (or spatial derivative) of what property now appears?
3. Starting with the sketch in Fig. 3.3, derive the species conservation equation (Eqn. 3.30) without reference to the text derivation.
4. Using words only, explain what is happening in the Stefan problem.
5. How is the evaporating droplet problem similar to the Stefan problem?
6. If no heat is supplied to the liquid A (Fig. 3.4), what happens to the temperature of the liquid? Can you write a simple energy conservation equation to justify your answer?
7. Define a transfer number,  $B_Y$ , that can be used with Eqn. 3.40. Furthermore, assume the flow area is  $A$ , and write an expression for  $\dot{m}$  in terms of fluid properties, geometrical parameters, and  $B_Y$ . Compare your result with Eqn. 3.53 and discuss.
8. Why, and in what way, does the presence of species A in the free stream (Fig. 3.4) affect the evaporation rate?

9. How does the mass average velocity vary with distance from the surface of an evaporating droplet at any instant in time?
10. Explain what is meant by “quasi-steady” flow.
11. Starting with Eqns. 3.53 and 3.54, derive the “ $D^2$  law” for droplet evaporation.

## PROBLEMS

- 3.1 Consider an equimolar mixture of oxygen ( $O_2$ ) and nitrogen ( $N_2$ ) at 400 K and 1 atm. Calculate the mixture density  $\rho$  and the mixture molar concentration  $c$ .
- 3.2 Calculate the mass fractions of  $O_2$  and  $N_2$  in the mixture given in problem 3.1.
- 3.3 Estimate the value of the binary diffusivity of *n*-octane in air at a temperature of 400 K and pressure of 3.5 atm utilizing the value given in Appendix D. Also, compare the ratio  $D_{ref}/D(T = 400 \text{ K}, P = 3.5 \text{ atm})$  with the ratio of the  $\rho D$  products, i.e.,  $(\rho D)_{ref}/(\rho D)(T = 400 \text{ K}, P = 3.5 \text{ atm})$ .
- 3.4 Equation 3.18a was derived assuming that molecules A and B are essentially the same mass and size. Reference [1] indicates that Eqn. 3.18a can be generalized for the case where  $m_A \neq m_B$  and  $\sigma_A \neq \sigma_B$  by using

$$m = \frac{m_A m_B}{(m_A + m_B)/2} \quad \text{and} \quad \sigma = \frac{1}{2}(\sigma_A + \sigma_B).$$

With this information, estimate the binary diffusivity for  $O_2$  in  $N_2$  at 273 K for  $\sigma_{O_2} = 3.467$  and  $\sigma_{N_2} = 3.798 \text{ \AA}$ . Compare your simple estimate with the handbook value of  $1.8 \cdot 10^{-5} \text{ m}^2/\text{s}$ . Should you expect good agreement? Why not? *Note:* You will need to use Avogadro’s number  $6.022 \cdot 10^{26}$  molecules/kmol to calculate the mass of a molecule.

- 3.5 Consider liquid *n*-hexane in a 50-mm-diameter graduated cylinder. The distance from the liquid–gas interface to the top of the cylinder is 20 cm. The steady-state *n*-hexane evaporation rate is  $8.2 \cdot 10^{-8} \text{ kg/s}$  and the *n*-hexane mass fraction at the liquid–air interface is 0.482. The diffusivity of *n*-hexane in air is  $8.0 \cdot 10^{-4} \text{ m}^2/\text{s}$ .
  - A. Determine the mass flux of *n*-hexane vapor. Give units.
  - B. Determine the bulk flux of *n*-hexane vapor, i.e., that portion associated with the bulk flow, at the liquid–gas interface.
  - C. Determine the diffusional flux on *n*-hexane vapor at the liquid–gas interface.
- 3.6 Consider water in a 25-mm-diameter test tube evaporating into dry air at 1 atm. The distance from the water–air interface to the top of the tube is  $L = 15 \text{ cm}$ . The mass fraction of the water vapor at the water–air interface is 0.0235, and the binary diffusivity for water vapor in air is  $2.6 \cdot 10^{-5} \text{ m}^2/\text{s}$ .

- A. Determine the mass evaporation rate of the water.
- B. Determine the water vapor mass fraction at  $x = L/2$ .
- C. Determine the fraction of the water mass flow that is contributed by bulk flow and the fraction contributed by diffusion at  $x = L/2$ .
- D. Repeat part C for  $x = 0$  and  $x = L$ . Plot your results. Discuss.
- 3.7** Consider the physical situation described in problem 3.6, except that the interface vapor mass fraction is unknown. Find the mass evaporation rate of the water when the liquid water is at 21°C. Assume equilibrium at the interface, i.e.,  $P_{\text{H}_2\text{O}}(x=0) = P_{\text{sat}}(T)$ . The air outside the tube is dry.
- 3.8** Repeat problem 3.6 when the air outside the tube is at 21°C and has a relative humidity of 50 percent. Also, determine the rate of heat transfer required to maintain the liquid water at 21°C.
- 3.9** Consider liquid *n*-hexane in a 50-mm-diameter graduated cylinder. Air blows across the top of the cylinder. The distance from the liquid–air interface to the open end of the cylinder is 20 cm. Assume the diffusivity of *n*-hexane is  $8.8 \cdot 10^{-6} \text{ m}^2/\text{s}$ . The liquid *n*-hexane is at 25°C. Estimate the evaporation rate of the *n*-hexane. (*Hint:* Review the Clausius–Clapeyron relation as applied in Example 3.1.)
- 3.10** Calculate the evaporation rate constant for a 1-mm-diameter water droplet at 75°C evaporating into dry, hot air at 500 K and 1 atm.
- 3.11** Determine the influence of the ambient water vapor mole fraction on the lifetimes of 50- $\mu\text{m}$ -diameter water droplets. The droplets are evaporating in air at 1 atm. Assume the droplet temperature is 75°C and the mean air temperature is 200°C. Use values of  $\chi_{\text{H}_2\text{O},\infty} = 0.1, 0.2$ , and 0.3.
- 3.12** Consider the two general forms of Fick's law presented in this chapter:

$$\dot{m}_{\text{A}}'' = Y_{\text{A}}(\dot{m}_{\text{A}}'' + \dot{m}_{\text{B}}'') - \rho D_{\text{AB}} \nabla Y_{\text{A}} \quad (3.5)$$

$$\dot{N}_{\text{A}}'' = \chi_{\text{A}}(\dot{N}_{\text{A}}'' + \dot{N}_{\text{B}}'') - c D_{\text{AB}} \nabla \chi_{\text{A}}, \quad (3.6)$$

where  $c$  is the molar concentration ( $= \rho/MW_{\text{mix}}$ ).

The first expression (Eqn. 3.5) represents the **mass flux** of species A ( $\text{kg}_{\text{A}}/\text{s-m}^2$ ) relative to a stationary laboratory reference frame, while the second is an equivalent expression for the **molar flux** of species A ( $\text{kmol}_{\text{A}}/\text{s-m}^2$ ), also relative to a stationary laboratory reference frame.

The first term on the right-hand-side of Eqns. 3.5 and 3.6, respectively, is the bulk transport of species A at the **mass-average velocity**,  $V$  (for Eqn. 3.5) and the **molar-average velocity**,  $V^*$  (for Eqn. 3.6). You are used to working with the mass-average velocity as the velocity of choice in fluid mechanics. Both of these velocities are relative to our fixed laboratory reference frame. Useful relationships associated with these two velocities are the following [1]:

$$\dot{m}_{\text{A}}'' + \dot{m}_{\text{B}}'' = \rho V \quad (\text{I})$$

or

$$\rho Y_A v_A + \rho Y_B v_B = \rho V \quad (\text{II})$$

and

$$\dot{N}_A'' + \dot{N}_B'' = cV^* \quad (\text{III})$$

or

$$c\chi_A v_A + c\chi_B v_B = cV^*, \quad (\text{IV})$$

where  $v_A$  and  $v_B$  are the species velocities relative to the fixed frame.

The second term on the right-hand-side of Eqns. 3.5 and 3.6, respectively, expresses the diffusion flux of species A relative to the mass-average velocity  $V$  (for Eqn. 3.5) and relative to the molar-average velocity  $V^*$  (for Eqn. 3.6).

Use the above relations (Eqns. I–IV), and others that you may need, to transform the 1-D planar form of Eqn. 3.6 to the 1-D planar form of Eqn. 3.5. *Hint:* There are a few elegant ways to do this, as well as tedious brute-force approaches.

- 3.13** Rederive the simple Stefan problem result (Eqn. 3.40) using the **molar flux** form of Fick's law (Eqn. 3.6) with boundary conditions expressed in mole fractions. Note that the molar concentration  $c (= P/R_u T)$  is constant for an ideal gas, unlike the density  $\rho$ , which depends on the mixture molecular weight. Leave the final result in terms of the mole fractions.
- 3.14** Use the result from problem 3.13 to solve part A of Example 3.1 in the text. How does this result for  $\dot{m}_{C_6H_6}$  compare with the text's result? Which is more accurate? Why?

**4**

# Chemical Kinetics

---

## OVERVIEW

Understanding the underlying chemical processes is essential to our study of combustion. In many combustion processes, chemical reaction rates control the rate of combustion, and, in essentially all combustion processes, chemical rates determine pollutant formation and destruction. Also, ignition and flame extinction are intimately related to chemical processes. The study of the elementary reactions and their rates, **chemical kinetics**, is a specialized field of physical chemistry. In the past few decades, much progress has been made in combustion because chemists have been able to define the detailed chemical pathways leading from reactants to products, and to measure or calculate their associated rates. With this knowledge, combustion scientists and engineers are able to construct computer models that simulate reacting systems. Although a tremendous amount of progress has been made, the problem of predicting the details of combustion in a complex flow field, where both fluid mechanics and chemistry are treated from first principles, has not yet been solved. In general, the fluid mechanical problem alone still taxes the largest computers (Chapter 11), and the addition of detailed chemistry makes the solution impossible.

In this chapter, we will look at basic chemical kinetics concepts. The subsequent chapter outlines the most important, or at least most well known, chemical mechanisms of importance to combustion; and, in Chapter 6, we will see also how models of chemical processes can be coupled to simple thermodynamic models of some reacting systems of interest to combustion engineers.

## GLOBAL VERSUS ELEMENTARY REACTIONS

The overall reaction of a mole of fuel with  $a$  moles of an oxidizer to form  $b$  moles of combustion products can be expressed by the **global reaction mechanism**



From experimental measurements, the rate at which the fuel is consumed can be expressed as

$$\frac{d[X_F]}{dt} = -k_G(T)[X_F]^n[X_{Ox}]^m, \quad (4.2)$$

where the notation  $[X_i]$  is used to denote the molar concentration ( $\text{kmol/m}^3$  in SI units or  $\text{gmol/cm}^3$  in CGS units) of the  $i$ th species in the mixture. Equation 4.2 states that the rate of disappearance of the fuel is proportional to each of the reactants raised to a power. The constant of proportionality,  $k_G$ , is called the **global rate coefficient**, and, in general, is not constant, but rather is a strong function of temperature. The minus sign indicates that the fuel concentration decreases with time. The exponents  $n$  and  $m$  relate to the **reaction order**. Equation 4.2 says that the reaction is  $n$ th order with respect to the fuel,  $m$ th order with respect to the oxidizer, and  $(n+m)$ th order overall. For global reactions,  $n$  and  $m$  are not necessarily integers and arise from curvefitting experimental data. Later, we will see that for elementary reactions, reaction orders will always be integers. In general, a particular global expression in the form of Eqn. 4.2 holds only over a limited range of temperatures and pressures, and may depend on the details of the apparatus used to define the rate parameters. For example, different expressions for  $k_G(T)$  and different values for  $n$  and  $m$  must be applied to cover a wide range of temperatures.

The use of global reactions to express the chemistry in a specific problem is frequently a “black box” approach. Although this approach may be useful in solving some problems, it does not provide a basis for understanding what is actually happening chemically in a system. For example, it is totally unrealistic to believe that  $a$  oxidizer molecules simultaneously collide with a single fuel molecule to form  $b$  product molecules, since this would require breaking several bonds and subsequently forming many new bonds. In reality, many sequential processes can occur involving many **intermediate species**. For example, consider the global reaction



To effect this global conversion of hydrogen and oxygen to water, the following **elementary reactions** are important:



among others.

In this partial mechanism for hydrogen combustion, we see from reaction 4.4 that when oxygen and hydrogen molecules collide and react, they do not yield water, but, instead, form the intermediate species  $\text{HO}_2$ , the hydroperoxy radical, and a hydrogen atom, H, another radical. **Radicals or free radicals** are reactive molecules, or atoms, that have unpaired electrons. To form  $\text{HO}_2$  from  $\text{H}_2$  and  $\text{O}_2$ , only one bond is broken and one bond formed. Alternatively, one might consider that  $\text{H}_2$  and  $\text{O}_2$  would react to form two hydroxyl radicals (OH); however, such a reaction is unlikely since it requires the breaking of two bonds and the creation of two new bonds. The hydrogen atom created in reaction 4.4 then reacts with  $\text{O}_2$  to form two additional radicals, OH and O (reaction 4.5). It is the subsequent reaction (4.6) of the hydroxyl radical (OH) with molecular hydrogen that forms water. To have a complete picture of the combustion of  $\text{H}_2$  and  $\text{O}_2$ , more than 20 elementary reactions can be considered [1, 2]. These we consider in Chapter 5. The collection of elementary reactions necessary to describe an overall reaction is called a reaction **mechanism**. Reaction mechanisms may involve only a few steps (i.e., elementary reactions) or as many as several hundred. A field of active research involves selecting the minimum number of elementary steps necessary to describe a particular global reaction.

## ELEMENTARY REACTION RATES

### Bimolecular Reactions and Collision Theory

Most elementary reactions of interest in combustion are **bimolecular**; that is, two molecules collide and react to form two different molecules. For an arbitrary bimolecular reaction, this is expressed as



Reactions 4.4–4.6 are examples of bimolecular elementary reactions.

The rate at which the reaction proceeds is directly proportional to the concentrations ( $\text{kmol}/\text{m}^3$ ) of the two reactant species, i.e.,

$$\frac{d[\text{A}]}{dt} = -k_{\text{bimolec}}[\text{A}][\text{B}]. \quad (4.9)$$

All elementary bimolecular reactions are overall second order, being first order with respect to each of the reacting species. The rate coefficient,  $k_{\text{bimolec}}$ , again

is a function of temperature, but unlike the global rate coefficient, this rate coefficient has a theoretical basis. The SI units for  $k_{\text{bimolec}}$  are  $\text{m}^3/\text{kmol}\cdot\text{s}$ ; however, much of the chemistry and combustion literature still uses CGS units.

Molecular collision theory can be used to provide insight into the form of Eqn. 4.9 and to suggest the temperature dependence of the bimolecular rate coefficient. As we will see, the collision theory for bimolecular reactions has many shortcomings; nevertheless, the approach is important for historical reasons and provides a way to visualize bimolecular reactions. In our discussion of molecular transport in Chapter 3, we introduced the concepts of wall collision frequency, mean molecular speed, and mean free path (Eqn. 3.10). These same concepts are important in our discussion of molecular collision rates. To determine the collision frequency of a pair of molecules, we start with the simpler case of a single molecule of diameter  $\sigma$  traveling with constant speed  $v$  and experiencing collisions with identical, but stationary, molecules. The random path of the molecule is illustrated in Fig. 4.1. If the distance traveled between collisions, i.e., the mean free path, is large, then the moving molecule sweeps out a cylindrical volume in which collisions are possible, equal to  $v\pi\sigma^2\Delta t$ , in the time interval  $\Delta t$ . If the stationary molecules are distributed randomly and have a number density  $n/V$ , the number of collisions experienced by the traveling molecule per unit time can be expressed as


$$Z \equiv \frac{\text{collisions}}{\text{per unit time}} = (n/V)v\pi\sigma^2. \quad (4.10)$$

In an actual gas, all of the molecules are moving. If we assume Maxwellian velocity distributions for all the molecules, the collisions frequency for identical molecules is given by [2, 3]

$$Z_c = \sqrt{2}(n/V)\pi\sigma^2\bar{v}, \quad (4.11)$$

where  $\bar{v}$  is the mean speed whose value depends on temperature (Eqn. 3.10a).

Equation 4.11 applies to identical molecules. We can extend our analysis to collisions between unlike molecules having hard-sphere diameters of  $\sigma_A$  and

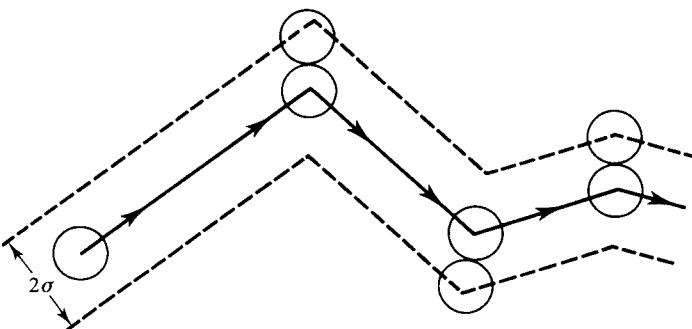

**Figure 4.1** Collision volume swept out by a molecule, with diameter  $\sigma$ , striking like molecules.

$\sigma_B$ . The diameter of the collision volume (Fig. 4.1) is then  $\sigma_A + \sigma_B \equiv 2\sigma_{AB}$ . Thus, Eqn. 4.11 becomes

$$Z_c = \sqrt{2(n_B/V)\pi\sigma_{AB}^2\bar{v}_A}, \quad (4.12)$$

which expresses the frequency of collision of a single A molecule with all B molecules. We are interested, however, in the collision frequency associated with all A and B molecules. Thus, the total number of collisions per unit volume and per unit time is obtained by multiplying the collision frequency of a single A molecule (Eqn. 4.12) by the number of A molecules per unit volume, and using the appropriate mean molecular speeds, i.e.,

$$\begin{aligned} Z_{AB}/V &= \frac{\text{No. of collisions between all A and all B}}{\text{Unit volume} \cdot \text{unit time}} \\ &= (n_A/V)(n_B/V)\pi\sigma_{AB}^2(\bar{v}_A^2 + \bar{v}_B^2)^{1/2}, \end{aligned} \quad (4.13)$$

which can be expressed in terms of temperature as [2,3]

$$Z_{AB}/V = (n_A/V)(n_B/V)\pi\sigma_{AB}^2\left(\frac{8k_B T}{\pi\mu}\right)^{1/2}, \quad (4.14)$$

where

$k_B$  = Boltzmann constant =  $1.381 \cdot 10^{-23}$  J/K;

$\mu = \frac{m_A m_B}{m_A + m_B}$  = reduced mass where  $m_A$  and  $m_B$  are the masses of species A and B, respectively, in kilograms;

$T$  = absolute temperature (K).

Note that the average speed is obtained by replacing the mass of the single molecule in Eqn. 3.10a with the reduced mass  $\mu$ .

To relate the above to the problem of reaction rates, we write

$$-\frac{d[A]}{dt} = \left[ \frac{\text{No. of collisions}}{\text{A and B molecules}} \right] \cdot \left[ \frac{\text{Probability that a}}{\text{collision leads to}} \right] \cdot \left[ \frac{\text{kmol of A}}{\text{No. of molecules of A}} \right], \quad (4.15a)$$

or

$$-\frac{d[A]}{dt} = (Z_{AB}/V)PN_{AV}^{-1}, \quad (4.15b)$$

where  $N_{AV}$  is the Avogadro number ( $6.022 \cdot 10^{26}$  molecules/kmol). The probability that a collision leads to reaction can be expressed as a product of two factors: an energy factor,  $\exp[-E_A/R_u T]$ , which expresses the fraction of collisions that occur with an energy above the threshold level necessary for reaction,  $E_A$ , or **activation energy**; and a geometrical or **steric factor**,  $p$ , that takes into account the geometry of collisions between A and B. For example, in the reaction of OH and H to form H<sub>2</sub>O, intuitively one expects a reaction to be more likely if the H atom strikes the O side of the hydroxyl rather than the H side, since the product has bonds of the form H–O–H. In general, steric factors

are much less than unity; however, there are exceptions. Thus, Eqn. 4.15b becomes

$$-\frac{d[A]}{dt} = pN_{AV}\sigma_{AB}^2 \left[ \frac{8\pi k_B T}{\mu} \right]^{1/2} \exp[-E_A/R_u T][A][B], \quad (4.16)$$

where the substitutions  $n_A/V = [A]N_{AV}$  and  $n_B/V = [B]N_{AV}$  have been employed. Comparing Eqn. 4.9 with Eqn. 4.16, we see that the bimolecular rate coefficient, based on collision theory, is

$$k(T) = pN_{AV}\sigma_{AB}^2 \left[ \frac{8\pi k_B T}{\mu} \right]^{1/2} \exp[-E_A/R_u T]. \quad (4.17)$$

Unfortunately, collision theory provides no means to determine the activation energy or the steric factor. More-advanced theories, which postulate the structure of the molecule in the process of breaking and forming bonds, i.e., an **activated complex**, do allow calculation of  $k_{\text{bimolec}}$  from first principles. A discussion of such theories is beyond the scope of this book and the interested reader is referred to Refs. [2] and [3].

If the temperature range of interest is not too great, the bimolecular rate coefficient can be expressed by the empirical **Arrhenius form**,

$$k(T) = A \exp(-E_A/R_u T), \quad (4.18)$$

where  $A$  is a constant termed the **pre-exponential factor** or the **frequency factor**. Comparing Eqns. 4.17 and 4.18, we see that  $A$  is not strictly constant but depends, based on collision theory, on  $T^{1/2}$ . **Arrhenius plots** of  $\log k$  versus  $1/T$  for experimental data are used to extract values for the activation energy, since the slope of such plots is  $-E_A/R_u$ .

Although tabulation of experimental values for rate coefficients in Arrhenius form is common, current practice frequently utilizes the three-parameter functional form:

$$k(T) = AT^b \exp(-E_A/R_u T), \quad (4.19)$$

where  $A$ ,  $b$ , and  $E_A$  are the three empirical parameters. Table 4.1 illustrates the three-parameter form showing the recommendations of Warnatz [4] for the H<sub>2</sub>–O<sub>2</sub> system.

### Example 4.1

Determine the collision-theory steric factor for the reaction



at 2000 K given the hard-sphere diameters  $\sigma_{\text{O}} = 3.050$  and  $\sigma_{\text{H}_2} = 2.827 \text{ \AA}$  and the experimental parameters given in Table 4.1.

#### Solution

Equating the collision-theory rate coefficient (Eqn. 4.17) with the three-parameter experimental rate coefficient (Eqn. 4.19) yields

**Table 4.1** Recommended rate coefficients for H<sub>2</sub>-O<sub>2</sub> reactions from Ref. [4]

Reaction	<i>A</i> ((cm <sup>3</sup> /gmol) <sup>n-1</sup> /s) <sup>a</sup>	<i>b</i>	<i>E<sub>A</sub></i> (kJ/gmol)	Temperature Range (K)
H + O <sub>2</sub> → OH + O	1.2 · 10 <sup>17</sup>	-0.91	69.1	300–2,500
OH + O → O <sub>2</sub> + H	1.8 · 10 <sup>13</sup>	0	0	300–2,500
O + H <sub>2</sub> → OH + H	1.5 · 10 <sup>7</sup>	2.0	31.6	300–2,500
OH + H <sub>2</sub> → H <sub>2</sub> O + H	1.5 · 10 <sup>8</sup>	1.6	13.8	300–2,500
H + H <sub>2</sub> O → OH + H <sub>2</sub>	4.6 · 10 <sup>8</sup>	1.6	77.7	300–2,500
O + H <sub>2</sub> O → OH + OH	1.5 · 10 <sup>10</sup>	1.14	72.2	300–2,500
H + H + M → H <sub>2</sub> + M				
M = Ar (low <i>P</i> )	6.4 · 10 <sup>17</sup>	-1.0	0	300–5,000
M = H <sub>2</sub> (low <i>P</i> )	0.7 · 10 <sup>16</sup>	-0.6	0	100–5,000
H <sub>2</sub> + M → H + H + M				
M = Ar (low <i>P</i> )	2.2 · 10 <sup>14</sup>	0	402	2,500–8,000
M = H <sub>2</sub> (low <i>P</i> )	8.8 · 10 <sup>14</sup>	0	402	2,500–8,000
H + OH + M → H <sub>2</sub> O + M				
M = H <sub>2</sub> O (low <i>P</i> )	1.4 · 10 <sup>23</sup>	-2.0	0	1,000–3,000
H <sub>2</sub> O + M → H + OH + M				
M = H <sub>2</sub> O (low <i>P</i> )	1.6 · 10 <sup>17</sup>	0	478	2,000–5,000
O + O + M → O <sub>2</sub> + M				
M = Ar (low <i>P</i> )	1.0 · 10 <sup>17</sup>	-1.0	0	300–5,000
O <sub>2</sub> + M → O + O + M				
M = Ar (low <i>P</i> )	1.2 · 10 <sup>14</sup>	0	451	2,000–10,000

<sup>a</sup>*n* is the reaction order.

$$k(T) = p N_{AV} \sigma_{AB}^2 \left[ \frac{8\pi k_B T}{\mu} \right]^{1/2} \exp[-E_A/R_u T] = AT^b \exp[-E_A/R_u T],$$

where we assume the activation energy *E<sub>A</sub>* is the same for both expressions. Solving for the steric factor, *p*, is straightforward, although care must be exercised in treating the units:

$$p = \frac{AT^b}{N_{AV} \left( \frac{8\pi k_B T}{\mu} \right)^{1/2} \sigma_{AB}^2}.$$

To evaluate the above, we employ

$$A = 1.5 \cdot 10^7 \text{ m cm}^3/\text{gmol-s} \quad (\text{Table 4.1}),$$

$$b = 2.0 \quad (\text{Table 4.1}),$$

$$\sigma_{AB} = (\sigma_O + \sigma_{H_2})/2$$

$$= (3.050 + 2.827)/2 = 2.939 \text{ \AA}$$

$$= 2.939 \cdot 10^{-8} \text{ cm},$$

$$m_O = \frac{16 \text{ g/gmol}}{6.022 \cdot 10^{23} \text{ molecules/gmol}} = 2.66 \cdot 10^{-23} \text{ g},$$

$$m_{H_2} = \frac{2.008}{6.022 \cdot 10^{23}} = 0.332 \cdot 10^{-23} \text{ g},$$

$$\mu = \frac{m_O m_{H_2}}{m_O + m_{H_2}} = \frac{2.66(0.332)}{2.66 + 0.332} \cdot 10^{-23} = 2.95 \cdot 10^{-24} \text{ g},$$

$$k_B = 1.381 \cdot 10^{-23} \text{ J/K} = 1.381 \cdot 10^{-16} \text{ g-cm}^2/\text{s}^2\text{-K}.$$

Thus,

$$p = \frac{1.5 \cdot 10^7 (2000)^2}{6.022 \cdot 10^{23} \left( \frac{8\pi(1.381 \cdot 10^{-16})2000}{2.95 \cdot 10^{-24}} \right)^{1/2} (2.939 \cdot 10^{-8})^2}$$

$$= 0.075.$$

Units check:

$$p [=] \frac{\text{cm}^3}{\text{gmol-s}} \frac{1}{\frac{1}{\text{gmol}} \left( \frac{\text{g-cm}^2 \text{ K}}{\text{s}^2 \text{ K}} \right)^{1/2} \text{ cm}^2} = 1$$

$$p = 0.075 \text{ (dimensionless)}.$$

#### Comment

The value of  $p = 0.075$  is less than unity, as expected, and its small value points out the shortcomings of the simple theory. Note that CGS units were employed and the use of the Avogadro number to calculate the species mass in grams. Note also that all of the units for  $k(T)$  are in the pre-exponential factor  $A$ ; thus, the factor  $T^b$  is dimensionless by definition.

### Other Elementary Reactions

As the name suggests, **unimolecular** reactions involve a single species undergoing a rearrangement (isomerization or decomposition) to form one or two product species, i.e.,



or



Examples of unimolecular reactions include the typical dissociation reactions important to combustion: e.g.,  $O_2 \rightarrow O + O$ ,  $H_2 \rightarrow H + H$ , etc.

Unimolecular reactions are first order at high pressures:

$$\frac{d[A]}{dt} = -k_{\text{uni}}[A], \quad (4.22)$$

while at low pressures, the reaction rate also depends on the concentration of any molecules, M, with which the reacting species may collide. In this case,

$$\frac{d[A]}{dt} = -k[A][M]. \quad (4.23)$$

To explain this interesting behavior requires postulating a three-step mechanism. Since we have yet to explore some of the concepts required to deal with this, we conclude our treatment of unimolecular reactions for the time being.

**Termolecular** reactions involve three reactant species and correspond to the reverse of the unimolecular reaction at low pressures. The general form of a termolecular reaction is



Recombination reactions such as  $H + H + M \rightarrow H_2 + M$  and  $H + OH + M \rightarrow H_2O + M$  are important examples of termolecular reactions in combustion. Termolecular reactions are third order, and their rates can be expressed as


$$\frac{d[A]}{dt} = -k_{\text{ter}}[A][B][M], \quad (4.25)$$

where, again, M may be any molecule and is frequently referred to as a **third body**. When A and B are the same species, as in  $H + H + M$ , a factor of two must multiply the right-hand-side of Eqn. 4.25 since two A molecules disappear to form C. In radical-radical reactions, the third body is required to carry away the energy liberated in forming the stable species. During the collision, the internal energy of the newly formed molecule is transferred to the third body, M, and is manifest as kinetic energy of M. Without this energy transfer, the newly formed molecule would dissociate back to its constituent atoms.

## RATES OF REACTION FOR MULTISTEP MECHANISMS

### Net Production Rates

In the previous sections, we introduced the idea of a sequence of elementary reactions that leads from reactants to products, which we termed the reaction mechanism. Knowing how to express the rates of elementary reactions, we can now mathematically express the net rates of production or destruction for any species participating in a series of elementary steps. For example, let us return to the  $H_2-O_2$  reaction mechanism, which is incompletely given by Eqns. 4.4–4.7, and include both forward and reverse reactions as indicated by the  $\rightleftharpoons$  symbol:

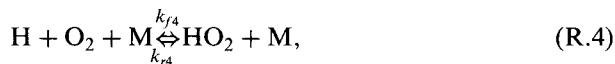

⋮

where  $k_{fi}$  and  $k_{ri}$  are the elementary forward and reverse rate coefficients, respectively, for the  $i$ th reaction. The net rate of production of  $\text{O}_2$ , for example, is the sum of all of the individual elementary rates producing  $\text{O}_2$  minus the sum of all of the rates destroying  $\text{O}_2$ ; i.e.,

$$\begin{aligned} \frac{d[\text{O}_2]}{dt} = & k_{r1}[\text{HO}_2][\text{H}] + k_{r2}[\text{OH}][\text{O}] \\ & + k_{r4}[\text{HO}_2][\text{M}] + \dots \\ & - k_{f1}[\text{H}_2][\text{O}_2] - k_{f2}[\text{H}][\text{O}_2] \\ & - k_{f4}[\text{H}][\text{O}_2][\text{M}] - \dots \end{aligned} \quad (4.26)$$

and for H atoms,

$$\begin{aligned} \frac{d[\text{H}]}{dt} = & k_{f1}[\text{H}_2][\text{O}_2] + k_{r2}[\text{OH}][\text{O}] \\ & + k_{f3}[\text{OH}][\text{H}_2] + k_{r4}[\text{HO}_2][\text{M}] + \dots \\ & - k_{r1}[\text{HO}_2][\text{H}] - k_{f2}[\text{H}][\text{O}_2] \\ & - k_{r3}[\text{H}_2\text{O}][\text{H}] - k_{f4}[\text{H}][\text{O}_2][\text{M}] - \dots \end{aligned} \quad (4.27)$$

We can write similar expressions for each species participating in the mechanism, which yields a system of first-order ordinary differential equations that describes the evolution of the chemical system starting from given initial conditions, i.e.,

$$\frac{d[X_i](t)}{dt} = f_i([X_1](t), [X_2](t), \dots, [X_n](t)) \quad (4.28a)$$

with

$$[X_i](0) = [X_i]_0. \quad (4.28b)$$

For a particular system, this set of equations (4.28a) couples with any necessary statements of conservation of mass, momentum, or energy, and state equations, which can be integrated numerically using a computer. Packaged routines, such as IMSL's DGEAR [5], efficiently integrate the **stiff** system of equations that arise in chemical systems. A set of equations is considered stiff when one or more variables change very rapidly, while others change very

slowly. This disparity in time scales is common in chemical systems where radical reactions are very fast compared with reactions involving stable species. Several numerical integration routines have been used or developed specifically for reacting chemical systems [1, 6–8].

## Compact Notation

Since mechanisms may involve many elementary steps and many species, a compact notation has been developed to represent both the mechanism, e.g., R.1–R.4 . . . , and the individual species production rates, e.g., Eqns. 4.26 and 4.27. For the mechanism, one can write

$$\sum_{j=1}^N v'_{ji} X_j \Leftrightarrow \sum_{j=1}^N v''_{ji} X_j \text{ for } i = 1, 2, \dots, L, \quad (4.29)$$

where  $v'_{ji}$  and  $v''_{ji}$  are the **stoichiometric coefficients** on the reactants and products side of the equation, respectively, for the  $j$ th species in the  $i$ th reaction. For example, consider the four reactions R.1–R.4, involving the eight species O<sub>2</sub>, H<sub>2</sub>, H<sub>2</sub>O, HO<sub>2</sub>, O, H, OH, and M. Defining  $j$  and  $i$  as follows:

$j$	Species	$i$	Reaction
1	O <sub>2</sub>	1	R.1
2	H <sub>2</sub>	2	R.2
3	H <sub>2</sub> O	3	R.3
4	HO <sub>2</sub>	4	R.4
5	O		
6	H		
7	OH		
8	M		

and using  $j$  as the column index and  $i$  the row index, we can write the stoichiometric coefficient matrices as

$$v'_{ji} = \begin{bmatrix} 1 & 1 & 0 & 0 & 0 & 0 & 0 & 0 \\ 1 & 0 & 0 & 0 & 0 & 1 & 0 & 0 \\ 0 & 1 & 0 & 0 & 0 & 0 & 1 & 0 \\ 1 & 0 & 0 & 0 & 0 & 0 & 1 & 0 \end{bmatrix} \quad (4.30a)$$

and

$$v''_{ji} = \begin{bmatrix} 0 & 0 & 0 & 1 & 0 & 1 & 0 & 0 \\ 0 & 0 & 0 & 0 & 1 & 0 & 1 & 0 \\ 0 & 0 & 1 & 0 & 0 & 1 & 0 & 0 \\ 0 & 0 & 0 & 1 & 0 & 0 & 0 & 1 \end{bmatrix} \quad (4.30b)$$

Since elementary reactions involve, at most, three reactant species, the coefficient matrices will always be sparse (many more zero than nonzero elements) when the number of species involved is large.

The following three relations compactly express the net production rate of each species in a multistep mechanism:

$$\dot{\omega}_j = \sum_{i=1}^L v_{ji} q_i \quad \text{for } j = 1, 2, \dots, N, \quad (4.31)$$

where

$$v_{ji} = (v''_{ji} - v'_{ji}) \quad (4.32)$$

and

$$q_i = k_{fi} \prod_{j=1}^N [X_j]^{v'_{ji}} - k_{ri} \prod_{j=1}^N [X_j]^{v''_{ji}}. \quad (4.33)$$

The **production rates**,  $\dot{\omega}_j$ , correspond to the left-hand-sides of Eqns. 4.26 and 4.27, for example. In other words,  $\dot{\omega}_j \equiv d[X_j]/dt$  for the complete mechanism. Equation 4.33 defines the **rate-of-progress variable**,  $q_i$ , for the  $i$ th elementary reaction. The symbol  $\prod$  is used to denote a product of terms in the same sense that  $\sum$  is used to represent a summation of terms. For example,  $q_i (= q_1)$  for reaction R.1 is expressed

$$\begin{aligned} q_i &= k_{f1}[\text{O}_2]^1[\text{H}_2]^1[\text{H}_2\text{O}]^0[\text{HO}_2]^0[\text{O}]^0[\text{H}]^0[\text{OH}]^0[\text{M}]^0 \\ &\quad - k_{r1}[\text{O}_2]^0[\text{H}_2]^0[\text{H}_2\text{O}]^0[\text{HO}_2]^1[\text{O}]^0[\text{H}]^1[\text{OH}]^0[\text{M}]^0 \\ &= k_{f1}[\text{O}_2][\text{H}_2] - k_{r1}[\text{HO}_2][\text{H}]. \end{aligned} \quad (4.34)$$

Writing similar expressions for  $i = 2, 3$ , and  $4$  and summing (Eqn. 4.31), taking into account whether the  $j$ th species is created, destroyed, or does not participate in the  $i$ th step (Eqn. 4.32), completes the total rate expression for  $\dot{\omega}_j$ .

The compact notation embodied in Eqns. 4.29 and 4.31–4.34 is particularly useful in solving chemical kinetics problems using a computer. The software CHEMKIN [1] is a widely used general-purpose package for solving chemical kinetics problems and is available through Sandia (Livermore) National Laboratories.

## Relation between Rate Coefficients and Equilibrium Constants

Measuring rate coefficients of elementary reactions is a difficult task that frequently leads to results that possess a rather large degree of uncertainty. The more reliable rate coefficients often are known no better than within a factor of two, while others may be uncertain by an order of magnitude, or more. On the other hand, equilibrium constants, which are based on thermodynamic measurements or calculations, are very accurate and precise in most cases. We can take advantage of accurate thermodynamic data in solving chemical kinetics

problems by recognizing that, at equilibrium, the forward and reverse reaction rates must be equal. For example, consider both the forward and reverse rates for the arbitrary bimolecular reaction



For species A, we can write

$$\frac{d[A]}{dt} = -k_f[A][B] + k_r[C][D]. \quad (4.36)$$

For the equilibrium condition,  $A + B = C + D$ , the time rate of change of [A] must be zero, as must also be the time rates of change of species B, C, and D. Thus, we can express equilibrium as

$$0 = -k_f[A][B] + k_r[C][D], \quad (4.37)$$

which, upon rearranging, becomes

$$\frac{[C][D]}{[A][B]} = \frac{k_f(T)}{k_r(T)}. \quad (4.38)$$

In Chapter 2, we defined the equilibrium constant based on partial pressures for an arbitrary equilibrium reaction to be

$$K_p = \frac{(P_C/P^o)^c(P_D/P^o)^d \dots}{(P_A/P^o)^a(P_B/P^o)^b \dots} \quad (4.39)$$

where the superscripts are the stoichiometric coefficients, i.e.,  $v'_i = a, b, \dots$  and  $v''_i = c, d, \dots$ . Since the molar concentrations relate to the mole fractions and partial pressures as follows,

$$[X_i] = \chi_i P / R_u T = P_i / R_u T, \quad (4.40)$$

we can define an equilibrium constant based on molar concentrations,  $K_c$ . The relationship between  $K_c$  and  $K_p$  is

$$K_p = K_c (R_u T / P^o)^{c+d+\dots-a-b-\dots} \quad (4.41a)$$

or

$$K_p = K_c (R_u T / P^o)^{\sum v'' - \sum v'}, \quad (4.41b)$$

where

$$K_c = \frac{[C]^c[D]^d \dots}{[A]^a[B]^b \dots} = \frac{\prod_{\text{prod}} [X_i]^{v''_i}}{\prod_{\text{react}} [X_i]^{v'_i}}. \quad (4.42)$$

From the above, we see that the ratio of the forward and reverse rate coefficients equals the equilibrium constant  $K_c$ ,

$$\frac{k_f(T)}{k_r(T)} = K_c(T), \quad (4.43)$$

and that for a bimolecular reaction,  $K_c = K_p$ . Using Eqn. 4.43, one can compute a reverse reaction rate from a knowledge of the forward rate and the equilibrium constant for the reaction; or, conversely, one can calculate the forward rate knowing the reverse rate. In performing kinetic calculations, the most accurate experimental rate coefficient over the temperature range of interest should be used, and the rate in the opposite direction calculated from the equilibrium constant. Over a wide range of temperatures, different choices may have to be made. The National Institute of Standards and Technology (formerly the U.S. Bureau of Standards) maintains a chemical kinetics database providing rate information on well over 6000 reactions [9].

**Example 4.2**

In their survey of experimental determinations of rate coefficients for the N–H–O system, Hanson and Salimian [10] recommend the following rate coefficient for the reaction  $\text{NO} + \text{O} \rightarrow \text{N} + \text{O}_2$ :

$$k_f = 3.80 \cdot 10^9 T^{1.0} \exp(-20,820/T) [=] \text{cm}^3/\text{gmol}\cdot\text{s}.$$

Determine the rate coefficient  $k_r$  for the reverse reaction, i.e.,  $\text{N} + \text{O}_2 \rightarrow \text{NO} + \text{O}$ , at 2300 K.

**Solution**

The forward and reverse rate coefficients are related to the equilibrium constant,  $K_p$ , via Eqn. 4.43:

$$\frac{k_f(T)}{k_r(T)} = K_c(T) = K_p(T).$$

Thus, to find  $k_r$ , we need to evaluate  $k_f$  and  $K_p$  at 2300 K. From Eqns. 2.66 and 2.64, we can evaluate  $K_p$ :

$$K_p = \exp\left(\frac{-\Delta G_f^\circ}{R_u T}\right),$$

where

$$\begin{aligned} \Delta G_{2300\text{K}}^\circ &= [\bar{g}_{f,\text{N}}^\circ + \bar{g}_{f,\text{O}_2}^\circ - \bar{g}_{f,\text{NO}}^\circ - \bar{g}_{f,\text{O}}^\circ]_{2300\text{K}} \\ &= 326,331 + 0 - 61,243 - 101,627 \quad (\text{Appendix Tables A.8, A.9, A.11, A.12}) \\ &= 163,461 \text{ kJ/kmol} \\ K_p &= \exp\left(\frac{-163,461}{8.315(2300)}\right) = 1.94 \cdot 10^{-4} \quad (\text{dimensionless}). \end{aligned}$$

The forward rate coefficient at 2300 K is

$$\begin{aligned} k_f &= 3.8 \cdot 10^9 (2300) \exp\left(\frac{-20,820}{2300}\right) \\ &= 1.024 \cdot 10^9 \text{ cm}^3/\text{gmol}\cdot\text{s}. \end{aligned}$$

So,

$$\boxed{k_r} = k_f / K_p = \frac{1.024 \cdot 10^9}{1.94 \cdot 10^{-4}} = \boxed{5.28 \cdot 10^{12} \text{ cm}^3/\text{gmol}\cdot\text{s}}$$



#### Comment

The reactions used in this example are part of the important Zeldovich or thermal NO mechanism:  $\text{O} + \text{N}_2 \rightleftharpoons \text{NO} + \text{O}$  and  $\text{N} + \text{O}_2 \rightleftharpoons \text{NO} + \text{O}$ . We will explore this mechanism further in a subsequent example, as well as in Chapters 5 and 15.

---

### Steady-State Approximation

In many chemical systems of interest to combustion, highly reactive intermediate species, e.g., radicals, are formed. Analyses of such systems can sometimes be simplified by applying the **steady-state approximation** to these reactive intermediates or radicals. Physically, what occurs is that, after a rapid initial buildup in concentration, the radical is destroyed as rapidly as it is formed, so that its rate of formation and its rate of destruction are equal [11]. This situation typically occurs when the reaction forming the intermediate species is slow, while the reaction destroying the intermediate is very fast. As a result, the concentrations of the radical are quite small in comparison with those of the reactants and products. A good example of this is the Zeldovich mechanism for the formation of nitric oxide, where the reactive intermediate of interest is the N atom:

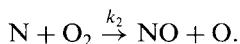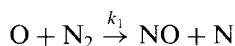

The first reaction in this pair is slow and, hence, rate limiting; while the second is extremely fast. We can write the net production rate of N atoms as

$$\frac{d[\text{N}]}{dt} = k_1[\text{O}][\text{N}_2] - k_2[\text{N}][\text{O}_2]. \quad (4.44)$$

After a rapid transient allowing the buildup of N atoms to some low concentration, the two terms on the right-hand-side of Eqn. 4.44 become equal, and  $d[\text{N}]/dt$  approaches zero. With  $d[\text{N}]/dt \rightarrow 0$ , we are able to determine the steady concentration of N atoms:

$$0 = k_1[\text{O}][\text{N}_2] - k_2[\text{N}]_{ss}[\text{O}_2] \quad (4.45)$$

or

$$[\text{N}]_{ss} = \frac{k_1[\text{O}][\text{N}_2]}{k_2[\text{O}_2]}. \quad (4.46)$$

Although invoking the steady-state approximation suggests that  $[\text{N}]_{ss}$  does not change with time,  $[\text{N}]_{ss}$  may change as it rapidly readjusts according to

Eqn. 4.46. To determine the time rate-of-change requires differentiating Eqn. 4.46, rather than applying Eqn. 4.44:

$$\frac{d[N]_{ss}}{dt} = \frac{d}{dt} \left[ \frac{k_1 [O][N_2]}{k_2 [O_2]} \right]. \quad (4.47)$$

In the next section, we apply the steady-state approximation to the mechanism for unimolecular reactions.

### The Mechanism for Unimolecular Reactions

In a previous section, we deferred discussing the pressure dependence of unimolecular reactions until we had a grasp of the multistep mechanism concept. To explain the pressure dependence requires a three-step mechanism:



In the first step, Eqn. 4.48a, molecule A collides with the “third body,” M. As a result of the collision, some of the translational kinetic energy from M is transferred to molecule A, resulting in an increase in A’s internal vibrational and rotational energies. The high-internal-energy A molecule is referred to as the *energized* A molecule, A\*. After the energizing of A, two things may happen: A\* may collide with another molecule resulting in A\*’s internal energy being converted back to translational energy in the reverse of the energizing process (Eqn. 4.48b), or the energized A\* may fly apart in a true unimolecular process (Eqn. 4.48c). To observe the pressure dependence, we can write an expression that describes the rate at which products are formed:

$$\frac{d[\text{products}]}{dt} = k_{uni}[A^*]. \quad (4.49)$$

To evaluate [A\*], we will employ the steady-state approximation discussed above. The net production of A\* can be expressed as

$$\frac{d[A^*]}{dt} = k_e[A][M] - k_{de}[A^*][M] - k_{uni}[A^*]. \quad (4.50)$$

If we assume that  $d[A^*]/dt = 0$ , following some initial rapid transient during which [A\*] reaches a steady state, then we can solve for [A\*]:

$$[A^*] = \frac{k_e[A][M]}{k_{de}[M] + k_{uni}}. \quad (4.51)$$

Substituting Eqn. 4.51 into Eqn. 4.49 yields

$$\frac{d[\text{products}]}{dt} = \frac{k_{\text{uni}} k_c [\text{A}][\text{M}]}{k_{de}[\text{M}] + k_{\text{uni}}} = \frac{k_c [\text{A}][\text{M}]}{(k_{de}/k_{\text{uni}})[\text{M}] + 1}. \quad (4.52)$$

For the overall reaction,



we write

$$-\frac{d[\text{A}]}{dt} = \frac{d[\text{products}]}{dt} = k_{\text{app}}[\text{A}], \quad (4.54)$$

where  $k_{\text{app}}$  is defined as the apparent unimolecular rate coefficient. Equating Eqns. 4.52 and 4.54, we find that the apparent rate coefficient is of the form

$$k_{\text{app}} = \frac{k_c [\text{M}]}{(k_{de}/k_{\text{uni}})[\text{M}] + 1}. \quad (4.55)$$

Analyzing Eqn. 4.55, we can explain the interesting pressure dependence of unimolecular reactions. When the pressure is increased,  $[\text{M}]$  ( $\text{kmol/m}^3$ ) increases. At high enough pressures, the term  $k_{de}[\text{M}]/k_{\text{uni}}$  becomes much larger than unity, and the  $[\text{M}]$ s in the numerator and denominator of Eqn. 4.55 cancel. Thus,

$$k_{\text{app}}(P \rightarrow \infty) = k_{\text{uni}} k_c / k_{de}. \quad (4.56)$$

At sufficiently low pressures,  $k_{de}[\text{M}]/k_{\text{uni}}$  is much less than unity and can be neglected in comparison; hence,


$$k_{\text{app}}(P \rightarrow 0) = k_c [\text{M}], \quad (4.57)$$

and the dependence of the reaction rate on  $[\text{M}]$  becomes apparent. Thus, we see that the three-step mechanism indeed provides a logical explanation for the high- and low-pressure limits of unimolecular reactions. Procedures for obtaining rate coefficients for pressures between the two limits are discussed by Gardiner and Troe [12].

## Chain and Chain-Branching Reactions

**Chain reactions** involve the production of a radical species that subsequently reacts to produce another radical. This radical, in turn, reacts to produce yet another radical. This sequence of events, or chain reaction, continues until a reaction involving the formation of a stable species from two radicals breaks the chain. Chain reactions can occur in many chemical processes of importance to combustion, as you will see in Chapter 5.

In the following, we illustrate some of the features of chain reactions by exploring a hypothetical chain mechanism, which is globally represented as

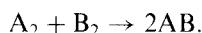

The **chain-initiation reaction** is



and the **chain-propagating reactions** involving the free radicals A and B are



The **chain-terminating reaction** is



In the early stages of reaction, the concentration of the product AB is small, as are the concentrations of A and B throughout the course of the reaction; thus, we can neglect the reverse reactions to determine the reaction rates for the stable species at this reaction stage:

$$\frac{d[A_2]}{dt} = -k_1[A_2][M] - k_3[A_2][B], \quad (4.58)$$

$$\frac{d[B_2]}{dt} = -k_2[B_2][A], \quad (4.59)$$

$$\frac{d[AB]}{dt} = k_2[A][B_2] + k_3[B][A_2] + k_4[A][B][M]. \quad (4.60)$$

For the radicals A and B, the steady-state approximation is invoked. Thus,

$$2k_1[A_2][M] - k_2[A][B_2] + k_3[B][A_2] - k_4[A][B][M] = 0 \quad (4.61)$$

and

$$k_2[A][B_2] - k_3[B][A_2] - k_4[A][B][M] = 0. \quad (4.62)$$

Solving Eqns. 4.61 and 4.62 simultaneously for [A] yields

$$[A] = \frac{k_1}{2k_2} \frac{[M][A_2]}{[B_2]} + \frac{k_3[A_2]}{k_4[M]} \left\{ \left[ 1 + \left( \frac{k_1 k_4 [M]^2}{2k_2 k_3 [B_2]} \right)^2 \right]^{1/2} - 1 \right\}. \quad (4.63)$$

A similarly complicated expression results for [B]. Knowing the steady-state values for [A] and [B], the initial reaction rates  $d[A_2]/dt$  and  $d[B_2]/dt$ , and  $d[AB]/dt$ , can be determined for some initial concentrations of  $[A_2]$  and  $[B_2]$ . Of the three reaction rates,  $d[B_2]/dt$  is the simplest and is expressed as

$$\frac{d[B_2]}{dt} = -\frac{k_1}{2} [A_2][M] - \frac{k_2 k_3}{k_4} \frac{[A_2][B_2]}{[M]} \left\{ \left[ 1 + \left( \frac{k_1 k_4 [M]^2}{2k_2 k_3 [B_2]} \right)^2 \right]^{1/2} - 1 \right\}. \quad (4.64)$$

Equations 4.63 and 4.64 can be simplified further by recognizing that, in the second term,  $k_1 k_4 [M]^2 / (2k_2 k_3 [B_2]) \ll 1$ . This inequality holds since the rate coefficients for the radical reactions,  $k_2$  and  $k_3$ , must be much larger than  $k_1$  and  $k_4$  for the steady-state approximation to apply. Using a truncated Taylor series, we can now write expressions for [A] and  $d[B_2]/dt$  that can be easily analyzed:

$$[A] \approx \frac{k_1}{2k_2} \frac{[A_2][M]}{[B_2]} + \frac{k_1^2 k_4}{8k_2^2 k_3} \frac{[A_2][M]^3}{[B_2]^2} \quad (4.65)$$

and

$$\frac{d[B_2]}{dt} \approx -\frac{k_1}{2} [A_2][M] - \frac{k_1^2 k_4}{4k_1 k_3} \frac{[A_2][M]^3}{[B_2]}. \quad (4.66)$$

A simple order-of-magnitude analysis shows that the first term in both Eqns. 4.65 and 4.66 dominates at low pressures; thus, the concentration of A depends directly on the ratio of the initiation-step (C.1) rate coefficient to the first propagation step (C.2) rate coefficient, and the rate at which  $B_2$  disappears is governed solely by the initiation step.

Increasing the magnitude of the rate coefficients for the chain-propagating steps increases radical concentrations, while increasing  $k_2$  and  $k_3$  has virtually no effect on the production rate of the products. Radical concentrations are directly proportional to pressure, and the reaction rates of the major species scale with the pressure squared. These relationships hold as long as the second terms on the right-hand-sides of Eqns. 4.65 and 4.66 remain small in comparison with the first terms.

The termolecular chain-terminating step (C.4) rate coefficient  $k_4$  has virtually no effect on either the radical concentrations or the overall reaction rate; however, at high pressures,  $k_4$  does have an influence. This is a direct result of the second terms in Eqns. 4.65 and 4.66 becoming important at high pressures, since they increase with pressure faster than the first terms. Recall that the molar concentration ( $\text{kmol/m}^3$ ) scales directly with pressure if the mole fractions and temperature are fixed.



**Chain-branching reactions** involve the formation of two radical species from a reaction that consumes only one radical. The reaction,  $\text{O} + \text{H}_2\text{O} \rightarrow \text{OH} + \text{OH}$ , is an example of a chain-branching reaction. The existence of a chain-branching step in a chain mechanism can have an explosive effect, literally, and the interesting explosion behavior of mixtures of  $\text{H}_2$  and  $\text{O}_2$  (Chapter 5) is a result of chain-branching steps.

In a system with chain branching, it is possible for the concentration of a radical species to build up geometrically, causing the rapid formation of products. Unlike in the previous hypothetical example, the rate of the chain-initiation step does not control the overall reaction rate. With chain branching, the rates of radical reactions dominate. Chain-branching reactions are responsible


for a flame being self-propagating and are an essential ingredient in combustion chemistry.

**Example 4.3**


As mentioned previously, a famous chain mechanism is the Zeldovich, or thermal, mechanism for the formation of nitric oxide from atmospheric nitrogen:

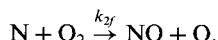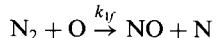

Because the second reaction is much faster than the first, the steady-state approximation can be used to evaluate the N-atom concentration. Furthermore, in high-temperature systems, the NO formation reaction is typically much slower than other reactions involving O<sub>2</sub> and O. Thus, O<sub>2</sub> and O can be assumed to be in equilibrium:

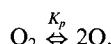

Construct a global mechanism

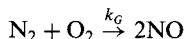

represented as

$$\frac{d[\text{NO}]}{dt} = k_G[\text{N}_2]^m[\text{O}_2]^n,$$

i.e., determine  $k_G$ ,  $m$ , and  $n$  using the elementary rate coefficients, etc., from the detailed mechanism.

**Solution**

From the elementary reactions, we can write

$$\frac{d[\text{NO}]}{dt} = k_{1f}[\text{N}_2][\text{O}] + k_{2f}[\text{N}][\text{O}_2]$$

$$\frac{d[\text{N}]}{dt} = k_{1f}[\text{N}_2][\text{O}] - k_{2f}[\text{N}][\text{O}_2],$$

where we assume reverse reaction rates are negligible.

With the steady-state approximation,  $d[\text{N}]/dt = 0$ ; thus,

$$[\text{N}]_{ss} = \frac{k_{1f}[\text{N}_2][\text{O}]}{k_{2f}[\text{O}_2]}.$$

Substituting  $[\text{N}]_{ss}$  into the above expression for  $d[\text{NO}]/dt$ , yields

$$\begin{aligned} \frac{d[\text{NO}]}{dt} &= k_{1f}[\text{N}_2][\text{O}] + k_{2f}[\text{O}_2] \left( \frac{k_{1f}[\text{N}_2][\text{O}]}{k_{2f}[\text{O}_2]} \right) \\ &= 2k_{1f}[\text{N}_2][\text{O}]. \end{aligned}$$

We now eliminate [O] through our equilibrium approximation,

$$K_p = \frac{P_{\text{O}}^2}{P_{\text{O}_2} P^o} = \frac{[\text{O}]^2 (R_u T)^2}{[\text{O}_2] (R_u T) P^o} = \frac{[\text{O}]^2}{[\text{O}_2]} \frac{R_u T}{P^o}$$

or

$$[\text{O}] = \left[ [\text{O}_2] \frac{K_p P^o}{R_u T} \right]^{1/2}.$$

Thus,

$$\frac{d[\text{NO}]}{dt} = 2k_{1f} \left( \frac{K_p P^o}{R_u T} \right)^{1/2} [\text{N}_2][\text{O}_2]^{1/2}.$$

From the above, we can identify the global parameters:

$$k_G \equiv 2k_{1f} \left( \frac{K_p P^o}{R_u T} \right)^{1/2}$$

$$m = 1$$

$$n = 1/2$$

#### Comment

In many cases where global reactions are invoked, the detailed kinetics are not known. This example shows that global parameters can be interpreted or inferred from a knowledge of detailed chemistry. This allows the testing or verification of elementary mechanisms in terms of global measurements. Note, also, that the global mechanism developed above applies only to the initial formation rate of NO. This is because we have ignored the reverse reactions, which would become important as NO concentrations rise.

Consider the shock-heating of air to 2500 K and 3 atm. Use the results of Example 4.3 to determine:

#### Example 4.4

- A. The initial nitric oxide formation rate in ppm/s.
- B. The amount of nitric oxide formed (in ppm) in 0.25 ms.

The rate coefficient,  $k_{1f}$ , is [10]:

$$k_{1f} = 1.82 \cdot 10^{14} \exp[-38, 370/T(\text{K})]$$

$$[=] \text{ cm}^3/\text{gmol}\cdot\text{s}.$$

#### Solution

- A. Find  $d\chi_{\text{NO}}/dt$ . We can evaluate  $d[\text{NO}]/dt$  from

$$\frac{d[\text{NO}]}{dt} = 2k_{1f} \left( \frac{K_p P^o}{R_u T} \right)^{1/2} [\text{N}_2][\text{O}_2]^{1/2},$$

where we assume that

$$\chi_{\text{N}_2} \cong \chi_{\text{N}_2,i} = 0.79$$

$$\chi_{\text{O}_{2,e}} \cong \chi_{\text{O}_{2,i}} = 0.21$$

since  $\chi_{\text{NO}}$  and  $\chi_{\text{O}}$  are both likely to be quite small and, hence, can be neglected in estimating the values of  $\chi_{\text{N}_2}$  and  $\chi_{\text{O}_{2,e}}$ .

We can convert the mole fractions to molar concentrations (Eqn. 4.40):

$$[\text{N}_2] = \chi_{\text{N}_2} \frac{P}{R_u T} = 0.79 \frac{3(101,325)}{8315(2500)} \\ = 1.155 \cdot 10^{-2} \text{ kmol/m}^3$$

$$[\text{O}_2] = \chi_{\text{O}_2} \frac{P}{R_u T} = 0.21 \frac{3(101,325)}{8315(2500)} \\ = 3.071 \cdot 10^{-3} \text{ kmol/m}^3$$

and evaluate the rate coefficient,

$$k_{1f} = 1.82 \cdot 10^{14} \exp[-38,370/2500] \\ = 3.93 \cdot 10^7 \text{ cm}^3/\text{gmol-s} \\ = 3.93 \cdot 10^4 \text{ m}^3/\text{kmol-s.}$$

To find the equilibrium constant, we employ Eqns. 2.64 and 2.66:

$$\Delta G_T^\circ = [(2)\bar{g}_{f,\text{O}}^\circ - (1)\bar{g}_{f,\text{O}_2}^\circ]_{2500\text{ K}} \\ = 2(88,203) - (1)0 = 176,406 \text{ kJ/kmol} \quad (\text{Appendix Tables A.11 and A.12}),$$

$$K_p = \frac{P_{\text{O}}^2}{P_{\text{O}_2} P^\circ} = \exp\left(\frac{-\Delta G_T^\circ}{R_u T}\right),$$

$$K_p P^\circ = \exp\left(\frac{-176,406}{8.315(2500)}\right) 1 \text{ atm} = 2.063 \cdot 10^{-4} \text{ atm} = 20.90 \text{ Pa.}$$

We can now numerically evaluate  $d[\text{NO}]/dt$ :

$$\frac{d[\text{NO}]}{dt} = 2(3.93 \cdot 10^4) \left( \frac{20.90}{8315(2500)} \right)^{1/2} 1.155 \cdot 10^{-2} (3.071 \cdot 10^{-3})^{1/2} \\ = 0.0505 \text{ kmol/m}^3\text{-s}$$

or, in terms of parts-per-million,

$$\frac{d\chi_{\text{NO}}}{dt} = \frac{R_u T}{P} \frac{d[\text{NO}]}{dt} \\ = \frac{8315(2500)}{3(101,325)} 0.0505 = 3.45 \text{ (kmol/kmol)/s}$$

$$\frac{d\chi_{\text{NO}}}{dt} = 3.45 \cdot 10^6 \text{ ppm/s}$$

The reader should verify that the units are correct in the above calculations of  $d[\text{NO}]/dt$  and  $d\chi_{\text{NO}}/dt$ .

B. Find  $\chi_{\text{NO}}(t = 0.25 \text{ ms})$ . If we assume that the  $\text{N}_2$  and  $\text{O}_2$  concentrations do not change with time and that reverse reactions are unimportant over the 0.25-ms interval, we can quite simply integrate  $d[\text{NO}]/dt$  or  $\chi_{\text{NO}}/dt$ , i.e.,

$$\int_0^{[\text{NO}](t)} d[\text{NO}] = \int_0^t k_G [\text{N}_2][\text{O}_2]^{1/2} dt$$

so

$$\begin{aligned} [\text{NO}](t) &= k_G [\text{N}_2][\text{O}_2]^{1/2} t \\ &= 0.0505 (0.25 \cdot 10^{-3}) = 1.263 \cdot 10^{-5} \text{ kmol/m}^3 \end{aligned}$$

or

$$\begin{aligned} \chi_{\text{NO}} &= [\text{NO}] \frac{R_u T}{P} \\ &= 1.263 \cdot 10^{-5} \left( \frac{8315 (2500)}{3 (101,325)} \right) = 8.64 \cdot 10^{-4} \text{ kmol/kmol} \\ \boxed{\chi_{\text{NO}} = 864 \text{ ppm}} \end{aligned}$$

#### Comment

We could use the above value of NO together with the appropriate reverse reaction rate coefficients to see the relative importance of the reverse reactions in the Zeldovich mechanism (Example 4.3) to determine if our approach to part B was valid.

The next chapter outlines several chemical mechanisms that have importance to combustion and shows the usefulness of the theoretical concepts presented in this chapter.

## Chemical Time Scales

In analyzing combustion processes, insight can be gained from a knowledge of chemical time scales. More precisely, knowing the magnitudes of chemical times relative to either convective or mixing times is of importance. For example, we will see in Chapter 12 how the Damköhler number, the ratio of flow times to chemical times, defines the various regimes of premixed combustion. In this section, we develop expressions that permit estimation of characteristic chemical time scales for elementary reactions.

**Unimolecular Reactions** Consider the unimolecular reaction represented by Eqn. 4.53 and its corresponding reaction rate expression, Eqn. 4.54. This rate equation can be integrated, assuming constant temperature, to yield the following expression for the time history of [A]:

$$[A](t) = [A]_0 \exp(-k_{\text{app}} t) \quad (4.67)$$

where  $[A]_0$  is the initial concentration of species A.

In the same manner that a characteristic time, or time constant, is defined for a simple resistor–capacitor electrical network, we define a characteristic chemical time,  $\tau_{\text{chem}}$ , to be the time required for the concentration of A to fall from its initial value to a value equal to  $1/e$  times the initial value, i.e.,

$$\frac{[A](\tau_{\text{chem}})}{[A]_0} = 1/e. \quad (4.68)$$

Thus, combining Eqns. 4.67 to 4.68,

$$1/e = \exp(-k_{\text{app}}\tau_{\text{chem}}) \quad (4.69)$$

or

$$\tau_{\text{chem}} = 1/k_{\text{app}}. \quad (4.70)$$

Equation 4.70 shows that to estimate the time scale of simple unimolecular reactions all that is required is the apparent rate coefficient,  $k_{\text{app}}$ .

**Bimolecular Reactions** Consider now the bimolecular reaction



and its rate expression

$$\frac{d[A]}{dt} = -k_{\text{bimolec}}[A][B]. \quad (4.9)$$

For this single reaction taking place in the absence of all other reactions, the concentrations of A and B are related simply through stoichiometry. From Eqn. 4.8, we see that for every mole of A destroyed, one mole of B is similarly destroyed; thus, any change in [A] has a corresponding change in [B]:

$$x \equiv [A]_0 - [A] = [B]_0 - [B]. \quad (4.71)$$

The concentration of B then relates to the concentration of A simply as

$$[B] = [A] + [B]_0 - [A]_0. \quad (4.72)$$

Substituting Eqn. 4.71 into Eqn. 4.9 and then integrating yields the following:

$$\frac{[A](t)}{[B](t)} = \frac{[A]_0}{[B]_0} \exp([A]_0 - [B]_0) k_{\text{bimolec}} t. \quad (4.73)$$

Substituting Eqn. 4.72 into the above, and setting  $[A]/[A]_0 = 1/e$  when  $t = \tau_{\text{chem}}$  to define our characteristic time, results in

$$\tau_{\text{chem}} = \frac{\ln[e + (1 - e)([A]_0/[B]_0)]}{([B]_0 - [A]_0)k_{\text{bimolec}}}, \quad (4.74)$$

where  $e = 2.718$ .

Frequently, one of the reactants is in much greater abundance than the other. For the case when  $[B]_0 \gg [A]_0$ , Eqn. 4.74 simplifies to

$$\tau_{\text{chem}} = \frac{1}{[B]_0 k_{\text{bimolec}}}. \quad (4.75)$$

From Eqns. 4.74 and 4.75, we see that characteristic times for simple bimolecular reactions depend only on the concentrations of the initial reactants and the value of the rate coefficient.

**Termolecular Reactions** We can deal quite simply with the termolecular reaction



since, for a simple system at constant temperature, the third body concentration  $[M]$  is constant. The reaction rate expression, Eqn. 4.25, is mathematically identical to the bimolecular rate expression where  $k_{\text{ter}}[M]$  plays the same role as  $k_{\text{bimolec}}$ :

$$\frac{d[A]}{dt} = (-k_{\text{ter}}[M])[A][B]. \quad (4.76)$$

The characteristic time for the termolecular reaction is then expressed as

$$\tau_{\text{chem}} = \frac{\ln[e + (1 - e)([A]_0/[B]_0)]}{([B]_0 - [A]_0)k_{\text{ter}}[M]}, \quad (4.77)$$

and, when  $[B]_0 \gg [A]_0$ ,

$$\tau_{\text{chem}} = \frac{1}{[B]_0[M]k_{\text{ter}}}. \quad (4.78)$$

The following example illustrates the application of the above to a few selected reactions of interest in combustion.

Consider the following combustion reactions:

**Example 4.5**

Reaction	Rate coefficient
i. $\text{CH}_4 + \text{OH} \rightarrow \text{CH}_3 + \text{H}_2\text{O}$	$k(\text{cm}^3/\text{gmol}\cdot\text{s}) = 1.00 \cdot 10^8 T(\text{K})^{1.6} \exp[-1570/T(\text{K})]$
ii. $\text{CO} + \text{OH} \rightarrow \text{CO}_2 + \text{H}$	$k(\text{cm}^3/\text{gmol}\cdot\text{s}) = 4.76 \cdot 10^7 T(\text{K})^{1.23} \exp[-35.2/T(\text{K})]$
iii. $\text{CH} + \text{N}_2 \rightarrow \text{HCN} + \text{N}$	$k(\text{cm}^3/\text{gmol}\cdot\text{s}) = 2.86 \cdot 10^8 T(\text{K})^{1.1} \exp[-10.267/T(\text{K})]$
iv. $\text{H} + \text{OH} + \text{M} \rightarrow \text{H}_2\text{O} + \text{M}$	$k(\text{cm}^6/\text{gmol}^2\cdot\text{s}) = 2.20 \cdot 10^{22} T(\text{K})^{-2.0}$

Reaction i is an important step in the oxidation of  $\text{CH}_4$ , while reaction ii is the key step in CO oxidation. Reaction iii is a rate-limiting step in the prompt-NO mechanism, and reaction iv is a typical radical recombination reaction. (The importance of these reactions, and others, is discussed more fully in Chapter 5.)

Estimate the characteristic chemical times associated with the least abundant reactant in each of these reactions for the following two conditions:

<i>Condition I (low temperature)</i>	<i>Condition II (high temperature)</i>
$T = 1344.3\text{ K}$	$T = 2199.2\text{ K}$
$P = 1\text{ atm}$	$P = 1\text{ atm}$
$\chi_{\text{CH}_4} = 2.012 \cdot 10^{-4}$	$\chi_{\text{CH}_4} = 3.773 \cdot 10^{-6}$
$\chi_{\text{N}_2} = 0.7125$	$\chi_{\text{N}_2} = 0.7077$
$\chi_{\text{CO}} = 4.083 \cdot 10^{-3}$	$\chi_{\text{CO}} = 1.106 \cdot 10^{-2}$
$\chi_{\text{OH}} = 1.818 \cdot 10^{-4}$	$\chi_{\text{OH}} = 3.678 \cdot 10^{-3}$
$\chi_{\text{H}} = 1.418 \cdot 10^{-4}$	$\chi_{\text{H}} = 6.634 \cdot 10^{-4}$
$\chi_{\text{CH}} = 2.082 \cdot 10^{-9}$	$\chi_{\text{CH}} = 9.148 \cdot 10^{-9}$
$\chi_{\text{H}_2\text{O}} = 0.1864$	$\chi_{\text{H}_2\text{O}} = 0.1815$

Assume that each of the four reactions is uncoupled from all other reactions and that the third-body collision partner concentration is the sum of the  $\text{N}_2$  and  $\text{H}_2\text{O}$  concentrations.

### Solution

To determine the characteristic chemical time associated with each reaction, we employ Eqn. 4.74 (or Eqn. 4.75) for the bimolecular reactions i, ii, and iii, and Eqn. 4.77 (or Eqn. 4.78) for the termolecular reaction iv. For reaction i at condition I, we treat OH as species A, for its mole fraction is just slightly smaller than that of  $\text{CH}_4$ . Converting the mole fractions to molar concentrations, we have

$$\begin{aligned} [\text{OH}] &= \chi_{\text{OH}} \frac{P}{R_u T} \\ &= 1.818 \cdot 10^{-4} \frac{101,325}{8315(1344.3)} \\ &= 1.648 \cdot 10^{-6} \text{ kmol/m}^3 \text{ or } 1.648 \cdot 10^{-9} \text{ gmol/cm}^3 \end{aligned}$$

and

$$\begin{aligned} [\text{CH}_4] &= \chi_{\text{CH}_4} \frac{P}{R_u T} \\ &= 2.012 \cdot 10^{-4} \frac{101,325}{8315(1344.3)} \\ &= 1.824 \cdot 10^{-6} \text{ kmol/m}^3 \text{ or } 1.824 \cdot 10^{-9} \text{ gmol/cm}^3. \end{aligned}$$

Evaluating the rate coefficient, given in CGS units, we obtain

$$\begin{aligned} k_1 &= 1.00 \cdot 10^8 (1344.3)^{1.6} \exp[-1507/1344.3] \\ &= 3.15 \cdot 10^{12} \text{ cm}^3/\text{gmol-s}. \end{aligned}$$

Since  $[\text{CH}_4]$  and  $[\text{OH}]$  are of the same order of magnitude, we employ Eqn. 4.74 to evaluate  $\tau_{\text{chem}}$ :

$$\begin{aligned}\tau_{\text{OH}} &= \frac{\ln[2.718 - 1.718([\text{OH}]/[\text{CH}_4])]}{([\text{CH}_4] - [\text{OH}])k_i} \\ &= \frac{\ln[2.718 - 1.718(1.648 \cdot 10^{-9}/1.824 \cdot 10^{-9})]}{(1.824 \cdot 10^{-9} - 1.648 \cdot 10^{-9})3.15 \cdot 10^{12}} = \frac{0.1534}{554.4} \\ \boxed{\tau_{\text{OH}} = 2.8 \cdot 10^{-4} \text{ s or } 0.28 \text{ ms}}\end{aligned}$$

All of the characteristic times for the least abundant reactants for reactions i–iii are computed similarly, and the results summarized in the table below. For the termolecular reaction iv at condition I,

$$\begin{aligned}[\text{M}] &= (\chi_{\text{N}_2} + \chi_{\text{H}_2\text{O}}) \frac{P}{R_u T} \\ &= (0.7125 + 0.1864) \frac{101,325}{8315(1344.3)} \\ &= 8.148 \cdot 10^{-3} \text{ kmol/m}^3 \text{ or } 8.148 \cdot 10^{-6} \text{ gmol/cm}^3\end{aligned}$$

and, from Eqn. 4.77,

$$\tau_{\text{H}} = \frac{\ln[2.718 - 1.718([\text{H}]/[\text{OH}])]}{([\text{OH}] - [\text{H}])[\text{M}] k_{iv}}.$$

Numerically evaluating  $[\text{H}]$ ,  $[\text{OH}]$ , and  $k_{iv}$  and substituting into the above yields

$$\begin{aligned}\tau_{\text{H}} &= \frac{\ln[2.718 - 1.718(1.285 \cdot 10^{-9}/1.648 \cdot 10^{-9})]}{(1.648 \cdot 10^{-9} - 1.285 \cdot 10^{-9})8.149 \cdot 10^{-6}(1.217 \cdot 10^{16})} \\ \boxed{\tau_{\text{H}} = 8.9 \cdot 10^{-3} \text{ s or } 8.9 \text{ ms}}.\end{aligned}$$

A similar calculation is performed for condition II, and the results are shown in the following table:

Condition	Reaction	Species A	$k_i(T)$	$\tau_A \text{ (ms)}$
I	i	OH	$3.15 \cdot 10^{12}$	0.28
I	ii	OH	$3.27 \cdot 10^{11}$	0.084
I	iii	CH	$3.81 \cdot 10^8$	0.41
I	iv	H	$1.22 \cdot 10^{16}$	8.9
II	i	CH <sub>4</sub>	$1.09 \cdot 10^{13}$	0.0045
II	ii	OH	$6.05 \cdot 10^{11}$	0.031
II	iii	CH	$1.27 \cdot 10^{10}$	0.020
II	iv	H	$4.55 \cdot 10^{15}$	2.3

### Comment

We make several observations from these calculations. First, the increase in temperature from 1344 K to 2199 K shortens the chemical time scales for all of the species, but most dramatically for the CH<sub>4</sub> + OH and the CH + N<sub>2</sub> reactions (i and iii). For the CH<sub>4</sub> + OH reaction, the dominant factor is the decrease in the given CH<sub>4</sub> concentration; while for the CH + N<sub>2</sub> reaction, the large increase in the rate coefficient dominates. A second observation is that the characteristic times at either condition vary widely among the various reactions. It is particularly interesting to note the very long characteristic times

associated with recombination reaction  $H + OH + M \rightarrow H_2O + M$ , compared with the bimolecular reactions. That recombination reactions are relatively slow plays a key role in using partial equilibrium assumptions to simplify complex chemical mechanisms (see next section). The last comment is that the simplified relation, Eqn. 4.75, could have been used with good accuracy for reaction iii at both the low- and high-temperature conditions, as well as reaction i at the high temperature, since in these cases one of the reactants was much more abundant than the other.

---

### Partial Equilibrium

Many combustion processes simultaneously involve both fast and slow reactions such that the fast reactions are rapid in both the forward and reverse directions. These fast reactions are usually chain-propagating or chain-branching steps, while the slow reactions are termolecular recombination reactions. Treating the fast reactions as if they were equilibrated simplifies the chemical kinetics by eliminating the need to write rate equations for the radical species involved. This treatment is called the **partial-equilibrium approximation**. We now illustrate these ideas using the following hypothetical mechanism:



In this mechanism, the reactive intermediates are A, B, and AB; while the stable species are  $A_2$ ,  $B_2$  and  $A_2B$ . Note that the bimolecular reactions are grouped as forward and reverse reaction pairs (e.g., P.1f and P.1r). The reaction rates of each reaction in the three pairs of bimolecular reactions are assumed to be much faster than the rate of the recombination reaction P.4f. Bimolecular pairs behaving in this manner are often referred to as **shuffle** reactions, since the radical species shuffle between being reactants and products. We further assume that the forward and reverse reaction rates in each pair are equal, i.e.,

$$k_{P.1f}[A][B_2] = k_{P.2r}[AB][B], \quad (4.79a)$$

$$k_{P.2f}[B][A_2] = k_{P.2r}[AB][A], \quad (4.79b)$$

and

$$k_{P.3f}[AB][A_2] = k_{P.3r}[A_2B][A], \quad (4.79c)$$

or alternatively,

$$\frac{[AB][A]}{[A][B_2]} = K_{p,1}, \quad (4.80a)$$

$$\frac{[AB][A]}{[B][A_2]} = K_{p,2}, \quad (4.80b)$$

and

$$\frac{[A_2B][A]}{[AB][A_2]} = K_{p,3}. \quad (4.80c)$$

Simultaneous solution of Eqns. 4.80a, b, and c allows the radical species A, B, and AB to be expressed in terms of the stable species  $A_2$ ,  $B_2$ ,  $A_2B$ , eliminating the need for rate equations for the radicals, i.e.,

$$[A] = K_{p,3} (K_{p,1}, K_{p,2} [B_2])^{1/2} \frac{[A_2]^{3/2}}{[A_2B]}, \quad (4.81a)$$

$$[B] = K_{p,3} K_{p,1} \frac{[A_2][B_2]}{[A_2B]}, \quad (4.81b)$$

and

$$[AB] = (K_{p,1}, K_{p,2} [A_2][B_2])^{1/2}. \quad (4.81c)$$

Knowing the radical concentrations from Eqns. 4.81a, b, and c allows the product formation rate to be calculated from reaction P.4f:

$$\frac{d[A_2B]}{dt} = k_{P.4f} [A][AB][M]. \quad (4.82)$$

Of course, to evaluate and integrate Eqn. 4.82,  $[A_2]$  and  $[B_2]$  must be known or calculated from simultaneous integration of similar expressions.

It is interesting to note that the net result of invoking either the partial equilibrium assumption or the steady-state approximation is the same: a radical concentration is determined by an algebraic equation rather than the integration of an ordinary differential equation. It is important, however, to keep in mind that, physically, the two approximations are quite different, with the partial equilibrium approximation forcing a reaction, or sets of reactions, to be essentially equilibrated; while the steady-state approximation forces the individual net production rate of one or more species to be essentially zero.

There are many examples in the combustion literature of where the partial equilibrium approximation is invoked to simplify a problem. Two particular interesting cases are the calculation of carbon monoxide concentrations during the expansion stroke of a spark-ignition engine [13, 14] and the calculation of nitric oxide emissions in turbulent jet flames [15, 16]. In both of these problems, the slow recombination reactions cause radical concentrations to build up to levels in excess of their values for full equilibrium.

## SUMMARY

In this chapter, we explored many concepts essential to the understanding of combustion chemistry. You should be able to distinguish between global and elementary reactions and mechanisms and have an appreciation for the types of elementary reactions, i.e., bimolecular, termolecular, and unimolecular. You should also have an understanding of the relation between molecular collision theory and reaction rates. In particular, you should understand the physical meaning of the steric factor, pre-exponential factor, and activation energy—components of the rate coefficient that have their origins in collision theory. We also developed the concept of net species production rates and procedures to formulate appropriate equations from complex mechanisms. A compact notation was introduced to facilitate numerical calculations using a computer. You should understand chain mechanisms and the concepts of chain initiation, chain propagation, and chain termination. The idea of a steady state for highly reactive species, such as atoms and other radicals, was introduced and used to simplify chain mechanisms. Partial equilibrium, another tool used to simplify complex mechanisms, also was discussed. The Zeldovich nitric oxide formation mechanism, introduced in the examples, was used to illustrate many of the concepts in concrete ways.

---

## NOMENCLATURE

<i>A</i>	Pre-exponential factor (various units)
<i>b</i>	Temperature exponent
<i>E<sub>A</sub></i>	Activation energy (J/kmol)
<i>k</i>	Rate coefficient (various units)
<i>k<sub>B</sub></i>	Boltzmann constant, $1.381 \cdot 10^{-23}$ (J/K)
<i>K<sub>c</sub></i>	Equilibrium constant based on concentrations
<i>K<sub>p</sub></i>	Equilibrium constant based on partial pressures
<i>m</i>	Mass (kg) or reaction order
<i>M</i>	Third-body collision partner
<i>n</i>	Reaction order
<i>n/V</i>	Number density (molecules/m <sup>3</sup> or 1/m <sup>3</sup> )
<i>N<sub>AV</sub></i>	Avogadro number, $6.022 \cdot 10^{26}$ (molecules/kmol)
<i>p</i>	Steric factor
<i>P</i>	Pressure
<i>P</i>	Probability
<i>q</i>	Rate-of-progress variable, Eqn. 4.33
<i>R<sub>u</sub></i>	Universal gas constant (J/kmol-K)
<i>t</i>	Time (s)
<i>T</i>	Temperature (K)
<i>v</i>	Velocity (m/s)

$\bar{v}$	Maxwellian mean velocity (m/s)
$V$	Volume ( $m^3$ )
$X_j$	Chemical formula of species $j$ , Eqn. 4.29
$Z_c$	Collision frequency (1/s)

**Greek Symbols**

$\Delta t$	Time interval (s)
$\mu$	Reduced mass (kg)
$v'$	Reactant stoichiometric coefficient
$v''$	Product stoichiometric coefficient
$v_{ji}'' - v_{ji}'$	Eqn. 4.32
$\chi$	Mole fraction
$\dot{\omega}$	Net species volumetric production rate ( $kmol/m^3\text{-s}$ )

**Subscripts**

app	Apparent
bimolec	Bimolecular
de	De-energized
e	Energized
f	Forward
F	Fuel
G	Global or overall
i	ith species
Ox	Oxidizer
Pr	Products
r	Reverse
ss	Steady state
ter	Termolecular
uni	Unimolecular
0	Initial

**Other Notation**

[ $X$ ]	Molar concentration of species $X$ ( $kmol/m^3$ )
$\prod$	Multiplication

**REFERENCES**


1. Kee, R. J., Rupley, F. M., and Miller, J. A., "Chemkin-II: A Fortran Chemical Kinetics Package for the Analysis of Gas-Phase Chemical Kinetics," Sandia National Laboratories Report SAND89-8009, March 1991.
2. Gardiner, W. C., Jr., *Rates and Mechanisms of Chemical Reactions*, Benjamin, Menlo Park, CA, 1972.
3. Benson, S. W., *The Foundations of Chemical Kinetics*, McGraw-Hill, New York, 1960.

4. Warnatz, J., "Rate Coefficients in the C/H/O System," Chapter 5 in *Combustion Chemistry* (W. C. Gardiner, Jr., ed.), Springer-Verlag, New York, pp. 197–360, 1984.
5. IMSL, Inc., "DGEAR," IMSL Library, Houston, TX.
6. Hindmarsh, A. C., "ODEPACK, A Systematic Collection of ODE Solvers," *Scientific Computing—Applications of Mathematics and Computing to the Physical Sciences* (R. S. Stapleman, ed.), North-Holland, Amsterdam, p. 55, 1983.
7. Bittker, D. A., and Soullin, V. J., "GCKP-84-General Chemical Kinetics Code for Gas Flow and Batch Processing Including Heat Transfer," NASA TP-2320, 1984.
8. Pratt, D. T., and Radhakrishnan, K., "CREK-ID: A Computer Code for Transient, Gas-Phase Combustion Kinetics," NASA Technical Memorandum TM-83806, 1984.
9. National Institute of Standards and Technology, NIST Chemical Kinetics Database, NIST, Gaithersburg, MD, published annually.
10. Hanson, R. K., and Salimian, S., "Survey of Rate Constants in the N/H/O System," Chapter 6 in *Combustion Chemistry* (W. C. Gardiner, Jr., ed.), Springer-Verlag, New York, pp. 361–421, 1984.
11. Williams, F. A., *Combustion Theory*, 2nd Ed., Addison-Wesley, Redwood City, CA, p. 565, 1985.
12. Gardiner, W. C., Jr., and Troe, J., "Rate Coefficients of Thermal Dissociation, Isomerization, and Recombination Reactions," Chapter 4 in *Combustion Chemistry* (W. C. Gardiner, Jr., ed.), Springer-Verlag, New York, pp. 173–196, 1984.
13. Keck, J. C., and Gillespie, D., "Rate-Controlled Partial-Equilibrium Method for Treating Reactive Gas Mixtures," *Combustion and Flame*, 17: 237–241 (1971).
14. Delichatsios, M. M., "The Kinetics of CO Emissions from an Internal Combustion Engine," S.M. Thesis, Massachusetts Institute of Technology, Cambridge, MA, June 1972.
15. Chen, C.-S., Chang, K.-C., and Chen, J.-Y., "Application of a Robust  $\beta$ -pdf Treatment to Analysis of Thermal NO Formation in Nonpremixed Hydrogen–Air Flame," *Combustion and Flame*, 98: 375–390 (1994).
16. Janicka, J., and Kollmann, W., "A Two-Variables Formalism for the Treatment of Chemical Reactions in Turbulent H<sub>2</sub>–Air Diffusion Flames," *Seventeenth Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, p. 421, 1979.
17. Svehla, R. A., "Estimated Viscosities and Thermal Conductivities of Gases at High Temperature," NASA Technical Report R-132, 1962.


---

**QUESTIONS AND PROBLEMS**

- 4.1** Make a list of all of the bold-faced words in Chapter 4 and discuss their meanings.
- 4.2** Several species and their structural forms are given below. Using sketches of colliding molecules, show that the reaction  $2\text{H}_2 + \text{O}_2 \rightarrow 2\text{H}_2\text{O}$  is highly improbable based on simple collisions and the given structures.

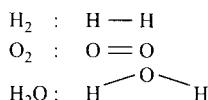

- 4.3** Consider the reaction  $\text{H}_2 + \text{O}_2 \rightarrow \text{HO}_2 + \text{H}$ . Show that this is likely to be an elementary reaction. Use a sketch, as in problem 4.2. The structure of the hydroperoxy radical is  $\text{H}-\text{O}-\text{O}$ .
- 4.4** Consider the reaction  $\text{CH}_4 + \text{O}_2 \rightarrow \text{CH}_3 + \text{HO}_2$ . Although a  $\text{CH}_4$  molecule may collide with an  $\text{O}_2$  molecule, a chemical reaction may not necessarily occur. List two factors important in determining whether or not a reaction occurs during a collision.
- 4.5** Consider the overall oxidation reaction of propane:

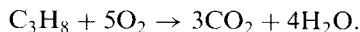

The following global mechanism has been proposed for this reaction:

$$\text{Reaction rate} = 8.6 \cdot 10^{11} \exp(-30/R_u T) [\text{C}_3\text{H}_8]^{0.1} [\text{O}_2]^{1.65},$$

where CGS units (cm, s, gmol, kcal, K) are employed.


- A. Identify the order of the reaction with respect to propane.
  - B. Identify the order of the reaction with respect to  $\text{O}_2$ .
  - C. What is the overall order of the global reaction?
  - D. Identify the activation energy for the reaction.
- 4.6** In a global, single-step mechanism for butane combustion, the reaction order with respect to butane is 0.15 and with respect to oxygen is 1.6. The rate coefficient can be expressed in Arrhenius form: the pre-exponential factor is  $4.16 \cdot 10^9 [(\text{kmol}/\text{m}^3)^{-0.75}/\text{s}]$  and the activation energy is 125,000 kJ/kmol. Write out an expression for the rate of butane destruction,  $d[\text{C}_4\text{H}_{10}]/dt$ .
- 4.7** Using the results of problem 4.6, determine the volumetric mass oxidation rate of butane, in  $\text{kg}/\text{s}\cdot\text{m}^3$ , for a fuel-air mixture with an equivalence ratio of 0.9, temperature of 1200 K, a pressure of 1 atm.
- 4.8** Classify the following reactions as being either global or elementary. For those identified as elementary, further classify them as unimolecular, bimolecular, or termolecular. Give reasons for your classification.

- A.  $\text{CO} + \text{OH} \rightarrow \text{CO}_2 + \text{H.}$
- B.  $2\text{CO} + \text{O}_2 \rightarrow 2\text{CO}_2.$
- C.  $\text{H}_2 + \text{O}_2 \rightarrow \text{H} + \text{H} + \text{O}_2.$
- D.  $\text{HOCO} \rightarrow \text{H} + \text{CO}_2.$
- E.  $\text{CH}_4 + 2\text{O}_2 \rightarrow \text{CO}_2 + 2\text{H}_2\text{O.}$
- F.  $\text{OH} + \text{H} + \text{M} \rightarrow \text{H}_2\text{O} + \text{M.}$


**4.9** The following hard-sphere collision diameters,  $\sigma$ , are taken from Svehla [17]:

Molecule	$\sigma$ (Å)
H	2.708
$\text{H}_2$	2.827
OH	3.147
$\text{H}_2\text{O}$	2.641
O	3.050
$\text{O}_2$	3.467

Using the above data with Eqn. 4.17 and Table 4.1, determine a temperature-dependent expression for the steric factors for the rate coefficients of the following reactions. Evaluate the steric factor at a temperature of 2500 K. Be careful with units and remember that the reduced mass should be in grams or kilograms.

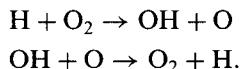

**4.10** In methane combustion, the following reaction pair is important:

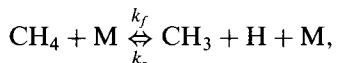

where the reverse reaction coefficient is given by

$$k_r (\text{m}^6/\text{kmol}^2\text{-s}) = 2.82 \cdot 10^5 T \exp[-9835/T].$$

At 1500 K, the equilibrium constant  $K_p$  has a value of 0.003691 based on a reference-state pressure of 1 atm (101,325 Pa). Derive an algebraic expression for the forward rate coefficient  $k_f$ . Evaluate your expression for a temperature of 1500 K. Give units.


**4.11\*** Plot the forward rate coefficient for the reaction  $\text{O} + \text{N}_2 \rightarrow \text{NO} + \text{N}$  versus temperature for the temperature range  $1500 \text{ K} < T < 2500 \text{ K}$ . The rate coefficient is given as [10]  $k(T) = 1.82 \cdot 10^{14} \exp[-38,370/T(\text{K})]$  in units of  $\text{cm}^3/\text{gmol}\text{-s}$ . What conclusions can you draw?

| \*Indicates required use of computer.

- 4.12** Consider the following mechanism for the production of ozone from the heating of oxygen:





- A. Write out the coefficient matrices for  $v'_{ji}$  and  $v''_{ji}$ . Use the convention that species 1 is  $\text{O}_3$ , species 2 is  $\text{O}_2$ , and species 3 is  $\text{O}$ .
  - B. Starting with the compact notation defined by Eqns. 4.31–4.33, express the rate-of-progress variables,  $\dot{\omega}_j$ , for the three species involved in the above mechanism. Retain all terms without simplifying, i.e., retain terms raised to the zero power.
- 4.13** Generate the coefficient matrices  $v'_{ji}$  and  $v''_{ji}$  for the  $\text{H}_2$ – $\text{O}_2$  reaction mechanism (H.1–H.20) given in Chapter 5. Consider both forward and reverse reactions. Do not attempt to include the radical destruction at the walls (Eqn. H.21).
- 4.14** Consider the following elementary reaction mechanism where both the forward and reverse reactions are important:

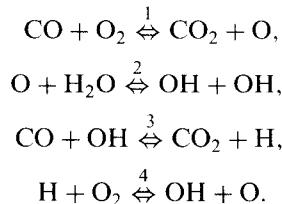

How many chemical rate equations are needed to determine the chemical evolution of a system defined by this mechanism? Write out the rate equation for the hydroxyl radical.



- 4.15** Consider the production of the stable product,  $\text{HBr}$ , from  $\text{H}_2$  and  $\text{Br}_2$ . The following complex reaction mechanism is thought to apply:

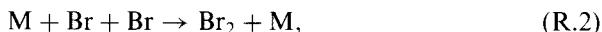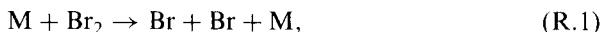

- A. For each reaction, identify the type of elementary reaction, e.g., unimolecular, etc., and indicate its role in the chain mechanism, e.g., chain initiation.

- B. Write out a complete expression for the Br-atom reaction rate,  $d[\text{Br}]/dt$ .
- C. Write out an expression that can be used to determine the steady-state concentration of the hydrogen atom,  $[\text{H}]$ .

- 4.16** Consider the following chain-reaction mechanism for the high-temperature formation of nitric oxide, i.e., the Zeldovich mechanism:

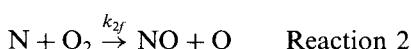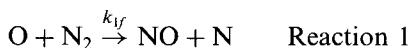

- A. Write out expressions for  $d[\text{NO}]/dt$  and  $d[\text{N}]/dt$ .
- B. Assuming N atoms exist in steady state and that the concentrations of O,  $\text{O}_2$ , and  $\text{N}_2$  are at their equilibrium values for a specified temperature and composition, simplify your expression obtained above for  $d[\text{NO}]/dt$  for the case of negligible reverse reactions. (Answer:  $d[\text{NO}]/dt = 2k_{1f} [\text{O}]_{eq} [\text{N}_2]_{eq}$ )
- C. Write out the expression for the steady-state N-atom concentration used in part B.
- D. For the conditions given below and using the assumptions of part B, how long does it take to form 50 ppm (mole fraction  $\cdot 10^6$ ) of NO?

$$T = 2100 \text{ K},$$

$$\rho = 0.167 \text{ kg/m}^3,$$

$$MW = 28.778,$$

$$\chi_{\text{O},eq} = 7.6 \cdot 10^{-5} \text{ (mole fraction)},$$


$$\chi_{\text{O}_2,eq} = 3.025 \cdot 10^{-3} \text{ (mole fraction)},$$

$$\chi_{\text{N}_2,eq} = 0.726 \text{ (mole fraction)},$$

$$k_{1f} = 1.82 \cdot 10^{14} \exp[-38,370/T(K)] \text{ with units of cm}^3/\text{gmol}\cdot\text{s}.$$

- E. Calculate the value of the reverse reaction rate coefficient for the first reaction, i.e.,  $\text{O} + \text{N}_2 \leftarrow \text{NO} + \text{N}$ , for a temperature of 2100 K.
- F. For your computations in part D, how good is the assumption that reverse reactions are negligible? Be quantitative.
- G. For the conditions of part D, determine numerical values for  $[\text{N}]$  and  $\chi_{\text{N}}$ . (Note:  $k_{2f} = 1.8 \cdot 10^{10} T \exp(-4680/T)$  with units of  $\text{cm}^3/\text{gmol}\cdot\text{s}$ .)


- 4.17** When the following reaction is added to the two reactions in problem 4.16, the NO formation mechanism is called the extended Zeldovich mechanism:

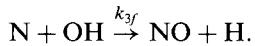

With the assumption of equilibrium concentrations of O,  $\text{O}_2$ ,  $\text{N}_2$ , H, and OH applied to this three-step mechanism, find expressions for:

- A. The steady-state N-atom concentration, neglecting reverse reactions.  
 B. The NO formation rate  $d[NO]/dt$ , again neglecting reverse reactions.

**4.18** Consider the following CO oxidation reactions:

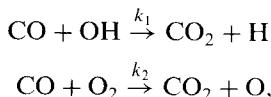

where  $k_1$  ( $\text{cm}^3/\text{gmol}\cdot\text{s}$ ) =  $1.17 \cdot 10^7 T(\text{K})^{1.35} \exp[+3000/R_u T(\text{K})]$ ,  $k_2$  ( $\text{cm}^3/\text{gmol}\cdot\text{s}$ ) =  $2.50 \cdot 10^{12} \exp[-200,000/R_u T(\text{K})]$ , and  $R_u = 8.315 \text{ J/gmol}\cdot\text{K}$ . Calculate and compare the characteristic times associated with these two reactions for  $T = 2000 \text{ K}$  and  $P = 1 \text{ atm}$ . The CO mole fraction is 0.011 and the OH and O<sub>2</sub> mole fractions are  $3.68 \cdot 10^{-3}$  and  $6.43 \cdot 10^{-3}$ , respectively.

**4.19\*** Consider the production of nitric oxide via the Zeldovich mechanism. For methane-air combustion at an equivalence ratio of 0.9 and 1 atm, the following amounts of NO are calculated to be produced after 10 ms:

$T (\text{K})$	$\chi_{NO} (\text{ppm})$
1600	0.0015
1800	0.150
2000	6.58
2200	139
2400	1823

Use TPEQUIL to calculate the **equilibrium** NO mole fractions. Construct a table showing the equilibrium values and the ratio of the kinetically determined NO mole fractions to the equilibrium values. Also, compute a characteristic NO-formation time, defined as the time required to reach the equilibrium value using the initial rate of formation. For example, at 1600 K, the initial formation rate is  $0.0015 \text{ ppm}/0.010 \text{ s} = 0.15 \text{ ppm/s}$ . Discuss the temperature dependence of your findings. What is the significance of this temperature dependence?

**4.20** In the combustion of hydrogen, the following reactions involving radicals are fast in both the forward and reverse directions:



Use the assumption of partial equilibrium to derive algebraic expressions for the molar concentrations of the three radical species, O, H, and OH, in terms of the kinetic rate coefficients and the molar concentrations of reactant and product species, H<sub>2</sub>, O<sub>2</sub>, and H<sub>2</sub>O.

# 5

## Some Important Chemical Mechanisms

---

### OVERVIEW

Our approach in this chapter will be to present, or outline, the elementary steps involved in a number of chemical mechanisms of major importance to combustion and combustion-generated air pollution. For detailed discussions of these mechanisms, the reader is referred to the original literature, reviews, and more advanced textbooks that emphasize kinetics [1, 2]. Our purpose is simply to illustrate real systems, which are generally complex, and to show that the fundamentals discussed in the previous chapter are indeed important to understanding such systems.



It is important to point out that complex mechanisms are evolutionary products of chemists' thoughts and experiments, and, as such, they may change with time as new insights are developed. Thus, when we discuss a particular mechanism, we are not referring to *the* mechanism in the same sense that we refer to *the* first law of thermodynamics, or other well-known conservation principles.

---

### THE H<sub>2</sub>-O<sub>2</sub> SYSTEM

The hydrogen–oxygen system is important in its own right as, for example, in rocket propulsion. This system is also important as a subsystem in the oxidation of hydrocarbons and moist carbon monoxide. Detailed reviews of H<sub>2</sub>–O<sub>2</sub> kinetics can be found in Refs. [3]–[5]. Relying heavily on Glassman [1], we outline the oxidation of hydrogen as follows.



The initiation reactions are

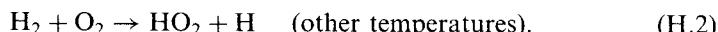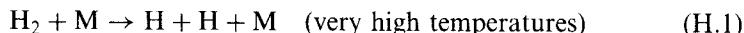

Chain-reaction steps involving O, H, and OH radicals are



Chain-terminating steps involving O, H, and OH radicals are the three-body recombination reactions:

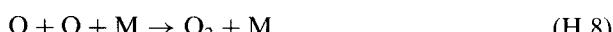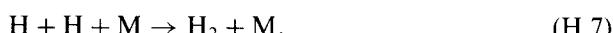


To complete the mechanism, we need to include reactions involving HO<sub>2</sub>, the hydroperoxy radical, and H<sub>2</sub>O<sub>2</sub>, hydrogen peroxide. When




becomes active, then the following reactions, and the reverse of H.2, come into play:



and

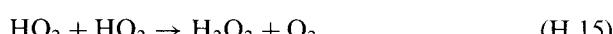

with

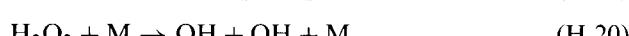

Depending upon the temperature, pressure, and extent of reaction, the reverse reactions of all of the above can be important; therefore, in modeling the H<sub>2</sub>-O<sub>2</sub> system as many as 40 reactions can be taken into account involving the eight species: H<sub>2</sub>, O<sub>2</sub>, H<sub>2</sub>O, OH, O, H, HO<sub>2</sub>, and H<sub>2</sub>O<sub>2</sub>.

The H<sub>2</sub>-O<sub>2</sub> system has interesting explosion characteristics (Fig. 5.1) that can be explained using the above mechanism. Figure 5.1 shows that there are distinct regions in temperature-pressure coordinates where a stoichiometric mixture of H<sub>2</sub> and O<sub>2</sub> will and will not explode. The temperatures and pressures correspond to the initial charging conditions of the spherical vessel containing the reactants. To explore the explosion behavior, let us follow a vertical line, say at 500°C, from the lowest pressure shown (1 mm Hg) upwards to pressures of several atmospheres. Up until about 1.5 mm Hg, there is no explosion. This lack of explosion is the result of the free radicals produced in the initiation step (H.2) and chain sequence (H.3-H.6) being destroyed by reactions on the walls of the vessel. These wall reactions break the chain, preventing the rapid buildup of radicals that leads to explosion. The wall reactions are not explicitly included in the mechanism since they are not strictly gas-phase reactions. We can symbolically write a first-order reaction for wall destruction of radicals as




where  $k_{\text{wall}}$  is a function of both diffusion (transport) and chemical processes, as well as the nature of the wall surface. Reactions of gaseous species at solid surfaces are called **heterogeneous** reactions and are quite important in solids combustion (Chapter 14) and catalysis.

When the initial pressure is set above approximately 1.5 mm Hg, the mixture explodes. This is a direct result of the gas-phase chain sequence H.3-H.6 prevailing over the radical destruction at the wall. Recall from our examination of a generic chain mechanism that increasing pressure increased the radical concentration linearly, while increasing the reaction rate geometrically.

Continuing our journey up the 500°C isotherm, we remain in an explosive regime until about 50 mm Hg; at this point, the mixture ceases to be explosive. The cessation of explosive behavior can be explained by the competition for H atoms between the chain-branched reaction, H.3, and what is effectively a chain-terminating step at low temperatures, reaction H.11 [1, 2]. Reaction H.11 is chain-terminating because the hydroperoxy radical, HO<sub>2</sub>, is relatively unreactive at these conditions, and, because of this, it can diffuse to the wall where it is destroyed (H.21).

At the third limit, we cross over again into an explosive regime at about 3000 mm Hg. At these conditions, reaction H.16 adds a chain-branched step which opens up the H<sub>2</sub>O<sub>2</sub> chain sequence [1, 2].

From this brief discussion of the explosion limits of the H<sub>2</sub>-O<sub>2</sub> system, it is clear how useful an understanding of the *detailed* chemistry of a system is in explaining experimental observations. It is also clear that such understanding is

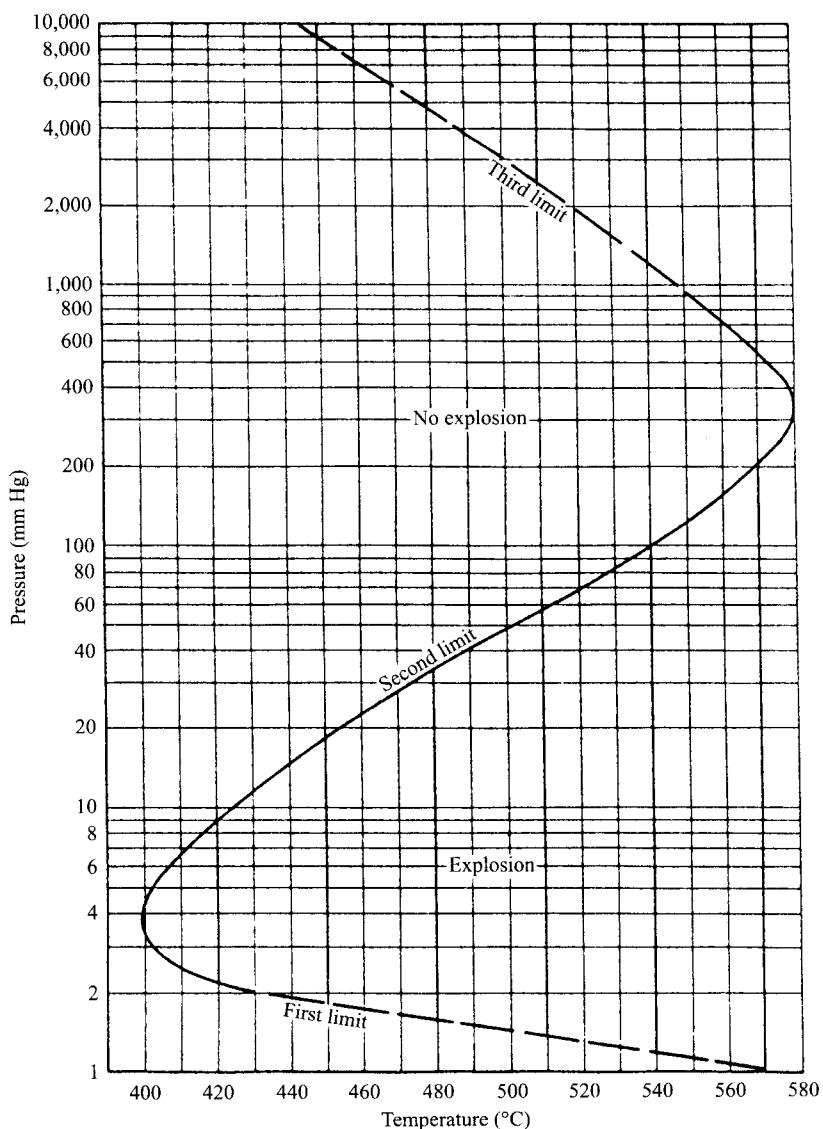

**Figure 5.1** Explosion limits for a stoichiometric hydrogen–oxygen mixture in a spherical vessel.

SOURCE: From Ref. [2]. Reprinted by permission of Academic Press.

essential to the development of predictive models of combustion phenomena when chemical effects are important.

---

## CARBON MONOXIDE OXIDATION

Although the oxidation of carbon monoxide has importance in its own right, it is extremely important to the oxidation of hydrocarbons. Hydrocarbon combustion simplistically can be characterized as a two-step process: the first step involves the breakdown of the fuel to carbon monoxide, with the second step being the final oxidation of carbon monoxide to carbon dioxide.


It is well known that CO is slow to oxidize unless there are some hydrogen-containing species present; small quantities of H<sub>2</sub>O or H<sub>2</sub> can have a tremendous effect on the oxidation rate. This is because the CO oxidation step involving the hydroxyl radical is much faster than the steps involving O<sub>2</sub> and O.

Assuming water is the primary hydrogen-containing species, the following four steps describe the oxidation of CO [1]:



The reaction CO.1 is slow and does not contribute significantly to the formation of CO<sub>2</sub>, but rather serves as the initiator of the chain sequence. The actual CO oxidation step, CO.3, is also a chain-propagating step, producing H atoms that react with O<sub>2</sub> to form OH and O (reaction CO.4). These radicals, in turn, feed back into the oxidation step (CO.3) and the first chain-branching step (CO.2). The CO + OH → CO<sub>2</sub> + H (CO.3) step is the key reaction in the overall scheme.

If hydrogen is the catalyst instead of water, the following steps are involved [1]:

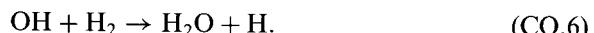

With hydrogen present, the entire H<sub>2</sub>-O<sub>2</sub> reaction system (H.1-H.21) needs to be included to describe the CO oxidation. Glassman [1] indicates that with HO<sub>2</sub> present, another route for CO oxidation opens up:



although this reaction is not nearly as important as the OH attack on CO (i.e., reaction CO.3). A comprehensive CO oxidation mechanism is presented in Ref. [5].


## OXIDATION OF HIGHER PARAFFINS

### General Scheme

**Paraffins**, or **alkanes**, are saturated, straight-chain or branched-chain, single-bonded hydrocarbons with the general molecular formula  $C_nH_{2n+2}$ . In this section, we briefly discuss the generic oxidation of the higher paraffins, that is, where  $n > 2$ . The oxidation of methane (and ethane) exhibits unique characteristics and will be discussed in the next section.

Our discussion of higher paraffins is different from the preceding sections in that no attempt is made to explore or list the many elementary reactions involved; rather, we will present an overview of the oxidation process, indicating key reaction steps, and then briefly discuss multistep global approaches that have been applied with some success.

The oxidation of paraffins can be characterized by three sequential processes [1], given below, and illustrated by the species and temperature distributions shown in Fig. 5.2:

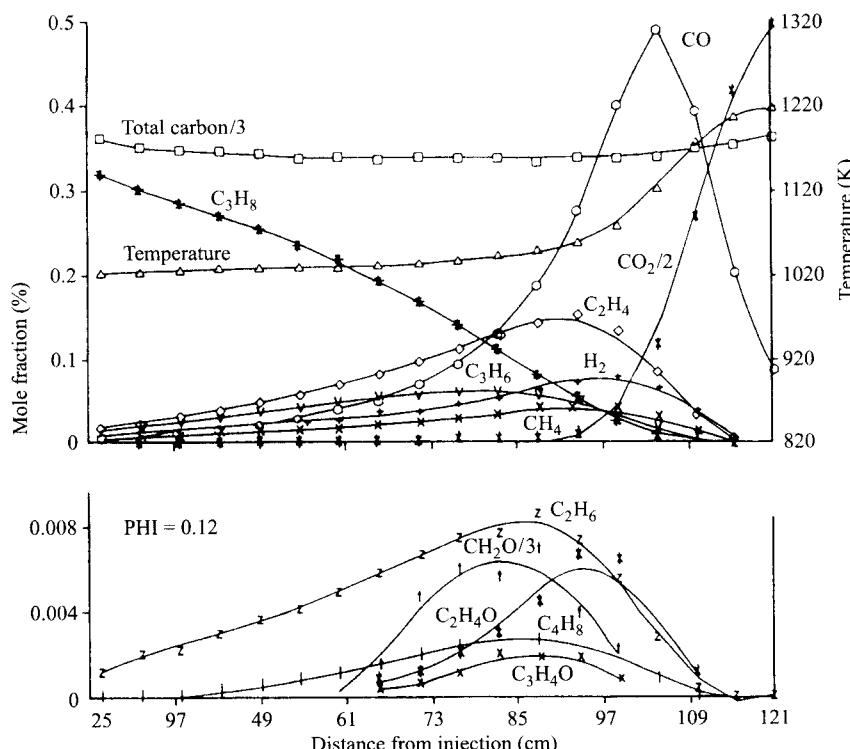


**Figure 5.2** Species mole fractions and temperature as functions of distance (time) for the oxidation of propane in a steady-flow reactor.

SOURCE: From Ref. [7]. Reprinted by permission of Gordon & Breach Science Publishers.

- I. The fuel molecule is attacked by O and H atoms and breaks down, primarily forming olefins and hydrogen. The hydrogen oxidizes to water, subject to available oxygen.
- II. The unsaturated olefins further oxidize to CO and H<sub>2</sub>. Essentially, all of the H<sub>2</sub> is converted to water.
- III. The CO burns out via reaction CO.3, CO + OH → CO<sub>2</sub> + H. Nearly all of the heat release associated with the overall combustion process occurs in this step.

We will now flesh out these three processes in steps 1–8, following Glassman [1], and illustrate them with the example of propane (C<sub>3</sub>H<sub>8</sub>) oxidation.


*Step 1.* A carbon–carbon (C–C) bond is broken in the original fuel molecule. The C–C bonds are preferentially broken over hydrogen–carbon bonds because the C–C bonds are weaker.

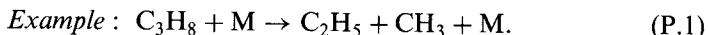


*Step 2.* The two resulting hydrocarbon radicals break down further, creating olefins (hydrocarbons with double carbon bonds) and hydrogen atoms. The removal of an H atom from the hydrocarbon is termed **H-atom abstraction**. In the example for this step, ethylene and methylene are produced.




*Step 3.* The creation of H atoms from step 2 starts the development of a pool of radicals.

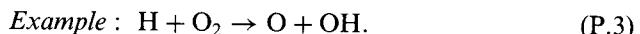


*Step 4.* With the establishment of the radicals, new fuel-molecule attack pathways open up.

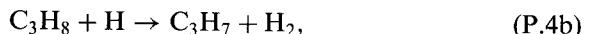

*Step 5.* As in step 2, the hydrocarbon radicals again decay into olefins and H atoms via H-atom abstraction,

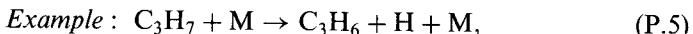

and following the **β-scission rule** [1]. This rule states that the C–C or C–H bond broken will be the one that is one place removed from the radical site, i.e., the site of the unpaired electron. The unpaired electron at the radical site strengthens the adjacent bonds at the expense of those one place removed from the site. For the C<sub>3</sub>H<sub>7</sub> radical created in step 4, we have two possible paths:

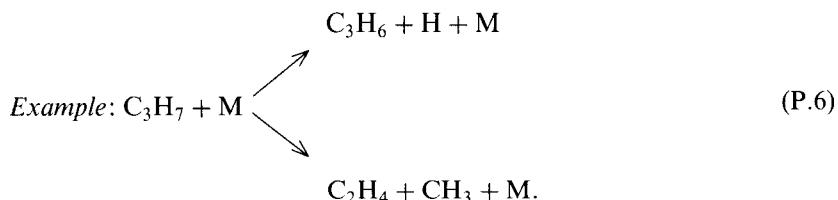

The application of the  $\beta$ -scission rule to the  $\text{C}_3\text{H}_7$  radical breakdown (P.6) is illustrated in Fig. 5.3.

*Step 6.* The oxidation of the olefins created in steps 2 and 5 is initiated by O-atom attack, which produces formyl radicals ( $\text{HCO}$ ) and formaldehyde ( $\text{H}_2\text{CO}$ ).



*Step 7a.* Methyl radicals ( $\text{CH}_3$ ) oxidize.


*Step 7b.* Formaldehyde ( $\text{H}_2\text{CO}$ ) oxidizes.

*Step 7c.* Methylene ( $\text{CH}_2$ ) oxidizes.

The details of steps 7a–7c can be found in Ref. [1]; however, each of these steps produces carbon monoxide, the oxidation of which is the final step (step 8).

*Step 8.* The carbon monoxide oxidizes following the moist CO mechanism defined by CO.1–CO.7.


As can be seen from the above, the mechanism of higher-paraffin oxidation is quite complex indeed. The details of such mechanisms are still the subject of research.

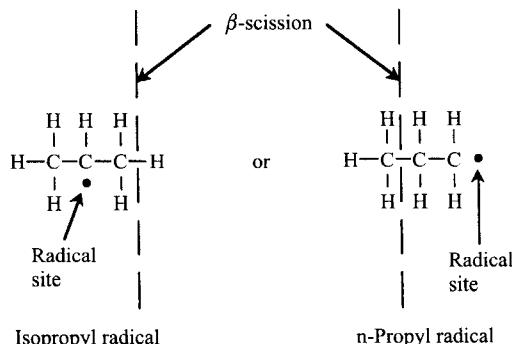

**Figure 5.3** The  $\beta$ -scission rule applied to bond breaking in  $\text{C}_3\text{H}_7$  where the radical site occurs at different locations. Note the intervening C–C bond between the radical site and the broken bond.

## Global and Quasi-Global Mechanisms

The sequential nature of the processes I–III above has led to empirical global models that capture the overall behavior in a sequence of global or quasi-global steps. Westbrook and Dryer [6] present and evaluate one-step, two-step, and multistep global kinetics for a wide variety of hydrocarbons. Global models, by definition, do not capture the details of hydrocarbon oxidation; they may, however, be useful for engineering approximations, if their limitations are recognized. The following single-step expression [6] is suggested for engineering approximations for the global reaction


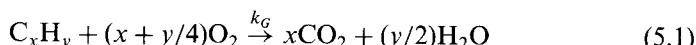


$$\frac{d[\text{C}_x\text{H}_y]}{dt} = -A \exp(-E_a/R_u T) [\text{C}_x\text{H}_y]^m [\text{O}_2]^n \quad (5.2)$$

[=] gmol/cm<sup>3</sup>-s,

where the parameters  $A$ ,  $E_a/R_u$ ,  $m$ , and  $n$ , shown in Table 5.1, have been chosen to provide best agreement between experimental and predicted flame speeds and flammability limits (see Chapter 8).

An example of a multistep, quasi-global mechanism is that of Hautman *et al.* [7], modeling propane oxidation using a four-step scheme:

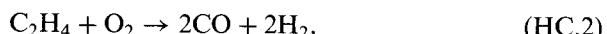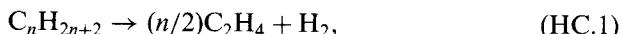

where the reaction rates (in gmol/cm<sup>3</sup>-s) are expressed as

$$\frac{d[\text{C}_n\text{H}_{2n+2}]}{dt} = -10^x \exp(-E_A/R_u T) [\text{C}_n\text{H}_{2n+2}]^a [\text{O}_2]^b [\text{C}_2\text{H}_4]^c, \quad (5.3)$$

$$\frac{d[\text{C}_2\text{H}_4]}{dt} = -10^x \exp(-E_A/R_u T) [\text{C}_2\text{H}_4]^a [\text{O}_2]^b [\text{C}_n\text{H}_{2n+2}]^c, \quad (5.4)$$

$$\frac{d[\text{CO}]}{dt} = -10^x \exp(-E_A/R_u T) [\text{CO}]^a [\text{O}_2]^b [\text{H}_2\text{O}]^c 7.93 \exp(-2.48\Phi), \quad (5.5)$$

$$\frac{d[\text{H}_2]}{dt} = -10^x \exp(-E_A/R_u T) [\text{H}_2]^a [\text{O}_2]^b [\text{C}_2\text{H}_4]^c, \quad (5.6)$$

where  $\Phi$  is the equivalence ratio. The exponents  $x$ ,  $a$ ,  $b$ , and  $c$  for each reaction are given in Table 5.2.

Notice that in the mechanism it is assumed that ethylene ( $\text{C}_2\text{H}_4$ ) is the intermediate hydrocarbon; and that in the rate equations,  $\text{C}_3\text{H}_8$  and  $\text{C}_2\text{H}_4$  inhibit the oxidation of  $\text{C}_2\text{H}_4$  and  $\text{H}_2$ , respectively, since the  $\text{C}_3\text{H}_8$  and  $\text{C}_2\text{H}_4$  exponents are negative. Note also that the rate equations do not directly follow

**Table 5.1** Single-step reaction rate parameters for use with Eqn. 5.2 (Adapted from Ref. [6])

Fuel	Pre-exponential Factor, $A^a$	Activation Temperature, $E_a/R_u$ (K)	$m$	$n$
CH <sub>4</sub>	$1.3 \cdot 10^8$	24,358 <sup>b</sup>	-0.3	1.3
CH <sub>4</sub>	$8.3 \cdot 10^5$	15,098 <sup>c</sup>	-0.3	1.3
C <sub>2</sub> H <sub>6</sub>	$1.1 \cdot 10^{12}$	15,098	0.1	1.65
C <sub>3</sub> H <sub>8</sub>	$8.6 \cdot 10^{11}$	15,098	0.1	1.65
C <sub>4</sub> H <sub>10</sub>	$7.4 \cdot 10^{11}$	15,098	0.15	1.6
C <sub>5</sub> H <sub>12</sub>	$6.4 \cdot 10^{11}$	15,098	0.25	1.5
C <sub>6</sub> H <sub>14</sub>	$5.7 \cdot 10^{11}$	15,098	0.25	1.5
C <sub>7</sub> H <sub>16</sub>	$5.1 \cdot 10^{11}$	15,098	0.25	1.5
C <sub>8</sub> H <sub>18</sub>	$4.6 \cdot 10^{11}$	15,098	0.25	1.5
C <sub>8</sub> H <sub>18</sub>	$7.2 \cdot 10^{12}$	20,131 <sup>d</sup>	0.25	1.5
C <sub>9</sub> H <sub>20</sub>	$4.2 \cdot 10^{11}$	15,098	0.25	1.5
C <sub>10</sub> H <sub>22</sub>	$3.8 \cdot 10^{11}$	15,098	0.25	1.5
CH <sub>3</sub> OH	$3.2 \cdot 10^{12}$	15,098	0.25	1.5
C <sub>2</sub> H <sub>5</sub> OH	$1.5 \cdot 10^{12}$	15,098	0.15	1.6
C <sub>6</sub> H <sub>6</sub>	$2.0 \cdot 10^{11}$	15,098	-0.1	1.85
C <sub>7</sub> H <sub>8</sub>	$1.6 \cdot 10^{11}$	15,098	-0.1	1.85
C <sub>2</sub> H <sub>4</sub>	$2.0 \cdot 10^{12}$	15,098	0.1	1.65
C <sub>3</sub> H <sub>6</sub>	$4.2 \cdot 10^{11}$	15,098	-0.1	1.85
C <sub>2</sub> H <sub>2</sub>	$6.5 \cdot 10^{12}$	15,098	0.5	1.25

<sup>a</sup>Units of  $A$  are consistent with concentrations in Eqn. 5.2 expressed in units of gmol/cm<sup>3</sup>, i.e.,  $A[=]$  (gmol/cm<sup>3</sup>)<sup>1-m-n</sup>/s.

<sup>b</sup> $E_a = 48.4$  kcal/gmol.

<sup>c</sup> $E_a = 30$  kcal/gmol.

<sup>d</sup> $E_a = 40$  kcal/gmol.

**Table 5.2** Constants<sup>a</sup> for multistep global mechanism for C<sub>n</sub>H<sub>2n+2</sub> oxidation [7]

	Propane ( $n = 3$ )			
Rate eqn.	5.3	5.4	5.5	5.6
$x$	17.32	14.7	14.6	13.52
[ $E_A/R_u$ ] (K)	24,962	25,164	20,131	20,634
$a$	0.50	0.90	1.0	0.85
$b$	1.07	1.18	0.25	1.42
$c$	0.40	-0.37	0.50	-0.56

<sup>a</sup>Initial conditions:  $T$  (K): 960–1145; [C<sub>3</sub>H<sub>8</sub>]<sub>i</sub> (gmol/cm<sup>3</sup>):  $1 \cdot 10^{-8}$ – $1 \cdot 10^{-7}$ ; [O<sub>2</sub>]<sub>i</sub> (gmol/cm<sup>3</sup>):  $1 \cdot 10^{-7}$ – $5 \cdot 10^{-6}$ ;  $\Phi$ : 0.03–2.0.

from the global steps, since Eqns. 5.3–5.6 involve the product of three species, not just two, as suggested by the individual global steps HC.1–HC.4. More recent approaches to simplified hydrocarbon oxidation are discussed in Ref. [8].

---

## METHANE COMBUSTION

### Complex Mechanism

Because of its unique tetrahedral molecular structure with large C–H bond energies, methane exhibits some unique combustion characteristics. For example, it has a high ignition temperature, low flame speed, and is essentially unreactive in photochemical smog chemistry.

Methane chemical kinetics are perhaps the most widely researched and, hence, most well understood. Kaufman [9], in a review of combustion kinetics indicated that the methane combustion mechanism evolved in the period 1970–1982 from less than 15 elementary steps with 12 species to 75 elementary steps, plus the 75 reverse reactions, with 25 species. Recently, several research groups have collaborated in the creation of an optimized methane kinetic mechanism [10]. This mechanism, designated GRI Mech, is based on the optimization techniques of Frenklach *et al.* [11]. GRI Mech [10] is available on the Internet and is continually updated. Version 2.11 (1998), shown in Table 5.3, considers 277 elementary reactions involving 49 species. Many of these steps we have seen before as part of the H<sub>2</sub> and CO oxidation mechanisms.

To make some sense of this complex system (i.e., GRI Mech 2.11), we present reaction pathway analyses for both high-temperature and low-temperature combustion of CH<sub>4</sub> with air in a well-stirred reactor [12]. A detailed discussion of the well-stirred reactor is presented in Chapter 6; however, for our purposes here, we need only recognize that reactions take place in a homogeneous, isothermal environment. The choice of a well-stirred reactor eliminates the need to account for a spatial distribution of species as would be encountered in a flame, for example.

### High-Temperature Reaction Pathway Analysis

Major chemical pathways in the conversion of methane to carbon dioxide at a high temperature (2200 K) are illustrated in Fig. 5.4. Each arrow represents an elementary reaction, or set of reactions, with the primary reactant species at the tail and the primary product species at the head. Additional reactant species are shown along the length of the arrow, and the corresponding reaction number (cf. Table 5.3) is indicated. The width of the arrow gives a visual indication of the relative importance of a particular reaction path, while the parenthetical numerical values quantify the destruction rate of the reactant.

**Table 5.3** Complex methane combustion mechanism (GRI Mech 2.11) [10]

No.	Reaction	Forward Rate Coefficient <sup>a</sup>		
		A	b	E
<b>C–H–O Reactions</b>				
1	O + O + M → O <sub>2</sub> + M	1.20E + 17	-1.0	0.0
2	O + H + M → OH + M	5.00E + 17	-1.0	0.0
3	O + H <sub>2</sub> → H + OH	5.00E + 04	2.67	6,290
4	O + HO <sub>2</sub> → OH + O <sub>2</sub>	2.00E + 13	0.0	0.0
5	O + H <sub>2</sub> O <sub>2</sub> → OH + HO <sub>2</sub>	9.63E + 06	2.0	4.000
6	O + CH → H + CO	5.70E + 13	0.0	0.0
7	O + CH <sub>2</sub> → H + HCO	8.00E + 13	0.0	0.0
8 <sup>b</sup>	O + CH <sub>2</sub> (S) → H <sub>2</sub> + CO	1.50E + 13	0.0	0.0
9 <sup>b</sup>	O + CH <sub>2</sub> (S) → H + HCO	1.50E + 13	0.0	0.0
10	O + CH <sub>3</sub> → H + CH <sub>2</sub> O	8.43E + 13	0.0	0.0
11	O + CH <sub>4</sub> → OH + CH <sub>3</sub>	1.02E + 09	1.5	8,600
12	O + CO + M → CO <sub>2</sub> + M	6.02E + 14	0.0	3,000
13	O + HCO → OH + CO	3.00E + 13	0.0	0.0
14	O + HCO → H + CO <sub>2</sub>	3.00E + 13	0.0	0.0
15	O + CH <sub>2</sub> O → OH + HCO	3.90E + 13	0.0	3,540
16	O + CH <sub>2</sub> OH → OH + CH <sub>2</sub> O	1.00E + 13	0.0	0.0
17	O + CH <sub>3</sub> O → OH + CH <sub>2</sub> O	1.00E + 13	0.0	0.0
18	O + CH <sub>3</sub> OH → OH + CH <sub>2</sub> OH	3.88E + 05	2.5	3,100
19	O + CH <sub>3</sub> OH → OH + CH <sub>3</sub> O	1.30E + 05	2.5	5,000
20	O + C <sub>2</sub> H → CH + CO	5.00E + 13	0.0	0.0
21	O + C <sub>2</sub> H <sub>2</sub> → H + HCCO	1.02E + 07	2.0	1,900
22	O + C <sub>2</sub> H <sub>2</sub> → OH + C <sub>2</sub> H	4.60E + 19	-1.41	28,950
23	O + C <sub>2</sub> H <sub>2</sub> → CO + CH <sub>2</sub>	1.02E + 07	2.0	1,900
24	O + C <sub>2</sub> H <sub>3</sub> → H + CH <sub>2</sub> CO	3.00E + 13	0.0	0.0
25	O + C <sub>2</sub> H <sub>4</sub> → CH <sub>3</sub> + HCO	1.92E + 07	1.83	220
26	O + C <sub>2</sub> H <sub>5</sub> → CH <sub>3</sub> + CH <sub>2</sub> O	1.32E + 14	0.0	0.0
27	O + C <sub>2</sub> H <sub>6</sub> → OH + C <sub>2</sub> H <sub>5</sub>	8.98E + 07	1.92	5,690
28	O + HCCO → H + CO + CO	1.00E + 14	0.0	0.0
29	O + CH <sub>2</sub> CO → OH + HCCO	1.00E + 13	0.0	8,000
30	O + CH <sub>2</sub> CO → CH <sub>2</sub> + CO <sub>2</sub>	1.75E + 12	0.0	1,350
31	O <sub>2</sub> + CO → O + CO <sub>2</sub>	2.50E + 12	0.0	47,800
32	O <sub>2</sub> + CH <sub>2</sub> O → HO <sub>2</sub> + HCO	1.00E + 14	0.0	40,000
33	H + O <sub>2</sub> + M → HO <sub>2</sub> + M	2.80E + 18	-0.86	0.0
34	H + O <sub>2</sub> + O <sub>2</sub> → HO <sub>2</sub> + O <sub>2</sub>	3.00E + 20	-1.72	0.0
35	H + O <sub>2</sub> + H <sub>2</sub> O → HO <sub>2</sub> + H <sub>2</sub> O	9.38E + 18	-0.76	0.0
36	H + O <sub>2</sub> + N <sub>2</sub> → HO <sub>2</sub> + N <sub>2</sub>	3.75E + 20	-1.72	0.0
37	H + O <sub>2</sub> + Ar → HO <sub>2</sub> + Ar	7.00E + 17	-0.8	0.0
38	H + O <sub>2</sub> → O + OH	8.30E + 13	0.0	14,413
39	H + H + M → H <sub>2</sub> + M	1.00E + 18	-1.0	0.0
40	H + H + H <sub>2</sub> → H <sub>2</sub> + H <sub>2</sub>	9.00E + 16	-0.6	0.0
41	H + H + H <sub>2</sub> O → H <sub>2</sub> + H <sub>2</sub> O	6.00E + 19	-1.25	0.0
42	H + H + CO <sub>2</sub> → H <sub>2</sub> + CO <sub>2</sub>	5.50E + 20	-2.0	0.0
43	H + OH + M → H <sub>2</sub> O + M	2.20E + 22	-2.0	0.0
44	H + HO <sub>2</sub> → O + H <sub>2</sub> O	3.97E + 12	0.0	671
45	H + HO <sub>2</sub> → O <sub>2</sub> + H <sub>2</sub>	2.80E + 13	0.0	1,068
46	H + HO <sub>2</sub> → OH + OH	1.34E + 14	0.0	635

**Table 5.3** (continued)

No.	Reaction	Forward Rate Coefficient <sup>a</sup>		
		A	b	E
<b>C–H–O Reactions (continued)</b>				
47	H + H <sub>2</sub> O <sub>2</sub> → HO <sub>2</sub> + H <sub>2</sub>	1.21E + 07	2.0	5,200
48	H + H <sub>2</sub> O <sub>2</sub> → OH + H <sub>2</sub> O	1.00E + 13	0.0	3,600
49	H + CH → C + H <sub>2</sub>	1.10E + 14	0.0	0.0
50	H + CH <sub>2</sub> (+ M) → CH <sub>3</sub> (+ M)		pressure dependent	
51 <sup>b</sup>	H + CH <sub>2</sub> (S) → CH + H <sub>2</sub>	3.00E + 13	0.0	0.0
52	H + CH <sub>3</sub> (+ M) → CH <sub>4</sub> (+ M)		pressure dependent	
53	H + CH <sub>4</sub> → CH <sub>3</sub> + H <sub>2</sub>	6.60E + 08	1.62	10,840
54	H + HCO (+ M) → CH <sub>2</sub> O (+ M)		pressure dependent	
55	H + HCO → H <sub>2</sub> + CO	7.34E + 13	0.0	0.0
56	H + CH <sub>2</sub> O (+ M) → CH <sub>2</sub> OH (+ M)		pressure dependent	
57	H + CH <sub>2</sub> O (+ M) → CH <sub>3</sub> O (+ M)		pressure dependent	
58	H + CH <sub>2</sub> O → HCO + H <sub>2</sub>	2.30E + 10	1.05	3,275
59	H + CH <sub>2</sub> OH (+ M) → CH <sub>3</sub> OH (+ M)		pressure dependent	
60	H + CH <sub>2</sub> OH → H <sub>2</sub> + CH <sub>2</sub> O	2.00E + 13	0.0	0.0
61	H + CH <sub>2</sub> OH → OH + CH <sub>3</sub>	1.20E + 13	0.0	0.0
62 <sup>b</sup>	H + CH <sub>2</sub> OH → CH <sub>2</sub> (S) + H <sub>2</sub> O	6.00E + 12	0.0	0.0
63	H + CH <sub>3</sub> O (+ M) → CH <sub>3</sub> OH (+ M)		pressure dependent	
64 <sup>b</sup>	H + CH <sub>2</sub> OH → CH <sub>2</sub> (S) + H <sub>2</sub> O	3.40E + 06	1.6	0.0
65	H + CH <sub>3</sub> O → H <sub>2</sub> + CH <sub>2</sub> O	2.00E + 13	0.0	0.0
66	H + CH <sub>3</sub> O → OH + CH <sub>3</sub>	3.20E + 13	0.0	0.0
67 <sup>b</sup>	H + CH <sub>3</sub> O → CH <sub>2</sub> (S) + H <sub>2</sub> O	1.60E + 13	0.0	0.0
68	H + CH <sub>3</sub> OH → CH <sub>2</sub> OH + H <sub>2</sub>	1.70E + 07	2.1	4,870
69	H + CH <sub>3</sub> OH → CH <sub>3</sub> O + H <sub>2</sub>	4.20E + 06	2.1	4,870
70	H + C <sub>2</sub> H (+ M) → C <sub>2</sub> H <sub>2</sub> (+ M)		pressure dependent	
71	H + C <sub>2</sub> H <sub>2</sub> (+ M) → C <sub>2</sub> H <sub>3</sub> (+ M)		pressure dependent	
72	H + C <sub>2</sub> H <sub>3</sub> (+ M) → C <sub>2</sub> H <sub>4</sub> (+ M)		pressure dependent	
73	H + C <sub>2</sub> H <sub>3</sub> → H <sub>2</sub> + C <sub>2</sub> H <sub>2</sub>	3.00E + 13	0.0	0.0
74	H + C <sub>2</sub> H <sub>4</sub> (+ M) → C <sub>2</sub> H <sub>5</sub> (+ M)		pressure dependent	
75	H + C <sub>2</sub> H <sub>4</sub> → C <sub>2</sub> H <sub>3</sub> + H <sub>2</sub>	1.325E + 06	2.53	12,240
76	H + C <sub>2</sub> H <sub>5</sub> (+ M) → C <sub>2</sub> H <sub>6</sub> (+ M)		pressure dependent	
77	H + C <sub>2</sub> H <sub>5</sub> → C <sub>2</sub> H <sub>4</sub> + H <sub>2</sub>	2.00E + 12	0.0	0.0
78	H + C <sub>2</sub> H <sub>6</sub> → C <sub>2</sub> H <sub>5</sub> + H <sub>2</sub>	1.15E + 08	1.9	7,530
79 <sup>b</sup>	H + HCCO → CH <sub>2</sub> (S) + CO	1.00E + 14	0.0	0.0
80	H + CH <sub>2</sub> CO → HCCO + H <sub>2</sub>	5.00E + 13	0.0	8,000
81	H + CH <sub>2</sub> CO → CH <sub>3</sub> + CO	1.13E + 13	0.0	3,428
82	H + HCCOH → H + CH <sub>2</sub> CO	1.00E + 13	0.0	0.0
83	H <sub>2</sub> + CO (+ M) → CH <sub>2</sub> O (+ M)		pressure dependent	
84	OH + H <sub>2</sub> → H + H <sub>2</sub> O	2.16E + 08	1.51	3,430
85	OH + OH (+ M) → H <sub>2</sub> O <sub>2</sub> (+ M)		pressure dependent	
86	OH + OH → O + H <sub>2</sub> O	3.57E + 04	2.4	-2110
87	OH + HO <sub>2</sub> → O <sub>2</sub> + H <sub>2</sub> O	2.90E + 13	0.0	-500
88	OH + H <sub>2</sub> O <sub>2</sub> → HO <sub>2</sub> + H <sub>2</sub> O	1.75E + 12	0.0	320
89	OH + H <sub>2</sub> O <sub>2</sub> → HO <sub>2</sub> + H <sub>2</sub> O	5.80E + 14	0.0	9,560
90	OH + C → H + CO	5.00E + 13	0.0	0.0
91	OH + CH → H + HCO	3.00E + 13	0.0	0.0
92	OH + CH <sub>2</sub> → H + CH <sub>2</sub> O	2.00E + 13	0.0	0.0

**Table 5.3** (continued)

No.	Reaction	Forward Rate Coefficient <sup>a</sup>		
		A	b	E
<b>C-H-O Reactions (continued)</b>				
93	OH + CH <sub>2</sub> → CH + H <sub>2</sub> O	1.13E + 07	2.0	3,000
94 <sup>b</sup>	OH + CH <sub>2</sub> (S) → H + CH <sub>2</sub> O	3.00E + 13	0.0	0.0
95	OH + CH <sub>3</sub> (+ M) → CH <sub>3</sub> OH (+ M)		pressure dependent	
96	OH + CH <sub>3</sub> → CH <sub>2</sub> + H <sub>2</sub> O	5.60E + 07	1.6	5,420
97 <sup>b</sup>	OH + CH <sub>3</sub> → CH <sub>2</sub> (S) + H <sub>2</sub> O	2.50E + 13	0.0	0.0
98	OH + CH <sub>4</sub> → CH <sub>3</sub> + H <sub>2</sub> O	1.00E + 08	1.6	3,120
99	OH + CO → H + CO <sub>2</sub>	4.76E + 07	1.23	70
100	OH + HCO → H <sub>2</sub> O + CO	5.00E + 13	0.0	0.0
101	OH + CH <sub>2</sub> O → HCO + H <sub>2</sub> O	3.43E + 09	1.18	-447
102	OH + CH <sub>2</sub> OH → H <sub>2</sub> O + CH <sub>2</sub> O	5.00E + 12	0.0	0.0
103	OH + CH <sub>3</sub> O → H <sub>2</sub> O + CH <sub>2</sub> O	5.00E + 12	0.0	0.0
104	OH + CH <sub>3</sub> OH → CH <sub>2</sub> OH + H <sub>2</sub> O	1.44E + 06	2.0	-840
105	OH + CH <sub>3</sub> OH → CH <sub>3</sub> O + H <sub>2</sub> O	6.30E + 06	2.0	1,500
106	OH + C <sub>2</sub> H → H + HCCO	2.00E + 13	0.0	0.0
107	OH + C <sub>2</sub> H <sub>2</sub> → H + CH <sub>2</sub> CO	2.18E - 04	4.5	-1,000
108	OH + C <sub>2</sub> H <sub>2</sub> → H + HCCOH	5.04E + 05	2.3	13,500
109	OH + C <sub>2</sub> H <sub>2</sub> → C <sub>2</sub> H + H <sub>2</sub> O	3.37E + 07	2.0	14,000
110	OH + C <sub>2</sub> H <sub>2</sub> → CH <sub>3</sub> + CO	4.83E - 04	4.0	-2,000
111	OH + C <sub>2</sub> H <sub>3</sub> → H <sub>2</sub> O + C <sub>2</sub> H <sub>2</sub>	5.00E + 12	0.0	0.0
112	OH + C <sub>2</sub> H <sub>4</sub> → C <sub>2</sub> H <sub>3</sub> + H <sub>2</sub> O	3.60E + 06	2.0	2,500
113	OH + C <sub>2</sub> H <sub>6</sub> → C <sub>2</sub> H <sub>5</sub> + H <sub>2</sub> O	3.54E + 06	2.12	870
114	OH + CH <sub>2</sub> CO → HCCO + H <sub>2</sub> O	7.50E + 12	0.0	2,000
115	HO <sub>2</sub> + HO <sub>2</sub> → O <sub>2</sub> + H <sub>2</sub> O <sub>2</sub>	1.30E + 11	0.0	-1,630
116	HO <sub>2</sub> + HO <sub>2</sub> → O <sub>2</sub> + H <sub>2</sub> O <sub>2</sub>	4.20E + 14	0.0	12,000
117	HO <sub>2</sub> + CH <sub>2</sub> → OH + CH <sub>2</sub> O	2.00E + 13	0.0	0.0
118	HO <sub>2</sub> + CH <sub>3</sub> → O <sub>2</sub> + CH <sub>4</sub>	1.00E + 12	0.0	0.0
119	HO <sub>2</sub> + CH <sub>3</sub> → OH + CH <sub>3</sub> O	2.00E + 13	0.0	0.0
120	HO <sub>2</sub> + CO → OH + CO <sub>2</sub>	1.50E + 14	0.0	23,600
121	HO <sub>2</sub> + CH <sub>2</sub> O → HCO + H <sub>2</sub> O <sub>2</sub>	1.00E + 12	0.0	8,000
122	C + O <sub>2</sub> → O + CO	5.80E + 13	0.0	576
123	C + CH <sub>2</sub> → H + C <sub>2</sub> H	5.00E + 13	0.0	0.0
124	C + CH <sub>3</sub> → H + C <sub>2</sub> H <sub>2</sub>	5.00E + 13	0.0	0.0
125	CH + O <sub>2</sub> → O + HCO	3.30E + 13	0.0	0.0
126	CH + H <sub>2</sub> → H + CH <sub>2</sub>	1.11E + 08	1.79	1,670
127	CH + H <sub>2</sub> O → H + CH <sub>2</sub> O	1.71E + 13	0.0	-755
128	CH + CH <sub>2</sub> → H + C <sub>2</sub> H <sub>2</sub>	4.00E + 13	0.0	0.0
129	CH + CH <sub>3</sub> → H + C <sub>2</sub> H <sub>3</sub>	3.00E + 13	0.0	0.0
130	CH + CH <sub>4</sub> → H + C <sub>2</sub> H <sub>4</sub>	6.00E + 13	0.0	0.0
131	CH + CO (+ M) → HCCO (+ M)		pressure dependent	
132	CH + CO <sub>2</sub> → HCO + CO	3.40E + 12	0.0	690
133	CH + CH <sub>2</sub> O → H + CH <sub>2</sub> CO	9.46E + 13	0.0	-515
134	CH + HCCO → CO + C <sub>2</sub> H <sub>2</sub>	5.00E + 13	0.0	0.0
135	CH <sub>2</sub> + O <sub>2</sub> → OH + HCO	1.32E + 13	0.0	1,500
136	CH <sub>2</sub> + H <sub>2</sub> → H + CH <sub>3</sub>	5.00E + 05	2.0	7,230
137	CH <sub>2</sub> + CH <sub>2</sub> → H <sub>2</sub> + C <sub>2</sub> H <sub>2</sub>	3.20E + 13	0.0	0.0

**Table 5.3** (continued)

No.	Reaction	Forward Rate Coefficient <sup>a</sup>		
		A	b	E
<b>C–H–O Reactions (continued)</b>				
138	$\text{CH}_2 + \text{CH}_3 \rightarrow \text{H} + \text{C}_2\text{H}_4$	4.00E + 13	0.0	0.0
139	$\text{CH}_2 + \text{CH}_4 \rightarrow \text{CH}_3 + \text{CH}_3$	2.46E + 06	2.0	8,270
140	$\text{CH}_2 + \text{CO} (+ \text{M}) \rightarrow \text{CH}_2\text{CO} (+ \text{M})$		pressure dependent	
141	$\text{CH}_2 + \text{HCCO} \rightarrow \text{C}_2\text{H}_3 + \text{CO}$	3.00E + 13	0.0	0.0
142 <sup>b</sup>	$\text{CH}_2(\text{S}) + \text{N}_2 \rightarrow \text{CH}_2 + \text{N}_2$	1.50E + 13	0.0	600
143 <sup>b</sup>	$\text{CH}_2(\text{S}) + \text{Ar} \rightarrow \text{CH}_2 + \text{Ar}$	9.00E + 12	0.0	600
144 <sup>b</sup>	$\text{CH}_2(\text{S}) + \text{O}_2 \rightarrow \text{H} + \text{OH} + \text{CO}$	2.80E + 13	0.0	0.0
145 <sup>b</sup>	$\text{CH}_2(\text{S}) + \text{O}_2 \rightarrow \text{CO} + \text{H}_2\text{O}$	1.20E + 13	0.0	0.0
146 <sup>b</sup>	$\text{CH}_2(\text{S}) + \text{H}_2 \rightarrow \text{CH}_3 + \text{H}$	7.00E + 13	0.0	0.0
147 <sup>b</sup>	$\text{CH}_2(\text{S}) + \text{H}_2\text{O} (+ \text{M}) \rightarrow \text{CH}_3\text{OH} (+ \text{M})$		pressure dependent	
148 <sup>b</sup>	$\text{CH}_2(\text{S}) + \text{H}_2\text{O} \rightarrow \text{CH}_2 + \text{H}_2\text{O}$	3.00E + 13	0.0	0.0
149 <sup>b</sup>	$\text{CH}_2(\text{S}) + \text{CH}_3 \rightarrow \text{H} + \text{C}_2\text{H}_4$	1.20E + 13	0.0	-570
150 <sup>b</sup>	$\text{CH}_2(\text{S}) + \text{CH}_4 \rightarrow \text{CH}_3 + \text{CH}_3$	1.60E + 13	0.0	-570
151 <sup>b</sup>	$\text{CH}_2(\text{S}) + \text{CO} \rightarrow \text{CH}_2 + \text{CO}$	9.00E + 12	0.0	0.0
152 <sup>b</sup>	$\text{CH}_2(\text{S}) + \text{CO}_2 \rightarrow \text{CH}_2 + \text{CO}_2$	7.00E + 12	0.0	0.0
153 <sup>b</sup>	$\text{CH}_2(\text{S}) + \text{CO}_2 \rightarrow \text{CO} + \text{CH}_2\text{O}$	1.40E + 13	0.0	0.0
154 <sup>b</sup>	$\text{CH}_2(\text{S}) + \text{C}_2\text{H}_6 \rightarrow \text{CH}_3 + \text{C}_2\text{H}_5$	4.00E + 13	0.0	-550
155	$\text{CH}_3 + \text{O}_2 \rightarrow \text{O} + \text{CH}_3\text{O}$	2.68E + 13	0.0	28,800
156	$\text{CH}_3 + \text{O}_2 \rightarrow \text{OH} + \text{CH}_2\text{O}$	3.60E + 10	0.0	8,940
157	$\text{CH}_3 + \text{H}_2\text{O}_2 \rightarrow \text{HO}_2 + \text{CH}_4$	2.45E + 04	2.47	5,180
158	$\text{CH}_3 + \text{CH}_3 (+ \text{M}) \rightarrow \text{C}_2\text{H}_6 (+ \text{M})$		pressure dependent	
159	$\text{CH}_3 + \text{CH}_3 \rightarrow \text{H} + \text{C}_2\text{H}_5$	4.99E + 12	0.1	10,600
160	$\text{CH}_3 + \text{HCO} \rightarrow \text{CH}_4 + \text{CO}$	2.65E + 13	0.0	0.0
161	$\text{CH}_3 + \text{CH}_2\text{O} \rightarrow \text{HCO} + \text{CH}_4$	3.32E + 03	2.81	5,860
162	$\text{CH}_3 + \text{CH}_3\text{OH} \rightarrow \text{CH}_2\text{OH} + \text{CH}_4$	3.00E + 07	1.5	9,940
163	$\text{CH}_3 + \text{CH}_3\text{OH} \rightarrow \text{CH}_3\text{O} + \text{CH}_4$	1.00E + 07	1.5	9,940
164	$\text{CH}_3 + \text{C}_2\text{H}_4 \rightarrow \text{C}_2\text{H}_3 + \text{CH}_4$	2.27E + 05	2.0	9,200
165	$\text{CH}_3 + \text{C}_2\text{H}_6 \rightarrow \text{C}_2\text{H}_5 + \text{CH}_4$	6.14E + 06	1.74	10,450
166	$\text{HCO} + \text{H}_2\text{O} \rightarrow \text{H} + \text{CO} + \text{H}_2\text{O}$	2.24E + 18	-1.0	17,000
167	$\text{HCO} + \text{M} \rightarrow \text{H} + \text{CO} + \text{M}$	1.87E + 17	-1.0	17,000
168	$\text{HCO} + \text{O}_2 \rightarrow \text{HO}_2 + \text{CO}$	7.60E + 12	0.0	400
169	$\text{CH}_2\text{OH} + \text{O}_2 \rightarrow \text{HO}_2 + \text{CH}_2\text{O}$	1.80E + 13	0.0	900
170	$\text{CH}_3\text{O} + \text{O}_2 \rightarrow \text{HO}_2 + \text{CH}_2\text{O}$	4.28E - 13	7.6	-3,530
171	$\text{C}_2\text{H} + \text{O}_2 \rightarrow \text{HCO} + \text{CO}$	5.00E + 13	0.0	1,500
172	$\text{C}_2\text{H} + \text{H}_2 \rightarrow \text{H} + \text{C}_2\text{H}_2$	4.07E + 05	2.4	200
173	$\text{C}_2\text{H}_3 + \text{O}_2 \rightarrow \text{HCO} + \text{CH}_2\text{O}$	3.98E + 12	0.0	-240
174	$\text{C}_2\text{H}_4 (+ \text{M}) \rightarrow \text{H}_2 + \text{C}_2\text{H}_2 (+ \text{M})$		pressure dependent	
175	$\text{C}_2\text{H}_5 + \text{O}_2 \rightarrow \text{HO}_2 + \text{C}_2\text{H}_4$	8.40E + 11	0.0	3,875
176	$\text{HCCO} + \text{O}_2 \rightarrow \text{OH} + \text{CO} + \text{CO}$	1.60E + 12	0.0	854
177	$\text{HCCO} + \text{HCCO} \rightarrow \text{CO} + \text{CO} + \text{C}_2\text{H}_2$	1.00E + 13	0.0	0.0

**Table 5.3** (continued)

No.	Reaction	Forward Rate Coefficient <sup>a</sup>		
		A	b	E
<i>N-Containing Reactions</i>				
178	$\text{N} + \text{NO} \rightarrow \text{N}_2 + \text{O}$	3.50E + 13	0.0	330
179	$\text{N} + \text{O}_2 \rightarrow \text{NO} + \text{O}$	2.65E + 12	0.0	6,400
180	$\text{N} + \text{OH} \rightarrow \text{NO} + \text{H}$	7.33E + 13	0.0	1,120
181	$\text{N}_2\text{O} + \text{O} \rightarrow \text{N}_2 + \text{O}_2$	1.40E + 12	0.0	10,810
182	$\text{N}_2\text{O} + \text{O} \rightarrow \text{NO} + \text{NO}$	2.90E + 13	0.0	23,150
183	$\text{N}_2\text{O} + \text{H} \rightarrow \text{N}_2 + \text{OH}$	4.40E + 14	0.0	18,880
184	$\text{N}_2\text{O} + \text{OH} \rightarrow \text{N}_2 + \text{HO}_2$	2.00E + 12	0.0	21,060
185	$\text{N}_2\text{O} (+\text{M}) \rightarrow \text{N}_2 + \text{O} (+\text{M})$	pressure dependent		
186	$\text{HO}_2 + \text{NO} \rightarrow \text{NO}_2 + \text{OH}$	2.11E + 12	0.0	-480
187	$\text{NO} + \text{O} + \text{M} \rightarrow \text{NO}_2 + \text{M}$	1.06E + 20	-1.41	0.0
188	$\text{NO}_2 + \text{O} \rightarrow \text{NO} + \text{O}_2$	3.90E + 12	0.0	-240
189	$\text{NO}_2 + \text{H} \rightarrow \text{NO} + \text{OH}$	1.32E + 14	0.0	360
190	$\text{NH} + \text{O} \rightarrow \text{NO} + \text{H}$	5.00E + 13	0.0	0.0
191	$\text{NH} + \text{H} \rightarrow \text{N} + \text{H}_2$	3.20E + 13	0.0	330
192	$\text{NH} + \text{OH} \rightarrow \text{HNO} + \text{H}$	2.00E + 13	0.0	0.0
193	$\text{NH} + \text{OH} \rightarrow \text{N} + \text{H}_2\text{O}$	2.00E + 09	1.2	0.0
194	$\text{NH} + \text{O}_2 \rightarrow \text{HNO} + \text{O}$	4.61E + 05	2.0	6,500
195	$\text{NH} + \text{O}_2 \rightarrow \text{NO} + \text{OH}$	1.28E + 06	1.5	100
196	$\text{NH} + \text{N} \rightarrow \text{N}_2 + \text{H}$	1.50E + 13	0.0	0.0
197	$\text{NH} + \text{H}_2\text{O} \rightarrow \text{HNO} + \text{H}_2$	2.00E + 13	0.0	13,850
198	$\text{NH} + \text{NO} \rightarrow \text{N}_2 + \text{OH}$	2.16E + 13	-0.23	0.0
199	$\text{NH} + \text{NO} \rightarrow \text{N}_2\text{O} + \text{H}$	4.16E + 14	-0.45	0.0
200	$\text{NH}_2 + \text{O} \rightarrow \text{OH} + \text{NH}$	7.00E + 12	0.0	0.0
201	$\text{NH}_2 + \text{O} \rightarrow \text{H} + \text{HNO}$	4.60E + 13	0.0	0.0
202	$\text{NH}_2 + \text{H} \rightarrow \text{NH} + \text{H}_2$	4.00E + 13	0.0	3,650
203	$\text{NH}_2 + \text{OH} \rightarrow \text{NH} + \text{H}_2\text{O}$	9.00E + 07	1.5	-460
204	$\text{NNH} \rightarrow \text{N}_2 + \text{H}$	3.30E + 08	0.0	0.0
205	$\text{NNH} + \text{M} \rightarrow \text{N}_2 + \text{H} + \text{M}$	1.30E + 14	-0.11	4,980
206	$\text{NNH} + \text{O}_2 \rightarrow \text{HO}_2 + \text{N}_2$	5.00E + 12	0.0	0.0
207	$\text{NNH} + \text{O} \rightarrow \text{OH} + \text{N}_2$	2.50E + 13	0.0	0.0
208	$\text{NNH} + \text{O} \rightarrow \text{NH} + \text{NO}$	7.00E + 13	0.0	0.0
209	$\text{NNH} + \text{H} \rightarrow \text{H}_2 + \text{N}_2$	5.00E + 13	0.0	0.0
210	$\text{NNH} + \text{OH} \rightarrow \text{H}_2\text{O} + \text{N}_2$	2.00E + 13	0.0	0.0
211	$\text{NNH} + \text{CH}_3 \rightarrow \text{CH}_4 + \text{N}_2$	2.50E + 13	0.0	0.0
212	$\text{H} + \text{NO} + \text{M} \rightarrow \text{HNO} + \text{M}$	8.95E + 19	-1.32	740
213	$\text{HNO} + \text{O} \rightarrow \text{NO} + \text{OH}$	2.50E + 13	0.0	0.0
214	$\text{HNO} + \text{H} \rightarrow \text{H}_2 + \text{NO}$	4.50E + 11	0.72	660
215	$\text{HNO} + \text{OH} \rightarrow \text{NO} + \text{H}_2\text{O}$	1.30E + 07	1.9	-950
216	$\text{HNO} + \text{O}_2 \rightarrow \text{HO}_2 + \text{NO}$	1.00E + 13	0.0	13,000
217	$\text{CN} + \text{O} \rightarrow \text{CO} + \text{N}$	7.70E + 13	0.0	0.0
218	$\text{CN} + \text{OH} \rightarrow \text{NCO} + \text{H}$	4.00E + 13	0.0	0.0
219	$\text{CN} + \text{H}_2\text{O} \rightarrow \text{HCN} + \text{OH}$	8.00E + 12	0.0	7,460

**Table 5.3** (continued)

No.	Reaction	Forward Rate Coefficient <sup>a</sup>		
		A	b	E
<i>N-Containing Reactions (continued)</i>				
220	CN + O <sub>2</sub> → NCO + O	6.14E + 12	0.0	-440
221	CN + H <sub>2</sub> → HCN + H	2.10E + 13	0.0	4,710
222	NCO + O → NO + CO	2.35E + 13	0.0	0.0
223	NCO + H → NH + CO	5.40E + 13	0.0	0.0
224	NCO + OH → NO + H + CO	2.50E + 12	0.0	0.0
225	NCO + N → N <sub>2</sub> + CO	2.00E + 13	0.0	0.0
226	NCO + O <sub>2</sub> → NO + CO <sub>2</sub>	2.00E + 12	0.0	20,000
227	NCO + M → N + CO + M	8.80E + 16	-0.5	48,000
228	NCO + NO → N <sub>2</sub> O + CO	2.85E + 17	-1.52	740
229	NCO + NO → N <sub>2</sub> + CO <sub>2</sub>	5.70E + 18	-2.0	800
230	HCN + M → H + CN + M	1.04E + 29	-3.3	126,600
231	HCN + O → NCO + H	1.11E + 04	2.64	4,980
232	HCN + O → NH + CO	2.77E + 03	2.64	4,980
233	HCN + O → CN + OH	2.13E + 09	1.58	26,600
234	HCN + OH → HOCN + H	1.10E + 06	2.03	13,370
235	HCN + OH → HNCO + H	4.40E + 03	2.26	6,400
236	HCN + OH → NH <sub>2</sub> + CO	1.60E + 02	2.56	9,000
237	H + HCN + M → H <sub>2</sub> CN + M	1.40E + 26	-3.4	1,900
238	H <sub>2</sub> CN + N → N <sub>2</sub> + CH <sub>2</sub>	6.00E + 13	0.0	400
239	C + N <sub>2</sub> → CN + N	6.30E + 13	0.0	46,020
240	CH + N <sub>2</sub> → HCN + N	2.86E + 08	1.1	20,400
241	CH + N <sub>2</sub> (+M) → HCNN (+M)	pressure dependent		
242	CH <sub>2</sub> + N <sub>2</sub> → HCN + NH	1.00E + 13	0.0	74,000
243 <sup>b</sup>	CH <sub>2</sub> (S) + N <sub>2</sub> → NH + HCN	1.00E + 11	0.0	65,000
244	C + NO → CN + O	1.90E + 13	0.0	0.0
245	C + NO → CO + N	2.90E + 13	0.0	0.0
246	CH + NO → HCN + O	5.00E + 13	0.0	0.0
247	CH + NO → H + NCO	2.00E + 13	0.0	0.0
248	CH + NO → N + HCO	3.00E + 13	0.0	0.0
249	CH <sub>2</sub> + NO → H + HNCO	3.10E + 17	-1.38	1,270
250	CH <sub>2</sub> + NO → OH + HCN	2.90E + 14	-0.69	760
251	CH <sub>2</sub> + NO → H + HCNO	3.80E + 13	-0.36	580
252 <sup>b</sup>	CH <sub>2</sub> (S) + NO → H + HNCO	3.10E + 17	-1.38	1,270
253 <sup>b</sup>	CH <sub>2</sub> (S) + NO → OH + HCN	2.90E + 14	-0.69	760
254 <sup>b</sup>	CH <sub>2</sub> (S) + NO → H + HCNO	3.80E + 13	-0.36	580
255	CH <sub>3</sub> + NO → HCN + H <sub>2</sub> O	9.60E + 13	0.0	28,800
256	CH <sub>3</sub> + NO → H <sub>2</sub> CN + OH	1.00E + 12	0.0	21,750
257	HCNN + O → CO + H + N <sub>2</sub>	2.20E + 13	0.0	0.0
258	HCNN + O → HCN + NO	2.00E + 12	0.0	0.0
259	HCNN + O <sub>2</sub> → O + HCO + N <sub>2</sub>	1.20E + 13	0.0	0.0
260	HCNN + OH → H + HCO + N <sub>2</sub>	1.20E + 13	0.0	0.0
261	HCNN + H → CH <sub>2</sub> + N <sub>2</sub>	1.00E + 14	0.0	0.0
262	HNCO + O → NH + CO <sub>2</sub>	9.80E + 07	1.41	8,500

**Table 5.3** (continued)


No.	Reaction	Forward Rate Coefficient <sup>a</sup>		
		A	b	E
<i>N-Containing Reactions (continued)</i>				
263	$\text{HNCO} + \text{O} \rightarrow \text{HNO} + \text{CO}$	1.50E + 08	1.57	44,000
264	$\text{HNCO} + \text{O} \rightarrow \text{NCO} + \text{OH}$	2.20E + 06	2.11	11,400
265	$\text{HNCO} + \text{H} \rightarrow \text{NH}_2 + \text{CO}$	2.25E + 07	1.7	3,800
266	$\text{HNCO} + \text{H} \rightarrow \text{H}_2 + \text{NCO}$	1.05E + 05	2.5	13,300
267	$\text{HNCO} + \text{OH} \rightarrow \text{NCO} + \text{H}_2\text{O}$	4.65E + 12	0.0	6,850
268	$\text{HNCO} + \text{OH} \rightarrow \text{NH}_2 + \text{CO}_2$	1.55E + 12	0.0	6,850
269	$\text{HNCO} + \text{M} \rightarrow \text{NH} + \text{CO} + \text{M}$	1.18E + 16	0.0	84,720
270	$\text{HCNO} + \text{H} \rightarrow \text{H} + \text{HNCO}$	2.10E + 15	-0.69	2,850
271	$\text{HCNO} + \text{H} \rightarrow \text{OH} + \text{HCN}$	2.70E + 11	0.18	2,120
272	$\text{HCNO} + \text{H} \rightarrow \text{NH}_2 + \text{CO}$	1.70E + 14	-0.75	2,890
273	$\text{HO CN} + \text{H} \rightarrow \text{H} + \text{HNCO}$	2.00E + 07	2.0	2,000
274	$\text{HCCO} + \text{NO} \rightarrow \text{HCNO} + \text{CO}$	2.35E + 13	0.0	0.0
275	$\text{CH}_3 + \text{N} \rightarrow \text{H}_2\text{CN} + \text{H}$	6.10E + 14	-0.31	290
276	$\text{CH}_3 + \text{N} \rightarrow \text{HCN} + \text{H}_2$	3.70E + 12	0.15	-90
277	$\text{NH}_3 + \text{H} \rightarrow \text{NH}_2 + \text{H}_2$	5.40E + 05	2.4	9,915
278	$\text{NH}_3 + \text{OH} \rightarrow \text{NH}_2 + \text{H}_2\text{O}$	5.00E + 07	1.6	955
279	$\text{NH}_3 + \text{O} \rightarrow \text{NH}_2 + \text{OH}$	9.40E + 06	1.94	6,460

<sup>a</sup>The forward rate coefficient  $k = AT^b \exp(-E/RT)$ . R is the universal gas constant, T is the temperature in K. The units of A involve gmol/cm<sup>3</sup> and s, and those of E, cal/gmol.

<sup>b</sup> $\text{CH}_2(\text{S})$  designates the singlet state of  $\text{CH}_2$ .

From Fig. 5.4, we see a linear progression of  $\text{CH}_4$  to  $\text{CO}_2$ , together with several side loops originating from the methyl ( $\text{CH}_3$ ) radical. The linear progression, or backbone, starts with an attack on the  $\text{CH}_4$  molecule by OH, O, and H radicals to produce the methyl radical; the methyl radical then combines with an oxygen atom to form formaldehyde ( $\text{CH}_2\text{O}$ ); the formaldehyde, in turn, is attacked by OH, H, and O radicals to produce the formyl radical ( $\text{HCO}$ ); the formyl radical is converted to CO by a trio of reactions; and, finally, CO is converted to  $\text{CO}_2$ , primarily by reaction with OH, as discussed earlier. Molecular structure diagrams illuminate the elegance of this sequence of elementary reactions to explain, in part, the oxidation of methane. Drawing such is left as an exercise for the reader.


In addition to the direct pathway from the methyl radical to formaldehyde ( $\text{CH}_3 + \text{O} \rightarrow \text{CH}_2\text{O} + \text{H}$ ), the  $\text{CH}_2$  radicals also react to form  $\text{CH}_2$  radicals in two possible electronic configurations. The singlet electronic state of  $\text{CH}_2$  is designated  $\text{CH}_2(\text{S})$  and should not be confused with similar notation used to indicate a solid. There is also a side loop whereby  $\text{CH}_3$  is first converted to  $\text{CH}_2\text{OH}$ , which, in turn, is converted to  $\text{CH}_2\text{O}$ . Other less important pathways complete the mechanism. Those pathways with reaction rates less than  $1 \cdot 10^{-7}$  gmol/cm<sup>3</sup>-s are not shown in Fig. 5.4.

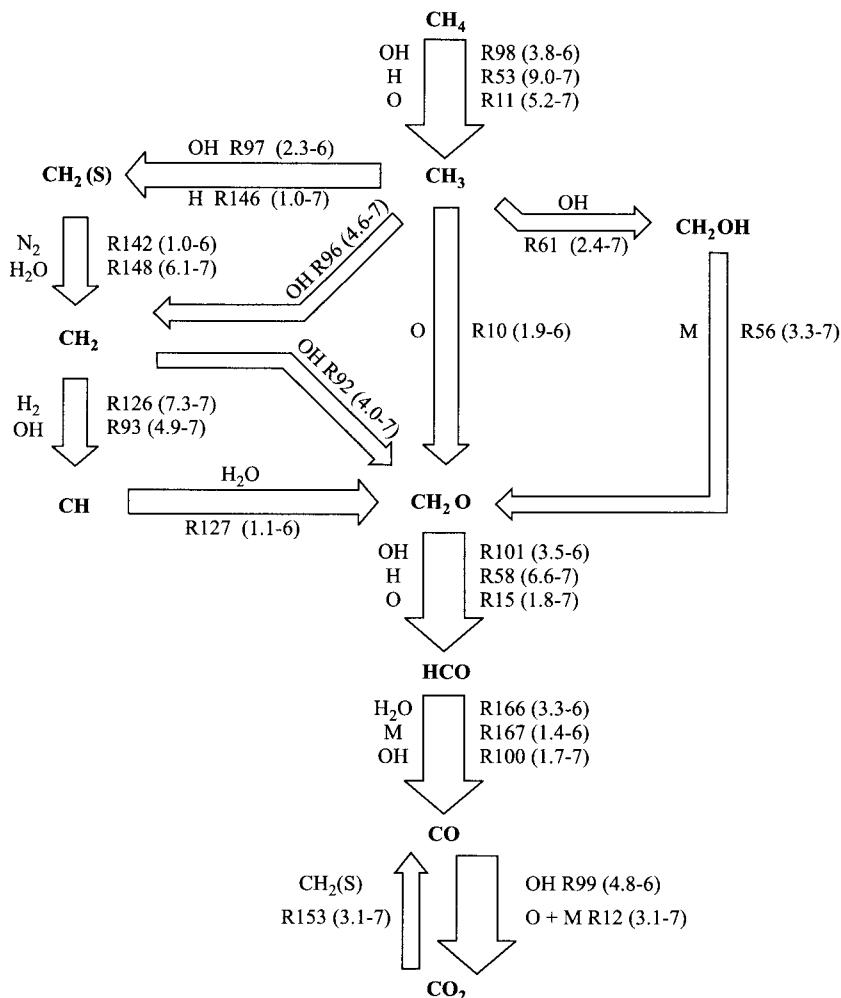

**Figure 5.4** High-temperature reaction pathway diagram for combustion of methane in a well-stirred reactor at  $T = 2200\text{ K}$  and  $P = 1\text{ atm}$  for a  $0.1\text{-s}$  residence time. Reaction numbers refer to Table 5.3, while reaction rates are shown in parentheses. For example, 2.6-7 implies  $2.6 \cdot 10^{-7} (\text{gmol}/\text{cm}^3\text{-s})$ .

### Low-Temperature Reaction Pathway Analysis

At low temperatures ( $< 1500\text{ K}$ , say), pathways that were unimportant at higher temperatures now become prominent. Figure 5.5 illustrates the scenario at  $1345\text{ K}$ . Black arrows show the new pathways that now complement all of the high-temperature pathways. Several interesting features appear: first, there is a strong recombination of  $\text{CH}_3$  back to  $\text{CH}_4$ ; second, an alternate route from  $\text{CH}_3$  to  $\text{CH}_2\text{O}$  appears through the intermediate production of methanol

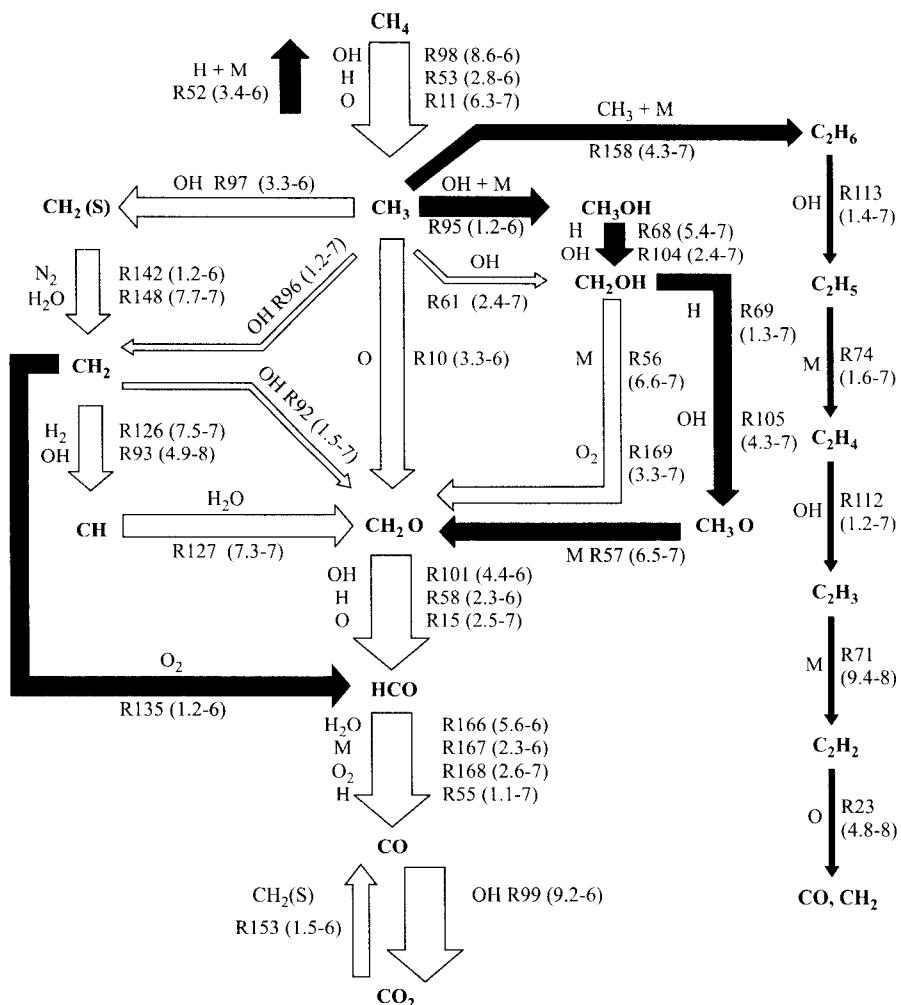

**Figure 5.5** Low-temperature ( $< 1500\text{ K}$ ) reaction pathway diagram for combustion of methane in a well-stirred reactor at  $T = 1345\text{ K}$  and  $P = 1\text{ atm}$  for a  $0.1\text{-s}$  residence time. Reaction numbers refer to Table 5.3, while reaction rates are shown in parentheses. For example,  $2.6 \cdot 10^{-7}$  implies  $2.6 \cdot 10^{-7} \text{ (gmol/cm}^3\text{-s)}$ .

( $\text{CH}_3\text{OH}$ ); and, most interestingly,  $\text{CH}_3$  radicals combine to form ethane ( $\text{C}_2\text{H}_6$ ), a higher hydrocarbon than the original reactant methane. The  $\text{C}_2\text{H}_6$  is ultimately converted to  $\text{CO}$  (and  $\text{CH}_2$ ) through  $\text{C}_2\text{H}_4$  (ethene) and  $\text{C}_2\text{H}_2$  (acetylene). The appearance of hydrocarbons higher than the initial reactant hydrocarbon is a common feature of low-temperature oxidation processes.

Because of the importance of methane oxidation, much effort has been directed to formulating reduced (simplified) mechanisms. References [13] and [14] illustrate promising approaches. References to reduced mechanisms are also available at the GRI Mech Internet site [10].

## OXIDES OF NITROGEN FORMATION

Nitric oxide, introduced in Chapter 1 and more fully discussed in Chapter 4, is an important minor species in combustion because of its contribution to air pollution. The detailed nitrogen chemistry involved in the combustion of methane is presented in the second half of Table 5.3. In the combustion of fuels that contain no nitrogen, nitric oxide is formed by three chemical mechanisms or routes that involve nitrogen from the air: the **thermal or Zeldovich mechanism**, the **Fenimore or prompt mechanism**, and the  **$\text{N}_2\text{O}$ -intermediate mechanism**. There is growing evidence for the possibility of a fourth route involving  $\text{NNH}$  [15–17]. The thermal mechanism dominates in high-temperature combustion over a fairly wide range of equivalence ratios, while the Fenimore mechanism is particularly important in rich combustion. It appears that the  $\text{N}_2\text{O}$ -intermediate mechanism plays an important role in the production of NO in very lean, low-temperature combustion processes. Recent studies show the relative contributions of the three mechanisms in premixed [18] and diffusion flames [19, 20]. For more information than is provided in this section, the reader is referred to Miller and Bowman [21], which provides a comprehensive, state-of-the-art (*c.* 1989) review of the chemistry involved in forming and controlling oxides of nitrogen in combustion processes. Additional information and references are provided in Chapter 15.

The **thermal or Zeldovich mechanism** consists of two chain reactions:



which can be extended by adding the reaction



The rate coefficients for N.1–N.3 are [22]

$$k_{\text{N.1}f} = 1.8 \cdot 10^{11} \exp[-38,370/T(\text{K})] \quad [=] \text{m}^3/\text{kmol-s},$$

$$k_{\text{N.1}r} = 3.8 \cdot 10^{10} \exp[-425/T(\text{K})] \quad [=] \text{m}^3/\text{kmol-s},$$

$$k_{\text{N.2}f} = 1.8 \cdot 10^7 T \exp[-4680/T(\text{K})] \quad [=] \text{m}^3/\text{kmol-s},$$

$$k_{\text{N.2}r} = 3.8 \cdot 10^6 T \exp[-20,820/T(\text{K})] \quad [=] \text{m}^3/\text{kmol-s},$$

$$k_{\text{N.3}f} = 7.1 \cdot 10^{10} \exp[-450/T(\text{K})] \quad [=] \text{m}^3/\text{kmol-s},$$

$$k_{\text{N.3}r} = 1.7 \cdot 10^{11} \exp[-24,560/T(\text{K})] \quad [=] \text{m}^3/\text{kmol-s}.$$

This three-reaction set is referred to as the **extended Zeldovich mechanism**. In general, this mechanism is coupled to the fuel combustion chemistry through the  $\text{O}_2$ , O, and OH species; however, in processes where the fuel combustion is complete before NO formation becomes significant, the two processes can be uncoupled. In this case, if the relevant time scales are sufficiently long, one can assume that the  $\text{N}_2$ ,  $\text{O}_2$ , O, and OH concentrations are at their equilibrium


values and N atoms are in steady state. These assumptions greatly simplify the problem of calculating the NO formation. If we make the additional assumption that the NO concentrations are much less than their equilibrium values, the reverse reactions can be neglected. This yields the following rather simple rate expression:

$$\frac{d[NO]}{dt} = 2k_{N,if}[O]_{eq}[N_2]_{eq}. \quad (5.7)$$

In Chapter 4 (Example 4.3), we showed that Eqn. 5.7 obtains for the above assumptions. Within flame zones proper and in short-time-scale, postflame processes, the equilibrium assumption is not valid. Superequilibrium concentrations of O atoms, up to several orders of magnitude greater than equilibrium, greatly increase NO formation rates. This **superequilibrium O** (and OH) atom contribution to NO production rates is sometimes classified as part of the so-called prompt-NO mechanism; however, for historical reasons, we refer to prompt-NO only in conjunction with the Fenimore mechanism.

The activation energy for (N.1) is relatively large (319,050 kJ/kmol); thus, this reaction has a very strong temperature dependence (cf. problem 4.11). As a rule-of-thumb, the thermal mechanism is usually unimportant at temperatures below 1800 K. Compared with the time scales of fuel oxidation processes, NO is formed rather slowly by the thermal mechanism; thus, thermal NO is generally considered to be formed in the postflame gases.

The **N<sub>2</sub>O-intermediate mechanism** is important in fuel-lean ( $\Phi < 0.8$ ), low-temperature conditions. The three steps of this mechanism are

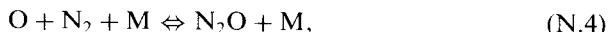

This mechanism becomes important in NO control strategies that involve lean premixed combustion, which are currently being explored by gas-turbine manufacturers [23].

The **Fenimore mechanism** is intimately linked to the combustion chemistry of hydrocarbons. Fenimore [24] discovered that some NO was rapidly produced in the flame zone of laminar premixed flames long before there would be time to form NO by the thermal mechanism, and he gave this rapidly formed NO the appellation **prompt NO**. The general scheme of the Fenimore mechanism is that hydrocarbon radicals react with molecular nitrogen to form amines or cyano compounds. The amines and cyano compounds are then converted to intermediate compounds that ultimately form NO. Ignoring the processes that form CH radicals to initiate the mechanism, the Fenimore mechanism can be written




where (N.7) is the primary path and is the rate-limiting step in the sequence. For equivalence ratios less than about 1.2, the conversion of hydrogen cyanide, HCN, to form NO follows the following chain sequence:




For equivalence ratios richer than 1.2, other routes open up and the chemistry becomes much more complex. Miller and Bowman [21] point out that the above scheme is no longer rapid and that NO is recycled to HCN, inhibiting NO production. Furthermore, the Zeldovich reaction that couples with the prompt mechanism actually destroys rather than forms NO, i.e.,  $\text{N} + \text{NO} \rightarrow \text{N}_2 + \text{O}$ . Figure 5.6 schematically illustrates the processes involved, and the reader is referred to Refs. [21] and [25] for further details.

Certain fuels contain nitrogen in their molecular structure. Coal, in particular, may contain bound nitrogen up to about 2 percent by mass. In the combustion of fuels with bound nitrogen, the nitrogen in the parent fuel is rapidly converted to hydrogen cyanide, HCN, or ammonia,  $\text{NH}_3$ . The remaining steps follow the prompt-NO mechanism discussed above and outlined in Fig. 5.6.

In the atmosphere, nitric oxide ultimately oxidizes to form **nitrogen dioxide**, which is important to the production of acid rain and photochemical smog. Many combustion processes, however, emit significant fractions of their total oxides of nitrogen ( $\text{NO}_x = \text{NO} + \text{NO}_2$ ) as  $\text{NO}_2$ . The elementary reactions responsible for forming  $\text{NO}_2$  prior to the exhausting of the combustion products into the atmosphere are the following:

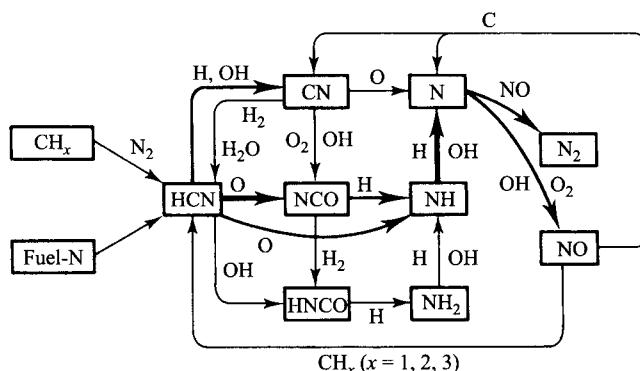

**Figure 5.6** Production of NO associated with the Fenimore prompt mechanism.  
SOURCE: Reprinted from Ref. [25] by permission of The Combustion Institute.

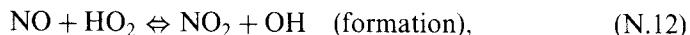

where the  $\text{HO}_2$  radical is formed by the three-body reaction



The  $\text{HO}_2$  radicals are formed in relatively low-temperature regions; hence,  $\text{NO}_2$  formation occurs when NO molecules from high-temperature regions diffuse or are transported by fluid mixing into the  $\text{HO}_2$ -rich regions. The  $\text{NO}_2$  destruction reactions (N.13) and (N.14) are active at high temperatures, thus preventing the formation of  $\text{NO}_2$  in high-temperature zones.

---

## SUMMARY

In this chapter, we outlined the kinetic mechanisms for five chemical systems of importance to combustion:  $\text{H}_2$  oxidation, CO oxidation, higher paraffin oxidation,  $\text{CH}_4$  oxidation, and oxides of nitrogen (NO and  $\text{NO}_2$ ) formation. In the  $\text{H}_2\text{--O}_2$  system, we discovered how the changes in reaction pathways with temperature and pressure result in various regimes of explosive and nonexplosive behavior. The idea of heterogeneous, or wall, reactions was introduced to explain the destruction of radicals at low pressures where mean free paths are long. We also saw the importance of moisture, or other  $\text{H}_2$ -containing species, in the oxidation of CO. Without a trace of these species, CO oxidation is very slow. The  $\text{CO} + \text{OH} \rightarrow \text{CO}_2 + \text{H}$  reaction was found to be a key step in CO oxidation. The oxidation of higher paraffins ( $\text{C}_n\text{H}_{2n+2}$  with  $n > 2$ ) can be characterized as a three-step process: first, the fuel molecule is attacked by radicals producing intermediates (olefins and  $\text{H}_2$ ); second, the intermediates oxidize to CO and  $\text{H}_2\text{O}$ ; and, third, the CO and any remaining  $\text{H}_2$  are oxidized to  $\text{CO}_2$  and  $\text{H}_2\text{O}$ , respectively. Global and quasi-global mechanisms were presented for use in engineering approximations. Methane was shown to be unique among hydrocarbons in that it is significantly less reactive. The mechanism for  $\text{CH}_4$  oxidation is perhaps the best elaborated of all hydrocarbons, and an example was presented that consists of 277 elementary steps involving 49 species. Reaction pathways were outlined for low- and high-temperature  $\text{CH}_4$  oxidation in a well-stirred reactor. This chapter concludes with a discussion of the various NO formation pathways: the extended Zeldovich or thermal route, together with the superequilibrium O (and OH) contributions; the Fenimore prompt mechanism; the  $\text{N}_2\text{O}$ -intermediate path; and, lastly, the fuel-N mechanism. Although an overwhelming number of reactions were discussed in this chapter, the reader should still be able to grasp certain key features of each system, without getting bogged down in a myriad of elementary reactions.

Moreover, this chapter should provide a heightened awareness of the importance of chemistry in combustion.

---

## REFERENCES


1. Glassman, I., *Combustion*, 2nd Ed., Academic Press, Orlando, FL, 1987.
2. Lewis, B., and VonElbe, G., *Combustion, Flames and Explosions of Gases*, 3rd Ed., Academic Press, Orlando, FL, 1987.
3. Gardiner, W. C., Jr., and Olson, D. B., "Chemical Kinetics of High Temperature Combustion," *Annual Review of Physical Chemistry*, 31: 377–399 (1980).
4. Westbrook, C. K., and Dryer, F. L., "Chemical Kinetic Modeling of Hydrocarbon Combustion," *Progress in Energy and Combustion Science*, 10: 1–57 (1984).
5. Yetter, R. A., Dryer, F. L., and Rabitz, H., "A Comprehensive Reaction Mechanism for Carbon Monoxide/Hydrogen/Oxygen Kinetics," *Combustion Science and Technology*, 79: 97–128 (1991).
6. Westbrook, C. K., and Dryer, F. L., "Simplified Reaction Mechanisms for the Oxidation of Hydrocarbon Fuels in Flames," *Combustion Science and Technology*, 27: 31–43 (1981).
7. Hautman, D. J., Dryer, F. L., Schug, K. P., and Glassman, I., "A Multiple-Step Overall Kinetic Mechanism for the Oxidation of Hydrocarbons," *Combustion Science and Technology*, 25: 219–235 (1981).
8. Card, J. M., and Williams, F. A., "Asymptotic Analysis with Reduced Chemistry for the Burning of n-Heptane Droplets," *Combustion and Flame*, 91: 187–199 (1992).
9. Kaufman, F., "Chemical Kinetics and Combustion: Intricate Paths and Simple Steps," *Nineteenth Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, pp. 1–10, 1982.
10. Bowman, C. T., Hanson, R. K., Davidson, D. F., Gardiner, W. C., Jr., Lissianski, V., Smith, G. P., Golden, D. M., Frenklach, M., and Goldenberg, M., *GRI-Mech Home Page*, [http://www.me.berkeley.edu/gri\\_mech/](http://www.me.berkeley.edu/gri_mech/).
11. Frenklach, M., Wang, H., and Rabinowitz, M. J., "Optimization and Analysis of Large Chemical Kinetic Mechanisms Using the Solution Mapping Method—Combustion of Methane," *Progress in Energy and Combustion Science*, 18: 47–73 (1992).
12. Glarborg, P., Kee, R. J., Grcar, J. F., and Miller, J. A., "PSR: A Fortran Program for Modeling Well-Stirred Reactors," Sandia National Laboratories Report SAND86-8209, 1986.

13. Peters, N., and Kee, R. J., "The Computation of Stretched Laminar Methane–Air Diffusion Flames Using a Reduced Four-Step Mechanism," *Combustion and Flame*, 68: 17–29 (1987).
14. Smooke, M. D. (ed.), *Reduced Kinetic Mechanisms and Asymptotic Approximations for Methane–Air Flames*, Lecture Notes in Physics, 384, Springer-Verlag, New York, 1991.
15. Bozzelli, J. W., and Dean, A. M., "O + NNH: A Possible New Route for NO<sub>x</sub> Formation in Flames," *International Journal of Chemical Kinetics*, 27: 1097–1109 (1995).
16. Harrington, J. E., *et al.*, "Evidence for a New NO Production Mechanism in Flames," *Twenty-Sixth Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, pp. 2133–2138, 1996.
17. Hayhurst, A. N., and Hutchinson, E. M., "Evidence for a New Way of Producing NO via NNH in Fuel-Rich Flames at Atmospheric Pressure," *Combustion and Flame*, 114: 274–279 (1998).
18. Drake, M. C., and Blint, R. J., "Calculations of NO<sub>x</sub> Formation Pathways in Propagating Laminar, High Pressure Premixed CH<sub>4</sub>/Air Flames," *Combustion Science and Technology*, 75: 261–285 (1991).
19. Drake, M. C., and Blint, R. J., "Relative Importance of Nitric Oxide Formation Mechanisms in Laminar Opposed-Flow Diffusion Flames," *Combustion and Flame*, 83: 185–203 (1991).
20. Nishioka, M., Nakagawa, S., Ishikawa, Y., and Takeno, T., "NO Emission Characteristics of Methane–Air Double Flame," *Combustion and Flame*, 98: 127–138 (1994).
21. Miller, J. A., and Bowman, C. T., "Mechanism and Modeling of Nitrogen Chemistry in Combustion," *Progress in Energy and Combustion Science*, 15: 287–338 (1989).
22. Hanson, R. K., and Salimian, S., "Survey of Rate Constants in the N/H/O System," Chapter 6 in *Combustion Chemistry* (W. C. Gardiner, Jr., ed.), Springer-Verlag, New York, pp. 361–421, 1984.
23. Correa, S. M., "A Review of NO<sub>x</sub> Formation under Gas-Turbine Combustion Conditions," *Combustion Science and Technology*, 87: 329–362 (1992).
24. Fenimore, C. P., "Formation of Nitric Oxide in Premixed Hydrocarbon Flames," *Thirteenth Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, pp. 373–380, 1970.
25. Bowman, C. T., "Control of Combustion-Generated Nitrogen Oxide Emissions: Technology Driven by Regulations," *Twenty-Fourth Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, pp. 859–878, 1992.
26. Weast, R. C. (ed.), *Handbook of Chemistry and Physics*, 56th Ed., CRC Press, Cleveland, OH, 1976.


## QUESTIONS AND PROBLEMS

- 5.1** Identify and discuss the processes involved in the H<sub>2</sub>-O<sub>2</sub> system that result in:
- The first explosion limit (cf. Fig. 5.1).
  - The second explosion limit.
  - The third explosion limit.
- 5.2** What is the difference between a homogeneous reaction and a heterogeneous reaction? Give examples of each.
- 5.3** Why is moisture, or other H<sub>2</sub>-containing species, important for the rapid oxidation of CO?
- 5.4** Identify the primary elementary reaction step in which CO is converted to CO<sub>2</sub>.
- 5.5** The oxidation of higher paraffins can be treated as three major sequential steps. What are the key features of each step?
- 5.6** Show how the  $\beta$ -scission rule would apply to the breaking of C-C bonds in the following hydrocarbon radicals. The line indicates a C-H bond and the dot the radical site.

A. *n*-butyl radical—C<sub>4</sub>H<sub>9</sub>.

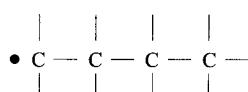

B. *sec*-butyl radical—C<sub>4</sub>H<sub>9</sub>

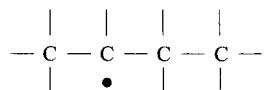

- 5.7** The oxidation of C<sub>3</sub>H<sub>8</sub> has been broken down into eight semidetailed steps (P.1 through P.7 plus other steps). Following the example of C<sub>3</sub>H<sub>8</sub>, show the first five steps in the oxidation of butane, C<sub>4</sub>H<sub>10</sub>.
- 5.8** Using the single-step global mechanism given by Eqns. 5.1 and 5.2 for combustion of a hydrocarbon with air, compare the mass rates of fuel carbon conversion to CO<sub>2</sub> for  $\Phi = 1$ ,  $P = 1$  atm, and  $T = 1600$  K for the following fuels:

- CH<sub>4</sub>—methane.
- C<sub>3</sub>H<sub>8</sub>—propane.
- C<sub>8</sub>H<sub>18</sub>—octane.

*Hint:* Make sure that you include the nitrogen from the air in determining your reactants' concentrations.

- 5.9** What features of the methane molecule contribute to its low reactivity? Use data from the *CRC Handbook of Chemistry and Physics* [26] (or other reference book) to support your statements.
- 5.10** The production of nitric oxide from the combustion of nitrogen-free fuels with air occurs by several mechanisms. List and discuss these mechanisms.
- 5.11** Many experiments have shown that nitric oxide is formed very rapidly within flame zones, and more slowly in postflame gases. What factors contribute to this rapid formation of NO in flame zones?
- 5.12** Identify the key radical in the conversion of NO to  $\text{NO}_2$  in combustion systems. Why does  $\text{NO}_2$  not appear in high-temperature flame regions?
- 5.13** Consider the production of nitric oxide (NO) in the following combustion systems using the Zeldovich mechanism given in Eqn. 5.7. (See also Chapter 4, Examples 4.3 and 4.4.) In each case, assume that the environment is well mixed; O,  $\text{O}_2$ , and  $\text{N}_2$  are at their equilibrium values (given); N atoms are in steady state; the temperature is fixed (given); and reverse reactions are negligible. Calculate the NO concentration in parts-per-million and the ratio of the kinetically formed NO to the given equilibrium NO concentration. Comment on the validity of neglecting reverse reactions. Do your results make sense?
- A. Consider the operation of a stationary power-generation, gas-turbine engine operating without any emission controls. The primary zone of this gas-turbine combustor has an equivalence ratio of 1.0. The mean residence time of the combustion products at the conditions below is 7 ms.

$$\text{---Decane/air, } \chi_{\text{O},eq} = 7.93 \cdot 10^{-5},$$

$$T = 2300 \text{ K, } \chi_{\text{O}_2,eq} = 3.62 \cdot 10^{-3},$$

$$P = 14 \text{ atm, } \chi_{\text{N}_2,eq} = 0.7295,$$

$$MW = 28.47, \chi_{\text{NO},eq} = 2.09 \cdot 10^{-3}.$$

- B. The residence time in the primary combustion zone of a gas-fired (methane/air) furnace is 200 ms for conditions given below.

$$\Phi = 1.0, \chi_{\text{O},eq} = 1.99 \cdot 10^{-4},$$

$$T = 2216 \text{ K, } \chi_{\text{O}_2,eq} = 4.46 \cdot 10^{-3},$$

$$P = 1 \text{ atm, } \chi_{\text{N}_2,eq} = 0.7088,$$

$$MW = 27.44, \chi_{\text{NO},eq} = 1.91 \cdot 10^{-3}.$$

- C. Additional air is added after the primary zone combustion of part A to form a secondary combustion zone. How much additional NO is formed in the secondary zone of the combustor, assuming a step change to the conditions given below? The mean residence time of the gases in the secondary

zone is 10 ms. Use the NO formed in part A as the initial condition for your calculation.

$$\begin{aligned}\Phi &= 0.55, & \chi_{O_2,eq} &= 0.0890, \\ P &= 14 \text{ atm}, & \chi_{O,eq} &= 2.77 \cdot 10^{-5}, \\ T &= 1848 \text{ K}, & \chi_{N_2,eq} &= 0.7570, \\ MW &= 28.73, & \chi_{NO,eq} &= 3.32 \cdot 10^{-3}.\end{aligned}$$

- D. How much additional NO is formed in the secondary combustion zone of the furnace of part B? The residence time in the secondary zone is 0.5 s. Again, assume instantaneous mixing.

$$\begin{aligned}\Phi &= 0.8958, & \chi_{O,eq} &= 9.149 \cdot 10^{-5}, \\ T &= 2000 \text{ K}, & \chi_{O_2,eq} &= 0.0190, \\ P &= 1 \text{ atm}, & \chi_{N_2,eq} &= 0.720, \\ MW &= 27.72, & \chi_{NO,eq} &= 2.34 \cdot 10^{-3}.\end{aligned}$$

- 5.14** Determine the units conversion factor required to express the pre-exponential factors in Table 5.1 in SI units (i.e., kmol, m, and s). Perform the conversion for the first and last entries in the table.
- 5.15** An experimenter finds that she is unable to establish a premixed carbon monoxide flame when using an oxidizer composed of high-purity O<sub>2</sub> (21 percent) and high-purity N<sub>2</sub> (79 percent). When room air is used as the oxidizer, however, she has no trouble maintaining a flame! Explain why the carbon monoxide burns with the room air but not with the synthetic bottled air. How do the results of problem 4.18 relate to this problem?
- 5.16** Draw molecular structure diagrams illustrating the transformation of a CH<sub>4</sub> molecule through the various intermediate compounds to the final oxidation product CO<sub>2</sub>. Follow the linear “backbone” of the high-temperature oxidation pathway illustrated in Fig. 5.4.
- 5.17** A researcher measures trace quantities of ethane and methanol in an experiment involving the extinction of methane-air flames at a cold wall. To explain the presence of the ethane and the methanol, a colleague argues that the samples were contaminated, while the researcher maintains that contamination did not occur. Is the researcher’s position tenable? Explain.
- 5.18\*** Methane is burned with air in an adiabatic, constant-volume vessel. The equivalence ratio is 0.9 and the initial temperature and pressure prior to com-

| \*Indicates required use of computer.

bustion are 298 K and 1 atm, respectively. Consider the formation of nitric oxide by the thermal mechanism (N.1 and N.2) in the postflame gases.

- A. Derive an expression for the NO production rate  $d[NO]/dt$ . Do not neglect reverse reactions. Assume [N] is in steady state and that [O], [O<sub>2</sub>], and [N<sub>2</sub>] are equilibrium values unaffected by the NO concentration.
- B. Determine the NO mole fraction as a function of time. Use numerical integration to accomplish this. Use UVFLAME to establish the initial conditions ( $T$ ,  $P$ , [O], [O<sub>2</sub>], and [N<sub>2</sub>]).
- C. Plot  $\chi_{NO}$  versus time. Indicate the equilibrium mole fraction from UVFLAME on your graph. Discuss.
- D. At what time do reverse reactions become important in this analysis? Discuss.

**6**


# Coupling Chemical and Thermal Analyses of Reacting Systems

---

## OVERVIEW

In Chapter 2, we reviewed the thermodynamics of reacting systems, considering only the initial and final states. For example, the concept of an adiabatic flame temperature was derived based on the knowledge of the initial state of the reactants and the final composition of the products, as determined by equilibrium. Performing an adiabatic flame temperature calculation required no knowledge of chemical rate processes. In this chapter, we couple the knowledge gained of chemical kinetics in Chapter 4 with fundamental conservation principles (e.g., mass and energy conservation) for various archetypal thermodynamic systems. This coupling allows us to describe the detailed evolution of the system from its initial reactant state to its final product state, which may or may not be in chemical equilibrium. In other words, we will be able to calculate the system temperature and the various species concentrations as functions of time as the system proceeds from reactants to products.

Our analyses in this chapter will be simple, without the complication of mass diffusion. The systems that are chosen for study in this chapter, shown in Fig. 6.1, make bold assumptions about the mixedness of the system. Three of the four systems assume that the systems are perfectly mixed and homogeneous in composition; the fourth system, the plug-flow reactor, totally ignores mixing and diffusion in the flow (axial) direction, while assuming perfect mixedness in the radial direction perpendicular to the flow. Although the concepts developed here can be used as building blocks for modeling more complex flows, perhaps more importantly, they are pedagogically useful for developing a very basic understanding of the interrelationships among thermodynamics, chemical kinetics, and fluid mechanics. In the next chapter, we will extend our simple analysis to include the effects of mass diffusion.

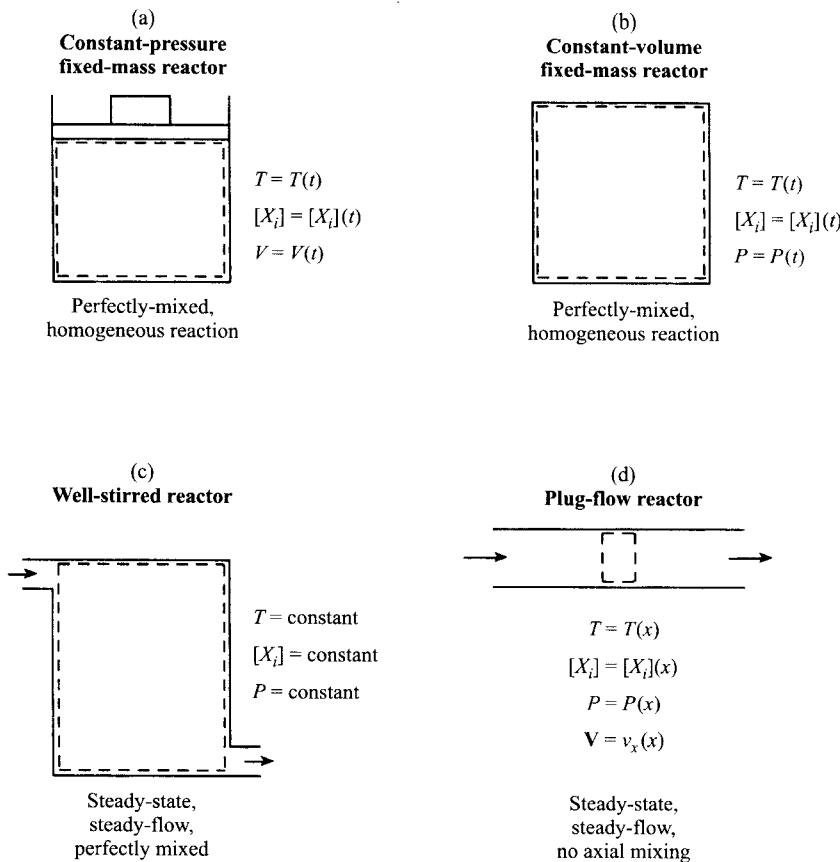

**Figure 6.1** Simple chemically reacting systems: (a) constant-pressure, fixed mass; (b) constant-volume, fixed mass; (c) well-stirred reactor; (d) plug-flow reactor.

## CONSTANT-PRESSURE, FIXED-MASS REACTOR

### Application of Conservation Laws

Consider reactants contained in a piston–cylinder arrangement (Fig. 6.1a) that react at each and every location within the gas volume at the same rate. Thus, there are no temperature or composition gradients within the mixture, and a single temperature and set of species concentrations suffice to describe the evolution of this system. For exothermic combustion reactions, both the temperature and volume will increase with time, and there may be heat transfer through the reaction vessel walls.

In the following, we will develop a system of first-order ordinary differential equations whose solution describes the desired temperature and species

evolution. These equations and their initial conditions define an **initial-value problem**. Starting with the rate form of the conservation of energy for a fixed-mass system, we write

$$\dot{Q} - \dot{W} = m \frac{du}{dt}. \quad (6.1)$$

Applying the definition of enthalpy,  $h \equiv u + Pv$ , and differentiating gives

$$\frac{du}{dt} = \frac{dh}{dt} - P \frac{dv}{dt}. \quad (6.2)$$

Assuming the only work is the  $P$ - $dv$  work at the piston,

$$\frac{\dot{W}}{m} = P \frac{dv}{dt}. \quad (6.3)$$

Substituting Eqns. 6.2 and 6.3 into Eqn. 6.1, the  $P dv/dt$  terms cancel leaving

$$\frac{\dot{Q}}{m} = \frac{dh}{dt}. \quad (6.4)$$

We can express the system enthalpy in terms of the system chemical composition as

$$h = \frac{H}{m} = \frac{\sum_{i=1}^N N_i \bar{h}_i}{m}, \quad (6.5)$$

where  $N_i$  and  $\bar{h}_i$  are the number of moles and molar enthalpy of species  $i$ , respectively. Differentiation of Eqn. 6.5 yields

$$\frac{dh}{dt} = \frac{1}{m} \left[ \sum_i \left( \bar{h}_i \frac{dN_i}{dt} \right) + \sum_i \left( N_i \frac{d\bar{h}_i}{dt} \right) \right]. \quad (6.6)$$

Assuming ideal-gas behavior, i.e.,  $\bar{h}_i = \bar{h}_i(T)$  only),

$$\frac{d\bar{h}_i}{dt} = \frac{\partial \bar{h}_i}{\partial T} \frac{dT}{dt} = \bar{c}_{p,i} \frac{dT}{dt}, \quad (6.7)$$

where  $\bar{c}_{p,i}$  is the molar constant-pressure specific heat of species  $i$ . Equation 6.7 provides the desired link to the system temperature, while the definition of the molar concentration  $[X_i]$  and the mass-action expressions,  $\dot{\omega}_i = \dots$ , provide the necessary link to the system composition,  $N_i$ , and chemical dynamics,  $dN_i/dt$ . These expressions are

$$N_i = V[X_i] \quad (6.8)$$

$$\frac{dN_i}{dt} \equiv V \dot{\omega}_i, \quad (6.9)$$

where the  $\dot{\omega}_i$  values are calculated from the detailed chemical mechanism as discussed in Chapter 4 (cf. Eqns. 4.31–4.33).

Substituting Eqns. 6.7–6.9 into Eqn. 6.6, our statement of energy conservation (Eqn. 6.4) becomes, after rearrangement,

$$\frac{dT}{dt} = \frac{(\dot{Q}/V) - \sum_i (\bar{h}_i \dot{\omega}_i)}{\sum_i ([X_i] \bar{c}_{p,i})}, \quad (6.10)$$

where we use the following calorific equation of state to evaluate the enthalpies:

$$\bar{h}_i = \bar{h}_{f,i}^o + \int_{T_{\text{ref}}}^T \bar{c}_{p,i} dT. \quad (6.11)$$

To obtain the volume, we apply mass conservation and the definition of  $[X_i]$  in Eqn. 6.8:

$$V = \frac{m}{\sum_i ([X_i] MW_i)}. \quad (6.12)$$

The species molar concentrations,  $[X_i]$ , change with time as a result of both chemical reactions and changing volume, i.e.,

$$\frac{d[X_i]}{dt} = \frac{d(N_i/V)}{dt} = \frac{1}{V} \frac{dN_i}{dt} - N_i \frac{1}{V^2} \frac{dV}{dt} \quad (6.13a)$$

or

$$\frac{d[X_i]}{dt} = \dot{\omega}_i - [X_i] \frac{1}{V} \frac{dV}{dt}, \quad (6.13b)$$

where the first term on the right-hand-side is the chemical production term and the second term accounts for the changing volume.

The ideal-gas law can be used to eliminate the  $dV/dt$  term. Differentiating

$$PV = \sum_i N_i R_u T \quad (6.14a)$$

for the case of constant pressure, and rearranging, yields

$$\frac{1}{V} \frac{dV}{dt} = \frac{1}{\sum_i N_i} \sum_i \frac{dN_i}{dt} + \frac{1}{T} \frac{dT}{dt}. \quad (6.14b)$$

First substituting Eqn. 6.9 into Eqn. 6.14b and then substituting the result into Eqn. 6.13b, provides, after rearrangement, our final expression for the rate of change of the species molar concentrations:

$$\frac{d[X_i]}{dt} = \dot{\omega}_i - [X_i] \left[ \frac{\sum_j \dot{\omega}_j}{\sum_j [X_j]} + \frac{1}{T} \frac{dT}{dt} \right]. \quad (6.15)$$

## Reactor Model Summary

Succinctly stated, our problem is to find the solution to

$$\frac{dT}{dt} = f([X_i], T) \quad (6.16a)$$

$$\frac{d[X_i]}{dt} = f([X_i], T) \quad i = 1, 2, \dots, N \quad (6.16b)$$

with initial conditions

$$T(t=0) = T_0 \quad (6.17a)$$

and

$$[X_i](t=0) = [X_i]_0. \quad (6.17b)$$

The functional expressions for Eqns. 6.16a and 6.16b are obtained from Eqn. 6.10 and Eqn. 6.15, respectively. Enthalpies are calculated using Eqn. 6.11, and the volume is obtained from Eqn. 6.12.

To carry out the solution of the above system, an integration routine capable of handling stiff equations should be employed, as discussed in Chapter 4.

## CONSTANT-VOLUME, FIXED-MASS REACTOR

### Application of Conservation Laws

The application of energy conservation to the constant-volume reactor follows closely that of the constant-pressure reactor, with the major difference being the absence of work in the former. Starting with Eqn. 6.1, with  $\dot{W} = 0$ , the first law takes the following form:

$$\frac{du}{dt} = \frac{\dot{Q}}{m}. \quad (6.18)$$

Recognizing that the specific internal energy,  $u$ , now plays the same mathematical role as the specific enthalpy,  $h$ , in our previous analysis, expressions equivalent to Eqns. 6.5–6.7 are developed and substituted into Eqn. 6.18. This yields, after rearrangement,

$$\frac{dT}{dt} = \frac{(\dot{Q}/V) - \sum_i (\bar{u}_i \dot{\omega}_i)}{\sum_i ([X_i] \bar{c}_{v,i})}. \quad (6.19)$$

Recognizing that, for ideal gases,  $\bar{u}_i = \bar{h}_i - R_u T$  and  $\bar{c}_{v,i} = \bar{c}_{p,i} - R_u$ , we can express Eqn. 6.19 using enthalpies and constant-pressure specific heats:

$$\frac{dT}{dt} = \frac{(\dot{Q}/V) + R_u T \sum_i \dot{\omega}_i - \sum_i (\bar{h}_i \dot{\omega}_i)}{\sum_i [X_i] (\bar{c}_{p,i} - R_u)}. \quad (6.20)$$

In constant-volume explosion problems, the time-rate-of-change of the pressure is of interest. To calculate  $dP/dt$ , we differentiate the ideal-gas law, subject to the constant volume constraint, i.e.,

$$PV = \sum_i N_i R_u T \quad (6.21)$$

and

$$V \frac{dP}{dt} = R_u T \frac{d \sum_i N_i}{dt} + R_u \sum_i N_i \frac{dT}{dt}. \quad (6.22)$$

Applying the definitions of  $[X_i]$  and  $\dot{\omega}_i$  (cf. Eqns. 6.8 and 6.9), Eqns. 6.21 and 6.22 become

$$P = \sum_i [X_i] R_u T \quad (6.23)$$

and

$$\frac{dP}{dt} = R_u T \sum_i \dot{\omega}_i + R_u \sum_i [X_i] \frac{dT}{dt}, \quad (6.24)$$

which completes our simple analysis of homogeneous constant-volume combustion.

## Reactor Model Summary

Equation 6.20 can be integrated simultaneously with the chemical rate expressions to determine  $T(t)$  and  $[X_i](t)$ , i.e.,

$$\frac{dT}{dt} = f([X_i], T) \quad (6.25a)$$

$$\frac{d[X_i]}{dt} = \dot{\omega}_i = f([X_i], T) \quad i = 1, 2, \dots, N \quad (6.25b)$$

with initial conditions

$$T(t=0) = T_0 \quad (6.26a)$$

and

$$[X_i](t=0) = [X_{i0}] \quad (6.26b)$$

The required enthalpies are evaluated using Eqn. 6.11, and the pressure from Eqn. 6.23. Again, a stiff equation solver should be used to carry out the integration.

**Example 6.1**


In spark-ignition engines, knock occurs when the unburned fuel-air mixture ahead of the flame reacts homogeneously, i.e., it autoignites. The rate-of-pressure rise is a key parameter in determining knock intensity and propensity for mechanical damage to the piston-crank assembly. Pressure-versus-time traces for normal and knocking combustion in a spark-ignition engine are illustrated in Fig. 6.2. Note the very rapid pressure rise in the case of heavy knock. Figure 6.3 shows schlieren (index-of-refraction gradient) photographs of flame propagation for normal and knocking combustion.

Create a simple constant-volume model of the autoignition process and determine the temperature and the fuel and product concentration histories. Also determine  $dP/dt$  as a function of time. Assume initial conditions corresponding to compression of a fuel-air mixture from 300 K and 1 atm to top-dead-center for a compression ratio of 10:1. The initial volume before compression is  $3.68 \cdot 10^{-4} \text{ m}^3$ , which corresponds to an engine with both a bore and a stroke of 75 mm. Use ethane as fuel.

**Solution**


We will make some bold and sweeping assumptions about the thermodynamics and the chemical kinetics to keep the computational complexity to a minimum. Our solution, however, will still retain the strong coupling between the thermochemistry and chemical kinetics. Our assumptions are as follows:

- i. One-step global kinetics using the rate parameters for ethane  $\text{C}_2\text{H}_6$  (cf. Table 5.1).
- ii. The fuel, air, and products all have equal molecular weights; i.e.,  $MW_F = MW_{Ox} = MW_{Pr} = 29$ .
- iii. The specific heats of the fuel, air, and products are constants and equal; that is,  $c_{p,F} = c_{p,Ox} = c_{p,Pr} = 1200 \text{ J/kg-K}$ .
- iv. The enthalpy of formation of the air and products are zero; the enthalpy of formation of the fuel is  $4 \cdot 10^7 \text{ J/kg}$ .
- v. We assume that the stoichiometric air-fuel ratio is 16.0 and restrict combustion to stoichiometric or lean conditions.

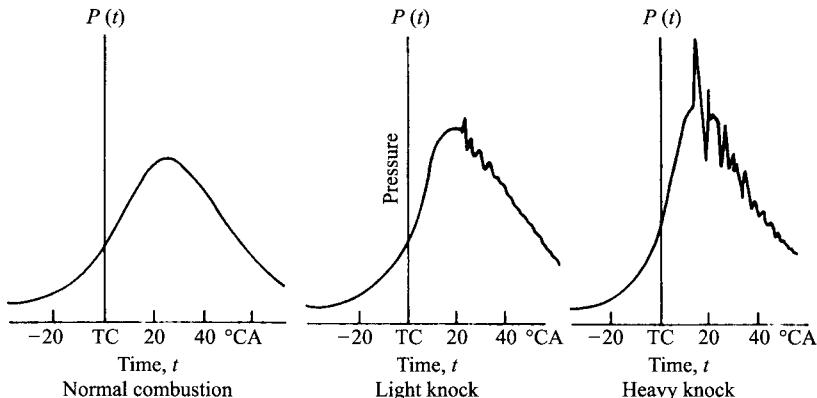

**Figure 6.2** Cylinder pressure-versus-time measurements in a spark-ignition engine for normal combustion, light knock, and heavy knock cycles. The crank angle interval of  $40^\circ$  corresponds to 1.67 ms.

| SOURCE: Adapted from Refs. [1] and [17] by permission of McGraw-Hill, Inc.

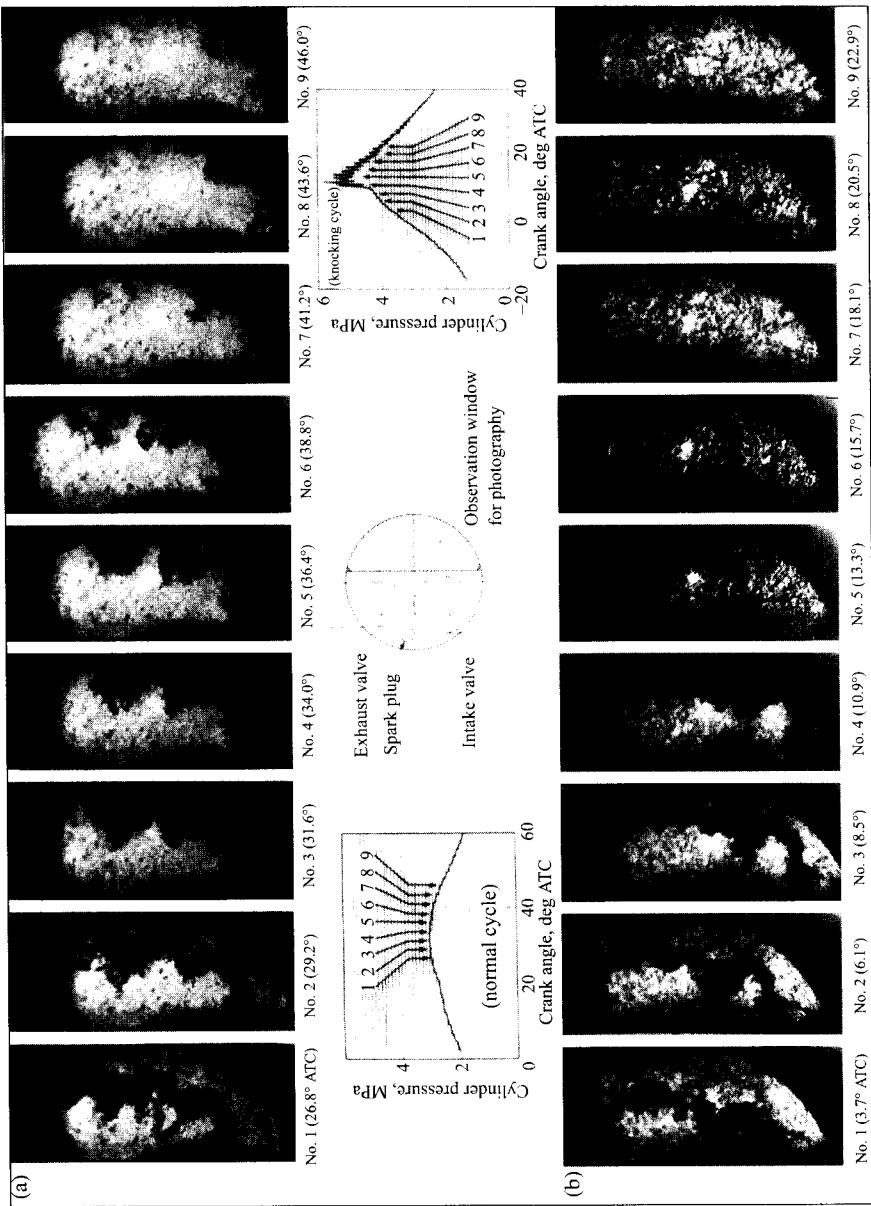

**Figure 6.3** Schlieren photographs from high-speed movies of (a) normal combustion and (b) knocking combustion. Pressure-time traces corresponding to the photographs are also shown.  
SOURCE: From Refs. [2] and [17]. Reprinted by permission of McGraw-Hill, Inc.

The use of global kinetics is hard to justify for a problem like engine knock where detailed chemistry is important [3]. Our only justification is that we are trying to illustrate principles, recognizing that our answers may be inaccurate in detail. Assumptions ii–iv provide values that give reasonable estimates of flame temperatures, yet trivialize the problem of obtaining thermodynamic properties [4].

With these assumptions, we can now formulate our model. From Eqn. 5.2 and Table 5.1, the fuel (ethane) reaction rate is

$$\frac{d[F]}{dt} = -6.19 \cdot 10^9 \exp\left(\frac{-15,098}{T}\right) [F]^{0.1} [\text{O}_2]^{1.65} \quad (\text{I})$$

[=] kmol/m<sup>3</sup>·s,

where, assuming 21% percent O<sub>2</sub> in the air,

$$[\text{O}_2] = 0.21[\text{Ox}].$$

Note the conversion of units from a gmol·cm<sup>3</sup> to a kmol·m<sup>3</sup> basis for the pre-exponential factor ( $1.1 \cdot 10^{12} \cdot [1000]^{1-0.1-1.65} = 6.19 \cdot 10^9$ ).

We can simply relate the oxidizer and product reaction rates to the fuel rate through the stoichiometry (assumptions ii and v):

$$\frac{d[\text{Ox}]}{dt} = (A/F)_s \frac{MW_F}{MW_{\text{Ox}}} \frac{d[F]}{dt} = 16 \frac{d[F]}{dt} \quad (\text{II})$$

and

$$\frac{d[\text{Pr}]}{dt} = -[(A/F)_s + 1] \frac{MW_F}{MW_{\text{Pr}}} \frac{d[F]}{dt} = -17 \frac{d[F]}{dt}. \quad (\text{III})$$

We complete our model by applying Eqn. 6.20:

$$\frac{dT}{dt} = \frac{(\dot{Q}/V) + R_u T \sum \dot{\omega}_i - \sum (\bar{h}_i \dot{\omega}_i)}{\sum [X_i](\bar{c}_{p,i} - R_u)}. \quad (\text{IV})$$

This simplifies, by noting that

$$\dot{Q}/V = 0 \quad (\text{adiabatic}),$$

$$\sum \dot{\omega}_i = 0 \quad (\text{assumptions ii and v}),$$

$$\sum \bar{h}_i \dot{\omega}_i = \dot{\omega}_F \bar{h}_{f,F}^o \quad (\text{assumptions ii–v}),$$

and

$$\sum [X_i](\bar{c}_{p,i} - R_u) = (\bar{c}_p - R_u) \sum [X_i] = (\bar{c}_p - R_u) \sum \chi_i \frac{P}{R_u T} = (\bar{c}_p - R_u) \frac{P}{R_u T},$$

to be

$$\frac{dT}{dt} = \frac{-\dot{\omega}_F \bar{h}_{f,F}^o}{(\bar{c}_p - R_u) P / (R_u T)}. \quad (\text{IV})$$

Although our basic model is complete, we can add ancillary relations for the pressure and pressure-derivative. From Eqn. 6.23 and 6.24,

$$P = R_u T ([F] + [\text{Ox}] + [\text{Pr}]),$$

or

$$P = P_0 \frac{T}{T_0}$$

and

$$\frac{dP}{dt} = \frac{P}{T} \frac{dT}{dt} = \frac{P_0}{T_0} \frac{dT}{dt}.$$

Before we can integrate our system of first-order ordinary differential equations (Eqns. I–IV), we need to determine initial conditions for each of the variables:  $[F]$ ,  $[Ox]$ ,  $[Pr]$ , and  $T$ . Assuming isentropic compression from bottom-dead-center to top-dead-center and a specific heat ratio of 1.4, the initial temperature and pressure can be found:

$$T_0 = T_{\text{TDC}} = T_{\text{BDC}} \left( \frac{V_{\text{BDC}}}{V_{\text{TDC}}} \right)^{\gamma-1} = 300 \left( \frac{10}{1} \right)^{1.4-1} = 753 \text{ K}$$

and

$$P_0 = P_{\text{TDC}} = P_{\text{BDC}} \left( \frac{V_{\text{BDC}}}{V_{\text{TDC}}} \right)^\gamma = (1) \left( \frac{10}{1} \right)^{1.4} = 25.12 \text{ atm.}$$

The initial concentrations can be found by employing the given stoichiometry. The oxidizer and fuel mole fractions are

$$\begin{aligned}\chi_{Ox,0} &= \frac{(A/F)_s/\Phi}{[(A/F)_s/\Phi] + 1}, \\ \chi_{Pr,0} &= 0, \\ \chi_{F,0} &= 1 - \chi_{Ox,0}.\end{aligned}$$


The molar concentrations,  $[X_i] = \chi_i P / (R_u T)$ , are

$$\begin{aligned}[Ox]_0 &= \left[ \frac{(A/F)_s/\Phi}{[(A/F)_s/\Phi] + 1} \right] \frac{P_0}{R_u T_0}, \\ [F]_0 &= \left[ 1 - \frac{(A/F)_s/\Phi}{[(A/F)_s/\Phi] + 1} \right] \frac{P_0}{R_u T_0}, \\ [Pr]_0 &= 0.\end{aligned}$$

Equations I–IV were integrated numerically, and the results are shown in Fig. 6.4. From this figure, we see that the temperature increases only about 200 K in the first 3 ms, while, thereafter, it rises to the adiabatic flame temperature (*c.* 3300 K) in less than 0.1 ms. This rapid temperature rise and concomitant rapid consumption of the fuel is characteristic of a **thermal explosion**, where the energy released and the temperature rise from reaction feeds back to produce ever-increasing reaction rates because of the  $[-E_a/R_u T]$  temperature dependence of the reaction rate. From Fig. 6.4, we also see the huge pressure derivative in the explosive stage, with a peak value of about  $1.9 \cdot 10^{13} \text{ Pa/s}$ .

### Comments

Although this model predicted the explosive combustion of the mixture after an initial period of slow combustion, as is observed in real knocking combustion, the single-step kinetics mechanism does not model the true behavior of autoigniting mixtures. In reality, the **induction period**, or **ignition delay**, is controlled by the formation of

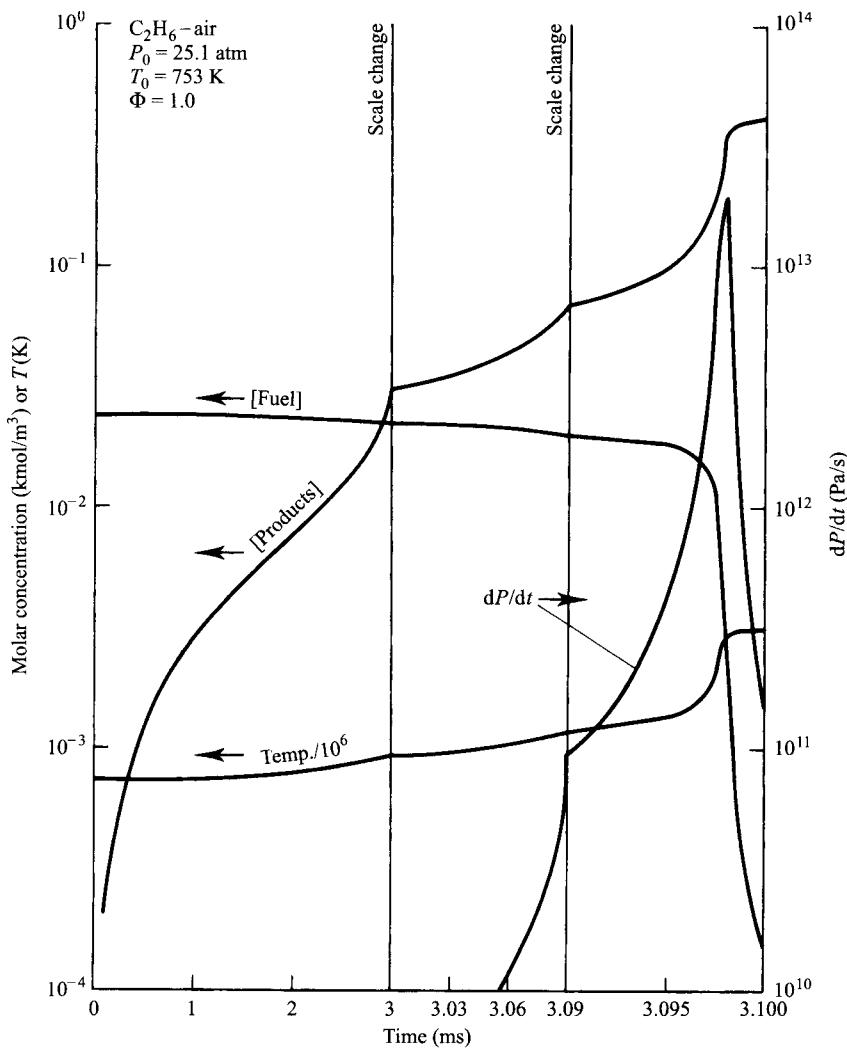

**Figure 6.4** Results for the constant-volume reactor model of Example 6.1. Temperature, fuel, and products concentrations, and rate-of-pressure rise ( $dP/dt$ ) are shown. Note the expansion of the time scale at 3 ms and again at 3.09 ms allows the explosion to be resolved.

intermediate species, which subsequently react. Recall the three basic stages of hydrocarbon oxidation presented in Chapter 5. To accurately model knock, a more detailed mechanism would be required. Ongoing research efforts aim at elucidating the details of the “low-temperature” kinetics of the induction period [3].

Control of engine knock has always been important to performance improvements, and, more recently, has received attention because of legislated requirements to remove lead-based antiknock compounds from gasoline.

## WELL-STIRRED REACTOR


The well-stirred, or perfectly stirred, reactor is an ideal reactor in which perfect mixing is achieved inside the control volume, as shown in Fig. 6.5. Experimental reactors employing high-velocity inlet jets approach this ideal and have been used to study many aspects of combustion, such as flame stabilization [5] and  $\text{NO}_x$  formation [6–8] (Fig. 6.6). Well-stirred reactors have also been used to obtain values for global reaction parameters [9]. The well-stirred reactor is sometimes called a Longwell reactor in recognition of the early work of Longwell and Weiss [5]. Chomiak [10] cites that Zeldovich [11] described the operation of the well-stirred reactor nearly a decade earlier.

### Application of Conservation Laws


To develop the theory of well-stirred reactors, we review the concept of mass conservation of individual species. In Chapter 3, we developed a species conservation equation for a differential control volume. We now write mass conservation for an arbitrary species  $i$ , for an integral control volume (cf. Fig. 6.5), as

$$\frac{dm_{i,cv}}{dt} = \dot{m}_i''' V + \dot{m}_{i,in} - \dot{m}_{i,out} \quad (6.27)$$

Rate at which mass of $i$ accumulates within control volume	Rate at which mass of $i$ is generated within control volume	Mass flow of $i$ into control volume	Mass flow of $i$ out of control volume
---	--	--------------------------------------	--

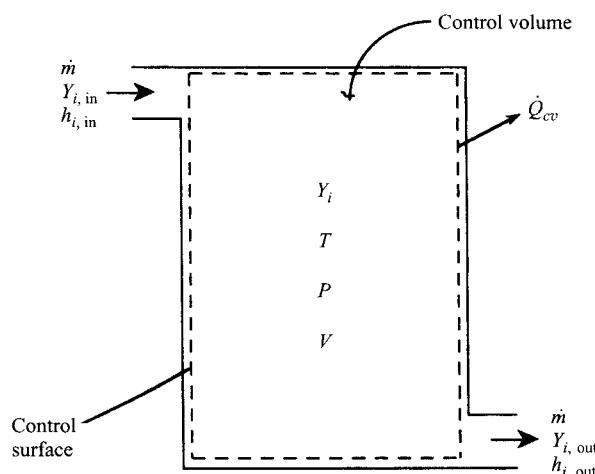

**Figure 6.5** Schematic of a well-stirred reactor.

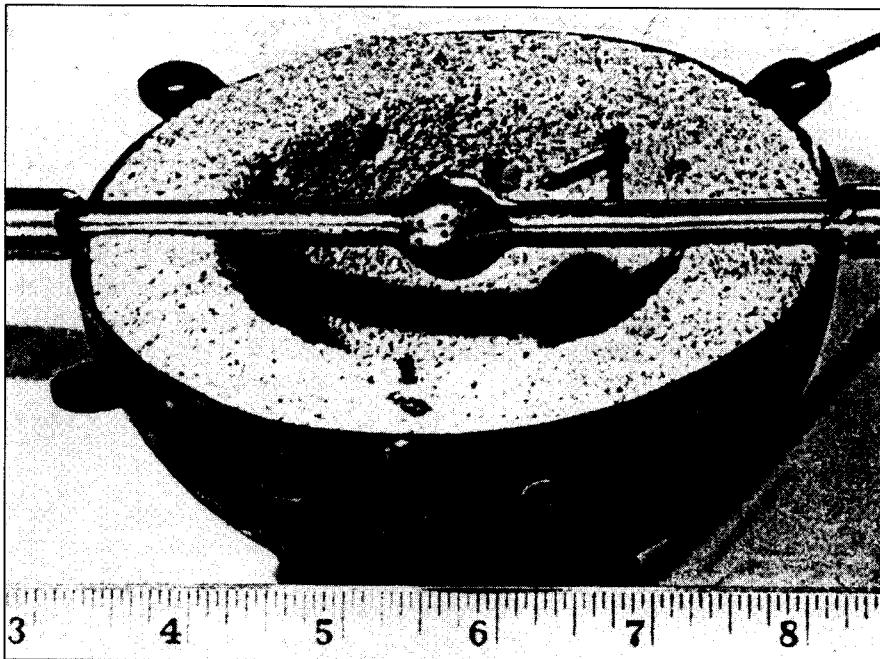

**Figure 6.6** Longwell reactor with one hemisphere removed. Fuel-air mixture enters through small holes in central hollow steel sphere, and products exit through larger holes in firebrick lining. Scale shown is in inches.

SOURCE: From Ref. [5]. Reprinted by permission, © The American Chemical Society.

What distinguishes Eqn. 6.27 from the overall continuity equation is the presence of the generation term  $\dot{m}_i''' V$ . This term arises because chemical reactions transform one species into another; hence, a positive generation rate indicates the formation of a species, while a negative generation rate signifies that the species is being destroyed during the reaction. In the combustion literature, this generation term is frequently referred to as a **source or sink**. When the appropriate form of Eqn. 6.27 is written for each of the species in the reactor ( $i = 1, 2, \dots, N$ ), the sum of these equations yields the familiar form of the continuity equation,

$$\frac{dm_{cv}}{dt} = \dot{m}_{in} - \dot{m}_{out}. \quad (6.28)$$

The mass generation rate of a species,  $\dot{m}_i'''$ , is easily related to the net production rate,  $\dot{\omega}_i$ , developed in Chapter 4:

$$\dot{m}_i''' = \dot{\omega}_i M W_i. \quad (6.29)$$

Ignoring any diffusional flux, the individual species mass flowrate is simply the product of the total mass flowrate and that species mass fraction, i.e.,

$$\dot{m}_i = \dot{m} Y_i. \quad (6.30)$$

When we apply Eqn. 6.27 to the well-stirred reactor, assuming steady-state operation, the time derivative of the left-hand-side disappears. With this assumption, and substituting Eqns. 6.29 and 6.30, Eqn. 6.27 becomes

$$\dot{\omega}_i MW_i V + \dot{m}(Y_{i,\text{in}} - Y_{i,\text{out}}) = 0 \quad \text{for } i = 1, 2, \dots, N \text{ species.} \quad (6.31)$$

Furthermore, we can identify the outlet mass fractions,  $Y_{i,\text{out}}$ , as being equal to the mass fractions within the reactor. Since the composition within the reactor is everywhere the same, the composition at the outlet of the control volume must be the same as in the interior. With this knowledge, the species production rates are of the form

$$\dot{\omega}_i = f([X_i]_{cv}, T) = f([X_i]_{\text{out}}, T), \quad (6.32)$$

where the mass fractions and molar concentrations are related by

$$Y_i = \frac{[X_i]MW_i}{\sum_{j=1}^N [X_j]MW_j}. \quad (6.33)$$

Equation 6.31, when written for each species, provides  $N$  equations with  $N + 1$  unknowns, with the assumed known parameters  $\dot{m}$  and  $V$ . An energy balance provides the additional equation needed for closure.

The steady-state, steady-flow conservation of energy equation (Eqn. 2.28) applied to the well-stirred reactor is

$$\dot{Q} = \dot{m}(h_{\text{out}} - h_{\text{in}}), \quad (6.34)$$

where we neglect changes in kinetic and potential energies. Rewriting Eqn. 6.34 in terms of the individual species, we obtain

$$\dot{Q} = \dot{m} \left( \sum_{i=1}^N Y_{i,\text{out}} h_i(T) - \sum_{i=1}^N Y_{i,\text{in}} h_i(T_{\text{in}}) \right), \quad (6.35)$$

where

$$h_i(T) = h_{f,i}^\vartheta + \int_{T_{\text{ref}}}^T c_{p,i} dT. \quad (6.36)$$

Solving for the temperature,  $T$ , and species mass fractions,  $Y_{i,\text{out}}$ , is quite similar to our computation of equilibrium flame temperatures in Chapter 2; however, now the product composition is constrained by chemical kinetics, rather than by chemical equilibrium.

It is common in the discussion of well-stirred reactors to define a mean **residence time** for the gases in the reactor:

$$t_R = \rho V / \dot{m} \quad (6.37)$$

where the mixture density is calculated from the ideal-gas law,

$$\rho = P M W_{\text{mix}} / R_u T. \quad (6.38)$$

The mixture molecular weight is readily calculated from a knowledge of the mixture composition. Appendix 6A provides relationships between  $M W_{\text{mix}}$  and  $Y_i$ ,  $\chi_i$ , and  $[X_i]$ .

### Reactor Model Summary

Because the well-stirred reactor is assumed to be operating at steady state, there is no time dependence in the mathematical model. The equations describing the reactor are a set of coupled nonlinear algebraic equations, rather than a system of ordinary differential equations (ODEs), which was the result for the previous two examples. Thus, the  $\dot{\omega}_i$  appearing in Eqn. 6.31 depends only on the  $Y_i$  (or  $[X_i]$ ) and temperature, not time. To solve this system of  $N + 1$  equations, Eqns. 6.31 and 6.35, the generalized Newton's method (Appendix E) can be employed. Depending on the chemical system under study, it may be difficult to achieve convergence with Newton's method and more sophisticated numerical techniques may be necessary [12].

#### Example 6.2

Develop a simplified model of a well-stirred reactor using the same simplified chemistry and thermodynamics used in Example 6.1 (equal and constant  $c_p$ s and  $M W$ s, and one-step global kinetics). Use the model to determine the blowout characteristics of a spherical (80-mm-diameter) reactor with premixed reactants ( $C_2H_6$ -air) entering at 298 K. Plot the equivalence ratio at blowout as a function of mass flowrate for  $\Phi \leq 1.0$ . Assume the reactor is adiabatic.

#### Solution

Noting that the molar concentrations relate to mass fractions as

$$[X_i] = \frac{P M W_{\text{mix}}}{R_u T} \frac{Y_i}{M W_i},$$

our global reaction rate,  $\dot{\omega}_F$ , can be expressed as

$$\dot{\omega}_F = \frac{d[F]}{dt} = -k_G \left( \frac{P M W_{\text{mix}}}{R_u T} \right)^{m+n} \left( \frac{Y_F}{M W_F} \right)^m \left( \frac{0.233 Y_{Ox}}{M W_{Ox}} \right)^n,$$

where  $m = 0.1$  and  $n = 1.65$ , the factor 0.233 is the mass fraction of  $O_2$  in the oxidizer (air), and the mixture molecular weight is given by

$$M W_{\text{mix}} = \left[ \frac{Y_F}{M W_F} + \frac{Y_{Ox}}{M W_{Ox}} + \frac{Y_{Pr}}{M W_{Pr}} \right]^{-1}.$$

The global rate coefficient is, as in Example 6.1,

$$k_G = 6.19 \cdot 10^9 \exp\left(\frac{-15,098}{T}\right).$$

We can now write species conservation equations for the fuel by applying Eqn. 6.31 to give

$$f_1 \equiv \dot{m}(Y_{F,\text{in}} - Y_F) - k_G M W_F V \left( \frac{P}{R_u T} \right)^{1.75} \frac{\left( \frac{Y_F}{M W_F} \right)^{0.1} \left( \frac{0.233 Y_{O_x}}{M W_{O_x}} \right)^{1.65}}{\left[ \frac{Y_F}{M W_F} + \frac{Y_{O_x}}{M W_{O_x}} + \frac{Y_{Pr}}{M W_{Pr}} \right]^{1.75}} = 0,$$

which further simplifies by applying our assumption of equal molecular weights and noting that  $\sum Y_i = 1$ :

$$f_1 \equiv \dot{m}(Y_{F,\text{in}} - Y_F) - k_G M W V \left( \frac{P}{R_u T} \right)^{1.75} \frac{Y_F^{0.1} (0.233 Y_{O_x})^{1.65}}{1} = 0. \quad (\text{I})$$

For the oxidizer (air),

$$f_2 \equiv \dot{m}(Y_{O_x,\text{in}} - Y_{O_x}) - (A/F)_s k_G M W V \left( \frac{P}{R_u T} \right)^{1.75} \frac{Y_{O_x}^{0.1} (0.233 Y_{O_x})^{1.65}}{1} = 0. \quad (\text{II})$$

For the product mass fraction, we write

$$f_3 \equiv 1 - Y_F - Y_{O_x} - Y_{Pr} = 0. \quad (\text{III})$$

Our final equation in the model results from the application of Eqn. 6.35:

$$\begin{aligned} f_4 \equiv & Y_F [h_{f,F}^o + c_{p,F}(T - T_{\text{ref}})] \\ & + Y_{O_x} [h_{f,O_x}^o + c_{p,O_x}(T - T_{\text{ref}})] \\ & + Y_{Pr} [h_{f,Pr}^o + c_{p,Pr}(T - T_{\text{ref}})] \\ & - Y_{F,\text{in}} [h_{f,F}^o + c_{p,F}(T_{\text{in}} - T_{\text{ref}})] \\ & - Y_{O_x,\text{in}} [h_{f,O_x}^o + c_{p,O_x}(T_{\text{in}} - T_{\text{ref}})] = 0, \end{aligned}$$


which also further simplifies by the assumptions of equal specific heats and  $h_{f,O_x}^o = h_{f,Pr}^o = 0$  to give

$$f_4 \equiv (Y_F - Y_{F,\text{in}}) h_{f,F}^o + c_p(T - T_{\text{in}}) = 0. \quad (\text{IV})$$

Equations I–IV constitute our reactor model and involve the four unknowns  $Y_F$ ,  $Y_{O_x}$ ,  $Y_{Pr}$ , and  $T$  and the parameter  $\dot{m}$ . To determine the reactor blowout characteristic, we solve the nonlinear algebraic equation set (I–IV) for a sufficiently small value of  $\dot{m}$  that allows combustion for a given equivalence ratio. We then increase  $\dot{m}$  until we fail to achieve a solution, or until the solution yields the input values. Figure 6.7 illustrates the results of such a procedure for  $\Phi = 1$ . The generalized Newton's method (Appendix E) was used to solve the equation set.

In Fig. 6.7, we see the decreasing conversion of fuel to products and decreased temperature as the flowrate increases to the blowout condition ( $\dot{m} > 0.193 \text{ kg/s}$ ). The ratio of the temperature at blowout to the adiabatic flame temperature is given by  $(1738 \text{ K}/2381 \text{ K} = 0.73)$ , which is in agreement with the results in Ref. [5].

Repeating the calculations at various equivalence ratios generates the blowout characteristics shown in Fig. 6.8. Note that the reactor is more easily blown out as the fuel-air mixture becomes leaner. The shape of the blowout curve in Fig. 6.8 is similar to those determined for experimental reactors and turbine combustors.

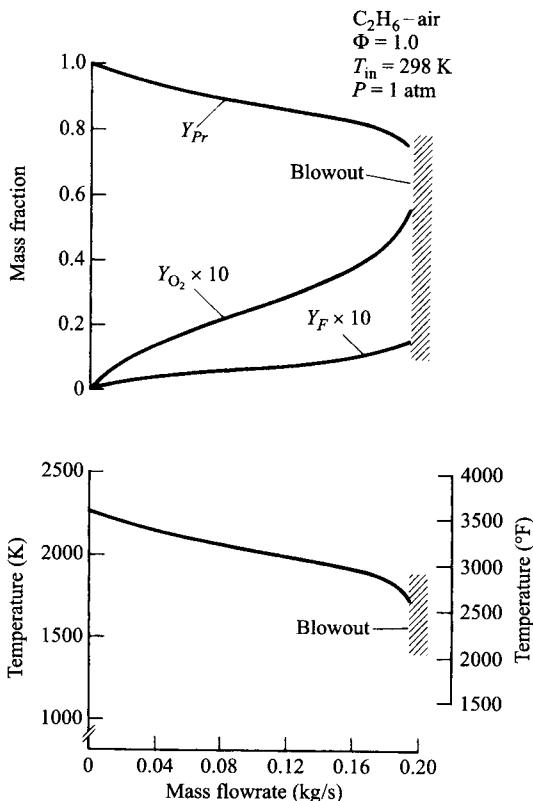


**Figure 6.7** Effect of flowrate on conditions inside a model well-stirred reactor. For flowrates greater than 0.193 kg/s, combustion cannot be sustained within the reactor (blowout).

#### Comment

Well-stirred-reactor theory and experiments were used in the 1950s as a guide to the development of high-intensity combustors for gas turbines and ramjets. This example provides a good illustration of how reactor theory can be applied to the problem of blowout. The blowout condition, plus some margin of safety, determines the maximum-load condition for continuous-flow combustors. Although well-stirred-reactor theory captures some of the characteristics of blowout, other theories also have been proposed to explain flameholding. We explore this topic further in Chapter 12.

#### Example 6.3

Use the following detailed kinetic mechanism for H<sub>2</sub> combustion to investigate the behavior of an adiabatic, well-stirred reactor operating at 1 atm. The reactant stream is a stoichiometric ( $\Phi = 1$ ) mixture of H<sub>2</sub> and air at 298 K, and the reactor volume is 67.4 cm<sup>3</sup>. Vary the residence time between the long-time (equilibrium) and the short-time (blowout) limits. Plot the temperature and the H<sub>2</sub>O, H<sub>2</sub>, OH, O<sub>2</sub>, O, and NO mole fractions versus residence time.

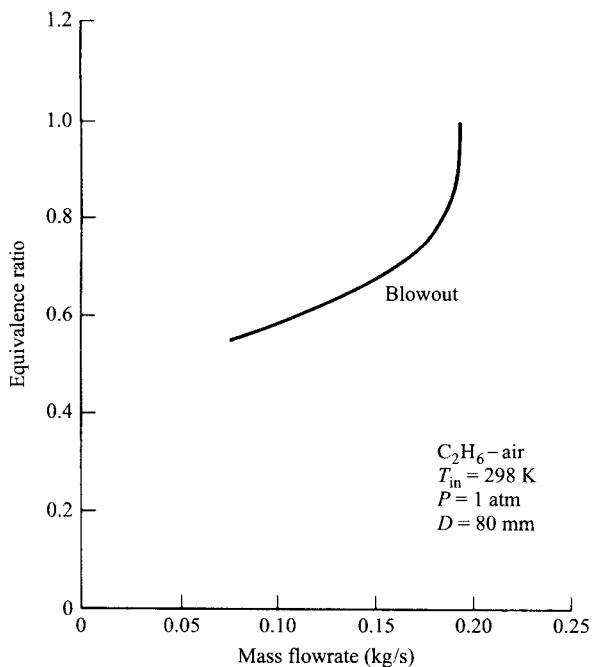

**Figure 6.8** Blowout characteristics of a model well-stirred reactor.

#### H-O-N mechanism

No.	Reaction	Forward Rate Coefficient <sup>a</sup>		
		A	b	E <sub>a</sub>
1 <sup>b</sup>	$H + O_2 + M \leftrightarrow HO_2 + M$	$3.61 \cdot 10^{17}$	-0.72	0
2	$H + H + M \leftrightarrow H_2 + M$	$1.0 \cdot 10^{18}$	-1.0	0
3	$H + H + H_2 \leftrightarrow H_2 + H_2$	$9.2 \cdot 10^{16}$	-0.6	0
4	$H + H + H_2O \leftrightarrow H_2 + H_2O$	$6.0 \cdot 10^{19}$	-1.25	0
5 <sup>c</sup>	$H + OH + M \leftrightarrow H_2O + M$	$1.6 \cdot 10^{22}$	-2.0	0
6 <sup>c</sup>	$H - O + M \leftrightarrow OH + M$	$6.2 \cdot 10^{16}$	-0.6	0
7	$O + O + M \leftrightarrow O_2 + M$	$1.89 \cdot 10^{13}$	0	-1,788
8	$H_2O_2 + M \leftrightarrow OH + OH + M$	$1.3 \cdot 10^{17}$	0	45,500
9	$H_2 + O_2 \leftrightarrow OH + OH$	$1.7 \cdot 10^{13}$	0	47,780
10	$OH + H_2 \leftrightarrow H_2O + H$	$1.17 \cdot 10^9$	1.3	3,626
11	$O + OH \leftrightarrow O_2 + H$	$3.61 \cdot 10^{14}$	-0.5	0
12	$O + H_2 \leftrightarrow OH + H$	$5.06 \cdot 10^4$	2.67	6,290
13	$OH + HO_2 \leftrightarrow H_2O + O_2$	$7.5 \cdot 10^{12}$	0	0
14	$H + HO_2 \leftrightarrow OH + OH$	$1.4 \cdot 10^{14}$	0	1,073
15	$O + HO_2 \leftrightarrow O_2 + OH$	$1.4 \cdot 10^{13}$	0	1,073
16	$OH + OH \leftrightarrow O + H_2O$	$6.0 \cdot 10^8$	1.3	0
17	$H + HO_2 \leftrightarrow H_2 + O_2$	$1.25 \cdot 10^{13}$	0	0
18	$HO_2 + HO_2 \leftrightarrow H_2O_2 + O_2$	$2.0 \cdot 10^{12}$	0	0
19	$H_2O_2 + H \leftrightarrow HO_2 + H_2$	$1.6 \cdot 10^{12}$	0	3,800

**H-O-N mechanism (continued)**

No.	Reaction	Forward Rate Coefficient <sup>a</sup>		
		A	b	E <sub>a</sub>
20	$\text{H}_2\text{O}_2 + \text{OH} \leftrightarrow \text{H}_2\text{O} + \text{HO}_2$	$1.0 \cdot 10^{13}$	0	1,800
21	$\text{O} + \text{N}_2 \leftrightarrow \text{NO} + \text{N}$	$1.4 \cdot 10^{14}$	0	75,800
22	$\text{N} + \text{O}_2 \leftrightarrow \text{NO} + \text{O}$	$6.40 \cdot 10^9$	1.0	6,280
23	$\text{OH} + \text{N} \leftrightarrow \text{NO} + \text{H}$	$4.0 \cdot 10^{13}$	0	0

<sup>a</sup>The forward rate coefficient is of the form  $k_f = AT^b \exp(-E_a/R_u T)$ , where A is expressed in CGS units (cm, s, K, gmol), b is dimensionless with T in Kelvins, and E<sub>a</sub> is given in cal/gmol.

<sup>b</sup>When H<sub>2</sub>O and H<sub>2</sub> act as collision partners M, the rate coefficient is multiplied by 18.6 and 2.86, respectively.

<sup>c</sup>When H<sub>2</sub>O acts as a collision partner M, the rate coefficient is multiplied by 5.

**Solution**

Although we will use CHEMKIN software to solve this problem, it is instructive to outline the solution steps as if we were solving the problem from scratch. Examination of the chemical mechanism above shows that there are 11 species involved: H<sub>2</sub>, H, O<sub>2</sub>, O, OH, HO<sub>2</sub>, H<sub>2</sub>O<sub>2</sub>, H<sub>2</sub>O, N<sub>2</sub>, N, and NO.

Thus, we need to write 11 equations of the form of Eqn. 6.31 (or 10 equations of this form if we choose to invoke  $\sum Y_{i,\text{out}} = 1$ ). The  $Y_{i,\text{in}}$  values are readily calculated from the given stoichiometry, assuming that the only species present in the inlet stream are H<sub>2</sub>, O<sub>2</sub>, and N<sub>2</sub>. For  $\Phi = 1$ ,  $a = 0.5$  in the combustion reaction,  $\text{H}_2 + a(\text{O}_2 + 3.76\text{N}_2) \rightarrow \text{H}_2\text{O} + 3.76a\text{N}_2$ ; thus,

$$\begin{aligned} \chi_{\text{H}_2,\text{in}} &= 1/3.38 = 0.2959, \\ \chi_{\text{O}_2,\text{in}} &= 0.5/3.38 = 0.1479, \\ \chi_{\text{N}_2,\text{in}} &= 1.88/3.38 = 0.5562, \\ \chi_{\text{H},\text{in}} = \chi_{\text{O}_2,\text{in}} = \chi_{\text{OH},\text{in}} &= \dots = 0. \end{aligned}$$

Using these mole fractions, the reactant mixture molecular weight,  $\sum \chi_i MW_i$ , is calculated to be 20.91. The corresponding mass fractions,  $\chi_i MW_i / MW_{\text{mix}}$ , are

$$\begin{aligned} Y_{\text{H}_2,\text{in}} &= 0.0285, \\ Y_{\text{O}_2,\text{in}} &= 0.2263, \\ Y_{\text{N}_2,\text{in}} &= 0.7451, \\ Y_{\text{H},\text{in}} = Y_{\text{O},\text{in}} = Y_{\text{OH},\text{in}} &= \dots = 0. \end{aligned}$$

Choosing the equation for O atoms to illustrate one of the equations in the set (Eqn. 6.31), we write

$$\dot{\omega}_{\text{O}} MW_{\text{O}} V - \frac{PMW_{\text{mix}} V}{R_u T t_R} Y_{\text{O},\text{out}} = 0,$$

where Eqns. 6.37 and 6.38 have been combined to eliminate  $\dot{m}$ , and


$$\begin{aligned}
\dot{\omega}_O = & -k_{6f}[H][O](P/(R_u T) + 4[H_2O]) \\
& + k_{6r}[O_2](P/(R_u T) + 4[H_2O]) \\
& - k_{7f}[O]^2 P/(R_u T) + 2k_{7r}[O_2]P/(R_u T) \\
& - k_{11f}[O][OH] + k_{11r}[O_2][H] - k_{12f}[O][H_2] \\
& + k_{12r}[OH][H] - k_{15f}[O][HO_2] \\
& + k_{15r}[O_2][OH] + k_{16f}[OH]^2 - k_{16r}[O][H_2O].
\end{aligned}$$

In the above expression, note that  $P/(R_u T)$  has been substituted for  $[M]$  and how the enhanced third-body efficiency for  $H_2O$  in reaction 6 has been treated. Note also that outlet quantities are implied for all  $[X_i]$ s. Since both  $Y_{O,\text{out}}$  and  $[O]$  appear in the O-atom conservation expression, Eqn. 6.33 is needed to express one in terms of the other. As expanding this expression is straightforward, this step is left to the reader. Again, Eqn. 6.33 would be employed for each of the 11 species. Closure is obtained to our system of 23 unknowns (11  $[X_i]$ s, 11  $Y_{i,\text{out}}$ s, and  $T_{ad}$ ) by applying a single conservation-of-energy expression, Eqn. 6.35:


$$\begin{aligned}
Y_{H_2,\text{in}}h_{H_2}(298) + Y_{O_2,\text{in}}h_{O_2}(298) + Y_{N_2,\text{in}}h_{N_2}(298) \\
= Y_{H_2}h_{H_2}(T_{ad}) + Y_Hh_H(T_{ad}) + Y_{O_2}h_{O_2}(T_{ad}) \\
+ Y_{OH}h_{OH}(T_{ad}) + \dots + Y_{NO}h_{NO}(T_{ad}).
\end{aligned}$$

Of course, a thermodynamic database is needed to relate the  $h_i$  values and  $T_{ad}$ .

The above framework for our solution is embodied in the Fortran computer code PSR [12]. This code, together with the subroutines contained in the CHEMKIN library [16], is used to generate numerical results for our particular problem. Input quantities include the chemical mechanism, reactant-stream constituents, equivalence ratio, inlet

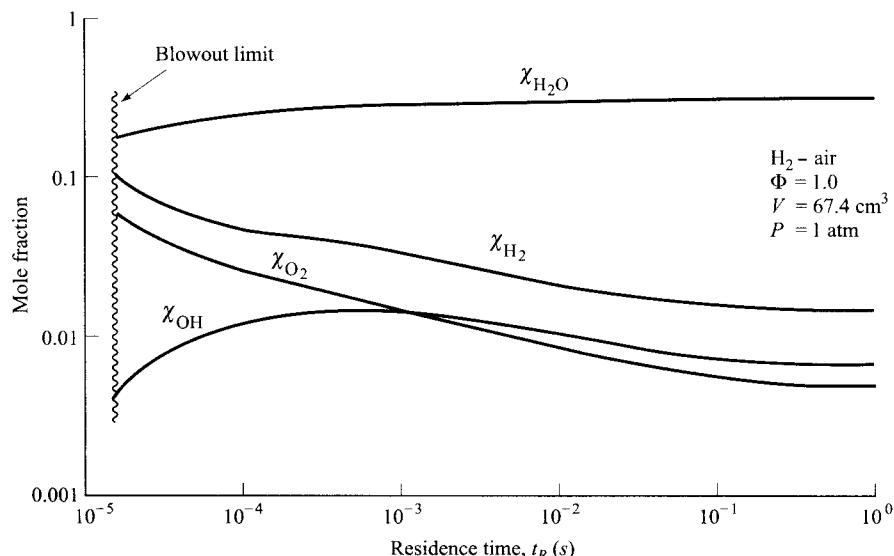

**Figure 6.9** Predicted mole fractions of  $H_2O$ ,  $H_2$ ,  $O_2$ , and  $OH$  in a well-stirred reactor for conditions between blowout ( $t_R \approx 1.75 \cdot 10^{-5} \text{ s}$ ) and near equilibrium ( $t_R = 1 \text{ s}$ ).

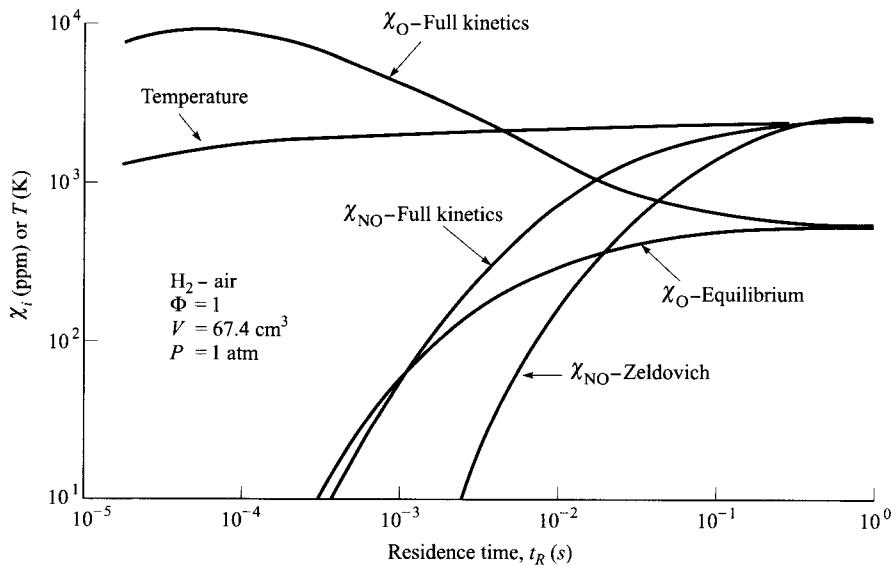

**Figure 6.10** Predicted temperatures and O-atom and NO mole fractions in a well-stirred reactor for conditions between blowout ( $t_R \approx 1.75 \cdot 10^{-5}$  s) and near equilibrium ( $t_R = 1$  s). Also shown are O-atom concentrations associated with equilibrium at the kinetically derived temperature together with NO concentrations based on these equilibrium O atoms.



temperature, and reactor volume and pressure. The residence time is also an input variable. With some experimentation, a residence time of 1 s was found to yield essentially equilibrium conditions within the reactor, while blowout occurs near  $t_R = 1.7 \cdot 10^{-5}$  s. Figures 6.9 and 6.10 show predicted mole fractions and gas temperatures within this range of residence times. As expected, the adiabatic temperature and H<sub>2</sub>O product concentration drop as residence times become shorter; conversely, the H<sub>2</sub> and O<sub>2</sub> concentrations rise. The behavior of the O and OH radicals is more complicated, with maxima exhibited between the two residence-time limits. The NO concentrations fall rapidly as residence times fall below  $10^{-2}$  s.

#### Comment

This example provides a concrete illustration of how relatively complex chemistry couples with a simple thermodynamic process. A similar analysis was used to generate the reaction pathway diagrams for CH<sub>4</sub> combustion shown in Chapter 5.

#### Example 6.4

Explore the degree to which nonequilibrium O atoms affect NO formation in the well-stirred reactor of Example 6.3. Assume O atoms, O<sub>2</sub>, and N<sub>2</sub> are at their equilibrium values for the reactor temperatures predicted by the full kinetics. Use the following corresponding temperatures and residence times from Example 6.3:  $T_{ad} = 2378$  K for  $t_R = 1$  s,  $T_{ad} = 2366.3$  K for  $t_R = 0.1$  s, and  $T_{ad} = 2298.5$  K for  $t_R = 0.01$  s. Also assume that N atoms are in steady state and that NO formation is controlled by the simple Zeldovich chain-reaction pair (Chapter 5, Eqns. N.1 and N.2):

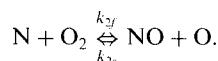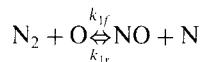**Solution**

We first formulate the simplified reactor model. Since the temperature and equilibrium values for  $\chi_{\text{O}}$ ,  $\chi_{\text{O}_2}$ , and  $\chi_{\text{N}_2}$  will be inputs to the model, we need only write the NO species conservation equation (Eqn. 6.31):

$$\dot{\omega}_{\text{NO}} M W_{\text{NO}} V - \dot{m} Y_{\text{NO}} = 0,$$

where  $Y_{\text{NO}}$  is the NO mass fraction within the reactor. Rearranging the above and converting  $Y_{\text{NO}}$  to a molar concentration basis (Eqn. 6A.3) yields

$$\dot{\omega}_{\text{NO}} - \frac{\dot{m}}{\rho V} [\text{NO}] = 0,$$

or, more simply,

$$\dot{\omega}_{\text{NO}} - [\text{NO}] / t_R = 0. \quad (\text{I})$$

We now need only to apply the simple Zeldovich mechanism to express  $\dot{\omega}_{\text{NO}}$  in Eqn. I in terms of presumably known quantities ( $T$ ,  $[\text{O}_2]_e$ ,  $[\text{O}]_e$ ) and the unknown  $[\text{NO}]$ . The result is a complex transcendental equation with  $[\text{NO}]$  as the only unknown variable. Accordingly,

$$\dot{\omega}_{\text{NO}} = k_{1f} [\text{O}]_e [\text{N}_2]_e - k_{2r} [\text{NO}] [\text{O}]_e + [\text{N}]_{ss} (k_{2f} [\text{O}_2]_e - k_{1r} [\text{NO}]). \quad (\text{II})$$

Applying the steady-state approximation for the N atom, we obtain

$$[\text{N}]_{ss} = \frac{k_{1f} [\text{O}]_e [\text{N}_2]_e + k_{2r} [\text{NO}] [\text{O}]_e}{k_{1r} [\text{NO}] + k_{2f} [\text{O}_2]_e}. \quad (\text{III})$$

Substituting this result for  $[\text{N}]_{ss}$  back into our expression for  $\dot{\omega}_{\text{NO}}$  yields

$$\dot{\omega}_{\text{NO}} = k_{1f} [\text{O}]_e [\text{N}_2]_e (Z + 1) + k_{2r} [\text{NO}] [\text{O}]_e (Z - 1), \quad (\text{IV})$$

where

$$Z = \frac{k_{2f} [\text{O}_2]_e - k_{1r} [\text{NO}]}{k_{1r} [\text{NO}] + k_{2f} [\text{O}_2]_e}.$$

Before we can solve Eqn. I for  $[\text{NO}]$ , values for  $[\text{O}_2]_e$ ,  $[\text{O}]_e$ , and  $[\text{N}_2]_e$  are needed. Since several equilibrium expressions are involved, finding these values is nontrivial; however, we can make this job simple by employing the code TPEQUIL (Appendix F). Although the code is set up to deal with fuels of the type  $\text{C}_x\text{H}_y\text{O}_z$ , neither  $x$  nor  $y$  may be identically zero, so dealing with pure  $\text{H}_2$  does not appear possible. We can still utilize the code, however, by setting  $x$  equal to unity and  $y$  to some very large integer, say  $10^6$ . The small amount of carbon allows the code to avoid division by zero, without introducing any significant error in the evaluation of the species mole fractions. For example, CO and  $\text{CO}_2$  concentrations are less than 1 ppm for all calculations performed for this example. The following table shows the equilibrium O,  $\text{O}_2$ , and  $\text{N}_2$  mole fractions calculated using TPEQUIL:

$t_R$ (s)	$T_{ad}$ (K)	$\chi_{O,e}$	$\chi_{O_2,e}$	$\chi_{N_2,e}$
1.0	2,378	$5.28 \cdot 10^{-4}$	$4.78 \cdot 10^{-3}$	0.6445
0.1	2,366.3	$4.86 \cdot 10^{-4}$	$4.60 \cdot 10^{-3}$	0.6449
0.01	2,298.5	$2.95 \cdot 10^{-4}$	$3.65 \cdot 10^{-3}$	0.6468

Equation I was solved using a Newton–Raphson algorithm, i.e.,  $[NO]^{new} = [NO]^{old} - f([NO]^{old})/f'([NO]^{old})$ , where  $f([NO]) (= 0)$  represents Eqn. I, implemented by spreadsheet software. Within the spreadsheet, the input mole fractions were converted to molar concentrations, for example,  $[O]_e = \chi_{O,e}P/(R_uT)$ , and rate coefficients were evaluated from the following expressions presented in Chapter 5:

$$\begin{aligned}k_{1f} &= 1.8 \cdot 10^{11} \exp[-38,370/T(\text{K})], \\k_{1r} &= 3.8 \cdot 10^{10} \exp[-425/T(\text{K})], \\k_{2f} &= 1.8 \cdot 10^7 T(\text{K}) \exp[-4680/T(\text{K})], \\k_{2r} &= 3.8 \cdot 10^6 T(\text{K}) \exp[-20,820/T(\text{K})].\end{aligned}$$

The results of this iterative solution for the three residence times are shown below, along with the full-chemistry results generated in Example 6.3 for comparison. These results also are plotted in Fig. 6.10.

$t_R$ (s)	Equilibrium O-atom Assumption		Full Chemistry	
	$\chi_{O,e}$ (ppm)	$\chi_{NO}$ (ppm)	$\chi_O$ (ppm)	$\chi_{NO}$ (ppm)
1.0	528	2,473	549	2,459
0.1	486	1,403	665	2,044
0.01	295	162	1,419	744

### Comments

Figure 6.10 shows the dramatic departure of the kinetically derived O-atom concentration from the corresponding equilibrium values as residence times are reduced below 1 s. This is a result of there being insufficient time for the recombination reactions to form stable species from the radicals. In turn, the superequilibrium O-atom concentration results in greater NO production; for example, at  $t_R = 0.01$  s, the NO concentration predicted by the full kinetics is nearly five times that based on the assumption of equilibrium O atoms.

## PLUG-FLOW REACTOR

### Assumptions

A plug-flow reactor represents an ideal reactor that has the following attributes:

1. Steady-state, steady flow.

2. No mixing in the axial direction. This implies that molecular and/or turbulent mass diffusion is negligible in the flow direction.
3. Uniform properties in the direction perpendicular to the flow, i.e., one-dimensional flow. This means that at any cross section, a single velocity, temperature, composition, etc., completely characterize the flow.
4. Ideal frictionless flow. This assumption allows the use of the simple Euler equation to relate pressure and velocity.
5. Ideal-gas behavior. This assumption allows simple state relations to be employed to relate  $T$ ,  $P$ ,  $\rho$ ,  $Y_i$ , and  $h$ .

### Application of Conservation Laws

Our goal here is to develop a system of first-order ODEs whose solution describes the reactor flow properties, including composition, as functions of distance,  $x$ . The geometry and coordinate definition are schematically illustrated at the top of Fig. 6.11. Table 6.1 provides an overview of the analysis listing the physical and chemical principles that generate  $6 + 2N$  equations and a like number of unknown variables and functions. The number of unknowns could be easily reduced by  $N$ , by recognizing that the species production rates,  $\dot{\omega}_i$ , can be immediately expressed in terms of the mass fractions (see Appendix 6A) without the need to explicitly involve the  $\dot{\omega}_i$ . Explicitly retaining them, however, clearly reminds us of the importance of chemical reactions in our analysis. Although not shown in Table 6.1, the following parameters are treated as known quantities, or functions, and are necessary to obtain a solution:  $\dot{m}$ ,  $k_i(T)$ ,  $A(x)$ , and  $\dot{Q}''(x)$ . The area function  $A(x)$  defines the cross-sectional area of the reactor as a function of  $x$ ; thus, our model reactor could represent a nozzle, or a diffuser, or any particular one-dimensional geometry, and not just a constant cross-sectional device as suggested by the top sketch in Fig. 6.11. The heat flux function  $\dot{Q}''(x)$ , although explicitly indicating that the wall heat flux is known, is also intended to indicate that the heat flux may be calculated from a given wall-temperature distribution.


With reference to the fluxes and control volumes illustrated in Fig. 6.11, we can easily derive the following conservation relationships:

#### Mass Conservation

$$\frac{d(\rho v_x A)}{dx} = 0. \quad (6.39)$$

#### $x$ -Momentum Conservation

$$\frac{dP}{dx} + \rho v_x \frac{dv_x}{dx} = 0. \quad (6.40)$$

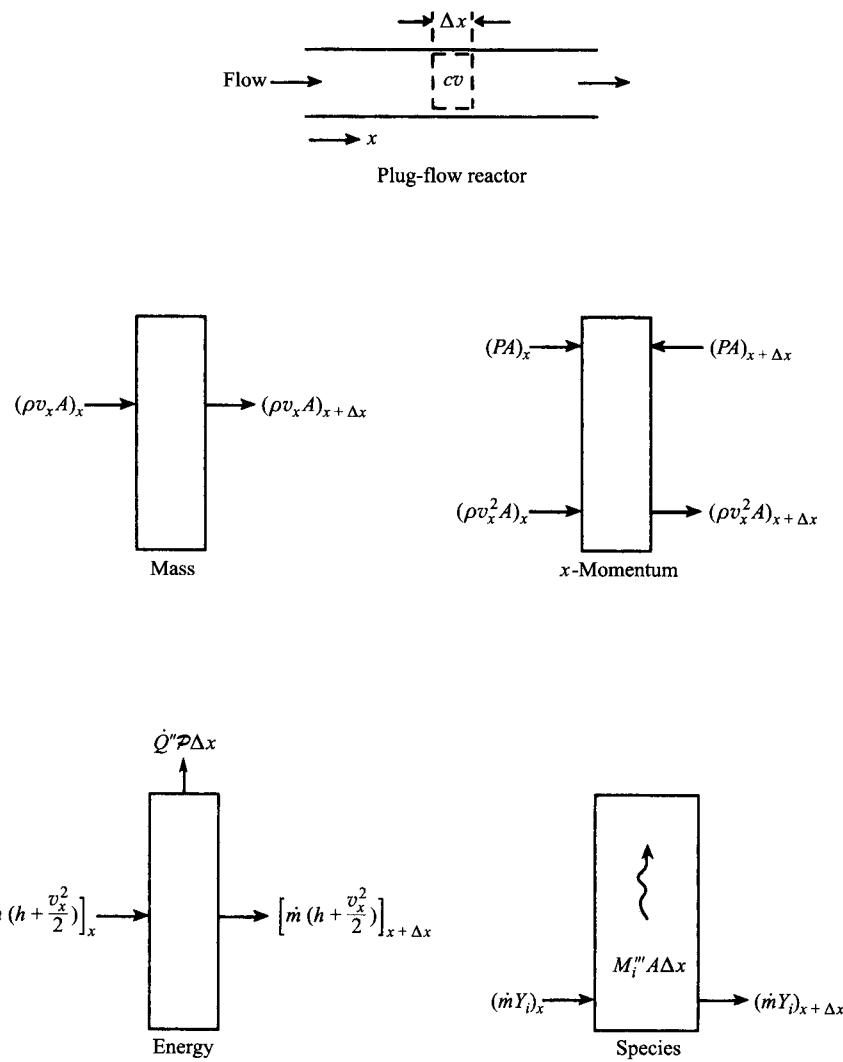

**Figure 6.11** Control volumes showing fluxes of mass,  $x$ -momentum, energy, and species for a plug-flow reactor.

**Table 6.1 Overview of relationships and variables for plug-flow reactor with  $N$  species**

Source of Equations	Number of Equations	Variables or Derivatives Involved
Fundamental conservation principles: mass, $x$ -momentum, energy, species	$3 + N$	$\frac{d\rho}{dx}, \frac{dv_x}{dx}, \frac{dP}{dx}, \frac{dh}{dx}, \frac{dY_i}{dx} (i = 1, 2, \dots, N), \dot{\omega}_i (i = 1, 2, \dots, N)$
Mass action laws	$N$	$\dot{\omega}_i (i = 1, 2, \dots, N)$
Equation of state	1	$\frac{d\rho}{dx}, \frac{dP}{dx}, \frac{dT}{dx}, \frac{dMW_{\text{mix}}}{dx}$
Calorific equation of state	1	$\frac{dh}{dx}, \frac{dT}{dx}, \frac{dY_i}{dx} (i = 1, 2, \dots, N)$
Definition of mixture molecular weight	1	$\frac{dMW_{\text{mix}}}{dx}, \frac{dY_i}{dx} (i = 1, 2, \dots, N)$

**Energy Conservation**

$$\frac{d(h + v_x^2/2)}{dx} + \frac{\dot{Q}''P}{\dot{m}} = 0. \quad (6.41)$$

**Species Conservation**

$$\frac{dY_i}{dx} - \frac{\dot{\omega}_i MW_i}{\rho v_x} = 0. \quad (6.42)$$

The symbols  $v_x$  and  $P$  represent the axial velocity and local perimeter of the reactor, respectively. All of the other quantities have been defined previously. The derivation of these equations is left as an exercise for the reader (cf. problem 6.1).

To obtain a useful form of the equations where the individual variable derivatives can be isolated, Eqns. 6.39 and 6.41 can be expanded and rearranged to yield the following:

$$\frac{1}{\rho} \frac{d\rho}{dx} + \frac{1}{v_x} \frac{dv_x}{dx} + \frac{1}{A} \frac{dA}{dx} = 0 \quad (6.43)$$

$$\frac{dh}{dx} + v_x \frac{dv_x}{dx} + \frac{\dot{Q}''P}{\dot{m}} = 0. \quad (6.44)$$

The  $\dot{\omega}_i$ s appearing in Eqn. 6.42 can be expressed using Eqn. 4.31, with the  $[X_i]$ s transformed to  $Y_i$ s.

The functional relationship of the ideal-gas calorific equation of state,

$$h = h(T, Y_i), \quad (6.45)$$

can be exploited using the chain rule to relate  $dh/dx$  and  $dT/dx$ , yielding

$$\frac{dh}{dx} = c_p \frac{dT}{dx} + \sum_{i=1}^N h_i \frac{dY_i}{dx} \quad (6.46)$$

To complete our mathematical description of the plug-flow reactor, we differentiate the ideal-gas equation of state,

$$P = \rho R_u T / MW_{\text{mix}}, \quad (6.47)$$

to yield

$$\frac{1}{P} \frac{dP}{dx} = \frac{1}{\rho} \frac{d\rho}{dx} + \frac{1}{T} \frac{dT}{dx} - \frac{1}{MW_{\text{mix}}} \frac{dMW_{\text{mix}}}{dx}, \quad (6.48)$$

where the mixture molecular weight derivative follows simply from its definition expressed in terms of species mass fractions, i.e.,

$$MW_{\text{mix}} = \left[ \sum_{i=1}^N Y_i / MW_i \right]^{-1} \quad (6.49)$$

and

$$\frac{dMW_{\text{mix}}}{dx} = -MW_{\text{mix}}^2 \sum_{i=1}^N \frac{1}{MW_i} \frac{dY_i}{dx}. \quad (6.50)$$

Equations 6.40, 6.42, 6.43, 6.44, 6.46, 6.48, and 6.49 contain in a linear fashion the derivatives  $d\rho/dx$ ,  $dv_x/dx$ ,  $dP/dx$ ,  $dh/dx$ ,  $dY_i/dx$  ( $i = 1, 2, \dots, N$ ),  $dT/dx$ , and  $dMW_{\text{mix}}/dx$ . The number of equations can be reduced by eliminating some of the derivatives by substitution. One logical choice is to retain the derivatives  $dT/dx$ ,  $d\rho/dx$ , and  $dY_i/dx$  ( $i = 1, 2, \dots, N$ ). With this choice, the following equations constitute the system of ODEs that must be integrated starting from an appropriate set of initial conditions:

$$\frac{d\rho}{dx} = \frac{\left(1 - \frac{R_u}{c_p MW_{\text{mix}}}\right) \rho^2 v_x^2 \left(\frac{1}{A} \frac{dA}{dx}\right) + \frac{\rho R_u}{v_x c_p MW_{\text{mix}}} \sum_{i=1}^N MW_i \dot{\omega}_i \left(h_i - \frac{MW_{\text{mix}}}{MW_i} c_p T\right)}{P \left(1 + \frac{v_x^2}{c_p T}\right) - \rho v_x^2} \quad (6.51)$$

$$\frac{dT}{dx} = \frac{v_x^2}{\rho c_p} \frac{d\rho}{dx} + \frac{v_x^2}{c_p} \left(\frac{1}{A} \frac{dA}{dx}\right) - \frac{1}{v_x \rho c_p} \sum_{i=1}^N h_i \dot{\omega}_i MW_i, \quad (6.52)$$

$$\frac{dY_i}{dx} = \frac{\omega_i MW_i}{\rho v_x}. \quad (6.53)$$

Note that in Eqns. 6.41 and 6.52,  $\dot{Q}''$  has been set to zero for simplicity.

A residence time,  $t_R$ , can also be defined, and one more equation added to the set:

$$\frac{dt_R}{dx} = \frac{1}{v_x}. \quad (6.54)$$

Initial conditions necessary to solve Eqns. 6.51–6.54 are

$$T(0) = T_0, \quad (6.55a)$$

$$\rho(0) = \rho_0, \quad (6.55b)$$


$$Y_i(0) = Y_{i0} \quad i = 1, 2, \dots, N, \quad (6.55c)$$

$$t_R(0) = 0. \quad (6.55d)$$

In summary, we see that the mathematical description of the plug-flow reactor is similar to the constant-pressure and constant-volume reactor models in that all three result in a coupled set of ordinary differential equations; the plug-flow reactor variables, however, are expressed as functions of a spatial coordinate rather than time.

## APPLICATIONS TO COMBUSTION SYSTEM MODELING

Various combinations of well-stirred reactors and plug-flow reactors are frequently used to approximate more complex combustion systems. A simple illustration of this approach is shown in Fig. 6.12. Here we see a gas-turbine combustor modeled as two well-stirred reactors and a plug-flow reactor, all in series, with provisions for some recycle (recirculation) of combustion products in the first reactor, which represents the primary zone (see Fig. 10.4a in Chapter 10). The secondary zone and dilution zones are modeled by the second well-stirred reactor and the plug-flow reactor, respectively. To accurately model a real combustion device, many reactors may be required, with judicious selection of the proportioning of the various flows into each reactor. This

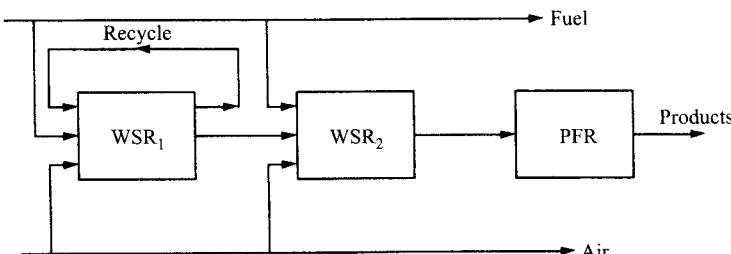

**Figure 6.12** Conceptual model of gas-turbine combustor using a combination of well-stirred and plug-flow reactors.

| SOURCE: After Ref. [13].

approach relies much on the art and craft of an experienced designer to achieve useful results. Reactor modeling approaches are often used to complement more sophisticated finite-difference or finite-element numerical models of turbine combustors, furnaces, and boilers, etc.

---

## SUMMARY

In this chapter, four model reactors were explored: a constant-pressure reactor, a constant-volume reactor, a well-stirred reactor, and a plug-flow reactor. A description of each of these systems was developed from fundamental conservation principles and linked to chemical kinetics. You should be familiar with these principles and be able to apply them to the model reactors. A numerical example of a constant-volume reactor was developed employing three species (fuel, oxidizer, and products) with one-step global kinetics and simplified thermochemistry. With the model, some characteristics of thermal explosions were elucidated and related to autoignition (knock) in reciprocating engines. As a second example, an equally simple numerical model of a well-stirred reactor was developed. This model was exercised to demonstrate the concept of blowout and the dependence of the blowout mass flowrate on equivalence ratio. With a firm grasp of these simple models, you should be in a good position to understand more complex and more rigorous analyses of combustion systems. Nevertheless, these simple models frequently are useful as a first step in analyzing many real devices.

---

## NOMENCLATURE

$A$	Area ( $\text{m}^2$ )
$A/F$	Mass air-fuel ratio ( $\text{kg/kg}$ )
$c_p, \bar{c}_p$	Constant-pressure specific heat ( $\text{J/kg-K}$ or $\text{J/kmol-K}$ )
$c_v, \bar{c}_v$	Constant-volume specific heat ( $\text{J/kg-K}$ or $\text{J/kmol-K}$ )
$h_f^o, h_f^o$	Enthalpy of formation ( $\text{J/kg}$ or $\text{J/kmol}$ )
$h, h, H$	Enthalpy ( $\text{J/kmol}$ or $\text{J/kg}$ or $\text{J}$ )
$k$	Chemical kinetic rate coefficient (various units)
$m$	Mass ( $\text{kg}$ ) or reaction order with respect to fuel
$\dot{m}$	Mass flowrate ( $\text{kg/s}$ )
$\dot{m}''$	Volumetric mass production rate ( $\text{kg/s-m}^3$ )
$MW$	Molecular weight ( $\text{kg/kmol}$ )
$n$	Reaction order with respect to oxygen
$N$	Number of moles
$P$	Pressure ( $\text{Pa}$ )
$P$	Perimeter ( $\text{m}$ )
$\dot{Q}$	Heat transfer rate ( $\text{W}$ )

$\dot{Q}''$	Heat flux ( $\text{W}/\text{m}^2$ )
$R_u$	Universal gas constant ( $\text{J}/\text{kmol}\cdot\text{K}$ )
$t$	Time (s)
$T$	Temperature (K)
$u, \bar{u}, U$	Internal energy ( $\text{J}/\text{kmol}$ or $\text{J}/\text{kg}$ or J)
$v$	Velocity (m/s)
$v$	Specific volume ( $\text{m}^3/\text{kg}$ )
$V$	Volume ( $\text{m}^3$ )
$\mathbf{V}$	Velocity vector (m/s)
$\dot{W}$	Power (W)
$x$	Distance (m)
$Y$	Mass fraction (kg/kg)

### Greek Symbols

$\gamma$	Specific heat ratio, $c_p/c_v$
$\rho$	Density ( $\text{kg}/\text{m}^3$ )
$\Phi$	Equivalence ratio
$\chi$	Mole fraction (kmol/kmol)
$\dot{\omega}$	Species production rate ( $\text{kmol}/\text{s}\cdot\text{m}^3$ )

### Subscripts

$ad$	Adiabatic
BDC	Bottom-dead-center
$cv$	Control volume
$e$	Equilibrium
$f$	Forward
$F$	Fuel
$G$	Global
$i$	$i$ th species
in	Inlet condition
mix	Mixture
out	Outlet condition
$Ox$	Oxidizer
$Pr$	Product
$r$	Reverse
ref	Reference state
$R$	Residence
$s$	Stoichiometric
$ss$	Steady state
TDC	Top-dead-center
$x$	$x$ -Direction
0	Initial

### Other

$[X]$	Molar concentration of species $X$ ( $\text{kmol}/\text{m}^3$ )
-------	---

## REFERENCES

1. Douaud, A., and Eyzat, P., "DIGITAP—An On-Line Acquisition and Processing System for Instantaneous Engine Data—Applications," SAE Paper 770218, 1977.
2. Nakajima, Y., *et al.*, "Analysis of Combustion Patterns Effective in Improving Anti-Knock Performance of a Spark-Ignition Engine," *Japan Society of Automotive Engineers Review*, 13: 9–17 (1984).
3. Litzinger, T. A., "A Review of Experimental Studies of Knock Chemistry in Engines," *Progress in Energy and Combustion Science*, 16: 155–167 (1990).
4. Spalding, D. B., *Combustion and Mass Transfer*, Pergamon, New York, 1979.
5. Longwell, J. P., and Weiss, M. A., "High Temperature Reaction Rates in Hydrocarbon Combustion," *Industrial & Engineering Chemistry*, 47: 1634–1643 (1955).
6. Glarborg, P., Miller, J. A., and Kee, R. J., "Kinetic Modeling and Sensitivity Analysis of Nitrogen Oxide Formation in Well-Stirred Reactors," *Combustion and Flame*, 65: 177–202 (1986).
7. Duterque, J., Avezard, N., and Borghi, R., "Further Results on Nitrogen Oxides Production in Combustion Zones," *Combustion Science and Technology*, 25: 85–95 (1981).
8. Malte, P. C., Schmidt, S. C., and Pratt, D. T., "Hydroxyl Radical and Atomic Oxygen Concentrations in High-Intensity Turbulent Combustion," *Sixteenth Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, p. 145, 1977.
9. Bradley, D., Chin, S. B., and Hankinson, G., "Aerodynamic and Flame Structure within a Jet-Stirred Reactor," *Sixteenth Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, p. 1571, 1977.
10. Chomiak, J., *Combustion: A Study in Theory, Fact and Application*, Gordon & Breach, New York, p. 334, 1990.
11. Zeldovich, Y. B., and Voyevodzkii, V. V., *Thermal Explosion and Flame Propagation in Gases*, Izd. MMI, Moscow, 1947.
12. Glarborg, P., Kee, R. J., Grcar, J. F., and Miller, J. A., "PSR: A Fortran Program for Modeling Well-Stirred Reactors," Sandia National Laboratories Report SAND86-8209, 1986.
13. Swindenbank, J., Poll, I., Vincent, M. W., and Wright, D. D., "Combustion Design Fundamentals," *Fourteenth Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, p. 627, 1973.
14. Dryer, F. L., and Glassman, I., "High-Temperature Oxidation of CO and H<sub>2</sub>," *Fourteenth Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, p. 987, 1972.

15. Westbrook, C. K., and Dryer, F. L., "Simplified Reaction Mechanisms for the Oxidation of Hydrocarbon Fuels in Flames," *Combustion Science and Technology*, 27: 31–43 (1981).
16. Kee, R. J., Rupley, F. M., and Miller, J. A., "Chemkin-II: A Fortran Chemical Kinetics Package for the Analysis of Gas-Phase Chemical Kinetics," Sandia National Laboratories Report SAND89-8009, March 1991.
17. Heywood, J. B., *Internal Combustion Engine Fundamentals*, McGraw-Hill, New York, 1988.
18. Incropera, F. P., and DeWitt, D. P., *Fundamentals of Heat and Mass Transfer*, 3rd Ed., John Wiley & Sons, New York, p. 496, 1990.

## PROBLEMS AND PROJECTS

- 6.1** Derive the basic differential conservation equations for the plug-flow reactor (Eqns. 6.39–6.42) using Fig. 6.11 as a guide. *Hint:* This is relatively straightforward and does not involve much manipulation.

- 6.2** Show that

$$\frac{d(\rho v_x A)}{dx} = 0 = \frac{1}{\rho} \frac{d\rho}{dx} + \dots, \text{etc.} \quad (\text{cf. Eqn. 6.43}).$$

- 6.3** Show that

$$\frac{d}{dx} \left( P = \rho \frac{R_u T}{MW_{\text{mix}}} \right) \Rightarrow \frac{1}{P} \frac{dP}{dx} = \frac{1}{\rho} \frac{d\rho}{dx} + \dots, \text{etc.} \quad (\text{cf. Eqn. 6.48}).$$

- 6.4** Show that

$$\frac{dMW_{\text{mix}}}{dx} = -MW_{\text{mix}}^2 \sum_i (dY_i/dx) MW_i^{-1}.$$

- 6.5\***
- Use MATHEMATICA or other symbolic manipulation software to verify Eqns. 6.51–6.53.
  - Add the heat flux distribution,  $\dot{Q}''(x)$ , to the problem defined by Eqns. 6.51–6.53.
- 6.6** In the well-stirred-reactor literature, a “reactor loading parameter” is frequently encountered. This single parameter lumps together the effect of pressure, mass flowrate, and reactor volume. Can you identify (create) such a parameter for the well-stirred-reactor model developed in Example 6.2? *Hint:* The parameter is expressed as  $P^a \dot{m}^b V^c$ . Find the exponents  $a$ ,  $b$ , and  $c$ .
- 6.7** Consider a nonadiabatic well-stirred reactor with simplified chemistry, i.e., fuel, oxidizer, and a single product species. The reactants, consisting of fuel


| \*Indicates required use of computer.

( $Y_F = 0.2$ ) and oxidizer ( $Y_{Ox} = 0.8$ ) at 298 K, flow into the  $0.003\text{-m}^3$  reactor at  $0.5\text{ kg/s}$ . The reactor operates at 1 atm and has a heat loss of 2000 W. Assume the following simplified thermodynamic properties:  $c_p = 1100\text{ J/kg-K}$  (all species),  $MW = 29\text{ kg/kmol}$  (all species),  $h_{f,F}^0 = -2000\text{ kJ/kg}$ ,  $h_{f,Ox}^0 = 0$ , and  $h_{f,Pr}^0 = -4000\text{ kJ/kg}$ . The fuel and oxidizer mass fractions in the outlet stream are 0.001 and 0.003, respectively. Determine the temperature in the reactor and the residence time.

- 6.8** Consider the combustion of a fuel and oxidizer in an adiabatic plug-flow reactor of constant cross-sectional area. Assume that the reaction is a single-step reaction with the following stoichiometry and kinetics:  $1\text{ kg}_F + v\text{ kg}_{Ox} \rightarrow (1+v)\text{ kg}_{Pr}$  and  $\dot{\omega}_F = -A \exp(-E_a/R_u T)[F][Ox]$ . Assume also the following simplified thermodynamic properties:  $MW_F = MW_{Ox} = MW_{Pr}$ ,  $c_{p,F} = c_{p,Ox} = c_{p,Pr} = \text{constant}$ ,  $h_{f,Ox}^0 = h_{f,Pr}^0 = 0$ , and  $h_{f,F}^0 = \Delta h_c$ .

Develop a conservation-of-energy relationship in which the temperature,  $T$ , is the principal dependent variable. Express all concentration variables, or parameters that depend on concentrations, in terms of mass fractions,  $Y_i$ . The only unknown functions that should appear in your final result are  $T$ ,  $Y_i$ , and the axial velocity,  $v_x$ , each being a function of the axial coordinate  $x$ . For simplicity, neglect kinetic energy changes and assume that the pressure is essentially constant. Hint: You may find species conservation useful.

- 6.9\*** Create a computer code embodying the simple constant-volume reactor developed in Example 6.1. Verify that it reproduces the results shown in Fig. 6.4 and then use the model to explore the effects of  $P_0$ ,  $T_0$ , and  $\Phi$  on combustion times and maximum rates-of-pressure rise. Discuss your results. Hint: You will need to decrease the time interval between output printings when combustion rates are rapid.
- 6.10\*** Develop a constant-pressure-reactor model using the same chemistry and thermodynamics as in Example 6.1. Using an initial volume of  $0.008\text{ m}^3$ , explore the effects of  $P$  and  $T_0$  on combustion durations. Use  $\Phi = 1$  and assume the reactor is adiabatic.
- 6.11\*** Develop a plug-flow-reactor model using the same chemistry and thermodynamics as in Example 6.1. Assume the reactor is adiabatic. Use the model to
- Determine the mass flowrate such that the reaction is 99 percent complete in a flow length of 10 cm for  $T_{in} = 1000\text{ K}$ ,  $P_{in} = 0.2\text{ atm}$ , and  $\Phi = 0.2$ . The circular duct has a diameter of 3 cm.
  - Explore the effects of  $P_{in}$ ,  $T_{in}$ , and  $\Phi$  on the flow length required for 99 percent complete combustion using the flowrate determined in Part A.
- 6.12\*** Develop a model of the combustion of carbon monoxide with moist air in a constant-volume adiabatic reactor. Assume the following global mechanism of Dryer and Glassman [14] applies:

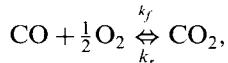

where the forward and reverse reaction rates are expressed as

$$\begin{aligned}\frac{d[\text{CO}]}{dt} &= -k_f[\text{CO}][\text{H}_2\text{O}]^{0.5}[\text{O}_2]^{0.25} \\ \frac{d[\text{CO}_2]}{dt} &= -k_r[\text{CO}_2],\end{aligned}$$

where

$$k_f = 2.24 \cdot 10^{12} \left[ \left( \frac{\text{kmol}}{\text{m}^3} \right)^{-0.75} \frac{1}{\text{s}} \right] \exp \left[ \frac{-1.674 \cdot 10^8 (\text{J/kmol})}{R_u T (\text{K})} \right]$$

$$k_r = 5.0 \cdot 10^8 \left( \frac{1}{\text{s}} \right) \exp \left[ \frac{-1.674 \cdot 10^8 (\text{J/kmol})}{R_u T (\text{K})} \right].$$

In your model, assume constant (but not equal) specific heats evaluated at 2000 K.

- A. Write out all the necessary equations to describe your model, explicitly expressing them in terms of the molar concentrations of CO, CO<sub>2</sub>, H<sub>2</sub>O, O<sub>2</sub>, and N<sub>2</sub>; individual  $\bar{c}_p$  values,  $\bar{c}_{p,\text{CO}}$ ,  $\bar{c}_{p,\text{CO}_2}$ , etc.; and individual enthalpies of formation. Note that the H<sub>2</sub>O is a catalyst so its mass fraction is preserved.
- B. Exercise your model to determine the influence of the initial H<sub>2</sub>O mole fraction (0.1–3.0 percent) on the combustion process. Use maximum rates-of-pressure rise and combustion durations to characterize the process. Use the following initial conditions:  $T_0 = 1000 \text{ K}$ ,  $P = 1 \text{ atm}$ , and  $\Phi = 0.25$ .


- 6.13\*** Incorporate the global CO oxidation kinetics given in problem 6.12 in a model of a well-stirred reactor. Assume constant (but not equal) specific heats evaluated at 2000 K.

- A. Write out all of the necessary equations to describe your model, explicitly expressing them in terms of the molar concentrations of CO, CO<sub>2</sub>, H<sub>2</sub>O, O<sub>2</sub>, and N<sub>2</sub>; individual  $\bar{c}_p$  values,  $\bar{c}_{p,\text{CO}}$ ,  $\bar{c}_{p,\text{CO}_2}$ , etc.; and individual enthalpies of formation.
- B. Exercise your model to determine the influence of the initial H<sub>2</sub>O mole fraction (0.1–3.0 percent) on the blowout-limit mass flowrate. The incoming gases are a stoichiometric mixture of CO and air (plus moisture) at 298 K. The reactor operates at atmospheric pressure.

- 6.14\*** Incorporate Zeldovich NO formation kinetics in the well-stirred-reactor model presented in Example 6.2. Assume that the NO formation kinetics are

*uncoupled* from the combustion process, i.e., the heat lost or evolved from the NO reactions can be neglected, as can the small amount of mass. Assume equilibrium O-atom concentrations.


- Write out explicitly all of the equations required by your model.
- Determine the NO mass fraction as a function of  $\Phi$ (0.8–1.1) for  $\dot{m} = 0.1 \text{ kg/s}$ ,  $T_{\text{in}} = 298 \text{ K}$ , and  $P = 1 \text{ atm}$ . The equilibrium constant for

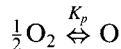

is given by

$$K_p = 3030 \exp(-30,790/T).$$

- 6.15\*** Develop a model of a gas-turbine combustor as two well-stirred reactors in series, where the first reactor represents the primary zone and the second reactor represents the secondary zone. Assume the fuel is decane. Use the following two-step hydrocarbon oxidation mechanism [15]:

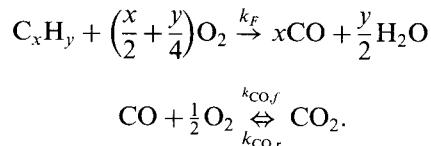

The rate of expressions for the CO oxidation step are given in problem 6.12, while the rate expression for decane conversion to CO is given by

$$\frac{d[\text{C}_{10}\text{H}_{22}]}{dt} = -k_F[\text{C}_{10}\text{H}_{22}]^{0.25}[\text{O}_2]^{1.5},$$

where

$$k_F = 2.64 \cdot 10^9 \exp\left[\frac{-15,098}{T}\right] \quad (\text{SI units}).$$


- Write out all of the governing equations treating the equivalence ratios,  $\Phi_1$  and  $\Phi_2$ , of the two zones as known parameters. Assume constant (but not equal) specific heats.
- Write a computer code embodying your model from part A. Perform a design exercise with objectives and constraints provided by your instructor.

- 6.16\*** Use CHEMKIN [16] subroutines to model H<sub>2</sub>-air combustion and thermal NO formation, including superequilibrium O-atom contributions, for the following systems:

- A constant-volume reactor.
- A plug-flow reactor.
- Exercise your models using initial and/or flow conditions provided by your instructor.

- 6.17\*** Consider a simple tube furnace as shown below in the sketch. A natural gas (methane)-air mixture ( $\Phi = 0.9$ ) is burned in a rapid mixing burner at the inlet of the furnace, and heat is transferred from the hot products of combustion to the constant temperature wall ( $T_w = 600\text{ K}$ ). Assume that the nitric oxide produced by the burner is negligible compared with that produced in the postflame gases in the furnace. The natural gas flowrate is  $0.0147\text{ kg/s}$ . Assuming that the hot products enter the furnace at  $2350\text{ K}$  and exit the furnace at  $1700\text{ K}$ , determine the following, taking into account the constraints given below:

- For a furnace diameter of  $0.30\text{ m}$ , what is the length of the furnace?
- What is the nitric oxide (NO) mole fraction at the exit?
- For the same fuel flowrate and stoichiometry, can the NO emissions be reduced by changing the diameter ( $D$ ) of the furnace? (Note that the length ( $L$ ) of the furnace will have to be changed accordingly to maintain the same outlet temperature of  $1700\text{ K}$ ). What are the values of  $D$  and  $L$  that result in lower NO if the mean velocity at the entrance to the furnace is constrained to be within a factor of two (up or down) from the original design point? On a single graph, plot  $\chi_{\text{NO}}$  versus pipe length for each case.

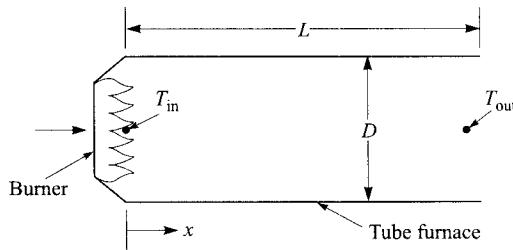

Additional constraints and assumptions are the following:

- The pressure is constant at  $1\text{ atm}$ .
- The flow is fully developed, both hydraulically and thermally, within the tube furnace.
- Use the Dittus–Boelter equation [18]  $Nu_D = 0.023 Re_D^{0.8} Pr^{0.3}$  for your heat-transfer analysis, where the properties are evaluated at  $(T_{\text{in}} + T_{\text{out}})/2$ . Use air properties to simplify your calculations.
- Assume Zeldovich NO kinetics apply. Do not neglect reverse reactions. Use the steady-state approximation for N atoms and assume that  $\text{O}_2$  and O are in simple equilibrium. Furthermore, assume that the  $\text{O}_2$  mole fraction is constant at  $0.02$ , even though it changes slightly with temperature. Use the equilibrium constant  $K_p = 3.6 \cdot 10^3 \exp[-31,090/T\text{ (K)}]$  for the  $\frac{1}{2}\text{O}_2 \rightleftharpoons \text{O}$  equilibrium.

---

## APPENDIX 6A SOME USEFUL RELATIONSHIPS AMONG MASS FRACTIONS, MOLE FRACTIONS, MOLAR CONCENTRATIONS, AND MIXTURE MOLECULAR WEIGHTS

Mole fraction/mass fractions:

$$\chi_i = Y_i MW_{\text{mix}} / MW_i \quad (6A.1)$$

$$Y_i = \chi_i MW_i / MW_{\text{mix}}. \quad (6A.2)$$

Mass fraction/molar concentration:

$$[X_i] = PMW_{\text{mix}} Y_i / (R_u T M W_i) = Y_i \rho / MW_i \quad (6A.3)$$

$$Y_i = \frac{[X_i] M W_i}{\sum_j [X_j] M W_j}. \quad (6A.4)$$

Mole fraction/molar concentration:

$$[X_i] = \chi_i P / R_u T = \chi_i \rho / M W_{\text{mix}} \quad (6A.5)$$

$$\chi_i = [X_i] / \sum_j [X_j]. \quad (6A.6)$$

Mass concentration:

$$\rho_i = \rho Y_i = [X_i] M W_i. \quad (6A.7)$$

$M W_{\text{mix}}$  defined in terms of mass fractions:

$$M W_{\text{mix}} = \frac{1}{\sum_i Y_i / M W_i}. \quad (6A.8)$$

$M W_{\text{mix}}$  defined in terms of mole fractions:

$$M W_{\text{mix}} = \sum_i \chi_i M W_i. \quad (6A.9)$$

$M W_{\text{mix}}$  defined in terms of molar concentrations:

$$M W_{\text{mix}} = \frac{\sum_i [X_i] M W_i}{\sum_i [X_i]}. \quad (6A.10)$$

# Simplified Conservation Equations for Reacting Flows<sup>1</sup>

---

## OVERVIEW


One of the objectives of this book is to present, in as simple as possible a manner, the essential physics and chemistry of combustion. When one considers the details of multicomponent reacting mixtures, a complex situation arises, both physically and mathematically, which can be somewhat intimidating to a newcomer to the field. The primary objective of this chapter is to present the simplified governing equations expressing the conservation of mass, species, momentum, and energy for reacting flows. In particular, we wish to treat the following three situations:

1. Steady flow for a one-dimensional *planar* ( $x$ -coordinate only) geometry.
2. Steady flow for a one-dimensional *spherical* ( $r$ -coordinate only) geometry.
3. Steady flow for a two-dimensional *axisymmetric* ( $r$ - and  $x$ -coordinates) geometry.

From the first of these, we will develop an analysis of premixed laminar flames in Chapter 8; from the second, analyses of evaporation and combustion of fuel droplets in Chapter 10; and from the third, analyses of laminar (Chapter 9) and turbulent (Chapter 13) axisymmetric jet flames. These systems and the coordinate geometries are illustrated in Fig. 7.1.

Our approach is first to develop quite simple forms of the conservation equations, usually focusing on one-dimensional cartesian systems, to illustrate the essential physics of each conservation principle. We then present more

<sup>1</sup>This chapter may be skipped in its entirety without any loss of continuity. It is recommended that the chapter be treated as a reference when dealing with the simplified fundamental conservation relations employed in various subsequent chapters.

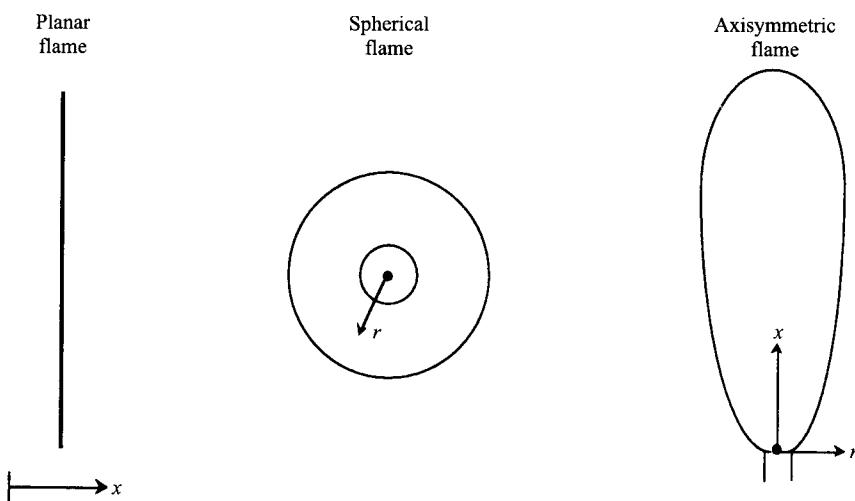


**Figure 7.1** Coordinate systems for planar flames, spherically symmetric flames (droplet burning), and axisymmetric flames (jet flames).

general relationships from which the basic conservation equations are obtained for the radial and axisymmetric geometries of interest. Although much of the physics can be captured in such simple analyses, it is important to caution that certain interesting and important phenomena will be excluded with this approach. For example, recent research [1] shows that the unequal rates of temperature-gradient-induced diffusion among species (thermal diffusion) in premixed flames have a profound effect on turbulent flame propagation. Therefore, for those desiring a more comprehensive treatment, multicomponent diffusion, including thermal diffusion, is also introduced in this chapter. Furthermore, we extend the development of the energy conservation equation to a form that can be used as a starting point for detailed numerical models of flames.

The use of “conserved scalars” to simplify and analyze certain combustion problems is quite common in the literature. To introduce this concept, we discuss and develop equations for the conserved scalars of mixture fraction and mixture enthalpy.

## OVERALL MASS CONSERVATION (CONTINUITY)

Consider the one-dimensional control volume shown in Fig. 7.2, a plane layer  $\Delta x$  thick. Mass enters at  $x$  and exits at  $x + \Delta x$ , with the difference between the flow in and out being the rate at which mass accumulates within the control volume; i.e.,

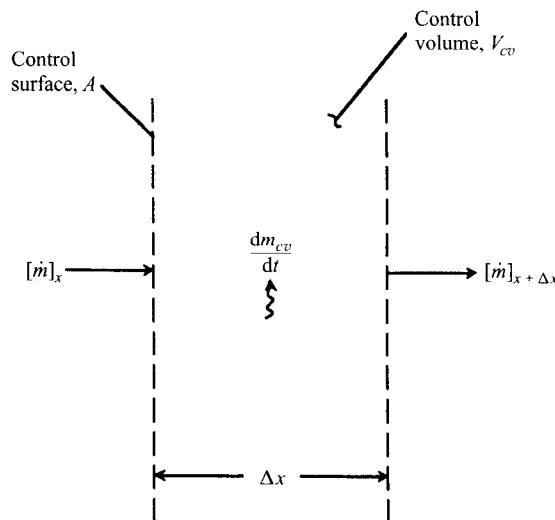

**Figure 7.2** Control volume for one-dimensional analysis of mass conservation.

$$\frac{dm_{cv}}{dt} = [\dot{m}]_x - [\dot{m}]_{x+\Delta x}. \quad (7.1)$$

Rate of increase of mass within control volume	Mass flow into the control volume	Mass flow out of the control volume
--	---	---

Recognizing that the mass within the control volume is  $m_{cv} = \rho V_{cv}$ , where the volume  $V_{cv} = A\Delta x$ , and that the mass flowrate is  $\dot{m} = \rho v_x A$ , we rewrite Eqn. 7.1 as

$$\frac{d(\rho A \Delta x)}{dt} = [\rho v_x A]_x - [\rho v_x A]_{x+\Delta x}. \quad (7.2)$$

Dividing through by  $A \Delta x$  and taking the limit as  $\Delta x \rightarrow 0$ , Eqn. 7.2 becomes

$$\frac{\partial \rho}{\partial t} = -\frac{\partial (\rho v_x)}{\partial x}. \quad (7.3)$$

In the case of steady flow, where  $\partial \rho / \partial t = 0$ ,

$$\frac{d(\rho v_x)}{dx} = 0$$

(7.4a)

or

$$\rho v_x = \text{constant}$$

(7.4b)

In combustion systems, the density will vary greatly with position in the flow; thus, we see from Eqn. 7.4 that the velocity must also vary with position such that the product  $\rho v_x$ , the mass flux  $\dot{m}'$ , remains constant. In its most

general form, conservation of mass associated with a fixed point in a flow can be expressed as

$$\frac{\partial \rho}{\partial t} + \nabla \cdot (\rho \mathbf{V}) = 0. \quad (7.5)$$

Rate of gain of mass per unit volume	Net rate of mass flow out per unit volume
--	---

Assuming steady flow and applying the vector operations appropriate for the coordinate system of interest (e.g., see Ref. [2] for a complete compilation), we obtain, first for the spherical system,

$$\frac{1}{r^2} \frac{\partial}{\partial r} (r^2 \rho v_r) + \frac{1}{r \sin \theta} \frac{\partial}{\partial \theta} (\rho v_\theta \sin \theta) + \frac{1}{r \sin \theta} \frac{\partial (\rho v_\phi)}{\partial \phi} = 0,$$

which simplifies for our 1-D spherically symmetric system, where  $v_\theta = v_\phi = 0$ , and  $\partial(\ )/\partial\theta = \partial(\ )/\partial\phi = 0$ , to be

$$\frac{1}{r^2} \frac{d}{dr} (r^2 \rho v_r) = 0 \quad (7.6a)$$

or

$$r^2 \rho v_r = \text{constant} \quad (7.6b)$$

Equation 7.6b is equivalent to writing  $\dot{m} = \text{constant} = \rho v_r A(r)$  where  $A(r) = 4\pi r^2$ .

For our axisymmetric system with steady flow, the general continuity equation (Eqn. 7.5) yields

$$\frac{1}{r} \frac{\partial}{\partial r} (r \rho v_r) + \frac{\partial}{\partial x} (\rho v_x) = 0 \quad (7.7)$$

which results from setting  $v_\theta = 0$  in the complete cylindrical formulation. Note that now, for the first time, two velocity components,  $v_r$  and  $v_x$ , appear, rather than just a single component as in previous analyses.

## SPECIES MASS CONSERVATION (SPECIES CONTINUITY)

In Chapter 3, we derived the one-dimensional species conservation equation with the assumptions that species diffused only as a result of concentration gradients and that the mixture comprised only two species, i.e., a binary

mixture. We will not repeat that development here, but, rather will restate our final result (Eqn. 3.31), which for steady flow is written as

$\frac{d}{dx} \left[ \dot{m}'' Y_A - \rho D_{AB} \frac{d Y_A}{dx} \right] = \dot{m}_A'''$	or $\frac{d}{dx} (\dot{m}'' Y_A) - \frac{d}{dx} \left( \rho D_{AB} \frac{d Y_A}{dx} \right) = \dot{m}_A'''$	Mass flow of species A due to convection (advection by bulk flow) per unit volume (kg/s-m <sup>3</sup> )      Mass flow of species A due to molecular diffusion per unit volume (kg/s-m <sup>3</sup> )      Net mass production rate of species A by chemical reaction per unit volume (kg/s-m <sup>3</sup> )
---	--	---

(7.8)

where  $\dot{m}''$  is the mass flux  $\rho v_x$ , and  $\dot{m}_A'''$  is the net production rate of species A per unit volume associated with chemical reaction. A more general one-dimensional form of species continuity can be expressed as

$\frac{d\dot{m}_i''}{dx} = \dot{m}_i''' \quad i = 1, 2, \dots, N,$	
--	--

(7.9)

where the subscript  $i$  represents the  $i$ th species. In this relation, no restrictions, such as binary diffusion governed by Fick's law, have been imposed to describe the species flux  $\dot{m}_i''$ .

The general vector form for mass conservation of the  $i$ th species is expressed as

$\frac{\partial(\rho Y_i)}{\partial t} + \nabla \cdot \dot{\mathbf{m}}_i'' = \dot{m}_i''' \quad \text{for } i = 1, 2, \dots, N.$	Rate of gain of mass of species $i$ per unit volume      Net rate of mass flow of species $i$ out by diffusion and bulk flow per unit volume      Net rate of mass production of species $i$ per unit volume
--	--

(7.10)

At this juncture, it is worthwhile to digress somewhat to discuss the species mass flux in a bit more detail. The mass flux of  $i$ ,  $\dot{\mathbf{m}}_i''$ , is defined by the mass average velocity of  $i$ ,  $\mathbf{v}_i$ , as follows:

$$\dot{\mathbf{m}}_i'' \equiv \rho Y_i \mathbf{v}_i, \quad (7.11)$$

where the **species velocity**  $\mathbf{v}_i$  is, in general, a quite complicated expression that takes into account mass diffusion associated with concentration gradients (**ordinary diffusion**), as well as other modes (see next section). The sum of all of the individual species mass fluxes is the mixture mass flux, i.e.,

$$\sum \dot{m}_i'' = \sum \rho Y_i \mathbf{v}_i = \dot{m}'' . \quad (7.12)$$

Thus, we see that, since  $\dot{m}'' \equiv \rho \mathbf{V}$ , the mass average velocity  $\mathbf{V}$  is

$$\mathbf{V} = \sum Y_i \mathbf{v}_i . \quad (7.13)$$

This is the fluid velocity with which you are familiar and is referred to as the mass average **bulk velocity**. The difference between the species velocity and the bulk velocity is defined as the **diffusional velocity**,  $\mathbf{v}_{i,\text{diff}} \equiv \mathbf{v}_i - \mathbf{V}$ , i.e., the velocity of an individual species relative to the bulk velocity. The diffusional mass flux can be expressed in terms of the diffusional velocity:

$$\dot{m}_{i,\text{diff}}'' \equiv \rho Y_i (\mathbf{v}_i - \mathbf{V}) = \rho Y_i \mathbf{v}_{i,\text{diff}} . \quad (7.14)$$

As discussed in Chapter 3, the total species mass flux is the sum of the bulk flow and diffusion contributions, i.e.,

$$\dot{m}_i'' = \dot{m}'' Y_i + \dot{m}_{i,\text{diff}}'' \quad (7.15a)$$

or, in terms of velocities,

$$\rho Y_i \mathbf{v}_i = \rho Y_i \mathbf{V} + \rho Y_i \mathbf{v}_{i,\text{diff}} . \quad (7.15b)$$

Depending on the direction of the species concentration gradients, the diffusional flux, or velocity, can be directed either against or with the bulk flow. For example, a high concentration of a species downstream creates a diffusional flux upstream against the bulk flow. Using the above definitions (Eqns. 7.11 and 7.14), our general species conservation equation (Eqn. 7.10) can be rewritten in terms of species diffusion velocities,  $\mathbf{v}_{i,\text{diff}}$ , and mass fractions,  $Y_i$ :

$$\frac{\partial(\rho Y_i)}{\partial t} + \nabla \cdot [\rho Y_i (\mathbf{V} + \mathbf{v}_{i,\text{diff}})] = \dot{m}_i''' \quad \text{for } i = 1, 2, \dots, N . \quad (7.16)$$

This form frequently appears in the literature and is the formulation employed in the various combustion codes developed at Sandia National Laboratories (e.g., Refs. [3] and [4]). We end our digression here and return to the development of the simplified species conservation equations for the spherical and axisymmetrical geometries.

For the case of ordinary diffusion only (no thermal or pressure diffusion) in a binary mixture, the general form of Fick's law given below can be used to evaluate the species mass flux,  $\dot{m}_i''$ , which appears in our general species conservation relation (Eqn. 7.10):

$$\dot{m}_A'' = \dot{m}'' Y_A - \rho D_{AB} \nabla Y_A . \quad (7.17)$$

For the spherically symmetric system with steady flow, Eqn. 7.10 becomes

$$\frac{1}{r^2} \frac{d}{dr} (r^2 \dot{m}_i'') = \dot{m}_i''' \quad i = 1, 2, \dots, N \quad (7.18)$$

or, with the assumption of binary diffusion, Eqn. 7.17,

$$\frac{1}{r^2} \frac{d}{dr} \left[ r^2 \left( \rho v_r Y_A - \rho D_{AB} \frac{dY_A}{dr} \right) \right] = \dot{m}_A''' \quad (7.19)$$

The physical interpretation of the above relation is the same as previously shown (Eqn. 7.8) except that the mass flow of species A is directed in the radial direction, rather than in the  $x$ -direction.

For the axisymmetric geometry ( $r$ -, and  $x$ -coordinates), the corresponding species conservation equation for a binary mixture is

$\frac{1}{r} \frac{\partial}{\partial r} (r \rho v_r Y_A)$ Mass flow of species A due to radial convection (radial advection by bulk flow) per unit volume ( $\text{kg}_A/\text{s}\cdot\text{m}^3$ )	+	$\frac{1}{r} \frac{\partial}{\partial x} (r \rho v_x Y_A)$ Mass flow of species A due to axial convection (axial advection by bulk flow) per unit volume ( $\text{kg}_A/\text{s}\cdot\text{m}^3$ )	(7.20)
$- \frac{1}{r} \frac{\partial}{\partial r} \left[ r \rho D_{AB} \frac{\partial Y_A}{\partial r} \right]$ Mass flow of species A due to molecular diffusion in radial direction per unit volume ( $\text{kg}_A/\text{s}\cdot\text{m}^3$ )	=	Net mass production rate of species A by chemical reaction per unit volume ( $\text{kg}_A/\text{s}\cdot\text{m}^3$ )	

In the above equation, we have assumed that axial diffusion is negligible in comparison with radial diffusion and with both axial and radial convection (advection).

## MULTICOMPONENT DIFFUSION

In modeling and understanding the *details* of many combustion systems, particularly the structure of laminar premixed and nonpremixed flames, the problem cannot be reduced to a simple representation involving a binary mixture. In these cases, the formulation of the species transport laws must account for the fact that there are a large number of species present and that the properties of the individual species may be greatly different. For example, we might expect heavy fuel molecules to diffuse much less rapidly than lightweight H atoms. Furthermore, large temperature gradients, typically found in flames, produce a second driving force for mass transfer in addition to that produced by concentration gradients. This temperature-gradient driven mass diffusion, referred to as **thermal diffusion** or the **Soret effect**, results in light molecules diffusing from low- to high-temperature regions, and, conversely, heavy molecules diffusing from high- to low-temperature regions.

We begin our discussion of multicomponent diffusion by presenting some of the most general relations used to express individual species mass diffusion fluxes and/or diffusion velocities. These relations are then simplified to the forms most pertinent to combustion applications. With yet more restrictive assumptions, we obtain relatively simple approximate expressions that are sometimes used to model multicomponent diffusion in flame systems.

## General Formulations

The general problem of species diffusion in multicomponent mixtures allows for four distinct modes of mass diffusion: **ordinary diffusion**, resulting from concentration gradients; **thermal (or Soret) diffusion**, resulting from temperature gradients; **pressure diffusion**, resulting from pressure gradients; and **forced diffusion**, resulting from unequal body forces per unit mass among the species. The mass fluxes associated with each diffusion mode are additive; thus,

$$\dot{m}_{i,\text{diff}}'' = \dot{m}_{i,\text{diff},\chi}'' + \dot{m}_{i,\text{diff},T}'' + \dot{m}_{i,\text{diff},P}'' + \dot{m}_{i,\text{diff},f}'' \quad (7.21a)$$

where the subscripts  $\chi$ ,  $T$ ,  $P$ , and  $f$  refer, respectively, to ordinary, thermal, pressure, and forced diffusion. Similarly, the diffusion velocities add vectorially:

$$\mathbf{v}_{i,\text{diff}} = \mathbf{v}_{i,\text{diff},\chi} + \mathbf{v}_{i,\text{diff},T} + \mathbf{v}_{i,\text{diff},P} + \mathbf{v}_{i,\text{diff},f} \quad (7.21b)$$

In typical combustion systems, pressure gradients are not sufficiently large to induce pressure diffusion, so we can neglect this effect. Forced diffusion results primarily from charged species (ions) interacting with an electric field; although ions do exist in small concentrations in flames, forced diffusion is not thought to be significant. In the following development, therefore, we retain only the ordinary and thermal contributions to the diffusion flux. For a thorough treatment of all aspects of diffusion, the reader is referred to Refs. [2] and [5–7].

With the assumption of ideal-gas behavior, the most general expressions for ordinary diffusion simplify to the following [2]:

$$\dot{m}_{i,\text{diff},\chi}'' = \frac{P}{R_u T} \frac{MW_i}{MW_{\text{mix}}} \sum_{j=1}^N MW_j D_{ij} \nabla \chi_j \quad i = 1, 2, \dots, N, \quad (7.22)$$

where  $MW_{\text{mix}}$  is the mixture molecular weight and the  $D_{ij}$ s are the **ordinary multicomponent diffusion coefficients**. It is important to note that the multicomponent diffusivity,  $D_{ij}$ , is not identical to the binary diffusivity,  $D_{ij}$ , for the same pair of species. We will discuss the  $D_{ij}$ s more fully in a section below. The corresponding expression to Eqn. 7.22 for the diffusion velocity of species  $i$  is given by

$$\mathbf{v}_{i,\text{diff},\chi} = \frac{1}{\chi_i MW_{\text{mix}}} \sum_{j=1}^N MW_j D_{ij} \nabla \chi_j \quad i = 1, 2, \dots, N. \quad (7.23)$$

The **Stefan–Maxwell equation**, an alternative to Eqn. 7.23, eliminates the need to determine the concentration-dependent  $D_{ij}$ s by coupling the various species diffusion velocities [2]:

$$\nabla \chi_i = \sum_{j=1}^N \left[ \frac{\chi_i \chi_j}{D_{ij}} (\mathbf{v}_{j,\text{diff},\chi} - \mathbf{v}_{i,\text{diff},\chi}) \right] \quad i = 1, 2, \dots, N. \quad (7.24)$$

In Eqn. 7.23, all of the species mole-fraction gradients appear in each of the  $N$  equations ( $i = 1, 2, \dots, N$ ), while only the  $i$ th diffusion velocity appears; conversely, all of the diffusion velocities appear in each of the  $N$  equations represented by Eqn. 7.24, while only the  $i$ th mole-fraction gradient appears in each.

The **thermal diffusion velocity** for the  $i$ th species is expressed as [2]

$$\mathbf{v}_{i,\text{diff},T} = -\frac{D_i^T}{\rho Y_i} \frac{1}{T} \nabla T, \quad (7.25)$$

where  $D_i^T$  is the **thermal diffusion coefficient**. This coefficient may be positive or negative, indicating diffusion towards colder or hotter regions, respectively. For an interesting discussion of thermal diffusion, the reader is referred to Ref. [8].

## Calculation of Multicomponent Diffusion Coefficients

The following, somewhat complex, expressions for the multicomponent diffusion coefficients  $D_{ij}$  for ordinary diffusion have been derived from kinetic theory [7, 9]:

$$D_{ij} = \chi_i \frac{MW_{\text{mix}}}{MW_j} (F_{ij} - F_{ii}), \quad (7.26)$$

where  $F_{ij}$  and  $F_{ii}$  are components of the matrix  $[F_{ij}]$ . The  $[F_{ij}]$  matrix is the inverse of  $[L_{ij}]$ ; i.e.,

$$[F_{ij}] = [L_{ij}]^{-1}. \quad (7.27)$$

The components of  $[L_{ij}]$  are determined from

$$[L_{ij}] = \sum_{k=1}^K \frac{\chi_k}{MW_i D_{ik}} [MW_j \chi_j (1 - \delta_{ik}) - MW_i \chi_i (\delta_{ij} - \delta_{jk})], \quad (7.28)$$

where  $\delta_{mn}$  is the Kronecker delta function, which takes on the value of unity for  $m = n$  and is otherwise zero. The summation  $k = 1$  to  $K$  is taken over all species. The multicomponent diffusion coefficients have the following properties [2]:

$$D_{ii} = 0 \quad (7.29a)$$

$$\sum_{i=1}^N (MW_i MW_h D_{ih} - MW_i MW_k D_{ik}) = 0. \quad (7.29b)$$

We note in the above that the multicomponent diffusion coefficients depend in a complex way on both the mixture composition, through the appearance of the component mole fractions  $\chi_i$ , and on the individual binary diffusion coefficients for pairs of species,  $D_{ij}$ . Note that, generally, only in the case of a two-component (i.e., binary) mixture do the  $D_{ij}$ s equal the  $D_{ji}$ s. Numerical values on the  $D_{ij}$ s can be estimated using the methods presented in Appendix D, while software [10] is available, as part of the CHEMKIN library, for the determination of the multicomponent diffusion coefficients  $D_{ij}$ , along with the other mixture transport properties.

**Example 7.1**

Determine numerical values for all of the multicomponent diffusion coefficients  $D_{ij}$  associated with a mixture of  $H_2$ ,  $O_2$ , and  $N_2$  having the following properties:  $\chi_{H_2} = 0.15$ ,  $\chi_{O_2} = 0.20$ ,  $\chi_{N_2} = 0.65$ ,  $T = 600\text{ K}$ , and  $P = 1\text{ atm}$ .

**Solution**

To determine the  $D_{ij}$ s requires the straightforward application of Eqn. 7.26. This is simple, in principle, but considerable computation is involved. First, we write out the nine components of the  $L_{ij}$  matrix (Eqn. 7.28), designating  $i$  (and  $j$ ) = 1, 2, and 3 to represent  $H_2$ ,  $O_2$ , and  $N_2$ , respectively:

$$[L_{ij}] = \begin{bmatrix} L_{11} & L_{12} & L_{13} \\ L_{21} & L_{22} & L_{23} \\ L_{31} & L_{32} & L_{33} \end{bmatrix},$$

where, taking advantage of the fact that  $D_{ij} = D_{ji}$  (see Chapter 3),

$$\begin{aligned} L_{11} &= L_{22} = L_{33} = 0, \\ L_{12} &= \chi_2(MW_2\chi_2 + MW_1\chi_1)/(MW_1D_{12}) + \chi_3(MW_2\chi_2)/(MW_1D_{13}), \\ L_{13} &= \chi_2(MW_3\chi_3)/(MW_1D_{12}) + \chi_3(MW_3\chi_3 + MW_1\chi_1)/(MW_1D_{13}), \\ L_{21} &= \chi_1(MW_1\chi_1 + MW_2\chi_2)/(MW_2D_{21}) + \chi_3(MW_1\chi_1)/(MW_2D_{23}), \\ L_{23} &= \chi_1(MW_3\chi_3)/(MW_2D_{21}) + \chi_3(MW_3\chi_3 + MW_2\chi_2)/(MW_2D_{23}), \\ L_{31} &= \chi_1(MW_1\chi_1 + MW_3\chi_3)/(MW_3D_{31}) + \chi_2(MW_1\chi_1)/(MW_3D_{32}), \\ L_{32} &= \chi_1(MW_2\chi_2)/(MW_3D_{31}) + \chi_2(MW_2\chi_2 + MW_3\chi_3)/(MW_3D_{32}). \end{aligned}$$

To obtain numerical values for the  $L_{ij}$ s above, we need to evaluate the binary diffusion coefficients,  $D_{12}$ ,  $D_{13}$ , and  $D_{23}$ , which can be accomplished using the method described in Appendix D. The values for the characteristic Lennard-Jones length  $\sigma_i$  and energy  $\varepsilon_i$  from Appendix Table D.2 are listed below:

$i$	Species	$\chi_i$	$MW_i$	$\sigma_i$ (Å)	$\varepsilon_i/k_B$ (K)
1	$H_2$	0.15	2.016	2.827	59.17
2	$O_2$	0.20	32.000	3.467	106.7
3	$N_2$	0.65	28.014	3.798	71.4

To calculate  $D_{H_2-O_2}$  from Appendix Eqn. D.2 requires us first to evaluate the collision integral  $\Omega_D$  for  $H_2$  and  $O_2$ , which, in turn, requires us to determine  $\varepsilon_{H_2-O_2}/k_B$  and  $T^*$ :

$$\begin{aligned}\varepsilon_{\text{H}_2-\text{O}_2}/k_B &= \left[ (\varepsilon_{\text{H}_2}/k_B)(\varepsilon_{\text{O}_2}/k_B) \right]^{1/2} = (59.7 \cdot 106.7)^{1/2} = 79.8 \text{ K} \\ T^* &= k_B T / \varepsilon_{\text{H}_2-\text{O}_2} = 600 / 79.8 = 7.519.\end{aligned}$$

The collision integral  $\Omega_D$  (Appendix Eqn. D.3) is

$$\begin{aligned}\Omega_D &= \frac{1.06036}{(7.519)^{0.15610}} + \frac{0.19300}{\exp(0.47635 \cdot 7.519)} \\ &\quad + \frac{1.03587}{\exp(1.52996 \cdot 7.519)} + \frac{1.76474}{\exp(3.89411 \cdot 7.519)} = 0.7793.\end{aligned}$$

Other parameters required are

$$\begin{aligned}\sigma_{\text{H}_2-\text{O}_2} &= \frac{\sigma_{\text{H}_2} + \sigma_{\text{O}_2}}{2} = \frac{2.827 + 3.467}{2} = 3.147 \text{ \AA} \\ MW_{\text{H}_2-\text{O}_2} &= 2[(1/MW_{\text{H}_2}) + (1/MW_{\text{O}_2})]^{-1} = 2[(1/2.016) + (1/32.00)]^{-1} = 3.793.\end{aligned}$$

Thus,

$$\begin{aligned}\mathcal{D}_{\text{H}_2-\text{O}_2} &= \frac{0.0266 T^{3/2}}{P M W_{\text{H}_2-\text{O}_2}^{1/2} \sigma_{\text{H}_2-\text{O}_2}^2 \Omega_D} \\ &= \frac{0.0266 (600)^{3/2}}{101,325 (3.793)^{1/2} (3.147)^2 0.7793} \\ &= 2.5668 \cdot 10^{-4} \text{ m}^2/\text{s} \\ \text{or } &2.5668 \text{ cm}^2/\text{s}.\end{aligned}$$

The binary diffusion coefficients  $\mathcal{D}_{\text{H}_2-\text{N}_2}$  and  $\mathcal{D}_{\text{O}_2-\text{N}_2}$  are similarly evaluated (spreadsheet software is helpful):

$$\mathcal{D}_{\text{H}_2-\text{N}_2} = 2.4095 \text{ cm}^2/\text{s} \quad \text{and} \quad \mathcal{D}_{\text{O}_2-\text{N}_2} = 0.6753 \text{ cm}^2/\text{s}.$$

We calculate the value of the  $L_{12}$  element of the  $[L]$  matrix:

$$\begin{aligned}L_{12} &= \chi_2 (MW_2 \chi_2 + MW_1 \chi_1) / (MW_1 \mathcal{D}_{12}) + \chi_3 (MW_2 \chi_2) / (MW_1 \mathcal{D}_{13}) \\ &= 0.20 (32.000 \cdot 0.20 + 2.016 \cdot 0.15) / (2.016 \cdot 2.5668) \\ &\quad + 0.65 (32.000 \cdot 0.20) / (2.016 \cdot 2.4095) = 1.1154.\end{aligned}$$

The other elements are similarly evaluated to yield

$$[L] = \begin{bmatrix} 0 & 1.1154 & 3.1808 \\ 0.0213 & 0 & 0.7735 \\ 0.0443 & 0.2744 & 0 \end{bmatrix}$$

The inverse of  $[L]$  is obtained with the aid of a computer or calculator:

$$[L_{ij}]^{-1} = [F_{ij}] = \begin{bmatrix} -3.7319 & 15.3469 & 15.1707 \\ 0.6030 & -2.4796 & 1.1933 \\ 0.1029 & 0.8695 & -0.4184 \end{bmatrix}.$$

With the above result, we are finally in a position to calculate the multicomponent diffusion coefficients  $D_{ij}$  from Eqn. 7.26, noting that the molecular weight of the mixture  $MW_{\text{mix}}$  is 24.9115 [= 0.15(2.016) + 0.20(32.000) + 0.65(28.014)]. For example,

$$\begin{aligned} D_{12} &= D_{H_2-O_2} = \chi_1 \frac{MW_{\text{mix}}}{MW_2} (F_{12} - F_{11}) \\ &= 0.15 \frac{24.9115}{32.000} (15.3469 + 3.7319) \\ &= 2.228 \text{ cm}^2/\text{s}. \end{aligned}$$

Similarly, we can evaluate the other  $D_{ij}$ s to complete the matrix:

$$[D_{ij}] = \begin{bmatrix} 0 & 2.228 & 2.521 \\ 7.618 & 0 & 0.653 \\ 4.188 & 0.652 & 0 \end{bmatrix} [=] \text{cm}^2/\text{s}.$$

### Comments

In this example, we dealt with only three species and, with a bit of algebra, could have solved for each  $D_{ij}$  analytically. For example,

$$D_{12} = D_{12} \left[ 1 + \chi_3 \frac{(MW_3/MW_2)D_{13} - D_{12}}{\chi_1 D_{23} + \chi_2 D_{13} + \chi_3 D_{12}} \right].$$

For most systems of interest in combustion, many species are involved, and all aspects of the approach presented above are executed using a computer. See, for example, Ref. [10].

To obtain a better appreciation for the differences between the multicomponent diffusion coefficients  $D_{ij}$  and the binary diffusion coefficients  $D_{ij}$ , we can compare the results above with the complete  $D_{ij}$  matrix:

$$[D_{ij}] = \begin{bmatrix} 4.587 & 2.567 & 2.410 \\ 2.567 & 0.689 & 0.675 \\ 2.410 & 0.675 & 0.661 \end{bmatrix} [=] \text{cm}^2/\text{s}.$$

We note, first, that the  $D_{ii}$ s are all nonzero, in contrast to the  $D_{ii}$ s. Furthermore, we see that the  $[D_{ij}]$  matrix is symmetric, while all of the nonzero  $D_{ij}$ s take on unique values.

---

Calculation of the multicomponent thermal diffusion coefficients is not nearly as straightforward as the determination of the ordinary diffusion coefficients discussed above. For thermal diffusion, an additional six matrices of greater complexity than the  $[L_{ij}]$  matrix given above are involved. The CHEMKIN software [10], previously referenced, also calculates thermal diffusion coefficients, along with the other multicomponent transport properties, i.e., thermal conductivity and viscosity.

### Simplified Approach

A commonly used approximate method for treating diffusion in multicomponent mixtures is to cast the species diffusion flux or diffusion velocity equations (Eqns. 7.22 and 7.23) in forms analogous to Fick's law for binary diffusion for all but one species; i.e.,

$$\dot{m}_{i,\text{diff},z}'' = -\rho D_{im} \nabla Y_i \quad i = 1, 2, \dots, N-1 \quad (7.30)$$

and

$$\mathbf{v}_{i,\text{diff},\chi} = -\frac{\mathcal{D}_{im}}{Y_i} \nabla Y_i \quad i = 1, 2, \dots, N-1, \quad (7.31)$$

where  $\mathcal{D}_{im}$  is the **effective binary diffusion coefficient** for species  $i$  in the mixture  $m$ , as defined below. Since overall mass conservation does not necessarily obtain when Eqns. 7.30 and 7.31 are used consistently for all  $N$  species, we use the fact that the sum of all of the species diffusion fluxes must be zero to obtain the diffusion velocity for the  $N$ th species:

$$\sum_{i=1}^N \rho Y_i \mathbf{v}_{i,\text{diff},\chi} = 0 \quad (7.32)$$

or

$$\mathbf{v}_{N,\text{diff},\chi} = -\frac{1}{Y_N} \sum_{i=1}^{N-1} Y_i \mathbf{v}_{i,\text{diff},\chi}. \quad (7.33)$$

Kee *et al.* [10] suggest that Eqn. 7.33 be applied to the species in excess, which in many combustion systems is  $\text{N}_2$ . This method effects a simplification because the effective binary diffusion coefficients  $\mathcal{D}_{im}$  are easy to calculate. The following expression for  $\mathcal{D}_{im}$  [5], although rigorously true only for the special case of all species except  $i$  having the same velocities [2], can be employed:

$$\mathcal{D}_{im} = \frac{1 - \chi_i}{\sum_{j \neq i}^N (\chi_j / \mathcal{D}_{ij})} \quad \text{for } i = 1, 2, \dots, N-1. \quad (7.34)$$

One particularly useful simplification obtains when all species but one, the  $N$ th, are in trace quantities. For this special case, then,

$$\mathcal{D}_{im} = \mathcal{D}_{iN}. \quad (7.35)$$

Here we see that one needs only to compute the  $N-1$  binary diffusion coefficients to determine all of the species diffusion velocities.

Consider the same mixture of  $\text{H}_2$ ,  $\text{O}_2$ , and  $\text{N}_2$  presented in Example 7.1.

### Example 7.2

- Calculate the effective binary diffusion coefficients for each of the three species.
- Write out expressions for the diffusion velocities for each of the species using effective binary diffusion coefficients. Assume a 1-D planar geometry. Compare this representation with the exact formulation employing multicomponent diffusion coefficients.

#### Solution

To determine the three  $\mathcal{D}_{im}$ s, we straightforwardly apply Eqn. 7.34 using the same convention as in Example 7.1 to designate the species. The required binary diffusivities,  $\mathcal{D}_{\text{H}_2-\text{O}_2}$ ,  $\mathcal{D}_{\text{H}_2-\text{N}_2}$ , and  $\mathcal{D}_{\text{O}_2-\text{N}_2}$ , have the same values previously determined. Thus,

$$\mathcal{D}_{H_2-m} = \frac{1 - \chi_{H_2}}{\frac{\chi_{O_2}}{\mathcal{D}_{H_2-O_2}} + \frac{\chi_{N_2}}{\mathcal{D}_{H_2-N_2}}} = \frac{1 - 0.15}{\frac{0.20}{2.567} + \frac{0.65}{2.410}} = 2.445 \text{ cm}^2/\text{s},$$

$$\mathcal{D}_{O_2-m} = \frac{1 - \chi_{O_2}}{\frac{\chi_{H_2}}{\mathcal{D}_{O_2-H_2}} + \frac{\chi_{N_2}}{\mathcal{D}_{O_2-N_2}}} = \frac{1 - 0.20}{\frac{0.15}{2.567} + \frac{0.65}{0.675}} = 0.783 \text{ cm}^2/\text{s},$$

$$\mathcal{D}_{N_2-m} = \frac{1 - \chi_{N_2}}{\frac{\chi_{H_2}}{\mathcal{D}_{N_2-H_2}} + \frac{\chi_{O_2}}{\mathcal{D}_{N_2-O_2}}} = \frac{1 - 0.65}{\frac{0.15}{2.410} + \frac{0.20}{0.675}} = 0.976 \text{ cm}^2/\text{s}.$$

With a mole fraction of 0.65, N<sub>2</sub> is the species in excess; thus, we apply Eqn. 7.31 for H<sub>2</sub> and O<sub>2</sub>, and Eqn. 7.33 for N<sub>2</sub> to obtain expressions for the species diffusion velocities:

$$v_{H_2,\text{diff}} = -\frac{\mathcal{D}_{H_2-m}}{Y_{H_2}} \frac{dY_{H_2}}{dx},$$

$$v_{O_2,\text{diff}} = -\frac{\mathcal{D}_{O_2-m}}{Y_{O_2}} \frac{dY_{O_2}}{dx},$$

$$v_{N_2,\text{diff}} = -\frac{\mathcal{D}_{H_2-m}}{Y_{N_2}} \frac{dY_{H_2}}{dx} + \frac{\mathcal{D}_{O_2-m}}{Y_{N_2}} \frac{dY_{O_2}}{dx}.$$

To compare with the above, the exact multicomponent expressions for the diffusion velocities are obtained by applying Eqn. 7.23 for each species:

$$v_{H_2,\text{diff}} = \frac{1}{\chi_{H_2} MW_{\text{mix}}} \left[ MW_{O_2} D_{H_2-O_2} \frac{d\chi_{O_2}}{dx} + MW_{N_2} D_{H_2-N_2} \frac{d\chi_{N_2}}{dx} \right],$$

$$v_{O_2,\text{diff}} = \frac{1}{\chi_{O_2} MW_{\text{mix}}} \left[ MW_{H_2} D_{O_2-H_2} \frac{d\chi_{H_2}}{dx} + MW_{N_2} D_{O_2-N_2} \frac{d\chi_{N_2}}{dx} \right],$$

$$v_{N_2,\text{diff}} = \frac{1}{\chi_{N_2} MW_{\text{mix}}} \left[ MW_{H_2} D_{N_2-H_2} \frac{d\chi_{H_2}}{dx} + MW_{O_2} D_{N_2-O_2} \frac{d\chi_{O_2}}{dx} \right].$$

### Comment



Note the computational simplicity of the effective-binary method: first, the computation of the  $\mathcal{D}_{im}$ s is nearly trivial in comparison with calculating the  $D_{ij}$ s; second, all of the diffusion velocities but one are expressed as single terms containing a single concentration gradient. In contrast, each species diffusion velocity in the exact multicomponent is expressed by  $N - 1$  terms, each term containing a different concentration gradient.

## MOMENTUM CONSERVATION

### One-Dimensional Forms

Momentum conservation for our 1-D planar and spherical systems is exceedingly simple because we neglect both viscous forces and the gravitational body force. Figure 7.3 illustrates that the only forces acting on our planar control volume are those due to pressure. Also, there is only a single momentum flow in and a single momentum flow out of the control volume because of the simple geometry. For steady state, the general statement of momentum conservation is that the sum of all forces acting in a given direction on a control volume equals the net flow of momentum out of the control volume in the same direction, i.e.,

$$\sum \mathbf{F} = \dot{m}\mathbf{v}_{\text{out}} - \dot{m}\mathbf{v}_{\text{in}}. \quad (7.36)$$

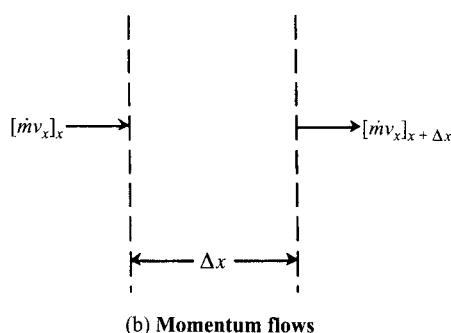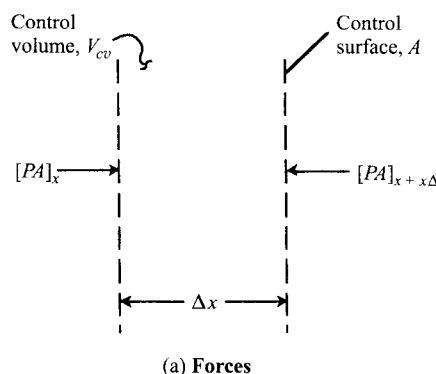

**Figure 7.3** Control volume for one-dimensional analysis of momentum conservation, neglecting all effects of viscosity.

For the 1-D system shown in Fig. 7.3, Eqn. 7.36 is written

$$[PA]_x - [PA]_{x+\Delta x} = \dot{m}([v_x]_{x+\Delta x} - [v_x]_x). \quad (7.37)$$

Dividing the left- and right-hand-sides of the above equation by  $\Delta x$ , recognizing that both  $A$  and  $\dot{m}$  are constant, and taking the limit  $\Delta x \rightarrow 0$ , we recover the following ordinary differential equation:

$$-\frac{dP}{dx} = \dot{m}'' \frac{dv_x}{dx}. \quad (7.38a)$$

Expressing the mass flux in terms of the velocity ( $\dot{m}'' = \rho v_x$ ), Eqn. 7.38a becomes

$$-\frac{dP}{dx} = \rho v_x \frac{dv_x}{dx}. \quad (7.38b)$$

This is the 1-D Euler equation with which you are probably familiar. For the spherically symmetric flow, a similar result is found where  $r$  and  $v_r$  replace  $x$  and  $v_x$ , respectively.

For the 1-D laminar premixed flame (Chapter 8), and droplet combustion (Chapter 10), we will assume that kinetic energy change across the flame is small; i.e.,

$$\frac{d(v_x^2/2)}{dx} = v_x \frac{dv_x}{dx} \approx 0.$$

Hence, the momentum equation simplifies to the trivial result that


$$\frac{dP}{dx} = 0, \quad (7.39)$$

which implies that the pressure is constant throughout the flowfield. The same result obtains for the spherical system.

## Two-Dimensional Forms


Rather than proceeding directly with the axisymmetric problem, we first illustrate the essential elements of momentum conservation for a two-dimensional viscous flow in cartesian ( $x, y$ ) coordinates. Working in the cartesian system allows us to visualize and assemble the various terms in the momentum equation in a more straightforward manner than is possible in cylindrical coordinates. Following this development, we present the analogous axisymmetric formulation and simplify this for the boundary-layer-like jet flow.

Figure 7.4 illustrates the various forces acting in the  $x$ -direction on a control volume having a width  $\Delta x$ , height  $\Delta y$ , and unit depth in a steady two-dimensional flow. Acting normal to the  $x$ -faces are the normal viscous stresses  $\tau_{xx}$ , and the pressure  $P$ , each multiplied by the area over which they act,  $\Delta y(1)$ . Acting on the  $y$ -faces, but generating a force in the  $x$ -direction, are

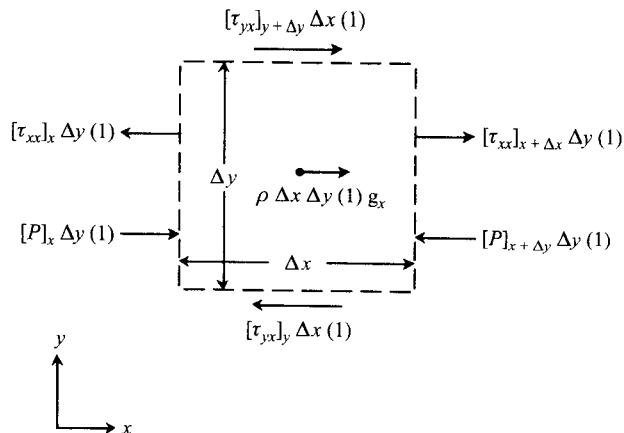

**Figure 7.4** Forces in the  $x$ -direction acting on  $x$ - and  $y$ -faces of a two-dimensional control volume of unit depth (perpendicular to page).

the viscous shear stresses  $\tau_{yx}$ , also multiplied by the area over which they act,  $\Delta x(1)$ . Acting at the center of mass of the control volume is the body force associated with gravity,  $m_{cv} g_x (= \rho \Delta x \Delta y(1) g_x)$ . The various  $x$ -direction momentum flows associated with the same control volume are shown in Fig. 7.5. Each of these corresponds to the product of the mass flowrate through the control-volume face of interest and the  $x$ -component of the velocity at that face. Applying the principle of momentum conservation, which states that the sum of the forces in the  $x$ -direction must equal the net momentum flow out of the control volume, we write

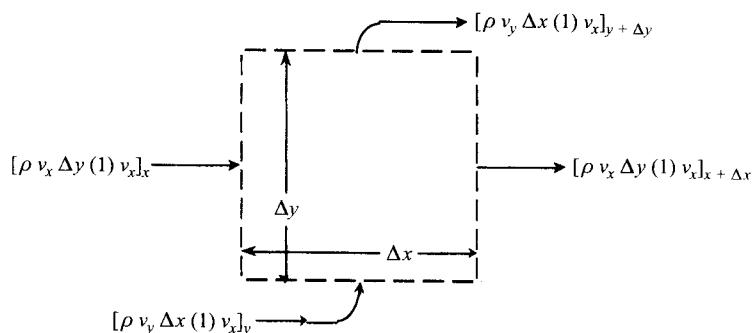

**Figure 7.5** Momentum flows through  $x$ - and  $y$ -faces of a two-dimensional control volume of unit depth (perpendicular to page).

$$\begin{aligned}
 & ([\tau_{xx}]_{x+\Delta x} - [\tau_{xx}]_x) \Delta y(1) + \left( [\tau_{yx}]_{y+\Delta y} - [\tau_{yx}]_y \right) \Delta x(1) \\
 & + ([P]_x - [P]_{x+\Delta x}) \Delta y(1) + \rho \Delta x \Delta y(1) g_x \\
 & = ([\rho v_x v_x]_{x+\Delta x} - [\rho v_x v_x]_x) \Delta y(1) \\
 & + ([\rho v_y v_x]_{y+\Delta y} - [\rho v_y v_x]_y) \Delta x(1).
 \end{aligned} \tag{7.40}$$

Dividing each term above by  $\Delta x \Delta y$ , taking the limits  $\Delta x \rightarrow 0$  and  $\Delta y \rightarrow 0$ , and recognizing the definitions of the various partial derivatives, Eqn. 7.40 becomes

$$\frac{\partial(\rho v_x v_x)}{\partial x} + \frac{\partial(\rho v_y v_x)}{\partial y} = \frac{\partial \tau_{xx}}{\partial x} + \frac{\partial \tau_{yx}}{\partial y} - \frac{\partial P}{\partial x} + \rho g_x, \tag{7.41}$$

where the momentum flows have been placed on the left-hand-side, and the forces on the right.

A similar procedure yields the steady-flow  $y$ -component of the momentum equation:

$$\frac{\partial(\rho v_x v_y)}{\partial x} + \frac{\partial(\rho v_y v_y)}{\partial y} = \frac{\partial \tau_{xy}}{\partial x} + \frac{\partial \tau_{yy}}{\partial y} - \frac{\partial P}{\partial y} + \rho g_y. \tag{7.42}$$

The corresponding equations for the axial and radial components of the momentum equation for the axisymmetric flow expressed in cylindrical coordinates are

*Axial ( $x$ ) component*

$$\frac{\partial}{\partial x} (r \rho v_x v_x) + \frac{\partial}{\partial r} (r \rho v_x v_r) = \frac{\partial}{\partial r} (r \tau_{rx}) + r \frac{\partial \tau_{xx}}{\partial x} - r \frac{\partial P}{\partial x} + \rho g_x r \tag{7.43}$$

*Radial ( $r$ ) component*

$$\frac{\partial}{\partial x} (r \rho v_r v_x) + \frac{\partial}{\partial r} (r \rho v_r v_r) = \frac{\partial}{\partial r} (r \tau_{rr}) + r \frac{\partial \tau_{rx}}{\partial x} - r \frac{\partial P}{\partial r}. \tag{7.44}$$

To preserve axisymmetry in the presence of a gravitational field, we assume that the gravitational acceleration is aligned with the  $x$ -direction.

For a Newtonian fluid, the viscous stresses appearing in the above equations are given by

$$\tau_{xx} = \mu \left[ 2 \frac{\partial v_x}{\partial x} - \frac{2}{3} (\nabla \cdot \mathbf{V}) \right], \tag{7.45a}$$

$$\tau_{rr} = \mu \left[ 2 \frac{\partial v_r}{\partial r} - \frac{2}{3} (\nabla \cdot \mathbf{V}) \right], \tag{7.45b}$$

$$\tau_{rx} = \mu \left[ 2 \frac{\partial v_x}{\partial r} + \frac{\partial v_r}{\partial x} \right], \tag{7.45c}$$

where  $\mu$  is the fluid viscosity and

$$(\mathbf{V} \cdot \mathbf{V}) = \frac{1}{r} \frac{\partial}{\partial r} (r v_r) + \frac{\partial v_x}{\partial x}.$$

Our purpose in developing the axisymmetric flow momentum equations is to apply them to jet flames in subsequent chapters. Jets have characteristics very similar to boundary layers that develop in flows adjoining a solid surface. First, the jet width is typically small in comparison with its length in the same sense that a boundary layer is thin in comparison with its length. Second, velocities change much more rapidly in the direction transverse to the flow than they do in the axial direction, i.e.,  $\partial(\ )/\partial r \gg \partial(\ )/\partial x$ . And lastly, axial velocities are much larger than the transverse velocities, i.e.,  $v_x \gg v_r$ . Using these properties of a jet (boundary layer) flow, the axial component of the momentum equation (Eqn. 7.43) can be simplified using dimensional (order-of-magnitude) analysis. Specifically, for the axial component,  $r(\partial \tau_{xx}/\partial x)$  is neglected, since

$$\frac{\partial}{\partial r} (r \tau_{rx}) \gg r \frac{\partial \tau_{xx}}{\partial x},$$

and  $\tau_{rx}$  simplifies to

$$\tau_{rx} = \mu \frac{\partial v_x}{\partial r},$$

since

$$\frac{\partial v_x}{\partial r} \gg \frac{\partial v_r}{\partial x}.$$

With these simplifications, the axial momentum equation becomes

$$\frac{\partial}{\partial x} (r \rho v_x v_x) + \frac{\partial}{\partial r} (r \rho v_x v_r) = \frac{\partial}{\partial r} \left( r \mu \frac{\partial v_x}{\partial r} \right) - r \frac{\partial P}{\partial x} + \rho g_x r. \quad (7.46)$$

From a similar order-of-magnitude analysis of the radial momentum equation, one comes to the conclusion that  $\partial P/\partial r$  is very small (see, e.g., Schlichting [11]). This implies that the pressure inside the jet at any axial station is essentially the same as the pressure in the ambient fluid, outside of the jet, at the same axial position. With this knowledge, we can equate  $\partial P/\partial x$  appearing in the axial momentum equation to the hydrostatic pressure gradient in the ambient fluid; and, furthermore, the velocity components  $v_x$  and  $v_r$  can be determined by simultaneously solving the overall continuity (Eqn. 7.7) and axial momentum (Eqn. 7.46) equations, with no need to include the radial momentum equation explicitly.

In our future developments (Chapters 9 and 13), we will assume that the jet is oriented vertically upwards with gravity acting downwards, thus providing a positive buoyancy effect, or, in some cases, neglect gravity altogether. For the first case, then, we recognize, as mentioned above, that

$$\frac{\partial P}{\partial x} \approx \frac{\partial P_\infty}{\partial x} = -\rho_\infty g \quad (7.47)$$

where  $g (= -g_x)$  is the scalar gravitational acceleration ( $9.81 \text{ m/s}^2$ ), and  $P_\infty$  and  $\rho_\infty$  are the ambient fluid pressure and density, respectively. Combining Eqn. 7.47 with Eqn. 7.46 yields our final form of the axial momentum equation:

$\frac{1}{r} \frac{\partial}{\partial x} (r \rho v_x v_x) +$ <p style="text-align: center;"><i>x</i>-Momentum flow by axial convection per unit volume</p>	$\frac{1}{r} \frac{\partial}{\partial r} (r \rho v_x v_r) +$ <p style="text-align: center;"><i>x</i>-Momentum flow by radial convection per unit volume</p>	$= \frac{1}{r} \frac{\partial}{\partial r} \left( r \mu \frac{\partial v_x}{\partial r} \right) + (\rho_\infty - \rho) g$ <p style="text-align: center;">Viscous force per unit volume</p> <p style="text-align: center;">Buoyant force per unit volume</p>
--	---	---

(7.48)

Note that the above relation allows for variable density, an inherent characteristic of combusting flows, and variable (temperature-dependent) viscosity.

## ENERGY CONSERVATION


### General One-Dimensional Form

Starting with a one-dimensional cartesian system, we consider the control volume shown in Fig. 7.6, where the various energy flows into and out of a plane layer,  $\Delta x$  in length, are shown. Following Eqn. 2.28, the first law of thermodynamics can be expressed as follows:

$$(\dot{Q}_x'' - \dot{Q}_{x+\Delta x}'')A - \dot{W}_{cv} = \dot{m}'' A \left[ \left( h + \frac{v_x^2}{2} + gz \right)_{x+\Delta x} - \left( h + \frac{v_x^2}{2} + gz \right)_x \right]. \quad (7.49)$$

From the outset, we assume steady state; thus, no energy accumulation within the control volume is indicated. We also assume that no work is done by the control volume and that there is no change in potential energies of the inlet and outlet streams. With these assumptions, dividing through by the area  $A$ , and rearranging, Eqn. 7.49 becomes

$$-(\dot{Q}_{x+\Delta x}'' - \dot{Q}_x'') = \dot{m}'' \left[ \left( h + \frac{v_x^2}{2} \right)_{x+\Delta x} - \left( h + \frac{v_x^2}{2} \right)_x \right]. \quad (7.50)$$

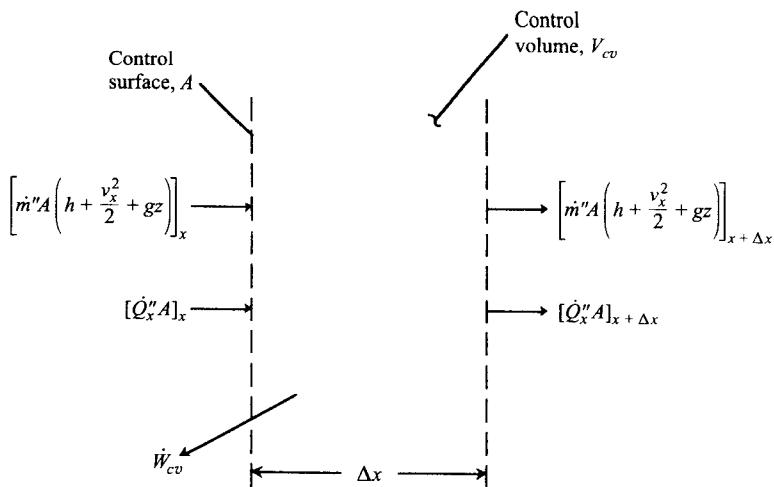

**Figure 7.6** Control volume for one-dimensional, steady-state analysis of energy conservation.

Dividing both sides of Eqn. 7.50 by  $\Delta x$ , taking the limit  $\Delta x \rightarrow 0$ , and recognizing the definition of a derivative, we obtain the following differential equation:

$$-\frac{d\dot{Q}_x''}{dx} = \dot{m}'' \left( \frac{dh}{dx} + v_x \frac{dv_x}{dx} \right). \quad (7.51)$$

If we were dealing with a system where there was no species diffusion, we would simply replace the heat flux  $\dot{Q}_x''$  with Fourier's law for conduction; however, in our system, which assumes that species are diffusing, the heat flux consists of both conduction and an additional enthalpy flux resulting from the diffusing species. Assuming there is no radiation, the general vector form of the heat flux is given by

$$\dot{\mathbf{Q}}'' = -k\nabla T + \sum \dot{\mathbf{m}}_{i,\text{diff}}'' h_i, \quad (7.52a)$$

Heat flux vector	Conduction contribution	Species diffusion contribution
------------------	-------------------------	--------------------------------

where  $\dot{\mathbf{m}}_{i,\text{diff}}''$  is the diffusional flux of the  $i$ th species, which was introduced in our discussion of species conservation. For our 1-D plane layer, the heat flux is

$$\dot{Q}_x'' = -k \frac{dT}{dx} + \sum \rho Y_i (v_{ix} - v_x) h_i, \quad (7.52b)$$

where we have related the diffusional flux to the diffusion velocity (Eqn. 7.14). At this juncture, we have all the physics we wish to consider defined by Eqn. 7.51 with Eqn. 7.52b. The following development is primarily mathematical

manipulation and coupling with concepts and definitions from our discussion of species conservation.

Before substituting  $\dot{Q}_x''$  back into our expression for overall energy conservation, we rewrite Eqn. 7.52b in terms of the bulk and species mass fluxes, i.e.,

$$\dot{Q}_x'' = -k \frac{dT}{dx} + \sum \rho v_{ix} Y_i h_i - \rho v_x \sum Y_i h_i = -k \frac{dT}{dx} + \sum \dot{m}_i'' h_i - \dot{m}'' h, \quad (7.53)$$

where we recognize that  $\dot{m}_i'' = \rho v_{ix} Y_i$ ,  $\rho v_x = \dot{m}''$ , and  $\sum Y_i h_i = h$ . Now substituting Eqn. 7.53 into Eqn. 7.51, canceling the  $\dot{m}'' dh/dx$  terms which appear on each side, and rearranging, results in

$$\frac{d}{dx} \left( \sum h_i \dot{m}_i'' \right) + \frac{d}{dx} \left( -k \frac{dT}{dx} \right) + \dot{m}'' v_x \frac{dv_x}{dx} = 0. \quad (7.54)$$

We now expand the first term in Eqn. 7.54; i.e.,

$$\frac{d}{dx} \left( \sum h_i \dot{m}_i'' \right) = \sum \dot{m}_i'' \frac{dh_i}{dx} + \sum h_i \frac{d\dot{m}_i''}{dx}.$$

The term  $d\dot{m}_i''/dx$ , which now appears, is key in that from species conservation (Eqn. 7.9),

$$\frac{d\dot{m}_i''}{dx} = \dot{m}_i'''.$$

With the substitution of the above, energy conservation (Eqn. 7.54) is explicitly linked to the species production rates associated with chemical reactions. Our final 1-D energy conservation equation is

$$\sum \dot{m}_i'' \frac{dh_i}{dx} + \frac{d}{dx} \left( -k \frac{dT}{dx} \right) + \dot{m}'' v_x \frac{dv_x}{dx} = - \sum h_i \dot{m}_i''' \quad (7.55)$$

Equation 7.55 is often the starting point for further simplification and, as such, applies equally well to multicomponent (nonbinary) and binary systems. It is also important to note that, so far, no assumptions have been made with regard to the thermophysical properties ( $k, \rho, c_p, \mathcal{D}$ ); we have, however, assumed that there is no radiation, no viscous dissipation, and no potential energy changes (see Table 7.1).

### Shvab–Zeldovich Forms

The **Shvab–Zeldovich energy equation**, so named in recognition of the researchers who first developed it, is particularly useful in that the species mass fluxes and enthalpies are eliminated from the left-hand-side of Eqn. 7.55 and replaced with terms having temperature as the only dependent variable. A key assumption in the development of the Shvab–Zeldovich equation is that the **Lewis number** ( $Le = k/\rho c_p \mathcal{D}$ ) is unity. The **unity  $Le$  assumption** is frequently invoked

**Table 7.1** Energy equation assumptions

Equation	Basic Assumptions/Neglected Effects	Properties	Mass Transfer Laws	Geometry
Eqn. 7.55	i. Steady state ii. No effect of gravity iii. No shaft work or viscous dissipation iv. No radiation heat transfer	Variable, temperature-dependent properties	Ordinary (concentration gradient) diffusion only	Constant-area plane layer (1-D cartesian)
Eqn. 7.62	i–iv above + Thermal diffusivity ( $\alpha$ ) equals mass diffusivity ( $D$ ), i.e., the Lewis number ( $Le$ ) is unity	As above	As above + Binary (or effective binary) diffusion governed by Fick's law	As above
Eqn. 7.63	As above + Kinetic energy changes are negligible, which implies that the pressure is constant	As above	As above	As above
Eqn. 7.65	As above	As above	As above	One-dimensional, spherically symmetric
Eqn. 7.66	As above + Negligible diffusion in the axial ( $x$ ) direction	As above	As above	Two-dimensional, axisymmetric
Eqn. 7.67	As in Eqn. 7.55 + Kinetic energy changes negligible	As above	Multicomponent diffusion	As in Eqn. 7.55

in the analysis of combustion problems, and the great simplification that it affords will be emphasized here. Another key assumption in our development is that Fick's law can be used to describe the species mass fluxes.

We begin by examining the heat flux for a reacting flow defined in Eqn. 7.52a:

$$\dot{Q}_x'' = -k \frac{dT}{dx} + \sum \dot{m}_{i,\text{diff}}'' h_i. \quad (7.56)$$

Using the definition of the species flux (Eqn. 7.15a) and Fick's law (Eqn. 3.1 or 7.17), Eqn. 7.56 becomes

$$\dot{Q}_x'' = -k \frac{dT}{dx} - \sum \rho D \frac{dY_i}{dx} h_i \quad (7.57a)$$

or, assuming a single diffusivity characterizes the mixture,

$$\dot{Q}_x'' = -k \frac{dT}{dx} - \rho D \sum h_i \frac{dY_i}{dx}. \quad (7.57b)$$

By applying the definition of the derivative of the product,

$$\frac{d \sum h_i Y_i}{dx} = \sum h_i \frac{d Y_i}{dx} + \sum Y_i \frac{d h_i}{dx},$$

the heat flux is now expressed as

$$\dot{Q}_x'' = -k \frac{dT}{dx} - \rho D \frac{d \sum h_i Y_i}{dx} + \rho D \sum Y_i \frac{d h_i}{dx}. \quad (7.57c)$$

We use the definition of  $h \equiv \sum h_i Y_i$  to simplify the second term on the right-hand-side; while the third term can be expressed in terms of  $c_p$  and  $T$  by recognizing that

$$\sum Y_i \frac{d h_i}{dx} = \sum Y_i c_{p,i} \frac{dT}{dx} = c_p \frac{dT}{dx}.$$

The three terms that constitute the heat flux are now

$$\dot{Q}_x'' = -k \frac{dT}{dx} - \rho D \frac{dh}{dx} + \rho D c_p \frac{dT}{dx}. \quad (7.57d)$$

Using the definition of the thermal diffusivity,  $\alpha \equiv k/\rho c_p$ , to express the thermal conductivity appearing in the above, results in

$$\begin{aligned} \dot{Q}_x'' = & -\rho \alpha c_p \frac{dT}{dx} - \rho D \frac{dh}{dx} + \rho D c_p \frac{dT}{dx}, \\ & \text{Flux of sensible} \\ & \text{enthalpy due to} \\ & \text{conduction} & \text{Flux of absolute} \\ & & \text{enthalpy due to} \\ & & \text{species diffusion} & \text{Flux of sensible} \\ & & & \text{enthalpy due to} \\ & & & \text{species diffusion} \end{aligned} \quad (7.58)$$

where a physical interpretation of each of the terms is shown. In general, all three terms contribute to the total heat flux; however, for the special case where  $\alpha = D$ , we see that the sensible enthalpy flux due to conduction cancels with the sensible enthalpy flux arising from species diffusion. Since the Lewis number is defined as the ratio of  $\alpha$  to  $D$ ,

$$Le \equiv \frac{\alpha}{D} = 1 \quad (7.59)$$

for this special case. For many species of interest in combustion, Lewis numbers are of the order of unity, thus providing some physical justification for equating  $\alpha$  and  $D$ . With this assumption, the heat flux is simply

$$\dot{Q}_x'' = -\rho D \frac{dh}{dx}. \quad (7.60)$$

We now employ the above in our basic energy conservation equation (Eqn. 7.51); thus,

$$\frac{d}{dx} \left( \rho D \frac{dh}{dx} \right) = \dot{m}'' \frac{dh}{dx} + \dot{m}'' v_x \frac{dv_x}{dx}. \quad (7.61)$$

Employing the definition of the absolute (or standardized) enthalpy,

$$h = \sum Y_i h_{f,i}^o + \int_{T_{ref}}^T c_p dT,$$

Eqn. 7.61 becomes

$$\frac{d}{dx} \left[ \rho D \sum h_{f,i}^o \frac{dY_i}{dx} + \rho D \frac{d \int c_p dT}{dx} \right] = \dot{m}'' \sum h_{f,i}^o \frac{dY_i}{dx} + \dot{m}'' \frac{d \int c_p dT}{dx} + \dot{m}'' v_x \frac{dv_x}{dx}.$$

Rearranging the above yields

$$\dot{m}'' \frac{d \int c_p dT}{dx} - \frac{d}{dx} \left[ \rho D \frac{d \int c_p dT}{dx} \right] + \dot{m}'' v_x \frac{dv_x}{dx} = - \frac{d}{dx} \left[ \sum h_{f,i}^o \left( \dot{m}'' Y_i - \rho D \frac{dY_i}{dx} \right) \right].$$

The right-hand-side of the above is simplified by employing both Fick's law and species conservation (Eqn. 7.9):

$$- \frac{d}{dx} \left[ \sum h_{f,i}^o \left( \dot{m}'' Y_i - \rho D \frac{dY_i}{dx} \right) \right] = - \frac{d}{dx} \left[ \sum h_{f,i}^o \dot{m}_i'' \right] = - \sum h_{f,i}^o \dot{m}_i'''.$$

We now reassemble our final result:

$$\dot{m}'' \frac{d \int c_p dT}{dx} - \frac{d}{dx} \left[ \rho D \frac{d \int c_p dT}{dx} \right] + \dot{m}'' v_x \frac{dv_x}{dx} = - \sum h_{f,i}^o \dot{m}_i'''. \quad (7.62)$$

Thus far, we have retained the kinetic energy change term for completeness; however, this term is usually small and generally neglected in most developments of the Shvab-Zeldovich energy equation. Dropping this term, we have the following result, which has the simple physical interpretation that the combined rates of convection (advection) and diffusion of sensible enthalpy (thermal energy) equal the rate at which chemical energy is converted to thermal energy by chemical reaction:

$\dot{m}'' \frac{d \int c_p dT}{dx}$	$+ \frac{d}{dx} \left[ -\rho D \frac{d \int c_p dT}{dx} \right]$	$= - \sum h_{f,i}^o \dot{m}_i'''$
Rate of sensible enthalpy transport by convection (advection) per unit volume ( $\text{W/m}^3$ )	Rate of sensible enthalpy transport by diffusion per unit volume ( $\text{W/m}^3$ )	Rate of sensible enthalpy production by chemical reaction per unit volume ( $\text{W/m}^3$ )

(7.63)

The general form of the Shvab–Zeldovich energy equation is

$$\nabla \cdot [\dot{m}'' \int c_p dT - \rho D \nabla (\int c_p dT)] = - \sum h_{f,i}^o \dot{m}_i''' . \quad (7.64)$$

We can apply the definitions of the vector operators to obtain the Shvab–Zeldovich energy equation for our spherical and axisymmetric geometries. The 1-D spherical form is

$$\frac{1}{r^2} \frac{d}{dr} \left[ r^2 \left( \rho v_r \int c_p dT - \rho D \frac{d \int c_p dT}{dr} \right) \right] = - \sum h_{f,i}^o \dot{m}_i''' \quad (7.65)$$

and the axisymmetric form is

$\frac{1}{r} \frac{\partial}{\partial x} (r \rho v_x \int c_p dT) + \frac{1}{r} \frac{\partial}{\partial r} (r \rho v_r \int c_p dT) - \frac{1}{r} \frac{\partial}{\partial r} \left( r \rho D \frac{\partial \int c_p dT}{\partial r} \right) = - \sum h_{f,i}^o \dot{m}_i'''$			
Rate of sensible enthalpy transport by axial convection (advection) per unit volume (W/m <sup>3</sup> )	Rate of sensible enthalpy transport by radial convection (advection) per unit volume (W/m <sup>3</sup> )	Rate of sensible enthalpy transport by radial diffusion per unit volume (W/m <sup>3</sup> )	Rate of sensible enthalpy production by chemical reaction per unit volume (W/m <sup>3</sup> )

(7.66)

## Useful Form for Flame Calculations

In numerical models of both premixed [3] and nonpremixed [4], steady, laminar flames, it is convenient for the species diffusion velocity  $v_{i,diff}$  ( $= v_{i,diff,x} + v_{i,diff,T}$ ) to appear explicitly in the energy equation. For the 1-D problem, we can start with Eqn. 7.55, neglect the kinetic-energy change term, and obtain the following:

$$\dot{m}'' c_p \frac{dT}{dx} + \frac{d}{dx} \left( -k \frac{dT}{dx} \right) + \sum_{i=1}^N \rho Y_i v_{i,diff} c_{p,i} \frac{dT}{dx} = - \sum_{i=1}^N h_i \dot{m}_i''' , \quad (7.67)$$

where  $c_p \equiv \sum Y_i c_{p,i}$  and  $N$  is the number of species considered.

To arrive at this result requires the application of the ideal-gas calorific equation of state (Eqn. 6.11), steady-state species conservation from Eqn. 7.16, the definition of mixture properties in terms of the components (Eqn. 2.15), and the product rule for derivatives. With these hints, the derivation of Eqn. 7.67 is left as an exercise for the reader.

Note that, in all of the forms of the energy equation given above, we have made no assumptions that the properties are constant; however, in many simplified analyses of combustion systems, as we will employ in subsequent chapters, it is useful to treat  $c_p$  and the product  $\rho D$  as constants. Table 7.1 summarizes the assumptions we have employed in developing our various energy conservation equations.

## THE CONCEPT OF A CONSERVED SCALAR

The **conserved scalar** concept greatly simplifies the solution of reacting flow problems (i.e., the determination of the fields of velocity, species, and temperature), particularly those involving nonpremixed flames. A somewhat tautological definition of a conserved scalar is any scalar property that is conserved throughout the flowfield. For example, with certain restrictions, the absolute enthalpy is conserved at every point in a flow when there are no sources (or sinks) of thermal energy, such as radiation into or out of the flow or viscous dissipation. In this case, then, the absolute enthalpy would qualify as being a conserved scalar. Element mass fractions are also conserved scalars, since elements are neither created nor destroyed by chemical reaction. There are many conserved scalars that can be defined [12]; however, in the development here we choose to deal with only two: the mixture fraction, defined below, and the previously mentioned mixture absolute enthalpy.


### Definition of Mixture Fraction

If we restrict our flow system to consist of a single inlet stream of pure fuel together with a single stream of pure oxidizer, which react to form a single product, we can define the **mixture fraction**,  $f$ , a conserved scalar, as

$$f \equiv \frac{\text{Mass of material having its origin in the fuel stream}}{\text{Mass of mixture}}. \quad (7.68)$$

Since Eqn. 7.68 applies to an infinitesimally small volume,  $f$  is just a special kind of mass fraction, formed as a combination of fuel, oxidizer, and product mass fractions, as shown below. For example,  $f$  is unity in the fuel stream and zero in the oxidizer stream; and within the flowfield,  $f$  takes on values between unity and zero.

For our three-“species” system, we can define  $f$  in terms of the fuel, oxidizer, and product mass fractions at any point in the flow, when

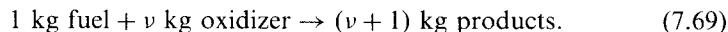

That is,

$$\begin{aligned} f &= (1) Y_F \\ &\quad \left( \frac{\text{kg fuel stuff}}{\text{kg fuel}} \right) \left( \frac{\text{kg fuel}}{\text{kg mixture}} \right) \\ &+ \left( \frac{1}{v+1} \right) Y_{Pr} + (0) Y_{Ox}, \\ &\quad \left( \frac{\text{kg fuel stuff}}{\text{kg products}} \right) \left( \frac{\text{kg products}}{\text{kg mixture}} \right) \left( \frac{\text{kg fuel stuff}}{\text{kg oxidizer}} \right) \left( \frac{\text{kg oxidizer}}{\text{kg mixture}} \right) \end{aligned} \quad (7.70)$$

where “fuel stuff” is that material originating in the fuel stream. For a hydrocarbon fuel, fuel stuff is carbon and hydrogen. Equation 7.70 is more simply written

$$f = Y_F + \left( \frac{1}{\nu + 1} \right) Y_{Pr} \quad (7.71)$$

This conserved scalar is particularly useful in dealing with diffusion flames where the fuel and oxidizer streams are initially segregated. For premixed combustion, the mixture fraction is everywhere uniform, assuming all species have the same diffusivities; hence, a conservation equation for  $f$  provides no new information.

### Conservation of Mixture Fraction

The utility of the conserved scalar,  $f$ , is that it can be used to generate a species conservation equation that has no reaction rate terms appearing, i.e., the equation is “sourceless.” We can develop this idea simply using the 1-D cartesian species equations as an example. Writing out Eqn. 7.8 for the fuel and product species, we have

$$\dot{m} \frac{dY_F}{dx} - \frac{d}{dx} \left( \rho D \frac{dY_F}{dx} \right) = \dot{m}_F''' \quad (7.72)$$

and

$$\dot{m}'' \frac{dY_{Pr}}{dx} - \frac{d}{dx} \left( \rho D \frac{dY_{Pr}}{dx} \right) = \dot{m}_{Pr}''' \quad (7.73)$$

Dividing Eqn. 7.73 by  $(\nu + 1)$  results in

$$\dot{m}'' \frac{d(Y_{Pr}/(\nu + 1))}{dx} - \frac{d}{dx} [\rho D d(Y_{Pr}/(\nu + 1))] = \frac{1}{\nu + 1} \dot{m}_{Pr}''' \quad (7.74)$$

Mass conservation (Eqn. 7.69) also implies that

$$\dot{m}_{Pr}'''/(\nu + 1) = -\dot{m}_F''' \quad (7.75)$$

where the minus sign reflects that fuel is being consumed and products are being generated. Substituting Eqn. 7.75 into Eqn. 7.74 and adding the resultant equation to Eqn. 7.72 yields

$$\dot{m}'' \frac{d(Y_F + Y_{Pr}/(\nu + 1))}{dx} - \frac{d}{dx} \left[ \rho D \frac{d}{dx} (Y_F + Y_{Pr}/(\nu + 1)) \right] = 0. \quad (7.76)$$

We note that Eqn. 7.76 is “sourceless,” i.e., the right-hand-side is zero, and that the quantity in the derivatives is our conserved scalar, the mixture fraction,  $f$ . Recognizing this, Eqn. 7.76 is rewritten as

$$\dot{m}'' \frac{df}{dx} - \frac{d}{dx} \left( \rho D \frac{df}{dx} \right) = 0 \quad (7.77)$$

Similar manipulations can be performed on the 1-D spherical and the 2-D axisymmetric system equations. For the spherical system, we obtain

$$\frac{d}{dr} \left[ r^2 \left( \rho v_r f - \rho D \frac{df}{dr} \right) \right] = 0 \quad (7.78)$$

and, for the axisymmetric geometry, we obtain

$$\frac{\partial}{\partial x} (r \rho v_x f) + \frac{\partial}{\partial r} (r \rho v_r f) - \frac{\partial}{\partial r} \left( r \rho D \frac{\partial f}{\partial r} \right) = 0 \quad (7.79)$$

Consider a nonpremixed, ethane ( $C_2H_6$ )-air flame in which the mole fractions of the following species are measured using various techniques:  $C_2H_6$ , CO,  $CO_2$ ,  $H_2$ ,  $H_2O$ ,  $N_2$ ,  $O_2$ , and OH. The mole fractions of all other species are assumed to be negligible. Define a mixture fraction  $f$  expressed in terms of the mole fractions of the measured species.

### Example 7.3

#### Solution

Our approach will be to first express  $f$  in terms of the known species mass fractions by exploiting the definition of  $f$  (Eqn. 7.68), and then express the mass fractions in terms of the mole fractions (Eqn. 2.11). Thus,

$$\begin{aligned} f &\equiv \frac{\text{Mass of material originating in fuel stream}}{\text{Mass of mixture}} \\ &= \frac{[m_C + m_H]_{\text{mix}}}{m_{\text{mix}}}, \end{aligned}$$

since the fuel stream consists only of carbon and hydrogen, and assuming that no carbon or hydrogen are present in the oxidizer stream; i.e., the air consists solely of  $N_2$  and  $O_2$ .

In the flame gases, carbon is present in any unburned fuel and in the CO and  $CO_2$ ; while hydrogen is present in unburned fuel,  $H_2$ ,  $H_2O$ , and OH. Summing the mass fractions of carbon and hydrogen associated with each species yields

$$\begin{aligned} f &= Y_{C_2H_6} \frac{2MW_C}{MW_{C_2H_6}} + Y_{CO} \frac{MW_C}{MW_{CO}} + Y_{CO_2} \frac{MW_C}{MW_{CO_2}} \\ &\quad + Y_{C_2H_6} \frac{3MW_{H_2}}{MW_{C_2H_6}} + Y_{H_2} + Y_{H_2O} \frac{MW_{H_2}}{MW_{H_2O}} + Y_{OH} \frac{0.5MW_{H_2}}{MW_{OH}} \end{aligned}$$

where the weighted ratios of molecular weights are the fractions of the element (C or  $H_2$ ) in each of the species. Substituting for the mass fractions,  $Y_i = \chi_i MW_i / MW_{\text{mix}}$ , yields

$$f = \chi_{C_2H_6} \frac{MW_{C_2H_6}}{MW_{\text{mix}}} \frac{2MW_C}{MW_{C_2H_6}} + \chi_{CO} \frac{MW_{CO}}{MW_{\text{mix}}} \frac{MW_C}{MW_{CO}} + \dots \\ = \frac{(2\chi_{C_2H_6} + \chi_{CO} + \chi_{CO_2})MW_C + (3\chi_{C_2H_6} + \chi_{H_2} + \chi_{H_2O} + \frac{1}{2}\chi_{OH})MW_{H_2}}{MW_{\text{mix}}},$$

where

$$MW_{\text{mix}} = \sum \chi_i MW_i \\ = \chi_{C_2H_6} MW_{C_2H_6} + \chi_{CO} MW_{CO} + \chi_{CO_2} MW_{CO_2} \\ + \chi_{H_2} MW_{H_2} + \chi_{H_2O} MW_{H_2O} + \chi_{N_2} MW_{N_2} \\ + \chi_{O_2} MW_{O_2} + \chi_{OH} MW_{OH}.$$

#### Comment

Here we see that although the mixture fraction is simple in concept, experimental determinations of  $f$  may require the measurement of many species. Approximate values, of course, can be obtained by neglecting the minor species that are difficult to measure.

#### Example 7.4

For the experiment discussed in Example 7.3, determine a numerical value for the mixture fraction, where the mole fractions measured at a point in the flame are the following:

$$\begin{aligned} \chi_{CO} &= 949 \text{ ppm}, & \chi_{H_2O} &= 0.1488, \\ \chi_{CO_2} &= 0.0989, & \chi_{O_2} &= 0.0185, \\ \chi_{H_2} &= 315 \text{ ppm}, & \chi_{OH} &= 1350 \text{ ppm}. \end{aligned}$$

Assume the balance of the mixture is  $N_2$ . Also, determine the equivalence ratio for the mixture using the calculated mixture fraction.

#### Solution

Calculation of the mixture fraction is a straightforward application of the result obtained in Example 7.3. We start by calculating the  $N_2$  mole fraction:

$$\begin{aligned} \chi_{N_2} &= 1 - \sum \chi_i \\ &= 1 - 0.0989 - 0.1488 - 0.0185 - (949 + 315 + 1350)1 \cdot 10^{-6} \\ &= 0.7312. \end{aligned}$$

The mixture molecular weight can now be determined:

$$\begin{aligned} MW_{\text{mix}} &= \sum \chi_i MW_i \\ &= 28.16 \text{ kg}_{\text{mix}}/\text{kmol}_{\text{mix}}. \end{aligned}$$

Substituting numerical values into the expression for  $f$  from Example 7.3 yields

$$f = \frac{(949 \cdot 10^{-6} + 0.0989)12.011 + (315 \cdot 10^{-6} + 0.1488 + (0.5)1350 \cdot 10^{-6})2.016}{28.16}$$

$f = 0.0533$

To calculate the equivalence ratio, we first recognize that, through its definition, the mixture fraction is related to the fuel-air ratio,  $(F/A)$ , by

$$(F/A) = f/(1-f),$$

and that

$$\Phi = (F/A)/(F/A)_{\text{stoic}}.$$

For an arbitrary hydrocarbon  $C_xH_y$ , the stoichiometric fuel-air ratio is calculated from Eqn. 2.32,

$$\begin{aligned}(F/A)_{\text{stoic}} &= \left[ 4.76(x + y/4) \frac{MW_{\text{air}}}{MW_{C_xH_y}} \right]^{-1} \\ &= \left[ 4.76(2 + 6/4) \frac{28.85}{30.07} \right]^{-1} \\ &= 0.0626.\end{aligned}$$

Thus,

$$\Phi = \frac{f/(1-f)}{(F/A)_{\text{stoic}}} = \frac{0.0533/(1-0.0533)}{0.0626}$$

$$\boxed{\Phi = 0.90}$$

#### Comment


Here we see how the mixture fraction relates to previously defined measures of stoichiometry. You should be able to develop relationships among these various measures,  $f$ ,  $(A/F)$ ,  $(F/A)$ , and  $\Phi$ , through a knowledge of their fundamental definitions.

Consider a nonpremixed jet flame (see Figs 9.6 and 13.3) in which the fuel is  $C_3H_8$  and the oxidizer is an equimolar mixture of  $O_2$  and  $CO_2$ . The species existing within the flame are  $C_3H_8$ ,  $CO$ ,  $CO_2$ ,  $O_2$ ,  $H_2$ ,  $H_2O$ , and  $OH$ . Determine the numerical value of the stoichiometric mixture fraction  $f_{\text{stoic}}$  for this system. Also, write out an expression for the local mixture fraction,  $f$ , at any location within the flame in terms of the flame-species mass fractions,  $Y_i$ . Assume all pairs of binary diffusion coefficients are equal, i.e., no differential diffusion.

#### Example 7.5

#### Solution

To determine the stoichiometric mixture fraction, we need only calculate the fuel mass fraction  $Y_{C_3H_8}$  in a reactants mixture of stoichiometric proportions:

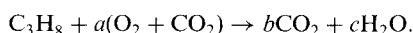

From H-, C-, and O-atom conservation, we obtain

$$H: \quad 8 = 2c,$$

$$C: \quad 3 + a = b,$$

$$O: \quad 2a + 2a = 2b + c,$$

which yields

$$a = 5, b = 8, c = 4.$$

Thus,

$$\begin{aligned} f_{\text{stoic}} &= Y_F = \frac{MW_{C_3H_8}}{MW_{C_3H_8} + 5(MW_{O_2} + MW_{CO_2})} \\ &= \frac{44.096}{44.096 + 5(32.000 + 44.011)} \\ &\boxed{f_{\text{stoic}} = 0.1040} \end{aligned}$$

To determine the local mixture fraction requires us to take into account that not all of the carbon atoms in the flame originate with the fuel since the oxidizer contains  $CO_2$ . We note, however, that the only source of elemental H within the flame is  $C_3H_8$ ; thus, we can determine the local mixture fraction knowing that it must be proportional to the local elemental H mass fraction. More explicitly,

$$f = \left( \frac{\text{mass of fuel}}{\text{mass of H}} \right) \left( \frac{\text{mass of H}}{\text{mass of mixture}} \right) = \frac{44.096}{8(1.008)} Y_H = 5.468 Y_H.$$

where  $Y_H$  is given by the following weighted-sum of the mass fractions of species containing hydrogen:

$$\begin{aligned} Y_H &= \frac{8(1.008)}{44.096} Y_{C_3H_8} + Y_{H_2} + \frac{2.016}{18.016} Y_{H_2O} + \frac{1.008}{17.008} Y_{OH} \\ &= 0.1829 Y_{C_3H_8} + Y_{H_2} + 0.1119 Y_{H_2O} + 0.0593 Y_{OH}. \end{aligned}$$

Thus, our final result is expressed as

$$\boxed{f = Y_{C_3H_8} + 5.468 Y_{H_2} + 0.6119 Y_{H_2O} + 0.3243 Y_{OH}}$$

#### Comment

Note that even though the carbon in the fuel may be converted to CO and  $CO_2$ , we did not need to explicitly account for this. Note, also that if the H-containing species were to diffuse differentially, the local H:fuel-C ratio would not be the same everywhere within the flame, thus causing our final result to be approximate rather than exact. Although solid carbon (soot) was not considered in this problem, most real, hydrocarbon-air, nonpremixed flames will contain soot, which can complicate both flame-species measurements and the mixture-fraction determination.

## Conserved Scalar Energy Equation

Subject to all of the assumptions underlying the Shvab-Zeldovich energy equation (Eqns. 7.63–7.66), the mixture enthalpy,  $h$ , is also a conserved scalar:

$$h \equiv \sum Y_i h_{f,i}^o + \int_{T_{\text{ref}}}^T c_p dT. \quad (7.80)$$

This can be seen directly from energy conservation expressed by Eqn. 7.61 when the kinetic energy term  $\dot{m}'' v_x dv_x/dx$  is assumed to be negligible. For our three geometries of interest—the 1-D planar, 1-D spherical, and 2-D axisymmetric—the conserved scalar forms of energy conservation are expressed, respectively, as

$$\boxed{\dot{m}'' \frac{dh}{dx} - \frac{d}{dx} \left( \rho \mathcal{D} \frac{dh}{dx} \right) = 0} \quad (7.81)$$

$$\boxed{\frac{d}{dr} \left[ r^2 \left( \rho v_r h - \rho \mathcal{D} \frac{dh}{dr} \right) \right] = 0} \quad (7.82)$$

and

$$\boxed{\frac{\partial}{\partial x} (r \rho v_x h) + \frac{\partial}{\partial r} (r \rho v_r h) - \frac{\partial}{\partial r} \left( r \rho \mathcal{D} \frac{\partial h}{\partial r} \right) = 0} \quad (7.83)$$

The derivations of Eqns. 7.82 and 7.83 are left as exercises for the reader.

## SUMMARY

In this chapter, the general forms of the conservation equations for mass, species, momentum, and energy have been presented along with their brief description. You should be able to recognize these equations and have some appreciation of the physical meaning of each term. Simplified equations were developed for three different geometries and are summarized in Table 7.2 for easy reference. These equations will be the starting point for subsequent developments throughout the text. The concept of a conserved scalar was also

**Table 7.2** Summary of conservation equations for reacting flows

Conserved Quantity	General Forms	1-D Planar	1-D Spherical	2-D Axisymmetric
Mass	Eqn. 7.5	Eqn. 7.4	Eqn. 7.6	Eqn. 7.7
Species	Eqn. 7.10	Eqns. 7.8 and 7.9	Eqn. 7.19	Eqn. 7.20
Momentum	N/A	Eqn. 7.38 and 7.39	See discussion of Eqn. 7.39	Eqn. 7.48
Energy	Eqn. 7.64 (Shvab-Zeldovich form)	Eqn. 7.55 and Eqn. 7.63 (Shvab-Zeldovich form)	Eqn. 7.65 (Shvab-Zeldovich form)	Eqn. 7.66 (Shvab-Zeldovich form)
Mixture fraction <sup>a</sup>	—	Eqn. 7.77	Eqn. 7.78	Eqn. 7.79
Enthalpy <sup>a</sup>	—	Eqn. 7.81	Eqn. 7.82	Eqn. 7.83

<sup>a</sup>These are just alternate conserved scalar forms of species and energy conservation, respectively, and are not separate conservation principles.

introduced in this chapter. Conservation equations for mixture fraction and mixture enthalpy, two conserved scalars, were developed, and are also cited in Table 7.2.

## NOMENCLATURE

$A$	Area ( $\text{m}^2$ )
$c_p$	Constant-pressure specific heat ( $\text{J/kg}\cdot\text{K}$ )
$D_{ij}$	Multicomponent diffusion coefficient ( $\text{m}^2/\text{s}$ )
$D_j^T$	Thermal diffusion coefficient ( $\text{kg}/\text{m}\cdot\text{s}$ )
$D_{ij}$	Binary diffusion coefficient ( $\text{m}^2/\text{s}$ )
$f$	Mixture fraction, Eqn. 7.68
$F$	Force ( $\text{N}$ )
$F_{ij}$	Components of matrix defined by Eqn. 7.27
$g$	Gravitational acceleration ( $\text{m}/\text{s}^2$ )
$h$	Enthalpy ( $\text{J/kg}$ )
$h_f^o$	Enthalpy of formation ( $\text{J/kg}$ )
$k$	Thermal conductivity ( $\text{W}/\text{m}\cdot\text{K}$ )
$k_B$	Boltzmann constant, $1.381 \cdot 10^{-23}$ ( $\text{J/K}$ )
$L_{ij}$	Components of matrix defined by Eqn. 7.28
$Le$	Lewis number, Eqn. 7.59
$m$	Mass ( $\text{kg}$ )
$\dot{m}$	Mass flowrate ( $\text{kg}/\text{s}$ )
$\dot{m}''$	Mass flux ( $\text{kg}/\text{s}\cdot\text{m}^2$ )
$\dot{m}'''$	Mass production rate per unit volume ( $\text{kg}/\text{s}\cdot\text{m}^3$ )
$MW$	Molecular weight ( $\text{kg}/\text{kmol}$ )
$P$	Pressure ( $\text{Pa}$ )
$\dot{\mathbf{Q}}''$	Heat flux vector, Eqn. 7.52 ( $\text{W}/\text{m}^2$ )
$r$	Radial coordinate ( $\text{m}$ )
$R_u$	Universal gas constant ( $\text{J}/\text{kmol}\cdot\text{K}$ )
$t$	Time ( $\text{s}$ )
$T$	Temperature ( $\text{K}$ )
$\mathbf{v}_i$	Velocity of species $i$ , Eqn. 7.12 ( $\text{m}/\text{s}$ )
$v_r, v_\theta, v_x$	Cylindrical coordinate velocity components ( $\text{m}/\text{s}$ )
$v_r, v_\theta, v_\phi$	Spherical coordinate velocity components ( $\text{m}/\text{s}$ )
$v_x, v_y, v_z$	Cartesian coordinate velocity components ( $\text{m}/\text{s}$ )
$V$	Volume ( $\text{m}^3$ )
$\mathbf{V}$	Velocity vector ( $\text{m}/\text{s}$ )
$x$	Cartesian or cylindrical axial coordinate ( $\text{m}$ )
$y$	Cartesian coordinate ( $\text{m}$ )
$Y$	Mass fraction ( $\text{kg}/\text{kg}$ )
$z$	Cartesian coordinate ( $\text{m}$ )

**Greek Symbols**

$\alpha$	Thermal diffusivity ( $\text{m}^2/\text{s}$ )
$\delta_{ij}$	Kronecker delta function
$\varepsilon_i$	Characteristic Lennard-Jones energy
$\theta$	Spherical coordinate circumferential angle (rad)
$\mu$	Absolute or dynamic viscosity ( $\text{N}\cdot\text{s}/\text{m}^2$ )
$\nu$	Kinematic viscosity, $\mu/\rho$ ( $\text{m}^2/\text{s}$ ), or stoichiometric oxidizer-to-fuel ratio (kg/kg)
$\rho$	Density ( $\text{kg}/\text{m}^3$ )
$\tau$	Viscous stress ( $\text{N}/\text{m}^2$ )
$\phi$	Spherical coordinate azimuthal angle (rad)
$\chi$	Mole fraction (kmol/kmol)

**Subscripts**

A	Species A
B	Species B
<i>cv</i>	Control volume
diff	Diffusion
<i>f</i>	Forced
F	Fuel
<i>i</i>	Species <i>i</i>
<i>m, mix</i>	Mixture
Ox	Oxidizer
P	Pressure
Pr	Products
ref	Reference state
stoic	Stoichiometric
T	Thermal
X	Ordinary
$\infty$	Ambient condition

---

**REFERENCES**

1. Tseng, L.-K., Ismail, M. A., and Faeth, G. M., "Laminar Burning Velocities and Markstein Numbers of Hydrocarbon/Air Flames," *Combustion and Flame*, 95: 410–426 (1993).
2. Bird, R. B., Stewart, W. E., and Lightfoot, E. N., *Transport Phenomena*, John Wiley & Sons, New York, 1960.
3. Kee, R. J., Grcar, J. F., Smooke, M. D., and Miller, J. A., "A Fortran Program for Modeling Steady Laminar One-Dimensional Premixed Flames," Sandia National Laboratories Report SAND85-8240, 1991.

4. Lutz, A. E., Kee, R. J., Grcar, J. F., and Rupley, F. M., "OPPDIF: A Fortran Program for Computing Opposed-Flow Diffusion Flames," Sandia National Laboratories Report SAND96-8243, 1997.
5. Williams, F. A., *Combustion Theory*, 2nd Ed., Addison-Wesley, Redwood City, CA, 1985.
6. Kuo, K. K., *Principles of Combustion*, John Wiley & Sons, New York, 1986.
7. Hirschfelder, J. O., Curtis, C. F., and Bird, R. B., *Molecular Theory of Gases and Liquids*, John Wiley & Sons, New York, 1954.
8. Grew, K. E., and Ibbs, T. L., *Thermal Diffusion in Gases*, Cambridge University Press, Cambridge, 1952.
9. Dixon-Lewis, G., "Flame Structure and Flame Reaction Kinetics, II. Transport Phenomena in Multicomponent Systems," *Proceedings of the Royal Society of London, Series A*, 307: 111–135 (1968).
10. Kee, R. J., Dixon-Lewis, G., Warnatz, J., Coltrin, M. E., and Miller, J. A., "A Fortran Computer Code Package for the Evaluation of Gas-Phase Multicomponent Transport Properties," Sandia National Laboratories Report SAND86-8246, 1990.
11. Schlichting, H., *Boundary-Layer Theory*, 6th Ed., McGraw-Hill, New York, 1968.
12. Bilger, R. W., "Turbulent Flows with Nonpremixed Reactants," in *Turbulent Reacting Flows* (P. A. Libby and F. A. Williams, eds.), Springer-Verlag, New York, 1980.

---

## REVIEW QUESTIONS

1. What are the three types of mass diffusion? Which one(s) do we neglect?
2. Discuss how the heat flux vector,  $\dot{\mathbf{Q}}$ , in a multicomponent mixture with diffusion differs from that used in a single-component gaseous system.
3. Define the Lewis number,  $Le$ , and discuss its physical significance. What role does the assumption that the Lewis number is unity play in simplifying the conservation of energy equation?
4. We considered three mass-average velocities in our discussion of species conservation: the bulk flow velocity, the individual species velocities, and the individual species diffusion velocities. Define each and discuss their physical significance. How do the various velocities relate to each other?
5. What does it mean for a conservation equation to be "sourceless." Give examples of governing equations that contain sources and those that are sourceless.
6. Discuss what is meant by a conserved scalar.
7. Define the mixture fraction.

---

**PROBLEMS**

- 7.1** With the aid of overall continuity (Eqn. 7.7), transform the left-hand-side of the axial momentum equation, Eqn. 7.48, to a form involving the substantial (or material) derivative, where the cylindrical-coordinate substantial derivative operator is given by

$$\frac{D(\cdot)}{Dt} = \frac{\partial(\cdot)}{\partial t} + v_r \frac{\partial(\cdot)}{\partial r} + \frac{v_\theta}{r} \frac{\partial(\cdot)}{\partial \theta} + v_x \frac{\partial(\cdot)}{\partial x}.$$

- 7.2** Equation 7.55 expresses conservation of energy for a 1-D (cartesian) reacting flow where no assumptions are made regarding the form of the species transport law (i.e., Fick's law has not been invoked) or the relationship among properties (i.e.,  $Le = 1$  has not been assumed). Starting with this equation, derive the Shvab-Zeldovich energy equation (Eqn. 7.63) by applying Fick's law with effective binary diffusion and assuming  $Le = 1$ .
- 7.3** Derive the conserved scalar equation for enthalpy for a 1-D spherical flow (Eqn. 7.82) starting with Eqn. 7.65.
- 7.4** Derive the conserved scalar equation for enthalpy for an axisymmetric flow (Eqn. 7.83) starting with Eqn. 7.66.
- 7.5** Consider the combustion of propane with air giving products CO, CO<sub>2</sub>, H<sub>2</sub>O, H<sub>2</sub>, O<sub>2</sub>, and N<sub>2</sub>. Define the mixture fraction in terms of the various product species mole fractions,  $\chi_i$ .
- 7.6\*** So-called "state relations" are frequently employed in the analysis of diffusion flames. These state relations relate various mixture properties to the mixture fraction, or other appropriate conserved scalars. Construct state relations for the adiabatic flame temperature  $T_{ad}$  and mixture density  $\rho$  for ideal combustion (no dissociation) of propane with air at 1 atm. Plot  $T_{ad}$  and  $\rho$  as functions of the mixture fraction  $f$  for the range  $0 \leq f \leq 0.12$ .
- 7.7** Laser-based techniques are used to measure the major species, N<sub>2</sub>, O<sub>2</sub>, H<sub>2</sub>, and H<sub>2</sub>O (spontaneous Raman scattering), and the minor species, OH and NO (laser-induced fluorescence), in turbulent hydrogen jet flames burning in air. The hydrogen fuel is diluted, in some cases, with helium. A mixture fraction is defined as follows:

$$f = \frac{(MW_{H_2} + \alpha MW_{He})([H_2O] + [H_2]) + (MW_H + \frac{\alpha}{2} MW_{He})[OH]}{A + B}$$

where

$$A = MW_{N_2}[N_2] + MW_{O_2}[O_2] + (MW_{H_2O} + \alpha MW_{He})[H_2O]$$

and

$$B = (MW_{H_2} + \alpha MW_{He})[H_2] + (MW_{OH} + \frac{\alpha}{2} MW_{He})[OH],$$

| \*Indicates required or optional use of computer.

and where the concentrations  $[X_i]$  are expressed as kmol/m<sup>3</sup> and  $\alpha$  is the mole ratio of helium to hydrogen in the fuel stream. Here, it is assumed that there are no effects of differential diffusion and that the NO concentration is negligible.

Show that the mixture fraction defined above is the same as mass of fuel stuff per mass of mixture defined by Eqn. 7.68.

- 7.8** Starting with Eqn. 7.51, derive the expanded form of energy conservation expressed by Eqn. 7.67. Neglect changes in kinetic energy.
- 7.9** Consider the heat flux for a one-dimensional reacting flow:

$$\dot{Q}_x'' = \dot{Q}_{\text{cond}}'' + \dot{Q}_{\text{diff}}''_{\text{species}}$$

Express the right-hand-side of the heat flux expression in terms of the temperature and appropriate mass fluxes. Using this result, show that  $\dot{Q}_x''$  simplifies to

$$\dot{Q}_x'' = \rho D c_p (1 - Le) dT/dx - \rho D dh/dx,$$

subject to the assumption that a single binary diffusivity,  $D$ , characterizes the mixture.

- 7.10** Consider a jet diffusion flame in which the fuel is methanol vapor ( $\text{CH}_3\text{OH}$ ) and the oxidizer is air. The species existing within the flame are  $\text{CH}_3\text{OH}$ , CO,  $\text{CO}_2$ ,  $\text{O}_2$ ,  $\text{H}_2$ ,  $\text{H}_2\text{O}$ ,  $\text{N}_2$ , and OH.
- Determine the numerical value of the **stoichiometric** mixture fraction.
  - Write out an expression for the mixture fraction,  $f$ , in terms of the flame-species mass fractions,  $Y_i$ . Assume all pairs of binary diffusion coefficients are equal, i.e., no differential diffusion.
- 7.11\*** Consider the Stefan problem (Fig. 3.4) where liquid normal hexane ( $n\text{-C}_6\text{H}_{14}$ ) evaporates through a mixture of combustion products. The products can be treated as the ideal (no dissociation) products from combustion of  $\text{C}_6\text{H}_{14}$  with simple air (21 percent  $\text{O}_2$ /79 percent  $\text{N}_2$ ) at an equivalence ratio of 0.30. The temperature is fixed at 32°C and the pressure is 1 atm. The length of the tube is 20 cm and  $Y_{\text{C}_6\text{H}_{14}}(L) = 0$ .
- Determine the rate of hexane evaporation per unit area,  $\dot{m}_{\text{C}_6\text{H}_{14}}''$ , assuming an effective binary diffusivity where  $D_{im} \approx D_{\text{C}_6\text{H}_{14}-\text{N}_2}$ . Use the mass (not molar) flux solution to the Stefan problem. Evaluate the density as in Example 3.1.
  - Determine  $\dot{m}_{\text{C}_6\text{H}_{14}}''$  using an effective binary diffusivity that considers all five species present. Use average mole fractions, i.e.,  $\chi_i = 0.5(\chi_i(0) + \chi_i(L))$ , for your computation of  $D_{im}$ . Again, use the mass (not molar) flux solution. How does the result compare with that in part A?
- 7.12** Consider a mixture containing an equal number of moles of He,  $\text{O}_2$ , and  $\text{CH}_4$ . Determine the multicomponent diffusion coefficients associated with this mixture at 500 K and 1 atm.


# Laminar Premixed Flames

---

## OVERVIEW

In previous chapters, we introduced the concepts of mass transfer (Chapter 3) and chemical kinetics (Chapters 4 and 5) and linked them with familiar thermodynamic and heat transfer concepts in Chapters 6 and 7. Understanding premixed laminar flames requires us to utilize all of these concepts. Our development in Chapter 7 of the one-dimensional conservation equations for a reacting flow will be the starting point for analyzing laminar flames.

Laminar premixed flames, frequently in conjunction with diffusion flames, have application in many residential, commercial, and industrial devices and processes. Examples include gas ranges and ovens, heating appliances, and Bunsen burners. An advanced cooktop burner for a gas range is illustrated in Fig. 8.1. Laminar, premixed, natural-gas flames also are frequently employed in the manufacturing of glass products. As suggested by the examples given above, laminar premixed flames are by themselves important; but, perhaps more importantly, understanding laminar flames is a necessary prerequisite to the study of turbulent flames. In both laminar and turbulent flows, the same physical processes are active, and many turbulent flame theories are based on an underlying laminar flame structure. In this chapter, we will qualitatively describe the essential characteristics of laminar premixed flames and develop a simplified analysis of these flames that allows us to see what factors influence the laminar flame speed and the flame thickness. A detailed analysis using state-of-the-art methods will illustrate the power of numerical simulations in understanding flame structure. We will also examine experimental data that illustrate how equivalence ratio, temperature, pressure, and fuel type affect flame speed and flame thickness. Flame speed is emphasized because it is this property that dictates flame shape and important flame-stability

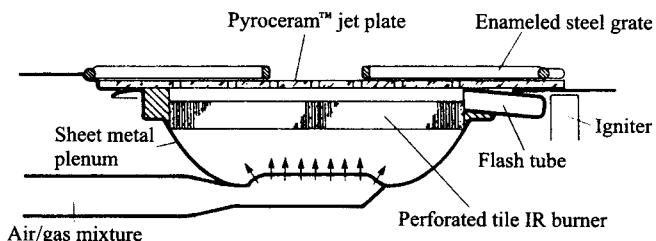

**Figure 8.1** Advanced residential cooktop burner for gas ranges.  
| SOURCE: Courtesy of the Gas Research Institute.

characteristics, such as blowoff and flashback. The chapter concludes with discussion of flammability limits and ignition and extinction phenomena.

## PHYSICAL DESCRIPTION


### Definition

Before proceeding, it is useful to define what we mean by a flame. A **flame** is a self-sustaining propagation of a localized combustion zone at subsonic velocities. There are several key words in this definition. First, we require a flame to be localized; that is, the flame occupies only a small portion of the combustible mixture at any one time. This is in contrast to the various homogeneous reactors we studied in Chapter 6, where reaction was assumed to occur uniformly throughout the reaction vessel. The second key word is subsonic. A discrete combustion wave that travels subsonically is termed a **deflagration**. It is also possible for combustion waves to propagate at supersonic velocities. Such a wave is called a **detonation**. The fundamental propagation mechanisms are different in deflagrations and detonations, and, because of this, these are distinct phenomena. Detonations are discussed in Chapter 16.

### Principal Characteristics

The temperature profile through a flame is perhaps its most important characteristic. Figure 8.2 illustrates a typical flame temperature profile, together with other essential flame features.

To understand this figure, we need to establish a reference frame for our coordinate system. A flame may be freely propagating, as occurs when a flame is initiated in a tube containing a combustible gas mixture. The appropriate coordinate system would be fixed to the propagating combustion wave. An observer riding with the flame would experience the unburned mixture approaching at the **flame speed**,  $S_L$ . This is equivalent to a flat flame stabilized

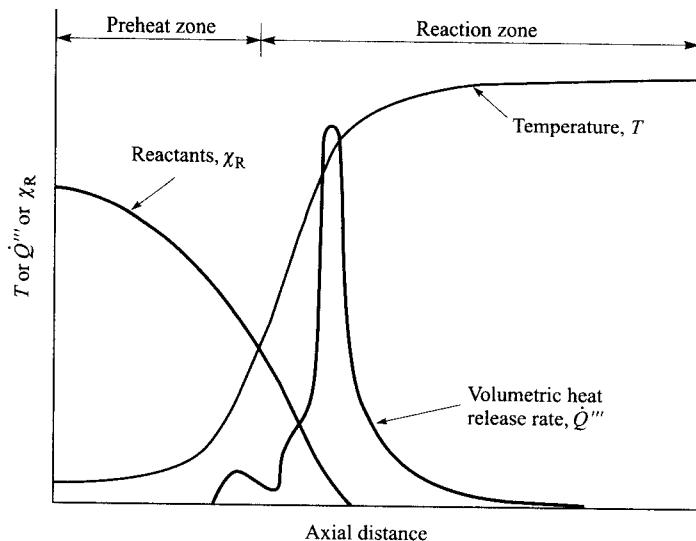

**Figure 8.2** Laminar flame structure. Temperature and heat-release-rate profiles based on experiments of Friedman and Burke [1].

on a burner. Here, the flame is stationary relative to the laboratory reference frame and, once again, the reactants enter the flame with a velocity equal to the flame propagation velocity,  $S_L$ . In both examples, we assume that the flame is one dimensional and that the unburned gas enters the flame in a direction normal to the flame sheet. Since a flame heats the products, the product density is less than the reactant density. Continuity thus requires that the burned gas velocity be greater than the velocity of the unburned gas:

$$\rho_u S_L A \equiv \rho_u v_u A = \rho_b v_b A, \quad (8.1)$$

where the subscripts  $u$  and  $b$  refer to the unburned and burned gases, respectively. For a typical hydrocarbon-air flame at atmospheric pressure, the density ratio is approximately seven. Thus, there is considerable acceleration of the gas flow across the flame.

It is convenient to divide a flame into two zones: the **preheat zone**, where little heat is released; and the **reaction zone**, where the bulk of the chemical energy is released. At atmospheric pressure, the flame thickness is quite thin, of the order of a millimeter. It is useful to divide the reaction zone further into a thin region of very fast chemistry followed by a much wider region of slow chemistry. The destruction of the fuel molecules and the creation of many intermediate species occur in the fast-chemistry region. This region is dominated by bimolecular reactions. At atmospheric pressure, the fast-reaction zone is quite thin, typically less than a millimeter. Because this zone is thin, temperature gradients and species concentration gradients are very large. These gradients provide the driving forces that cause the flame to be self-sustaining:

the diffusion of heat and radical species from the reaction zone to the preheat zone. In the secondary reaction zone, the chemistry is dominated by three-body radical recombination reactions, which are much slower than typical bimolecular reactions, and the final burnout of CO via  $\text{CO} + \text{OH} \rightarrow \text{CO}_2 + \text{H}$ . This secondary reaction zone may extend several millimeters in a 1-atm flame. Later in this chapter, we present a more detailed description of flame structure illustrating these ideas. Additional information may also be found in Fristrom [2].

Hydrocarbon flames are also characterized by their visible radiation. Within an excess of air, the fast-reaction zone appears blue. This blue radiation results from excited CH radicals in the high-temperature zone. When the air is decreased to less than stoichiometric proportions, the zone appears blue-green, now as a result of radiation from excited C<sub>2</sub>. In both flames, OH radicals also contribute to the visible radiation, and to a lesser degree, chemiluminescence from the reaction  $\text{CO} + \text{O} \rightarrow \text{CO}_2 + h\nu$  [3]. If the flame is made richer still, soot will form, with its consequent blackbody continuum radiation. Although the soot radiation has its maximum intensity in the infrared (recall Wien's law?), the spectral sensitivity of the human eye causes us to see a bright yellow (nearly white) to dull orange emission, depending on the flame temperature. References [4] and [5] provide a wealth of information on radiation from flames.


### Typical Laboratory Flames

The Bunsen-burner flame provides an interesting example of laminar premixed flames with which most students have some familiarity and that can be easily used in classroom demonstrations. Figure 8.3a schematically illustrates a Bunsen burner and the flame it produces. A jet of fuel at the base induces a flow of air through the variable area port, and the air and fuel mix as they flow up through the tube. The typical Bunsen-burner flame is a dual flame: a fuel-rich premixed inner flame surrounded by a diffusion flame. The secondary diffusion flame results when the carbon monoxide and hydrogen products from the rich inner flame encounter the ambient air. The shape of the flame is determined by the combined effects of the velocity profile and heat losses to the tube wall. For the flame to remain stationary, the flame speed must equal the speed of the normal component of unburned gas at each location, as illustrated in the vector diagram in Fig. 8.3b. Thus,

$$S_L = v_u \sin \alpha, \quad (8.2)$$

where  $S_L$  is the laminar burning velocity. This principle causes the essential conical character of the flame.

One-dimensional flat flames are frequently studied in the laboratory and are also used in some radiant heating burners (Fig. 8.4). Figure 8.5 illustrates the laboratory genre. In the adiabatic burner, a flame is stabilized over a bundle of small tubes through which the fuel-air mixture passes laminarly [6]. Over a narrow range of conditions, a stable flat flame is produced. The

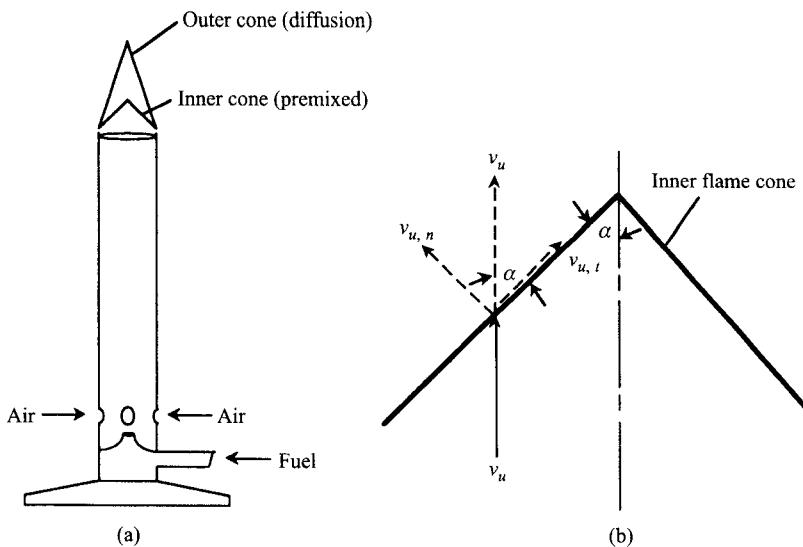

**Figure 8.3** (a) Bunsen-burner schematic. (b) Laminar flame speed equals normal component of unburned gas velocity,  $v_{u,n}$ .

non-adiabatic burner utilizes a water-cooled face that allows heat to be extracted from the flame, which, in turn, decreases the flame speed, allowing flames to be stabilized over a relatively wide range of flow conditions [7].

A premixed laminar flame is stabilized in a one-dimensional gas flow where the vertical velocity of the unburned mixture,  $v_u$ , varies linearly with the horizontal coordinate,  $x$ , as shown in the lower half of Fig. 8.6. Determine the flame shape and the distribution of the local angle of the flame surface from vertical. Assume the flame speed is independent of position and equal to 0.4 m/s, a nominal value for a stoichiometric methane-air flame.

#### Example 8.1

##### Solution

From Fig. 8.7, we see that the local angle,  $\alpha$ , which the flame sheet makes with a vertical plane is (Eqn. 8.2)


$$\alpha = \sin^{-1}(S_L/v_u)$$

where, from Fig. 8.6,


$$v_u (\text{mm/s}) = 800 + \frac{1200 - 800}{20} x (\text{mm}).$$

So,

$$\alpha = \sin^{-1}\left(\frac{400}{800 + 20x(\text{mm})}\right),$$

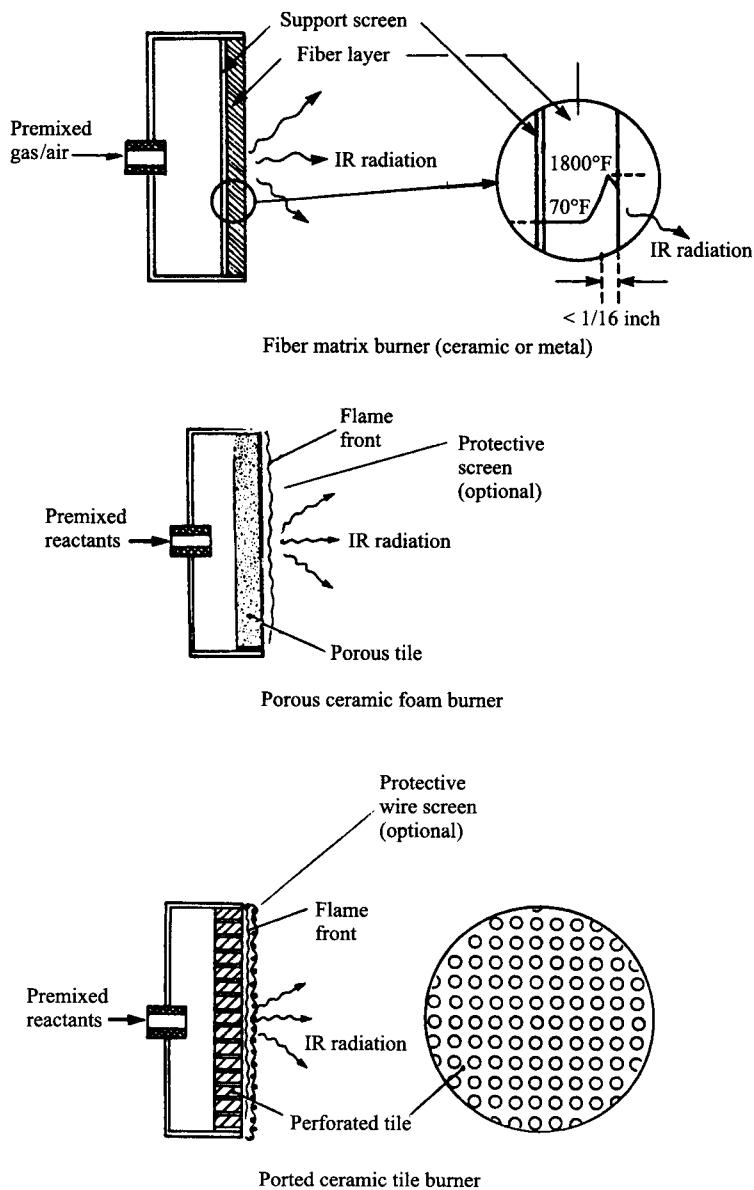

**Figure 8.4** Direct-fired radiant burners provide uniform heat flux and high efficiency.  
SOURCE: Reprinted with permission from the Center for Advanced Materials, Newsletter, (1), 1990, Penn State University.

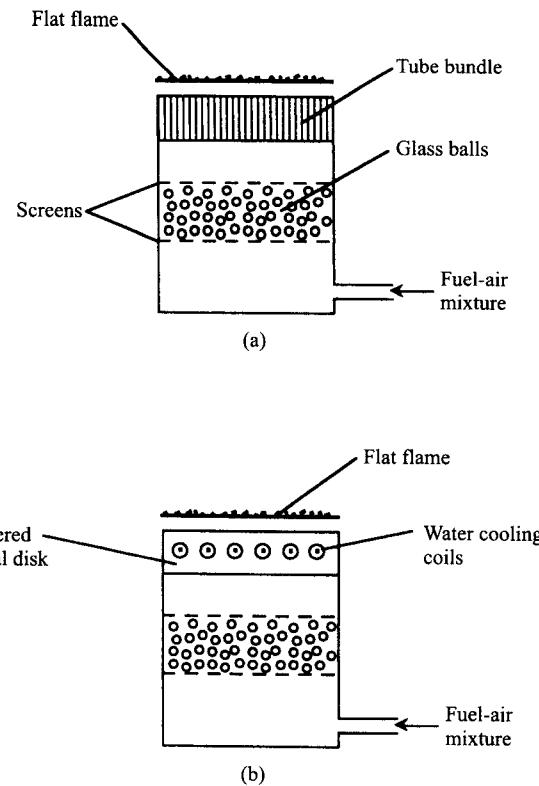

**Figure 8.5** (a) Adiabatic flat-flame burner. (b) Nonadiabatic flat-flame burner.

and has values ranging from  $30^\circ$  at  $x = 0$  to  $19.5^\circ$  at  $x = 20$  mm, as shown in the top part of Fig. 8.6.


To calculate the flame position, we first obtain an expression for the local slope of the flame sheet ( $dz/dx$ ) in the  $x-z$  plane, and then integrate this expression with respect to  $x$  to find  $z(x)$ . From Fig. 8.7, we see that

$$\frac{dz}{dx} = \tan \beta = \left( \frac{v_u^2(x) - S_L^2}{S_L^2} \right)^{1/2},$$

which, for  $v_u \equiv A + Bx$ , becomes

$$\frac{dz}{dx} = \left[ \left( \frac{A}{S_L} + \frac{Bx}{S_L} \right)^2 - 1 \right]^{1/2}.$$

Integrating the above with  $A/S_L = 2$  and  $B/S_L = 0.05$  yields

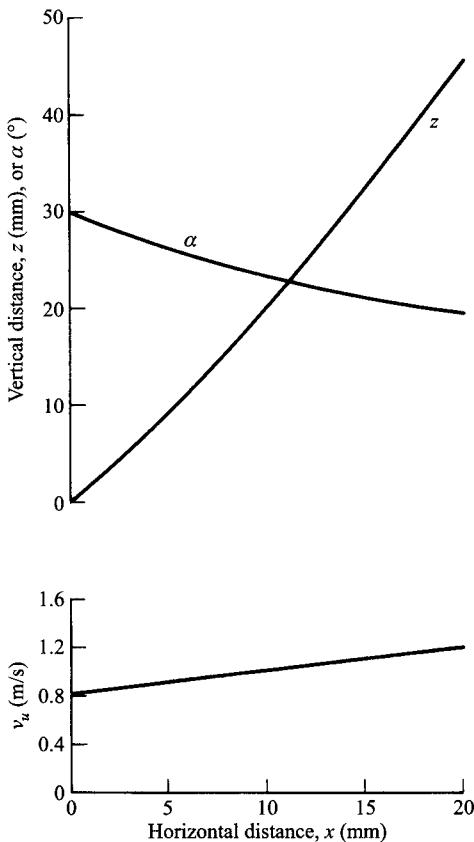


**Figure 8.6** Flow velocity, flame position, and angle from vertical of line tangent to flame, for Example 8.1.

$$\begin{aligned}
 z(x) &= \int_0^x \left( \frac{dz}{dx} \right) dx \\
 &= (x^2 + 80x + 1200)^{1/2} \left( \frac{x}{40} + 1 \right) \\
 &\quad - 10 \ln[(x^2 + 80x + 1200)^{1/2} + (x + 40)] \\
 &\quad - 20\sqrt{3} + 10 \ln(20\sqrt{3} + 40).
 \end{aligned}$$

The flame position  $z(x)$  is plotted in the upper half of Fig. 8.6. Here we see that the flame sheet is quite steeply inclined. (Note that the horizontal scale is twice that of the vertical.)

#### Comment

From this example, we see how the flame shape is intimately linked to the velocity distribution of the oncoming unburned gas.

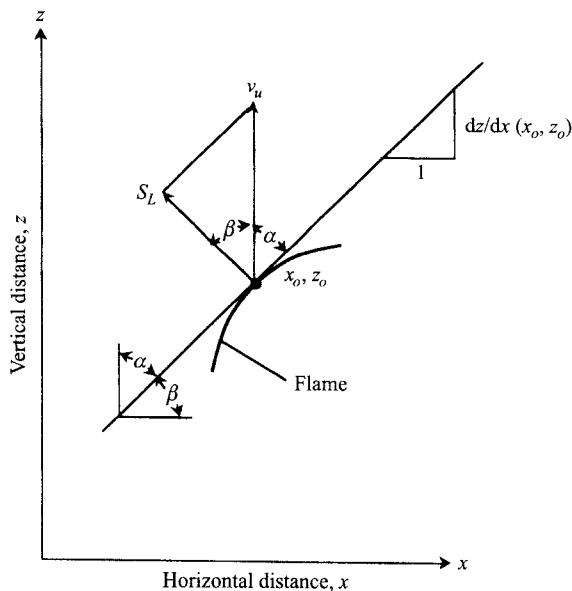

**Figure 8.7** Definition of flame geometry for Example 8.1.

In the next section, we turn our attention to establishing some theoretical basis for how various parameters, such as pressure, temperature, and fuel type, affect laminar flame speeds.

## SIMPLIFIED ANALYSIS

Theories of laminar flames abound and have occupied many researchers for many decades. For example, Kuo [8] cites more than a dozen major papers dealing with laminar flame theory published between 1940 and 1980. Various approaches have assumed that either heat diffusion or mass diffusion effects dominate, while other detailed theories include both effects, assuming that both phenomena are important. The earliest description of a laminar flame is that of Mallard and Le Chatelier [9] in 1883. Our simplified approach here follows that of Spalding [10], which lays bare the essential physics of the problem without a great deal of mathematics. The analysis couples principles of heat transfer, mass transfer, chemical kinetics, and thermodynamics to understanding the factors governing flame speed and thickness. The simplified analysis presented below relies on the one-dimensional conservation relations developed in the previous chapter, with additional simplifying assumptions for thermodynamic and transport properties applied. Our objective is to find a simple analytical expression for the laminar flame speed.

## Assumptions

1. One-dimensional, constant-area, steady flow.
2. Kinetic and potential energies, viscous shear work, and thermal radiation are all neglected.
3. The small pressure difference across the flame is neglected; thus, the pressure is constant.
4. The diffusion of heat and mass are governed by Fourier's and Fick's laws, respectively. Binary diffusion is assumed.
5. The **Lewis number**,  $Le$ , which expresses the ratio of thermal diffusivity to mass diffusivity, i.e.,

$$Le \equiv \frac{\alpha}{\mathcal{D}} = \frac{k}{\rho c_p \mathcal{D}}, \quad (8.3)$$

is unity. This has the result that  $k/c_p = \rho\mathcal{D}$ , which greatly simplifies the energy equation.

6. The mixture specific heat depends neither on temperature nor on the mixture composition. This is equivalent to assuming that the individual species specific heats are all equal and constant.
7. Fuel and oxidizer form products in a single-step exothermic reaction.
8. The oxidizer is present in stoichiometric or excess proportions; thus, the fuel is completely consumed at the flame.

## Conservation Laws

To understand flame propagation, we apply conservation of mass, species, and energy to the differential control volume illustrated in Fig. 8.8. Using the relationships from Chapter 7, these conservation principles are expressed as follows.

### Mass Conservation


$$\frac{d(\rho v_x)}{dx} = 0 \quad (7.4a)$$

or

$$\dot{m}'' = \rho v_x = \text{constant}. \quad (7.4b)$$

### Species Conservation

$$\frac{d\dot{m}_i''}{dx} = \dot{m}_i''' \quad (7.9)$$

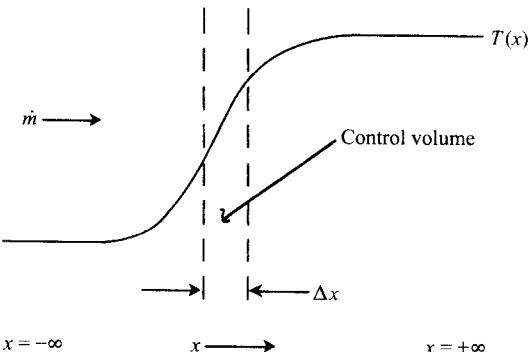


**Figure 8.8** Control volume for flame analysis.

or, with the application of Fick's law,

$$\frac{d \left[ \dot{m}'' Y_i - \rho D \frac{d Y_i}{dx} \right]}{dx} = \dot{m}_i''' , \quad (7.8)$$

where  $\dot{m}_i'''$  is the mass production rate of species  $i$  per unit volume ( $\text{kg}/\text{s}\cdot\text{m}^3$ ).

Equation 7.8 can be written for each of the three species, where the mass production rates of the oxidizer and products are related to the fuel production rate. Obviously, the production rates of the fuel,  $\dot{m}_F'''$ , and oxidizer,  $\dot{m}_{O_x}'''$ , are negative since these species are being consumed, not produced. For our simple reaction, the overall stoichiometry is

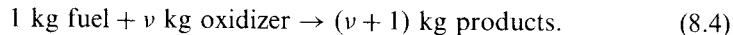

Thus,

$$\dot{m}_F''' = \frac{1}{v} \dot{m}_{O_x}''' = -\frac{1}{v+1} \dot{m}_{P_r}''' . \quad (8.5)$$

Equation 7.8 becomes for each species:

*Fuel*

$$\dot{m}'' \frac{d Y_F}{dx} - \frac{d \left( \rho D \frac{d Y_F}{dx} \right)}{dx} = \dot{m}_F''' , \quad (8.6a)$$

*Oxidizer*

$$\dot{m}'' \frac{d Y_{O_x}}{dx} - \frac{d \left( \rho D \frac{d Y_{O_x}}{dx} \right)}{dx} = v \dot{m}_F''' , \quad (8.6b)$$

### Products

$$\dot{m}'' \frac{dY_{Pr}}{dx} - \frac{d\left(\rho D \frac{dY_{Pr}}{dx}\right)}{dx} = -(v+1)\dot{m}_F'''.$$
 (8.6c)

In this analysis, the species conservation relations are used only to simplify the energy equation. Because of the assumptions of binary diffusion governed by Fick's law and unity Lewis number, there will be no need to solve the species equations.

**Energy Conservation** The assumptions we have adopted for our analysis are consistent with those embodied in the Shvab–Zeldovich form of energy conservation (Eqn. 7.63),

$$\dot{m}'' c_p \frac{dT}{dx} - \frac{d}{dx} \left[ (\rho D c_p) \frac{dT}{dx} \right] = - \sum h_{f,i}^o \dot{m}_i'''.$$
 (8.7a)

With the overall stoichiometry expressed by Eqns. 8.4 and 8.5, the right-hand-side of the above becomes

$$-\sum h_{f,i}^o \dot{m}_i''' = -[h_{f,F}^o \dot{m}_F''' + h_{f,Ox}^o v \dot{m}_F''' - h_{f,Pr}^o (v+1) \dot{m}_F''']$$

or

$$-\sum h_{f,i}^o \dot{m}_i''' = -\dot{m}_F''' \Delta h_c,$$

where  $\Delta h_c$  is the heat of combustion of the fuel,  $\Delta h_c \equiv h_{f,F}^o + vh_{f,Ox}^o - (v+1)h_{f,Pr}^o$ , based on the given stoichiometry. Because of the unity Lewis number approximation, we also can replace  $\rho D c_p$  by  $k$ . With these two substitutions, Eqn. 8.7a becomes

$$\dot{m}'' \frac{dT}{dx} - \frac{1}{c_p} \frac{d\left(k \frac{dT}{dx}\right)}{dx} = -\frac{\dot{m}_F''' \Delta h_c}{c_p}.$$
 (8.7b)

Recall that our objective is to find a useful expression for the laminar flame speed, which is related simply to the mass flux,  $\dot{m}''$ , appearing in Eqn. 8.7b, by

$$\dot{m}'' = \rho_u S_L.$$
 (8.8)

To achieve this objective, we again follow Spalding's [10] approach.

### Solution

To find the mass burning rate, we will assume a temperature profile that satisfies the boundary conditions given below and then integrate Eqn. 8.7b using the assumed temperature distribution. The boundary conditions far upstream of the flame are

$$T(x \rightarrow -\infty) = T_u \quad (8.9a)$$

$$\frac{dT}{dx}(\rightarrow -\infty) = 0, \quad (8.9b)$$

and far downstream of the flame,


$$T(x \rightarrow +\infty) = T_b \quad (8.9c)$$

$$\frac{dT}{dx}(x \rightarrow +\infty) = 0. \quad (8.9d)$$

For simplicity, we assume a simple linear temperature profile that goes from  $T_u$  to  $T_b$  over the small distance,  $\delta$ , as shown in Fig. 8.9. We define  $\delta$  to be the flame thickness. Mathematically, we have a second-order ordinary differential equation (Eqn. 8.7b) with two unknown parameters, which are referred to in the combustion literature as the **eigenvalues**,  $\dot{m}''$  and  $\delta$ . The specification of *four* boundary conditions, rather than just *two*, allows us to determine the eigenvalues. (It is interesting to note the similarity of the present analysis to von Karman's integral analysis of the flat-plate boundary layer that you may have studied in fluid mechanics. In the fluid mechanics problem, reasonable estimates of boundary layer thickness and shear stresses were obtained using an assumed velocity profile.)

Integrating Eqn. 8.7b over  $x$ , noting that the contributions of the discontinuities in  $dT/dx$  at  $x = 0$  and  $\delta$  cancel, and applying the conditions at  $-\infty$  and  $+\infty$ , yields

$$\dot{m}''[T]_{T=T_u}^{T=T_b} - \frac{k}{c_p} \left[ \frac{dT}{dx} \right]_{dT/dx=0}^{dT/dx=0} = \frac{-\Delta h_c}{c_p} \int_{-\infty}^{\infty} \dot{m}_F''' dx \quad (8.10)$$

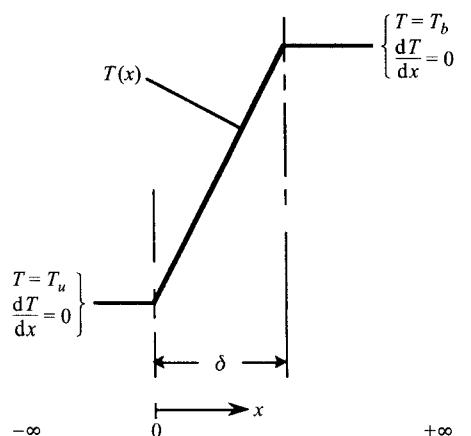

**Figure 8.9** Assumed temperature profile for laminar premixed flame analysis.

which, by evaluating the limits, simplifies to

$$\dot{m}''(T_b - T_u) = -\frac{\Delta h_c}{c_p} \int_{-\infty}^{\infty} \dot{m}_F''' dx. \quad (8.11)$$

We can change the limits on the reaction rate integral appearing on the right-hand-side of Eqn. 8.11 from space to temperature, since  $\dot{m}_F'''$  is only nonzero between  $T_u$  and  $T_b$  over the region  $\delta$ , i.e.,

$$\frac{dT}{dx} = \frac{T_b - T_u}{\delta} \quad \text{or} \quad dx = \frac{\delta}{T_b - T_u} dT. \quad (8.12)$$

With the change of variables,

$$\dot{m}''(T_b - T_u) = -\frac{\Delta h_c}{c_p} \frac{\delta}{(T_b - T_u)} \int_{T_u}^{T_b} \dot{m}_F''' dT, \quad (8.13)$$

and, recognizing the definition of the average reaction rate,

$$\bar{\dot{m}}_F''' \equiv \frac{1}{(T_b - T_u)} \int_{T_u}^{T_b} \dot{m}_F''' dT, \quad (8.14)$$

we obtain the simple result that

$$\dot{m}''(T_b - T_u) = -\frac{\Delta h_c}{c_p} \delta \bar{\dot{m}}_F''. \quad (8.15)$$

This result, Eqn. 8.15, is a simple algebraic equation involving the two unknowns  $\dot{m}''$  and  $\delta$ ; thus, we need to find another equation to complete the solution. This can be done by following the same procedure as before, but now integrating from  $x = -\infty$  to  $x = \delta/2$ . Since the reaction zone of a flame lies in the high-temperature region, it is reasonable to assume that  $\dot{m}_F'''$  is zero in the interval  $-\infty < x \leq \delta/2$ . Noting that at  $x = \delta/2$ ,

$$T = \frac{T_b + T_u}{2} \quad (8.16)$$

and

$$\frac{dT}{dx} = \frac{T_b - T_u}{\delta}, \quad (8.12)$$

we obtain from Eqn. 8.10, with the modified limits,

$$\dot{m}''\delta/2 - k/c_p = 0. \quad (8.17)$$

Solving Eqns. 8.15 and 8.17 simultaneously yields

$$\dot{m}'' = \left[ 2 \frac{k}{c_p^2} \frac{(-\Delta h_c)}{(T_b - T_u)} \bar{\dot{m}}_F''' \right]^{1/2} \quad (8.18)$$

and

$$\delta = 2k/(c_p \dot{m}''). \quad (8.19)$$

Applying the definitions of flame speed,  $S_L \equiv \dot{m}''/\rho_u$ , and thermal diffusivity,  $\alpha \equiv k/\rho_u c_p$ , and recognizing that  $\Delta h_c = (\nu + 1)c_p(T_b - T_u)$ , we obtain the final results:

$$S_L = \left[ -2\alpha(\nu + 1) \frac{\bar{\dot{m}}_F'''}{\rho_u} \right]^{1/2} \quad (8.20)$$

$$\delta = \left[ \frac{-2\rho_u \alpha}{(\nu + 1)\bar{\dot{m}}_F'''} \right]^{1/2} \quad (8.21a)$$

or, in terms of  $S_L$ ,

$$\delta = 2\alpha/S_L. \quad (8.21b)$$

We can now use Eqns. 8.20 and 8.21 to analyze how  $S_L$  and  $\delta$  theoretically are affected by the fuel-air mixture properties. This is done in the next section, where, also, comparisons are made with experimental observations.

Estimate the laminar flame speed of a stoichiometric propane-air mixture using the simplified-theory result (Eqn. 8.20). Use the global one-step reaction mechanism (Eqn. 5.2, Table 5.1) to estimate the mean reaction rate.

### Example 8.2

#### Solution

To find the laminar flame speed, we evaluate Eqn. 8.20,

$$S_L = \left[ -2\alpha(\nu + 1) \frac{\bar{\dot{m}}_F'''}{\rho_u} \right]^{1/2}.$$

The essence of this problem is how to evaluate  $\bar{\dot{m}}_F'''$  and  $\alpha$ . Since the simple theory assumed that the reaction was confined to the second half of the flame thickness ( $\delta/2 < x < \delta$ ), we will choose a mean temperature to evaluate the reaction rate as

$$\begin{aligned} \bar{T} &= \frac{1}{2}(\frac{1}{2}(T_b + T_u) + T_b) \\ &= 1770 \text{ K}, \end{aligned}$$

where we assume  $T_b = T_{ad} = 2260 \text{ K}$  (Chapter 2) and  $T_u = 300 \text{ K}$ . Assuming there is neither fuel nor oxygen in the burned gas, the mean concentrations used in the rate equation are

$$\begin{aligned} \bar{Y}_F &= \frac{1}{2}(Y_{F,u} + 0) \\ &= 0.06015/2 = 0.0301 \end{aligned}$$

and

$$\begin{aligned}\bar{Y}_{\text{O}_2} &= \frac{1}{2}[0.2331(1 - Y_{F,u}) + 0] \\ &= 0.1095,\end{aligned}$$

where the  $A/F$  of a stoichiometric propane-air mixture is 15.625 ( $= v$ ) and the mass fraction of  $\text{O}_2$  in the air is 0.233.

The reaction rate, given by

$$\dot{\omega}_F \equiv \frac{d[\text{C}_3\text{H}_8]}{dt} = -k_G[\text{C}_3\text{H}_8]^{0.1}[\text{O}_2]^{1.65},$$

with

$$k_G = 4.836 \cdot 10^9 \exp\left(\frac{-15,098}{T}\right) [=] \left(\frac{\text{kmol}}{\text{m}^3}\right)^{-0.75} \frac{1}{\text{s}},$$

can be transformed to

$$\bar{\dot{\omega}}_F = -k_G(\bar{T})\bar{\rho}^{1.75} \left(\frac{\bar{Y}_F}{MW_F}\right)^{0.1} \left(\frac{\bar{Y}_{\text{O}_2}}{MW_{\text{O}_2}}\right)^{1.65},$$

where we now use our judiciously selected mean values. Evaluating, using the appropriate units conversion for Table 5.1, gives

$$\begin{aligned}k_G &= 4.836 \cdot 10^9 \exp\left(\frac{-15,098}{1770}\right) = 9.55 \cdot 10^5 \left(\frac{\text{kmol}}{\text{m}^3}\right)^{-0.75} \frac{1}{\text{s}}, \\ \bar{\rho} &= \frac{P}{(R_u/MW)\bar{T}} = \frac{101,325}{(8315/29)1770} = 0.1997 \text{ kg/m}^3, \\ \bar{\dot{\omega}}_F &= -9.55 \cdot 10^5 (0.1997)^{1.75} \left(\frac{0.0301}{44}\right)^{0.1} \left(\frac{0.1095}{32}\right)^{1.65} \\ &= -2.439 \text{ kmol/s-m}^3.\end{aligned}$$

Then, from Eqn. 6.29,

$$\begin{aligned}\bar{m}''_{\text{F}} &= \bar{\dot{\omega}}_F MW_F = -2.439(44) \\ &= -107.3 \text{ kg/s-m}^3.\end{aligned}$$

The thermal diffusivity employed in Eqn. 8.20 is defined as

$$\alpha = \frac{k(\bar{T})}{\rho_u c_p(\bar{T})}.$$

The appropriate mean temperature, however, is now the average over the entire flame thickness ( $0 \leq x \leq \delta$ ) since conduction occurs over this interval, not just the half-interval as assumed for the reaction. Thus,

$$\begin{aligned}\bar{T} &= \frac{1}{2}(T_b + T_u) \\ &= 1280 \text{ K}\end{aligned}$$

and

$$\alpha = \frac{0.0809}{1.16(1186)} = 5.89 \cdot 10^{-5} \text{ m}^2/\text{s},$$

where air properties were used to evaluate  $k$ ,  $c_p$ , and  $\rho$ .

We can now substitute numerical values into Eqn. 8.20:

$$S_L = \left[ \frac{-2(5.89 \cdot 10^{-5})(15.625 + 1)(-107.3)}{1.16} \right]^{1/2}$$

$S_L = 0.425 \text{ m/s or } 42.5 \text{ cm/s}$

#### Comment

From correlations yet to be discussed [11], the experimental value of  $S_L$  for this mixture is 38.9 cm/s. Considering the crude nature of our theoretical analysis, this is fortuitous agreement with the calculated value of 42.5 cm/s. Of course, rigorous theory with detailed kinetics can be used to obtain much more accurate predictions. We also note that, with the assumptions embodied in our analysis, the fuel and oxidizer concentrations can be related linearly to the temperature and  $\dot{\bar{m}}_F'''$  can be evaluated exactly by integrating the single-step, irreversible global reaction rate, rather than using estimated mean concentrations and temperature as was done in the example.

---

## DETAILED ANALYSIS<sup>1</sup>

Numerical simulations of laminar premixed flames employing both detailed chemical kinetics and mixture transport properties have become standard tools for combustion engineers and scientists. Many simulations are based on the CHEMKIN library of Fortran main programs and subroutines, which, for our purposes here, include those described in Refs. [12–16].

### Governing Equations

The basic conservation equations describing steady, one-dimensional flames were developed in Chapter 7 and are repeated below:

#### Continuity

$$\frac{d\dot{m}''}{dx} = 0 \quad (7.4a)$$

---

<sup>1</sup>The mathematical development in this section may be omitted without loss of continuity and the reader may wish to skip to the subsection discussing flame structure after reading the brief introductory paragraph below.

**Species Conservation** Simplifying for steady one-dimensional flow and substituting  $\dot{\omega}_i MW_i$  for  $\dot{m}_i'''$ , Eqn. 7.16 becomes

$$\dot{m}'' \frac{dY_i}{dx} + \frac{d}{dx} (\rho Y_i v_{i,\text{diff}}) = \dot{\omega}_i MW_i \quad \text{for } i = 1, 2, \dots, N \text{ species}, \quad (8.22)$$

where the species molar production rates  $\dot{\omega}_i$  are defined by Eqns. 4.31–4.33.

**Energy Conservation** Again, replacing  $\dot{m}_i'''$  with  $\dot{\omega}_i MW_i$ , Eqn. 7.67 becomes

$$\dot{m}'' c_p \frac{dT}{dx} + \frac{d}{dx} \left( -k \frac{dT}{dx} \right) + \sum_{i=1}^N \rho Y_i v_{i,\text{diff}} c_{p,i} \frac{dT}{dx} = - \sum_{i=1}^N h_i \dot{\omega}_i MW_i. \quad (8.23)$$

Note that momentum conservation is not explicitly required since we assume that the pressure is constant, as in our simplified flame analysis. In addition to these conservation equations, the following ancillary relations or data are required:

- Ideal-gas equation of state (Eqn. 2.2).
- Constitutive relations for diffusion velocities (Eqns. 7.23 and 7.25 or Eqn. 7.31).
- Temperature-dependent species properties:  $h_i(T)$ ,  $c_{p,i}(T)$ ,  $k_i(T)$ , and  $D_{ij}(T)$ .
- Mixture property relations to calculate  $MW_{\text{mix}}$ ,  $k$ ,  $D_{ij}$ , and  $D_i^T$  from individual species properties and mole (or mass) fractions (e.g., for the  $D_{ij}$ s, Eqn. 7.26).
- A detailed chemical kinetic mechanism to obtain the  $\dot{\omega}_i$ s (e.g., Table 5.3).
- Interconversion relations for  $\chi_i$ s,  $Y_i$ s, and  $[X_i]$ s (Eqns. 6A.1–6A.10).

## Boundary Conditions

The conservation relations (Eqns. 7.4, 8.22, and 8.23) described a **boundary value problem**; i.e., given information about the unknown functions ( $T$ ,  $Y_i$ ) at an upstream location (boundary) and a downstream location (boundary), the problem at hand is to determine the functions  $T(x)$  and  $Y_i(x)$  between these boundaries. To complete our detailed mathematical description of the flame now requires that we specify appropriate boundary conditions for the species and energy conservation equations. In our analysis, we assume that the flame is freely propagating and, thus, attach the coordinate system to the flame.

Equation 8.23 is simply, and clearly, second-order in only  $T$  and, thus, requires two boundary conditions:

$$T(x \rightarrow -\infty) = T_u \quad (8.24a)$$

$$\frac{dT}{dx}(x \rightarrow +\infty) = 0. \quad (8.24b)$$

Of course, in a numerical solution, the domain  $-\infty < x < \infty$  is severely truncated, with the boundaries separated by only a few centimeters.

The appearance of both  $Y_i$  and  $v_{i,\text{diff}}$  in derivatives results in the species conservation equation (Eqn. 8.22) being first order in both  $Y_i$  and  $v_{i,\text{diff}}$ . We note, however, that the constitutive relations defining  $v_{i,\text{diff}}$  (e.g., Eqns. 7.23 and 7.31) relate  $v_{i,\text{diff}}$  to a concentration gradient, either  $d\chi_i/dx$  or  $dY_i/dx$ ; thus, one might alternatively consider Eqn. 8.22 to be second order in  $Y_i$ . Appropriate conditions are that the  $Y_i$ s are known values far upstream and that the mass-fraction gradients become vanishingly small far downstream:

$$Y_i(x \rightarrow -\infty) = Y_{i,o} \quad (8.25a)$$

$$\frac{dY_i}{dx}(x \rightarrow +\infty) = 0. \quad (8.25b)$$

As we discussed earlier in our simplified analysis of the premixed flame, the mass flux  $\dot{m}''$  is not known a priori but is an eigenvalue to the problem—its value is a part of the solution to the problem. To determine the value of  $\dot{m}''$  simultaneously with the  $T(x)$  and  $Y_i(x)$  functions, overall continuity, Eqn. 7.4, is explicitly required to be solved along with the species and energy conservation equations. This additional first-order equation necessitates the specification of an additional boundary condition. In the Sandia code [16], this is achieved for a freely propagating flame by specifying the temperature at a fixed location; i.e., one explicitly fixes the coordinate system to move with the flame:<sup>1</sup>

$$T(x_1) = T_1. \quad (8.26)$$


With this, our model of a freely propagating 1-D flame is complete. A discussion of the numerical techniques employed to obtain a solution to this model can be found in Ref. [16].

Before we look at an application of this analysis to the simulation of a particular flame, it should be pointed out that the problem may be alternatively cast as an unsteady one, whose steady-state solution is the desideratum. In this formulation, the unsteady terms,  $\partial\rho/\partial t$ ,  $\partial(\rho Y_i)/\partial t$ , and  $c_p \partial(\rho T)/\partial t$ , are added to mass conservation (Eqn. 7.4), species conservation (Eqn. 8.22), and energy conservation (Eqn. 8.23), respectively. For further information on this approach, the reader is referred to Ref. [17].

## Structure of CH<sub>4</sub>-Air Flame


We now use the above analysis to obtain an understanding of the detailed structure of a premixed flame. Figure 8.10 shows the temperature distribution and selected species mole-fraction profiles through a 1-atm, stoichiometric, CH<sub>4</sub>-air flame, simulated using CHEMKIN library codes [14–16] with GRI-

<sup>1</sup>The Sandia code also allows the modeling of burner-attached flames. For this, and other details, the reader is referred to Ref. [16].

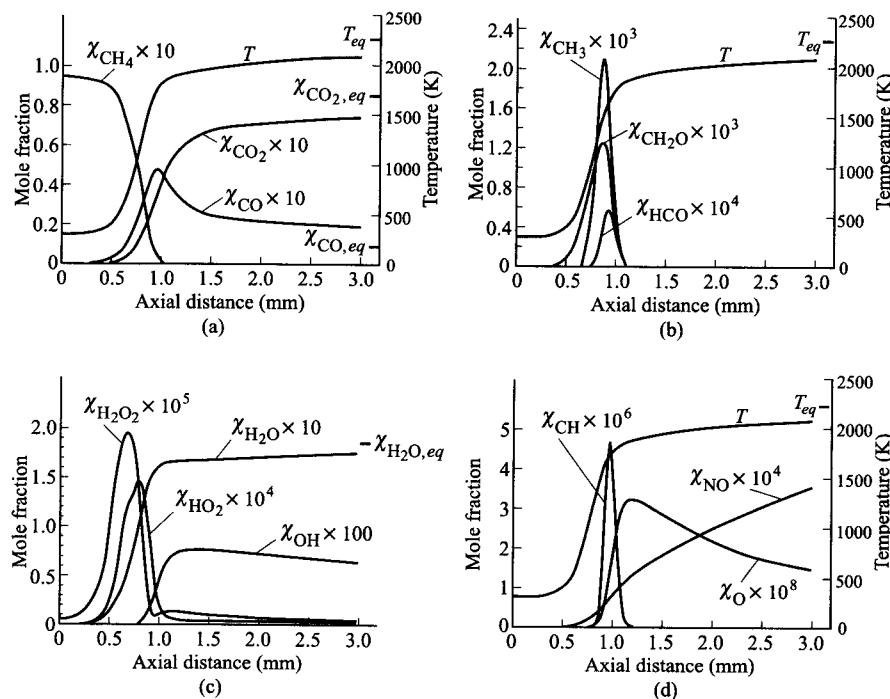

**Figure 8.10** Calculated species mole-fraction and temperature profiles for laminar, stoichiometric,  $CH_4$ -air premixed flame. (a)  $T$ ,  $X_{CH_4}$ ,  $X_{CO}$ , and  $X_{CO_2, eq}$ ; (b)  $T$ ,  $X_{CH_3}$ ,  $X_{CH_2O}$ , and  $X_{HCO}$ ; (c)  $X_{H_2O}$ ,  $X_{OH}$ ,  $X_{H_2O_2}$ , and  $X_{HO_2}$ ; (d)  $T$ ,  $X_{CH}$ ,  $X_O$ , and  $X_{NO}$ .

Mech 2.11 methane combustion kinetics [18]. The first panel in Fig. 8.10 shows the principal C-containing species  $CH_4$ ,  $CO$ , and  $CO_2$ . Here we see the disappearance of the fuel, the appearance of the intermediate species  $CO$ , and burn-out of the  $CO$  to form  $CO_2$ . The  $CO$  concentration has its peak value at approximately the same location where the  $CH_4$  concentration goes to zero, while the  $CO_2$  concentration at first lags the  $CO$  concentration but then continues to rise as the  $CO$  is oxidized. Figure 8.11 provides additional insight into the  $CH_4 \rightarrow CO \rightarrow CO_2$  sequence by showing the local molar production (destruction) rates for these species. We see that the peak fuel destruction rate nominally corresponds with the peak  $CO$  production rate and that the  $CO_2$  production rate initially lags that of the  $CO$ . Even before the location where there is no longer any  $CH_4$  to produce additional  $CO$ , the net  $CO$  production rate becomes negative, i.e.,  $CO$  is destroyed. The maximum rate of  $CO$  destruction occurs just downstream of the peak  $CO_2$  production rate. Note that the bulk of the chemical activity is contained in an interval extending from about 0.5 mm to 1.5 mm. Figure 8.10b shows, similarly, that the C-containing intermediate species,  $CH_3$ ,  $CH_2O$ , and  $HCO$ , are produced and destroyed in a narrow interval (0.4–1.1 mm), as is the  $CH$  radical (Fig. 8.10d). The H-intermediates,  $HO_2$  and  $H_2O_2$ , have somewhat broader profiles

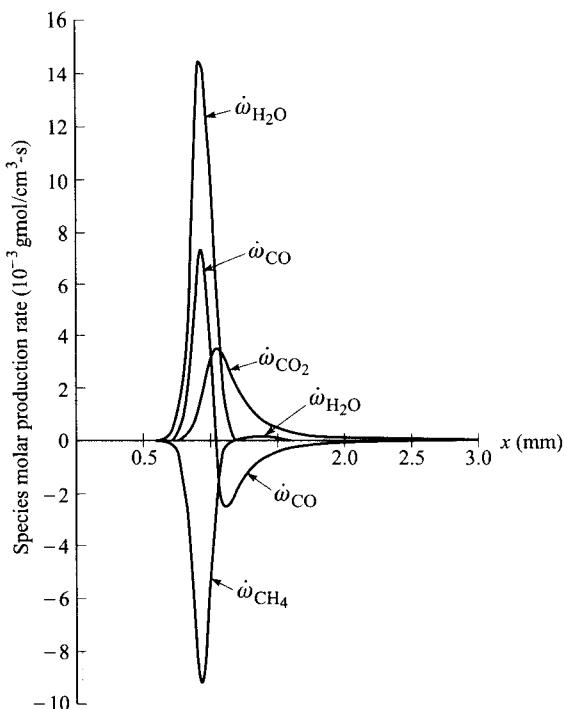


**Figure 8.11** Calculated volumetric species production rate profiles for laminar, stoichiometric,  $\text{CH}_4$ -air premixed flame. Corresponds to the same conditions as in Fig. 8.10.

than the C-intermediates, and their peak concentrations appear slightly earlier in the flame (Fig. 8.10c). Note also the  $\text{H}_2\text{O}$  reaches its 80-percent-of-equilibrium mole fraction much sooner than does the  $\text{CO}_2$ , i.e., approximately 0.9 mm versus 2 mm.

While the fuel is completely gone in approximately 1 mm and the major portion of the total temperature rise (73 percent) occurs in the same interval, the approach to equilibrium conditions is relatively slow beyond this point. In fact, we see that equilibrium has yet to be reached even at the 3-mm location. This slow approach to equilibrium is primarily a consequence of the dominance of three-body recombination reactions in this region, as mentioned in the beginning of this chapter. Plotting mole fractions as a function of distance, rather than time, exaggerates the slow approach to equilibrium somewhat as a consequence of the stretching of the distance-time relation ( $dx = v_x dt$ ) through continuity ( $\rho v_x = \text{constant}$ ). For example, given the same time interval, a fluid particle in the hot, high-velocity region of the flame travels a distance much greater than a fluid particle in the cold, low-velocity region.

Figure 8.10d focuses on nitric oxide production. Here we see a somewhat rapid rise in the NO mole fraction in the same region where the  $\text{CH}$  radical is present in the flame. This is followed by a continual, almost linear, increase in

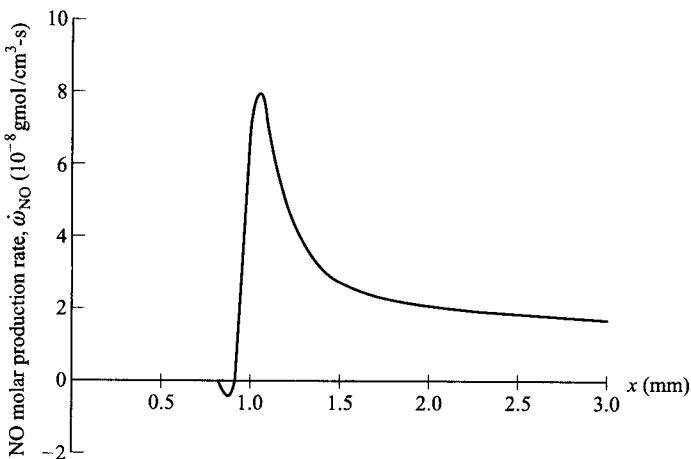

**Figure 8.12** Calculated nitric oxide molar production rate,  $\dot{\omega}_{NO}$ , profile for laminar, stoichiometric,  $\text{CH}_4$ -air premixed flame. Corresponds to the same conditions as in Figs. 8.10 and 8.11.

the NO mole fraction. In this latter region, NO formation is dominated by Zeldovich kinetics (see Chapter 5). Of course, the NO mole-fraction curve must bend over at some point downstream, as reverse reactions become more important, and approach the equilibrium condition asymptotically. We can better understand the NO mole-fraction profile by examining the NO production rate,  $\dot{\omega}_{NO}$ , through the flame (Fig. 8.12). From Fig. 8.12, it is apparent that the early appearance of NO within the flame (0.5–0.8 mm in Fig. 8.10d) is the result of passive diffusion since the production rate is essentially zero in that region. It is interesting to observe (Fig. 8.12) that the first chemical activity associated with NO is a destruction process (0.8–0.9 mm). Nitric oxide production reaches a maximum at an axial location between the peak CH and O-atom concentrations. It is likely that Fenimore and Zeldovich pathways are both important here. Beyond the O-atom peak at  $x = 1.2$  mm (Fig. 8.10d), the NO production rate falls rapidly at first, then more slowly (Fig. 8.12). Since the temperature continues to rise in this region, the decline in the net NO production rate must be a consequence of the decaying O-atom concentration and the building strength of reverse reactions.

## FACTORS INFLUENCING FLAME VELOCITY AND THICKNESS

### Temperature

The temperature dependencies of  $S_L$  and  $\delta$  can be inferred from Eqns. 8.20 and 8.21, recognizing the following approximate temperature scalings. For simplicity, we use  $T_b$  to estimate  $\bar{m}_F'''$ . The pressure dependencies are also indicated.

$$\alpha \propto T_u \bar{T}^{0.75} P^{-1} \quad (8.27)$$

$$\bar{\dot{m}}_F'''/\rho_u \propto T_u T_b^{-n} P^{n-1} \exp(-E_A/R_u T_b), \quad (8.28)$$

where the exponent  $n$  is the overall reaction order, and  $\bar{T} \equiv 0.5(T_b + T_u)$ . Combining the above scalings yields

$$S_L \propto \bar{T}^{0.375} T_u T_b^{-n/2} \exp(-E_A/2R_u T_b) P^{(n-2)/2} \quad (8.29)$$

and

$$\delta \propto \bar{T}^{0.375} T_b^{n/2} \exp(+E_A/2R_u T_b) P^{-n/2}. \quad (8.30)$$

We see that the laminar flame speed has a strong temperature dependence, since global reaction orders for hydrocarbons are about 2, and apparent activation energies are approximately  $1.67 \cdot 10^8 \text{ J/kmol}$  (40 kcal/gmol) (cf. Table 5.1). For example, Eqn. 8.29 predicts the flame speed to increase by a factor of 3.64 when the unburned gas temperature is increased from 300 K to 600 K. Increasing the unburned gas temperature will also increase the burned gas temperature by about the same amount, if we neglect dissociation and temperature-dependent specific heats. Table 8.1 shows comparisons of flame speeds and flame thicknesses for the case just mentioned (case B), and for the use of fixed unburned gas temperature but a decreased burned gas temperature (case C). Case A is the reference condition. Case C captures the effect of heat transfer or changing the equivalence ratio, either rich or lean, from the maximum-temperature condition. In this case, we see flame speeds decrease, while flame thicknesses increase significantly.

We can compare our simple estimates of the influence of temperature on flame speeds using the empirical correlation of Andrews and Bradley [19] for stoichiometric methane-air flames,


$$S_L (\text{cm/s}) = 10 + 3.71 \cdot 10^{-4} [T_u (\text{K})]^2, \quad (8.31)$$

which is shown in Fig. 8.13, along with data from several experimenters. Using Eqn. 8.31, an increase in  $T_u$  from 300 K to 600 K results in  $S_L$  increasing by a factor of 3.3, which compares quite favorably with our estimate of 3.64 (Table 8.1).

Useful correlations of flame speed with unburned gas temperature have been developed by Metghalchi and Keck [11] and are presented in the next section.

**Table 8.1** Estimate of effects of unburned and burned gas temperature on laminar flame speeds and thickness using Eqns. 8.29 and 8.30

Case	A	B	C
$T_u$ (K)	300	600	300
$T_b$ (K)	2,000	2,300	1,700
$S_L/S_{L,A}$	1	3.64	0.46
$\delta/\delta_A$	1	0.65	1.95

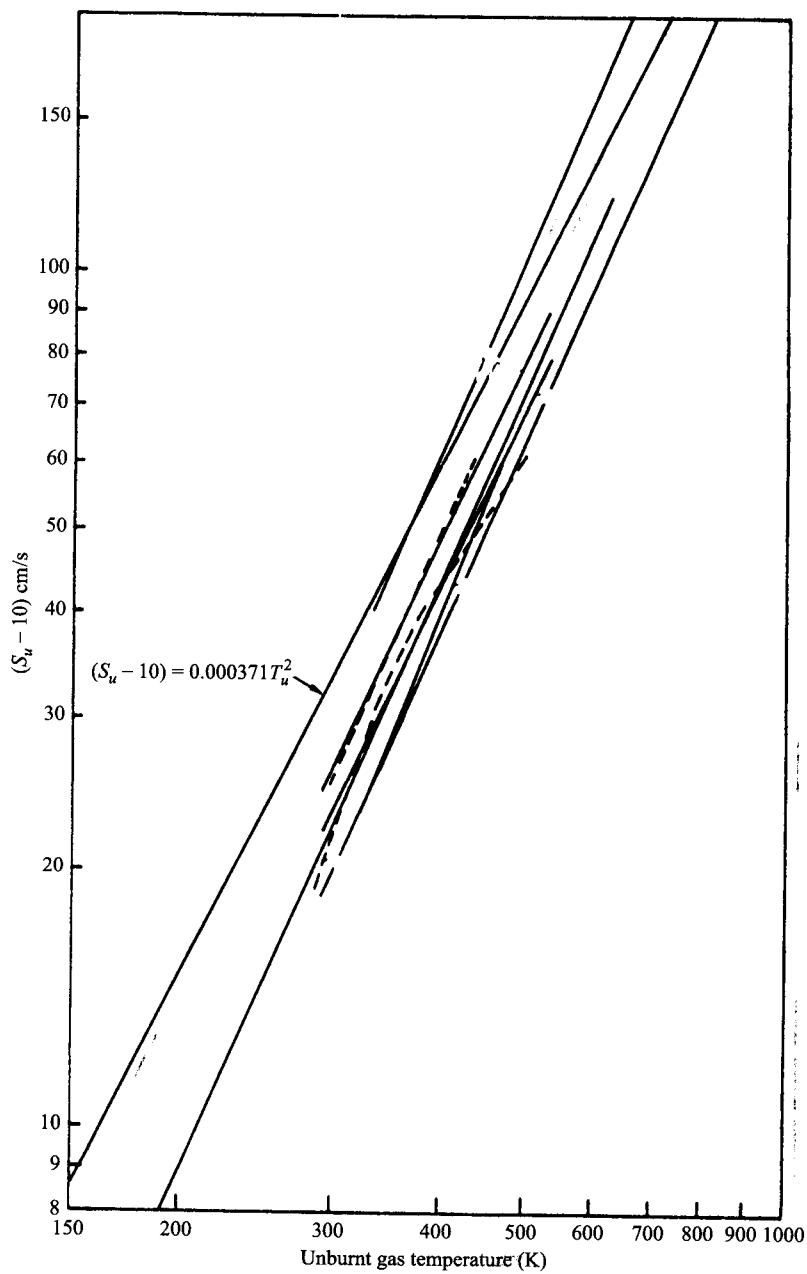

**Figure 8.13** Effect of unburned gas temperature on laminar flame speeds of stoichiometric methane-air mixtures at 1 atm. Various lines are data from various investigators.


SOURCE: Reprinted with permission, Elsevier Science, Inc., from Ref. [19], © 1972, The Combustion Institute.

## Pressure

Equation 8.30 shows that  $S_L \propto P^{(n-2)/2}$ . If, again, we assume a global reaction order of 2, flame speed should be independent of pressure. Experimental measurements generally show a negative dependence of pressure. Andrews and Bradley [19] found that

$$S_L \text{ (cm/s)} = 43[P \text{ (atm)}]^{-0.5} \quad (8.32)$$

fits their data for  $P > 5$  atm for methane-air flames (Fig. 8.14). Law [20] provides a summary of flame speed data for a range of pressure (up to 5 atm or less) for the following fuels: H<sub>2</sub>, CH<sub>4</sub>, C<sub>2</sub>H<sub>2</sub>, C<sub>2</sub>H<sub>4</sub>, C<sub>2</sub>H<sub>6</sub>, and C<sub>3</sub>H<sub>8</sub>. The previously cited work by Metghalchi and Keck [11] also provides flame speed-pressure correlations for selected fuels.

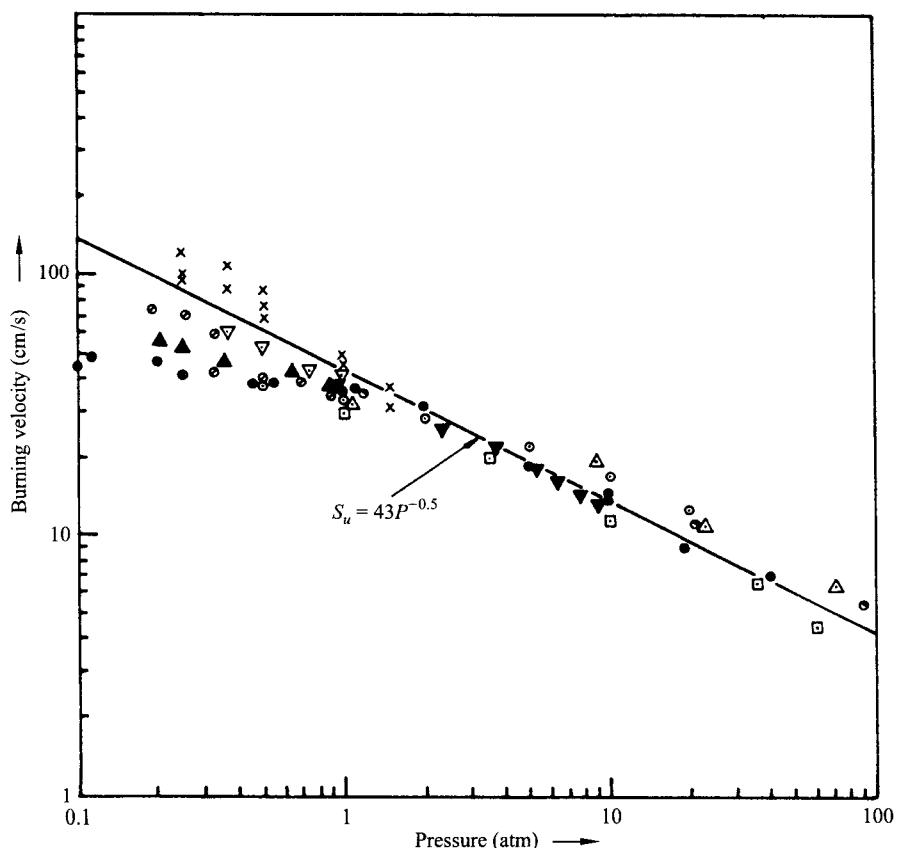

**Figure 8.14** Effect of pressure on laminar flame speeds of stoichiometric methane-air mixtures for  $T_u = 16\text{--}27^\circ\text{C}$ .

SOURCE: Reprinted with permission, Elsevier Science, Inc., from Ref. [19], © 1972, The Combustion Institute.

### Equivalence Ratio

Except for very rich mixtures, the primary effect of equivalence ratio on flame speed for similar fuels is a result of how this parameter affects flame temperatures; thus, we would expect flame speeds to be a maximum at a slightly rich mixture and fall off on either side (cf. Fig. 2.13). Indeed, Fig. 8.15 shows this behavior for methane. Flame thickness shows the inverse trend, having a minimum near stoichiometric (Fig. 8.16). Note that many definitions of  $\delta$  are applied in experimental measurements, so caution should be exercised when comparing numerical values from different investigations.

### Fuel Type


An extensive, but somewhat dated, summary of flame speed measurements for a wide variety of fuels is contained in Ref. [21]. Data from this report are shown in Fig. 8.17 for C<sub>2</sub>–C<sub>6</sub> paraffins (single bonds), olefins (double bonds), and acetylenes (triple bonds). Also shown are CH<sub>4</sub> and H<sub>2</sub>. The flame velocity of propane is used as a reference. Roughly speaking the C<sub>3</sub>–C<sub>6</sub> hydrocarbons all follow the same trend as a function of flame temperature. Ethylene (C<sub>2</sub>H<sub>4</sub>) and acetylene (C<sub>2</sub>H<sub>2</sub>) have velocities greater than the C<sub>3</sub>–C<sub>6</sub> group, while methane lies somewhat below. Hydrogen's maximum flame speed is many times greater than that of propane. Several factors combine to give H<sub>2</sub> its high flame speed: first, the thermal diffusivity of pure H<sub>2</sub> is many times greater than the hydrocarbon fuels; second, the mass diffusivity of hydrogen likewise is much greater than for the hydrocarbons; and third, the reaction kinetics for H<sub>2</sub> are very rapid since the relatively slow CO → CO<sub>2</sub> step that is a major factor in hydrocarbon combustion is absent. Law [20] presents a compilation of laminar flame-speed data for various pure fuels and mixtures that are considered to be some of the more reliable data obtained to date. Table 8.2 shows a subset of these data.

---


## FLAME SPEED CORRELATIONS FOR SELECTED FUELS

Metghalchi and Keck [11] experimentally determined laminar flame speeds for various fuel-air mixtures over a range of temperatures and pressures typical of conditions associated with reciprocating internal combustion engines and gas-turbine combustors. Several forms for correlations were tried [11], including one similar to Eqn. 8.29, with the most useful being

$$S_L = S_{L,\text{ref}} \left( \frac{T_u}{T_{u,\text{ref}}} \right)^\gamma \left( \frac{P}{P_{\text{ref}}} \right)^\beta (1 - 2.1Y_{\text{dil}}), \quad (8.33)$$

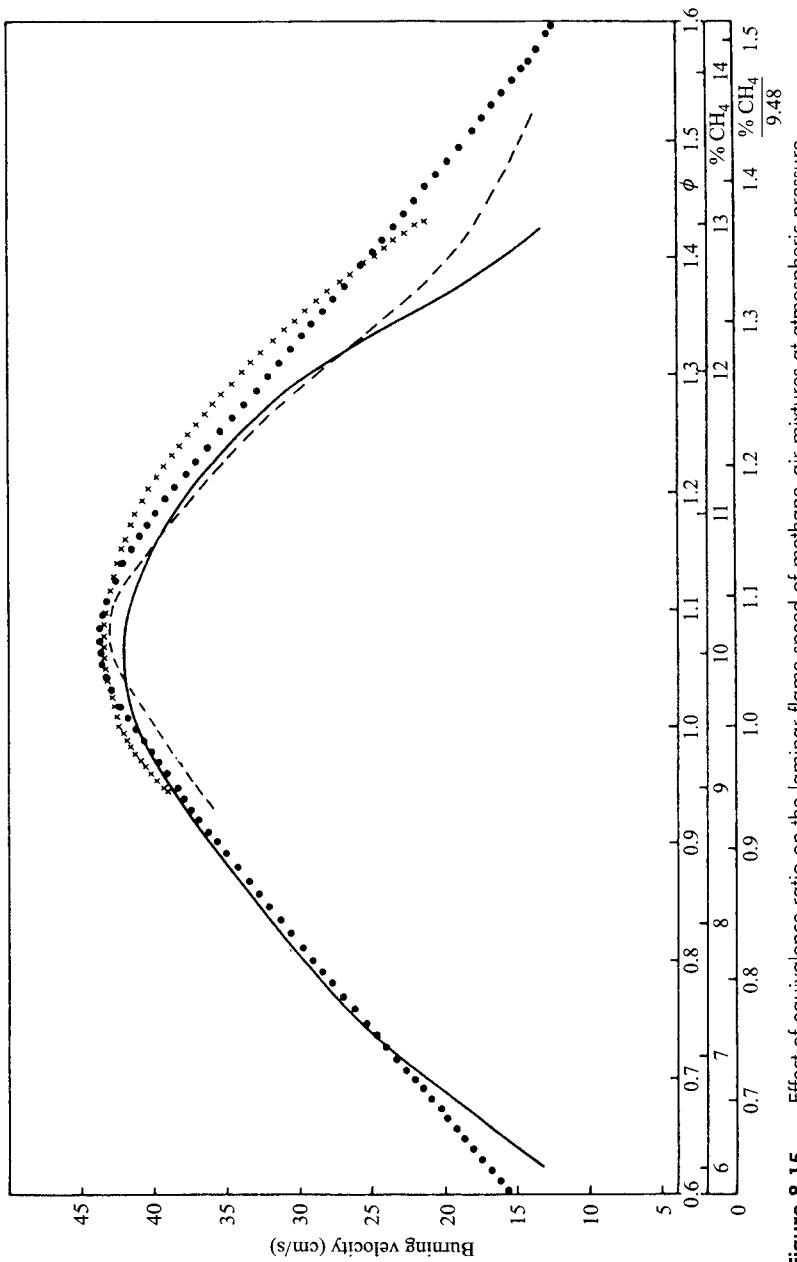

**Figure 8.15** Effect of equivalence ratio on the laminar flame speed of methane-air mixtures at atmospheric pressure.  
SOURCE: Reprinted with permission, Elsevier Science, Inc., from Ref. [19], © 1972, The Combustion Institute.

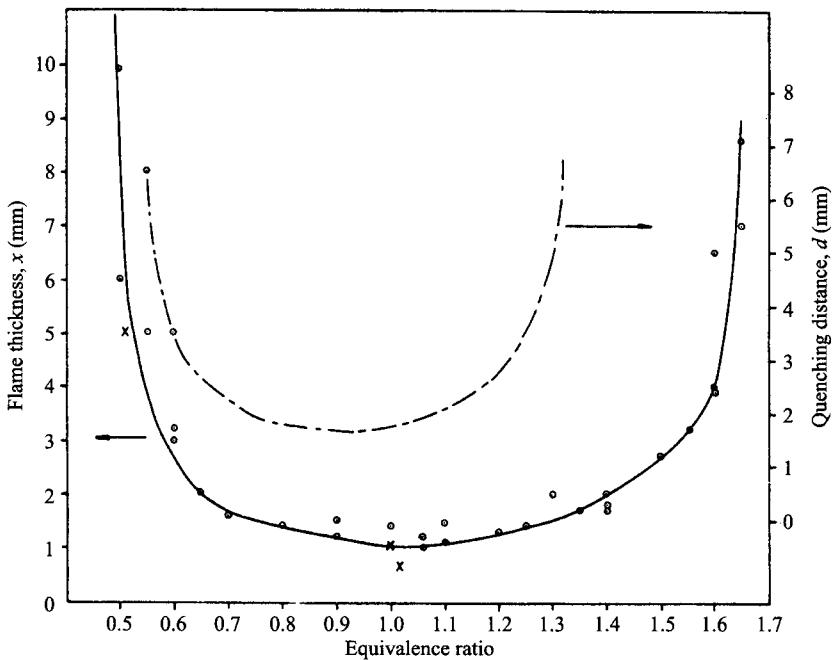

**Figure 8.16** Flame thickness for laminar methane-air flames at atmospheric pressure. Also shown is the quenching distance.

SOURCE: Reprinted with permission, Elsevier Science, Inc., from Ref. [19], © 1972, The Combustion Institute.

for  $T_u \gtrsim 350$  K. The subscript ref refers to reference conditions defined by

$$T_{u,\text{ref}} = 298 \text{ K},$$

$$P_{\text{ref}} = 1 \text{ atm},$$

and

$$S_{L,\text{ref}} = B_M + B_2(\Phi - \Phi_M)^2$$


where the constants  $B_M$ ,  $B_2$ , and  $\Phi_M$  depend on fuel type and are given in Table 8.3. The temperature and pressure exponents,  $\gamma$  and  $\beta$ , are functions of the equivalence ratio, expressed as

$$\gamma = 2.18 - 0.8(\Phi - 1)$$

and

$$\beta = -0.16 + 0.22(\Phi - 1).$$

The term  $Y_{\text{dil}}$  is the mass fraction of diluent present in the air-fuel mixture, specifically included in Eqn. 8.33 to account for any recirculated combustion products. Recirculation of exhaust or flue gases is a common technique used to

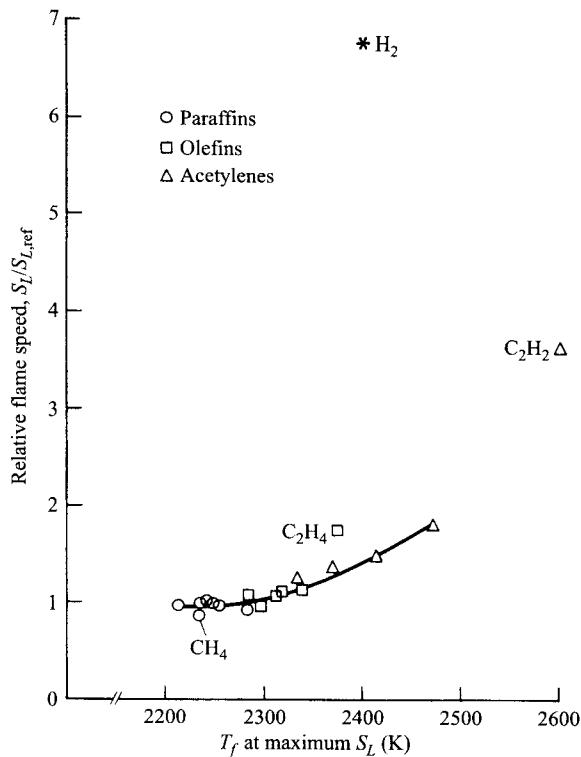

**Figure 8.17** Relative flame speeds for C<sub>1</sub>–C<sub>6</sub> hydrocarbon fuels. The reference flame speed is based on propane using the tube method [21].

**Table 8.2** Laminar flame speeds for various pure fuels burning in air for  $\Phi = 1.0$  and at 1 atm ( $T_u$  = room temperature) from Ref. [20]

Fuel	Formula	Laminar Flame Speeds, $S_L$ (cm/s)
Methane	CH <sub>4</sub>	40
Acetylene	C <sub>2</sub> H <sub>2</sub>	136
Ethylene	C <sub>2</sub> H <sub>4</sub>	67
Ethane	C <sub>2</sub> H <sub>6</sub>	43
Propane	C <sub>3</sub> H <sub>8</sub>	44
Hydrogen	H <sub>2</sub>	210

**Table 8.3** Values for  $B_M$ ,  $B_2$ , and  $\Phi_M$  used with Eqn. 8.33 [11]

Fuel	$\Phi_M$	$B_M$ (cm/s)	$B_2$ (cm/s)
Methanol	1.11	36.92	-140.51
Propane	1.08	34.22	-138.65
Isooctane	1.13	26.32	-84.72
RMFD-303	1.13	27.58	-78.34

control oxides of nitrogen in many combustion systems (Chapter 15); and in internal combustion engines, residual combustion products mix with the incoming charge under most operating conditions.

**Example 8.3** Compare the laminar flame speeds of gasoline-air mixtures with  $\Phi = 0.8$  for the following three cases:

- At reference conditions of  $T = 298\text{ K}$  and  $P = 1\text{ atm}$ .
- At conditions typical of a spark-ignition engine operating at wide-open throttle:  $T = 685\text{ K}$  and  $P = 18.38\text{ atm}$ .
- Same as condition ii above, but with 15 percent (by mass) exhaust-gas recirculation.

**Solution**

We will employ the correlation of Metghalchi and Keck, Eqn. 8.33, for RMFD-303. This research fuel (also called indolene) has a controlled composition simulating typical gasolines. The flame speed at 298 K and 1 atm is given by

$$S_{L,\text{ref}} = B_M + B_2(\Phi - \Phi_M)^2$$

where, from Table 8.3,

$$B_M = 27.58\text{ cm/s},$$

$$B_2 = -78.38\text{ cm/s},$$

$$\phi_M = 1.13.$$

Thus,

$$S_{L,\text{ref}} = 27.58 - 78.34(0.8 - 1.13)^2,$$

$$S_{L,\text{ref}} = 19.05\text{ cm/s}$$

To find the flame speed at temperatures and pressures other than the reference state, we employ (Eqn. 8.33)

$$S_L(T_u, P) = S_{L,\text{ref}} \left( \frac{T_u}{T_{u,\text{ref}}} \right)^\gamma \left( \frac{P}{P_{\text{ref}}} \right)^\beta$$

where

$$\begin{aligned} \gamma &= 2.18 - 0.8(\Phi - 1) \\ &= 2.34 \end{aligned}$$

$$\begin{aligned} \beta &= -0.16 + 0.22(\Phi - 1) \\ &= -0.204. \end{aligned}$$

Thus,

$$\begin{aligned} S_L(685\text{ K}, 18.38\text{ atm}) &= 19.05 \left( \frac{685}{298} \right)^{2.34} \left( \frac{18.38}{1} \right)^{-0.204} \\ &= 19.05 (7.012) (0.552) \\ S_L &= 73.8\text{ cm/s} \end{aligned}$$

With dilution by exhaust-gas recirculation, the flame speed above is reduced by the factor  $(1 - 2.1 Y_{\text{dil}})$ :

$$S_L(685 \text{ K}, 18.38 \text{ atm}, 15\% \text{ EGR}) = 73.8[1 - 2.1(0.15)]$$

$$S_L = 50.6 \text{ cm/s}$$

#### Comments

We see that the laminar flame velocity is much greater at engine conditions than at the reference state, with the dominant influence being the temperature. In Chapter 12, we will learn that the laminar flame speed is an important factor in determining the turbulent flame speed, which controls the burning rate in spark-ignition engines. Results of this example also show that dilution decreases the flame speed, which can have a detrimental effect on engine performance if too much gas is recirculated. Note that we have employed a value for  $T_u$  less than the recommended minimum (350 K) for accurate use of Eqn. 8.33, thus underestimating the true value of  $S_L$  at 298 K.

---

## QUENCHING, FLAMMABILITY, AND IGNITION

So far in this chapter we have considered only the steady propagation of premixed laminar flames. We now turn our attention to what are essentially transient processes: flame quenching and ignition. Although the processes are transient, we will confine our attention to examining limit behavior, i.e., conditions under which a flame will either extinguish or not, or ignite or not, and ignore the time-dependent details of the extinction and ignition processes.

There are many ways in which a flame can be extinguished. For example, flames will extinguish while passing through narrow passageways. This phenomenon is the basis for many practical flame-arresting devices in use today, and was first put into practice by Sir Humphrey Davey in his invention of the miner's safety lamp in 1815. Other techniques for extinguishing premixed flames are the addition of diluents, such as water, which have primarily a thermal effect, or chemical suppressants, such as halogens, which alter the chemical kinetics. Blowing the flame away from the reactants is also effective in extinguishing flames, as is easily demonstrated with a weakly burning Bunsen-burner flame. A more practical application is the blowout of oil-well fires with explosive charges; although, in this case, the flames may have a strongly nonpremixed character, rather than being premixed.

In the following, we discuss three concepts: quenching distances, flammability limits, and minimum ignition energies. In all of these, heat losses are assumed to control the phenomena. For more detailed analyses and discussions, the reader is referred to the literature [8, 22–31].

## Quenching by a Cold Wall

As mentioned above, flames extinguish upon entering a sufficiently small passageway. If the passageway is not too small, the flame will propagate through it. The critical diameter of a circular tube where a flame extinguishes, rather than propagates, is referred to as the **quenching distance**. Experimentally, quenching distances are determined by observing whether a flame stabilized above a tube does or does not **flashback** for a particular tube diameter when the reactant flow is rapidly shut off. Quenching distances are also determined using high-aspect-ratio rectangular-slot burners. In this case, the quenching distance is the distance between the long sides, i.e., the slit width. Tube-based quenching distances are somewhat larger ( $\sim 20\text{--}50$  percent) than slit-based ones [21].

**Ignition and Quenching Criteria** Williams [22] provides the following two rules-of-thumb governing ignition and its converse, flame extinction. The second criterion is the one applicable to the problem of flame quenching by a cold wall.

Criterion I—Ignition will only occur if enough energy is added to the gas to heat a slab about as thick as a steadily propagating laminar flame to the adiabatic flame temperature.

Criterion II—The rate of liberation of heat by chemical reactions inside the slab must approximately balance the rate of heat loss from the slab by thermal conduction.

In the following section, we employ these criteria to develop a greatly simplified analysis of flame quenching.

**Simplified Quenching Analysis** Consider a flame that has just entered a slot formed by two plane-parallel plates as shown in Fig. 8.18. Applying Williams' second criterion and following the approach of Friedman [28], we write an energy balance equating the heat produced by reaction to the heat lost by conduction to the walls, i.e.,


$$\dot{Q}''' V = \dot{Q}_{\text{cond,tot}}, \quad (8.34)$$

where the volumetric heat release rate  $\dot{Q}'''$  is related to the previously defined  $\bar{\dot{m}}_F'''$  as

$$\dot{Q}''' = -\bar{\dot{m}}_F''' \Delta h_c. \quad (8.35)$$

Before proceeding, it is important to note that the thickness of the slab of gas analyzed (Fig. 8.18) has been taken to be  $\delta$ , the adiabatic laminar flame thickness as expressed in Eqn. 8.21. Our objective now is to determine the distance  $d$ , the quenching distance, that satisfies the quenching criterion expressed by Eqn. 8.34.

The heat loss from the flame slab to the wall can be expressed using Fourier's law as

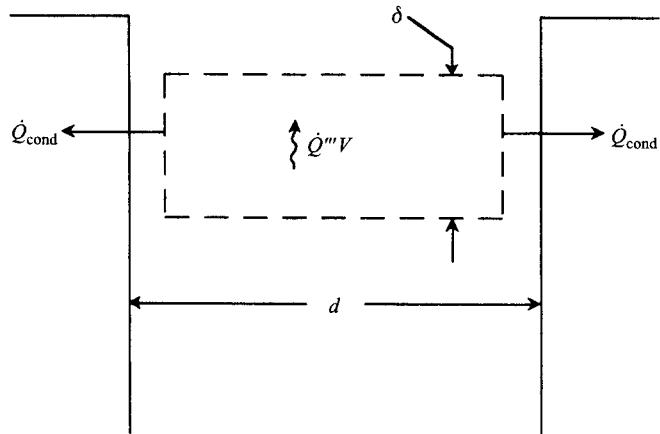

**Figure 8.18** Schematic of flame quenching between two parallel walls.

$$\dot{Q}_{\text{cond}} = -kA \left. \frac{dT}{dx} \right|_{\substack{\text{In gas} \\ \text{at wall}}} , \quad (8.36)$$

where both the conductivity,  $k$ , and the temperature gradient are evaluated in the gas at the wall. The area  $A$  is easily expressed as  $2\delta L$ , where  $L$  is the slot width (perpendicular to the page) and the factor 2 accounts for the flame being in contact with walls on each side. The temperature gradient  $dT/dx$ , however, is much more difficult to approximate. A reasonable lower bound for the magnitude of  $dT/dx$  is  $(T_b - T_w)/(d/2)$ , where we assume a linear distribution from the centerline plane at  $T_b$  to the wall at  $T_w$ . Since  $dT/dx$  is likely to be much greater than this, we introduce an arbitrary constant  $b$ , defined by

$$\left| \frac{dT}{dx} \right| \equiv \frac{T_b - T_w}{d/b} , \quad (8.37)$$

where  $b$  is a number generally much greater than 2. Utilizing Eqns. 8.35–8.37, the quenching criterion (Eqn. 8.34) becomes

$$(-\bar{\dot{m}}_F''' \Delta h_c)(\delta dL) = k(2\delta L) \frac{T_b - T_w}{d/b} \quad (8.38a)$$

or

$$d^2 = \frac{2kb(T_b - T_w)}{-\bar{\dot{m}}_F''' \Delta h_c} . \quad (8.38b)$$

Assuming  $T_w = T_u$ , using the previously developed relationships between  $\bar{\dot{m}}_F'''$  and  $S_L$  (Eqn. 8.20), and relating  $\Delta h_c = (v + 1)c_p(T_b - T_u)$ , Eqn. 8.38b becomes

$$d = 2\sqrt{b\alpha/S_L} \quad (8.39a)$$


or, in terms of  $\delta$ ,

$$d = \sqrt{b\delta}. \quad (8.39b)$$

Equation 8.39b is in agreement with the experimental results shown in Fig. 8.16 for methane, which show quenching distances to be greater than the flame thickness  $\delta$ . Quenching distances for a wide variety of fuels are shown in Table 8.4. It should be pointed out that the temperature and pressure dependencies of the quenching distance can be estimated using Eqn. 8.28.

**Example 8.4**

Consider the design of a laminar-flow, adiabatic, flat-flame burner consisting of a square arrangement of thin-walled tubes as illustrated in the sketch below. Fuel-air mixture flows through both the tubes and the interstices between the tubes. It is desired to operate the burner with a stoichiometric methane-air mixture exiting the burner tubes at 300 K and 5 atm.

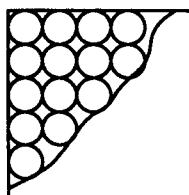

Burner tube layout

- Determine the mixture mass flowrate per unit cross-sectional area at the design condition.
- Estimate the maximum tube diameter allowed so that flashback will be prevented.

**Solution**

A. To establish a flat flame, the mean flow velocity must equal the laminar flame speed at the design temperature and pressure. From Fig. 8.14,

$$\begin{aligned} S_L(300 \text{ K}, 5 \text{ atm}) &= 43/\sqrt{P(\text{atm})} \\ &= 43/\sqrt{5} = 19.2 \text{ cm/s.} \end{aligned}$$

The mass flux,  $\dot{m}''$ , is

$$\dot{m}'' = \dot{m}/A = \rho_u S_L.$$

We can approximate the density by assuming an ideal-gas mixture, where

$$\begin{aligned} MW_{\text{mix}} &= \chi_{\text{CH}_4} MW_{\text{CH}_4} + (1 - \chi_{\text{CH}_4}) MW_{\text{air}} \\ &= 0.095(16.04) + 0.905(28.85) \\ &= 27.6 \text{ kg/kmol} \end{aligned}$$

and

$$\begin{aligned} \rho_u &= \frac{P}{(R_u/MW_{\text{mix}})T_u} = \frac{5(101,325)}{(8315/27.6)(300)} \\ &= 5.61 \text{ kg/m}^3. \end{aligned}$$

**Table 8.4** Flammability limits, quenching distances, and minimum ignition energies for various fuels<sup>a</sup>

Fuel	Flammability Limits			Quenching Distance			Minimum Ignition Energy	
	$\Phi_{\min}$ (Lean or Lower Limit)	$\Phi_{\max}$ (Rich or Upper Limit)	Stoichiometric Mass Air-Fuel Ratio	For $\Phi = 1$		Absolute Minimum (mm)	For $\Phi = 1$ ( $10^{-5}$ J)	Absolute Minimum ( $10^{-5}$ J)
				Absolute	Minimum			
Acetylene, $C_2H_2$	0.19 <sup>b</sup>	$\infty^b$	13.3	2.3	—	—	3	—
Carbon monoxide, CO	0.34	6.76	2.46	—	—	—	—	—
<i>n</i> -Decane, $C_{10}H_{22}$	0.36	3.92	15.0	2.1 <sup>c</sup>	—	—	—	—
Ethane, $C_2H_6$	0.50	2.72	16.0	2.3	1.8	42	24	—
Ethylene, $C_2H_4$	0.41	> 6.1	14.8	1.3	—	9.6	—	—
Hydrogen, $H_2$	0.14 <sup>b</sup>	2.54 <sup>b</sup>	34.5	0.64	0.61	2.0	1.8	—
Methane, $CH_4$	0.46	1.64	17.2	2.5	2.0	33	29	—
Methanol, $CH_3OH$	0.48	4.08	6.46	1.8	1.5	21.5	14	—
<i>n</i> -Octane, $C_8H_{18}$	0.51	4.25	15.1	—	—	—	—	—
Propane, $C_3H_8$	0.51	2.83	15.6	2.0	1.8	30.5	26	—

<sup>a</sup>SOURCE: Data from Ref. [21] unless otherwise noted.

<sup>b</sup>Zabetakis (U.S. Bureau of Mines, Bulletin 627, 1965).

<sup>c</sup>Chomidak [25].

Thus, the mass flux is

$$\dot{m}'' = \rho_u S_L = 5.61(0.192)$$

$\dot{m}'' = 1.08 \text{ kg/s-m}^2.$

B. We assume that if the tube diameter is less than the quenching distance, with some factor-of-safety applied, the burner will operate without danger of flashback. Thus, we need to find the quench distance at the design conditions. From Fig. 8.16, we see that the 1-atm quench distance for a slit is approximately 1.7 mm. Since slit quenching distances are 20–50 percent smaller than for tubes, we will use this value outright, with the difference being our factor of safety. We now need to correct this value to the 5-atm condition. From Eqn. 8.39a, we see that

$$d \propto \alpha/S_L,$$

and, from Eqn. 8.27,

$$\alpha \propto T^{1.75}/P.$$

Combining the pressure effects on  $\alpha$  and  $S_L$ , we have

$$d_2 = d_1 \frac{\alpha_2}{\alpha_1} \frac{S_{L,1}}{S_{L,2}} = d_1 \frac{P_1}{P_2} \frac{S_{L,1}}{S_{L,2}}$$

$$d(5 \text{ atm}) = 1.7 \text{ mm} \frac{1 \text{ atm}}{5 \text{ atm}} \frac{43 \text{ cm/s}}{19.2 \text{ cm/s}},$$

so,

$d_{\text{design}} \leq 0.76 \text{ mm}$

We need to verify that, when using this diameter, laminar flow is maintained in the tube; i.e.,  $Re_d < 2300$ . Using air properties for the viscosity,

$$\begin{aligned} Re_d &= \frac{\rho_u d_{\text{design}} S_L}{\mu} \\ &= \frac{5.61(0.00076)(0.192)}{15.89 \cdot 10^{-6}} \\ &= 51.5. \end{aligned}$$

This value is well below the transitional value; hence, the quenching criteria controls the design.

#### Comment

The final design should be based on the worst-case scenario where the quenching distance is a minimum. From Fig. 8.16, we see that the minimum quenching distance is close to the value used above for  $\Phi = 0.8$ .


## Flammability Limits

Experiments show that a flame will propagate only within a range of mixture strengths between the so-called lower and upper limits of flammability. The **lower limit** is the leanest mixture ( $\Phi < 1$ ) that will allow steady flame propagation, while the **upper limit** represents the richest mixture ( $\Phi > 1$ ). Flammability limits are frequently quoted as percent fuel by volume in the mixture, or as a percentage of the stoichiometric fuel requirement, i.e.,  $\Phi \times 100$  percent.

Table 8.4 shows flammability limits for a number of fuel-air mixtures at atmospheric pressure obtained from experiments employing the "tube method." In this method, it is ascertained whether or not a flame initiated at the bottom of a vertical tube (approximately 50-mm diameter by 1.2-m long) propagates the length of the tube. A mixture that sustains the flame is said to be flammable. By adjusting the mixture strength, the flammability limit can be ascertained.

Although flammability limits can be defined that are physiochemical properties of the fuel-air mixture, experimental flammability limits are related to heat losses from the system, in addition to the mixture properties, and, hence, are generally apparatus dependent [31].

Even if conduction losses are minimal, radiation losses can account for the existence of flammability limits. Figure 8.19 illustrates an instantaneous axial temperature profile along the centerline of a tube in which a flame is propagating. Because the high-temperature product gases radiate to a lower-temperature environment, they cool. Their cooling creates a negative temperature gradient at the rear of the flame zone; hence, heat is lost by conduction from

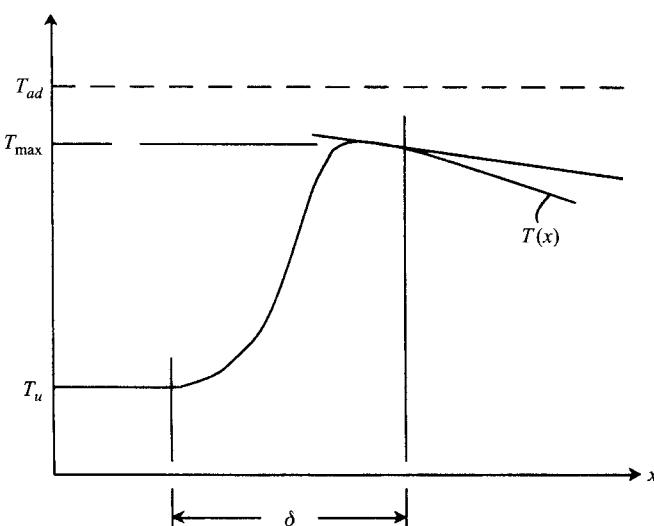

**Figure 8.19** Temperature profile through flame with heat losses.

the flame proper. When sufficient heat is removed, such that Williams' criteria are not met, the flame ceases to propagate. Williams [22] provides a theoretical analysis for the situation described in Fig. 8.19, a discussion of which is beyond the scope of this book.

**Example 8.5**

A full propane cylinder from a camp stove leaks its contents of 1.02 lb (0.464 kg) into a  $12' \times 14' \times 8'$  ( $3.66\text{ m} \times 4.27\text{ m} \times 2.44\text{ m}$ ) room at  $20^\circ\text{C}$  and 1 atm. After a long time, the fuel gas and room air are well mixed. Is the mixture in the room flammable?

**Solution**

From Table 8.4, we see that propane-air mixtures are flammable for  $0.51 < \Phi < 2.83$ . Our problem, thus, is to determine the equivalence ratio of the mixture filling the room. We can determine the partial pressure of the propane by assuming ideal-gas behavior:

$$\begin{aligned} P_F &= \frac{m_F(R_u/MW_F)T}{V_{\text{room}}} \\ &= \frac{0.464(8315/44.094)(20 + 273)}{3.66(4.27)(2.44)} \\ &= 672.3 \text{ Pa.} \end{aligned}$$

The propane mole fraction is

$$\chi_F = \frac{P_F}{P} = \frac{672.3}{101,325} = 0.00664$$

and

$$\chi_{\text{air}} = 1 - \chi_F = 0.99336.$$

The air-fuel ratio of the mixture in the room is

$$\begin{aligned} (A/F) &= \frac{\chi_{\text{air}}MW_{\text{air}}}{\chi_FMW_F} = \frac{0.99336(28.85)}{0.00664(44.094)} \\ &= 97.88. \end{aligned}$$

From the definition of  $\Phi$  and the value of  $(A/F)_{\text{stoic}}$  from Table 8.4, we have

$$\Phi = \frac{15.6}{97.88} = 0.159.$$

Since  $\Phi = 0.159$  is less than the lower limit of flammability ( $\Phi_{\min} = 0.51$ ), the mixture in the room is not capable of supporting a flame.

**Comment**


Although our calculations show that in the fully mixed state the mixture is not flammable, it is quite possible that, during the transient leaking process, a flammable mixture can exist somewhere within the room. Propane is heavier than air and would tend to accumulate near the floor until it is mixed by bulk motion and molecular diffusion. In environments employing flammable gases, monitors should be located at both low and high positions to detect leakage of heavy and light fuels, respectively.

## Ignition

In this section, we limit our discussion to ignition by electrical sparks and, in particular, focus on the concept of **minimum ignition energy**. Spark ignition is perhaps the most frequently employed means of ignition in practical devices: for example, spark-ignition and gas-turbine engines, and various industrial, commercial, and residential burners. Spark ignition is highly reliable and does not require a pre-existing flame, as required by pilot ignition. In the following, a simple analysis is presented from which the pressure and temperature dependencies of the minimum ignition energy are determined. Experimental data are also presented and compared with the predictions of the simple theory.

**Simplified Ignition Analysis** Consider Williams' second criterion, applied now to a spherical volume of gas, which represents the incipient propagating flame created by a point spark. Using this criterion, we can define a critical gas-volume radius such that a flame will not propagate if the actual radius is smaller than the critical value. The second step of the analysis is to assume that the minimum ignition energy to be supplied by the spark is the energy required to heat the critical gas volume from its initial state to the flame temperature.

To determine the critical radius,  $R_{\text{crit}}$ , we equate the rate of heat liberated by reaction to the rate of heat lost to the cold gas by conduction, as illustrated in Fig. 8.20, i.e.,

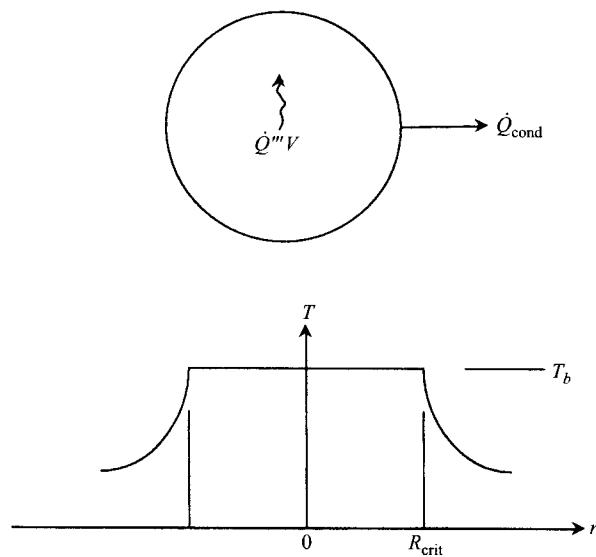

**Figure 8.20** Critical volume of gas for spark ignition.

$$\dot{Q}''' V = \dot{Q}_{\text{cond}} \quad (8.40)$$

or

$$-\bar{\dot{m}}_F''' \Delta h_c 4\pi R_{\text{crit}}^3 / 3 = -k 4\pi R_{\text{crit}}^2 \left. \frac{dT}{dr} \right|_{R_{\text{crit}}}, \quad (8.41)$$

where Eqn. 8.35 has been substituted for  $\dot{Q}'''$ , Fourier's law employed, and the volume and surface area of the sphere expressed in terms of the critical radius,  $R_{\text{crit}}$ .

The temperature gradient in the cold gas at the sphere boundary,  $(dT/dr)_{\text{crit}}$ , can be evaluated by determining the temperature distribution in the gas beyond the sphere ( $R_{\text{crit}} \leq r \leq \infty$ ) with the boundary conditions  $T(R_{\text{crit}}) = T_b$  and  $T(\infty) = T_u$ . (The well-known result that  $Nu = 2$  follows from this analysis, where  $Nu$  is the Nusselt number.) This results in

$$\left. \frac{dT}{dr} \right|_{R_{\text{crit}}} = -\frac{(T_b - T_u)}{R_{\text{crit}}}. \quad (8.42)$$

Substituting Eqn. 8.42 into Eqn. 8.41 yields

$$R_{\text{crit}}^2 = \frac{3k(T_b - T_u)}{-\bar{\dot{m}}_F''' \Delta h_c}. \quad (8.43)$$

The critical radius can be related to the laminar flame speed,  $S_L$ , and flame thickness,  $\delta$ , by solving Eqn. 8.20 for  $\bar{\dot{m}}_F'''$  and substituting the result into Eqn. 8.43. This substitution, together with the recognition that  $\Delta h_c = (\nu + 1)c_p(T_b - T_u)$ , yields

$$R_{\text{crit}} = \sqrt{6} \frac{\alpha}{S_L}, \quad (8.44a)$$

where  $\alpha = k/\rho_u c_p$  with  $k$  and  $c_p$  evaluated at some appropriate mean temperature. The critical radius can also be expressed in terms of  $\delta$  (Eqn. 8.21b):

$$R_{\text{crit}} = (\sqrt{6}/2)\delta. \quad (8.44b)$$

Considering the crudeness of our analysis, the constant  $\sqrt{6}/2$  should not be construed to be in any way precise but, rather, expresses an order of magnitude. Thus, from Eqn. 8.44b, we see that the critical radius is roughly equal to—or, at most, a few times larger than—the laminar flame thickness. In contrast, the quenching distance,  $d$ , as expressed by Eqn. 8.39b, can be many times larger than the flame thickness.

Knowing the critical radius, we now turn our attention to determining the minimum ignition energy,  $E_{\text{ign}}$ . This is done simply by assuming the energy added by the spark heats the critical volume to the burned-gas temperature, i.e.,

$$E_{\text{ign}} = m_{\text{crit}} c_p (T_b - T_u), \quad (8.45)$$

where the mass of the critical sphere,  $m_{\text{crit}}$ , is  $\rho_b 4\pi R_{\text{crit}}^3/3$ , or

$$E_{\text{ign}} = 61.6 \rho_b c_p (T_b - T_u) (\alpha / S_L)^3. \quad (8.46)$$

Eliminating  $\rho_b$  using the ideal-gas mixture law yields our final result:


$$E_{\text{ign}} = 61.6 P \left( \frac{c_p}{R_b} \right) \left( \frac{T_b - T_u}{T_b} \right) \left( \frac{\alpha}{S_L} \right)^3, \quad (8.47)$$

where  $R_b = R_u / MW_b$ .

**Pressure and Temperature Dependencies** The effect of pressure on minimum ignition energy is the result of the obvious direct influence seen in Eqn. 8.47, and the indirect influences buried in the thermal diffusivity,  $\alpha$ , and the flame speed,  $S_L$ . Using Eqns. 8.27 and 8.29 ( $n \approx 2$ ), with Eqn. 8.47, shows the combined pressure effects to be

$$E_{\text{ign}} \propto P^{-2}, \quad (8.48)$$

which agrees remarkably well with experimental results. Figure 8.21 shows experimental ignition energies as a function of pressure [29], together with the power law of Eqn. 8.48 fitted to match the central datapoint.

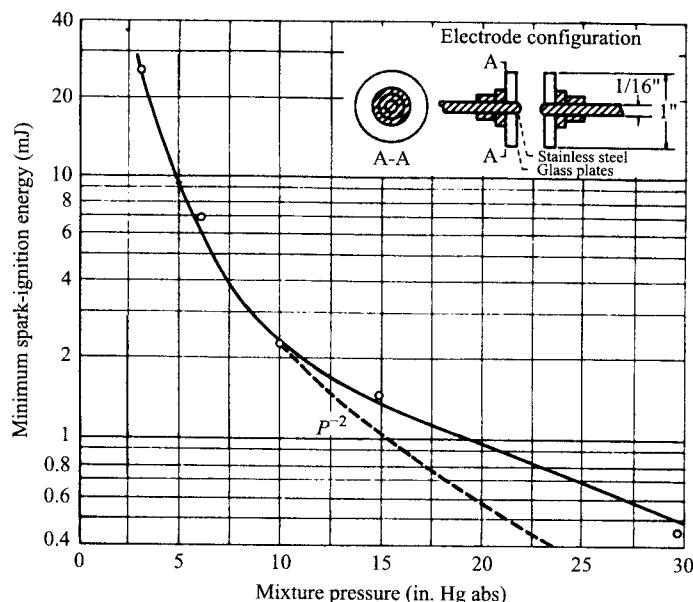

**Figure 8.21** Effect of pressure on minimum spark-ignition energy.

| SOURCE: From Ref. [29]. Reprinted by permission of the American Institute of Physics.

**Table 8.5** Temperature influence on spark-ignition energy [30]

Fuel	Initial Temperature (K)	$E_{\text{ign}}$ (mJ) <sup>a</sup>
<i>n</i> -Heptane	298	14.5
	373	6.7
	444	3.2
Isooctane	298	27.0
	373	11.0
	444	4.8
<i>n</i> -Pentane	243	45.0
	253	14.5
	298	7.8
	373	4.2
	444	2.3
Propane	233	11.7
	243	9.7
	253	8.4
	298	5.5
	331	4.2
	356	3.6
	373	3.5
	477	1.4

|  ${}^{\circ}\text{P} = 1 \text{ atm}$ .

In general, increasing the initial mixture temperature results in decreased ignition energies, as shown in Table 8.5. Determining the theoretical influence from the simplified analyses presented in this chapter is left as an exercise for the reader.

## FLAME STABILIZATION



Important design criteria for gas burners are the avoidance of **flashback** and **liftoff**. Flashback occurs when the flame enters and propagates through the burner tube or port without quenching; while liftoff is the condition where the flame is not attached to the burner tube or port but, rather, is stabilized at some distance from the port. Flashback is not only a nuisance, but is a safety hazard as well. In a gas appliance, propagation of a flame through a port can ignite the relatively large volume of gas in the mixer leading to the port, which might result in an explosion. Conversely, flame propagation through a “flash tube” from the pilot flame to the burner proper is used for ignition. In practical burners, flame lifting is generally undesirable for several reasons [32]. First, it can contribute to some escape of unburned gas or incomplete combustion. Also, ignition is difficult to achieve above the lifting limit. Accurate control of the position of a lifted flame is hard to achieve, so that poor heat-transfer characteristics can result. Lifted flames can also be noisy.

The phenomena of flashback and liftoff are both related to matching the local laminar flame speed to the local flow velocity. These matching conditions are schematically illustrated by the velocity vector diagrams of Fig. 8.22. Flashback is generally a transient event, occurring as the fuel flow is decreased or turned off. When the local flame speed exceeds the local flow velocity, the flame propagates upstream through the tube or port (Fig. 8.22a). When the fuel flow is stopped, flames will flashback through any tubes or ports that are larger than the quenching distance. Thus, we expect the controlling parameters for flashback to be the same as those affecting quenching, e.g., fuel type, equivalence ratio, flow velocity, and burner geometry.


Figure 8.23 illustrates flashback stability for a fixed burner geometry (a straight row of 2.7-mm-diameter ports with 6.35-mm spacing) for two different fuels: natural gas (Fig. 8.23a), and a manufactured gas that contains hydrogen (Fig. 8.23b). For a fixed gas and port size, the abscissa is proportional to the port exit velocity. Operation in the region to the left of the flashback zone line results in flashback, while flashback-free operation occurs to the right, where velocities are higher. We see that for both fuels, slightly rich stoichiometries provide the least tolerance to flashback, as expected, since maximum laminar flame speeds generally occur with slightly rich mixtures (cf. Fig. 8.15). We also observe from Fig. 8.23 that the flashback stability of natural gas, which is primarily methane, is much greater than for the manufactured gas. This is primarily a result of the high flame speed associated with the hydrogen in the manufactured gas. (Referring to Table 8.2, we see that the flame speed of H<sub>2</sub> is more than five times that of CH<sub>4</sub>.)

Flame lifting depends on local flame and flow properties near the edges of the burner port. Consider a flame stabilized on a circular tube. At low flow velocities, the edge of the flame lies quite close to the burner lip and is said to be **attached**. When the velocity is increased, the cone angle of the flame decreases in accordance with the condition  $\alpha = \sin^{-1}(S_L/v_u)$ , Eqn. 8.2, and the edge of the flame is displaced a small distance downstream. With further increases in flow velocity, a critical velocity is reached where the flame edge jumps to a downstream position far from the burner lip. When the flame jumps to this position, it is said to be **lifted**. Increasing the velocity beyond the liftoff value results in increasing the liftoff distance until the flame abruptly blows off the tube altogether, an obviously undesirable condition.

Liftoff and blowoff can be explained by the countervailing effects of decreased heat and radical loss to the burner tube and increased dilution with ambient fluid, which occur as the flow velocity is increased. Consider a flame that is stabilized quite close to the burner rim. The local flow velocity at the stabilization location is small as a result of the boundary layer that develops in the tube. Inside the tube, the velocity at the wall is zero. Because of the close proximity of the flame to the cold wall, both heat and reactive species diffuse to the wall, causing the local laminar flame speed at the stabilization point also to be small. With the flame speed and flow velocities equal and of relatively small magnitude, the flame edge lies close to the burner tube. When

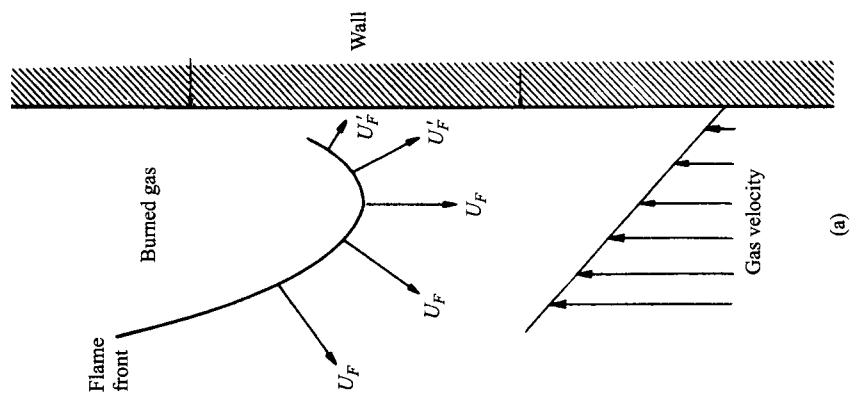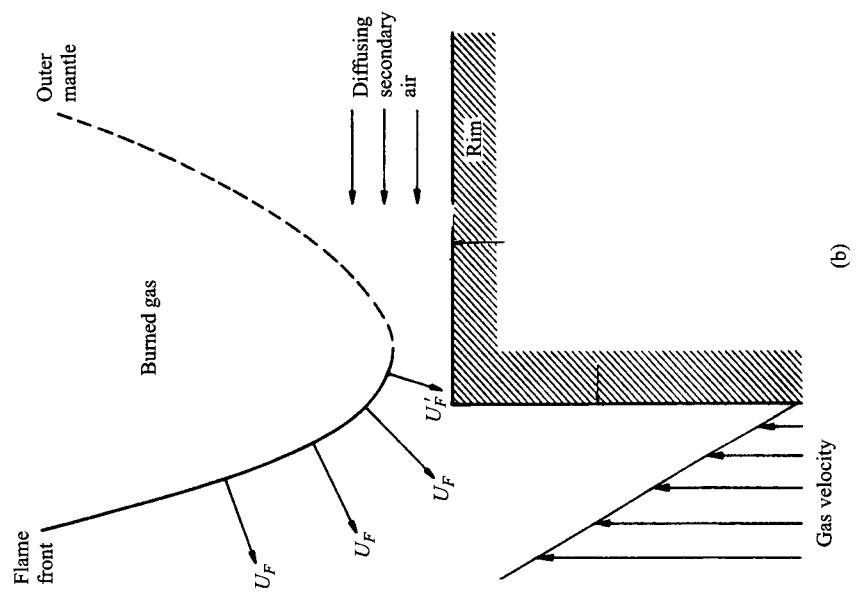

**Figure 8.22** Velocity vectors showing flow velocities and local flame velocity for (a) flashback and (b) lift-off.  
SOURCE: Reprinted with permission from Ref. [33], © 1955, American Chemical Society.

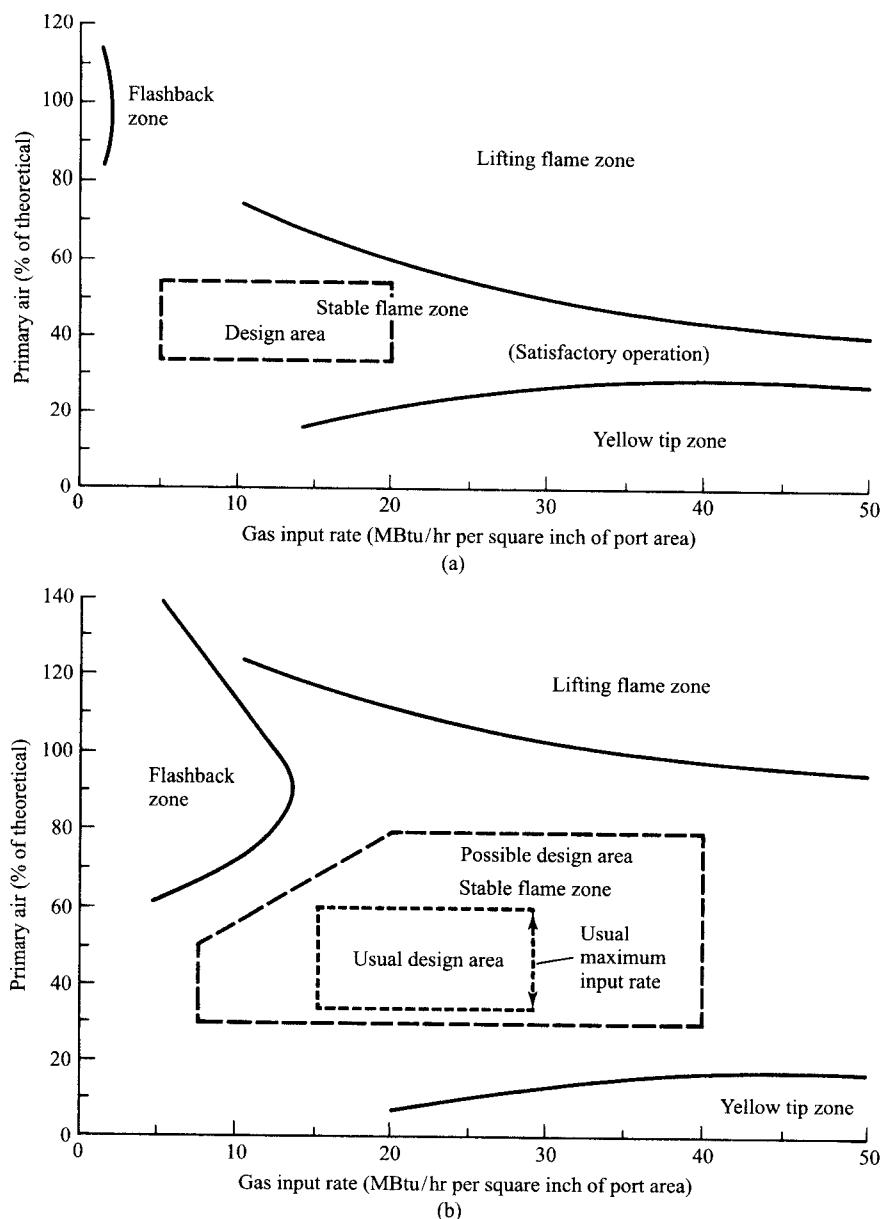

**Figure 8.23** Stability diagrams for flashback, liftoff, and yellow-tipping for (a) natural gas and (b) manufactured gas for a burner with a single row of 2.7-mm-diameter ports with 6.35-mm spacing. Yellow-tipping indicates soot formation within the flame.

SOURCE: From Ref. [32]. Reprinted with permission of Industrial Press.

the flow velocity is increased, the flame anchor point moves downstream; however,  $S_L$  increases since the heat/radical losses are less because the flame is now not as close to the cold wall. This increase in the burning velocity results in only a small downstream adjustment; and, hence, the flame remains attached. With yet further increases in flow velocity, another effect becomes important—dilution of the mixture with ambient fluid as a result of diffusion. Since dilution tends to offset the effects of less heat loss, the flame lifts, as shown in Fig. 8.22b. With further increases in flow velocity, a point is reached at which there is no location across the flow at which the local flame speed matches the flow velocity and the flame blows off the tube.

Figure 8.23 shows how the region of lift-free operation varies as function of stoichiometry (percent primary air) and flow velocity (gas input rate per unit port area). Here we see that the natural gas flame is more prone to lifting than the manufactured gas flame. Again, the high flame speed of the hydrogen in the manufactured gas explains the greater stability of this fuel. For more detailed information on laminar flame stability, the reader is referred to Refs. [3] and [21].

---

## SUMMARY

In this chapter, we considered the properties of laminar flames: their propagation velocity and thickness, quenching distances, flammability limits, and minimum ignition energies. Simplified theories were presented to illuminate the underlying physics and chemistry of these flame properties. We used the results of one such analysis to explore the pressure and temperature dependencies of flame speed and flame thickness, drawing from our conclusion that  $S_L \propto (\alpha \dot{m}_F''' / \rho_u)^{1/2}$ , and finding that  $S_L$  increases rapidly with temperature and has a weak inverse dependence on pressure. We saw that maximum laminar flame speeds for hydrocarbons typically occur in slightly rich mixtures, as do peak adiabatic flame temperatures. Correlations of laminar flame speeds for several fuels were presented. These correlations are useful for estimating flame properties in practical devices, such as engines, and you should be familiar with their use. Simple criteria for flame quenching and ignition were presented and used to develop simplistic models of these phenomena. Our analyses showed that the quenching distance is directly proportional to the thermal diffusivity and inversely proportional to the flame speed. We defined the upper and lower flammability limits and presented data for several fuels. In an analysis of the ignition process, the ideas of a critical radius and minimum energy input required to produce a self-propagating flame were developed. We saw that the minimum ignition energy exhibits a strong inverse pressure dependence, which has strong implications for engine applications where reliable ignition must be assured over a wide range of pressures. The chapter concluded with a discussion of the stabilization of laminar flames, i.e., their flashback and liftoff behavior—topics of great practical importance.

---

**NOMENCLATURE**

$A$	Area ( $\text{m}^2$ )
$b$	Dimensionless parameter defined in Eqn. 8.37
$B_M, B_2$	Parameters defined in Table 8.3
$c_p$	Specific heat ( $\text{J}/\text{kg}\cdot\text{K}$ )
$d$	Quenching distance (m)
$D_{ij}$	Multicomponent diffusion coefficient ( $\text{m}^2/\text{s}$ )
$D_i^T$	Thermal diffusion coefficient ( $\text{kg}/\text{m}\cdot\text{s}$ )
$\mathcal{D}_{ij}$	Binary diffusion coefficient ( $\text{m}^2/\text{s}$ )
$E_A$	Activation energy ( $\text{J}/\text{kmol}$ )
$E_{\text{ign}}$	Minimum ignition energy (J)
$h$	Enthalpy ( $\text{J}/\text{kg}$ )
$k$	Thermal conductivity ( $\text{W}/\text{m}\cdot\text{K}$ )
$L$	Slot width (m)
$Le$	Lewis number, $\alpha/\mathcal{D}$
$m$	Mass (kg)
$\dot{m}$	Mass flowrate ( $\text{kg}/\text{s}$ )
$\dot{m}''$	Mass flux ( $\text{kg}/\text{s}\cdot\text{m}^2$ )
$\dot{m}'''$	Volumetric mass production rate ( $\text{kg}/\text{s}\cdot\text{m}^3$ )
$MW$	Molecular weight ( $\text{kg}/\text{kmol}$ )
$Nu$	Nusselt number
$P$	Pressure (Pa)
$\dot{Q}$	Heat-transfer rate (W)
$\dot{Q}'''$	Volumetric energy generation rate ( $\text{W}/\text{m}^3$ )
$r$	Radial coordinate (m)
$R$	Radius (m) or specific gas constant ( $\text{J}/\text{kg}\cdot\text{K}$ )
$R_u$	Universal gas constant ( $\text{J}/\text{kmol}\cdot\text{K}$ )
$Re_d$	Reynolds number
$S_L$	Laminar flame speed (m/s)
$T$	Temperature (K)
$v$	Velocity (m/s)
$x$	Distance (m)
$Y$	Mass fraction (kg/kg)

**Greek Symbols**

$\alpha$	Angle (rad) or thermal diffusivity ( $\text{m}^2/\text{s}$ )
$\beta$	Pressure exponent, Eqn. 8.33
$\gamma$	Temperature exponent, Eqn. 8.33
$\delta$	Laminar flame thickness (m)
$\Delta h_c$	Heat of combustion (J/kg)
$\nu$	Mass oxidizer-to-fuel ratio (kg/kg)
$\rho$	Density ( $\text{kg}/\text{m}^3$ )
$\Phi$	Equivalence ratio
$\Phi_M$	Parameter defined in Table 8.3
$\dot{\omega}$	Species production rate ( $\text{kmol}/\text{m}^3\cdot\text{s}$ )

***Subscripts***

<i>ad</i>	Adiabatic
<i>b</i>	Burned gas
cond	Conduction
crit	Critical
dil	Diluent
<i>F</i>	Fuel
<i>i</i>	<i>i</i> th species
max	Maximum
mix	Mixture
<i>Ox</i>	Oxidizer
<i>Pr</i>	Product
ref	Reference state
<i>u</i>	Unburned gas

***Other Notation***

$\overline{(\quad)}$	Average over reaction zone
[ <i>X</i> ]	Molar concentration of species <i>X</i> (kmol/m <sup>3</sup> )

---

**REFERENCES**

1. Friedman, R., and Burke, E., "Measurement of Temperature Distribution in a Low-Pressure Flat Flame," *Journal of Chemical Physics*, 22: 824–830 (1954).
2. Fristrom, R. M., *Flame Structure and Processes*, Oxford University Press, New York, 1995.
3. Lewis, B., and Von Elbe, G., *Combustion, Flames and Explosions of Gases*, 3rd Ed., Academic Press, Orlando, FL, 1987.
4. Gordon, A. G., *The Spectroscopy of Flames*, 2nd Ed., Halsted Press, New York, 1974.
5. Gordon, A. G., and Wolfhard, H. G., *Flames: Their Structure, Radiation and Temperature*, 4th Ed., Halsted Press, New York, 1979.
6. Powling, J., "A New Burner Method for the Determination of Low Burning Velocities and Limits of Inflammability," *Fuel*, 28: 25–28 (1949).
7. Botha, J. P., and Spalding, D. B., "The Laminar Flame Speed of Propane–Air Mixtures with Heat Extraction from the Flame," *Proceedings of the Royal Society of London Series A*, 225: 71–96 (1954).
8. Kuo, K. K., *Principles of Combustion*, John Wiley & Sons, New York, 1986.
9. Mallard, E., and Le Chatelier, H. L., *Annals of Mines*, 4: 379–568 (1883).
10. Spalding, D. B., *Combustion and Mass Transfer*, Pergamon, New York, 1979.

11. Metghalchi, M., and Keck, J. C., "Burning Velocities of Mixtures of Air with Methanol, Isooctane, and Indolene at High Pressures and Temperatures," *Combustion and Flame*, 48: 191–210 (1982).
12. Kee, R. J., and Miller, J. A., "A Structured Approach to the Computational Modeling of Chemical Kinetics and Molecular Transport in Flowing Systems," Sandia National Laboratories Report SAND86-8841, February 1991.
13. Kee, R. J., Rupley, F. M., and Miller, J. A., "Chemkin-II: A Fortran Chemical Kinetics Package for the Analysis of Gas-Phase Chemical Kinetics," Sandia National Laboratories Report SAND89-8009/UC-401, March 1991.
14. Kee, R. J., Dixon-Lewis, G., Warnatz, J., Coltrin, M. E., and Miller, J. A., "A Fortran Computer Code Package for the Evaluation of Gas-Phase Multicomponent Transport Properties," Sandia National Laboratories Report SAND86-8246/UC-401, December 1990.
15. Kee, R. J., Rupley, F. M., and Miller, J. A., "The Chemkin Thermodynamic Data Base," Sandia National Laboratories Report SAND87-8215B/UC-4, March 1991 (supersedes SAND87-8215).
16. Kee, R. J., Grcar, J. F., Smooke, M. D., and Miller, J. A., "A Fortran Program for Modeling Steady Laminar One-Dimensional Premixed Flames," Sandia National Laboratories Report SAND85-8240/UC-401, March 1991.
17. Warnatz, J., Maas, U., and Dibble, R. W., *Combustion*, Springer-Verlag, Berlin, 1996.
18. Bowman, C. T., Hanson, R. K., Davidson, D. F., Gardiner, W. C., Jr., Lissianski, V., Smith, G. P., Golden, D. M., Frenklach, M., Wang, H., and Goldenberg, M., *GRI-Mech 2.11 Home Page*, access via [http://www.me.berkeley.edu/gri\\_mech/](http://www.me.berkeley.edu/gri_mech/), 1995.
19. Andrews, G. E., and Bradley, D., "The Burning Velocity of Methane–Air Mixtures," *Combustion and Flame*, 19: 275–288 (1972).
20. Law, C. K., "A Compilation of Experimental Data on Laminar Burning Velocities," in *Reduced Kinetic Mechanisms for Applications in Combustion Systems* (N. Peters and B. Rogg, eds.), Springer-Verlag, New York, pp. 15–26, 1993.
21. Barnett, H. C., and Hibbard, R. R. (eds.), "Basic Considerations in the Combustion of Hydrocarbon Fuels with Air," NACA Report 1300, 1959.
22. Williams, F. A., *Combustion Theory*, 2nd Ed., Addison-Wesley, Redwood City, CA, 1985.
23. Glassman, I., *Combustion*, 3rd Ed., Academic Press, San Diego, CA, 1996.
24. Strehlow, R. A., *Fundamentals of Combustion*, Krieger, Huntington, NY, 1979.
25. Chomiak, J., *Combustion: A Study in Theory, Fact and Application*, Gordon & Breach, New York, 1990.
26. Frendi, A., and Sibulkin, M., "Dependence of Minimum Ignition Energy on Ignition Parameters," *Combustion Science and Technology*, 73: 395–413 (1990).

27. Lovachev, L. A., *et al.*, "Flammability Limits: An Invited Review," *Combustion and Flame*, 20: 259–289 (1973).
28. Friedman, R., "The Quenching of Laminar Oxyhydrogen Flames by Solid Surfaces," *Third Symposium on Combustion and Flame and Explosion Phenomena*, Williams & Wilkins, Baltimore, p. 110, 1949.
29. Blanc, M. V., Guest, P. G., von Elbe, G., and Lewis, B., "Ignition of Explosive Gas Mixture by Electric Sparks. I. Minimum Ignition Energies and Quenching Distances of Mixtures of Methane, Oxygen, and Inert Gases," *Journal of Chemical Physics*, 15(11): 798–802 (1947).
30. Fenn, J. B., "Lean Flammability Limit and Minimum Spark Ignition Energy," *Industrial & Engineering Chemistry*, 43(12): 2865–2868 (1951).
31. Law, C. K., and Egolfopoulos, F. N., "A Unified Chain-Thermal Theory of Fundamental Flammability Limits," *Twenty-Fourth Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, p. 137, 1992.
32. Weber, E. J., and Vandaveer, F. E., "Gas Burner Design," *Gas Engineers Handbook*, Industrial Press, New York, pp. 12/193–12/210, 1965.
33. Dugger, G. L., "Flame Stability of Preheated Propane–Air Mixtures," *Industrial & Engineering Chemistry*, 47(1): 109–114, 1955.
34. Wu, C. K., and Law, C. K., "On the Determination of Laminar Flame Speeds from Stretched Flames," *Twentieth Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, p. 1941, 1984.

---

## REVIEW QUESTIONS

1. Make a list of all the bold-faced words in Chapter 8 and discuss each.
2. Distinguish between deflagration and detonation.
3. Discuss the structure/appearance of a Bunsen-burner flame where the air–fuel mixture in the tube is rich.
4. What is the physical significance of the Lewis number? What role does the  $Le = 1$  assumption play in the analysis of laminar flame propagation?
5. In the context of laminar flame theory, what is an eigenvalue? Discuss.
6. Discuss the origins of the pressure and temperature dependencies of the laminar flame speed. *Hint:* Refer to the global hydrocarbon oxidation mechanism in Chapter 5.
7. What are the basic criteria for ignition and quenching?

---

## PROBLEMS

- 8.1** Consider the outward propagation of a spherical laminar flame into an infinite medium of unburned gas. Assuming that  $S_L$ ,  $T_u$ , and  $T_b$  are all constants, determine an expression for the radial velocity of the flame front for a fixed coordinate system with its origin at the center of the sphere. *Hint:* Use mass conservation for an integral control volume.
- 8.2** Prove that, for the simplified thermodynamics employed in the Chapter 8 flame speed theory,  $\Delta h_c = (v + 1)c_p(T_b - T_u)$ .
- 8.3** Using the simplified theory, estimate the laminar flame speed of  $\text{CH}_4$  for  $\Phi = 1$  and  $T_u = 300 \text{ K}$ . Use the global, single-step kinetics given in Chapter 5. Compare your estimate with experimental results. Also, compare your results for  $\text{CH}_4$  with those for  $\text{C}_3\text{H}_8$  from Example 8.2.
- 8.4** Consider a one-dimensional, adiabatic, laminar, flat flame stabilized on a burner such as in Fig. 8.5a. The fuel is propane and the mixture ratio is stoichiometric. Determine the velocity of the burned gases for operation at atmospheric pressure and an unburned gas temperature of 300 K.
- 8.5** Consider a premixed flame stabilized above a circular tube. For the flame to be conical (constant angle  $\alpha$ ), what is the shape of the velocity profile at the tube exit? Explain.
- 8.6** A premixed propane-air mixture emerges from a round nozzle with a uniform velocity of 75 cm/s. The laminar flame speed of the propane-air mixture is 35 cm/s. A flame is lit at the nozzle exit. What is the cone angle of this flame? What principle determines the cone angle?
- 8.7\*** Derive the theoretical flame shape for a premixed laminar flame stabilized over a circular tube, assuming the unburned mixture velocity profile is parabolic:  $v(r) = v_o(1 - r^2/R^2)$ , where  $v_o$  is the centerline velocity and  $R$  is the burner-tube radius. Ignore the region close to the tube wall where  $S_L$  is greater than  $v(r)$ . Discuss your results.
- 8.8** Derive the pressure and temperature dependencies of the laminar flame speed, as shown in Eqn. 8.29, starting with Eqn. 8.20 and utilizing Eqn. 8.27 as given.
- 8.9\*** Using the correlations of Metghalchi and Keck [11], calculate laminar flame speeds for the stoichiometric mixtures of the following fuels for  $P = 1 \text{ atm}$  and  $T_u = 400 \text{ K}$ : propane; isoctane; and indolene (RMFD-303), a gasoline reference fuel.
- 8.10\*** Use Eqn. 8.33 to estimate the laminar flame speed of a laminar flamelet in a spark-ignition internal combustion engine for conditions shortly after the spark is fired and a flame is established. The conditions are as follows:

Fuel: indolene (gasoline),  $\Phi = 1.0$ ,

$P = 13.4 \text{ atm}$ ,  $T = 560 \text{ K}$ .

| \*Indicates required or optional use of computer.

- 8.11\*** Repeat problem 8.10 for an equivalence ratio of  $\Phi = 0.80$  with all other conditions the same. Compare your results with those of problem 8.10 and discuss the practical implications of your comparison.
- 8.12\*** Use Eqn. 8.33 to calculate the laminar flame speed of propane for the following sets of conditions:

	Set 1	Set 2	Set 3	Set 4
P (atm)	1	1	1	10
$T_u$ (K)	350	700	350	350
$\Phi$	0.9	0.9	1.2	0.9

Using your results, discuss the effects of  $T_u$ ,  $P$ , and  $\Phi$  on  $S_L$ .

- 8.13** Using a combination of correlations and simplified theory, estimate propane-air flame thicknesses for  $P = 1$ , 10, and 100 atm for  $\Phi = 1$  and  $T_u = 300$  K. What are the implications of your calculations for the design of explosion-proof housings for electrical devices?
- 8.14** Estimate values of the parameter  $b$  employed in quenching theory for methane-air mixtures over the range of  $0.6 \leq \Phi \leq 1.2$ . Plot your results and discuss.
- 8.15** Determine the critical radius for ignition of a stoichiometric propane-air mixture at 1 atm.
- 8.16** How many times more ignition energy is required to achieve ignition of a fuel-air mixture at sea level with  $T = 298$  K than at altitude of 6000 m (19,685 ft) where  $P = 47,166$  Pa and  $T = 248$  K? Discuss the implications of your calculations for high-altitude relight in aircraft gas-turbine engines.
- 8.17\*** Use the CHEMKIN library codes to explore the structure of a freely propagating, laminar, premixed H<sub>2</sub>-air flame for a reactants temperature of 298 K,  $P = 1$  atm, and  $\Phi = 1.0$ .
- Plot the temperature as a function of axial distance.
  - Plot the mole fractions of the following species as functions of the axial distance: O, OH, O<sub>2</sub>, H, H<sub>2</sub>, HO<sub>2</sub>, H<sub>2</sub>O<sub>2</sub>, H<sub>2</sub>O, and NO. Design and group your plots to be usefully communicative.
  - Plot the molar production rates  $\dot{\omega}_i$  for the following species as functions of the axial distance: OH, O<sub>2</sub>, H<sub>2</sub>, H<sub>2</sub>O, and NO.
  - Discuss the results from parts A-D.
- 8.18\*** Use the CHEMKIN library codes to explore the effects of equivalence ratio on the flame speed of freely propagating, laminar, premixed H<sub>2</sub>-air flames. The reactants temperature is 298 K and  $P = 1$  atm. Consider the range of equivalence ratios from 0.7 to 3.0. Compare your results with the measurements presented in Fig. 8 of Ref. [34].

# Laminar Diffusion Flames

---

## OVERVIEW

In this chapter, we begin our study of laminar diffusion flames by focusing on burning jets of fuel. Laminar jet flames have been the subject of much fundamental research and, more recently, have been used to develop an understanding of how soot is formed in diffusion burning, e.g., Refs. [1–3]. A familiar example of a nonpremixed jet flame is the Bunsen-burner outer-cone flame, which was briefly mentioned in Chapter 8. Many residential gas appliances, e.g., cooking ranges and ovens, employ laminar jet flames. In these applications, the fuel stream is usually partially premixed with air, which is essential to provide nonsooting operation. Although many analytical [4–8] and numerical [9–13] analyses of laminar jet flames have been performed, current design practices rely heavily on the art and craft of experienced burner designers [14, 15]; however, recent concerns with indoor air quality and pollutant emissions have resulted in the use of more sophisticated design methods. Of particular concern are the emissions of nitrogen dioxide ( $\text{NO}_2$ ) and carbon monoxide (CO), both of which are toxic gases.

A primary concern in the design of any system utilizing laminar jet flames is flame geometry, with short flames frequently being desired. Also of interest is the effect of fuel type. For example, some appliances may be designed to operate on natural gas (primarily methane) or propane. In the following sections, we will develop analyses that allow us to see what parameters control flame size and shape. We will also examine the factors controlling soot from laminar jet flames. The chapter concludes with an analysis and discussion of counterflow flames.

## NONREACTING CONSTANT-DENSITY LAMINAR JET


### Physical Description

Before discussing jet flames proper, let us consider the simpler case of a non-reacting laminar jet of fluid (fuel) flowing into an infinite reservoir of quiescent fluid (oxidizer). This simpler case allows us to develop an understanding of the basic flow and diffusional processes that occur in laminar jets uncomplicated by the effects of chemical reaction.

Figure 9.1 illustrates the essential features of a fuel jet issuing from a nozzle of radius  $R$  into still air. For simplicity, we assume that the velocity profile is uniform at the tube exit. Close to the nozzle, there exists a region called the **potential core** of the jet. In the potential core, the effects of viscous shear and diffusion have yet to be felt; hence, both the velocity and nozzle-fluid mass fraction remain unchanged from their nozzle-exit values and are uniform in this region. This situation is quite similar to the developing flow in a pipe, except that, in the pipe, conservation of mass requires the uniform core flow to accelerate.

In the region between the potential core and the jet edge, both the velocity and fuel concentration (mass fraction) decrease monotonically to zero at the edge of the jet. Beyond the potential core ( $x > x_c$ ), the effects of viscous shear and mass diffusion are active across the whole width of the jet.

Throughout the entire flowfield, the initial jet momentum is conserved. As the jet issues into the surrounding air, some of its momentum is transferred to

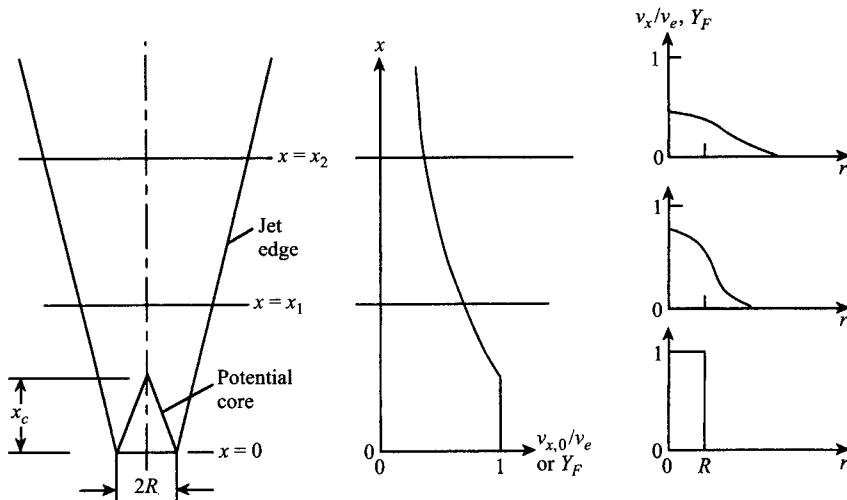

**Figure 9.1** Nonreacting, laminar fuel jet issuing into an infinite reservoir of quiescent air.

the air. Thus, the velocity of the jet decreases, while greater and greater quantities of air are **entrained** into the jet as it proceeds downstream. This idea can be expressed mathematically using an integral form of momentum conservation:

$$\text{Momentum flow of the jet at any } x, J = \text{Momentum flow issuing from the nozzle, } J_e$$

or

$$2\pi \int_0^\infty \rho(r, x) v_x^2(r, x) r dr = \rho_e v_e^2 \pi R^2, \quad (9.1)$$

where  $\rho_e$  and  $v_e$  are the density and velocity of the fuel at the nozzle exit, respectively. The central graph of Fig. 9.1 illustrates the decay of the centerline velocity with distance beyond the potential core, while the right-hand graphs of Fig. 9.1 show the radial velocity decay from the maximum, which occurs at the centerline, to zero at the edge of the jet.

The processes that control the velocity field, i.e., the convection and diffusion of momentum, are similar to the processes that control the fuel concentration field, i.e., the convection and diffusion of mass. Thus, we expect that the distribution of the fuel mass fraction,  $Y_F(r, x)$ , should be similar to the dimensionless velocity distribution,  $v_x(r, x)/v_e$ , as indicated in Fig. 9.1. Because of the high concentration of fuel in the center of the jet, fuel molecules diffuse radially outward in accordance with Fick's law. The effect of moving downstream is to increase the time available for diffusion to take place; hence, the width of the region containing fuel molecules grows with axial distance,  $x$ , and the centerline fuel concentration decays. Similar to the initial jet momentum, the mass of the fluid issuing from the nozzle is conserved, i.e.,

$$2\pi \int_0^\infty \rho(r, x) v_x(r, x) Y_F(r, x) r dr = \rho_e v_e \pi R^2 Y_{F,e}, \quad (9.2)$$

where  $Y_{F,e} = 1$ . The problem now before us is the determination of the detailed velocity and fuel mass-fraction fields.

## Assumptions

In order to provide a very simple analysis of a nonreacting laminar jet, we employ the following assumptions:

1. The molecular weights of the jet and reservoir fluids are equal. This assumption, combined with ideal-gas behavior and the further assumptions of constant pressure and temperature, provide a uniform fluid density throughout the flowfield.
2. Species molecular transport is by simple binary diffusion governed by Fick's law.

3. Momentum and species diffusivities are constant and equal; thus, the **Schmidt number**,  $Sc \equiv \nu/\mathcal{D}$ , which expresses the ratio of these two quantities, is unity.
4. Only radial diffusion of momentum and species is important; axial diffusion is neglected. This implies that our solution only applies some distance downstream of the nozzle exit, since near the exit, axial diffusion is quite important.

## Conservation Laws

The basic governing equations expressing conservation of mass, momentum, and species appropriate for our purposes are the so-called **boundary-layer equations**, which are obtained by simplifying the more general equations of motion and species conservation, as discussed in Chapter 7. The pertinent equations (Eqns. 7.7, 7.48, and 7.20) are simplified for our assumptions of constant density, viscosity, and mass diffusivity to yield the following.

### Mass Conservation

$$\frac{\partial v_x}{\partial x} + \frac{1}{r} \frac{\partial(v_r r)}{\partial r} = 0. \quad (9.3)$$

### Axial Momentum Conservation

$$v_x \frac{\partial v_x}{\partial x} + v_r \frac{\partial v_x}{\partial r} = \nu \frac{1}{r} \frac{\partial}{\partial r} \left( r \frac{\partial v_x}{\partial r} \right). \quad (9.4)$$

**Species Conservation** For the jet fluid, i.e., the fuel,

$$v_x \frac{\partial Y_F}{\partial x} + v_r \frac{\partial Y_F}{\partial r} = \mathcal{D} \frac{1}{r} \frac{\partial}{\partial r} \left( r \frac{\partial Y_F}{\partial r} \right), \quad (9.5)$$

and since there are only two species, fuel and oxidizer, the mass fractions of the two must sum to unity, i.e.,

$$Y_{Ox} = 1 - Y_F. \quad (9.6)$$

## Boundary Conditions

In order to solve the above equations for the unknown functions,  $v_x(r, x)$ ,  $v_r(r, x)$ , and  $Y_F(r, x)$ , requires three boundary conditions each for  $v_x$  and  $Y_F$  (two as functions of  $x$  at specified  $r$ , and one as a function of  $r$  at specified  $x$ ) and one boundary condition for  $v_r$  (as a function of  $x$  at specified  $r$ ). These are as follows:

Along the jet centerline ( $r = 0$ ),

$$v_r(0, x) = 0, \quad (9.7a)$$

$$\frac{\partial v_x}{\partial r}(0, x) = 0, \quad (9.7b)$$

$$\frac{\partial Y_F}{\partial r}(0, x) = 0. \quad (9.7c)$$

where the first condition (Eqn. 9.7a) implies that there is no source or sink of fluid along the jet axis, while the second two (Eqns. 9.7b and c) result from symmetry. At large radii ( $r \rightarrow \infty$ ), the fluid is stagnant and no fuel is present, i.e.,

$$v_x(\infty, x) = 0 \quad (9.7d)$$

$$Y_F(\infty, x) = 0. \quad (9.7e)$$

At the jet exit ( $x = 0$ ), we assume the axial velocity and fuel mass fraction are uniform at the mouth of the nozzle ( $r \leq R$ ) and zero elsewhere:

$$\begin{aligned} v_x(r \leq R, 0) &= v_e, \\ v_x(r > R, 0) &= 0, \end{aligned} \quad (9.7f)$$

$$\begin{aligned} Y_F(r \leq R, 0) &= Y_{F,e} = 1, \\ Y_F(r > R, 0) &= 0. \end{aligned} \quad (9.7g)$$

## Solution

The velocity field can be obtained by assuming the profiles to be **similar**. The idea of similarity is that the intrinsic shape of the velocity profiles is the same everywhere in the flowfield. For the present problem, this implies that the radial distribution of  $v_x(r, x)$ , when normalized by the local centerline velocity  $v_x(0, x)$ , is a universal function that depends only on the **similarity variable**,  $r/x$ . The solution for the axial and radial velocities is [16]

$$v_x = \frac{3}{8\pi} \frac{J_e}{\mu x} \left[ 1 + \frac{\xi^2}{4} \right]^{-2} \quad (9.8)$$

$$v_r = \left( \frac{3J_e}{16\pi\rho_e} \right)^{1/2} \frac{1}{x} \frac{\xi - \frac{\xi^3}{4}}{\left( 1 + \frac{\xi^2}{4} \right)^2}, \quad (9.9)$$

where  $J_e$  is the jet initial momentum flow,

$$J_e = \rho_e v_e^2 \pi R^2, \quad (9.10)$$

and  $\xi$  contains the similarity variable  $r/x$ ,

$$\xi = \left( \frac{3\rho_e J_e}{16\pi} \right)^{1/2} \frac{1}{\mu} \frac{r}{x}. \quad (9.11)$$

The axial velocity distribution in dimensionless form can be obtained by substituting Eqn. 9.10 into Eqn. 9.8 and rearranging:

$$v_x/v_e = 0.375(\rho_e v_e R/\mu)(x/R)^{-1}[1 + \xi^2/4]^{-2}, \quad (9.12)$$

and the dimensionless centerline velocity decay is obtained by setting  $r = 0$  ( $\xi = 0$ ):

$$v_{x,0}/v_e = 0.375(\rho_e v_e R/\mu)(x/R)^{-1}. \quad (9.13)$$

Equation 9.12 shows that the velocity decays inversely with axial distance and is directly proportional to the jet Reynolds number ( $Re_j \equiv \rho_e v_e R/\mu$ ). Furthermore, Eqn. 9.13 reminds us that the solution is not valid near the nozzle, since  $v_{x,0}/v_e$  should not exceed unity. The centerline velocity decay pattern predicted by Eqn. 9.13 is shown in Fig. 9.2. Here we see that the decay is more rapid with the lower- $Re_j$  jets. This behavior occurs because as the Reynolds number is decreased, the relative importance of the initial jet

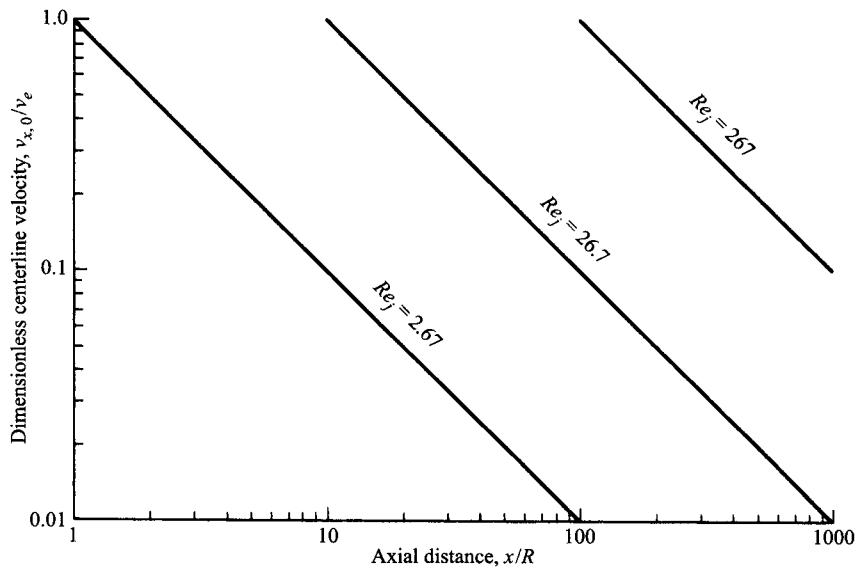


Figure 9.2 Centerline velocity decay for laminar jets.

momentum becomes smaller in comparison with the viscous shearing action that slows the jet.

Other parameters frequently used to characterize jets are the **spreading rate** and **spreading angle,  $\alpha$** . To define these parameters, we need to introduce the idea of the **jet half-width,  $r_{1/2}$** . The jet half-width is simply the radial location where the jet velocity has decayed to one half of its centerline value (Fig. 9.3). An expression for  $r_{1/2}$  can be derived by setting  $v_x/v_{x,0}$ , obtained by taking the ratio of Eqns. 9.12 and 9.13, to be one half and solving for  $r (= r_{1/2})$ . The ratio of the jet half-width to the axial distance  $x$  is termed the jet spreading rate, and the spreading angle is the angle whose tangent is the spreading rate. Thus,


$$r_{1/2}/x = 2.97 \left( \frac{\mu}{\rho v_e R} \right) = 2.97 Re_j^{-1} \quad (9.14)$$

and

$$\alpha \equiv \tan^{-1}(r_{1/2}/x). \quad (9.15)$$

Equations 9.14 and 9.15 reveal that high- $Re_j$  jets are narrow, while low- $Re_j$  jets are wide. This result is consistent with the Reynolds number dependence of the velocity decay discussed above.

Let us now examine the solution for the concentration field. Referring to the governing equations for momentum conservation (Eqn. 9.4) and species conservation (Eqn. 9.5), we see that the fuel mass fraction,  $Y_F$ , plays the same mathematical role as the dimensionless axial velocity,  $v_x/v_e$ , if  $\nu$  and  $D$  are equal. Since the equality of  $\nu$  and  $D$  was one of our original assumptions,  $Sc = \nu/D = 1$ , the functional form of the solution for  $Y_F$  is identical to that for  $v_x/v_e$ , i.e.,

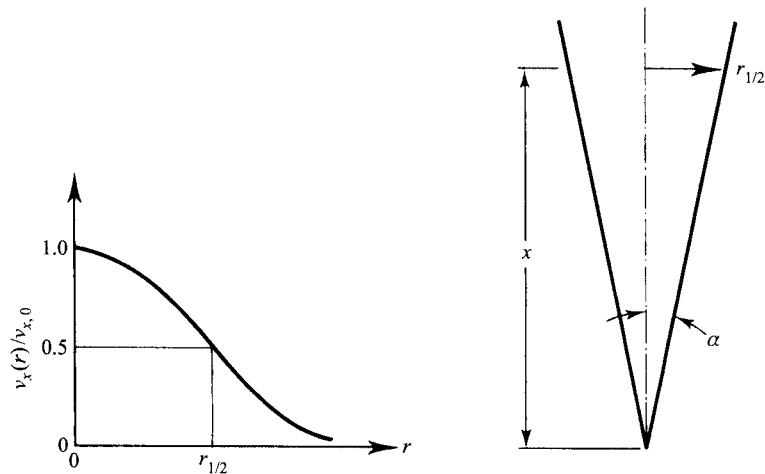

**Figure 9.3** Definitions of jet half-width,  $r_{1/2}$ , and jet spreading angle,  $\alpha$ .

$$Y_F = \frac{3}{8\pi} \frac{Q_F}{Dx} [1 + \xi^2/4]^{-2}, \quad (9.16)$$

where  $Q_F$  is the volumetric flowrate of fuel from the nozzle ( $Q_F = v_e \pi R^2$ ).

By applying  $Sc = 1(v = D)$  to Eqn. 9.16, we can identify again the jet Reynolds number as a controlling parameter, i.e.,

$$Y_F = 0.375 Re_j(x/R)^{-1} [1 + \xi^2/4]^{-2}, \quad (9.17)$$

and, for the centerline values of the mass fraction,

$$Y_{F,0} = 0.375 Re_j(x/R)^{-1}. \quad (9.18)$$

Again, we see that the solutions above can only be applied far from the nozzle, that is, the dimensionless distance downstream where the solution is valid must exceed the jet Reynolds number, i.e.,

$$(x/R) \gtrsim 0.375 Re_j. \quad (9.19)$$

Note that Fig. 9.2 also represents the decay of the centerline mass fractions, since Eqns. 9.18 and 9.13 are identical.

### Example 9.1

A jet of ethylene ( $C_2H_4$ ) exits a 10-mm-diameter nozzle into still air at 300 K and 1 atm. Compare the spreading angles and axial locations where the jet centerline mass fraction drops to the stoichiometric value for initial jet velocities of 10 cm/s and 1.0 cm/s. The viscosity of ethylene at 300 K is  $102.3 \cdot 10^{-7}$  N·s/m<sup>2</sup>.

#### Solution

Since the molecular weights of  $C_2H_4$  and air are nearly the same ( $MW = 28.05$  and 28.85, respectively), we assume that the constant-density jet solutions (Eqns. 9.8–9.15) can be applied to this problem. Designating the 10 cm/s case as case I and the 1 cm/s as case II, we determine the jet Reynolds numbers to be

$$Re_{j,I} = \frac{\rho v_{e,I} R}{\mu} = \frac{1.14(0.10)0.005}{102.3 \cdot 10^{-7}} = 55.7$$

and

$$Re_{j,II} = \frac{\rho v_{e,II} R}{\mu} = \frac{1.14(0.01)0.005}{102.3 \cdot 10^{-7}} = 5.57,$$

where the density has been estimated from the ideal-gas law, i.e.,

$$\rho = \frac{P}{(R_u/MW)T} = \frac{101,325}{(8315/28.05)300} = 1.14 \text{ kg/m}^3.$$

A. The spreading angle is determined by combining Eqns. 9.14 and 9.15 to yield

$$\alpha = \tan^{-1}[2.97/Re_j]$$

where

$$\alpha_I = \tan^{-1}[2.97/55.7]$$

$$\boxed{\alpha_I = 3.05^\circ}$$

and

$$\alpha_{II} = \tan^{-1}[2.97/5.57]$$

$$\boxed{\alpha_{II} = 28.1^\circ}$$

**Comment**

From these calculations, we see that the low-velocity jet is much wider, with a spreading angle about nine times larger than for the high-velocity jet.

B. The stoichiometric fuel mass fraction can be calculated as

$$Y_{F,\text{stoic}} = \frac{m_F}{m_A + m_F} = \frac{1}{(A/F)_{\text{stoic}} + 1},$$

where

$$\begin{aligned} (A/F)_{\text{stoic}} &= (x + (y/4))4.76 \frac{MW_A}{MW_F} \\ &= (2 + (4/4))4.76 \frac{28.85}{28.05} = 14.7. \end{aligned}$$

Thus,

$$Y_{F,\text{stoic}} = \frac{1}{14.7 + 1} = 0.0637.$$

To find the axial location where the centerline fuel mass fraction takes on the stoichiometric value, we set  $Y_{F,0} = Y_{F,\text{stoic}}$  in Eqn. 9.18 and solve for  $x$ :

$$x = \left( \frac{0.375 Re_j}{Y_{F,\text{stoic}}} \right) R,$$

which, when evaluated for the two cases, becomes

$$\boxed{x_I = \left( \frac{0.375(55.7)0.005}{0.0637} \right) = 1.64 \text{ m}}$$

and

$$\boxed{x_{II} = \left( \frac{0.375(5.57)0.005}{0.0637} \right) = 0.164 \text{ m}}$$

**Comment**

We see that the fuel concentration of the low-velocity jet decays to the same value as the high-velocity jet in 1/10 the distance.

Using the case II ( $v_e = 1.0 \text{ cm/s}$ ,  $R = 5 \text{ mm}$ ) jet from Example 9.1 as the base case, determine what nozzle exit radius is required to maintain the same flowrate if the exit velocity is increased by a factor of ten to  $10 \text{ cm/s}$ . Also, determine the axial location for  $Y_{F,0} = Y_{F,\text{stoic}}$  for this condition and compare it with the base case.

**Example 9.2**

**Solution**

A. We can relate the velocities and exit radii to the flowrate as

$$Q = v_{e,1}A_1 = v_{e,2}A_2$$

$$Q = v_{e,1}\pi R_1^2 = v_{e,2}\pi R_2^2.$$

Thus,

$$R_2 = \left(\frac{v_{e,1}}{v_{e,2}}\right)^{1/2} R_1 = \left(\frac{1}{10}\right)^{1/2} 5 \text{ mm}$$

$R_2 = 1.58 \text{ mm}$

B. For the high-velocity, small-diameter jet, the Reynolds number is

$$Re_j = \frac{\rho v_{e,2} R}{\mu} = \frac{1.14(0.1)0.00158}{102.3 \cdot 10^{-7}} = 17.6,$$

and, from Eqn. 9.18,

$$x = \left(\frac{0.375 Re_j}{Y_{F,\text{stoic}}}\right) R = \frac{0.375(17.6)0.00158}{0.0637}$$

$x = 0.164 \text{ m}$

**Comment**

The distance calculated in part B is identical to the case II value from Example 9.1. Thus, we see that the spatial fuel mass-fraction distribution depends only on the initial volumetric flow rate for a given fuel ( $\mu/\rho$  constant).


---

## JET FLAME PHYSICAL DESCRIPTION

The burning laminar fuel jet has much in common with our previous discussion of the isothermal jet. Some essential features of the jet flame are illustrated in Fig. 9.4. As the fuel flows along the flame axis, it diffuses radially outward, while the oxidizer (e.g., air) diffuses radially inward. The flame surface is nominally defined to exist where the fuel and oxidizer meet in stoichiometric proportions, i.e.,

$$\text{Flame surface} \equiv \begin{matrix} \text{Locus of points where the} \\ \text{equivalence ratio, } \Phi, \text{ equals unity.} \end{matrix} \quad (9.20)$$

Note that, although the fuel and oxidizer are consumed at the flame, the equivalence ratio still has meaning since the products composition relates to a unique value of  $\Phi$ . The products formed at the flame surface diffuse radially both inward and outward. For an **overventilated** flame, where there is more

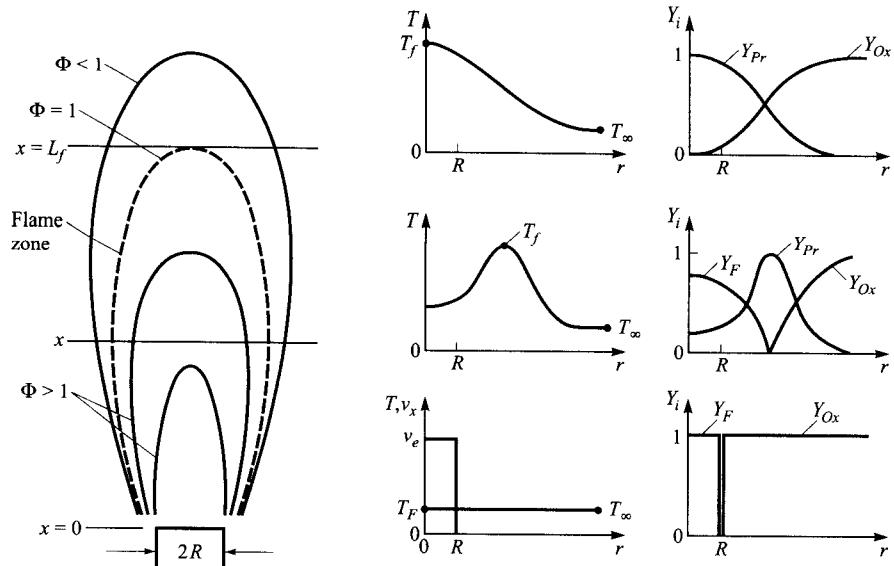

**Figure 9.4** Laminar diffusion flame structure.


than enough oxidizer in the surroundings to continuously burn the fuel, the flame length,  $L_f$ , is simply determined by the axial location where

$$\Phi(r = 0, x = L_f) = 1. \quad (9.21)$$

The region where chemical reactions occur is generally quite narrow. As seen in Fig. 9.4, the high-temperature reaction zone occurs in an annular region until the flame tip is reached. That the flame zone is an annulus can be demonstrated in a simple experiment where a metal screen is placed perpendicular to the axis of an unheated Bunsen-burner flame. In the flame zone, the screen becomes hot and glows, showing the annular structure.

In the upper regions of a vertical flame, there is a sufficient quantity of hot gases that buoyant forces become important. Buoyancy accelerates the flow and causes a narrowing of the flame, since conservation of mass requires streamlines to come closer together as the velocity increases. The narrowing of the flow increases the fuel concentration gradients,  $dY_F/dr$ , thus enhancing diffusion. The effects of these two phenomena on the length of flames issuing from circular nozzles tend to cancel [6, 7]; thus, simple theories that neglect buoyancy fortuitously are able to predict flame lengths reasonably well for the circular- (and square-) port geometry.

For hydrocarbon flames, soot is frequently present, giving the flame its typical orange or yellow appearance. Given sufficient time, soot is formed on the fuel side of the reaction zone and is consumed when it flows into an oxidizing region; for example, the flame tip. Figure 9.5 illustrates soot

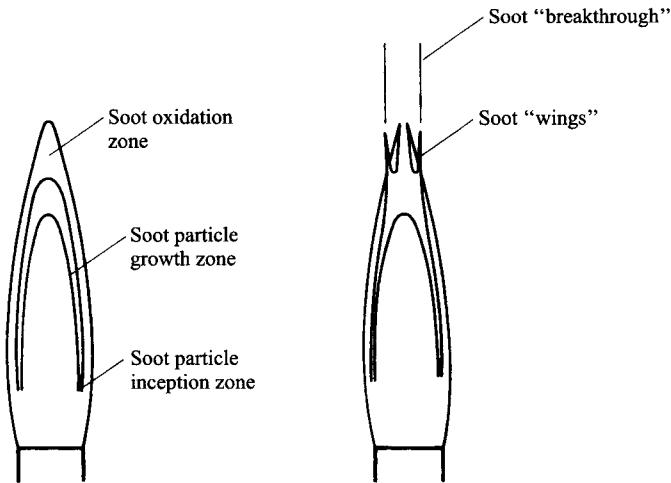


**Figure 9.5** Soot formation and destruction zones in laminar jet flames.

formation and destruction zones in a simple jet flame. Depending on the fuel type and flame residence times, not all of the soot that is formed may be oxidized on its journey through high-temperature oxidizing regions. In this case, soot “wings” may appear, with the soot breaking through the flame. This soot that breaks through is generally referred to as **smoke**. Figure 9.6 shows a photograph of an ethylene flame where a soot wing is apparent on the right-hand-side of the flame tip. We will discuss the formation and destruction of soot in greater detail in a later section of this chapter.

The last feature of laminar jet diffusion flames we wish to highlight is the relationship between flame length and initial conditions. For circular-port flames, the flame length does not depend on initial velocity or diameter but, rather, on the initial volumetric flowrate,  $Q_F$ . Since  $Q_F = v_e \pi R^2$ , various combinations of  $v_e$  and  $R$  can yield the same flame length. We can show that this is reasonable by appealing to our previous analysis of the nonreacting laminar jet (cf. Example 9.2). By ignoring the effects of heat released by reaction, Eqn. 9.16 provides a crude description of the flame boundaries when  $Y_F$  is set equal to  $Y_{F,\text{stoic}}$ . The flame length is then obtained when  $r$  equals zero, i.e.,

$$L_f \approx \frac{3}{8\pi} \frac{Q_F}{\mathcal{D} Y_{F,\text{stoic}}}. \quad (9.22)$$

Thus, we see that the flame length is indeed proportional to the volumetric flowrate; furthermore, we see that the flame length is inversely proportional to the stoichiometric fuel mass fraction. This implies that fuels that require less air for complete combustion produce shorter flames, as one might expect. In a subsequent section, we present better approximations that can be used in engineering calculations of flame lengths.

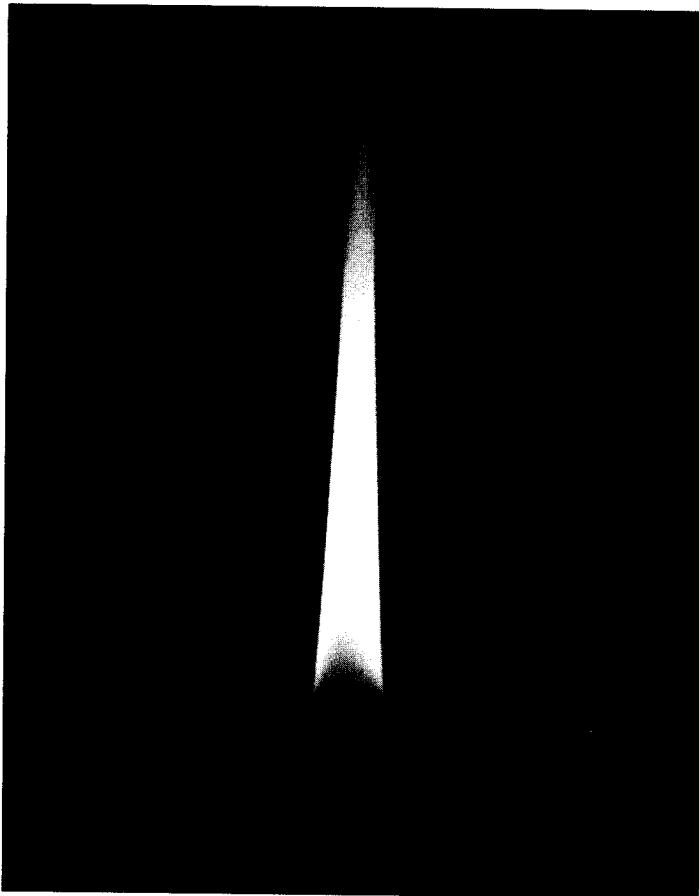

**Figure 9.6** Laminar ethylene jet diffusion flame. Note soot "wings" at sides of the flame near the tip.

| SOURCE: Photograph courtesy of R. J. Santoro.

---

## SIMPLIFIED THEORETICAL DESCRIPTIONS

The earliest theoretical description of the laminar jet diffusion flame is that of Burke and Schumann [4] published in 1928. Although many simplifying assumptions were employed, e.g., the velocity field was everywhere constant and parallel to the flame axis, their theory predicted flame lengths reasonably well for axisymmetric (circular-port) flames. This good agreement led other investigators to refine the original theory, yet retaining the constant-velocity assumption. In 1977, Roper [6–8] published a new theory that retained the essential simplicity of the Burke–Schumann analysis, but relaxed the requirement of a single constant velocity. Roper's approach provides reasonable

estimates of flame lengths for both circular and noncircular nozzles. Subsequently, we will present his results, which are useful for engineering calculations. Before doing so, however, let us describe the problem mathematically so that we can see the inherent difficulty of the problem and thus appreciate the elegance of the simplified theories. We begin by first presenting a somewhat general formulation using the more familiar variables: velocities, mass fractions, and temperature; then, with a few additional assumptions, we develop the conserved scalar approach that requires the solution of only two partial differential equations. More complete mathematical descriptions can be found in advanced texts [17] and original references [12].

### Primary Assumptions

In the same spirit as Chapter 8, we can greatly simplify the basic conservation equations, yet retain the essential physics, by invoking the following assumptions:

1. The flow is laminar, steady, and axisymmetric, produced by a jet of fuel emerging from a circular nozzle of radius  $R$ , which burns in a quiescent, infinite reservoir of oxidizer.
2. Only three “species” are considered: fuel, oxidizer, and products. Inside the flame zone, only fuel and products exist; while beyond the flame, only oxidizer and products exist.
3. Fuel and oxidizer react in stoichiometric proportions at the flame. Chemical kinetics are assumed to be infinitely fast, resulting in the flame being represented as an infinitesimally thin sheet. This is commonly referred to as the **flame-sheet approximation**.
4. Species molecular transport is by simple binary diffusion governed by Fick’s law.
5. Thermal energy and species diffusivities are equal; thus, the Lewis number ( $Le = \alpha/\mathcal{D}$ ) is unity.
6. Radiation heat transfer is negligible.
7. Only radial diffusion of momentum, thermal energy, and species is important; axial diffusion is neglected.
8. The flame axis is oriented vertically upward.

### Basic Conservation Equations

With these assumptions, the differential equations that govern the velocity, temperature, and species distributions throughout the flowfield are developed as follows:

**Mass Conservation** The appropriate mass conservation equation is identical to the axisymmetric continuity equation (Eqn. 7.7) developed in Chapter 7, since none of the flame assumptions above result in any further simplification:

$$\frac{1}{r} \frac{\partial(r\rho v_r)}{\partial r} + \frac{\partial(\rho v_x)}{\partial x} = 0. \quad (9.23)$$

**Axial Momentum Conservation** Similarly, the axial momentum equation (Eqn. 7.48) also stands as previously developed:

$$\frac{1}{r} \frac{\partial}{\partial x} (r\rho v_x v_x) + \frac{1}{r} \frac{\partial}{\partial r} (r\rho v_x v_r) - \frac{1}{r} \frac{\partial}{\partial r} \left( r\mu \frac{\partial v_x}{\partial r} \right) = (\rho_\infty - \rho)g. \quad (9.24)$$

This equation applies throughout the entire domain, i.e., both inside and outside of the flame boundary, with no discontinuities at the flame sheet.

**Species Conservation** With the flame-sheet assumption, the chemical production rates ( $\dot{m}_i'''$ ) become zero in the species conservation equation (Eqn. 7.20), with all chemical reaction phenomena embodied in the boundary conditions. Thus,

$$\frac{1}{r} \frac{\partial}{\partial x} (r\rho v_x Y_i) + \frac{1}{r} \frac{\partial}{\partial r} (r\rho v_r Y_i) - \frac{1}{r} \frac{\partial}{\partial r} \left( r\rho D \frac{\partial Y_i}{\partial r} \right) = 0, \quad (9.25)$$

where  $i$  represents fuel, and Eqn. 9.25 applies inside the flame boundary, or  $i$  represents oxidizer, and Eqn. 9.25 applies outside of the flame boundary. Since there are only three species, the product mass fraction can be found from

$$Y_{Pr} = 1 - Y_F - Y_{Ox}. \quad (9.26)$$

**Energy Conservation** The Shvab-Zeldovich form of energy conservation (Eqn. 7.66) is consistent with all of our assumptions and simplifies further in the same manner as the species equation, in that the production term ( $\sum h_{f,i}^o \dot{m}_i'''$ ) becomes zero everywhere except at the flame boundary. Thus Eqn. 7.66 becomes

$$\frac{\partial}{\partial x} (r\rho v_x \int c_p dT) + \frac{\partial}{\partial r} (r\rho v_r \int c_p dT) - \frac{\partial}{\partial r} \left( r\rho D \frac{\partial \int c_p dT}{\partial r} \right) = 0, \quad (9.27)$$

and applies both inside and outside of the flame, but with discontinuities at the flame itself. Thus, the heat release from reaction must enter the problem formulation as a boundary condition, where the boundary is the flame surface.

## Additional Relations

To completely define our problem, an equation of state is needed to relate density and temperature:

$$\rho = \frac{PMW_{\text{mix}}}{R_u T}, \quad (9.28)$$

where the mixture molecular weight is determined from the species mass fractions (Eqn. 2.12b) as

$$MW_{\text{mix}} = (\Sigma Y_i / MW_i)^{-1}. \quad (9.29)$$

Before proceeding, it is worthwhile to summarize our jet flame model equations and point out the intrinsic difficulties associated with obtaining their solutions, for it is these difficulties that motivate reformulating the problem in terms of conserved scalars. We have a total of five conservation equations: mass, axial momentum, energy, fuel species, and oxidizer species; involving five unknown functions:  $v_r(r, x)$ ,  $v_x(r, x)$ ,  $T(r, x)$ ,  $Y_F(r, x)$ , and  $Y_{Ox}(r, x)$ . Determining the five functions that simultaneously satisfy all five equations, subject to appropriate boundary conditions, defines our problem. Simultaneously solving five partial differential equations is itself a formidable task. The problem becomes even more complicated when we realize that some of the boundary conditions necessary to solve the fuel and oxidizer species and energy equations must be specified at the flame, the location of which is not known a priori. To eliminate this problem of the unknown location of the flame sheet, we seek to recast the governing equations, i.e., to employ conserved scalars, which require boundary conditions only along the flame axis ( $r = 0, x$ ), far from the flame ( $r \rightarrow \infty, x$ ), and at the nozzle exit plane ( $r, x = 0$ ).

### Conserved Scalar Approach

**Mixture Fraction** We can eliminate our boundary-condition dilemma, without reducing the complexity of the problem much, by replacing the two species conservation equations with the single mixture-fraction equation (Eqn. 7.79) developed in Chapter 7:

$$\frac{\partial}{\partial x} (r \rho v_x f) + \frac{\partial}{\partial r} (r \rho v_r f) - \frac{\partial}{\partial r} \left( r \rho D \frac{\partial f}{\partial r} \right) = 0. \quad (9.30)$$

This equation involves no discontinuities at the flame and requires no additional assumptions beyond those previously listed. Recall that the definition of the mixture fraction,  $f$ , is the mass fraction of material having its origin in the fuel system (cf. Eqns. 7.68 and 7.70), and, as such, has a maximum value of unity at the nozzle exit and a value of zero far from the flame. The appropriate boundary conditions for  $f$  can be given by

$$\frac{\partial f}{\partial r} (0, x) = 0 \quad (\text{symmetry}), \quad (9.31a)$$

$$f(\infty, x) = 0 \quad (\text{no fuel in oxidizer}), \quad (9.31b)$$

$$\begin{aligned} f(r \leq R, 0) &= 1 \\ f(r > R, 0) &= 0 \quad (\text{top-hat exit profile}). \end{aligned} \quad (9.31c)$$

Once the function  $f(r, x)$  is known, the location of the flame is easily found, since  $f = f_{\text{stoic}}$  at this location.

**Absolute Enthalpy** We continue our development by turning our attention now to the energy equation. Here, again with no additional simplifying assumptions, we can replace the Shvab-Zeldovich energy equation, which explicitly involves  $T(r, x)$ , with the conserved scalar form, Eqn. 7.83, which involves the absolute (or standardized) enthalpy function,  $h(r, x)$ , with temperature no longer appearing explicitly:

$$\frac{\partial}{\partial x} (r \rho v_x h) + \frac{\partial}{\partial r} (r \rho v_r h) - \frac{\partial}{\partial r} \left( r \rho D \frac{\partial h}{\partial r} \right) = 0. \quad (9.32)$$

As with the mixture fraction, no discontinuities in  $h$  occur at the flame, and the boundary conditions are given by

$$\frac{\partial h}{\partial r} (0, x) = 0, \quad (9.33a)$$

$$h(\infty, x) = h_{Ox}, \quad (9.33b)$$

$$\begin{aligned} h(r \leq R, 0) &= h_F \\ h(r > R, 0) &= h_{Ox}. \end{aligned} \quad (9.33c)$$

The continuity and axial momentum equations remain as given above, i.e., Eqns. 9.23 and 9.24, respectively, unaffected by our desire to use the conserved scalars to replace the species and energy equations. The boundary conditions for the velocities are the same as given previously for the nonreacting jet, i.e.,

$$v_r(0, x) = 0, \quad (9.34a)$$

$$\frac{\partial v_x}{\partial r} (0, x) = 0, \quad (9.34b)$$

$$v_x(\infty, x) = 0, \quad (9.34c)$$

$$\begin{aligned} v_x(r \leq R, 0) &= v_e \\ v_x(r > R, 0) &= 0. \end{aligned} \quad (9.34d)$$

Before our system of equations (Eqns. 9.23, 9.24, 9.30, and 9.32) can be solved, we need to be able to determine the density,  $\rho(r, x)$ , which appears in each conservation equation, using some appropriate state relationship. Before we do so, however, we can effect further simplification of our problem by recasting the governing equations to a nondimensional form.

**Nondimensional Equations** Frequently, valuable insights can be obtained by defining dimensionless variables and substituting these into the governing equations. Such procedures result in the identification of important dimensionless parameters, such as the Reynolds number, with which you are well acquainted. We start by using the nozzle radius  $R$  as the characteristic length scale, and the nozzle exit velocity  $v_e$  as the characteristic velocity, to define the following dimensionless spatial coordinates and velocities:

$$x^* \equiv \frac{\text{dimensionless axial distance}}{R} = x/R, \quad (9.35\text{a})$$

$$r^* \equiv \frac{\text{dimensionless radial distance}}{R} = r/R, \quad (9.35\text{b})$$

$$v_x^* \equiv \frac{\text{dimensionless axial velocity}}{v_e} = v_x/v_e, \quad (9.35\text{c})$$

$$v_r^* \equiv \frac{\text{dimensionless radial velocity}}{v_e} = v_r/v_e. \quad (9.35\text{d})$$

Since the mixture fraction  $f$  is already a dimensionless variable with the desired property that  $0 \leq f \leq 1$ , we will use it directly. The mixture absolute enthalpy  $h$ , however, is not dimensionless; thus, we define

$$h^* \equiv \frac{\text{dimensionless absolute enthalpy}}{h_{F,e} - h_{Ox,\infty}} = \frac{h - h_{Ox,\infty}}{h_{F,e} - h_{Ox,\infty}}. \quad (9.35\text{e})$$

Note that at the nozzle exit,  $h = h_{F,e}$  and, thus,  $h^* = 1$ ; and in the ambient ( $r \rightarrow \infty$ ),  $h = h_{Ox,\infty}$ , and  $h^* = 0$ .

To make our governing equations completely dimensionless, we also define the density ratio:

$$\rho^* \equiv \frac{\text{dimensionless density}}{\rho_e} = \frac{\rho}{\rho_e}, \quad (9.35\text{f})$$

where  $\rho_e$  is the fuel density at the nozzle exit.

Relating each of the dimensional variables or parameters to its dimensionless counterpart, and substituting these back into the basic conservation equations, results in the following dimensionless governing equations:

#### Continuity

$$\frac{\partial}{\partial x^*} (\rho^* v_x^*) + \frac{1}{r^*} \frac{\partial}{\partial r^*} (r^* \rho^* v_r^*) = 0. \quad (9.36)$$

#### Axial momentum

$$\frac{\partial}{\partial x^*} (r^* \rho^* v_x^* v_x^*) + \frac{\partial}{\partial r^*} (r^* \rho^* v_r^* v_x^*) - \frac{\partial}{\partial r^*} \left[ \left( \frac{\mu}{\rho_e v_e R} \right) r^* \frac{\partial v_x^*}{\partial r^*} \right] = \frac{gR}{v_e^2} \left( \frac{\rho_\infty}{\rho_e} - \rho^* \right) r^*. \quad (9.37)$$

*Mixture fraction*

$$\frac{\partial}{\partial x^*} (r^* \rho^* v_x^* f) + \frac{\partial}{\partial r^*} (r^* \rho^* v_r^* f) - \frac{\partial}{\partial r^*} \left[ \left( \frac{\rho D}{\rho_e v_e R} \right) r^* \frac{\partial f}{\partial r^*} \right] = 0. \quad (9.38)$$

*Dimensionless enthalpy*

$$\frac{\partial}{\partial x^*} (r^* \rho^* v_x^* h^*) + \frac{\partial}{\partial r^*} (r^* \rho^* v_r^* h^*) - \frac{\partial}{\partial r^*} \left[ \left( \frac{\rho D}{\rho_e v_e R} \right) r^* \frac{\partial h^*}{\partial r^*} \right] = 0. \quad (9.39)$$

The dimensionless boundary conditions for the above are

$$v_r^*(0, x^*) = 0 \quad (9.40a)$$

$$v_x^*(\infty, x^*) = f(\infty, x^*) = h^*(\infty, x^*) = 0, \quad (9.40b)$$

$$\frac{\partial v_x^*}{\partial r^*}(0, x^*) = \frac{\partial f}{\partial r^*}(0, x^*) = \frac{\partial h^*}{\partial r^*}(0, x^*) = 0, \quad (9.40c)$$

$$\begin{aligned} v_x^*(r^* \leq 1, 0) &= f(r^* \leq 1, 0) = h^*(r^* \leq 1, 0) = 1 \\ v_x^*(r^* > 1, 0) &= f(r^* > 1, 0) = h^*(r^* > 1, 0) = 0. \end{aligned} \quad (9.40d)$$

Inspection of the dimensionless governing equation and boundary conditions shows some very interesting features. First, we see that the mixture fraction and dimensionless enthalpy equations, and their boundary conditions, are of identical form; that is,  $f$  and  $h^*$  play the same role in their respective governing equations. Therefore, we do not need to solve both Eqn. 9.38 and Eqn. 9.39, but, rather, one or the other. For example, if we were to solve for  $f(r^*, x^*)$ , then simply,  $h^*(r^*, x^*) = f(r^*, x^*)$ .

**Additional Assumptions** We also note that, if buoyancy were neglected, the right-hand-side of the axial momentum equation (Eqn. 9.37) becomes zero and the general form of this equation is the same as the mixture fraction and dimensionless enthalpy equations except that  $\mu$  appears in the former where  $\rho D$  appears in the latter. Our problem can be simplified even further if we assume that viscosity  $\mu$  equals the  $\rho D$  product. Since the **Schmidt number**,  $Sc$ , is defined as

$$Sc \equiv \frac{\text{momentum diffusivity}}{\text{mass diffusivity}} = \frac{\nu}{D} = \frac{\mu}{\rho D}, \quad (9.41)$$

we see that with  $\mu = \rho D$ , the Schmidt number is unity ( $Sc = 1$ ). Assuming that the momentum diffusivity and mass diffusivity are equal ( $Sc = 1$ ) is analogous to our previous assumption of equal thermal and mass diffusivities ( $Le = 1$ ).

With the assumptions of negligible buoyancy and  $Sc = 1$ , the following single conservation equation replaces the individual axial momentum, mixture fraction (species mass), and enthalpy (energy) equations (Eqns. 9.37–9.39):

$$\frac{\partial}{\partial x^*} (r^* \rho^* v_x^* \zeta) + \frac{\partial}{\partial r^*} (r^* \rho^* v_r^* \zeta) - \frac{\partial}{\partial r^*} \left( \frac{1}{Re} r^* \frac{\partial \zeta}{\partial r^*} \right) = 0, \quad (9.42)$$

where our generic variable  $\zeta = v_x^* = f = h^*$  and  $Re = \rho_e v_e R / \mu$ . Although  $v_x^*, f$ , and  $h^*$  each satisfy Eqn. 9.42,  $\rho^*$  and  $v_x^*$  are coupled through continuity (Eqn. 9.36), while  $\rho^*$  and  $f$  (or  $h^*$ ) are coupled through state relationships, as discussed below.

**State Relationships** To be able to solve the jet flame problem as developed above requires that the density  $\rho^*$  ( $= \rho / \rho_e$ ) be related to the mixture fraction,  $f$ , or any of the other conserved scalars. To do this, we employ the ideal-gas equation of state (Eqn. 9.28); however, this requires a knowledge of the species mass fractions and temperature. Our immediate problem then is to relate the  $Y_i$ s and  $T$  as functions of the mixture fraction. Knowing these primary relationships, they can be combined to obtain the needed relationship  $\rho = \rho(f)$ . For our simple system, which consists of only products and fuel inside the flame sheet, and only products and oxidizer outside the flame sheet (see assumption 2), our task is to find the following **state relationships**:

$$Y_F = Y_F(f), \quad (9.43a)$$

$$Y_{Pr} = Y_{Pr}(f), \quad (9.43b)$$

$$Y_{Ox} = Y_{Ox}(f), \quad (9.43c)$$

$$T = T(f), \quad (9.43d)$$

$$\rho = \rho(f). \quad (9.43e)$$

With our flame-sheet approximation (assumption 3), the definition of the mixture fraction (Eqn. 7.70) can be used to relate the species mass fractions,  $Y_F$ ,  $Y_{Ox}$ , and  $Y_{Pr}$ , to  $f$  in the region inside the flame sheet, at the flame, and beyond the flame sheet, as illustrated in Fig. 9.7, as follows:

*Inside the flame ( $f_{stoic} < f \leq 1$ )*

$$Y_F = \frac{f - f_{stoic}}{1 - f_{stoic}}, \quad (9.44a)$$

$$Y_{Ox} = 0, \quad (9.44b)$$


$$Y_{Pr} = \frac{1 - f}{1 - f_{stoic}}. \quad (9.44c)$$

*At the flame ( $f = f_{stoic}$ )*

$$Y_F = 0, \quad (9.45a)$$

$$Y_{Ox} = 0, \quad (9.45b)$$

$$Y_{Pr} = 1. \quad (9.45c)$$

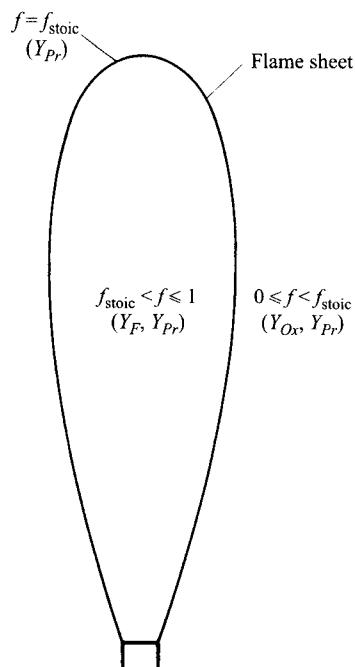

**Figure 9.7** Simplified model of jet diffusion flame employing the flame-sheet approximation where inside the flame sheet only fuel and products exist, and outside the sheet only oxidizer and products exist.

*Outside the flame ( $0 \leq f < f_{stoic}$ )*

$$Y_F = 0, \quad (9.46a)$$

$$Y_{Ox} = 1 - f/f_{stoic}, \quad (9.46b)$$

$$Y_{Pr} = f/f_{stoic}, \quad (9.46c)$$


where the stoichiometric mixture fraction relates to the stoichiometric (mass) coefficient  $\nu$  as

$$f_{stoic} = \frac{1}{\nu + 1}. \quad (9.47)$$

Note that all of the mass fractions are related linearly to the mixture fraction (Fig. 9.8a).

To determine the mixture temperature as a function of mixture fraction requires a calorific equation of state (cf. Eqn. 2.4). As we have done in previous chapters, we follow Spalding [18] and make the following assumptions:

1. The specific heats of each species (fuel, oxidizer, and products) are constant and equal:  $c_{p,F} = c_{p,Ox} = c_{p,Pr} \equiv c_p$ .

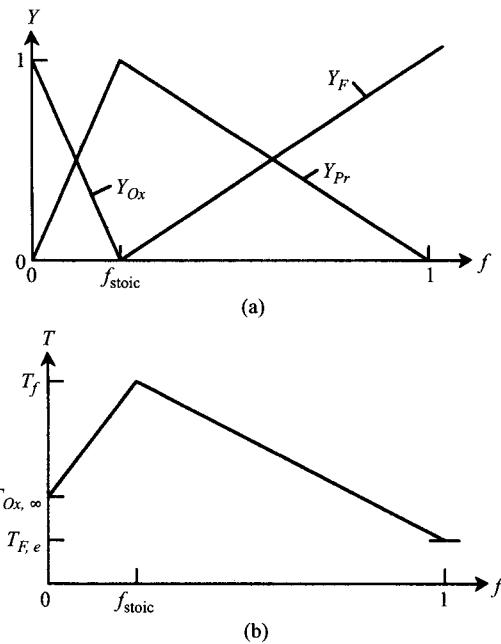

**Figure 9.8** (a) Simplified-state relationships for species mass fractions  $Y_F(f)$ ,  $Y_{Ox}(f)$ , and  $Y_{Pr}(f)$ . (b) Simplified-state relationships for mixture temperature  $T(f)$ .

2. The enthalpies of formation of the oxidizer and the products are zero:  $h_{f,Ox}^o = h_{f,Pr}^o = 0$ . This results in the enthalpy of formation of the fuel equaling its heat of combustion.

These assumptions are invoked only to provide a simple illustration of how to construct state relationships and are not essential to the basic concept. With these assumptions, our calorific equation of state is simply

$$h = \sum Y_i h_i = Y_F \Delta h_c + c_p(T - T_{\text{ref}}). \quad (9.48)$$

Substituting Eqn. 9.48 into the definition of the dimensionless enthalpy  $h^*$  (Eqn. 9.35e) and recalling that, because of the similarity of the governing equations,  $h^* = f$ , we obtain

$$h^* = \frac{Y_F \Delta h_c + c_p(T - T_{Ox,\infty})}{\Delta h_c + c_p(T_{F,e} - T_{Ox,\infty})} \equiv f, \quad (9.49)$$

where the definitions  $h_{Ox,\infty} \equiv c_p(T_{Ox,\infty} - T_{\text{ref}})$  and  $h_{F,e} \equiv \Delta h_c + c_p(T_{F,e} - T_{\text{ref}})$  have also been substituted. Solving Eqn. 9.49 for  $T$  provides the following general state relationship,  $T = T(f)$ , recognizing that  $Y_F$  is also a function of the mixture fraction  $f$ :

$$T = (f - Y_F) \frac{\Delta h_c}{c_p} + f(T_{F,e} - T_{Ox,\infty}) + T_{Ox,\infty}. \quad (9.50)$$

Using Eqn. 9.50 with the appropriate expressions for  $Y_F$  inside the flame sheet (Eqn. 9.44a), at the flame (Eqn. 9.45a), and outside the flame sheet (Eqn. 9.46a), yields the following:

*Inside the flame ( $f_{stoic} < f \leq 1$ )*

$$T = T(f) = f \left[ (T_{F,e} - T_{Ox,\infty}) - \frac{f_{stoic}}{1-f_{stoic}} \frac{\Delta h_c}{c_p} \right] + T_{Ox,\infty} + \frac{f_{stoic}}{(1-f_{stoic})c_p} \Delta h_c. \quad (9.51a)$$

*At the flame ( $f = f_{stoic}$ )*

$$T \equiv T(f) = f_{stoic} \left( \frac{\Delta h_c}{c_p} + T_{F,e} - T_{Ox,\infty} \right) + T_{Ox,\infty}. \quad (9.51b)$$

*Outside the flame ( $0 \leq f < f_{stoic}$ )*

$$T = T(f) = f \left( \frac{\Delta h_c}{c_p} + T_{F,e} - T_{Ox,\infty} \right) + T_{Ox,\infty}. \quad (9.51c)$$

Note that with our simplified thermodynamics, the temperature depends linearly on  $f$  in the regions inside and outside the flame, with a maximum at the flame as illustrated in Fig. 9.8b. It is also interesting to note that the flame temperature given by Eqn. 9.51b is identical to the constant-pressure adiabatic flame temperature calculated from the first law (Eqn. 2.40) for fuel and oxidizer with initial temperatures of  $T_{F,e}$  and  $T_{Ox,\infty}$ , respectively. Our task is now complete in that, with the state relationships  $Y_F(f)$ ,  $Y_{Ox}(f)$ ,  $Y_{Pr}(f)$ , and  $T(f)$ , the mixture density can be determined solely as a function of mixture fraction  $f$  using the ideal-gas equation of state (Eqn. 9.28). It is important to point out that our use of only three species (fuel, oxidizer, and products) and greatly simplified thermodynamics allows us to formulate simple, closed-form state relationships and illustrate the basic concepts and procedures involved in creating a conserved scalar model of diffusion flames. More sophisticated state relationships are frequently employed using equilibrium, partial equilibrium, or experimental state relationships for complex mixtures. Nevertheless, the basic concepts are essentially as presented here.

Table 9.1 summarizes our developments of conserved scalar models of laminar jet diffusion flames, while the following sections discuss various solutions to the problem.

## Various Solutions

**Burke-Schumann** As mentioned previously, the earliest approximate solution to the laminar jet flame problem is that of Burke and Schumann [4], who analyzed circular and two-dimensional fuel jets emerging into coflowing

**Table 9.1** Summary of conserved scalar models of laminar jet diffusion flame

Assumptions	Solution Variables Required	Conservation Equations Required	State Relationships Required <sup>a</sup>
Primary assumptions only for conservation equations + Simplified thermodynamics for state relationships	$v_r^*(r^*, x^*)$ , $v_x^*(r^*, x^*)$ , $f(r^*, x^*)$ or $h^*(r^*, x^*)$	Eqn. 9.36, 9.37, 9.38, or 9.39	Eqn. 9.28 and Eqns. 9.44, 9.45, 9.46, and 9.51 (or equivalent)
Primary assumptions + No buoyancy and $Sc = 1$ + Simplified thermodynamics for state relationships	$v_r^*(r^*, x^*)$ , $\zeta(r^*, x^*)$ , i.e., $v_x^*$ or $f$ or $h^*$	Eqns. 9.36 and 9.42	As above

<sup>a</sup>Additional relations required for temperature-dependent transport properties  $\mu$  and/or  $\rho D$ .

oxidizer streams. For both the axisymmetric and two-dimensional problems, they used the flame-sheet approximation and assumed that a single velocity characterized the flow ( $v_x = v$ ,  $v_r = 0$ ). This latter assumption eliminates the need to solve the axial-momentum equation (Eqn. 9.24) and, by default, neglects buoyancy. Although the concept of a conserved scalar had not been formally developed at the time of Burke and Schumann's study (1928), their treatment of species conservation cast the problem in a form equivalent to that of a conserved scalar. With the assumption that  $v_r = 0$ , mass conservation (Eqn. 9.23) requires that  $\rho v_x$  be a constant; thus, the variable-density species conservation equation (Eqn. 9.25) becomes

$$\rho v_x \frac{\partial Y_i}{\partial x} - \frac{1}{r} \frac{\partial}{\partial r} \left( r \rho D \frac{\partial Y_i}{\partial r} \right) = 0. \quad (9.52)$$

Since the above equation has no species production term, its solution requires a priori knowledge of the flame boundary. Burke and Schumann circumvented this problem by defining the flowfield in terms of a single fuel species whose mass fraction takes on a value of unity in the fuel stream, zero at the flame, and  $-1/v$ , or  $-f_{\text{stoic}}/(1-f_{\text{stoic}})$ , in the pure oxidizer. Thus, with this convention, "negative" fuel concentrations occur outside of the flame. In a modern context, their fuel mass fraction  $Y_F$  is defined by the mixture fraction as

$$Y_F = \frac{f - f_{\text{stoic}}}{1 - f_{\text{stoic}}}. \quad (9.53)$$

Substitution of this definition into Eqn. 9.52 recovers the familiar conserved scalar equation (Eqn. 9.30). Although Burke and Schumann assumed constant properties and constant  $v_x$ , we can recover their governing equation by making the less restrictive assumption that the product of the density and diffusivity is

constant, i.e.,  $\rho\mathcal{D} = \text{constant} \equiv \rho_{\text{ref}}\mathcal{D}_{\text{ref}}$ . In Chapter 3, we saw that the  $\rho\mathcal{D}$  product varies approximately as  $T^{1/2}$ ; thus, this assumption is clearly an approximation. Substituting  $\rho_{\text{ref}}\mathcal{D}_{\text{ref}}$  for  $\rho\mathcal{D}$  into Eqn. 9.52, removing this product from inside the radial derivative, and noting that  $\rho v_x = \text{constant} \equiv \rho_{\text{ref}}v_{x,\text{ref}}$ , we see that the density  $\rho_{\text{ref}}$  cancels, yielding the following final result:

$$v_{x,\text{ref}} \frac{\partial Y_F}{\partial x} = \mathcal{D}_{\text{ref}} \frac{1}{r} \frac{\partial}{\partial r} \left( r \frac{\partial Y_F}{\partial r} \right), \quad (9.54)$$

where  $v_{x,\text{ref}}$  and  $\mathcal{D}_{\text{ref}}$  are reference values of velocity and diffusivity, respectively, both evaluated at the same temperature.

The solution to the above partial differential equation,  $Y_F(x, r)$ , is a rather complicated expression involving **Bessel functions**. The flame length is not given explicitly but can be found by solving the following transcendental equation for the flame length,  $L_f$ :

$$\sum_{m=1}^{\infty} \frac{J_1(\lambda_m R)}{\lambda_m [J_0(\lambda_m R_o)]^2} \exp\left(-\frac{\lambda_m^2 \mathcal{D}}{v} L_f\right) - \frac{R_o^2}{2R} \left(1 + \frac{1}{S}\right) + \frac{R}{2} = 0. \quad (9.55)$$

In the above,  $J_0$  and  $J_1$  are the zeroth- and first-order Bessel functions, which are described in mathematical reference books (e.g., Ref. [19]); the  $\lambda_m$  are defined by all the positive roots of the equation  $J_1(\lambda_m R_o) = 0$  [19];  $R$  and  $R_o$  are the fuel tube and outer flow radii, respectively; and  $S$  is the molar stoichiometric ratio of oxidizer (outer-flow fluid) to fuel (nozzle fluid). Flame lengths predicted by the Burke–Schumann theory are in reasonable agreement with theory for circular-port burners, primarily as a result of offsetting assumptions; the effect of buoyancy is to cause a narrowing of the flame, which, in turn, increases diffusion rates. Burke and Schumann recognized this possibility, foreshadowing the work of Roper [6] that showed this to be true. The numerical study of Kee and Miller [10] also explicitly showed this effect by running comparison cases with and without buoyancy.

**Roper** Roper [6] proceeded in the spirit of the Burke–Schumann approach, but allowed the characteristic velocity to vary with axial distance as modified by buoyancy and in accordance with continuity. In addition to circular-port burners, Roper analyzed rectangular-slot and curved-slot [6, 8] burners. Roper's analytical solutions, and those as modified slightly by experiment, are presented in a separate section below.

**Constant-Density Solution** If the density is assumed to be constant, the solutions to Eqns. 9.23, 9.24, and 9.30 are identical to those of the nonreacting jet. In this case, the flame length is given by Eqn. 9.22:

$$L_f \approx \frac{3}{8\pi} \frac{1}{\mathcal{D}} \frac{Q_F}{Y_{F,\text{stoc}}}. \quad (9.56)$$

**Variable-Density Approximate Solution** Fay [5] solved the variable-density, laminar, jet-flame problem. In his solution, buoyancy is neglected, thereby simplifying the axial momentum equation. With regard to properties, the Schmidt and Lewis numbers are assumed to be unity, consistent with our formulation of the governing equations and, furthermore, the absolute viscosity,  $\mu$ , is assumed to be directly proportional to temperature, i.e.,

$$\mu = \mu_{\text{ref}} T/T_{\text{ref}}.$$

Fay's solution for the flame length is

$$L_f \approx \frac{3}{8\pi} \frac{1}{Y_{F,\text{stoic}}} \frac{\dot{m}_F}{\mu_{\text{ref}}} \frac{\rho_\infty}{\rho_{\text{ref}}} \frac{1}{I(\rho_\infty/\rho_f)}, \quad (9.57)$$

where  $\dot{m}_F$  is the mass flow issuing from the nozzle,  $\rho_\infty$  is the ambient fluid density far from the flame, and  $I(\rho_\infty/\rho_f)$  is a function obtained by numerical integration as a part of Fay's solution. Tabulated values of  $I(\rho_\infty/\rho_f)$  and  $\rho_\infty/\rho_{\text{ref}}$  are given in Table 9.2 for various ratios of ambient-to-flame densities,  $\rho_\infty/\rho_f$ .

Equation 9.57 can be recast in a form similar to the constant-density solution, Eqn. 9.56, by noting that  $\dot{m}_F = \rho_F Q_F$  and  $\mu_{\text{ref}} = \rho_{\text{ref}} \mathcal{D}$  ( $Sc = 1$ ):

$$L_f \approx \frac{3}{8\pi} \frac{1}{\mathcal{D}_{\text{ref}}} \frac{Q_F}{Y_{F,\text{stoic}}} \left( \frac{\rho_F \rho_\infty}{\rho_{\text{ref}}^2} \right) \frac{1}{I(\rho_\infty/\rho_f)}. \quad (9.58)$$

Thus, we see that the flame lengths predicted by the variable-density theory are longer than those of the constant-density theory by the factor

$$\frac{\rho_F \rho_\infty}{\rho_{\text{ref}}^2} \frac{1}{I(\rho_\infty/\rho_f)}.$$

For  $\rho_\infty/\rho_f = 5$  and  $\rho_F = \rho_\infty$  (reasonable values for hydrocarbon-air flames) the predicted flame length for the variable-density theory is about 2.4 times that of the constant-density theory. Regardless of the ability of either theory to predict actual flame lengths, they both show that flame length is directly proportional to the nozzle-fluid volumetric flowrate and inversely proportional to the stoichiometric nozzle-fluid mass fraction, independent of the nozzle diameter.

**Table 9.2** Momentum integral estimates<sup>a</sup> for variable-density laminar jet flames

$\rho_\infty/\rho_f$	$\rho_\infty/\rho_{\text{ref}}$	$I(\rho_\infty/\rho_f)$
1	1	1
3	2	2.4
5	3	3.7
7	4	5.2
9	5	7.2

<sup>a</sup>Estimated from Fig. 3 of Ref. [5].

**Numerical Solutions** The use of digital computers and finite-difference techniques allows laminar jet flames to be modeled in much greater detail than the analytical approaches discussed above. For example, the flame-sheet approximation with **frozen flow** assumed inside and outside of the flame can be replaced by a reacting mixture governed by chemical kinetics (cf. Chapter 4). Kee and Miller [9, 10] modeled an H<sub>2</sub>-air flame using 16 reversible reactions involving 10 species. More recently, Smooke *et al.* [13], modeled a CH<sub>4</sub>-air flame taking into account 79 reactions with 26 species. With chemical transformation effects no longer relegated to boundary conditions, the species conservation equations, Eqn. 9.25, would now have to include species production (source) and destruction (sink) terms (cf. Chapter 7). Numerical models also allow the relaxation of the assumption of simple binary diffusion. Detailed multicomponent diffusion is included in the computer models of Heys *et al.* [12] and Smooke *et al.* [13]. Similarly, temperature-dependent properties can be incorporated easily into numerical models [9–13]. In the Mitchell *et al.* [11] and Smooke *et al.* [13] models, both radial and axial diffusion terms are retained in the conservation equation, thereby avoiding the boundary-layer approximations. Lastly, Heys *et al.* [12] incorporate thermal radiation in their model of a CH<sub>4</sub>-air flame and show that its inclusion results in peak temperature predictions of about 150 K lower than when no radiation losses are considered. Temperature differences of this order can greatly affect temperature-sensitive chemical reaction rates, such as those involved in nitric oxide formation (cf. Chapter 5).

## FLAME LENGTHS FOR CIRCULAR-PORT AND SLOT BURNERS

### Roper's Correlations


Roper developed [6, 8], and verified by experiment [7, 8], expressions to predict laminar jet flame lengths for various burner geometries (circular, square, slot, and curved slot) and flow regimes (momentum-controlled, buoyancy-controlled, and transitional). Roper's results [6, 7] are summarized in Table 9.3 and detailed below.

For circular and square burner ports, the following expressions can be used to estimate flame lengths. These results apply regardless of whether or not buoyancy is important, and are applicable for fuel jets emerging into either a quiescent oxidizer or a coflowing stream, as long as the oxidizer is in excess, i.e., the flames are overventilated.

#### Circular Port

$$L_{f,\text{thy}} = \frac{Q_F(T_\infty/T_F)}{4\pi D_\infty \ln(1 + 1/S)} \left(\frac{T_\infty}{T_f}\right)^{0.67} \quad (9.59)$$

**Table 9.3** Empirical and theoretical correlations for estimating lengths of vertical laminar jet flames

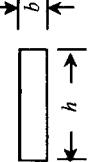Port Geometry	Conditions	Applicable Equation <sup>a</sup>
	Circular Momentum- or buoyancy-controlled	Circular—Eqns. 9.59 and 9.60
	Square Momentum- or buoyancy-controlled	Square—Eqn. 9.61 and 9.62
	Slot Momentum-controlled Buoyancy-controlled Mixed momentum-buoyancy-controlled	Eqns. 9.63 and 9.64 Eqns. 9.65 and 9.66 Eqn. 9.70

<sup>a</sup>For the circular and square geometries, the indicated equations apply for either a stagnant or coflowing oxidizer stream. For the slot geometry, the equations apply only to the stagnant oxidizer case.

$$L_{f,\text{expt}} = 1330 \frac{Q_F(T_\infty/T_F)}{\ln(1+1/S)}, \quad (9.60)$$

where  $S$  is the molar stoichiometric oxidizer–fuel ratio,  $\mathcal{D}_\infty$  is a mean diffusion coefficient evaluated for the oxidizer at the oxidizer stream temperature,  $T_\infty$ , and  $T_F$  and  $T_f$  are the fuel stream and mean flame temperatures, respectively. In Eqn. 9.60, all quantities are evaluated in SI units (m,  $\text{m}^3/\text{s}$ , etc.). Note that the burner diameter does not explicitly appear in either of these expressions.

### Square Port

$$L_{f,\text{thy}} = \frac{Q_F(T_\infty/T_F)}{16\mathcal{D}_\infty \left[ \text{inverf}((1+S)^{-0.5}) \right]^2} \left( \frac{T_\infty}{T_f} \right)^{0.67} \quad (9.61)$$

$$L_{f,\text{expt}} = 1045 \frac{Q_F(T_\infty/T_F)}{\left[ \text{inverf}((1+S)^{-0.5}) \right]^2}, \quad (9.62)$$

where **inverf** is the **inverse error function**. Values of the **error function**, **erf**, are tabulated in Table 9.4. Values for the inverse error function are generated from the error function tables in the same way that you would deal with inverse trigonometric functions, i.e.,  $\omega = \text{inverf}(\text{erf } \omega)$ . Again, all quantities are evaluated in SI units.

### Slot Burner—Momentum-Controlled

$$L_{f,\text{thy}} = \frac{b\beta^2 Q_F}{hI\mathcal{D}_\infty Y_{F,\text{stoic}}} \left( \frac{T_\infty}{T_F} \right)^2 \left( \frac{T_f}{T_\infty} \right)^{0.33} \quad (9.63)$$

$$L_{f,\text{expt}} = 8.6 \cdot 10^4 \frac{b\beta^2 Q_F}{hIY_{F,\text{stoic}}} \left( \frac{T_\infty}{T_F} \right)^2, \quad (9.64)$$

where  $b$  is the slot width,  $h$  is the slot length (cf. Table 9.3), and the function  $\beta$  is given by

$$\beta = \frac{1}{4 \text{inverf}[1/(1+S)]},$$

and  $I$  is the ratio of the actual initial momentum flow from the slot to that of uniform flow, i.e.,

$$I = \frac{J_{e,\text{act}}}{\dot{m}_F v_e}.$$

If the flow is uniform,  $I = 1$ , and for a fully developed, parabolic exit velocity profile (assuming  $h \gg b$ ),  $I = 1.5$ . Equations 9.63 and 9.64 apply only if the

**Table 9.4** Gaussian error function<sup>a</sup>

$\omega$	$\text{erf } \omega$	$\omega$	$\text{erf } \omega$	$\omega$	$\text{erf } \omega$
0.00	0.00000	0.36	0.38933	1.04	0.85865
0.02	0.02256	0.38	0.40901	1.08	0.87333
0.04	0.04511	0.40	0.42839	1.12	0.88679
0.06	0.06762	0.44	0.46622	1.16	0.89910
0.08	0.09008	0.48	0.50275	1.20	0.91031
0.10	0.11246	0.52	0.53790	1.30	0.93401
0.12	0.13476	0.56	0.57162	1.40	0.95228
0.14	0.15695	0.60	0.60386	1.50	0.96611
0.16	0.17901	0.64	0.63459	1.60	0.97635
0.18	0.20094	0.68	0.66378	1.70	0.98379
0.20	0.22270	0.72	0.69143	1.80	0.98909
0.22	0.24430	0.76	0.71754	1.90	0.99279
0.24	0.26570	0.80	0.74210	2.00	0.99532
0.26	0.28690	0.84	0.76514	2.20	0.99814
0.28	0.30788	0.88	0.78669	2.40	0.99931
0.30	0.32863	0.92	0.80677	2.60	0.99976
0.32	0.34913	0.96	0.82542	2.80	0.99992
0.34	0.36936	1.00	0.84270	3.00	0.99998

<sup>a</sup>The Gaussian error function is defined as

$$\text{erf } \omega \equiv \frac{2}{\sqrt{\pi}} \int_0^{\omega} e^{-v^2} dv.$$

The complementary error function is defined as

$$\text{erfc } \omega \equiv 1 - \text{erf } \omega.$$

oxidizer is stagnant. For a coflowing oxidizer stream, the reader is referred to Refs. [6] and [7].

### Slot Burner—Buoyancy-Controlled

$$L_{f,\text{thy}} = \left[ \frac{9\beta^4 Q_F^4 T_\infty^4}{8D_\infty^2 ah^4 T_F^4} \right]^{1/3} \left[ \frac{T_f}{T_\infty} \right]^{2/9} \quad (9.65)$$

$$L_{f,\text{expt}} = 2 \cdot 10^3 \left[ \frac{\beta^4 Q_F^4 T_\infty^4}{ah^4 T_F^4} \right]^{1/3}. \quad (9.66)$$

where  $a$  is the mean buoyant acceleration evaluated from

$$a \cong 0.6g \left( \frac{T_f}{T_\infty} - 1 \right), \quad (9.67)$$

where  $g$  is the gravitational acceleration. Roper *et al.* [7] used a mean flame temperature,  $T_f = 1500$  K, to evaluate the acceleration. As can be seen in Eqns. 9.65 and 9.66, the predicted flame length depends only weakly ( $-\frac{1}{3}$  power) on  $a$ .

**Slot Burner—Transition Regime** To determine whether a flame is momentum- or buoyancy-controlled, the flame **Froude number**,  $Fr_f$ , must be evaluated. The Froude number physically represents the ratio of the initial jet momentum flow to the buoyant force experienced by the flame. For the laminar jet flame issuing into a stagnant medium.,

$$Fr_f \equiv \frac{(v_e I Y_{F,\text{stoic}})^2}{a L_f}, \quad (9.68)$$

and the flow regime can be established by the following criteria:

$$Fr_f \gg 1 \quad \text{Momentum-controlled,} \quad (9.69\text{a})$$

$$Fr_f \approx 1 \quad \text{Mixed (transition),} \quad (9.69\text{b})$$

$$Fr_f \ll 1 \quad \text{Buoyancy-controlled.} \quad (9.69\text{c})$$

Note that in order to establish the appropriate flow regime, a value for  $L_f$  is required; thus, an a posteriori check is required to see if the correct flow regime has been selected.

For the transitional region where both jet momentum and buoyancy are important, Roper [6, 7] recommends the following treatment:

$$L_{f,T} = \frac{4}{9} L_{f,M} \left( \frac{L_{f,B}}{L_{f,M}} \right)^3 \left\{ \left[ 1 + 3.38 \left( \frac{L_{f,M}}{L_{f,B}} \right)^3 \right]^{2/3} - 1 \right\}, \quad (9.70)$$

where the subscripts  $M$ ,  $B$ , and  $T$  refer to momentum-controlled, buoyancy-controlled, and transition (mixed), respectively.

---

It is desired to operate a square-port diffusion flame burner with a 50-mm-high flame in a laboratory. Determine the volumetric flowrate required if the fuel is propane. Also, determine the heat release ( $\dot{m} \Delta h_c$ ) of the flame. What flowrate is required if methane is substituted for propane?

### Example 9.3

#### Solution

We will apply Roper's correlation for square-port burners (Eqn. 9.62) to determine the volumetric flowrate:

$$L_f = \frac{1045 Q_F (T_\infty / T_F)}{[\text{inverf}((1 + S)^{-0.5})]^2}.$$

If we assume that  $T_\infty = T_F = 300$  K, the only parameter we need to calculate before we can find  $Q_F$  is the molar stoichiometric air-fuel ratio,  $S$ . From Chapter 2,  $S = (x + y/4) 4.76$ ; so, for propane ( $C_3H_8$ ),

$$S = (3 + 8/4) 4.76 = 23.8 \frac{\text{kmol}}{\text{kmol}}.$$

Thus,

$$\text{inverf}[(1 + 23.8)^{-0.5}] = \text{inverf}(0.2008) = 0.18,$$

where Table 9.4 was used to evaluate  $\text{inverf}(0.2008)$ . Solving Eqn. 9.62 for  $Q_F$ , and evaluating, yields

$$Q_F = \frac{0.050(0.18)^2}{1045(300/300)} = 1.55 \cdot 10^{-6} \text{ m}^3/\text{s}$$

or

$$Q_F = 1.55 \text{ cm}^3/\text{s}$$

Using the ideal-gas law to estimate the propane density ( $P = 1 \text{ atm}$ ,  $T = 300 \text{ K}$ ), and taking the heat of combustion from Appendix B, the heat release rate is

$$\begin{aligned}\dot{m} \Delta h_c &= \rho_F Q_F \Delta h_c \\ &= 1.787(1.55 \cdot 10^{-6}) 46,357,000 \\ \dot{m} \Delta h_c &= 128 \text{ W}\end{aligned}$$

Repeating the problem for methane, we find  $S = 9.52$ ,  $\rho_F = 0.65$ , and  $\Delta h_c = 50,016,000 \text{ J/kg}$ ; thus,

$$Q = 3.75 \text{ cm}^3/\text{s}$$

and

$$\dot{m} \Delta h_c = 122 \text{ W}$$

#### Comment

Here we see that, although the volumetric flowrate required for  $\text{CH}_4$  is about 2.4 times greater than the  $\text{C}_3\text{H}_8$  requirement, both flames release approximately the same energy.


In the next two sections, we will explore the correlations above to see how various important engineering parameters affect flame lengths.

## Flowrate and Geometry Effects

Figure 9.9 compares flame lengths for a circular-port burner with slot burners having various exit aspect ratios,  $h/b$ , with all burners having the same port area. With the port area fixed, the mean exit velocity is the same for each configuration. From the figure, we see the linear dependence of flame length on flowrate for the circular port and the somewhat greater-than-linear dependence for the slot burners. For the conditions selected, flame Froude numbers are quite small, and, hence, the flames are dominated by buoyancy. As the slot-burner ports become more narrow ( $h/d$  increasing), the flames become significantly shorter for the same flowrate.

## Factors Affecting Stoichiometry

The molar stoichiometric ratio,  $S$ , employed in the above expressions is defined in terms of the nozzle fluid and the surrounding reservoir fluid, i.e.,

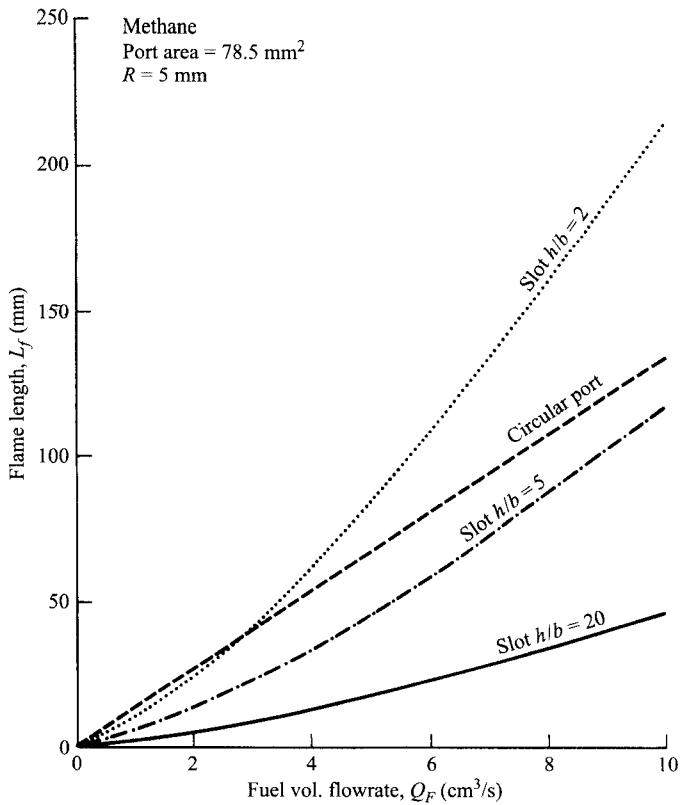

**Figure 9.9** Predicted flame lengths for circular and slot burners having equal port areas.

$$S = \left( \frac{\text{moles ambient fluid}}{\text{moles nozzle fluid}} \right)_{\text{stoic}}. \quad (9.71)$$

Thus,  $S$  depends on the chemical compositions of both the nozzle-fluid stream and the surrounding fluid. For example, the values of  $S$  would be different for a pure fuel burning in air and a nitrogen-diluted fuel burning in air. Similarly, the mole fraction of oxygen in the ambient also affects  $S$ . In many applications, the following parameters, all of which affect  $S$ , are of interest.

**Fuel Type** The molar stoichiometric air-fuel ratio for a pure fuel can be calculated by applying simple atom balances (cf. Chapter 2). For a generic hydrocarbon,  $C_xH_y$ , the stoichiometric ratio can be expressed as


$$S = \frac{x + y/4}{\chi_{O_2}}, \quad (9.72)$$

where  $\chi_{O_2}$  is the mole fraction of oxygen in the air.

Figure 9.10 shows flame lengths, relative to methane, for hydrogen, carbon monoxide, and the C<sub>1</sub>–C<sub>4</sub> paraffins, calculated using the circular-port expression, Eqn. 9.60, assuming equal flowrates for all fuels. Note that in using this expression, it is assumed that the same mean diffusivity applies to all of the mixtures, which is only approximately true. For hydrogen, this assumption may not be very good at all.

From Fig. 9.10, we see that flame lengths increase as the H/C ratio of the fuel decreases. For example, the propane flame is nearly 2½ times as long as the methane flame. The flame lengths of the higher hydrocarbons, within a hydrocarbon family, do not differ greatly since the H/C ratios change much less with the addition of each C atom in comparison with the light hydrocarbons. We also see from Fig. 9.10 that carbon monoxide and hydrogen flames are much smaller than the hydrocarbon flames.

**Primary Aeration** Gas-burning appliances premix some air with the fuel gas before it burns as a laminar jet diffusion flame. This **primary aeration**, which is typically 40–60 percent of the stoichiometric air requirement, makes the flames short and prevents soot from forming, resulting in the familiar blue flame. The maximum amount of air that can be added is limited by safety considerations. If too much air is added, the rich flammability limit may be exceeded, which implies that the mixture will support a premixed flame. Depending on flow conditions and burner geometry, this flame may propagate upstream, a condi-

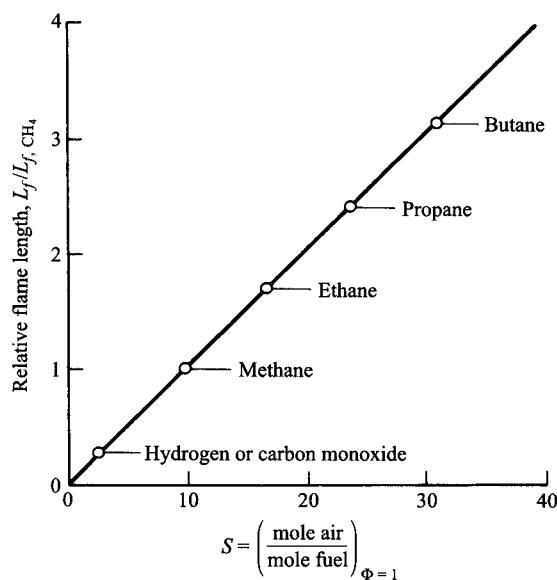

**Figure 9.10** Dependence of flame length on fuel stoichiometry. Flame lengths for various fuels are shown relative to methane.


tion referred to as **flashback**. If the flow velocity is too great for flashback to occur, an inner premixed flame will form inside the diffusion flame envelope, as in the Bunsen burner. Flashback limits are illustrated in Fig. 8.23.

Figure 9.11 shows the effect of primary aeration on the length of methane flames on circular-port burners. Note that in the range of 40–60 percent primary aeration, flame lengths are reduced approximately 85–90 percent from their original no-air-added lengths. The stoichiometric ratio  $S$ , defined by Eqn. 9.71, can be evaluated for the case of primary air addition by treating the “fuel”, i.e., the nozzle fluid, as a mixture of the true fuel and primary air:


$$S = \frac{1 - \psi_{pri}}{\psi_{pri} + (1/S_{\text{pure}})}, \quad (9.73)$$

where  $\psi_{pri}$  is the fraction of the stoichiometric requirement met by the primary air, i.e., the primary aeration, and  $S_{\text{pure}}$  is the molar stoichiometric ratio associated with the pure fuel.

**Oxygen Content of Oxidizer** The amount of oxygen in the oxidizer has a strong influence on flame lengths, as can be seen in Fig. 9.12. Small reductions in  $O_2$  content from the nominal 21 percent value for air result in greatly lengthened flames. With a pure- $O_2$  oxidizer, flame lengths for methane are

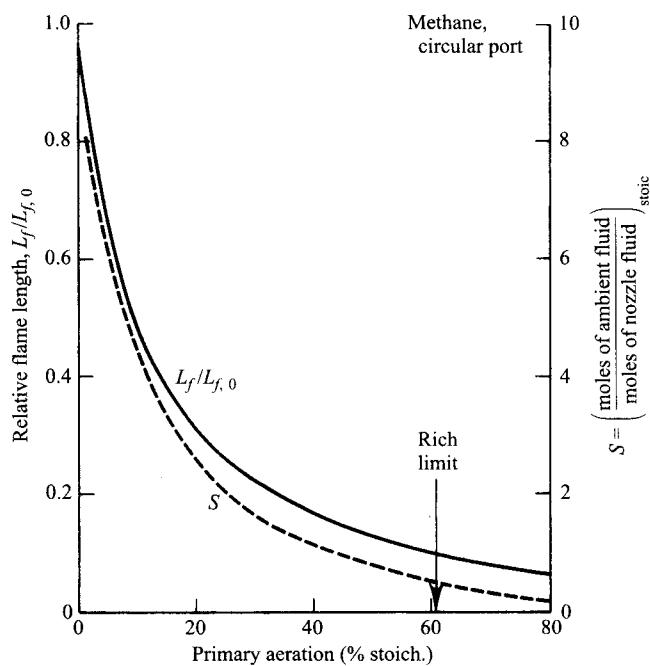

**Figure 9.11** Effect of primary aeration on laminar jet flame lengths. For primary aerations greater than the rich limit, premixed burning (and flashback) is possible.

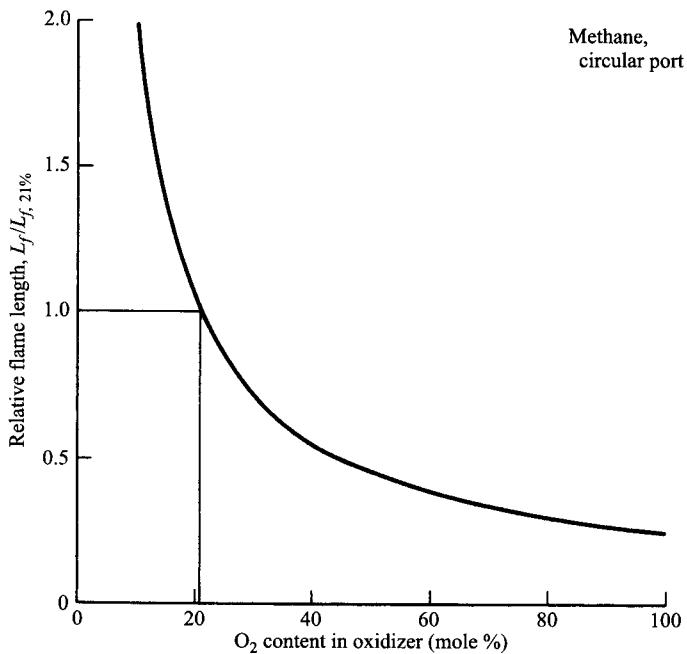

**Figure 9.12** Effect of oxygen content in the oxidizing stream on flame length.

about one-quarter their value in air. To calculate the effect of O<sub>2</sub> content, Eqn. 9.72 can be used to evaluate the stoichiometric ratio for hydrocarbon fuels.

**Fuel Dilution with Inert Gas** Diluting the fuel with an inert gas also has the effect of reducing flame length via its influence on the stoichiometric ratio. For hydrocarbon fuels,

$$S = \frac{x + y/4}{\left(\frac{1}{1 - \chi_{\text{dil}}}\right)\chi_{\text{O}_2}}, \quad (9.74)$$

where  $\chi_{\text{dil}}$  is the diluent mole fraction in the fuel stream.

**Example 9.4**

Design a natural-gas burner for a commercial cooking range that has a number of circular ports arranged in a circle. The circle diameter is constrained to be 160 mm (6.3 in.). The burner must deliver 2.2 kW at full load and operate with 40 percent primary aeration. For stable operation, the loading of an individual port should not exceed 10 W per mm<sup>2</sup> of port area. (See Fig. 8.23 for typical design constraints for natural-gas burners.) Also, the full-load flame height should not exceed 20 mm. Determine the number and the diameter of the ports.

**Solution**

We will assume that the fuel gas is methane, although for an accurate design, actual natural-gas properties should be used. Our overall strategy will be to relate the number of ports,  $N$ , and their diameter,  $D$ , to the port loading constraint; choose an  $N$  and  $D$  that satisfy this constraint; and then check to see if the flame-length constraint is violated. Having a design that meets these two constraints, we will check to see that the overall design makes physical sense.

*Step 1.* Apply port loading constraint. The total port area is

$$A_{\text{tot}} = N\pi D^2/4$$

and the constraint is

$$\frac{\dot{m}_F \Delta h_c}{A_{\text{tot}}} = \frac{2200 \text{ W}}{A_{\text{tot}} (\text{mm}^2)} = 10 \text{ W/mm}^2;$$

thus,

$$ND^2 = \frac{4(2200)}{10\pi} = 280 \text{ mm}^2.$$

At this point, we can choose (more or less arbitrarily) a value for  $N$  (or  $D$ ) and calculate  $D$  (or  $N$ ) as a first trial for the design. Choosing  $N = 36$  yields  $D = 2.79 \text{ mm}$ .

*Step 2.* Determine flow rates. The design heat-release rate determines the fuel flow-rate:

$$\begin{aligned}\dot{Q} &= 2200 \text{ W} = \dot{m}_F \Delta h_c \\ \dot{m}_F &= \frac{2200 \text{ W}}{50,016,000 \text{ J/kg}} = 4.4 \cdot 10^{-5} \text{ kg/s.}\end{aligned}$$

The primary aeration determines the flowrate of air premixed with the fuel:

$$\begin{aligned}\dot{m}_{A,pri} &= 0.40 (A/F)_{\text{stoic}} \dot{m}_F \\ &= 0.40 (17.1) 4.4 \cdot 10^{-5} = 3.01 \cdot 10^{-4} \text{ kg/s.}\end{aligned}$$

The total volumetric flowrate is

$$Q_{\text{TOT}} = (\dot{m}_{A,pri} + \dot{m}_F)/\bar{\rho}.$$

To determine  $\bar{\rho}$ , we apply the ideal-gas law where the mean molecular weight is calculated from the composition of the air-fuel mixture:

$$\chi_{A,pri} = \frac{N_A}{N_A + N_F} = \frac{Z}{Z + 1},$$

where  $Z$  is the primary molar air-fuel ratio:

$$\begin{aligned}Z &= (x + y/4) 4.76 (\% \text{ aeration}/100) \\ &= (1 + 4/4)(4.76)(40/100) \\ &= 3.81.\end{aligned}$$

Thus,

$$\chi_{A,pri} = \frac{3.81}{3.81 + 1} = 0.792,$$

$$\chi_{F,pri} = 1 - \chi_A = 0.208,$$

$$MW_{\text{mix}} = 0.792(28.85) + 0.208(16.04) = 26.19,$$

$$\bar{\rho} = \frac{P}{\left(\frac{R_u}{MW_{\text{mix}}}\right)T} = \frac{101,325}{\left(\frac{8315}{26.19}\right)300} = 1.064 \text{ kg/m}^3$$

and

$$Q_{\text{TOT}} = \frac{3.01 \cdot 10^{-4} + 4.4 \cdot 10^{-5}}{1.064} = 3.24 \cdot 10^{-4} \text{ m}^3/\text{s}.$$

*Step 3.* Check flame length constraint. The flowrate per port is

$$\begin{aligned} Q_{\text{PORT}} &= Q_{\text{TOT}}/N = 3.24 \cdot 10^{-4}/36 \\ &= 9 \cdot 10^{-6} \text{ m}^3/\text{s}. \end{aligned}$$

The molar ambient-air to nozzle-fluid stoichiometric ratio,  $S$ , is given by Eqn. 9.73 and evaluated as

$$S = \frac{1 - \psi_{pri}}{\psi_{pri} + (1/S_{\text{pure}})} = \frac{1 - 0.40}{0.40 + (1/9.52)} = 1.19.$$

We can calculate the flame length using Eqn. 9.60:

$$\begin{aligned} L_f &= 1330 \frac{Q_F(T_{\infty}/T_F)}{\ln(1 + 1/S)} \\ &= \frac{1330 (9 \cdot 10^{-6})(300/300)}{\ln(1 + 1/1.19)} = 0.0196 \text{ m} \\ &= 19.6 \text{ mm}. \end{aligned}$$

A flame length of 19.6 mm meets our requirement of  $L_f \leq 20$  mm.

*Step 4.* Check practicability of design. If we arrange 36 ports equally spaced on a 160-mm-diameter circle, the spacing between ports is

$$\begin{aligned} l &= r\theta = \frac{160}{2} (\text{mm}) \frac{2\pi}{36} (\text{rad}) \\ &= 14 \text{ mm}. \end{aligned}$$


#### Comment

This spacing seems reasonable, although it is not clear whether or not the flames will form independently or merge. If the flames merge, our method of estimating flame height would not be valid. Since all of the constraints are satisfied with the 36-port design, iteration is not required.

## SOOT FORMATION AND DESTRUCTION

As mentioned in our overview of laminar flame structure at the beginning of this chapter, the formation and destruction of soot is an important feature of non-premixed hydrocarbon-air flames. The incandescent soot within the flame is the primary source of the diffusion flames' luminosity, and the oil lamp is a prime example of a practical application dating back to ancient times. Soot also contributes to radiant heat losses from flames, with peak emission at wavelengths in the infrared region of the spectrum. Although soot formation in practical applications of laminar diffusion flames, e.g., in gas ranges, is to be avoided, the laminar diffusion flame is frequently used as a research tool in fundamental studies of soot formation in combustion systems and, hence, has a large literature associated with it. References [20–25] provide general reviews of soot formation in combustion.

It is generally agreed that soot is formed in diffusion flames over a limited range of temperatures, say,  $1300\text{ K} < T < 1600\text{ K}$ . Figure 9.13 illustrates this

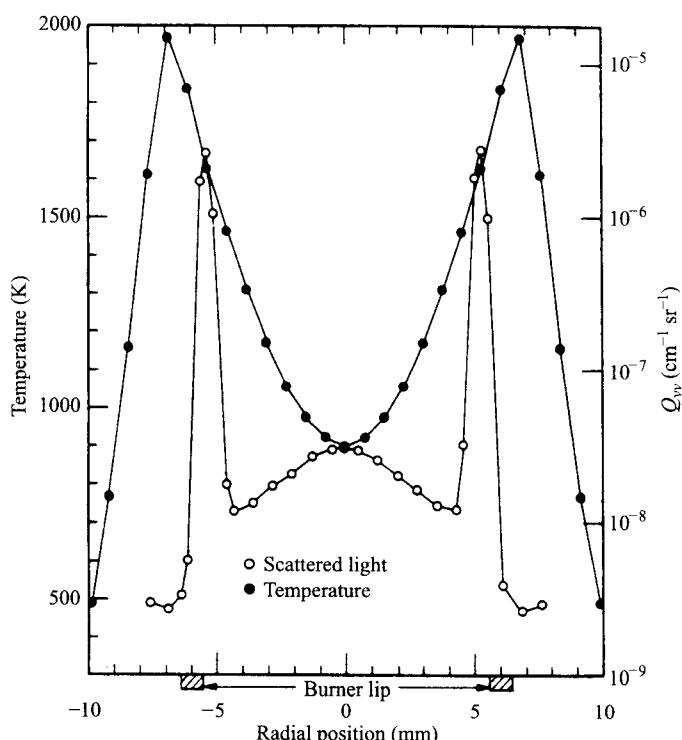


**Figure 9.13** Radial profiles of temperature and scattered light for a laminar ethylene jet diffusion flame. Soot is contained in the region where the scattered light intensity is high.  
| SOURCE: Reprinted from Ref. [1] by permission of Gordon & Breach Science Publishers, © 1987.

point for an ethylene jet flame. Here we see radial temperature profiles measured at an axial location between the burner and the flame tip. Also shown are measurements of light scattered by soot particles, where the two peaks correspond to regions containing significant amounts of soot. Note that the soot peaks are at radial locations interior to the temperature peaks and correspond to temperatures of about 1600 K. The soot region is very narrow and confined to a restricted range of temperatures. Although the chemistry and physics of soot formation in diffusion flames is exceedingly complex, the view has emerged that soot formation proceeds in a four-step sequence:

1. Formation of precursor species.
2. Particle inception.
3. Surface growth and particle agglomeration.
4. Particle oxidation.

In the first step, the formation of soot precursor species, polycyclic aromatic hydrocarbons (PAH) are thought to be important intermediates between the original fuel molecule and what can be considered a primary soot particle [20]. Chemical kinetics plays an important role in this first step. Although the detailed chemical mechanisms involved and the identity of the specific precursors are still subjects of research, the formation of ring structures and their growth via reactions with acetylene have been identified as important processes. The particle inception step involves the formation of small particles of a critical size (3000–10,000 atomic mass units) from growth by both chemical means and coagulation. It is in this step that large molecules are transformed to, or become identified as, particles. When the small primary soot particles continue to be exposed to the bath of species from the pyrolyzing fuel as they travel through the flame, they experience surface growth and agglomeration, the third step. At some point in their history, the soot particles must pass through an oxidizing region of the flame. For a jet flame, this region is invariably the flame tip, since the soot is always formed interior to the reaction zone lower in the flame, and the flow streamlines, which the particles largely follow, do not cross the reaction zone until near the flame tip [1]. If all of the soot particles are oxidized, the flame is termed nonsooting, while, conversely, incomplete oxidation yields a sooting flame. Figure 9.14 illustrates sooting and nonsooting conditions for nonpremixed laminar propylene and butane fuels. The nonzero value of the soot volume fraction beyond the flame tip ( $x/x_{\text{stoic}} \geq 1.1$ ) indicates a sooting flame.

As suggested by Fig. 9.14, the amount of soot formed in a diffusion flame is strongly dependent on fuel type. An experimentally determined measure of a fuel's tendency to soot is the so-called **smoke point**. The smoke-point test was originally devised for liquid fuels and has also been used to characterize gaseous fuels. The basic concept is to increase the fuel flowrate until smoke is observed to escape from the flame tip. The greater the fuel flowrate at the

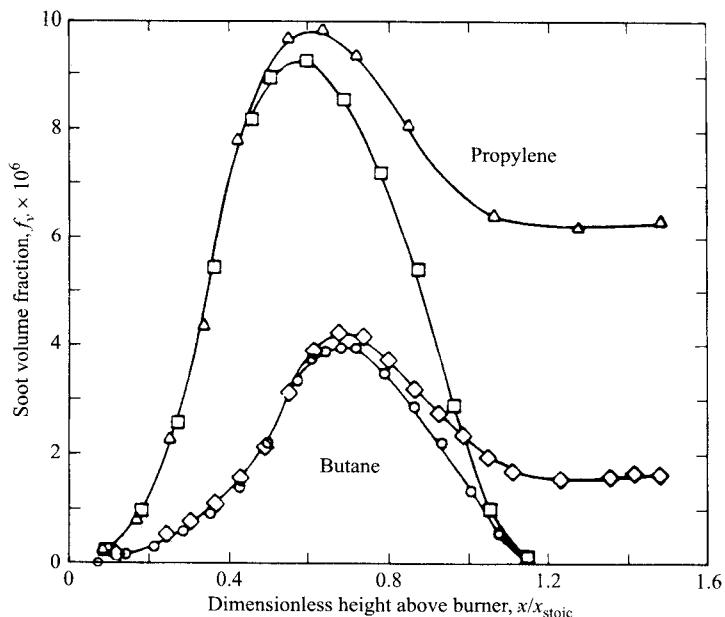

**Figure 9.14** Measured soot volume fractions as functions of height above burner for propylene and butane at both sooting and nonsooting conditions.

SOURCE: Reprinted by permission of Elsevier Science, Inc., from Ref. [26]. © 1986, The Combustion Institute.

incipient sooting condition, the lower the sooting propensity of the fuel. Sometimes smoke points are expressed as the height of the flame at the incipient sooting condition. As with flowrates, the larger the flame height, the lower the sooting propensity. Table 9.5, from Kent [26], lists smoke points for a large number of fuels. It is interesting to note that methane does not appear on the list since it is not possible to produce a stable sooting laminar methane flame.

If we group the fuels listed in Table 9.5 by families, we note that the fuel sooting propensities, from least to greatest, are in the order of alkanes, alkenes, alkynes, and aromatics. Table 9.6 shows these groupings. Quite obviously, the parent-fuel molecular structure is very important in determining the fuel's sooting propensity, and the groupings given above are consistent with the ideas that ring compounds and their growth via acetylene are important features of soot-formation chemistry. In the design of practical burners, soot formation is generally avoided altogether. The effects of port loading and primary aeration on the "yellow-tip" zone conditions, where soot is formed within the flame, are shown for natural gas and for manufactured gas flames in Fig. 8.23.

**Table 9.5** Smoke points,  $\dot{m}_{sp}$ ; maximum soot volume fractions,  $f_{v,m}$ ; and maximum soot yields,  $Y_s$ , for selected fuels<sup>a</sup>

Fuel		$\dot{m}_{sp}$ (mg/s)	$f_{v,m} \times 10^6$	$Y_s$ (%)
Acetylene	$C_2H_2$	0.51	15.3	23
Ethylene	$C_2H_4$	3.84	5.9	12
Propylene	$C_3H_6$	1.12	10.0	16
Propane	$C_3H_8$	7.87	3.7	9
Butane	$C_4H_{10}$	7.00	4.2	10
Cyclohexane	$C_6H_{12}$	2.23	7.8	19
<i>n</i> -Heptane	$C_7H_{16}$	5.13	4.6	12
Cyclooctane	$C_8H_{16}$	2.07	10.1	20
Isooctane	$C_8H_{18}$	1.57	9.9	27
Decalin	$C_{10}H_{18}$	0.77	15.4	31
4-Methylcyclohexene	$C_7H_{12}$	1.00	13.3	22
1-Octene	$C_8H_{16}$	1.73	9.2	25
1-Decene	$C_{10}H_{20}$	1.77	9.9	27
1-Hexadecene	$C_{16}H_{32}$	1.93	9.2	22
1-Heptyne	$C_7H_{12}$	0.65	14.7	30
1-Decyne	$C_{10}H_{18}$	0.80	14.7	30
Toluene	$C_7H_8$	0.27	19.1	38
Styrene	$C_8H_8$	0.22	17.9	40
<i>o</i> -Xylene	$C_8H_{10}$	0.28	20.0	37
1-Phenyl-1-propyne	$C_9H_8$	0.15	24.8	42
Indene	$C_9H_8$	0.18	20.5	33
<i>n</i> -Butylbenzene	$C_{10}H_{14}$	0.27	14.5	29
1-Methylnaphthalene	$C_{11}H_{10}$	0.17	22.1	41

<sup>a</sup>SOURCE: From Ref. [26].**Table 9.6** Smoke points by hydrocarbon family<sup>a</sup>


Alkanes		Alkenes		Alkynes		Aliphatic aromatics	
Fuel	$\dot{m}_{sp}$ <sup>b</sup>	Fuel	$\dot{m}_{sp}$ <sup>b</sup>	Fuel	$\dot{m}_{sp}$ <sup>b</sup>	Fuel	$\dot{m}_{sp}$ <sup>b</sup>
Propane	7.87	Ethylene	3.84	Acetylene	0.51	Toluene	0.27
Butane	7.00	Propylene	1.12	1-Heptyne	0.65	Styrene	0.22
<i>n</i> -Heptane	5.13	1-Octene	1.73	1-Decyne	0.80	<i>o</i> -Xylene	0.28
Isooctane	1.57	1-Decene	1.77			<i>n</i> -Butylbenzene	0.27
		1-Hexadecene	1.93				

<sup>a</sup>SOURCE: Data from Ref. [26].<sup>b</sup>Smoke point flowrate in mg/s.

## COUNTERFLOW FLAMES<sup>1</sup>

In the past few decades, many theoretical and experimental studies have been conducted on flames fed by opposing jets of fuel and oxidizer (Fig. 9.15). Such flames are of fundamental research interest because they approximate a one-dimensional character and because residence times within the flame zone can be easily varied. In the previous section, we saw the complexities associated with the 2-D (axisymmetric) jet flame; in contrast, the one-dimensionality of the counterflow flame makes both experiments and calculations much more practicable. For example, in experiments, temperature and species conservation measurements need only be made along a single line; while in theoretical studies, only modest run times are needed for computations using extremely complex chemical kinetics (cf. Table 5.3). The counterflow flame provides fundamental understanding of the detailed structure of diffusion flames and their extinction characteristics. Furthermore, the laminar counterflow flame has been proposed as a fundamental element in the complex structure of turbulent non-premixed flames [27] (Chapter 13). A rather large counterflow flame literature has developed (e.g., Refs. [28–31]), and continues to expand.

Before we present a mathematical description, it is important to understand the basic features of the counterflow flame. A typical experimental arrangement is illustrated in Fig. 9.15. Here we see opposing jets of fuel and oxidizer, which create a stagnation plane ( $v_x = 0$ ) whose location depends on the relative magnitudes of the oxidizer and fuel jet initial momentum fluxes. For equal momentum fluxes ( $\dot{m}_F v_F = \dot{m}_{Ox} v_{Ox}$ ), the stagnation plane lies at the midpoint between the nozzle exit planes; however, if the momentum flux of one

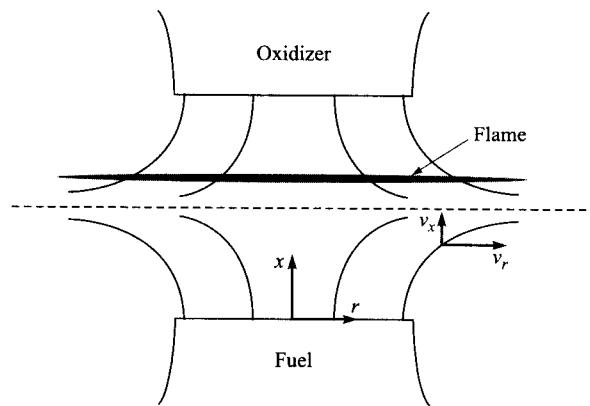

**Figure 9.15** Counterflow diffusion flame lies above stagnation plane (dashed line) created by opposing streams of fuel and oxidizer.

| <sup>1</sup>This section may be skipped without any loss of continuity.

stream is increased over the other, the stagnation plane moves closer to the low-momentum-flux stream outlet. Given appropriate conditions, a diffusion flame can be established between the two nozzles, the location of which is where the mixture fraction is nominally stoichiometric. For most hydrocarbon fuels burning in air, stoichiometric conditions require considerably more air than fuel ( $f_{\text{stoic}} \approx 0.06$ ). In this case, then, the fuel must diffuse across the stagnation plane to the flame location, as shown in Fig. 9.15. Conversely, if a reactant pair in which more fuel than oxidizer is required for stoichiometric conditions ( $f_{\text{stoic}} > 0.5$ ), the flame would lie on the fuel side of the stagnation plane. An important characteristic of the opposed flow is that the flame established between the nozzles is essentially flat (a disk for round nozzles) and one-dimensional, having dependencies only in the  $x$ -direction.

### Mathematical Description

Two different approaches to modeling counterflow flames can be found in the literature. The first approach couples a stagnation-point potential flow from a point source at infinity with a boundary-layer type analysis (see, e.g., Ref. [31]). In this analysis, the finite separation between the nozzles cannot be taken into account. A second approach [32, 33] was developed that explicitly accounts for the flows exiting from the nozzles rather than being generated by a far-removed point source. The initial formulation of this model was developed for premixed flames [32] and, subsequently, was extended to nonpremixed flames [33]. This second approach is summarized briefly below. For additional details, the reader is referred to the original references [32, 33]. After presenting the model, we will examine the detailed structure of a CH<sub>4</sub>-air diffusion generated by a numerical solution.

The overall objective of the analysis is to transform the set of axisymmetric, governing, partial differential equations into a coupled system of ordinary differential equations, cast as a boundary-value problem. The continuity and conservation of momentum equations used as the starting point for the analysis are the axisymmetric forms given in Chapter 7: Eqn. 7.7 for mass conservation and Eqns. 7.43 and 7.44 for axial and radial momentum, respectively. To effect the desired transformation, the following stream function is employed:

$$\Psi \equiv r^2 F(x), \quad (9.75)$$

where

$$\frac{\partial \Psi}{\partial r} = r \rho v_x = 2rF \quad (9.76a)$$

and

$$-\frac{\partial \Psi}{\partial x} = r \rho v_r = -r^2 \frac{dF}{dx}. \quad (9.76b)$$

From the above, it is a simple matter to show that the stream function (Eqn. 9.75) satisfies continuity (Eqn. 7.7). To reduce the order of the radial momentum equation, discussed below, a new variable  $G (\equiv dF/dx)$  is defined. This defining equation is the first ordinary differential equation in our set:

$$\frac{dF}{dx} = G. \quad (9.77)$$

Equations 9.76a, 9.76b, and 9.77 are now substituted into the momentum conservation relations, Eqns. 7.43 and 7.44, but buoyancy is ignored. The equations resulting from this substitution are of the following form:

$$\frac{\partial P}{\partial x} = f_1(x) \quad (9.78a)$$

$$\frac{1}{r} \frac{\partial P}{\partial r} = f_2(x). \quad (9.78b)$$

This result is used to generate an eigenvalue equation for the radial pressure gradient. From mathematical operations alone, we can relate the left-hand-sides of Eqns. 9.78a and 9.78b:

$$\frac{\partial}{\partial x} \left( \frac{1}{r} \frac{\partial P}{\partial r} \right) = \frac{1}{r} \frac{\partial}{\partial x} \left( \frac{\partial P}{\partial r} \right) = \frac{1}{r} \frac{\partial}{\partial r} \left( \frac{\partial P}{\partial x} \right).$$

Furthermore, since both  $\partial P / \partial x$  and  $(1/r)(\partial P / \partial r)$  are functions of  $x$  only, it follows that

$$\frac{\partial}{\partial x} \left( \frac{1}{r} \frac{\partial P}{\partial r} \right) = \frac{1}{r} \frac{\partial}{\partial r} \left( \frac{\partial P}{\partial x} \right) = 0 \quad (9.79)$$

and

$$\frac{1}{r} \frac{\partial P}{\partial r} = \text{constant} \equiv H. \quad (9.80)$$

The radial-pressure-gradient eigenvalue,  $H$ , thus enters into the set of ordinary differential equations as

$$\frac{dH}{dx} = 0. \quad (9.81)$$

Since the pressure is uniform throughout the flowfield (low Mach-number approximation), we have no further use for the axial momentum equation (Eqn. 9.78a); the radial momentum equation, however, must be retained. Substituting Eqn. 9.80 into Eqn. 9.78b and fleshing out the right-hand-side results in the following:

$$\frac{d}{dx} \left[ \mu \frac{d}{dx} \left( \frac{G}{\rho} \right) \right] - 2 \frac{d}{dx} \left( \frac{FG}{\rho} \right) + \frac{3}{\rho} G^2 + H = 0. \quad (9.82)$$

The corresponding energy and species conservation equations are, respectively,

$$2Fc_p \frac{dT}{dx} - \frac{d}{dx} \left( k \frac{dT}{dx} \right) + \sum_{i=1}^N \rho Y_i v_{i,\text{diff}} c_{p,i} \frac{dT}{dx} - \sum_{i=1}^N h_i \dot{\omega}_i M W_i = 0 \quad (9.83)$$

and

$$2F \frac{dY_i}{dx} + \frac{d}{dx} (\rho Y_i v_{i,\text{diff}}) - \dot{\omega}_i M W_i = 0 \quad i = 1, 2, \dots, N. \quad (9.84)$$

In summary, the counterflow diffusion flame model consists of the set of five ordinary differential equations (Eqns. 9.77, 9.81, 9.82, 9.83, and 9.84) for the four functions  $F(x)$ ,  $G(x)$ ,  $T(x)$ , and  $Y_i(x)$  and the eigenvalue,  $H$ . In addition to these basic equations, the following ancillary relations or data are required:


- Ideal-gas equation of state (Eqn. 2.2).
- Constitutive relations for diffusion velocities (Eqns. 7.23 and 7.25 or Eqn. 7.31).
- Temperature-dependent species properties:  $h_i(T)$ ,  $c_{p,i}(T)$ ,  $k_i(T)$ , and  $D_{ij}(T)$ .
- Mixture property relations to calculate  $MW_{\text{mix}}$ ,  $k$ ,  $D_{ij}$ , and  $D_i^T$  from individual species properties and mole (or mass) fractions (e.g., for the  $D_{ij}$ s, Eqn. 7.26).
- A detailed chemical kinetic mechanism to obtain the  $\dot{\omega}_i$ s (e.g., Table 5.3).
- Interconversion relations for  $\chi_i$ s,  $Y_i$ s, and  $[X_i]$ s (Eqns. 6A.1–6A.10).

Boundary conditions are applied at the two nozzle exits (Fig. 9.15), defined as  $x \equiv 0$  at the fuel-nozzle exit and  $x \equiv L$  at the oxidizer-nozzle exit, to complete the formulation of the boundary-value problem. The necessary conditions are the exit velocities and their gradients, exit temperatures, and exit species mass fractions (or mass flux fractions), which we specify as follows:

At $x = 0$ :	At $x = L$ :	(9.85)
$F = \rho_F v_{e,F} / 2$ ,	$F = \rho_{Ox} v_{e,Ox} / 2$ ,	
$G = 0$ ,	$G = 0$ ,	
$T = T_F$ ,	$T = T_{Ox}$ ,	
$\rho v_x Y_i + \rho Y_i v_{i,\text{diff}} = (\rho v_x Y_i)_F$ ;	$\rho v_x Y_i + \rho Y_i v_{i,\text{diff}} = (\rho v_x Y_i)_{Ox}$ .	

### Structure of CH<sub>4</sub>–Air Flame

We now employ the counterflow flame model described above to analyze the structure of a CH<sub>4</sub>–air diffusion flame. The OPPDIF software described in Ref. [33], together with the CHEMKIN library codes [34], were used with chemical kinetics taken from Miller and Bowman [35]. Figure 9.16 shows computed

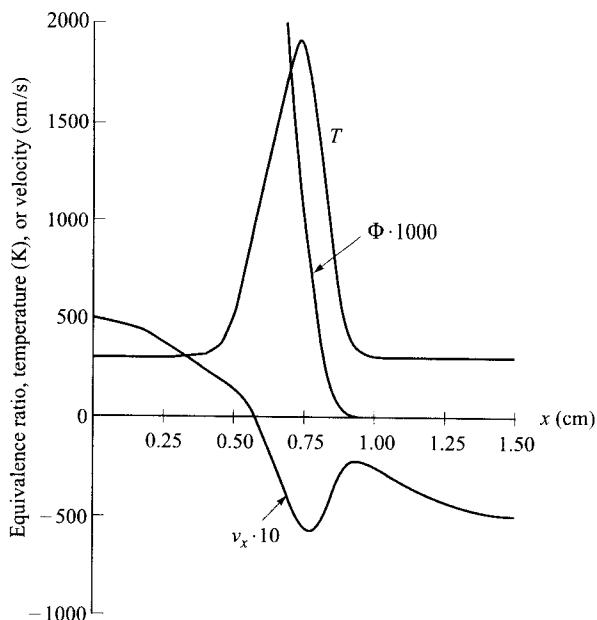


**Figure 9.16** Equivalence ratio, temperature, and velocity profiles through  $\text{CH}_4$ -air counterflow diffusion flame. The  $\text{CH}_4$  and air streams both exit at 50 cm/s;  $L = 1.5$  cm.

temperature and velocity profiles between the fuel (left) and air (right) nozzles, while Fig. 9.17 presents corresponding major species mole-fraction profiles. Also shown in Fig. 9.16 is the local equivalence ratio computed from carbon and nitrogen balances.

Focusing on the velocity profile, we see in Fig. 9.16 that the stagnation plane ( $v_x = 0$ ) lies to the left of the center plane between the two nozzle flows, as expected, since the higher density of air causes the momentum flux of the air stream to be greater than that of the fuel stream for equal outlet velocities (50 cm/s). The velocity profile exhibits interesting behavior in the heat-release region of the flame, where a minimum value ( $v_x = -57.6$  cm/s) occurs slightly to the air side of the peak temperature. We note that this is the maximum absolute value of the velocity, as velocities directed to the left are negative. Simplistically, this result is understood as a consequence of continuity, with the gas speed increasing in response to the density decreasing. Frequently, a velocity gradient,  $dv_x/dx$ , is used to characterize the strain rate in counterflow flames; for the twin-nozzle geometry, the relatively long region of essentially constant slope before the velocity minimum is used as the characteristic gradient. For the particular case illustrated in Fig. 9.16, the value of the velocity gradient is approximately  $360 \text{ s}^{-1}$ .

As essential feature of nonpremixed flame is a continuous variation of the mixture fraction,  $f$ , or, alternatively, the equivalence ratio,  $\Phi$ , from pure fuel at

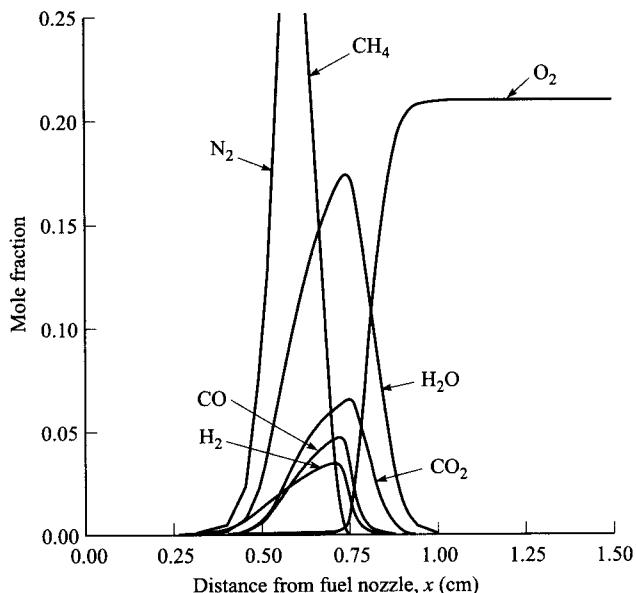

**Figure 9.17** Major species mole-fraction profiles through  $\text{CH}_4$ -air counterflow flame. Same conditions as Fig. 9.16.

the left nozzle ( $f = 1$ ,  $\Phi \rightarrow \infty$ ), to pure air at the right nozzle ( $f = 0$ ,  $\Phi = 0$ ). Figure 9.16 shows this variation of equivalence ratio over the range from 2 to zero. A close inspection of Fig. 9.16 reveals that the location of the maximum temperature occurs at a slightly rich stoichiometry ( $\Phi = 1.148$ ), with temperatures about 40 K lower at  $\Phi = 1$ . From thermodynamic considerations alone, one expects peak temperatures to occur at slightly rich conditions (see Chapter 2). For our  $\text{CH}_4$ -air system, the peak adiabatic flame temperature occurs at  $\Phi = 1.035$ . This value of  $\Phi$  is considerably less rich than for the diffusion flame ( $\Phi = 1.148$ ), where convection, diffusion, and chemical kinetics all combine to determine the peak-temperature equivalence ratio.

Turning now to the species profiles (Fig. 9.17), we focus first on the reactants. Here we see that both  $\text{CH}_4$  and  $\text{O}_2$  mole fractions fall to near-zero values at an axial location of approximately 0.75 cm; this corresponds closely with the occurrence of the peak temperature, as can be seen from Fig. 9.16. We also note some overlap, or simultaneous presence of  $\text{CH}_4$  and  $\text{O}_2$ , however small, in the region immediately preceding the maximum temperature. For the particular conditions of this simulation, the combustion kinetics are not sufficiently fast to obtain a true approximation to a flamesheet; thus, a distributed reaction zone results. Another interesting reactants-related feature of Fig. 9.17 is the presence of  $\text{N}_2$  deep on the fuel side. Since all  $\text{N}_2$  in the flame system has its origins with the air, the  $\text{N}_2$  must diffuse across the stagnation plane to yield the relatively high concentrations we observe on the fuel side of the flame. Of

course, the presence of fuel to the right of the stagnation plane ( $x = 0.58$  cm) is a result of diffusion in the direction opposite to the  $\text{N}_2$ .

From Fig. 9.17, we see a progression of species mole-fraction maxima from left to right. This is illustrated more clearly by the data presented in Table 9.7, where we see that the  $\text{H}_2$  peak occurs at the richest condition of all species shown, followed by the peaks of  $\text{CO}$ ,  $\text{H}_2\text{O}$ , and  $\text{CO}_2$ . All of these maxima occur at rich equivalence ratios, as might be expected for all but the  $\text{CO}_2$ . Some effects of chemical kinetics can be illuminated by comparing the predicted mole fractions for the major species in the flame with equilibrium values based on identical temperatures and stoichiometry. Two such comparisons are shown in Table 9.8: the first, at the location of the maximum temperature, and the second, at the location of stoichiometric conditions. In both cases, we see substantially less  $\text{CO}_2$  and  $\text{H}_2\text{O}$  in the flame compared with the equilibrium conditions. With lower levels of fully oxidized products ( $\text{CO}_2$  and  $\text{H}_2\text{O}$ ) in the flame, one expects incomplete products of combustion to appear in greater abundance. At the  $\Phi = 1.0$  case, in particular,  $\text{CO}$ ,  $\text{H}_2$ , and  $\text{O}_2$  levels are approximately 15–20 times higher in the flame.

**Table 9.7** Location of peak species mole fractions and temperature in simulated  $\text{CH}_4$ -air counterflow diffusion flame

Species	Maximum Mole Fraction	Location of Maximum, $x$ (cm)	$\Phi$	$T$ (K)
$\text{H}_2$	0.0345	0.7074	1.736	1786.5
$\text{CO}$	0.0467	0.7230	1.411	1862.6
$\text{H}_2\text{O}$	0.1741	0.7455	1.165	1926.8
$\text{CO}_2$	0.0652	0.7522	1.085	1913.8

**Table 9.8** Comparison of flame composition with that for adiabatic equilibrium at locations of maximum temperature and stoichiometric mixture fraction ( $\Phi = 1$ )

Condition	$\text{O}_2$	$\text{CO}$	$\text{H}_2$	$\text{CO}_2$	$\text{H}_2\text{O}$	$\text{N}_2$
Flame	0.0062	0.0394	0.0212	0.0650	0.174	0.686
Adiabatic equilibrium	$2.15 \cdot 10^{-6}$	0.0333	0.0207	0.0714	0.189	0.686
				$T = T_{\max} (1925.8 \text{ K}), \Phi = 1.148$		
Flame	0.0148	0.0280	0.0132	0.0648	0.170	0.697
Adiabatic equilibrium	0.0009	0.0015	0.0007	0.0934	0.189	0.714
				$\Phi = 1.000, T = 1887.5 \text{ K}$		

## SUMMARY

This chapter opened with a discussion of laminar constant-density jets, whose behavior has much in common with laminar jet flames, but is easier to describe mathematically. You should be able to describe the general characteristics of the velocity and nozzle-fluid concentration fields of laminar jets and understand the Reynolds-number dependence of the spreading characteristics. We also saw that the nozzle-fluid concentration distribution is identical for equal flowrates, which translates to flame lengths depending only on flowrate for a given fuel–oxidizer combination. You should be able to describe the general characteristics of the temperature, fuel and oxidizer mass fractions, and velocity fields of laminar jet flames, and have a firm grasp of how stoichiometry determines the flame contour. The conserved scalar formulation of the laminar jet diffusion flame problem was developed and emphasized. This approach results in a considerable mathematical simplification. For historical perspective, we reviewed the theoretical Burke–Schumann and Fay solutions of the laminar jet flame problem and then focused on Roper’s simplified analyses, presenting flame length correlations for circular-, square-, and slot-port burners. You should be familiar with the use of these relationships. The Roper theory clearly showed the importance of the ambient oxidizer to nozzle-fluid stoichiometric ratio, which is determined by fuel type, O<sub>2</sub> content in the oxidizer, primary aeration, and fuel dilution by an inert gas. We also saw in this chapter how soot formation is an essential characteristic of diffusion flames, although soot formation can be avoided if residence times (flame lengths) are short enough. You should be familiar with the four-step sequence of soot formation and destruction occurring in flames and have an appreciation of the importance of fuel type (structure) in determining sooting propensities. The chapter concluded with a discussion of counterflow flames.

---

## NOMENCLATURE

$a$	Buoyant acceleration, Eqn. 9.67 (m/s <sup>2</sup> )
$A/F$	Mass air–fuel ratio
$b$	Port width, Table 9.3 (m)
$c_p$	Specific heat (J/kg-K)
$D_{ij}$	Multicomponent diffusion coefficient (m <sup>2</sup> /s)
$D_i^T$	Thermal diffusion coefficient (kg/m-s)
$\mathcal{D}_{ij}$	Binary diffusion coefficient (m <sup>2</sup> /s)
$f$	Mixture fraction (kg/kg)
$f_v$	Soot volume fraction
$F$	Function defined in Eqn. 9.76
$Fr$	Froude number, Eqn. 9.68
$g$	Gravitational acceleration (m/s <sup>2</sup> )

$G$	Function defined in Eqn. 9.77
$h$	Enthalpy (J/kg) or port length, Table 9.3 (m)
$h_f^o$	Enthalpy of formation (J/kg)
$H$	Radial momentum eigenvalue, Eqn. 9.86
$I$	Momentum flow ratio or momentum integral, Table 9.2
$J$	Momentum flow, Eqn. 9.1 (kg-m/s <sup>2</sup> )
$J_0, J_1$	Bessel functions
$k$	Thermal conductivity (W/m-K)
$L_f$	Flame length (m)
$Le$	Lewis number
$m$	Mass (kg)
$\dot{m}$	Mass flowrate (kg/s)
$MW$	Molecular weight (kg/kmol)
$N$	Number of moles (kmol)
$P$	Pressure (Pa)
$Pr$	Prandtl number
$Q$	Volumetric flowrate (m <sup>3</sup> /s)
$r$	Radial coordinate (m)
$r_{1/2}$	Radius at half-height (m)
$R$	Radius (m)
$R_o$	Outer flow radius, Eqn. 9.55 (m)
$R_u$	Universal gas constant (J/kmol-K)
$Re$	Reynolds number
$S$	Molar stoichiometric oxidizer to nozzle-fluid ratio (kmol/kmol)
$Sc$	Schmidt number
$T$	Temperature (K)
$v$	Velocity (m/s)
$v_r, v_x$	Radial and axial velocity components, respectively (m/s)
$x$	Axial coordinate (m) or number of carbon atoms in fuel molecule
$y$	Number of hydrogen atoms in fuel molecule
$Y$	Mass fraction (kg/kg)

### ***Greek Symbols***

$\alpha$	Spreading angle (rad) or thermal diffusivity (m <sup>2</sup> /s)
$\beta$	Defined following Eqn. 9.64
$\zeta$	General conserved scalar variable, Eqn. 9.42
$\mu$	Absolute viscosity (N-s/m <sup>2</sup> )
$\nu$	Kinematic viscosity (m <sup>2</sup> /s) or stoichiometric air-fuel ratio (kg/kg)
$\xi$	Defined by Eqn. 9.11
$\rho$	Density (kg/m <sup>3</sup> )
$\Phi$	Equivalence ratio
$\chi$	Mole fraction (kmol/kmol)
$\psi$	Primary aeration
$\Psi$	Stream function
$\omega$	Species production rate (kmol/m <sup>3</sup> -s)

***Subscripts***

act	Actual
<i>A</i>	Air
<i>B</i>	Buoyancy-controlled
<i>c</i>	Core
diff	Diffusion
dil	Diluent
<i>e</i>	Exit
expt	Experiment
<i>f</i>	Flame
<i>F</i>	Fuel
<i>i</i>	<i>i</i> th species
<i>j</i>	Jet
<i>m</i>	Maximum
mix	Mixture
<i>M</i>	Momentum-controlled
<i>Ox</i>	Oxidizer
<i>Pr</i>	Products
<i>pri</i>	Primary
pure	Pure fuel
ref	Reference
<i>sp</i>	Smoke point
stoic	Stoichiometric
thy	Theory
<i>T</i>	Transition
0	Centerline
$\infty$	Ambient

***Superscripts***

\* Nondimensional quantity

***Other Notation***

[*X*] Molar concentration of species *X* (kmol/m<sup>3</sup>)

---

**REFERENCES**

1. Santoro, R. J., Yeh, T. T., Horvath, J. J., and Semerjian, H. G., "The Transport and Growth of Soot Particles in Laminar Diffusion Flames," *Combustion Science and Technology*, 53: 89–115 (1987)
2. Santoro, R. J., and Semerjian, H. G., "Soot Formation in Diffusion Flames: Flow Rate, Fuel Species and Temperature Effects," *Twentieth Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, p. 997, 1984.

3. Santoro, R. J., Semerjian, H. G., and Dobbins, R. A., "Soot Particle Measurements in Diffusion Flames," *Combustion and Flame*, 51: 203–218 (1983).
4. Burke, S. P., and Schumann, T. E. W., "Diffusion Flames," *Industrial & Engineering Chemistry*, 20(10): 998–1004 (1928).
5. Fay, J. A., "The Distributions of Concentration and Temperature in a Laminar Jet Diffusion Flame," *Journal of Aeronautical Sciences*, 21: 681–689 (1954).
6. Roper, F. G., "The Prediction of Laminar Jet Diffusion Flame Sizes: Part I. Theoretical Model," *Combustion and Flame*, 29: 219–226 (1977).
7. Roper, F. G., Smith, C., and Cunningham, A. C., "The Prediction of Laminar Jet Diffusion Flame Sizes: Part II. Experimental Verification," *Combustion and Flame*, 29: 227–234 (1977).
8. Roper, F. G., "Laminar Diffusion Flame Sizes for Curved Slot Burners Giving Fan-Shaped Flames," *Combustion and Flame*, 31: 251–259 (1978).
9. Miller, J. A., and Kee, R. J., "Chemical Nonequilibrium Effects in Hydrogen–Air Laminar Jet Diffusion Flames," *Journal of Physical Chemistry*, 81(25): 2534–2542 (1977).
10. Kee, R. J., and Miller, J. A., "A Split-Operator, Finite-Difference Solution for Axisymmetric Laminar-Jet Diffusion Flames," *AIAA Journal*, 16(2): 169–176 (1978).
11. Mitchell, R. E., Sarofin, A. F., and Clomberg, L. A., "Experimental and Numerical Investigation of Confined Laminar Diffusion Flames," *Combustion and Flame*, 37: 227–244 (1980).
12. Heys, N. W., Roper, F. G., and Kayes, P. J., "A Mathematical Model of Laminar Axisymmetrical Natural Gas Flames," *Computers and Fluids*, 9: 85–103 (1981).
13. Smooke, M. D., Lin, P., Lam, J. K., and Long, M. B., "Computational and Experimental Study of a Laminar Axisymmetric Methane–Air Diffusion Flame," *Twenty-Third Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, p. 575, 1990.
14. Anon., *Fundamentals of Design of Atmospheric Gas Burner Ports*, Research Bulletin No. 13, American Gas Association Testing Laboratories, Cleveland, OH, August 1942.
15. Weber, E. J., and Vandaveer, F. E., "Gas Burner Design," Chapter 12 in *Gas Engineers Handbook*, The Industrial Press, New York, pp. 12/193–12/210, 1965.
16. Schlichting, H., *Boundary-Layer Theory*, 6th Ed., McGraw-Hill, New York, 1968.
17. Kuo, K. K., *Principles of Combustion*, John Wiley & Sons, New York, 1986.
18. Spalding, D. B., *Combustion and Mass Transfer*, Pergamon, New York, 1979.
19. Beyer, W. H. (ed.), *Standard Mathematical Tables*, 28th Ed., The Chemical Rubber Co., Cleveland, OH, 1987.
20. Glassman, I., "Soot Formation in Combustion Processes," *Twenty-Second Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, p. 295, 1988.

21. Wagner, H. G., "Soot Formation—An Overview," in *Particulate Carbon Formation During Combustion* (D. C. Siegla and G. W. Smith, eds.), Plenum Press, New York, p. 1, 1981.
22. Calcote, H. F., "Mechanisms of Soot Nucleation in Flames—A Critical Review," *Combustion and Flame*, 42: 215–242 (1981).
23. Haynes, B. S., and Wagner, H. G., "Soot Formation," *Progress in Energy and Combustion Science*, 7: 229–273 (1981).
24. Wagner, H. G., "Soot Formation in Combustion," *Seventeenth Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, p. 3, 1979.
25. Palmer, H. B., and Cullis, C. F., "The Formation of Carbon in Gases," *The Chemistry and Physics of Carbon* (P. L. Walker, Jr., ed.), Marcel Dekker, New York, p. 265, 1965.
26. Kent, J. H., "A Quantitative Relationship Between Soot Yield and Smoke Point Measurements," *Combustion and Flame*, 63: 349–358 (1986).
27. Marble, F. E., and Broadwell, J. E., "The Coherent Flames Model for Turbulent Chemical Reactions," *Project SQUID*, 29314-6001-RU-00, 1977.
28. Tsuji, H., and Yamaoka, I., "The Counterflow Diffusion Flame in the Forward Stagnation Region of a Porous Cylinder," *Eleventh Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, p. 979, 1967.
29. Hahn, W. A., and Wendt, J. O. L., "The Flat Laminar Opposed Jet Diffusion Flame: A Novel Tool for Kinetic Studies of Trace Species Formation," *Chemical Engineering Communications*, 9: 121–136 (1981).
30. Tsuji, H., "Counterflow Diffusion Flames," *Progress in Energy and Combustion Science*, 8: 93–119 (1982).
31. Dixon-Lewis, G., et al., "Calculation of the Structure and Extinction Limit of a Methane–Air Counterflow Diffusion Flame in the Forward Stagnation Region of a Porous Cylinder," *Twentieth Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, p. 1893, 1984.
32. Kee, R. J., Miller, J. A., Evans, G. H., and Dixon-Lewis, G., "A Computational Model of the Structure and Extinction of Strained, Opposed-Flow, Premixed Methane–Air Flames," *Twenty-Second Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, p. 1479, 1988.
33. Lutz, A. E., Kee, R. J., Grcar, J. F., and Rupley, F. M., "OPPDIF: A Fortran Program for Computing Opposed-Flow Diffusion Flames," Sandia National Laboratories Report SAND96-8243, 1997.
34. Kee, R. J., Rupley, F. M., and Miller, J. A., "Chemkin-II: A Fortran Chemical Kinetics Package for the Analysis of Gas-Phase Chemical Kinetics," Sandia National Laboratories Report SAND89-8009, March 1991.
35. Miller, J. A., and Bowman, C. T., "Mechanism and Modeling of Nitrogen Chemistry in Combustion," *Progress in Energy and Combustion Science*, 15: 287–338 (1989).

---

## REVIEW QUESTIONS

1. Make a list of all the bold-faced words in Chapter 9 and define each.
2. Describe the velocity and nozzle-fluid concentration fields of a constant-density laminar jet.
3. Describe the fields of temperature, and the fuel, oxidizer, and product mass fractions of a laminar jet flame.
4. Explain why the flame boundary is at the  $\Phi = 1$  contour. *Hint:* Consider what would happen if the flame boundary were slightly inside of the  $\Phi = 1$  contour ( $Y_{Ox} = 0, Y_F > 0$ ) or outside of the  $\Phi = 1$  contour ( $Y_F = 0, Y_{Ox} > 0$ ).
5. How do the combined assumptions of unity Lewis number and unity Schmidt number simplify the governing conservation equations for a laminar flame?
6. Explain what it means for a jet flame to be buoyancy- or momentum-controlled. What dimensionless parameter determines the flow regime? What is the physical meaning of this parameter?
7. Light a flame on a butane lighter. Hold the lighter at an angle from the vertical, being careful not to burn your fingers. What happens to the flame shape? Explain.
8. List and discuss the four steps involved in soot formation and destruction in diffusion flames.
9. Explain how the use of conserved scalars simplifies the mathematical description of laminar jet flames. What assumptions are required to effect these simplifications?

---

## PROBLEMS

- 9.1** Starting with the more general axial momentum equation for a reacting axisymmetric flow (Eqn. 7.48), derive the constant-property, constant-density form given by Eqn. 9.4. *Hint:* You will need to apply continuity.
- 9.2** Repeat problem 9.1 for species conservation, starting with Eqn. 7.20 to obtain Eqn. 9.5.
- 9.3** Using the definition of the volumetric flowrate ( $Q = v_e \pi R^2$ ), show that the centerline mass fraction  $Y_{F,0}$  for a laminar jet (Eqn. 9.18) depends only on  $Q$  and  $v_e$ .
- 9.4\*** Calculate the velocity decay for a jet with an initial top-hat velocity profile (Eqn. 9.13) and for a jet where the profile is parabolic, specifically,  $v(r) = 2v_e[1 - (r/R)^2]$ , where  $v_e$  is the mean velocity. Both jets have the same flowrates. Plot your results versus axial distance and discuss.

| \*Indicates optional use of computer.

- 9.5** Two isothermal (300 K, 1 atm) air-in-air laminar jets with different diameters have the same volumetric flowrates.
- Expressed in terms of  $R$ , what is the ratio of their Reynolds numbers?
  - For  $Q = 5 \text{ cm}^3/\text{s}$ , and  $R_1 = 3 \text{ mm}$  and  $R_2 = 5 \text{ mm}$  for the two jets, respectively, calculate and compare  $r_{1/2}/x$  and  $\alpha$  for the two jets.
  - Determine the axial location where the centerline fuel velocity has decayed to 1/10 of the nozzle-exit velocity for each jet.
- 9.6** The laminar jet spreading rate,  $r_{1/2}/x$ , defined in Eqn. 9.14 is based on  $r_{1/2}$ ; i.e., the radial location where the axial velocity is half the centerline value.
- Evaluate the spreading rate for  $r_{1/10}/x$ , where now the radial location is that where the axial velocity has decayed to one-tenth the value on the centerline. Compare  $r_{1/10}/x$  with  $r_{1/2}/x$ .
  - Determine the average velocity, normalized by the centerline velocity, over this portion of the jet; i.e., determine  $\bar{v}_x(0 \leq r \leq r_{1/10})/v_{x,o}$ .
- 9.7** From the definition of the mixture fraction,  $f$ , show that Eqn. 9.44a is correct.
- 9.8** Using isothermal jet theory, estimate the length of an ethane–air diffusion flame for an initial velocity of 5 cm/s. The velocity profile issuing from the 10-mm-diameter port is uniform. Both the air and ethane are at 300 K and 1 atm. The viscosity of ethane is approximately  $9.5 \cdot 10^{-6} \text{ N}\cdot\text{s}/\text{m}^2$ . Compare your estimate using an average viscosity,  $(\mu_{\text{air}} + \mu_{\text{ethane}})/2$ , with the predicted value from Roper's experimental correlations.
- 9.9** A circular-port and a square-port burner operate with the same mean velocities and produce the same flame lengths. What is the ratio of the circular-port diameter,  $D$ , to the length of a side  $b$ , of the square port? The fuel is methane.
- 9.10** Consider a slot burner with an aspect ratio  $h/b = 10$  and slot width  $b = 2 \text{ mm}$ . The slot has a contoured entrance that produces a uniform exit flow. Operating with methane, the burner has a heat release of 500 W. Determine the flame length.
- 9.11** Two circular-port burners have the same mean velocity  $\bar{v}_e$ , but the velocity profile of one burner is uniform, while the other has a parabolic distribution,  $v(r) = 2\bar{v}_e[1 - (r/R)^2]$ . Determine the ratio of the momentum flows of the two burners.
- 9.12** In a study of nitric oxide formation in laminar jet flames, the propane fuel is diluted with  $\text{N}_2$  to suppress soot formation. The nozzle fluid is 60 percent  $\text{N}_2$  by mass. The burner has a circular port. The fuel, nitrogen, and the air are all at 300 K and 1 atm. Compare the flame lengths for the following two cases with the undiluted base case ( $\dot{m}_F = 5 \cdot 10^{-6} \text{ kg/s}$ ). What is the physical significance of your results? Discuss.
- The total flowrate of the diluted flow ( $\text{C}_3\text{H}_8 + \text{N}_2$ ) is  $5 \cdot 10^{-6} \text{ kg/s}$ .
  - The flowrate of the  $\text{C}_3\text{H}_8$  in the diluted flow is  $5 \cdot 10^{-6} \text{ kg/s}$ .

- 9.13** In determining the constant associated with the experimental flame-length correlation (Eqn. 9.60), Roper used a flame temperature of 1500 K. What value of the mean diffusion coefficient  $D_\infty$  appearing in Eqn. 9.59 is consistent with the constant in Eqn. 9.60? How does this value compare with the value of the binary diffusivity for oxygen in air at 298 K ( $D_{O_2\text{-air}} = 2.1 \cdot 10^{-5} \text{ m}^2/\text{s}$ )?
- 9.14** Estimate both the Lewis and Schmidt numbers for a dilute mixture of O<sub>2</sub> in air at 298 K and 1 atm. Assume  $D_{O_2\text{-air}} = 2.1 \cdot 10^{-5} \text{ m}^2/\text{s}$  at these conditions. Discuss the implications of your results.
- 9.15** Evaluate the Prandtl number ( $Pr$ ), Schmidt number ( $Sc$ ), and Lewis number ( $Le$ ) for air at the following conditions:
- $P = 1 \text{ atm}, T = 298 \text{ K}$ .
  - $P = 1 \text{ atm}, T = 2000 \text{ K}$ .
  - $P = 10 \text{ atm}, T = 298 \text{ K}$ .
- Assume a binary diffusion coefficient  $D_{O_2\text{-air}}$  of  $2.1 \cdot 10^{-5} \text{ m}^2/\text{s}$  at 1 atm and 298 K.
- 9.16** The following fuels are burned in laminar jet flames, each with a mass flowrate of 3 mg/s: acetylene, ethylene, butane, and iso-octane. Which flames emit soot from their tips? Discuss your answer.
- 9.17** A temperature sensor is to be placed above a CH<sub>4</sub>-air jet flame along the extension of the flame's centerline. It is desired to locate the sensor as close as possible to the flame; however, the maximum-temperature operating limit of the sensor is 1200 K. The system operates at 1 atm and the air and fuel enter at 300 K.
- Using the simplified state relationships for a diffusion flame, determine the mixture fraction that would correspond to a sensor temperature limit of 1200 K. Assume a constant specific heat  $c_p$  of 1087 J/kg-K.
  - Using the constant-density laminar jet equations, determine the axial distance along the centerline from the burner nozzle exit to the sensor location corresponding to the conditions in part A. Use a jet Reynolds number ( $\rho_e v_e R / \mu$ ) of 30 and a jet radius  $R$  of 1 mm.
- 9.18** Design a multijet gas burner capable of heating a pot of water from room temperature (25°C) to the boiling point (100°C) in 5 min. Assume that 30 percent of the fuel energy enters the water. The design is constrained to be a number of equally spaced and equally sized individual diffusion flames arranged on a ring with a diameter not to exceed 160 mm. The fuel is methane (natural gas). A minimum flame height is desired. Primary aeration is to be used; however, the burner must operate in a pure diffusion mode. Your design should specify the following: fuel gas flowrate, number of flames, burner ring diameter, flame port diameter, primary aeration, and flame height. List all of the assumptions you invoke.

# 10

## Droplet Evaporation and Burning

---

### OVERVIEW

In this chapter, we consider our second nonpremixed combustion system: the evaporation and burning of spherical liquid droplets. With appropriate assumptions, this system is relatively simple to analyze and thus provides a good opportunity to see clearly how various physical phenomena interrelate. For both droplet evaporation and burning, closed-form analytic solutions to the simplified governing conservation equations are possible. These solutions allow us to explore the influence of droplet size and ambient conditions on droplet evaporation or burning times. Knowledge of droplet gasification rates and droplet lifetimes is important in the design and operation of practical devices. In addition to developing simple droplet gasification models, we show how the simple evaporation model can be incorporated into a one-dimensional analysis of a combustor. Before we begin our various analyses, however, it is worthwhile to review some of the practical applications that are related to or impacted by droplet evaporation and/or burning.


---

### SOME APPLICATIONS

Droplet burning has relevance to many practical combustion devices, including diesel, rocket, and gas-turbine engines, as well as oil-fired boilers, furnaces, and process heaters. To maintain perspective, it is important to point out that in these devices, spray combustion, rather than individual droplet burning, is the dominant feature; however, understanding isolated droplet burning is an essential prerequisite to dealing with more complex flames, as well as being important in its own right in some situations.


## Diesel Engines

There are two primary types of diesel engines, the indirect-injection type and the direct-injection type, shown in Figs. 10.1 and 10.2, respectively. In the **indirect-injection** engine, fuel is injected under high pressure into a precombustion chamber. The fuel droplets begin to evaporate and the fuel vapor mixes with the air in the chamber. Portions of this fuel-air mixture autoignite (Example 6.1) and initiate nonpremixed combustion. Because of the heat release, the pressure rises inside the prechamber, forcing its contents through a throat or orifice into the main chamber. The partially reacted fuel-air mixture and any remaining fuel droplets mix with additional air in the main chamber and burn to completion. In the **direct-injection** engine, the fuel is introduced by a multiholed fuel injector. Fuel-air mixing is governed by both the injection process and the air motion within the combustion space. As suggested above,

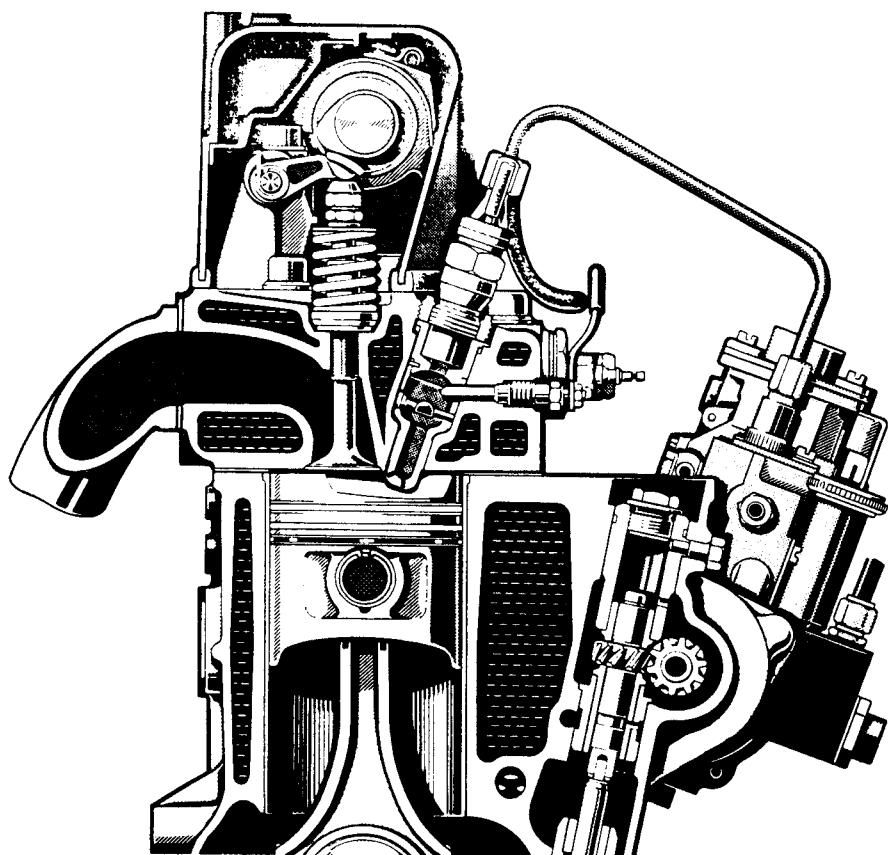

**Figure 10.1** Light-duty indirect-injection diesel engine. Cutaway shows prechamber with glow plug, used for starting, and fuel injector.

| SOURCE: Reprinted from Ref. [1] with permission, © 1971, Society of Automotive Engineers, Inc.

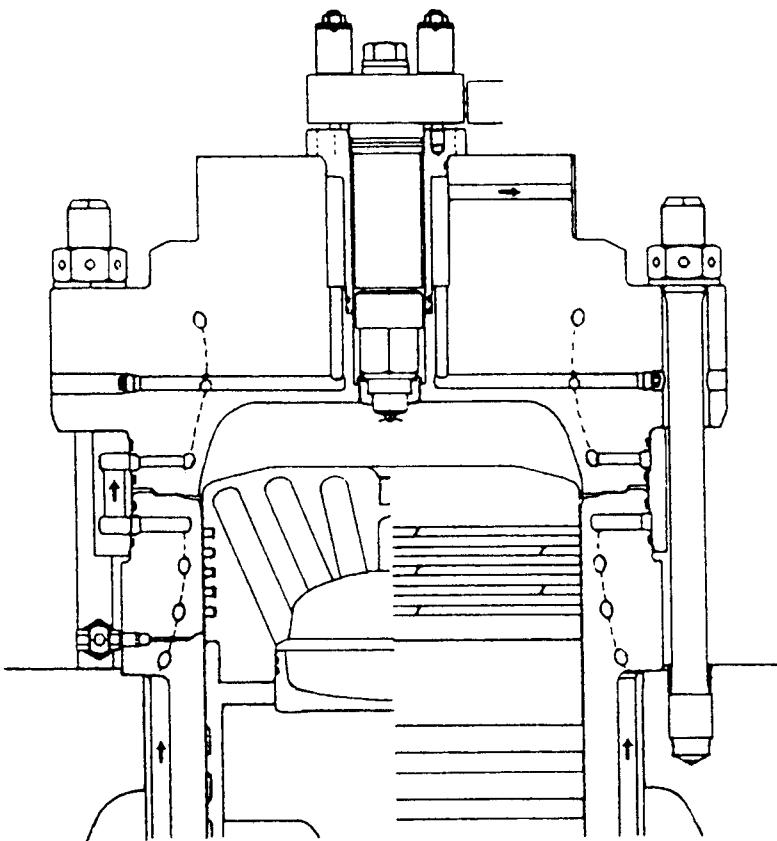

**Figure 10.2** Combustion chamber and piston cutaway view of large direct-injection diesel engine.


| SOURCE: Reprinted from Ref. [2] by permission of the American Society of Mechanical Engineers.

diesel-engine combustion takes place in both premixed and diffusion-controlled modes. Diesel fuels are much less volatile than spark-ignition fuels, but are more readily autoigniting. The rate at which the fuel vaporizes and mixes with the air is in competition with the rate of reaction leading to autoignition. Thus, the first fuel injected into the chamber may become premixed before it is subjected to an ignition source (a pocket of gas that has autoignited) and burns in a premixed flame; the fuel injected subsequently, however, burns in a diffusion mode, since an ignition source (the pre-existing flame) is present as the fuel is injected. Clearly, droplet evaporation and burning are important in both indirect- and direct-injection engines. Appendix 10A presents Sir Harry Ricardo's imaginative account of the physical processes occurring within a direct-injection diesel engine combustion chamber. Ricardo (1885–1974), a pioneer engine researcher, contributed greatly to our understanding of combustion in reciprocating engines.

## Gas-Turbine Engines


Liquid-fueled, gas-turbine engines are the primary powerplant used in aircraft. Figure 10.3 shows a cutaway view of an aircraft turbine engine. In spite of the critical importance of the combustor to the engine system, it occupies a surprisingly small amount of space. Fuel is injected into and atomized within the annular combustor, where the flame is typically stabilized by swirling air that creates a recirculation zone. Aircraft gas-turbine combustor design is influenced by several factors: combustion efficiency, combustion stability, relight-at-altitude capability, and emissions, among others. Typically, aircraft engines employ nonpremixed combustion systems, with a near-stoichiometric primary flame zone integrated with secondary air streams to complete combustion and dilute the products to the proper temperature before entry into the turbine (Fig. 10.4a). Some designs and experimental systems utilize various degrees of premixing to avoid high-temperature,  $\text{NO}_x$ -forming zones [4, 5]. Premixed combustion is achieved by vaporizing the fuel and mixing with air before the mixture enters the hot combustion zone where it then ignites and burns. Figure 10.4a illustrates the **primary**, **secondary**, and **dilution zones** of an aircraft gas-turbine combustor.

Figure 10.4b shows the metal liner that separates the inner combustion space from the surrounding outer annular air-flow passage. A portion of the air is used to cool the liner on the hot-gas side. This air flows through the ring of small holes and runs parallel to the liner, thus providing a cool boundary-layer

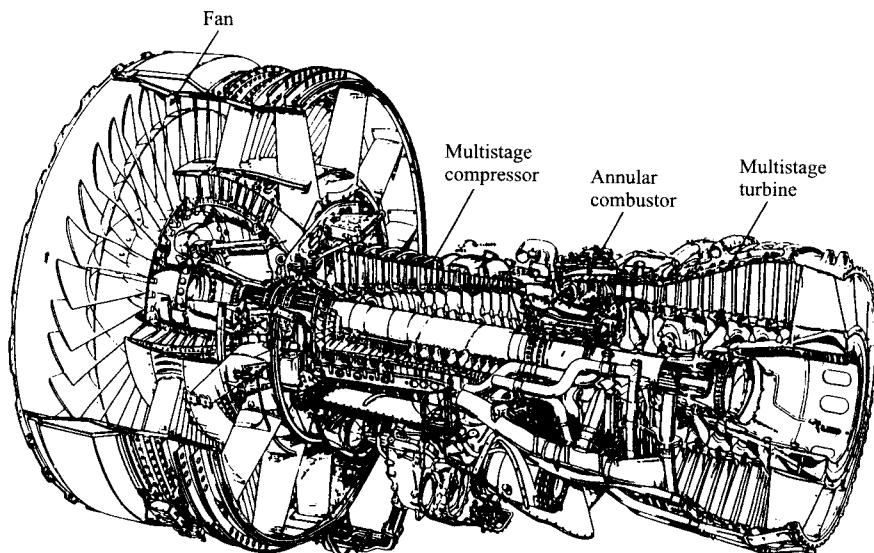

**Figure 10.3** Aircraft gas-turbine engine. Note the combustor is a small part of the total volume of the engine.

| SOURCE: Reprinted from Ref. [3] by permission of Gordon & Breach Science Publishers, SA.

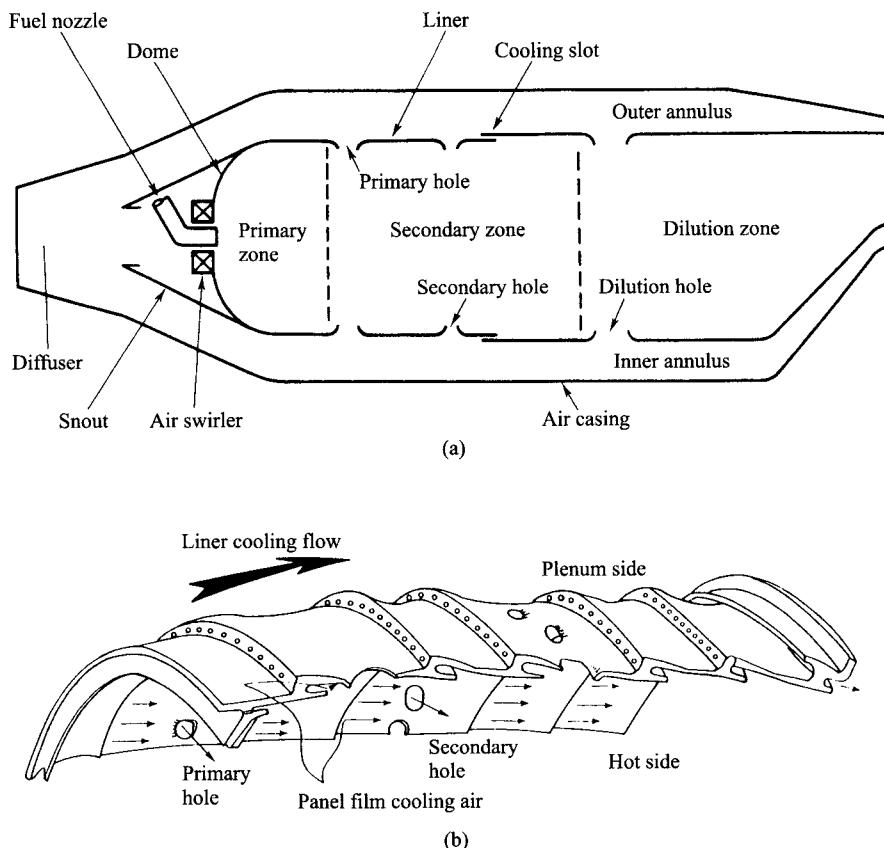

**Figure 10.4** (a) Schematic of annular turbine combustor showing primary, secondary, and dilution zones. (b) Schematic of panel film cooling of combustor liner walls.

SOURCE: (a) Reprinted from Ref. [6] by permission of Taylor & Francis. (b) Reprinted from Ref. [3] by permission of Gordon & Breach Science Publishers, SA.

flow. Combustion air is directed through the larger holes, forming high-velocity jets that penetrate into the core of the combustion space and rapidly mix with the hot gases. A critical concern in the design of turbine combustors is the gas temperature distribution in the radial direction when it enters the turbine section. Air injection in the dilution zone is used to control this distribution. Hot spots that can damage turbine blades are avoided, and the gas temperature profile is tailored to increase from the blade root through a maximum and then decrease at the tip. At the root, the blade stresses are greatest; hence, the cooler gas at the root allows the blade to be cooler in this region. This is important since the blade material strength decreases with temperature. Optimizing the temperature profile allows the maximum average turbine inlet temperature and high efficiencies as a result. The temperature distribution at the combustor outlet is frequently referred to as the **pattern factor**.

## Liquid-Rocket Engines


Of all the combustion devices considered here, the modern rocket engine produces the most intense combustion, i.e., the greatest energy release per volume of combustion space. There are two types of liquid rockets: **pressure-fed**, in which the fuel and oxidizer are pushed into the combustion chamber by a high-pressure gas; and **pump-fed**, where turbopumps deliver the propellants. These two arrangements are illustrated in Fig. 10.5. The pump-fed system delivers the higher performance of the two systems; however, it is much more complex. Figure 10.6 shows the liquid-hydrogen, liquid-oxygen pump-fed J-2 rocket engine used in both the second and third stages of the *Saturn* vehicle used in the *Apollo* program.

The thrust of the engine is produced by creating a hot, high-pressure gas from the combustion of the fuel and oxidizer in the combustion chamber that is subsequently accelerated through a supersonic, converging-diverging nozzle. Unlike any of the other combustion devices discussed previously, the oxidizer for the rocket engine is supplied as a liquid. To establish combustion thus requires the vaporization of both the fuel and the oxidizer. A common injector arrangement is to have two liquid jets impinge to form a liquid sheet (Fig. 10.7). This sheet is unstable and sheds strands, or ligaments, which, in turn, break up to form droplets. Typically, a large number of individual injectors are used to distribute propellant and oxidizer across the diameter of the combustion chamber. Both premixed and diffusion burning are likely to be important in rocket-engine combustion. Because of the extreme difficulty of instrumenting the interior of the combustion chamber, relatively little is known about the details of the combustion process. Work is in progress [8, 9] to learn more about the processes going on in a rocket combustion chamber by using laser probes and other techniques.

---


## SIMPLE MODEL OF DROPLET EVAPORATION

To illustrate principles of mass transfer in Chapter 3, we developed a droplet evaporation model by transforming the Stefan problem to spherical coordinates. That model involved only mass transfer, since it was assumed that the droplet surface temperature was a known parameter. In the present analysis, we assume that the droplet surface temperature is near the droplet boiling point and, hence, the evaporation rate is controlled by the heat-transfer rate from the ambient to the droplet surface. This can be a good approximation in combustion environments where ambient temperatures are high, and the mathematical description of the evaporation process is, perhaps, the simplest possible and, yet, is useful for engineering calculations. Later in this chapter, we develop a more general droplet-burning model (which can also be used to deal with pure evaporation) that couples both heat and mass transfer.

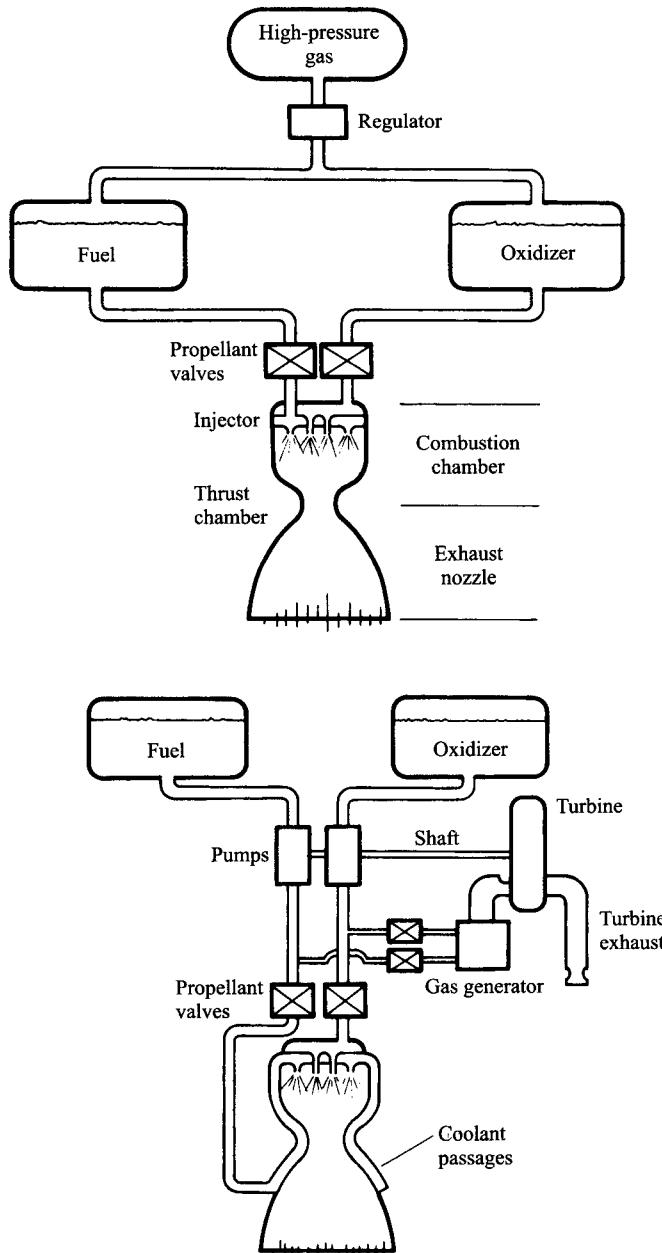


**Figure 10.5** Schematic illustration of the two types of liquid-rocket systems: (top) pressure-fed system, (lower), pump-fed system.

| SOURCE: From Ref. [7]. Reprinted with permission of the Jet Propulsion Laboratory.

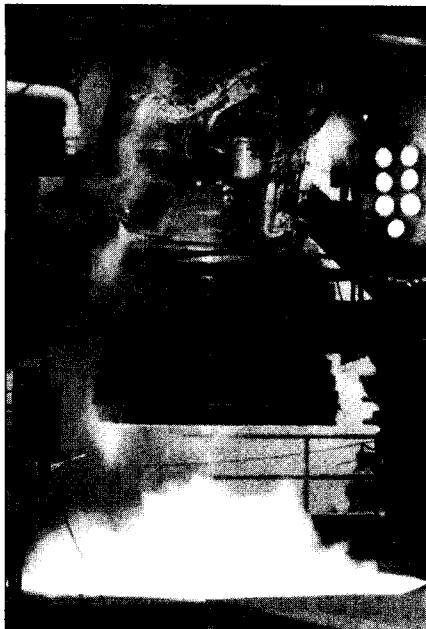


(a)

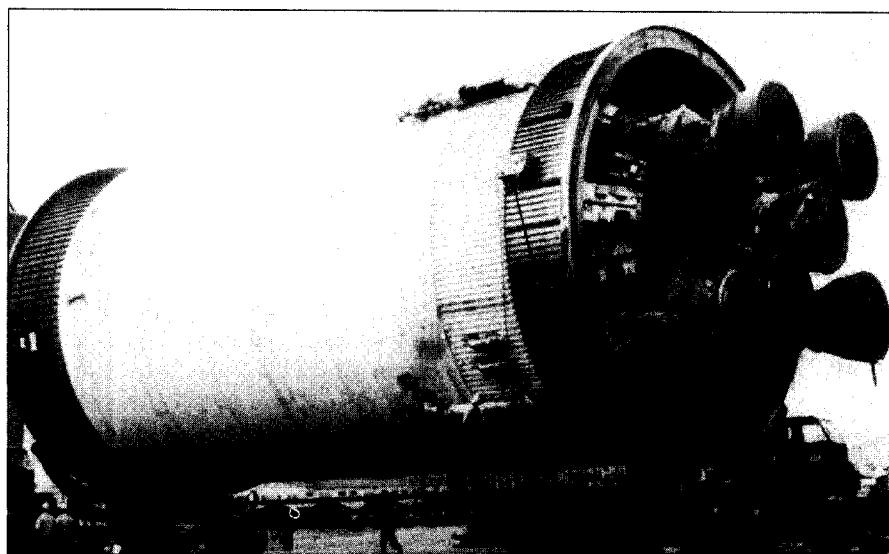

(b)

**Figure 10.6** The J-2 engine test firing (top) and Saturn V second stage with cluster of five J-2 engines.

| SOURCE: Courtesy of Rockwell Aerospace, Rocketdyne Division.

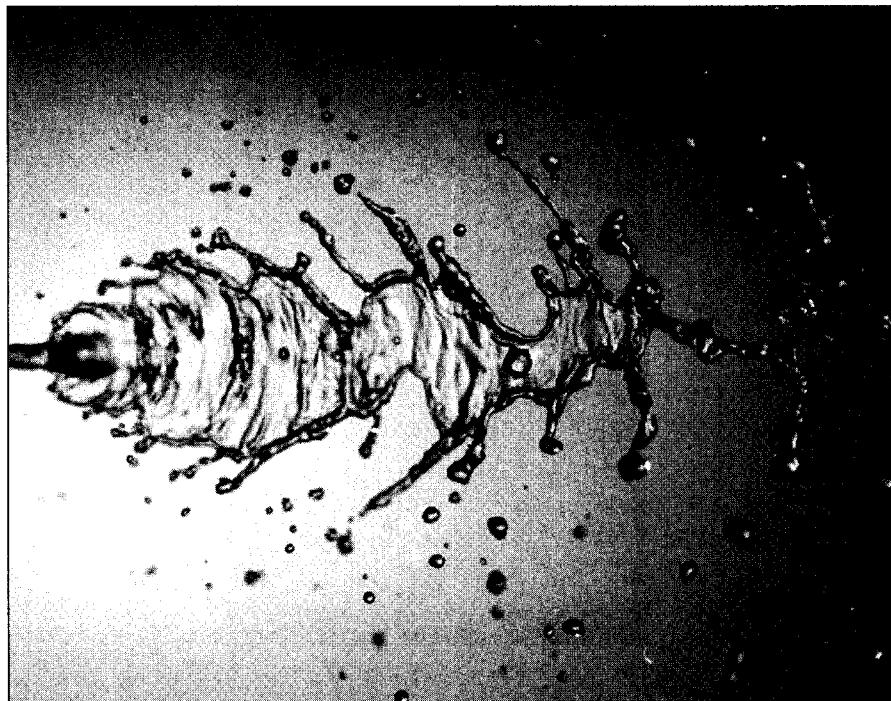

**Figure 10.7** Impinging water jets form unstable liquid sheet, ligaments, and droplets. The jet diameters and velocities are 1.4 mm and 3.4 m/s, respectively.


SOURCE: Photograph courtesy of R. J. Santoro.

Figure 10.8 defines the spherically symmetric coordinate system. The radius  $r$  is the only coordinate variable. It has its origin at the center of the droplet, and the droplet radius at the liquid-vapor interface is denoted  $r_s$ . Very far from the droplet surface ( $r \rightarrow \infty$ ), the temperature is  $T_\infty$ .

Physically, heat from the ambient environment supplies the energy necessary to vaporize the liquid fuel, and the fuel vapor then diffuses from the droplet surface into the ambient gas. The mass loss causes the droplet radius to shrink with time until the droplet is completely evaporated ( $r_s = 0$ ). The problem that we wish to solve is the determination of the mass flowrate of the fuel vapor from the surface at any instant in time. Knowledge of this will then enable us to calculate the droplet radius as a function of time and the droplet lifetime.

### Assumptions

The following assumptions for a droplet evaporating in a hot gas are commonly invoked because they lead to great simplification, principally by eliminating the need to deal with the mass-transfer aspects of the problem, yet still agree reasonably well with experimental results:

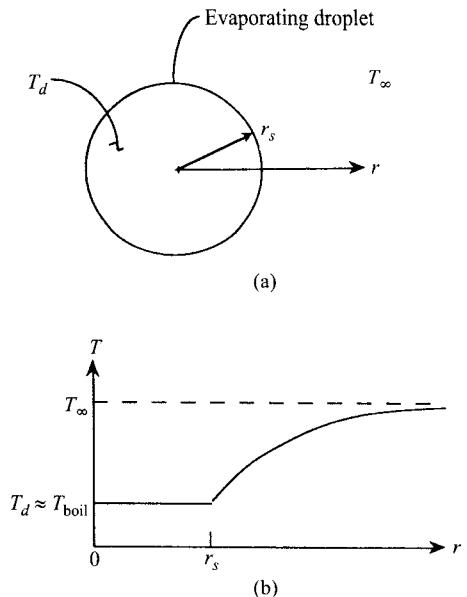

**Figure 10.8** Evaporation of a liquid fuel droplet in a quiescent environment, where it is assumed that the droplet surface temperature is nearly at the liquid boiling point.

1. The droplet evaporates in a quiescent, infinite medium.
2. The evaporation process is quasi-steady. This means that at any instant in time the process can be described as if it were in steady state. This assumption eliminates the need to deal with partial differential equations.
3. The fuel is a single-component liquid with zero solubility for gases.
4. The droplet temperature is uniform, and, furthermore, the temperature is assumed to be the boiling point of the fuel,  $T_d = T_{\text{boil}}$ . In many problems, the transient heating of the liquid does not greatly affect the droplet lifetime, and more rigorous calculations show that the droplet surface temperature is only slightly less than the liquid boiling point in combustion environments. This assumption eliminates the need to solve a liquid-phase (droplet) energy equation, and, more importantly, eliminates the need to solve the fuel vapor transport (species) equation in the gas phase! Implicit in this assumption is that  $T_{\infty} > T_{\text{boil}}$ . In our subsequent analysis, when we eliminate the assumption that the droplet is at the boiling point, you will see how much more complicated the analysis becomes.
5. We assume binary diffusion with a unity Lewis number ( $\alpha = \mathcal{D}$ ). This permits us to use the simple Shvab-Zeldovich energy equation developed previously, in Chapter 7.

6. We also assume that all thermophysical properties, such as thermal conductivity, density, and specific heat, are constant. Although these properties may vary greatly as we move through the gas phase from the droplet surface to the faraway surroundings, constant properties allow a simple closed-form solution. In the final analysis, a judicious choice of mean values allows reasonably accurate predictions to be made.

### Gas-Phase Analysis

With the above assumptions, we can find the mass evaporation rate,  $\dot{m}$ , and the droplet radius history,  $r_s(t)$ , by writing a gas-phase mass conservation equation, a gas-phase energy equation, a droplet gas-phase interface energy balance, and a droplet liquid mass conservation equation. The gas-phase energy equation gives us the temperature distribution in the gas phase, which, in turn, allows us to evaluate the conduction heat transfer into the droplet at the surface. This is necessary to evaluate the surface energy balance that yields the evaporation rate  $\dot{m}$ . Knowing  $\dot{m}(t)$ , we can easily find the drop size as a function of time.

**Mass Conservation** With the assumption of quasi-steady burning, the mass flowrate,  $\dot{m}(r)$ , is a constant, independent of radius; thus,

$$\dot{m} = \dot{m}_F = \rho v_r 4\pi r^2 = \text{constant} \quad (10.1)$$

and

$$\frac{d(\rho v_r r^2)}{dr} = 0, \quad (10.2)$$

where  $v_r$  is the bulk flow velocity.


**Energy Conservation** As previously derived in Chapter 7, conservation of energy for the situation depicted in Fig. 10.9a is expressed by Eqn. 7.65. With the assumption of constant properties and unity Lewis number, this can be rearranged and written as:

$$\frac{d\left(r^2 \frac{dT}{dr}\right)}{dr} = \frac{\dot{m} c_{pg}}{4\pi k} \frac{dT}{dr}, \quad (10.3)$$

where the reaction rate term is zero, since no reactions occur for pure evaporation.

For convenience in the following development, we define  $Z \equiv c_{pg}/4\pi k$ ; thus,

$$\frac{d\left(r^2 \frac{dT}{dr}\right)}{dr} = Z \dot{m} \frac{dT}{dr}. \quad (10.4)$$

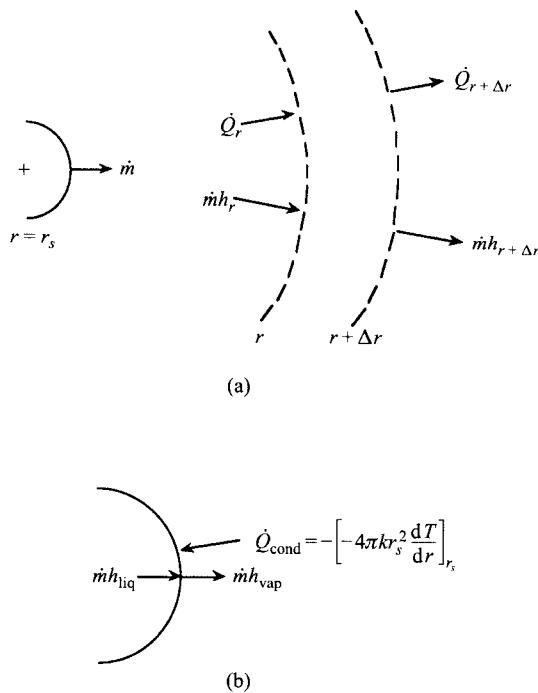

**Figure 10.9** Evaporating-droplet energy balance for (a) gas phase and (b) droplet surface.

Solving Eqn. 10.4 gives us the temperature distribution,  $T(r)$ , in the gas phase. To effect this solution requires two boundary conditions:

$$\text{Boundary condition 1: } T(r \rightarrow \infty) = T_\infty \quad (10.5a)$$

$$\text{Boundary condition 2: } T(r = r_s) = T_{\text{boil}}. \quad (10.5b)$$

Equation 10.4 can be easily solved by twice separating variables and integrating. After the first integration, we obtain

$$r^2 \frac{dT}{dr} = Z\dot{m}T + C_1,$$

where  $C_1$  is the integration constant. The second separation and integration yields the general solution,

$$\frac{1}{Z\dot{m}} \ln(Z\dot{m}T + C_1) = -\frac{1}{r} + C_2, \quad (10.6)$$

where  $C_2$  is the second integration constant. Applying Eqn. 10.5a to Eqn. 10.6 gives  $C_2$  in terms of  $C_1$ :

$$C_2 = \frac{1}{Z\dot{m}} \ln(Z\dot{m}T_\infty + C_1).$$

Substituting  $C_2$  back into Eqn. 10.6, applying the second boundary condition (Eqn. 10.5b), and using exponentiation to remove the logarithm, we can find  $C_1$ ; i.e.,

$$C_1 = \frac{Z\dot{m}[T_\infty(-Z\dot{m}/r_s) - T_{\text{boil}}]}{1 - \exp(-Z\dot{m}/r_s)}.$$

The second constant is now readily found by substituting  $C_1$  into the expression for  $C_2$  above. Thus,

$$C_2 = \frac{1}{Z\dot{m}} \ln \left[ \frac{Z\dot{m}(T_\infty - T_{\text{boil}})}{1 - \exp(-Z\dot{m}/r_s)} \right].$$

Finally, the temperature distribution can be found by substituting these expressions for  $C_1$  and  $C_2$  back into the general solution given by Eqn. 10.6. The final, and somewhat complicated, result is

$$T(r) = \frac{(T_\infty - T_{\text{boil}})\exp(-Z\dot{m}/r) - T_\infty \exp(-Z\dot{m}/r_s) + T_{\text{boil}}}{1 - \exp(-Z\dot{m}/r_s)}. \quad (10.7)$$

**Droplet-Gas-Phase Interface Energy Balance** By itself, Eqn. 10.7 does not allow us to solve for the evaporation rate  $\dot{m}$ ; however, it does allow us to evaluate the heat transferred to the droplet surface, which appears in the interface (surface) energy balance illustrated in Fig. 10.9b. Heat is conducted to the interface from the hot gas, and since we assume that the droplet temperature is uniform at  $T_{\text{boil}}$ , all of this heat must be used to vaporize the fuel, with no heat flowing into the droplet interior. It is relatively easy to allow transient droplet heating, as will be shown in our burning droplet analysis. The surface energy balance can be written as

$$\dot{Q}_{\text{cond}} = \dot{m}(h_{\text{vap}} - h_{\text{liq}}) = \dot{m}h_{fg}. \quad (10.8)$$

Substituting Fourier's law for  $\dot{Q}_{\text{cond}}$ , paying careful attention to sign conventions, we have

$$4\pi k_g r_s^2 \frac{dT}{dr} \Big|_{r_s} = \dot{m}h_{fg}. \quad (10.9)$$

Differentiating Eqn. 10.7, the temperature gradient in the gas phase at the droplet surface is

$$\frac{dT}{dr} \Big|_{r_s} = \frac{Z\dot{m}}{r_s^2} \left[ \frac{(T_\infty - T_{\text{boil}})\exp(-Z\dot{m}/r_s)}{1 - \exp(-Z\dot{m}/r_s)} \right]. \quad (10.10)$$

Substituting this result into Eqn. 10.9 and solving for  $\dot{m}$ , we obtain

$$\dot{m} = \frac{4\pi k_g r_s}{c_{pg}} \ln \left[ \frac{c_{pg}(T_\infty - T_{\text{boil}})}{h_{fg}} + 1 \right]. \quad (10.11)$$

In the combustion literature, the first term in the brackets is defined as

$$B_q = \frac{c_{pg}(T_\infty - T_{\text{boil}})}{h_{fg}}, \quad (10.12)$$

so

$$\dot{m} = \frac{4\pi k_g r_s}{c_{pg}} \ln(B_q + 1). \quad (10.13)$$

The parameter  $B$  is one of those dimensionless parameters, such as the Reynolds number, that has special significance in combustion and is commonly referred to by those knowledgeable in the field. It is sometimes referred to as the **Spalding number**, or simply as the **transfer number**,  $B$ . Recall that, in Chapter 3, we developed a similar expression for droplet evaporation controlled by mass transfer. The definition of  $B$  given by Eqn. 10.12 applies only to the set of assumptions listed previously, with the subscript  $q$  indicating that it is based on heat-transfer considerations alone. Other definitions exist and their functional form depends on the assumptions made. For example,  $B$  has a different definition if a spherically symmetric flame is assumed to surround the droplet. This will be elaborated upon later.

This completes our analysis of the gas phase. Knowing the instantaneous (quasi-steady) evaporation rate now allows us to calculate the droplet lifetime.

## Droplet Lifetimes

Following the same analysis as in Chapter 3 for mass-transfer-controlled evaporation, we obtain the droplet radius (or diameter) history by writing a mass balance that states that the rate at which the mass of the droplet decreases is equal to the rate at which the liquid is vaporized, i.e.,

$$\frac{dm_d}{dt} = -\dot{m}, \quad (10.14)$$

where the droplet mass,  $m_d$ , is given by

$$m_d = \rho_l V = \rho_l \pi D^3 / 6 \quad (10.15)$$

and  $V$  and  $D$  are the droplet volume and diameter, respectively.

Substituting Eqns. 10.15 and 10.13 into Eqn. 10.14, and performing the differentiation, yields

$$\frac{dD}{dt} = -\frac{4k_g}{\rho_l c_{pg} D} \ln(B_q + 1). \quad (10.16)$$

As discussed previously (cf. Chapter 3), Eqn. 10.16 is more commonly expressed in terms of  $D^2$  rather than  $D$ , i.e.,

$$\frac{dD^2}{dt} = -\frac{8k_g}{\rho_l c_{pg}} \ln(B_q + 1). \quad (10.17)$$

Equation 10.17 shows that the time derivative of the square of the droplet diameter is constant; hence,  $D^2$  varies linearly with  $t$  with the slope  $-(8k_g/\rho_l c_{pg}) \ln(B_q + 1)$  as illustrated in Fig. 10.10. This slope is defined to be the **evaporation constant  $K$** :

$$K = \frac{8k_g}{\rho_l c_{pg}} \ln(B_q + 1). \quad (10.18)$$

Note the similarity of this relation to Eqn. 3.58: the form of each equation is the same, and the equations become identical if the Lewis number is unity ( $k_g/c_{pg} = \rho D$ ), although different definitions apply to  $B$ . We can integrate Eqn. 10.17 to provide a general relationship expressing the variation of  $D$  (or  $D^2$ ) with time:

$$\int_{D_0^2}^{D^2} d\hat{D}^2 = - \int_0^t K dt,$$

which yields

$$D^2(t) = D_0^2 - Kt. \quad (10.19)$$

Equation 10.19 is the same  **$D^2$  law** for droplet evaporation that we introduced in Chapter 3. Experiments (e.g., Ref. [10]) show that the  $D^2$  law holds after an initial transient period associated with the heating of the droplet to near the boiling point (cf. Fig. 3.7b).

We can find the time it takes a droplet of given initial size to evaporate completely, i.e., the droplet lifetime,  $t_d$ , by letting  $D^2(t_d) = 0$ :

$$t_d = D_0^2/K. \quad (10.20)$$

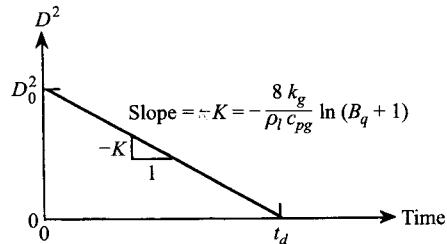


Figure 10.10 The  $D^2$  law for droplet evaporation resulting from simplified analysis.

To use Eqns. 10.19 and 10.20 to predict droplet evaporation is straightforward; however, we have the problem of choosing appropriate mean values for  $c_{pg}$  and  $k_g$ , the gas-phase specific heat and thermal conductivity, respectively, which appear in the evaporation rate constant. In our analysis, we assumed that  $c_{pg}$  and  $k_g$  were constant, while, in reality, they vary considerably in going from the droplet surface to the freestream conditions. Following the approach of Law and Williams [11] for burning droplets, the following approximations for  $c_{pg}$  and  $k_g$  are suggested:

$$c_{pg} = c_{pF}(\bar{T}) \quad (10.21)$$

$$k_g = 0.4k_F(\bar{T}) + 0.6k_\infty(\bar{T}), \quad (10.22)$$

where the subscript  $F$  represents the fuel vapor and  $\bar{T}$  is the average of the fuel boiling point temperature and that of the free stream,

$$\bar{T} = (T_{boil} + T_\infty)/2. \quad (10.23)$$

Other approximations for property evaluations exist that are more accurate [12]; however, the above technique is the easiest to apply.

Consider a 500- $\mu\text{m}$ -diameter liquid *n*-hexane ( $\text{C}_6\text{H}_{14}$ ) droplet evaporating in hot, stagnant nitrogen at 1 atm. The  $\text{N}_2$  temperature is 850 K. Determine the lifetime of the *n*-hexane droplet, assuming the droplet temperature is at its boiling point.

**Example 10.1**
**Solution**

Find  $t_d$ . The droplet lifetime is evaluated from

$$t_d = D_0^2/K, \quad (10.20)$$

where

$$K = \frac{8k_g}{\rho_l c_{pg}} \ln(B_q + 1) \quad (10.18)$$

and

$$B_q = \frac{c_{pg}(T_\infty - T_{boil})}{h_{fg}}. \quad (10.12)$$

The solution is straightforward, with, perhaps, the greatest complication being the property evaluations. The *n*-hexane properties are evaluated at

$$\bar{T} = \frac{1}{2}(T_{boil} + T_\infty) = \frac{1}{2}(342 + 850) = 596 \text{ K},$$

where the boiling point ( $T_{boil} = 342 \text{ K}$ ) is found in Appendix B, Table B.1, as are the liquid density and heat of vaporization. The *n*-hexane specific heat and thermal conductivity are evaluated from the curvefit coefficients provided in Appendix Tables B.2 and B.3.

$$c_{pg} = c_p C_6 H_{14}(\bar{T}) = 2872 \text{ J/kg-K} \quad (\text{Appendix Table B.2}),$$

$$k_F = k_{C_6 H_{14}}(\bar{T}) = 0.0495 \text{ W/m-K} \quad (\text{Appendix Table B.3}),$$

$$k_\infty = k_{N_2}(\bar{T}) = 0.0444 \text{ W/m-K.} \quad (\text{Appendix Table C.2}).$$

The appropriate mean thermal conductivity is (Eqn. 10.22)

$$k_g = 0.4(0.0495) + 0.6(0.0444) = 0.0464 \text{ W/m-K}$$

and the *n*-hexane heat of vaporization and liquid density are, respectively,

$$h_{fg} = 335,000 \text{ J/kg} \quad (\text{Appendix Table B.1}),$$

$$\rho_l \approx 659 \text{ kg/m}^3. \quad (\text{Appendix Table B.1}).$$

The dimensionless transfer number *B* can now be evaluated using the properties estimated above:

$$B_q = \frac{2872(850 - 342)}{335,000} = 4.36$$

and the evaporation constant *K* is

$$\begin{aligned} K &= \frac{8(0.0464)}{659(2872)} \ln(1 + 4.36) \\ &= 1.961 \cdot 10^{-7}(1.679) = 3.29 \cdot 10^{-7} \text{ m}^2/\text{s}. \end{aligned}$$

Thus, the droplet lifetime is

$$t_d = D_0^2/K = \frac{(500 \cdot 10^{-6})^2}{3.29 \cdot 10^{-7}} = 0.76 \text{ s}.$$

### Comments

The example results can give us a physical feel for the time scales involved in droplet evaporation. Using the evaporation constant calculated above, but with  $d \approx 50 \mu\text{m}$ ,  $t_d$  is of the order of 10 ms. In many spray combustion systems, mean drop sizes are of the order of 50  $\mu\text{m}$  and smaller.

## SIMPLE MODEL OF DROPLET BURNING

Our approach here extends the development above to include a spherically symmetric diffusion flame that surrounds the droplet. We will retain the assumption of a quiescent environment and spherical symmetry in the initial development, but subsequently show how the spherically symmetric results can be adjusted to take into account the enhancement of burning caused by convection, either natural convection produced by the flame or a forced flow. We will also remove the restriction that the droplet is at the boiling point, which requires using species conservation in the gas phase.


## Assumptions

The following assumptions lead to a greatly simplified model of droplet combustion that preserves the essential physics and agrees reasonably well with experimental results:

1. The burning droplet, surrounded by a spherically symmetric flame, exists in a quiescent, infinite medium. There are no interactions with any other droplets, and the effects of convection are ignored.
2. As in our previous analysis, the burning process is quasi-steady.
3. The fuel is a single-component liquid with zero solubility for gases. Phase equilibrium prevails at the liquid–vapor interface.
4. The pressure is uniform and constant.
5. The gas phase consists of only three “species:” fuel vapor, oxidizer,<sup>1</sup> and combustion products. The gas-phase region is divided into two zones. The inner zone between the droplet surface and the flame contains only fuel vapor and products, while the outer zone consists of oxidizer and products. Thus, binary diffusion prevails in each region.
6. Fuel and oxidizer react in stoichiometric proportions at the flame. Chemical kinetics are assumed to be infinitely fast, resulting in the flame being represented as an infinitesimally thin sheet.
7. The Lewis number,  $Le = \alpha/\mathcal{D} = k_g/\rho c_{pg}\mathcal{D}$ , is unity.
8. Radiation heat transfer is negligible.
9. The gas-phase thermal conductivity,  $k_g$ , specific heat,  $c_{pg}$ , and the product of the density and mass diffusivity,  $\rho\mathcal{D}$ , are all constants.
10. The liquid fuel droplet is the only condensed phase; no soot or liquid water is present.

The basic model embodied by the above assumptions is illustrated in Fig. 10.11, which shows temperature and species profiles through the inner region between the droplet surface and the flame,  $r_s \leq r \leq r_f$ , and the outer region beyond the flame,  $r_f \leq r < \infty$ . We see that there are three important temperatures: the droplet surface temperature,  $T_s$ ; the flame temperature,  $T_f$ ; and the temperature of the medium at infinity,  $T_\infty$ . The fuel vapor mass fraction,  $Y_F$ , is a maximum at the droplet surface and monotonically decreases to zero at the flame, where the fuel is totally consumed. The oxidizer mass fraction,  $Y_{Ox}$ , mirrors this, being a maximum (unity), far from the flame and decreasing to zero at the flame sheet. The combustion products have their maximum concentration at the flame sheet (unity), diffusing both inward toward the droplet and outward away from the flame. Since assumption 3 prevents the products

<sup>1</sup>The oxidizer may be a mixture of gases, some of which may be inert. For example, we here consider air to be an oxidizer, even though only approximately 21 percent of the air chemically reacts. At the flame, the nitrogen conceptually is transformed from oxidizer to products even though it does not actually react.

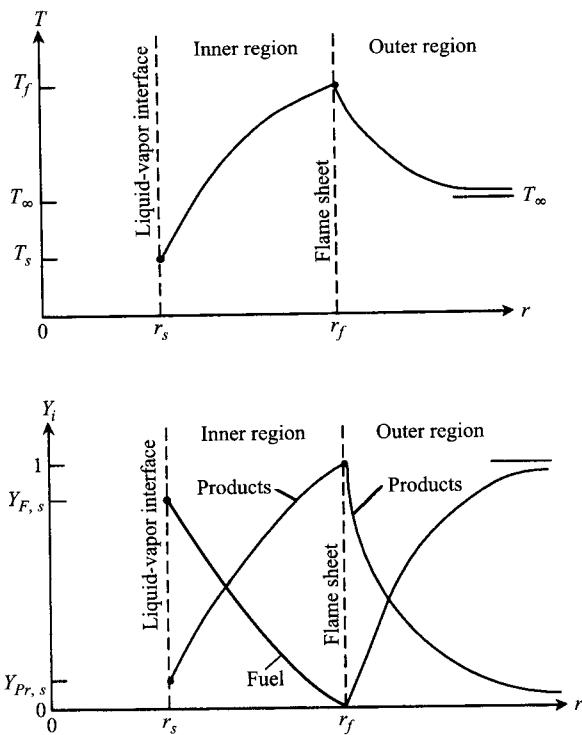

**Figure 10.11** Temperature (top) and species profiles (bottom) for simple droplet-burning model.

from dissolving in the liquid, there can be no net flow of products inward from the flame to the droplet surface. Thus, the products in the inner region form a stagnant film through which fuel vapor moves. The species fluxes in this inner region behave in a manner reminiscent of the Stefan problem discussed in Chapter 3.

### Problem Statement

In the following analysis, our number one objective is to determine the droplet mass burning rate,  $\dot{m}_F$ , given the initial droplet size and the conditions far from the droplet, i.e., the temperature,  $T_\infty$ , and the oxidizer mass fraction,  $Y_{Ox,\infty} (= 1)$ . On the way to achieving this objective, we will also obtain expressions describing the temperature and species profiles in each region, together with relationships that allow us to calculate the flame radius,  $r_f$ ; flame temperature,  $T_f$ ; droplet surface temperature,  $T_s$ ; and the fuel vapor mass fraction at the droplet surface,  $Y_{F,s}$ . In summary, we seek expressions that allow us to evaluate a total of five parameters:  $\dot{m}_F$ ,  $Y_{F,s}$ ,  $T_s$ ,  $T_f$ , and  $r_f$ .

As an overview, the five relationships needed to solve for the five unknowns have their origins in the following: (1) an energy balance at the droplet surface, (2) an energy balance at the flame sheet, (3) the oxidizer distribution in the outer region, (4) the fuel vapor distribution in the inner region, and (5) phase equilibrium at the liquid–vapor interface expressed, for example, by the Clausius–Clapeyron relationship. Finally, knowing the instantaneous mass burning rate, droplet lifetimes will be calculated in the same manner as employed in our evaporation analysis. In the analysis, we will recover a  $D^2$  law for burning droplets.

The problem of droplet combustion has been widely studied and has a very large literature associated with it, as evidenced by the reviews of the past few decades [13–17]. The physical model we describe here has its origins in the 1950s [18, 19]. The solution approach taken here is not elegant. Our treatment, however, seeks to maintain a view of the physical processes at all times by retaining the important physical variables: temperature and species mass fractions. A more elegant approach, which is described in more advanced textbooks (e.g., Ref. [20]), combines the species and energy equations to create a conserved-scalar variable.

## Mass Conservation

Overall mass conservation in the gas phase is described as in our previous development (Eqns. 10.1 and 10.2), i.e.,

$$\dot{m}(r) = \dot{m}_F = \text{constant}. \quad (10.1)$$

Note that the total flowrate is everywhere identical to the fuel flowrate, that is, the burning rate. This will be important in applying species conservation.

## Species Conservation

**Inner Region** In the *inner region*, the important diffusing species is the *fuel vapor*. We can apply Fick's law (Eqn. 3.5) to the inner region:

$$\dot{m}_A'' = Y_A(\dot{m}_A'' + \dot{m}_B'') - \rho D_{AB} \nabla Y_A \quad (3.5)$$

where the subscripts *A* and *B* here denote fuel and products, respectively:

$$\dot{m}_A'' \equiv \dot{m}_F'' = \dot{m}_F / 4\pi r^2 \quad (10.24)$$

$$\dot{m}_B'' \equiv \dot{m}_{Pr}'' = 0, \quad (10.25)$$

and the  $\nabla$ -operator in spherical coordinates, where the only variations are in the *r*-direction, is  $\nabla(\cdot) = d(\cdot)/dr$ . Thus, Fick's law is

$$\dot{m}_F = -4\pi r^2 \frac{\rho D}{1 - Y_F} \frac{dY_F}{dr}. \quad (10.26)$$

This first-order ordinary differential equation must satisfy two boundary conditions: at the droplet surface, liquid–vapor equilibrium prevails, so

$$Y_F(r_s) = Y_{F,s}(T_s), \quad (10.27a)$$

and at the flame, the fuel disappears, so

$$Y_F(r_f) = 0. \quad (10.27b)$$

The existence of two boundary conditions allows us to treat the burning rate,  $\dot{m}_F$ , as an eigenvalue, i.e., a parameter that can be calculated from the solution of Eqn. 10.26 subject to Eqns. 10.27a and b. Defining  $Z_F \equiv 1/4\pi\rho\mathcal{D}$ , the general solution to Eqn. 10.26 is

$$Y_F(r) = 1 + C_1 \exp(-Z_F \dot{m}_F / r). \quad (10.28)$$

Applying the droplet surface condition (Eqn. 10.27a) to evaluate  $C_1$ , we obtain

$$Y_F(r) = 1 - \frac{(1 - Y_{F,s}) \exp(-Z_F \dot{m}_F / r_s)}{\exp(-Z_F \dot{m}_F / r_s)}. \quad (10.29)$$

Applying the flame boundary condition (Eqn. 10.27b), we obtain a relationship involving the three unknowns  $Y_{F,s}$ ,  $\dot{m}_F$ , and  $r_f$ :

$$Y_{F,s} = 1 - \frac{\exp(-Z_F \dot{m}_F / r_s)}{\exp(-Z_F \dot{m}_F / r_f)}. \quad (10.30)$$

Completing the species conservation solution in the inner region—although not necessary to accomplish our objective—the combustion product mass fraction can be expressed as

$$Y_{Pr}(r) = 1 - Y_F(r). \quad (10.31)$$

**Outer Region** In the *outer region*, the important diffusing species is the *oxidizer*, which is transported radially inward to the flame. At the flame, the oxidizer and fuel combine to stoichiometric proportions according to

$$1 \text{ kg fuel} + v \text{ kg oxidizer} = (v + 1) \text{ kg products}, \quad (10.32)$$


where  $v$  is the stoichiometric (mass) ratio and includes any nonreacting gases that may be a part of the oxidizer stream. This relationship is illustrated in Fig. 10.12. The vector mass fluxes in Fick's law are thus

$$\dot{m}_A'' \equiv \dot{m}_{Ox}'' = -v\dot{m}_F'' \quad (10.33a)$$

$$\dot{m}_B'' \equiv \dot{m}_{Pr}'' = +(v + 1)\dot{m}_F''. \quad (10.33b)$$

Fick's law in the outer region is thus

$$\dot{m}_F = +4\pi r^2 \frac{\rho\mathcal{D}}{v + Y_{Ox}} \frac{dY_{Ox}}{dr}, \quad (10.34)$$

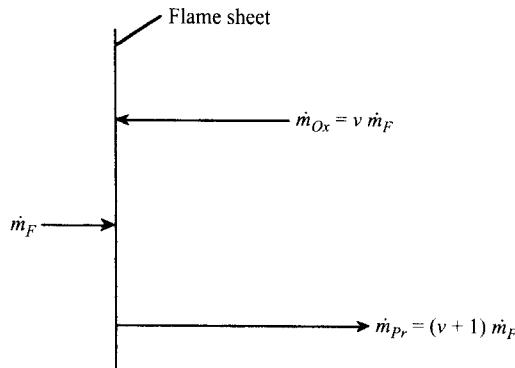

**Figure 10.12** Mass flow relationships at flame sheet. Note that the net mass flow in both the inner and outer regions is equal to the fuel flowrate,  $\dot{m}_F$ .

with boundary conditions

$$Y_{Ox}(r_f) = 0 \quad (10.35a)$$

$$Y_{Ox}(r \rightarrow \infty) = Y_{Ox,\infty} \equiv 1. \quad (10.35b)$$

Integrating Eqn. 10.34 yields

$$Y_{Ox}(r) = -v + C_1 \exp(-Z_F \dot{m}_F / r). \quad (10.36)$$

Applying the flame condition (Eqn. 10.35a) to eliminate  $C_1$  yields

$$Y_{Ox}(r) = v \left[ \frac{\exp(-Z_F \dot{m}_F / r)}{\exp(-Z_F \dot{m}_F / r_f)} - 1 \right]. \quad (10.37)$$

Applying the condition at  $r \rightarrow \infty$  (Eqn. 10.35b), we obtain an algebraic relation between the burning rate,  $\dot{m}_F$ , and the flame radius,  $r_f$ , i.e.,

$$\exp(+Z_F \dot{m}_F / r_f) = (v + 1)/v. \quad (10.38)$$

Complementing the oxidizer distribution (Eqn. 10.37), the product mass fraction distribution is

$$Y_{Pr}(r) = 1 - Y_{Ox}(r). \quad (10.39)$$

## Energy Conservation

Again, we use the Shvab-Zeldovich form of the energy equation. Since we confine chemical reactions to occur at the boundary, i.e., the flame sheet, the reaction rate term is zero both inside the flame and outside the flame. Thus, the same energy equation that we developed for pure evaporation (Eqn. 10.3) also applies to the burning droplet:

$$\frac{d\left(r^2 \frac{dT}{dr}\right)}{dr} = \frac{\dot{m}_F c_{pg}}{4\pi k_g} \frac{dT}{dr}. \quad (10.3)$$

Again, for convenience, we define  $Z_T = c_{pg}/4\pi k_g$ ; thus, our governing equation is

$$\frac{d\left(r^2 \frac{dT}{dr}\right)}{dr} = Z_T \dot{m}_F \frac{dT}{dr}. \quad (10.40)$$

As an aside, note that the parameter  $Z_F$ , defined in the species conservation analysis, equals  $Z_T$  when the Lewis number is unity, since, then,  $c_{pg}/k_g = \rho D$ . Since the form of Eqn. 10.40 is predicated on equal diffusivities for heat and mass, i.e., unity Lewis number (refer to the derivation of the Shvab-Zeldovich energy equation in Chapter 7), we require  $Z_F = Z_T$ .

The boundary conditions applied to Eqn. 10.40 are

$$\text{Inner region} \begin{cases} T(r_s) = T_s \\ T(r_f) = T_f \end{cases} \quad (10.41a) \quad (10.41b)$$

$$\text{Outer region} \begin{cases} T(r_f) = T_f \\ T(r \rightarrow \infty) = T_\infty \end{cases} \quad (10.41c) \quad (10.41d)$$

Of the three temperatures, only  $T_\infty$  is considered to be known;  $T_s$  and  $T_f$  are two of the five unknowns in our problem.

**Temperature Distributions** The general solution to Eqn. 10.40 is

$$T(r) = \frac{C_1 \exp(-Z_T \dot{m}_F / r) + C_2}{Z_T \dot{m}_F}, \quad (10.42)$$

and in the *inner zone*, the temperature distribution resulting from application of Eqns. 10.41a and b is

$$T(r) = \frac{(T_s - T_f) \exp(-Z_T \dot{m}_F / r) + T_f \exp(-Z_T \dot{m}_F / r_s) - T_s \exp(-Z_T \dot{m}_F / r_f)}{\exp(-Z_T \dot{m}_F / r_s) - \exp(-Z_T \dot{m}_F / r_f)} \quad (10.43)$$


for  $r_s \leq r \leq r_f$ .

In the *outer region*, application of Eqns. 10.41c and d to Eqn. 10.42 yields

$$T(r) = \frac{(T_f - T_\infty) \exp(-Z_T \dot{m}_F / r) + \exp(-Z_T \dot{m}_F / r_f) T_\infty - T_f}{\exp(-Z_T \dot{m}_F / r_f) - 1} \quad (10.44)$$

for  $r_f < r < \infty$ .

**Energy Balance at Droplet Surface** Figure 10.13 shows the conduction heat transfer rates and the enthalpy fluxes at the surface of the evaporating droplet. Heat is conducted from the flame through the gas phase to the droplet surface.

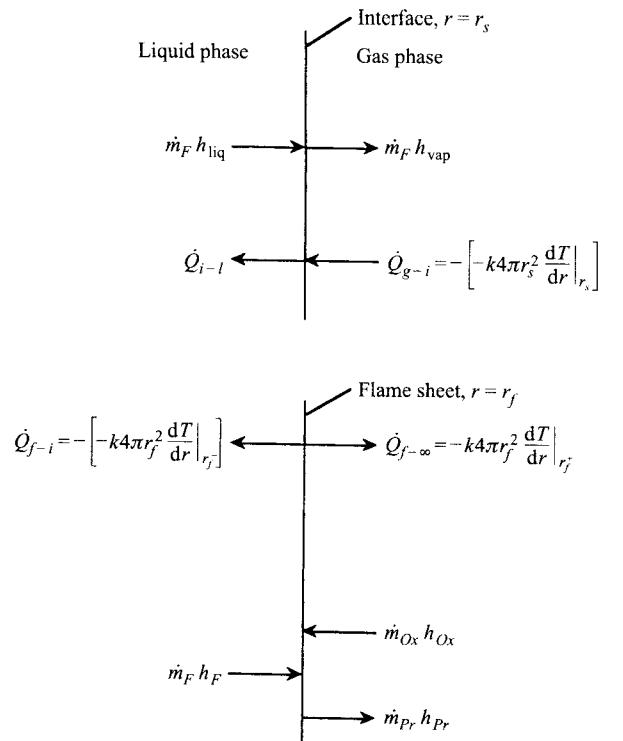

**Figure 10.13** Surface energy balance at droplet liquid–vapor interface (top) and surface energy balance at flame sheet (bottom).

Some of this energy is used to vaporize fuel, with the remainder conducted into the droplet interior. Mathematically, this is expressed as

$$\dot{Q}_{g-i} = \dot{m}_F(h_{\text{vap}} - h_{\text{liq}}) + \dot{Q}_{i-l} \quad (10.45a)$$

or

$$\dot{Q}_{g-i} = \dot{m}_F h_{fg} + \dot{Q}_{i-l}. \quad (10.45b)$$

The heat conducted into the droplet interior,  $\dot{Q}_{i-l}$ , can be handled in several ways. One common approach is to model the droplet as consisting of two zones: an interior region existing uniformly at its initial temperature,  $T_0$ ; and a thin surface layer at the surface temperature,  $T_s$ . For this so-called “onion-skin” model,

$$\dot{Q}_{i-l} = \dot{m}_F c_{pl}(T_s - T_0) \quad (10.46)$$

is the energy required to heat up from  $T_0$  to  $T_s$  the fuel that is vaporized. For convenience, we define

$$q_{i-l} \equiv \dot{Q}_{i-l}/\dot{m}_F, \quad (10.47)$$

so for the *onion-skin model*,

$$q_{i-l} = c_{pl}(T_s - T_0). \quad (10.48)$$

Another common treatment of  $\dot{Q}_{i-l}$  is to assume that the droplet behaves as a lumped parameter, i.e., it has a uniform temperature, with a transient heat-up period. For the *lumped parameter*,

$$\dot{Q}_{i-l} = m_d c_{pl} \frac{dT_s}{dt} \quad (10.49)$$

and

$$q_{i-l} = \frac{m_d c_{pl}}{\dot{m}_F} \frac{dT_s}{dt}, \quad (10.50)$$

where  $m_d$  is the droplet mass. Implementation of the lumped-parameter model requires solving energy and mass conservation equations for the droplet as a whole in order to obtain  $dT_s/dt$ .

A third approach, and the simplest, is to assume that the droplet rapidly heats up to a steady temperature,  $T_s$ . This, in effect, says the thermal inertia of the droplet is negligible. With this assumption of *negligible thermal inertia*,

$$q_{i-l} = 0. \quad (10.51)$$

Returning to the surface energy balance expressed by Eqn. 10.45b, the conduction heat transfer from the gas phase,  $\dot{Q}_{g-i}$ , can be evaluated by applying Fourier's law and using the temperature distribution in the inner region (Eqn. 10.43) to obtain the temperature gradient, i.e.,

$$-\left[ -k_g 4\pi r^2 \frac{dT}{dr} \right]_{r_s} = \dot{m}_F (h_{fg} + q_{i-l}), \quad (10.52)$$

where

$$\frac{dT}{dr} = \frac{(T_s - T_f) Z_T \dot{m}_F \exp(-Z_T \dot{m}_F / r)}{r^2 [\exp(-Z_T \dot{m}_F / r_s) - \exp(-Z_T \dot{m}_F / r_f)]} \quad (10.53)$$

for  $r_s \leq r \leq r_f$ .

Evaluating the heat-transfer rate at  $r = r_s$ , Eqn. 10.52 becomes, after rearranging and substituting the definition of  $Z_T$ ,

$$\frac{c_{pg}(T_f - T_s)}{(q_{i-l} + h_{fg})} \frac{\exp(-Z_T \dot{m}_F / r_s)}{[\exp(-Z_T \dot{m}_F / r_s) - \exp(-Z_T \dot{m}_F / r_f)]} + 1 = 0. \quad (10.54)$$

Equation 10.54 contains four unknowns:  $\dot{m}_F$ ,  $T_f$ ,  $T_s$ , and  $r_f$ .

**Energy Balance at Flame Sheet** Referring to Fig. 10.13, we see how the various energy fluxes at the flame sheet relate. Since the flame temperature is the highest temperature in the system, heat is conducted both toward the droplet,  $\dot{Q}_{f-i}$ , and away to infinity,  $\dot{Q}_{f-\infty}$ . The chemical energy released at the flame is taken into account by using absolute enthalpy fluxes for the

fuel, oxidizer, and products. A surface energy balance at the flame sheet can be written as

$$\dot{m}_F h_F + \dot{m}_{Ox} h_{Ox} - \dot{m}_{Pr} h_{Pr} = \dot{Q}_{f-i} + \dot{Q}_{f-\infty}. \quad (10.55)$$

The enthalpies are defined as

$$h_F \equiv h_{f,F}^o + c_{pg}(T - T_{\text{ref}}), \quad (10.56a)$$

$$h_{Ox} \equiv h_{f,Ox}^o + c_{pg}(T - T_{\text{ref}}), \quad (10.56b)$$

$$h_{Pr} \equiv h_{f,Pr}^o + c_{pg}(T - T_{\text{ref}}), \quad (10.56c)$$

and the heat of combustion,  $\Delta h_c$ , per unit mass of fuel is given by

$$\Delta h_c(T_{\text{ref}}) = (1)h_{f,F}^o + (\nu)h_{f,Ox}^o - (1+\nu)h_{f,Pr}^o. \quad (10.57)$$

The mass flowrates of fuel, oxidizer, and products are related by stoichiometry (cf. Eqn. 10.32 and 10.33a and b). Note that although products exist in the inner region, there is no net flow of products between the droplet surface and the flame; thus, all of the products flow radially outward away from the flame. Knowing this, Eqn. 10.55 becomes

$$\dot{m}_F [h_F + \nu h_{Ox} - (\nu + 1)h_{Pr}] = \dot{Q}_{f-i} + \dot{Q}_{f-\infty}. \quad (10.58)$$

Substituting Eqns. 10.56 and 10.57 into the above yields

$$\dot{m}_F \Delta h_c + \dot{m}_F c_{pg}[(T_f - T_{\text{ref}}) + \nu(T_f - T_{\text{ref}}) - (\nu + 1)(T_f - T_{\text{ref}})] = \dot{Q}_{f-i} + \dot{Q}_{f-\infty}. \quad (10.59)$$

Since we assume that  $c_{pg}$  is constant, then  $\Delta h_c$  is independent of temperature; thus, we can choose the flame temperature as a reference state to simplify Eqn. 10.59:

$$\dot{m}_F \Delta h_c = \dot{Q}_{f-i} + \dot{Q}_{f-\infty}. \quad (10.60)$$

Rate at which chemical energy is converted to thermal energy at the flame	Rate at which heat is conducted away from the flame
---	---

Once again, we rely on Fourier's law and the previously derived temperature distributions to evaluate the conduction heat-transfer terms,  $\dot{Q}_{f-i}$  and  $\dot{Q}_{f-\infty}$ ; i.e.,

$$\dot{m}_F \Delta h_c = k_g 4\pi r_f^2 \frac{dT}{dr} \Big|_{r_f^-} - k_g 4\pi r_f^2 \frac{dT}{dr} \Big|_{r_f^+}. \quad (10.61)$$

To evaluate the temperature gradient at  $r = r_f^-$ , we can employ Eqn. 10.53; for the gradient at  $r = r_f^+$ , the temperature distribution in the outer region is differentiated to yield

$$\frac{dT}{dr} = \frac{Z_T \dot{m}_F (T_\infty - T_f) \exp(-Z_T \dot{m}_F / r)}{r^2 [1 - \exp(-Z_T \dot{m}_F / r_f)]} \quad (10.62)$$

and evaluated at  $r_f^+$ . Performing these substitutions and rearranging, the flame-sheet energy balance is finally expressed as

$$\frac{c_{pg}}{\Delta h_c} \left[ \frac{(T_s - T_f) \exp(-Z_T \dot{m}_F / r_f)}{\exp(-Z_T \dot{m}_F / r_s) - \exp(-Z_T \dot{m}_F / r_f)} - \frac{(T_\infty - T_f) \exp(-Z_T \dot{m}_F / r_f)}{[1 - \exp(-Z_T \dot{m}_F / r_f)]} \right] - 1 = 0. \quad (10.63)$$

Equation 10.63 is a nonlinear algebraic relation involving the same four unknowns ( $\dot{m}_F$ ,  $T_f$ ,  $T_s$ , and  $r_f$ ) that appear in Eqn. 10.54.

**Liquid–Vapor Equilibrium** Thus far in our development, we have four equations and five unknowns. Assuming equilibrium between the liquid and vapor phases of the fuel at the surface, and applying the Clausius–Clapeyron equation, we obtain a fifth equation to provide closure to the problem. Of course, other, more accurate expressions could be used to express this equilibrium; however, the Clausius–Clapeyron approach is quite simple to apply. At the liquid–vapor interface, the partial pressure of the fuel vapor is given by

$$P_{F,s} = A \exp(-B/T_s), \quad (10.64)$$

where  $A$  and  $B$  are constants obtained from the Clausius–Clapeyron equation and take on different values for different fuels. The fuel partial pressure can be related to the fuel mole fraction and mass fraction as follows:

$$\chi_{F,s} = P_{F,s}/P \quad (10.65)$$

and

$$Y_{F,s} = \chi_{F,s} \frac{MW_F}{\chi_{F,s} MW_F + (1 - \chi_{F,s}) MW_{Pr}}. \quad (10.66)$$

Substituting Eqns. 10.64 and 10.65 into Eqn. 10.66 yields an explicit relation between  $Y_{F,s}$  and  $T_s$ :

$$Y_{F,s} = \frac{A \exp(-B/T_s) MW_F}{A \exp(-B/T_s) MW_F + [P - A \exp(-B/T_s)] MW_{Pr}}. \quad (10.67)$$

This completes the mathematical description of our simplified droplet-burning model. It is important to note that if we allow  $T_f \rightarrow T_\infty$  and  $r_f \rightarrow \infty$ , we recover a pure evaporation model, but with coupled heat- and mass-transfer effects, unlike the previous simple models that assume either heat- or mass-transfer effects dominate.

### Example 10.2

Determine the Clausius–Clapeyron constants,  $A$  and  $B$ , which appear in Eqn. 10.64, for *n*-hexane. The 1-atm boiling point for *n*-hexane is 342 K, its enthalpy of vaporization is 334,922 J/kg, and its molecular weight is 86.178.

#### Solution

For an ideal gas, the Clausius–Clapeyron relationship between vapor pressure and temperature is

$$\frac{dP_v}{dT} = \frac{P_v h_{fg}}{RT^2},$$

which can be separated and then integrated as follows:

$$\frac{dP_v}{P_v} = \frac{h_{fg}}{R} \frac{dT}{T^2}$$

and

$$\ln P_v = -\frac{h_{fg}}{R} \frac{1}{T} + C$$

or

$$P_v = \exp(C) \exp\left[\frac{-h_{fg}}{RT}\right].$$

Letting  $P_v = 1 \text{ atm}$  and  $T = T_{\text{boil}}$ ,

$$\exp(C) = \exp\left[\frac{h_{fg}}{RT_{\text{boil}}}\right],$$

which we identify as the constant  $A$ . By inspection,

$$B = h_{fg}/R.$$

We can now numerically evaluate  $A$  and  $B$ :

$$A = \exp\left[\frac{334,922}{\left(\frac{8315}{86.178}\right)^{342}}\right]$$

$$A = 25,580 \text{ atm}$$

and

$$B = \frac{334,922}{\left(\frac{8315}{86.178}\right)}$$

$$B = 3471.2 \text{ K}$$

#### Comments

For conditions not too far from the normal boiling point, the vapor pressure equation above, with the calculated values of  $A$  and  $B$ , should be a useful approximation.

### Summary and Solution

Table 10.1 summarizes the five equations that must be solved for the five unknowns:  $\dot{m}_F$ ,  $r_f$ ,  $T_f$ ,  $T_s$ , and  $Y_{F,s}$ . The system of nonlinear equations can be reduced to a useful level by simultaneously solving Eqns. II, III, IV for

**Table 10.1** Summary of droplet burning model

Equation No.	Unknowns Involved	Underlying Physical Principles
I (10.30)	$\dot{m}_F, r_f, Y_{F,s}$	Fuel species conservation in the inner region
II (10.38)	$\dot{m}_F, r_f$	Oxidizer species conservation in the outer region
III (10.54)	$\dot{m}_F, r_f, T_f, T_s$	Energy balance at droplet liquid-vapor interface
IV (10.63)	$\dot{m}_F, r_f, T_f, T_s$	Energy balance at flame sheet
V (10.67)	$T_s, Y_{F,s}$	Liquid-vapor phase equilibrium at interface with Clausius-Clapeyron applied

$\dot{m}_F, r_f$ , and  $T_f$ , treating  $T_s$  as a known parameter for the time being. Following this procedure, the burning rate is

$$\dot{m}_F = \frac{4\pi k_g r_s}{c_{pg}} \ln \left[ 1 + \frac{\Delta h_c/v + c_{pg}(T_\infty - T_s)}{q_{i-l} + h_{fg}} \right], \quad (10.68a)$$

or, in terms of the **transfer number**,  $B_{o,q}$ , defined as

$$B_{o,q} = \frac{\Delta h_c/v + c_{pg}(T_\infty - T_s)}{q_{i-l} + h_{fg}}, \quad (10.68b)$$

$$\dot{m}_F = \frac{4\pi k_g r_s}{c_{pg}} \ln(1 + B_{o,q}). \quad (10.68c)$$

The flame temperature is

$$T_f = \frac{q_{i-l} + h_{fg}}{c_{pg}(1+v)} [vB_{o,q} - 1] + T_s \quad (10.69)$$

and the flame radius is

$$r_f = r_s \frac{\ln[1 + B_{o,q}]}{\ln[(v+1)/v]}. \quad (10.70)$$

The fuel mass fraction at the droplet surface is

$$Y_{F,s} = \frac{B_{o,q} - 1/v}{B_{o,q} + 1}. \quad (10.71)$$

Equations 10.68–10.71 can all be evaluated for an assumed value of  $T_s$ . Equation V (10.67) can be used to provide an improved value for  $T_s$  (shown below as Eqn. 10.72, where  $T_s$  has been isolated on the left-hand-side) and then Eqns. 10.68–10.71 can be re-evaluated and the process repeated until convergence is obtained.

$$T_s = \frac{-B}{\ln \left[ \frac{-Y_{F,s} PMW_{Pr}}{A(Y_{F,s} MW_F - Y_{F,s} MW_{Pr} - MW_F)} \right]}. \quad (10.72)$$

As in our pure evaporation analysis, if we assume the fuel is at the boiling point, the problem is greatly simplified. With this assumption, Eqns. 10.68–10.70 are used to find  $\dot{m}_F$ ,  $T_f$ , and  $r_f$  without iteration, and Eqn. 10.71 is irrelevant since  $Y_{F,s}$  is unity when  $T_s = T_{boil}$ . This is a reasonable assumption when the droplet is burning vigorously after its initial heat-up transient.

### Burning Rate Constant and Droplet Lifetimes

The droplet mass burning rate in terms of the transfer number,  $B_{o,q}$ , expressed by Eqn. 10.68c, is of identical form to the expression derived for the evaporation rate (cf. Eqn. 10.13). Thus, without further development we can immediately define the **burning rate constant**,  $K$ , as

$$K = \frac{8k_g}{\rho_l c_{pg}} \ln(1 + B_{o,q}). \quad (10.73)$$

The burning rate constant is truly a constant only after a steady-state surface temperature is reached, since, then,  $B_{o,q}$  is a constant.

Assuming the transient heat-up period is small in comparison with the droplet lifetime, we recover once again a  **$D^2$  law** for droplet burning:

$$D^2(t) = D_0^2 - Kt, \quad (10.74)$$

where the droplet lifetime is found by letting  $D^2(t_d) = 0$ ; i.e.,

$$t_d = D_0^2/K. \quad (10.75)$$

Figure 10.14 shows that the  $D^2$  law is a good representation of experimental results [21] after the heat-up transient.

As with the pure evaporation problem, we need to define appropriate values of the properties  $c_{pg}$ ,  $k_g$ , and  $\rho_l$  that appear in Eqn. 10.73. Law and Williams [11] suggest the following empiricism:


$$c_{pg} = c_{pF}(\bar{T}), \quad (10.76a)$$

$$k_g = 0.4k_F(\bar{T}) + 0.6k_{Ox}(\bar{T}), \quad (10.76b)$$

$$\rho_l = \rho_l(T_s), \quad (10.76c)$$

where

$$\bar{T} = 0.5(T_s + T_f). \quad (10.76d)$$

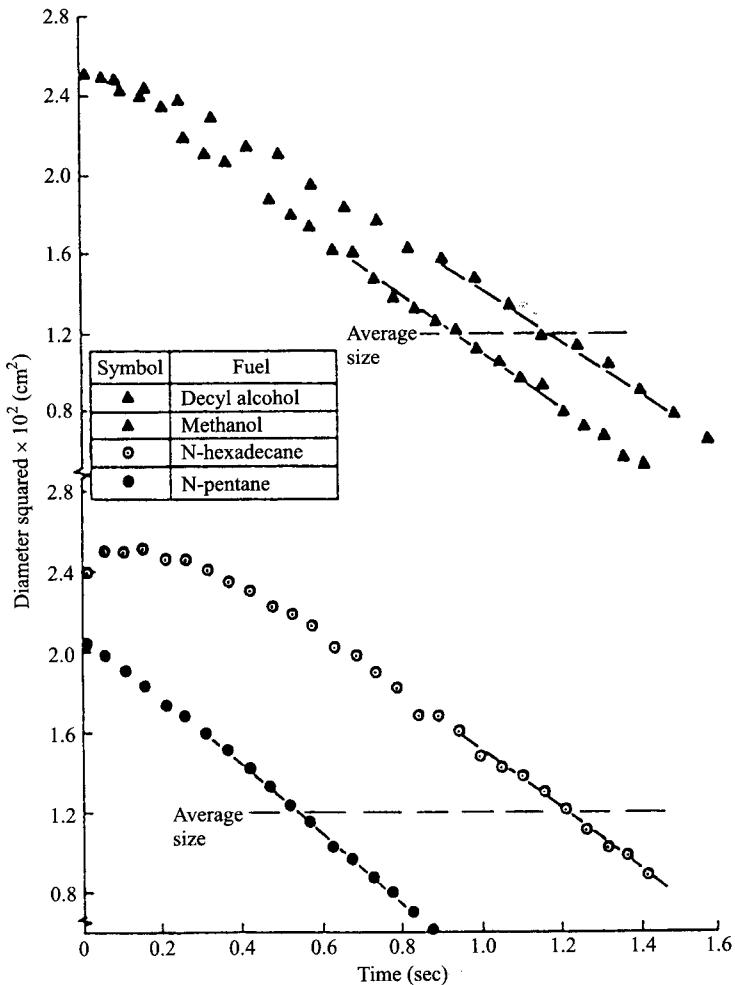

**Figure 10.14** Experimental data for burning droplets illustrating  $D^2$  law behavior after initial transient.

SOURCE: Reprinted from Ref. [21] with permission, © 1971, AIAA.

### Example 10.3

Consider the combustion of an *n*-heptane ( $C_7H_{16}$ ) droplet when its diameter is  $100\ \mu m$ . Determine (A) the mass burning rate, (B) the flame temperature, and (C) the ratio of the flame radius to the droplet radius for  $P = 1\ atm$  and  $T_\infty = 300\ K$ . Assume quiescent surroundings and that the droplet is at its boiling point.

### Solution

We will employ Eqns. 10.68, 10.69, and 10.70 to find  $\dot{m}_F$ ,  $T_f$ , and  $r_f/r_s$ , respectively. Our first task will be to determine values for the average properties required (Eqn. 10.76).

From our knowledge of Chapter 2, we guess that the flame temperature will be about 2200 K; thus,

$$\bar{T} = 0.5(T_s + T_f) = 0.5(371.5 + 2200) \cong 1285 \text{ K},$$

where  $T_{\text{boil}} (= T_s)$  was obtained from Appendix Table B.1.

From Appendices B and C, we obtain

$$k_{O_x}(\bar{T}) = 0.081 \text{ W/m-K} \quad (\text{Appendix Table C.1})$$

$$\begin{aligned} k_F(\bar{T}) &= k_F(1000 \text{ K}) \left( \frac{\bar{T}}{1000 \text{ K}} \right)^{1/2} \\ &= 0.0971 \left( \frac{1285}{1000} \right)^{1/2} = 0.110 \text{ W/m-K} \quad (\text{Appendix Table B.3}), \end{aligned}$$

where we use the  $T^{1/2}$ -dependence (cf. Eqn. 3.27) to extrapolate from 1000 K to 1285 K. Thus,

$$k_g = 0.4(0.110) + 0.6(0.081) = 0.0926 \text{ W/m-K}$$

and

$$\begin{aligned} c_{p,F}(\bar{T}) &= 4.22 \text{ kJ/kg-K} \quad (\text{Appendix Table B.3}), \\ h_{fg}(T_{\text{boil}}) &= 316 \text{ kJ/kg} \quad (\text{Appendix Table B.1}), \\ \Delta h_c &= 44,926 \text{ kJ/kg.} \quad (\text{Appendix Table B.1}). \end{aligned}$$

The stoichiometric air-fuel ratio,  $\nu$ , is (Eqns. 2.31 and 2.32)

$$\begin{aligned} \nu &= (x + y/4)4.76 \frac{MW_{O_x}}{MW_F} \\ &= (7 + 16/4)(4.76) \frac{28.85}{100.20} = 15.08. \end{aligned}$$

We can now evaluate the transfer number,  $B_{o,q}$ ,

$$\begin{aligned} B_{o,q} &= \frac{\Delta h_c/\nu + c_{pg}(T_\infty - T_s)}{q_{i-l} + h_{fg}} \\ &= \frac{(44,926/15.08) + 4.22(300 - 371.5)}{0 + 316} = 8.473, \end{aligned}$$

where droplet heating is ignored ( $q_{i-l} = 0$ ).

A. The mass burning rate is found as follows (Eqn. 10.68):

$$\begin{aligned}\dot{m}_F &= \frac{4\pi k_g r_s}{c_{pg}} \ln(1 + B_{o,q}) \\ &= \frac{4\pi 0.0926 \left( \frac{100 \cdot 10^{-6}}{2} \right)}{4220} \ln(1 + 8.473) \\ m_F &= 3.10 \cdot 10^{-8} \text{ kg/s}.\end{aligned}$$

B. To find the flame temperature, we evaluate as follows (Eqn. 10.69):

$$\begin{aligned}T_f &= \frac{q_{i-l} + h_{fg}}{c_{pg}(1 + v)} (vB_{o,q} - 1) + T_s \\ &= \frac{0 + 316}{4.22(1 + 15.08)} [15.08(8.473) - 1] + 371.5 \\ &= 590.4 + 371.5 \\ T_f &= 961.9 \text{ K}.\end{aligned}$$

This value is quite low. See comments below.

C. The dimensionless flame radius can be calculated from (Eqn. 10.70):

$$\begin{aligned}\frac{r_f}{r_s} &= \frac{\ln[1 + B_{o,q}]}{\ln[(v + 1)/v]} = \frac{\ln[1 + 8.473]}{\ln(16.08/15.08)} \\ \frac{r_f}{r_s} &= 35.\end{aligned}$$

### Comments

We note that the calculated temperature is much less than our guess of 2200 K! Unfortunately, the problem is not with our guess, but, rather, with the simplified theory. The choice of  $c_{pg} = c_{pF}(\bar{T})$  does a good job at predicting  $\dot{m}_F$ ; however, the large value ( $c_{pF} = 4.22 \text{ kJ/kg-K}$ ) is inappropriate for calculating  $T_f$ . A more reasonable choice would be to use a value that is typical of air (or products). For example, using  $c_{pg}(\bar{T}) = c_{p,\text{air}} = 1.187 \text{ kJ/kg-K}$ , yields  $T_f = 2470 \text{ K}$ , a much more reasonable temperature.

Experimental values of dimensionless flame radii ( $\sim 10$ ) are considerably smaller than that calculated above. Law [15] indicates that fuel-vapor accumulation effects account for the difference. In spite of the shortcomings of the theory, useful estimates of burning rates and droplet lifetimes are obtained.

Determine the lifetime of the 100- $\mu\text{m}$ -diameter *n*-heptane droplet from Example 10.3. How does the result compare with that for pure vaporization (no flame) with  $T_\infty = 2200 \text{ K}$ ?

**Example 10.4****Solution**

We first evaluate the burning rate constant using a liquid density of  $684 \text{ kg/m}^3$  (Appendix Table B.1):

$$\begin{aligned} K &= \frac{8k_g}{\rho_l c_{pg}} \ln(1 + B_{o,q}) \\ &= \frac{8(0.0926)}{684(4220)} \ln(1 + 8.473) = 5.77 \cdot 10^{-7} \text{ m}^2/\text{s}. \end{aligned}$$

The lifetime of the burning droplet is then (Eqn. 10.75)

$$t_d = D_0^2/K = (100 \cdot 10^{-6})^2 / 5.77 \cdot 10^{-7}$$

$$t_d = 0.0173 \text{ s}$$

For the pure evaporation problem, we use the same expression to evaluate  $K$  and  $t_d$ ; however, the transfer number is now expressed (Eqn. 10.12):

$$\begin{aligned} B &= \frac{c_{pg}(T_\infty - T_{\text{boil}})}{h_{fg}} \\ &= \frac{4.220(2200 - 371.5)}{316} = 24.42. \end{aligned}$$

The evaporation rate constant is then  $K = 8.30 \cdot 10^{-7} \text{ m}^2/\text{s}$  and the droplet lifetime is

$$t_d = 0.0120 \text{ s}.$$

**Comments**

We expect that the droplet lifetime should be longer for the pure evaporation case when  $T_f = T_\infty$ ; however, the “theoretical” flame temperature of  $961.9 \text{ K}$  (Example 10.2) is much less than the  $2200 \text{ K}$  ambient. Using the pure evaporation model with  $T_\infty = 961.9 \text{ K}$ , yields a predicted droplet lifetime of  $0.0178 \text{ s}$ , which is slightly longer than that for the burning droplet, as expected.

**Extension to Convective Environments**

To achieve the conditions of spherically symmetric burning in a stagnant medium, as assumed in our analysis above, requires no relative velocity between the droplet and the free stream, and no buoyancy. This latter condition can only be achieved in the absence of gravity or in a weightless freefall. Interest in buoyancy-free combustion has a long history (e.g., Refs. [22–24]), while a renewed interest has been shown with the advent of the space shuttle and the anticipation of a permanent space station in low-Earth orbit [25–28].

There are several approaches to incorporating convection in the droplet-burning problem [13–17]. The approach taken here is that of chemical


engineering “film theory.” This approach is straightforward and in keeping with our desire for simplicity.

The essence of film theory is the replacement of the heat- and mass-transfer boundary conditions at infinity with the same conditions moved inward to the so-called film radius,  $\delta_M$  for species and  $\delta_T$  for energy. Figure 10.15 illustrates how the film radius steepens concentration and temperature gradients, and, hence, increases mass- and heat-transfer rates at the droplet surface. This, of course, means that convection enhances droplet-burning rates and, as a result, burning times decrease.

The film radii are defined in terms of the **Nusselt number**,  $Nu$ , for heat transfer, and the **Sherwood number**,  $Sh$ , for mass transfer. Physically, the Nusselt number is the dimensionless temperature gradient at the droplet surface, and the Sherwood number is the dimensionless concentration (mass-fraction) gradient at the surface. Formally, the film radii are given by

$$\frac{\delta_T}{r_s} = \frac{Nu}{Nu - 2} \quad (10.77a)$$

$$\frac{\delta_M}{r_s} = \frac{Sh}{Sh - 2}. \quad (10.77b)$$

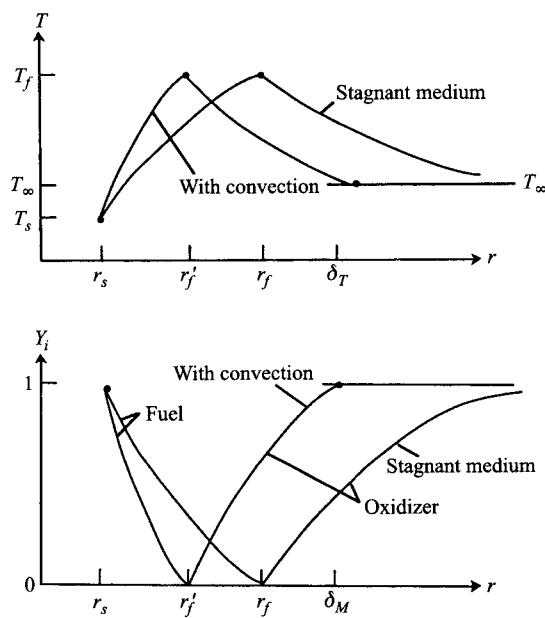

**Figure 10.15** Comparison of temperature and species profiles with and without convection. Theoretical film thicknesses are indicated by  $\delta_T$  (temperature) and  $\delta_M$  (species).

Note that for a stagnant medium,  $Nu = 2$ ; thus, we recover  $\delta_T \rightarrow \infty$  in the absence of convection. Consistent with the unity Lewis number assumption, we assume  $Sh = Nu$ . For droplet burning with forced convection, Faeth [13] recommends the following correlation to evaluate  $Nu$ :

$$Nu = 2 + \frac{0.555 Re^{1/2} Pr^{1/3}}{[1 + 1.232/(RePr^{4/3})]^{1/2}}, \quad (10.78)$$

where the Reynolds number,  $Re$ , is based on the droplet diameter and the relative velocity. For simplicity, thermophysical properties can be evaluated at the mean temperature (Eqn. 10.76d).

In terms of the basic conservation principles, convection affects the species conservation relations in the outer region (oxidizer distribution, Eqns. 10.37 and 10.38) and the energy conservation relations that involve the outer region ( $T$ -distribution in the outer region, Eqn. 10.44, and the energy balance at the flame sheet, Eqn. 10.63).

Application of the film-theory boundary condition for species conservation,

$$Y_{Ox}(\delta_M) = 1, \quad (10.79)$$

to Eqn. 10.37, yields

$$\frac{\exp[-Z_M \dot{m}_F / [r_s Nu / (Nu - 2)]]}{\exp(-Z_M \dot{m}_F / r_f)} - \frac{v + 1}{v} = 0. \quad (10.80)$$

Equation 10.80 (with convection) is equivalent to Eqn. 10.38 (without convection).

Application of the film-theory boundary condition for energy conservation,

$$T(\delta_T) = T_\infty, \quad (10.81)$$

to Eqn. 10.40 yields the outer-zone temperature distribution:

$$\begin{aligned} T(r) = & [(T_\infty - T_f) \exp(-Z_T \dot{m}_F / r) + T_\infty \exp(-Z_T \dot{m}_F / r_f) \\ & - T_f \exp(-Z_T \dot{m}_F (Nu - 2) / r_s Nu)] / [\exp(-Z_T \dot{m}_F / r_f) \\ & - \exp(-Z_T \dot{m}_F (Nu - 2) / r_s Nu)]. \end{aligned} \quad (10.82)$$

Using Eqn. 10.82 to evaluate the energy balance at the flame (Eqn. 10.61), yields

$$\begin{aligned} & \frac{c_{pg}}{\Delta h_c} \left[ \frac{(T_f - T_s) \exp(-Z_T \dot{m}_F / r_f)}{\exp(-Z_T \dot{m}_F / r_f) - \exp(-Z_T \dot{m}_F / r_s)} \right. \\ & \left. - \frac{(T_f - T_\infty) \exp(-Z_T \dot{m}_F / r_f)}{\exp(-Z_T \dot{m}_F / r_f) - \exp(-Z_T \dot{m}_F (Nu - 2) / r_s Nu)} \right] - 1 = 0, \end{aligned} \quad (10.83)$$

which is the film-theory equivalent to Eqn. 10.54 for the stagnant case.

We now, once again, have a system of five nonlinear algebraic equations involving the five unknowns  $\dot{m}_F$ ,  $T_f$ ,  $r_f$ ,  $Y_{F,s}$ , and  $T_s$  (cf. Table 10.1).

Simultaneously solving for three of these— $\dot{m}_F$ ,  $T_f$ , and  $r_f$ —gives the burning rate:

$$\dot{m}_F = \frac{2\pi k_g r_s N u}{c_{pg}} \ln \left[ 1 + \frac{\Delta h_c/v + c_{pg}(T_\infty - T_s)}{q_{i-l} + h_{fg}} \right] \quad (10.84a)$$

or

$$\dot{m}_F = \frac{2\pi k_g r_s N u}{c_{pg}} \ln(1 + B_{o,q}), \quad (10.84b)$$

where the transfer number has been introduced (cf. Eqn. 10.68b). Note that this expression (Eqn. 10.84b) differs from that for the stagnant case (Eqn. 10.68c) only by the explicit appearance of the Nusselt number. In the stagnant flow case,  $N u = 2$ , and the two expressions are identical, as expected.

## ADDITIONAL FACTORS

There are many complicating features of real burning droplets that are ignored in the simplified theory presented above. It is beyond the scope of this book to discuss any of the topics in detail; instead, we merely list some of them and cite a few references to provide starting points for further study.

In the simplified model, all properties are treated as constants, and a judicious selection of mean values is used to provide agreement with experiment. In reality, many of the properties possess strong temperature and/or composition dependencies. Various approaches have been taken to include **variable properties**, with, perhaps, the most comprehensive treatment found in Refs. [29] and [30]. Reference [12] compares various simplified approaches with comprehensive numerical results. Also related to the issue of variable properties is the correct formulation of the conservation equations when the ambient temperature and/or pressure exceeds the thermodynamic critical point of the evaporating liquid. This is an important issue for modeling burning droplets in both diesel and rocket engines. More information on **supercritical droplet combustion and evaporation** can be found in Refs. [31] and [32].

The unrealistically large flame stand-off distances predicted by the  $D^2$  law (see Example 10.3) are shown by Law *et al.* [33] to be a result of neglecting the unsteady effect of **fuel-vapor accumulation** between the droplet surface and the flame. Inclusion of this effect in a modified  $D^2$ -law model results in capturing the flame movement observed in experiments [15, 33].

More sophisticated models of **droplet heating** have also been developed that take into account the time-varying temperature field within the droplet [34]. Proper treatment of the liquid phase is important in the evaporation and combustion of **multicomponent fuel** droplets [35, 36]. Related to this issue is the shear-driven fluid motion within droplets in a convective environment, i.e., **internal recirculation** [16, 36].

More recent approaches to single droplet gasification include numerical models that treat the problem in its appropriate axisymmetric coordinate system. This approach incorporates the effects of convection directly, rather than as an ad-hoc modification to assumed spherical symmetry [36]. Recent models [37] also take into account the detailed chemical kinetics associated with envelope flames, abandoning the simplified flame-sheet or one-step chemistry approximations.

An interesting, and somewhat ironic, result of experiments conducted at near-zero gravity is the observation of the formation of a **soot shell** between the droplet surface and the flame [27]. In normal gravity, buoyancy-induced flow convects the soot away from the droplet. In zero gravity, however, there is no buoyant flow to remove the soot and, hence, a soot shell forms. This shell greatly alters the combustion process and causes radiation effects to play important roles in burning and extinction [26, 28].

Finally, we come to the issue of **interactions among multiple droplets**, as would be present in a fuel spray. Spray evaporation and combustion is of great practical importance and has a huge literature associated with it. Useful starting points for further study of sprays are Refs [14, 20, 38]. A primary issue in spray combustion is the coupling of the variable ambient conditions, to which a droplet is exposed during its lifetime, and the droplet evaporation rate.



---

## ONE-DIMENSIONAL VAPORIZATION-CONTROLLED COMBUSTION

In this section, we will apply the concepts developed above to the analysis of a simple, one-dimensional, steady-flow, liquid-fuel combustor. This section stands alone in that it is a large-scale example of how droplet evaporation and equilibrium concepts (Chapter 2) can be combined to model spray combustors, such as are used in gas-turbine and rocket engines (cf. Figs. 10.4a and 10.5), and brings together the previously developed theory and applications, albeit in a simplified fashion. Since the primary objective of this section is to provide a framework from which various design problems or projects can be developed, no new fundamental combustion concepts are introduced here; therefore, depending on the reader's objectives, this section can be skipped without jeopardizing understanding of subsequent chapters.

### Physical Model

Figure 10.16a schematically illustrates a simple combustor with a constant cross-section area. Fuel droplets, uniformly distributed across the combustor, evaporate as they move downstream in an oxidizer stream. The fuel vapor is assumed to mix with the gas phase and burn instantaneously. This causes the gas temperature to rise, speeding the vaporization of the droplets. The gas velocity increases because droplet vaporization, and, possibly, secondary

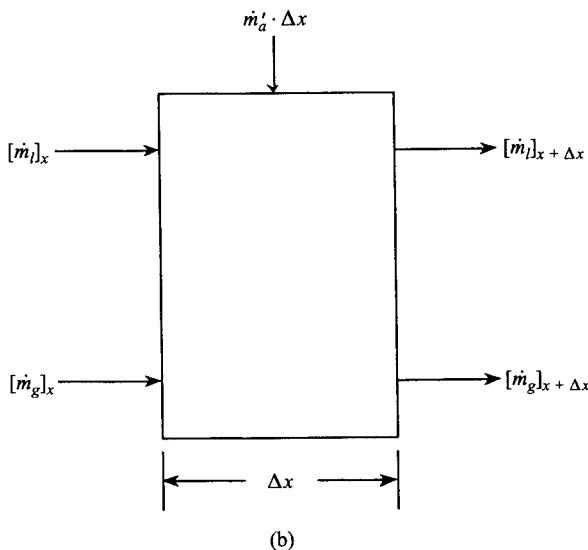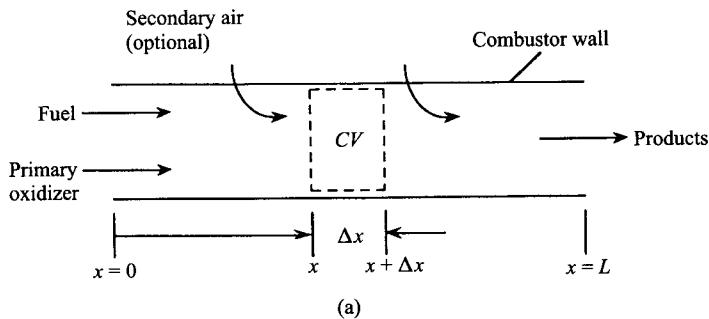

**Figure 10.16** (a) Overall schematic of one-dimensional combustor with (b) details of control-volume analysis for overall mass conservation.

oxidizer addition, add mass to the gas phase, and because combustion decreases the gas density.

Obviously, the model discussed above neglects many detailed phenomena occurring in a real combustor; however, for flows without recirculation and back-mixing, or downstream of such regions, the model is a useful first approximation when mixing and burning rates are substantially faster than fuel vaporization rates. Priem and Heidmann [39] and Dipprey [7] have applied one-dimensional, vaporization-controlled models to liquid-rocket engine combustion, and Turns and Faeth [40] have used the approach to model slurry-fuel combustion in a gas-turbine combustor. In the following sections, we develop the analysis of a one-dimensional combustor that can be easily implemented in a computer code.

## Assumptions

The following assumptions will be embodied in our simple analysis of a liquid-fueled combustor:

1. The system comprises only two phases: a gas phase, consisting of combustion products; and a liquid, single-component fuel phase.
2. The properties of the gas phase and liquid phase depend only on the coordinate in the flow direction, i.e., the flow is one-dimensional. This implies that the gas phase has uniform properties in the radial direction perpendicular to the flow at any axial position,  $x$ . Furthermore, we neglect diffusion, even though axial concentration gradients exist.
3. The effects of friction and velocity changes on pressure are neglected. This implies the pressure is constant, i.e.,  $dP/dx = 0$ , and simplifies the vaporization problem.
4. The fuel is introduced as a stream of monodisperse droplets, i.e., all droplets have the same diameter and velocity at any axial location.
5. The droplets in the stream all obey the droplet evaporation theory presented earlier in Chapter 10, with the droplet temperature assumed fixed at the boiling point.
6. The gas-phase properties are determined by equilibrium, or alternatively, by the even simpler no-dissociation model with water-gas equilibrium (cf. Chapter 2).

## Mathematical Problem Statement

Given a set of initial conditions for the gas phase and the liquid phase, we wish to determine the following functions:

*Gas phase:*       $T_g(x)$ , temperature;  
                          $\dot{m}_g(x)$ , mass flowrate;  
                          $\Phi_g(x)$ , equivalence ratio;  
                          $v_g(x)$ , velocity;

*Liquid phase:*       $D(x)$ , droplet diameter;  
                          $\dot{m}_l(x)$ , fuel evaporation rate;  
                          $v_d(x)$ , droplet velocity.

In the section below, we apply the basic conservation principles (mass, momentum, and energy conservation) to determine the desired functions listed above.

## Analysis

For this problem, we choose a steady-state, steady-flow, control-volume analysis. The selected control volume extends across the combustor and is  $\Delta x$  in length (Fig. 10.16a).

**Mass Conservation** Figure 10.16b shows the mass flows of both the liquid and gas phases into and out of the control volume. Since there is no change in mass within the control volume, the total mass flows entering and exiting the control volume are equal:

$$[\dot{m}_l]_x + [\dot{m}_g]_x + \dot{m}'_a \cdot \Delta x = [\dot{m}_l]_{x+\Delta x} + [\dot{m}_g]_{x+\Delta x},$$

where  $\dot{m}_l$  and  $\dot{m}_g$  are the mass flowrates (kg/s) of the liquid and gas phases, respectively, and  $\dot{m}'_a$  is the mass flow of secondary oxidizer per unit length (kg/s-m) entering the control volume. We assume that  $\dot{m}'_a$  is a given function of  $x$ .

Rearranging the above, we obtain

$$\frac{[\dot{m}_l]_{x+\Delta x} - [\dot{m}_l]_x}{\Delta x} + \frac{[\dot{m}_g]_{x+\Delta x} - [\dot{m}_g]_x}{\Delta x} = \dot{m}'_a.$$

Taking the limit of  $\Delta x \rightarrow 0$  and recognizing the definition of a derivative, we obtain the following governing equation for conservation of total mass:

$$\frac{d\dot{m}_l}{dx} + \frac{d\dot{m}_g}{dx} = \dot{m}'_a. \quad (10.85)$$

Equation 10.85 can be integrated to provide an expression for  $\dot{m}_g(x)$ :

$$\dot{m}_g(x) = \dot{m}_g(0) + \dot{m}_l(0) - \dot{m}_l(x) + \int_0^x \dot{m}'_a dx. \quad (10.86)$$

We next focus solely on the liquid phase; thus, the control volume shown in Fig. 10.17a contains only liquid. The  $\dot{m}'_{lg}$  term is the mass flowrate of fuel per unit length going from the liquid phase into the gas phase, i.e., the fuel vaporization rate. Thus, the rate at which liquid fuel exits the control volume at  $x + \Delta x$  is less than that entering at  $x$  by the amount  $\dot{m}'_{lg} \Delta x$ , i.e.,


$$[\dot{m}_l]_x - [\dot{m}_l]_{x+\Delta x} = \dot{m}'_{lg} \cdot \Delta x.$$

Rearranging, and taking the limit  $\Delta x \rightarrow 0$ , yields

$$\frac{d\dot{m}_l}{dx} = -\dot{m}'_{lg}.$$

The flowrate of liquid through the combustor can be related to the number of fuel droplets entering the chamber per unit time,  $\dot{N}$ , and the mass of an individual droplet,  $m_d$ . Thus,

$$\dot{m}_l = \dot{N}m_d \quad (10.87)$$

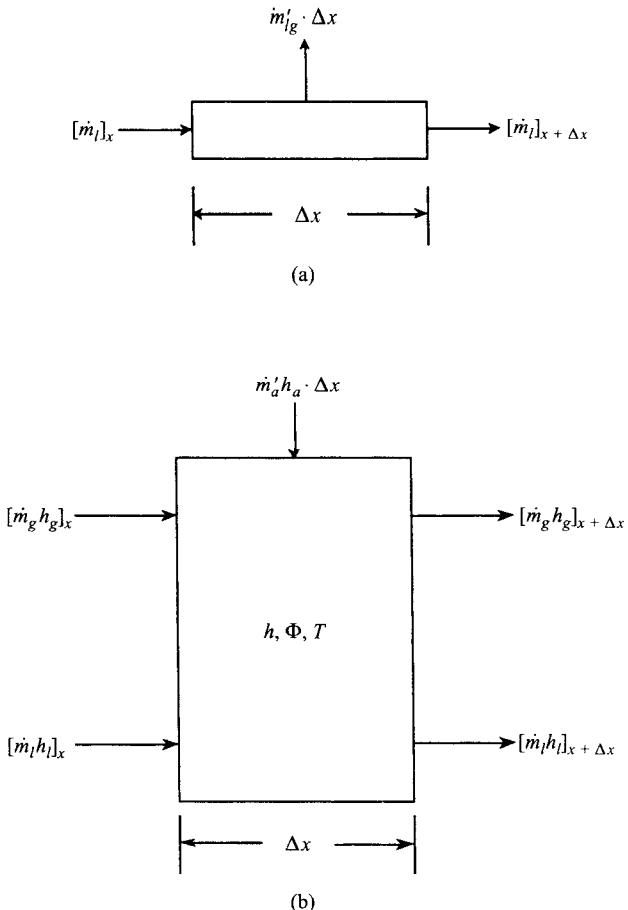

**Figure 10.17** Control-volume analysis for (a) fuel mass conservation and (b) overall energy conservation.

or

$$\dot{m}_l = \dot{N} \rho_l \pi D^3 / 6, \quad (10.88)$$

where  $\rho_l$  and  $D$  are the droplet density and diameter, respectively.

Differentiating Eqn. 10.88, we obtain

$$\frac{d\dot{m}_l}{dx} = (\pi/4) \dot{N} \rho_l D \frac{dD^2}{dx}. \quad (10.89)$$

The derivative of  $D^2$  with respect to  $x$  can be related to the time derivative through the droplet velocity  $v_d$ , i.e.,  $dx = v_d dt$ ; thus,

$$\frac{dD^2}{dx} = \frac{1}{v_d} \frac{dD^2}{dt}. \quad (10.90)$$

In an earlier section, we derived an expression for  $dD^2/dt$ . Substituting Eqn. 10.17 into Eqn. 10.90 yields

$$\frac{dD^2}{dx} = -K/v_d, \quad (10.91)$$

where  $K$  is the evaporation coefficient (cf. Eqn. 10.18).

The number of droplets entering the combustor per unit time is easily related to the initial fuel flowrate and the assumed initial droplet size,  $D_0$ , i.e.,

$$\dot{m}_{l,0} = \dot{N}\rho_l\pi D_0^3/6 \quad (10.92a)$$

or

$$\dot{N} = 6\dot{m}_{l,0}/(\pi\rho_l D_0^3). \quad (10.92b)$$

The above mass conservation analysis provides a single ordinary differential equation, Eqn. 10.91, which, when solved, yields  $D^2(x)$  or  $D(x)$ . Knowing the droplet diameter,  $\dot{m}_g$  can be calculated using Eqn. 10.86 and appropriate ancillary relations.

To find the droplet velocity as a function of axial distance,  $v_d(x)$ , requires application of conservation of momentum to a droplet, which will be discussed subsequently. The velocity of the gas phase can be written as

$$v_g = \dot{m}_g/\rho_g A, \quad (10.93)$$

where  $\rho_g$  is the gas-phase density, and  $A$  is the cross-sectional area of the combustor. The density can be related to the gas temperature and pressure through the ideal-gas law:

$$\rho_g = P/R_g T_g, \quad (10.94)$$

where

$$R_g = R_u/MW_g. \quad (10.95)$$

Gas-phase energy conservation is required to find  $T_g$ , and since the composition of the gas phase is continually varying as we move downstream, the molecular weight,  $MW_g$ , is a variable as well. Substituting Eqns. 10.94 and 10.95 into Eqn. 10.93 yields

$$v_g = \dot{m}_g R_u T_g / (MW_g PA). \quad (10.96)$$

**Gas-Phase Energy Conservation** With reference to Fig. 10.17b, and following the same procedures used to derive the mass conservation relationships, conservation of energy for the control volume is expressed as

$$\frac{d(\dot{m}_g h_g)}{dx} + \frac{d(\dot{m}_l h_l)}{dx} = \dot{m}_a' h_a, \quad (10.97)$$

where we assume no heat of work interactions. Expanding the derivatives of the products and recognizing that the enthalpy of the liquid is a constant, Eqn. 10.97 becomes, after rearrangement,

$$\frac{dh_g}{dx} = \left[ \dot{m}'_a h_a - h_g \frac{d\dot{m}_g}{dx} - h_l \frac{d\dot{m}_l}{dx} \right] / \dot{m}_g. \quad (10.98)$$

Since we are interested in finding the temperature distribution,  $T(x)$ , the enthalpy can be related to the temperature and the other thermodynamic variables:

$$h_g = f(T_g, P_g, \Phi_g), \quad (10.99)$$

where the relationships among these variables are determined by equilibrium. Applying the chain rule, recognizing that  $P_g$  is constant,  $dh_g/dx$  can be expressed as

$$\frac{dh_g}{dx} = \frac{\partial h_g}{\partial T} \frac{dT}{dx} + \frac{\partial h_g}{\partial \Phi} \frac{d\Phi}{dx}, \quad (10.100)$$

where the subscript  $g$  has been dropped from  $T$  and  $\Phi$ .

Equating the right-hand-sides of Eqns. 10.98 and 10.100, and solving for  $dT/dx$ , yields

$$\frac{dT}{dx} = \left[ \left( \dot{m}'_a h_a - h_g \frac{d\dot{m}_g}{dx} - h_l \frac{d\dot{m}_l}{dx} \right) / \dot{m}_g - \frac{\partial h_g}{\partial \Phi} \frac{d\Phi}{dx} \right] / \frac{\partial h_g}{\partial T}. \quad (10.101)$$

The gas enthalpy,  $h_g$  and its partial derivatives,  $\partial h_g/\partial T$  and  $\partial h_g/\partial \Phi$ , can all be calculated knowing the equilibrium state at  $T$ ,  $P$ , and  $\Phi$ . The Olikara and Borman [41] equilibrium code (see Appendix F) can be employed to perform these calculations. Equation 10.101 can be simplified further by using Eqn. 10.85 to eliminate  $d\dot{m}_g/dx$ , i.e.,

$$\frac{dT}{dx} = \left\{ \left[ (h_a - h_g)\dot{m}'_a + (h_g - h_l) \frac{d\dot{m}_l}{dx} \right] / \dot{m}_g - \frac{\partial h_g}{\partial \Phi} \frac{d\Phi}{dx} \right\} / \frac{\partial h_g}{\partial T}. \quad (10.102)$$

To maintain perspective on where we have been and where we are going, a brief summary is helpful at this point in our analysis. So far, we have derived first-order ordinary differential equations giving expressions for  $dD^2/dx$  and  $dT_g/dx$ . These equations can be integrated (numerically) to yield  $D(x)$  and  $T_g(x)$  for given initial conditions. It remains for us to determine expressions for  $\Phi$  and  $d\Phi/dx$ , and to derive one more differential equation that can be integrated to find the droplet velocity,  $v_d(x)$ .

**Gas-Phase Composition** Our goal here is to determine the axial distribution of the equivalence ratio,  $\Phi(x)$ . This calculation is just a subset of mass conservation, since all that is required is a knowledge of the mass of the fuel and oxidizer at any axial location.

Assume that at  $x = 0$ , the chamber entrance, there is an initial gas-phase flow. This flow may be a burned or unburned mixture of oxidizer and fuel (or pure oxidizer or pure fuel), and can be expressed as

$$\dot{m}_g(0) = \dot{m}_F(0) + \dot{m}_a(0). \quad (10.103)$$

The fuel–oxidizer ratio at an arbitrary position,  $x$ , downstream, is just the ratio of the mass flow of the gas phase that had its origin as fuel to the mass flow of the gas phase that had its origin as oxidizer:

$$(F/O)_x = \frac{\dot{m}_{F,x}}{\dot{m}_{a,x}} = \frac{\dot{m}_g(x) - \dot{m}_{a,0} - \int_0^x \dot{m}'_a dx}{\dot{m}_{a,0} + \int_0^x \dot{m}'_a dx}. \quad (10.104a)$$

Equation 10.104a can be rearranged to yield

$$(F/O)_x = \dot{m}_g \left[ \dot{m}_{a,0} + \int_0^x \dot{m}'_a dx \right]^{-1} - 1, \quad (10.104b)$$

which, when differentiated with respect to  $x$ , becomes

$$\frac{d(F/O)_x}{dx} = \frac{d\dot{m}_g}{dx} \left[ \dot{m}_{a,0} + \int_0^x \dot{m}'_a dx \right]^{-1} - \dot{m}_g \dot{m}'_a \left[ \dot{m}_{a,0} + \int_0^x \dot{m}'_a dx \right]^{-2}. \quad (10.105)$$

The equivalence ratio and its derivative are then easily obtained by definition:


$$\Phi(x) \equiv (F/O)_x / (F/O)_{\Phi=1} \quad (10.106)$$

and

$$\frac{d\Phi(x)}{dx} = \frac{1}{(F/O)_{\Phi=1}} \frac{d(F/O)_x}{dx}, \quad (10.107)$$

where we assume that the fuel entering the chamber in the gas phase ( $\dot{m}_F(0)$ ) has the same hydrogen-to-carbon ratio as the injected fuel ( $\dot{m}_f(0)$ ). If this is not true, then  $(F/O)_{\Phi=1}$  varies through the chamber, and this variation would have to be taken into account.

**Droplet Momentum Conservation** Fuel droplets initially injected at high velocities into the lower-velocity gas stream will slow down because of drag. As the fuel evaporates and burns, the velocity of the gas increases. This may cause the droplets to decelerate at a lesser rate, or accelerate, depending on the relative velocity between the gas and the droplet. The relative velocity also affects the evaporation rate. We assume that drag is the only force acting on the particle. This force will act in the same direction as  $V_{rel}$ . Figure 10.18a defines the

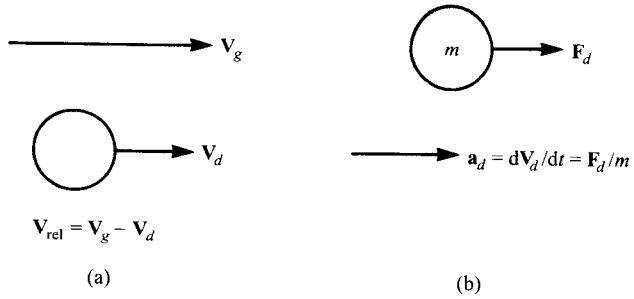

**Figure 10.18** (a) Definition of relative velocity for a droplet in a gas stream and (b) Newton's second law applied to a droplet.

relative velocity,  $\mathbf{V}_{\text{rel}}$ . Applying Newton's second law ( $\mathbf{F} = m\mathbf{a}$ ) to the droplet yields

$$F_d = m_d \frac{dv_d}{dt}. \quad (10.108)$$

Transforming from the time to space domain via  $dx = v_d dt$ , we obtain

$$F_d = m_d v_d \frac{dv_d}{dx}. \quad (10.109)$$

The drag force can be obtained by using an appropriate drag coefficient correlation [42], i.e.,

$$C_D = f(Re_{D,\text{rel}}) \approx \frac{24}{Re_{D,\text{rel}}} + \frac{6}{1 + \sqrt{Re_{D,\text{rel}}}} + 0.4 \quad (10.110)$$

for  $0 \leq Re_{D,\text{rel}} \leq 2 \cdot 10^5$ , where

$$C_D = \frac{F_d / (\pi D^2 / 4)}{\rho_g v_{\text{rel}}^2 / 2}. \quad (10.111)$$

Substituting Eqn. 10.111 into 10.109 and rearranging gives

$$\frac{dv_d}{dx} = \frac{3C_D \rho_g v_{\text{rel}}^2}{4\rho_l D v_d}, \quad (10.112)$$

where the sign of  $dv_d/dx$  is the same as  $v_{\text{rel}}$ , or

$$\frac{dv_d}{dx} = \frac{3C_D \rho_g (v_g - v_d) |v_g - v_d|}{4\rho_l D v_d}. \quad (10.113)$$

## Model Summary

In the preceding, we developed a system of ordinary differential equations and ancillary algebraic relations that describe the operation of a vaporization-controlled, one-dimensional combustor. Mathematically, the problem is an initial-

value problem, with the temperature and flowrates specified at the inlet ( $x = 0$ ). To make the solution procedure clear, the governing equations and their initial conditions are summarized below.

*Liquid mass (droplet diameter)*

$$\frac{dD^2}{dx} = f_1, \quad (10.91)$$

with

$$D(0) = D_0.$$

*Gas-phase mass*

$$\dot{m}_g(x) = \dot{m}_g(0) + \dot{m}_l(0) - \dot{m}_l(x) + \int_0^x \dot{m}_a dx, \quad (10.86)$$

where

$$\dot{m}_g(0) = \dot{m}_{F,0} + \dot{m}_{a,0}.$$

*Gas-phase energy*

$$\frac{dT_g}{dx} = f_2, \quad (10.102)$$

with

$$T_g(0) = T_{g,0}.$$

*Droplet momentum (velocity)*

$$\frac{dv_d}{dx} = f_3, \quad (10.113)$$

with

$$v_d(0) = v_{d,0}.$$

In addition to the above, there are several other purely algebraic relationships necessary to provide closure, together with the relationships expressing the complex equilibrium for the C–H–O–N system.

To solve the problem, the above governing equations can be integrated numerically using one of the many readily available packaged subroutines [43,44]. To calculate the equilibrium properties of the gas phase, the methods presented in Chapter 2 can be employed to solve the problem, or an existing program or subroutine, e.g. Ref. [41], can be adopted for this purpose. The Olikara and Borman code [41] is convenient to use since it routinely calculates the various useful partial derivatives ( $(\partial h/\partial T)$ ,  $\partial h/\partial \Phi$ , etc.) in its determination of the equilibrium composition.


Consider the liquid-fueled rocket engine illustrated in Fig. 10.19, where a cylindrical combustion chamber is attached to a converging-diverging supersonic nozzle. A portion of the fuel is used to cool the nozzle and, hence, is vaporized; thus, both gaseous and liquid fuel enter the combustion chamber along with the gaseous oxidizer. The liquid fuel is atomized into small droplets at the injector plate (head end of combustion chamber at  $x = 0$ ). Using the parameters shown below, apply the one-dimensional analysis developed above to explore the effects of initial droplet diameter,  $D_0$ , on the temperature distribution,  $T(x)$ , and the gas-phase equivalence ratio distribution,  $\Phi(x)$ , along the axis of the combustion chamber. Also, show the droplet diameter history and the droplet- and gas-phase velocities.

**Example 10.5**

Combustor cross-sectional area	$0.157 \text{ m}^2$ ,
Combustor length	$0.725 \text{ m}$ ,
Total fuel injection area	$0.0157 \text{ m}^2$ ,
Fuel	<i>n</i> -heptane ( $\text{C}_7\text{H}_{16}$ ),
Overall equivalence ratio, $\Phi_{\text{OA}}$	2.3,
Premixed equivalence ratio, $\Phi(0)$	0.45,
Initial temperature, $T(0)$	801 K,
Combustion chamber pressure	3.4474 MPa,
Initial droplet velocity, $v_d(0)$	10 m/s.

**Solution**

The mathematical one-dimensional combustor model, as summarized above (Eqns. 10.91, 10.86, 10.102, and 10.113), was coded in Fortran. A main program calculated the initial conditions from the given input parameters, and carried out the integration of the governing ordinary differential equations by calling the IMSL routine DGEAR [43].

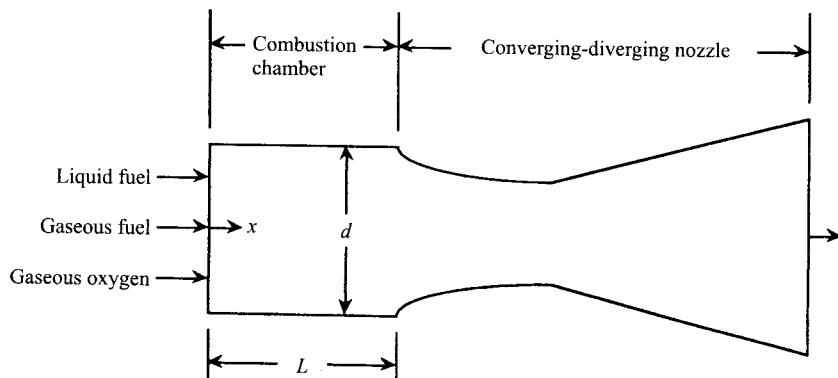

**Figure 10.19** Schematic diagram of liquid-fueled rocket engine with cylindrical combustion chamber.

The equilibrium properties and the thermodynamic partial derivatives were obtained using a version of the Olikara and Borman routine [41], modified to deal with a nitrogen-free oxidizer. Curvefit properties ( $k$ ,  $\mu$ , and  $c_p$ ) for *n*-heptane vapor were taken from Appendix B, and the heptane heat of vaporization was estimated from vapor-pressure data [46] using the Clausius–Clapeyron relation. For simplicity, the gas-phase transport properties were assumed to be those of pure oxygen and obtained from curvefits [45]. Convective enhancement of evaporation was ignored.

Results from exercising this model for five different initial droplet diameters, ranging from  $30\text{ }\mu\text{m}$  to  $200\text{ }\mu\text{m}$ , are shown in Figs. 10.20 and 10.21. Here we see that, for the two smallest initial droplet sizes ( $D_0 = 30$  and  $50\text{ }\mu\text{m}$ ), combustion is complete within the length of the combustion chamber, i.e.,  $D/D_0$  becomes zero at a distance less than  $L (= 725\text{ mm})$ . The larger droplets, however, exit the chamber after being partially vaporized. To achieve complete combustion within the combustion chamber, we see from Fig. 10.20 that the initial drop size must be somewhat less than  $80\text{ }\mu\text{m}$ . Since the combustor operates rich overall, the gas-phase equivalence ratio,  $\Phi_g$ , monotonically increases from the initial value based on the entering fuel vapor. Peak temperatures of approximately  $3400\text{ K}$  occur near  $\Phi_g = 1$  (cf. Chapter 2). From Fig. 10.20, we see that for the smallest droplets ( $30\text{ }\mu\text{m}$ ), temperatures are highest near the injector face, while for the largest droplets ( $200\text{ }\mu\text{m}$ ), the peak temperature is not quite reached before the exit of the combustor. In practice, excessive heat transfer from the combustion gases can damage or destroy the injector assembly. We see then, that an optimum initial droplet size exists such that combustion can be completed within the combustion chamber, while maintaining the highest-temperature zone as far downstream from the injector face as possible. Figure 10.21 shows the tremendous increase in gas velocity associated with the vaporization and combustion of the fuel droplets. With the assumption that the initial droplet velocity is  $10\text{ m/s}$ , we see that the droplet is always moving more slowly than the gas and, hence, is continually being accelerated. We also see that with such relatively large slip velocities, neglecting convective enhancement of vaporization is not justified.


#### Comments

This example clearly shows that even a simple model can be used to gain insight into complex situations. Since parametric investigations are easily conducted, such models can be used to provide guidance in both engine design and development efforts. One must be cautious, however, in that a model is only as good as its incorporated physics, which is always incomplete. Nevertheless, computer codes, much more sophisticated than those employed here, are routinely used in the design and development of combustion systems.

---


## SUMMARY

In this chapter, we first saw how the operation of many practical devices depends on the evaporation and/or combustion of fuel droplets. To illuminate these processes, several mathematical models were developed. The first of these was a simple heat-transfer-controlled model of droplet vaporization in a hot gas. This model is analogous to the mass-transfer-controlled evaporation

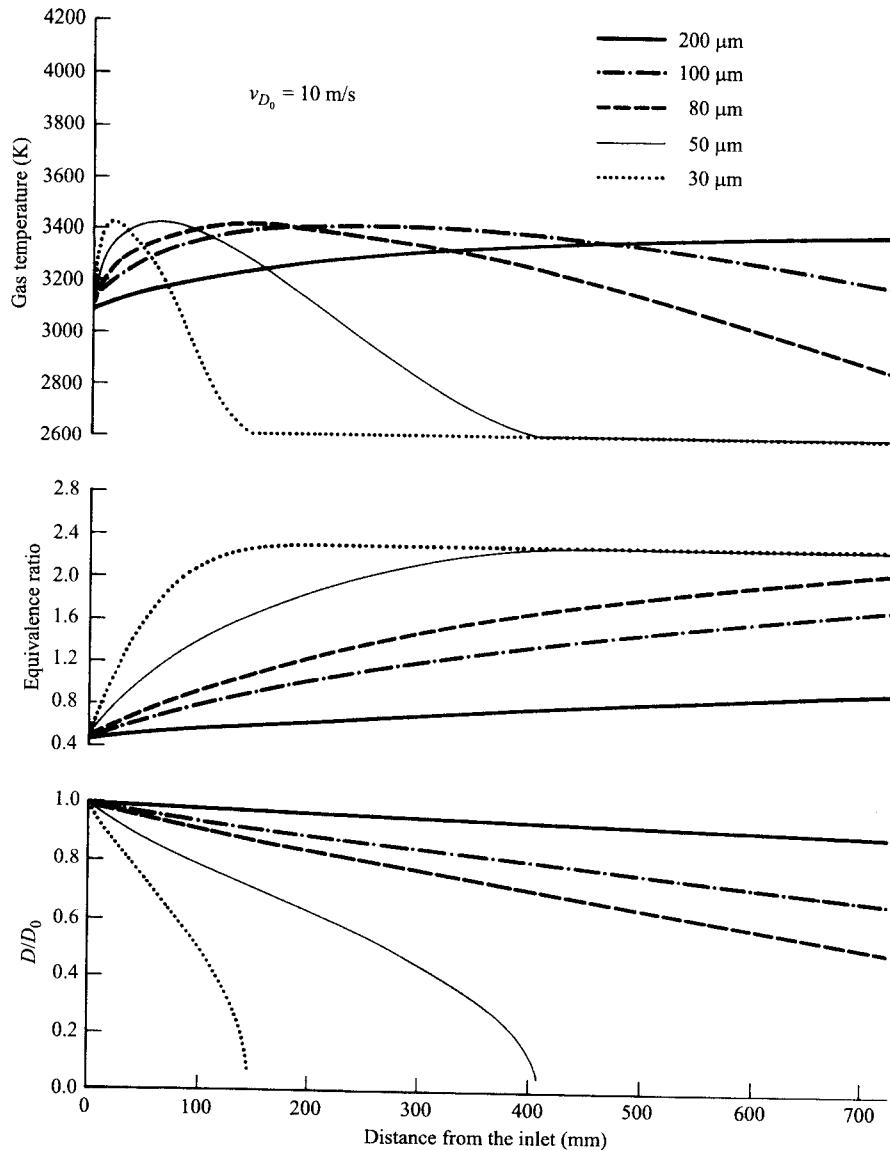

**Figure 10.20** The effects of initial droplet size on gas temperature, equivalence ratio, and droplet size. The initial droplet velocity is 10 m/s.

model introduced in Chapter 3. With the assumption that the droplet surface is at the boiling point, the problem is uncoupled from mass-transfer considerations and very simple and easy-to-use expressions result for calculating evaporation rates and droplet lifetimes. The second, more general, analysis models droplet gasification with a spherically symmetric flame surrounding the droplet. The flame is assumed to be an infinitesimally thin sheet where the

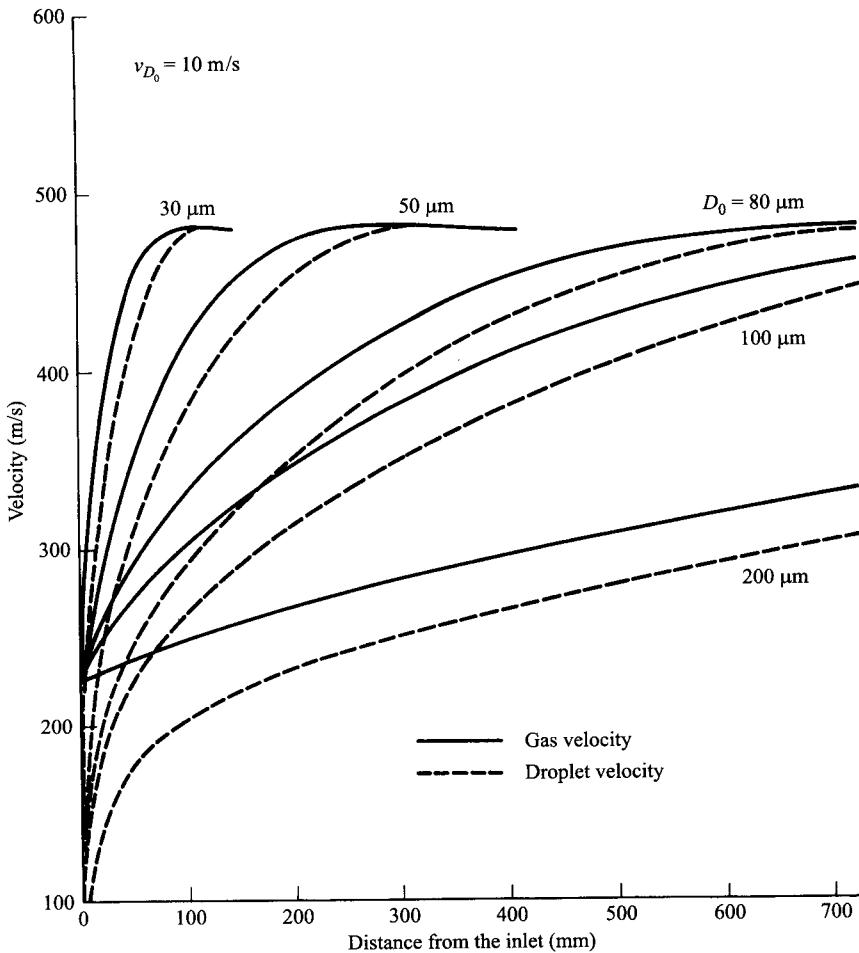

**Figure 10.21** The effects of initial droplet size on gas and droplet velocities. The initial droplet velocity is 10 m/s.

fuel vapor from the evaporating droplet reacts instantaneously with the inward-diffusing oxidizer. This simple model allows prediction of the droplet burning rate, flame radius, droplet surface and flame temperatures, and fuel-vapor concentration at the droplet surface. You should be thoroughly familiar with the conservation principles involved and how they apply to this particular problem. In particular, you should have a physical understanding of the various mass-flux relationships. In the burning-droplet model, we have coupled the heat-transfer and mass-transfer problems, unlike the isolated mass-transfer analysis (Stefan problem) of Chapter 3 and the heat-transfer (evaporating-droplet) analyses presented in this chapter. Of course, if one assumes that the droplet surface is at the boiling point, we return to the heat-transfer-domi-

nated problem. You should be able to apply the Clausius–Clapeyron relationship relating vapor pressure and temperature to determine the fuel-vapor concentration at the droplet surface. Applying the results of the simple gas-phase theory to estimate droplet lifetimes, we recovered the  $D^2$  law for droplet combustion. Lumped-parameter and onion-skin models treating transient droplet heat-up were also developed. Using film theory, we extended the analysis to a droplet burning in a convective environment and saw that convection enhances burning rates and, thus, shortens droplet lifetimes. The chapter also contains a brief discussion of the many complicating factors, of which you should be aware, that are ignored in the simple model.

The chapter concludes with the development of a simple, but general, one-dimensional model of a combustion chamber in which the combustion rate is governed by the vaporization rate of the fuel droplets injected into the chamber. Applications of this model include liquid-rocket engine and gas-turbine combustors. You saw how a steady-flow, control-volume approach could be coupled with droplet-evaporation theory and chemical equilibrium (Chapter 2). The control-volume analyses (mass, energy, and droplet momentum) are sufficiently simple that you should be able to develop similar analyses on your own. The 1-D model was applied to the problem of a liquid-hydrocarbon-fueled rocket engine, and the effect of initial droplet size on important chamber design parameters were explored. With appropriate computer codes, you should be able to conduct similar design analyses.

---

## NOMENCLATURE

$A$	Clausius–Clapeyron constant, Eqn. 10.64 (Pa or atm), or combustor flow area ( $\text{m}^2$ )
$B$	Clausius–Clapeyron constant, Eqn. 10.64 (K)
$B_q, B_{o,q}$	Transfer, or Spalding, number
$c_p$	Specific heat ( $\text{J}/\text{kg}\cdot\text{K}$ )
$C_D$	Drag coefficient
$C_1, C_2$	Integration constants
$D$	Diameter (m)
$D$	Mass diffusivity ( $\text{m}^2/\text{s}$ )
$F$	Force (N)
$F/O$	Mass fuel–oxidizer ratio (kg/kg)
$h$	Enthalpy ( $\text{J}/\text{kg}$ )
$h_f^o$	Enthalpy of formation ( $\text{J}/\text{kg}$ )
$h_{fg}$	Latent heat of vaporization ( $\text{J}/\text{kg}$ )
$k$	Thermal conductivity ( $\text{W}/\text{m}\cdot\text{K}$ )
$K$	Evaporation rate constant ( $\text{m}^2/\text{s}$ )
$L$	Combustor length (m)
$Le$	Lewis number, $\alpha/D$

$m$	Mass (kg)
$\dot{m}$	Mass flowrate (kg/s)
$\dot{m}'$	Mass flowrate per unit length of combustor (kg/s-m)
$\dot{m}''$	Mass flux (kg/s-m <sup>2</sup> )
$MW$	Molecular weight (kg/kmol)
$\dot{N}$	Number of droplets per unit time (1/s)
$Nu$	Nusselt number
$P$	Pressure (Pa or atm)
$Pr$	Prandtl number
$q$	Heat per unit mass (J/kg)
$\dot{Q}$	Heat-transfer rate (W)
$r$	Radial coordinate or radius (m)
$R$	Specific gas constant (J/kg-K)
$R_u$	Universal gas constant (J/mol-K)
$Re$	Reynolds number
$Sh$	Sherwood number
$t$	Time (s)
$T$	Temperature (K)
$v$	Velocity (m/s)
$v_r$	Radial velocity (m/s)
$V$	Volume (m <sup>3</sup> )
$\mathbf{V}$	Velocity vector (m/s)
$x$	Number of carbon atoms in fuel molecule or axial coordinate (m)
$y$	Number of hydrogen atoms in fuel molecule
$Y$	Mass fraction (kg/kg)
$Z, Z_T$	$c_p g / (4\pi k_g)$ (m-s/kg)
$Z_F$	$1 / (4\pi \rho D)$ (m-s/kg)

**Greek Symbols**

$\alpha$	Thermal diffusivity (m <sup>2</sup> /s)
$\delta_T, \delta_M$	Film thickness based on heat or mass transfer, respectively (m)
$\Delta h_c$	Enthalpy of combustion (J/kg)
$\nu$	Oxidizer-to-fuel stoichiometric ratio (kg/kg)
$\rho$	Density (kg/m <sup>3</sup> )
$\Phi$	Equivalence ratio
$\chi$	Mole fraction (kmol/kmol)

**Subscripts**

$a$	Oxidizer (or air)
boil	Boiling point
cond	Conduction
$d$	Droplet
$f$	Flame
$F$	Fuel
$g$	Gas

<i>i</i>	Interface
<i>l</i> , liq	Liquid
<i>lg</i>	Liquid-to-gas
<i>Ox</i>	Oxidizer
<i>Pr</i>	Product
ref	Reference state
rel	Relative
<i>s</i>	Surface
sat	Saturation
vap	Vapor
$\infty$	Freestream or far-removed from surface
0	Initial condition

---

## REFERENCES

1. Hoffman, H., "Development Work on the Mercedes-Benz Commercial Diesel Engine, Model Series 400," SAE Paper 710558, 1971.
2. Eberle, M. L., "The Marine Diesel Engine—The Answer to Low-Grade Fuels," ASME Paper 80-DGP-16, 1980.
3. Correa, S. M., "A Review of NO<sub>x</sub> Formation Under Gas-Turbine Combustion Conditions," *Combustion Science and Technology*, 87: 329–362 (1992).
4. Davis, L. B., and Washam, R. M., "Development of a Dry Low NO<sub>x</sub> Combustor," ASME 89-GT-255, Gas Turbine and Aeroengine Congress and Exposition, Toronto, ON, 4–8 June, 1989.
5. Shaw, R. J., "Engine Technology Challenges for a 21st Century High Speed Civil Transport," NASA Technical Memorandum 104363, 1991.
6. Lefebvre, A. H., *Gas Turbine Combustion*, Hemisphere, Washington, DC, 1983.
7. Dipprey, D. F., "Liquid Rocket Engines," in *Chemistry in Space Research* (R. F. Landel and A. Rembaum, eds.), Elsevier, New York, pp. 464–597, 1972.
8. Santoro, R. J., "Applications of Laser-Based Diagnostics to High Pressure Rocket and Gas Turbine Combustor Studies," AIAA Paper 98-2698, 1998.
9. Pal, S., Moser, M. D., Ryan, H. M., Foust, M. J., and Santoro, R. J., "Shear Coaxial Injector Atomization Phenomena for Combusting and Non-Combusting Conditions," *Atomization and Sprays*, 6: 227–244 (1996).
10. Nishiwaki, N., "Kinetics of Liquid Combustion Processes: Evaporation and Ignition Lag of Fuel Droplets," *Fifth Symposium (International) on Combustion*, Reinhold, New York, pp. 148–158, 1955.
11. Law, C. K., and Williams, F. A., "Kinetics and Convection in the Combustion of Alkane Droplets," *Combustion and Flame*, 19(3): 393–406 (1972).

12. Hubbard, G. L., Denny, V. E., and Mills, A. F., "Droplet Evaporation: Effects of Transients and Variable Properties," *International Journal of Heat and Mass Transfer*, 18: 1003–1008 (1975).
13. Faeth, G. M., "Current Status of Droplet and Liquid Combustion," *Progress in Energy and Combustion Science*, 3: 191–224 (1977).
14. Faeth, G. M., "Evaporation and Combustion of Sprays," *Progress in Energy and Combustion Science*, 9: 1–76 (1983).
15. Law, C. K., "Recent Advances in Droplet Vaporization and Combustion," *Progress in Energy and Combustion Science*, 8: 171–201 (1982).
16. Sirignano, W. A., "Fuel Droplet Vaporization and Spray Combustion Theory," *Progress in Energy and Combustion Science*, 9: 291–322 (1983).
17. Williams A., "Combustion of Droplets of Liquid Fuels: A Review," *Combustion and Flame*, 21: 1–21 (1973).
18. Godsave, G. A. E., "Studies of the Combustion of Drops in a Fuel Spray: The Burning of Single Drops of Fuel," *Fourth Symposium (International) on Combustion*, Williams & Wilkins, Baltimore, MD, pp. 818–830, 1953.
19. Spalding, D. B., "The Combustion of Liquid Fuels," *Fourth Symposium (International) on Combustion*, Williams & Wilkins, Baltimore, MD, pp. 847–864, 1953.
20. Kuo, K. K., *Principles of Combustion*, John Wiley & Sons, New York, 1986.
21. Faeth, G. M., and Lazar, R. S., "Fuel Droplet Burning Rates in a Combustion Gas Environment," *AIAA Journal*, 9: 2165–2171 (1971).
22. Kumagai, S., and Isoda, H., "Combustion of Fuel Droplets in a Falling Chamber," *Sixth Symposium (International) on Combustion*, Reinhold, New York, pp. 726–731, 1957.
23. Faeth, G. M., "The Kinetics of Droplet Ignition in a Quiescent Air Environment," Ph.D. Thesis, The Pennsylvania State University, University Park, PA, 1964.
24. Kumagai, S., Sakai, T., and Okajima, S., "Combustion of Free Fuel Droplets in a Freely Falling Chamber," *Thirteenth Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, pp. 779–785, 1971.
25. Hara, H., and Kumagai, S., "Experimental Investigation of Free Droplet Combustion Under Microgravity," *Twenty-Third Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, pp. 1605–1610, 1990.
26. Dietrick, D. L., Haggard, J. B., Dryer, F. L., Nayagam, V., Shaw, B. D., and Williams, F. A., "Droplet Combustion Experiments in Spacelab," *Twentieth-Sixth Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, pp. 1201–1207, 1996.
27. Avedisian, C. T., "Soot Formation in Spherically Symmetric Droplet Combustion," in *Physical and Chemical Aspects of Combustion: A Tribute to Irvin Glassman* (F. L. Dryer and R. F. Sawyer, eds.), Gordon & Breach, Amsterdam, pp. 135–160, 1997.

28. Jackson, G. S., and Avedisian, C. T., "Experiments of the Effect of Initial Diameter in Spherically Symmetric Droplet Combustion of Sooting Fuel," *Proceedings of the Royal Society of London*, A466: 257–278 (1994).
29. Law, C. K., and Law, H. K., "Theory of Quasi-Steady One-Dimensional Diffusional Combustion with Variable Properties Including Distinct Binary Diffusion Coefficients," *Combustion and Flame*, 29: 269–275 (1977).
30. Law, C. K., and Law, H. K., "Quasi-Steady Diffusion Flame Theory with Variable Specific Heats and Transport Coefficients," *Combustion Science and Technology*, 12: 207–216 (1977).
31. Shuen, J. S., Yang, V., and Hsiao, C. C., "Combustion of Liquid-Fuel Droplets in Supercritical Conditions," *Combustion and Flame*, 89: 299–319 (1992).
32. Canada, G. S., and Faeth, G. M., "Combustion of Liquid Fuels in a Flowing Combustion Gas Environment at High Pressures," *Fifteenth Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, pp. 419–428, 1975.
33. Law, C. K., Chung, W. H. and Srinivasan, N., "Gas-Phase Quasi-Steadiness and Fuel Vapor Accumulation Effects in Droplet Burning," *Combustion and Flame*, 38: 173–198 (1980).
34. Law, C. K., and Sirignano, W. A., "Unsteady Droplet Combustion and Droplet Heating II: Conduction Limit," *Combustion and Flame*, 28: 175–186 (1977).
35. Law, C. K., "Multicomponent Droplet Combustion with Rapid Internal Mixing," *Combustion and Flame*, 26: 219–233 (1976).
36. Megaridis, C. M., and Sirignano, W. A., "Numerical Modeling of a Vaporizing Multicomponent Droplet," *Twenty-Third Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, pp. 1413–1421, 1990.
37. Cho, S. Y., Yetter, R. A., and Dryer, F. L., "Computer Model for Chemically Reactive Flow with Coupled Chemistry/Multi-component Molecular Diffusion/Heterogeneous Processes," *Journal of Computational Physics*, 102: 160–179 (1992).
38. Sirignano, W. A., "Fluid Dynamics of Sprays—1992 Freeman Scholar Lecture," *Journal of Fluids Engineering*, 115: 345–378 (1993).
39. Priem, R. J., and Heidmann, M. F., "Propellant Vaporization as a Design Criterion for Rocket-Engine Combustion Chambers," NASA Technical Report R-67, 1960.
40. Turns, S. R., and Faeth, G. M., "A One-Dimensional Model of a Carbon-Black Slurry-Fueled Combustor," *Journal of Propulsion and Power*, 1(1): 5–10 (1985).
41. Olikara, C., and Borman, G. L., "A Computer Program for Calculating Properties of Equilibrium Combustion Products with Some Application to I. C. Engines," SAE Paper 750468, 1975.
42. White, F. M., *Viscous Fluid Flow*, McGraw-Hill, New York, p. 209, 1974.
43. IMSL, Inc., "DGEAR," IMSL Library, Houston, TX.

44. Press, W. H., Teukolsky, S. A., Vetterling, W. T., and Flannery, B. P., *Numerical Recipes in FORTRAN—The Art of Scientific Computing*, 2nd Ed., Cambridge University Press, New York, 1992.
45. Andrews, J. R., and Biblarz, O., "Temperature Dependence of Gas Properties in Polynomial Form," Naval Postgraduate School, NPS67-81-001, January 1981.
46. Weast, R. C. (ed.), *CRC Handbook of Chemistry and Physics*, 56th Ed., CRC Press, Cleveland, OH, 1975.
47. Evans, A. F., *The History of the Oil Engine: A Review in Detail of the Development of the Oil Engine from the Year 1680 to the Beginning of the Year 1930*, Sampson Low Marston & Co., London, pp. vii-x (Foreword by Sir Dugald Clerk), undated (1932).

## PROBLEMS

- 10.1** Calculate the evaporation rate constant for a 1-mm-diameter water droplet evaporating into dry, hot air at 500 K and 1 atm.
- 10.2** Calculate the lifetimes for *n*-hexane droplets evaporating in a quiescent ambient environment of air at 800 K and 1 atm for initial diameters of 1000, 100, and 10  $\mu\text{m}$ . Also, calculate the mean evaporation rate defined as  $m_0/t_d$ , where  $m_0$  is the initial droplet mass. Assume the liquid density is 664 kg/m<sup>3</sup>.
- 10.3** Determine the influence of ambient temperature on droplet lifetimes. Use as a base case *n*-hexane with  $D_0 = 100 \mu\text{m}$  and  $T = 800 \text{ K}$ , as determined in problem 10.2. Use temperatures of 600, 800, and 1000 K. Separate the effects of temperature proper and temperature-dependent properties by first calculating lifetimes assuming properties fixed at the same values as the base case, and then repeat your calculations with appropriate properties. Plot your results. Discuss.
- 10.4** Determine the influence of pressure on the lifetimes of 500- $\mu\text{m}$  water droplets. The ambient environment is dry air at 1000 K. Use pressures of 0.1, 0.5, and 1.0 MPa. Plot your results. Discuss.
- 10.5** Estimate the mass burning rate of a 1-mm-diameter *n*-hexane droplet burning in air at atmospheric pressure. Assume no heat is conducted into the interior of the liquid droplet and that the droplet temperature is equal to the boiling point. The ambient air is at 298 K.
- 10.6** Calculate the ratio of the flame radius to droplet radius and flame temperature corresponding to the conditions given in problem 10.5.
- 10.7\*** For the conditions associated with problems 10.5 and 10.6, plot the temperature distribution for the region  $r_s \leq r \leq 2r_f$ . Based on your plot, determine which is greater: the heat conduction from the flame toward the droplet, or

| \*Indicates required use of computer.

the heat conduction from the flame to the surroundings. Discuss the physical significance of your result.

- 10.8** Repeat problems 10.5 and 10.6, removing the assumption that the droplet temperature is at the boiling point. The Clausius–Clapeyron constants for *n*-hexane are  $A = 25,591 \text{ atm}$  and  $B = 3471.2 \text{ K}$ . Compare these results with those of problems 10.5 and 10.6 and discuss.
- 10.9** A rogue fuel droplet escapes from the primary zone of a gas-turbine combustor. If both the droplet and the combustion gases are traveling at 50 m/s through the combustor, estimate the combustor length required to burn out the rogue droplet. Discuss the implications of your results.
- To simplify property evaluation, assume the combustion products have the same properties as air. For the fuel droplet, use *n*-hexane properties. Assume the liquid density is 664 kg/m<sup>3</sup>. Also assume  $T_s = T_{\text{boil}}$ , using the Clausius–Clapeyron constants to evaluate  $T_{\text{boil}}$  at the given pressure. Other pertinent data are  $P = 10 \text{ atm}$ ,  $T_\infty = 1400 \text{ K}$ , and drop diameter  $D = 200 \mu\text{m}$ .
- 10.10** What is the influence of introducing a 10-m/s slip velocity between the droplet and gas stream in problem 10.9? Answer this by comparing the initial burning rates with and without slip.
- 10.11** Derive a “power-law” expression for droplet burning in a convective environment, i.e.,

$$D^n(t) = D_0^n(t) - K't,$$

where the value for  $n$  results from your analysis. You will also have to define an appropriate burning rate constant  $K'$ . To keep your analysis simple, assume

$$Nu = Cre^{0.8} Pr^{1/3},$$

where  $C$  is a known constant, rather than trying to employ Eqn. 10.78.

- 10.12** Determine the influence of droplet heat-up on droplet lifetimes. Use the results from problem 10.5 as the base case (heat-up ignored) and compare with results obtained using the “onion-skin” model to account for droplet heat-up. For the heat-up model, assume the bulk droplet temperature is 300 K and the liquid specific heat is 2265 J/kg-K.
- 10.13** Starting with Eqn. 10.69, and assuming that the heat transfer into the interior of the droplet,  $q_{i-l}$ , is zero, show that

$$\Delta h_c = c_{pg}(T_f - T_s) + vc_{pg}(T_f - T_\infty) + h_{fg}.$$

Discuss the physical significance of each term in the above expression.

## PROJECTS

*Note:* The detailed implementations of the suggested projects below depend upon available software. It is assumed that subroutines to calculate equilibrium properties and their partial derivatives (Appendix F) and a numerical integration routine are available.

1. Model the primary zone of a gas-turbine combustor can assuming one-dimensionality and the other Chapter 10 assumptions. The following conditions are known or given:

$$\begin{aligned}\Phi_{\text{supplied}} &= 1.0, \\ \dot{m}_{a,0} &= 0.66 \text{ kg/s}, \\ A &= 0.0314 \text{ m}^2, \\ L &= 0.30 \text{ m}, \\ P &= 10 \text{ atm}, \\ T_{\text{inlet,air}} &= 600 \text{ K}.\end{aligned}$$

- Determine the maximum allowed drop size if 95 percent of the fuel is to be burned in the primary zone. Simplify the vaporization problem by using the following approximate properties and treating them as independent of temperature:

$$\begin{aligned}\text{C}_{12}\text{H}_{26} (\text{\textit{n}-dodecane}), \\ \rho_l &= 749 \text{ kg/m}^3, \\ h_{fg} &\approx 263 \text{ kJ/kg}, \\ k_g &= 0.05 \text{ W/m-K}, \\ c_{pg} &= 1200 \text{ J/kg-K}. \\ T_b &= 447 \text{ K}.\end{aligned}$$

Use properties of air at 1600 K to evaluate  $Re$ ,  $Pr$ , and  $Nu$ .

- B. Plot  $D(x)$ ,  $T_g(x)$ ,  $v_g(x)$ , and  $\Phi_g(x)$  for the conditions determined in part A. Discuss.
2. Consider a gas-turbine combustor can that has a diameter of 0.2 m. Assume the fuel can be approximated as *n*-dodecane with the properties listed in Project 1. Gas-phase conditions at the exit of the primary zone are

$$\begin{aligned}\Phi_g &= 1.0, \\ P &= 10 \text{ atm}, \\ T_g &= 2500 \text{ K}, \\ \dot{m}_g &= 0.6997 \text{ kg/s}.\end{aligned}$$

Not all of the fuel injected into the combustor is burned in the primary zone, with 0.00441 kg/s of fuel entering the secondary zone as liquid drops of 25- $\mu\text{m}$  diameter.

Determine the length of the secondary zone required to completely burn the remaining fuel, assuming secondary air is added at a constant rate per unit length,  $\dot{m}'_a$ , and that the total amount of secondary air added is 1.32 kg/s.

How much time is required to burn out the droplets? (*Hint:  $dt = dx/v_d$* ) Also, determine the temperature and equivalence ratio at the end of the secondary zone.

Discuss your results and support your discussion with various graphs showing variation of key parameters with axial distance,  $x$ .

## APPENDIX 10A

### SIR HARRY R. RICARDO'S DESCRIPTION OF COMBUSTION IN DIESEL ENGINES [47]

"Before concluding, I am going to take a rather unconventional course, in a technical lecture, of asking you to accompany me, in imagination, inside the cylinder of a Diesel engine. Let us imagine ourselves seated comfortably on the top of the piston, at or about the end of the compression stroke. We are in complete darkness, the atmosphere is a trifle oppressive, for the shade temperature is well over 500°C—almost a dull red heat—and the density of the air is such that the contents of an average sitting-room would weigh about a ton: also it is very draughty, in fact, the draught is such that in reality we should be blown off our perch and hurled about like autumn leaves in a gale. Suddenly, above our heads a valve is opened and a rainstorm of fuel begins to descend. I have called it a rainstorm, but the velocity of droplets approaches much more nearly that of rifle bullets than of raindrops. For a while nothing startling happens, the rain continues to fall, the darkness remains intense. Then suddenly, away to our right perhaps, a brilliant gleam of light appears moving swiftly and purposefully; in an instant this is followed by a myriad others all around us, some large and some small, until on all sides of us the space is filled with a merry blaze of moving lights; from time to time the smaller lights wink and go out, while the larger ones develop fiery tails like comets; occasionally these strike the walls, but being surrounded with an envelope of burning vapour they merely bounce off like drops of water spilt on a red-hot plate. Right overhead all is darkness still, the rainstorm continues, and the heat is

becoming intense; and now we shall notice that a change is taking place. Many of the smaller lights around us have gone out, but new ones are beginning to appear, more overhead, and to form themselves into definite streams shooting rapidly downwards or outwards from the direction of the injector nozzles. Looking round again we see that the lights around are growing yellower; they no longer move in definite directions, but appear to be drifting listlessly hither and thither; here and there they are crowding together in dense nebulae, and these are burning now with a sickly smoky flame, half suffocated for want of oxygen. Now we are attracted by a dazzle overhead, and, looking up, we see that what at first was cold rain falling through utter darkness, has given place to a cascade of fire, as from a rocket. For a little while this continues, then ceases abruptly as the fuel valve closes. Above and all around us are still some lingering fireballs, now trailing long tails of sparks and smoke and wandering aimlessly in search of the last dregs of oxygen which will consume them finally and set their souls at rest. If so, well and good; if not, some unromantic engineer outside will merely grumble that the exhaust is dirty and will set the fuel valve to close a trifle earlier. So ends the scene, or rather my conception of the scene, and I will ask you to realize that what has taken me nearly five minutes to describe may all be enacted in one five-hundredth of a second or even less."

# Introduction to Turbulent Flows

---

## OVERVIEW

In practical devices that involve flowing fluids, turbulent flows are more frequently encountered than are laminar flows. This rule-of-thumb is especially true for combustion devices such as reciprocating internal combustion engines, gas turbines, furnaces, boilers, rocket engines, etc. Unfortunately, the mathematical description of a turbulent flow and the solution of the resulting governing conservation equations is much more difficult than for laminar flows. Analytical and numerical solutions to turbulent flows are engineering approximations, even for the most simple geometries, and can be subject to large errors. In contrast, exact solutions can be found for many laminar flows, especially simple geometries, and very accurate solutions are obtainable for even complicated situations using numerical methods. The essential dilemma of solving a turbulent flow problem is that if all the information necessary for describing a flow is tracked, there is no computer in the world large enough to handle the job; on the other hand, if the problem is simplified to be tractable using available computers, large errors may result, especially for flow conditions that have not been studied experimentally. Considerable progress, however, is being made on this front. Because of the tremendous importance of turbulent flows in engineering and other applications, considerable effort has been expended over many decades to understand turbulence and to develop descriptive and predictive methods that are useful in the design of practical devices.

Our objectives in this chapter are by necessity quite limited. First, we will review a few key concepts related to turbulent flow that you may have seen in an introductory fluid mechanics course. These include the general behavior of the velocity and scalars (e.g., temperature and species) in turbulent flows, some physical notions of turbulence, definitions of length scales, and the most simple

mathematical description of a turbulent flow. Our second objective is to discuss the essential features of free (unconfined) turbulent jets. This archetypal flow occurs frequently in many practical combustion devices, and, hence, is a useful starting point to understand more complex flows. For example, during the intake stroke of a spark-ignition engine, a jetlike flow is created as the incoming charge passes into the cylinder through the relatively narrow passage created by the opening intake valve. Inside the cylinder, the intake jet and other flows created by piston motion interact with the cylinder walls and head. In gas-turbine engines, the secondary and dilution zones comprise a combination of jet and wall flows (cf. Fig. 10.4). Industrial burners and furnaces also are examples of practical devices where both turbulent jet and wall flows are important. Of course, in all of these devices, the actual flows are much more complicated than the simple situation that we will study in this chapter; however, an understanding of simpler flows is an essential prerequisite to dealing with complex flows.

In this chapter, we treat only nonreacting, incompressible flows to illuminate the essential features of turbulent flows uncomplicated by combustion. Subsequent chapters explore premixed turbulent flames, with the specific application of spark-ignition engines in mind (Chapter 12), and nonpremixed turbulent jet flames (Chapter 13).


## DEFINITION OF TURBULENCE

Turbulent flow results when instabilities in a flow are not sufficiently damped by viscous action and the fluid velocity at each point in the flow exhibits random fluctuations. All students of fluid mechanics should be familiar with the famous experiment of Osborne Reynolds [1] in which the transition from a laminar to a turbulent flow in a tube was visualized with a dye streak and related to the dimensionless parameter that now bears the name of this important early fluid mechanician, i.e., the **Reynolds number**. The random unsteadiness associated with various flow properties is the hallmark of a turbulent flow and is illustrated for the axial velocity component in Fig. 11.1. One particularly useful way to characterize a turbulent flowfield is to define **mean** and **fluctuating** quantities. Mean properties are defined by taking a time-average of the flow property over a sufficiently large time interval,  $\Delta t = t_2 - t_1$ ; i.e.,

$$\bar{p} \equiv \frac{1}{\Delta t} \int_{t_1}^{t_2} p(t) dt, \quad (11.1)$$

where  $p$  is any flow property, e.g., velocity, temperature, pressure, etc. The fluctuation,  $p'(t)$ , is the difference between the instantaneous value of the property,  $p(t)$ , and the mean value,  $\bar{p}$ , or

$$p(t) = \bar{p} + p'(t). \quad (11.2)$$

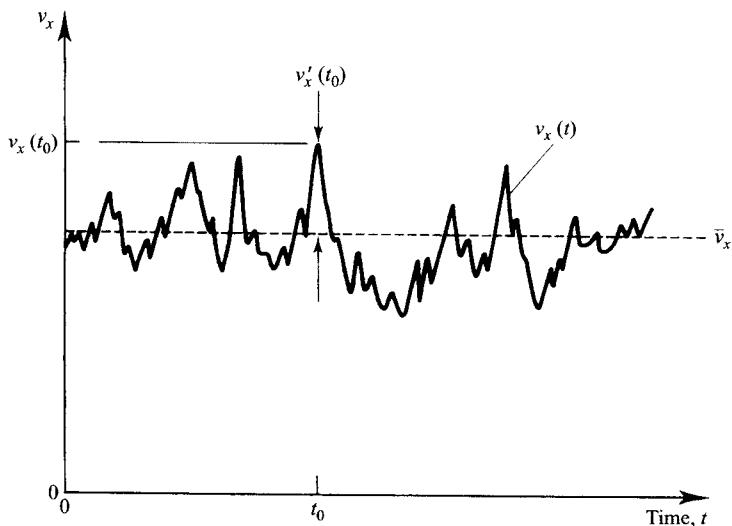

**Figure 11.1** Velocity as a function of time at a fixed point in a turbulent flow.

Figure 11.1 illustrates the fluctuating component of  $v_x$  at a specific time,  $t_0$ ; i.e.,  $v_x(t_0) = \bar{v}_x + v'_x(t_0)$ . In turbulent flows with combustion, there are also frequently large random fluctuations in temperature, density, and species, as defined by

$$\begin{aligned} T(t) &= \bar{T} + T'(t), \\ \rho(t) &= \bar{\rho} + \rho'(t), \end{aligned}$$

and

$$Y_i(t) = \bar{Y}_i + Y'_i(t).$$

This manner of expressing variables as a mean and a fluctuating component is referred to as the **Reynolds decomposition**.

It is common practice to define the **intensity** of the turbulent fluctuations in terms of root-mean-square quantities; that is,


$$p'_{rms} \equiv \sqrt{\bar{p}'^2}. \quad (11.3a)$$

The **relative intensity** is defined as

$$p'_{rms}/\bar{p}, \quad (11.3b)$$

and is usually expressed as a percentage.

What is the physical nature of a turbulent flow? Figure 11.2 gives a partial answer to this question. In this figure, we see fluid blobs and filaments of fluid intertwining. A common notion in fluid mechanics is the idea of a fluid **eddy**. An eddy is considered to be a macroscopic fluid element in which the

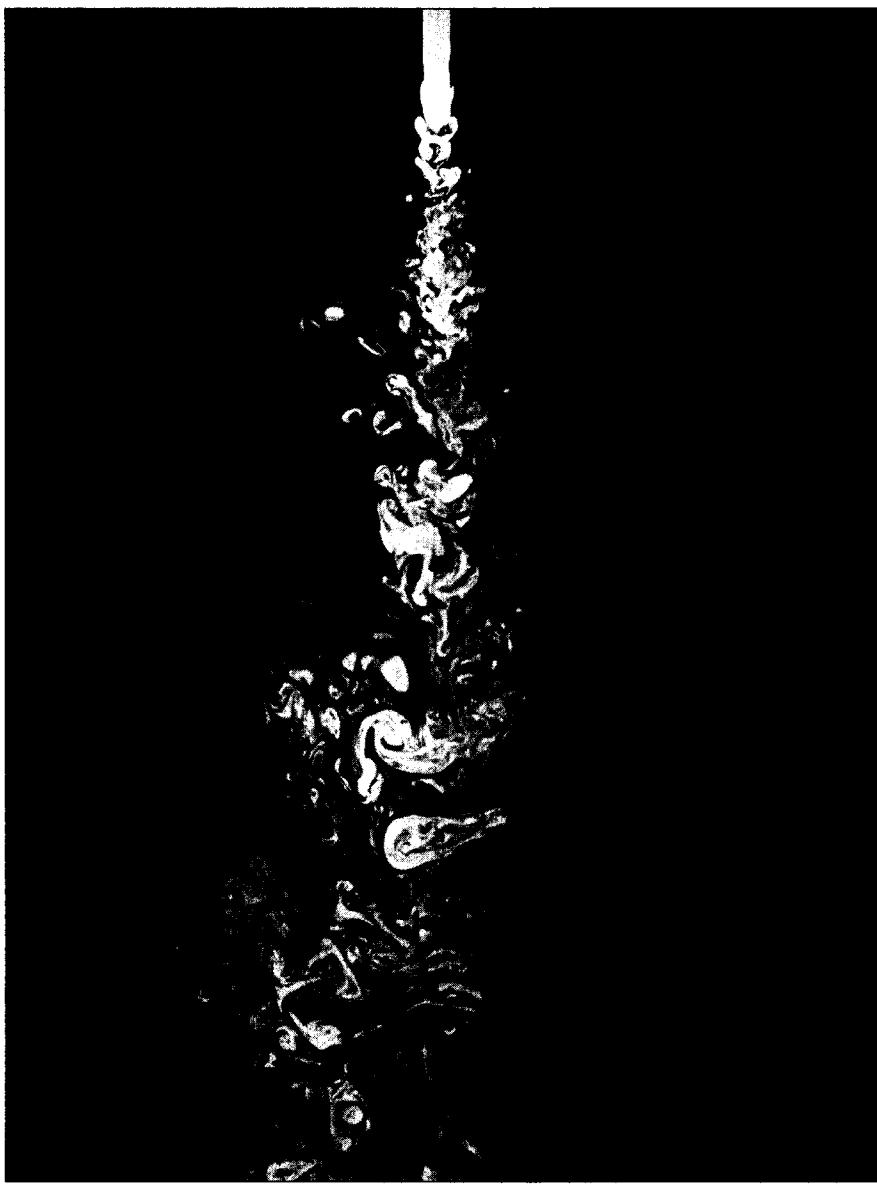

**Figure 11.2** Turbulent jet issuing into a quiescent reservoir. The flow visualization technique makes visible the jet fluid in a plane containing the jet centerline.

SOURCE: From Ref. [2], reprinted by permission of PWN-Polish Scientific Publishers, Warsaw. Also appears in Ref. [3], p. 97.

microscopic elements composing the eddy behave in some ways as a unit. For example, a **vortex** imbedded in a flow would be considered an eddy. A turbulent flow comprises many eddies with a multitude of sizes and **vorticities**, a measure of angular velocities. A number of smaller eddies may be imbedded in a larger eddy. A characteristic of a fully turbulent flow is the existence of a wide range of length scales, i.e., eddy sizes. For a turbulent flow, the Reynolds number is a measure of the range of scales present; the greater the Reynolds number, the greater the range of sizes from the smallest eddy to the largest. It is this large range of length scales that makes calculating turbulent flows from first principles intractable. We will discuss length scales in more detail in the next section.

The rapid intertwining of fluid elements is a characteristic that distinguishes turbulent flow from laminar flow. The turbulent motion of fluid elements allows momentum, species, and energy to be transported in the cross-stream direction much more rapidly than is possible by the molecular diffusion processes controlling transport in laminar flows. Because of this, most practical combustion devices employ turbulent flows to enable rapid mixing and heat release in relatively small volumes.

---

## LENGTH SCALES IN TURBULENT FLOWS

We can improve our qualitative understanding of the structure of turbulent flows by exploring some of the length scales that are used to characterize such flows. Furthermore, some understanding of the important length scales will be essential to our discussion of premixed turbulent combustion in Chapter 12, since the relationships among length scales determine the intrinsic character of turbulent combustion.

### Four Length Scales

In the turbulence literature, many length scales have been defined; however, the following four scales are of general relevance to our discussion and, in general, are frequently cited. In decreasing order of size, these scales are as follows:

- $L$  Characteristic width of flow or macroscale
- $\ell_0$  Integral scale or turbulence macroscale
- $\ell_\lambda$  Taylor microscale
- $\ell_K$  Kolmogorov microscale

In the following sections, we examine each of the above length scales, providing some physical interpretation and expanding our view of turbulence structure.

**Characteristic Width of Flow or Macroscale,  $L$**  This is the largest length scale in the system and is the upper bound for the largest possible eddies. For example, in a pipe flow, the largest eddy would be equal to the pipe diameter; and for a jet flow,  $L$  would be the local width of the jet at any axial location. In a reciprocating internal combustion engine,  $L$  might be taken as the time-varying clearance between the piston top and the head, or perhaps the cylinder bore. In general, this length scale is defined by the actual hardware or device being considered. This length scale is frequently used to define a Reynolds number based on the mean flow velocity, but is not used to define a turbulence Reynolds number, as are the other three length scales. Of particular interest to a study of combustion is the ability of the largest structures in the flow to stir a fluid. For example, the largest eddies in a fuel jet engulf, or stir, air well into the central region of the jet. This large-scale engulfment or stirring process is clearly evident in the jet flow pictured in Fig. 11.2. In certain turbulent flows, persistent organized motion can coexist with random motions. The most familiar example of this is the two-dimensional mixing layer, where coherent spanwise vortical structures dominate the large-scale motion [4, 5].

**Integral Scale or Turbulence Macroscale,  $\ell_0$**  The integral scale physically represents the mean size of the large eddies in a turbulent flow: those eddies with low frequency and large wavelength. The integral scale is always smaller than  $L$ , but is of the same order of magnitude. Operationally, the integral scale can be measured by integrating the correlation coefficient for the fluctuating velocities obtained as a function of the distance between two points, i.e.,


$$\ell_0 = \int_0^\infty R_x(r) dr, \quad (11.4a)$$

where

$$R_x(r) \equiv \frac{\overline{v'_x(0)v'_x(r)}}{v'_{x,rms}(0)v'_{x,rms}(r)}. \quad (11.4b)$$

In less precise terms,  $\ell_0$  represents the distance between two points in a flow where there ceases to be a correlation between the fluctuating velocities at the two locations. Reference [6] presents physical pictures of  $\ell_0$  in terms of possible structural models of turbulence: one where  $\ell_0$  represents the spacing between narrow vortex tubes that make up the fine structure of the flow [7], and another where  $\ell_0$  is the spacing between thin vortex sheets [8]. Figure 11.3 affords a visual appreciation of a length scale based on the spacing between vortex tubes.

**Taylor Microscale,  $\ell_t$**  The Taylor microscale is an intermediate length scale between  $\ell_0$  and  $\ell_K$ , but is weighted more towards the smaller scales. This scale is related to the mean rate of strain and can be formally expressed [6] as

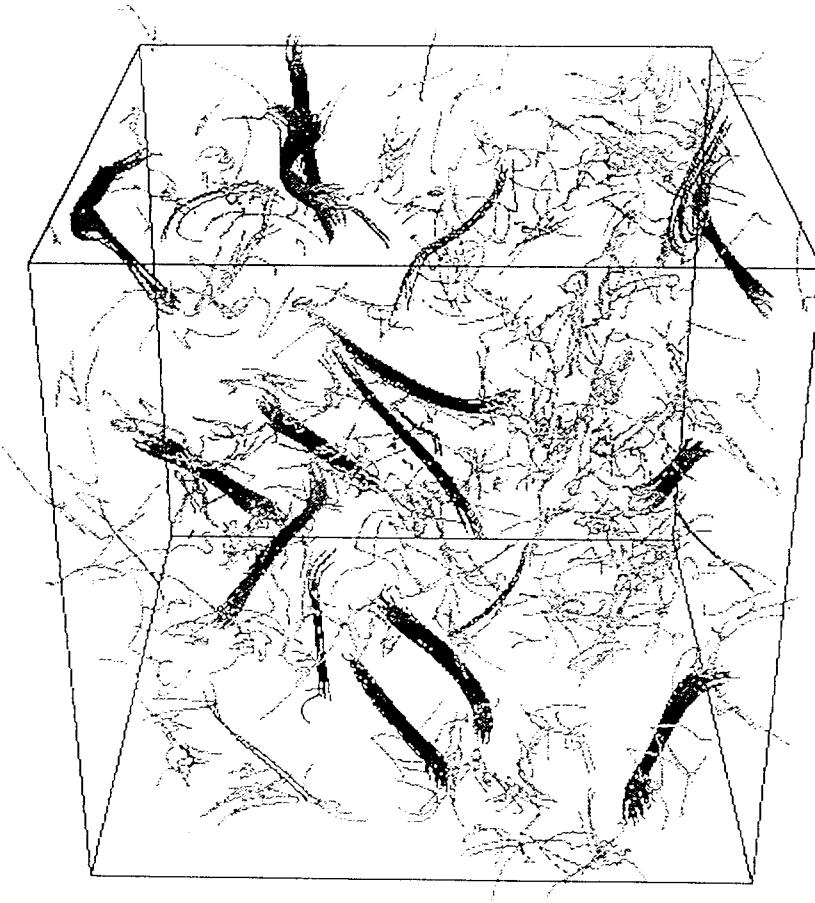

**Figure 11.3** Direct numerical simulation of isotropic turbulence reveals tubelike structure of intense vorticity (dark lines), while regions of moderate vorticity (gray lines) lack structure.  $Re_{\ell_3} \approx 77$ .

| SOURCE: From Ref. [10], reprinted by permission.

$$\ell_\lambda = \frac{v'_{x,rms}}{\left[ \left( \frac{\partial v_x}{\partial x} \right)^2 \right]^{1/2}}, \quad (11.5)$$

where the denominator represents the mean strain rate.

**Kolmogorov Microscale,  $\ell_K$**  The **Kolmogorov microscale** is the smallest length scale associated with a turbulent flow and, as such, is representative of the dimension at which the dissipation of turbulent kinetic energy to fluid internal energy occurs. Thus, the Kolmogorov scale is the scale at which molecular

effects (kinematic viscosity) are significant. Dimensional arguments [11, 12] show that  $\ell_K$  can be related to the rate of dissipation,  $\epsilon_0$  as

$$\ell_K \approx (v^3/\epsilon_0)^{1/4}, \quad (11.6)$$

where  $v$  is the molecular kinematic viscosity, and the dissipation rate is approximately expressed as

$$\epsilon_0 \equiv \frac{\delta(ke_{\text{turb}})}{\delta t} \approx \frac{3v'^2_{rms}/2}{\ell_0/v'_{rms}}. \quad (11.7)$$

Note that the integral length scale,  $\ell_0$ , appears in the approximation for the dissipation rate, thereby linking the two scales. We will shortly show the relationships among the various length scales. As an aside, it is helpful to new students of turbulence to point out that dimensional, and sometimes heuristic, arguments are invoked in discussions of turbulence, the above (Eqns. 11.6 and 11.7) being examples of these.

The final point we wish to make concerning  $\ell_K$  is possible physical interpretations. In Tennekes' [7] model of a turbulent flow,  $\ell_K$  represents the thickness of the smallest vortex tubes or filaments that permeate a turbulent flow, while Ref. [8] suggests that  $\ell_K$  represents the thickness of vortex sheets imbedded in the flow. Results from direct numerical simulation of turbulence (Fig. 11.3) show that the most intense vorticity is contained in vortex tubes that have diameters of the order of the Kolmogorov scale [9, 10].

### Turbulence Reynolds Numbers

Three of the four length scales discussed above are used to define three turbulence Reynolds numbers. In all of the Reynolds numbers, the characteristic velocity is the root-mean-square fluctuating velocity,  $v'_{rms}$ . Thus, we define

$$Re_{\ell_0} \equiv v'_{rms}\ell_0/v, \quad (11.8a)$$

$$Re_{\ell_\lambda} \equiv v'_{rms}\ell_\lambda/v, \quad (11.8b)$$

and


$$Re_{\ell_K} \equiv v'_{rms}\ell_K/v. \quad (11.8c)$$

Equations 11.6 and 11.7 defining  $\ell_K$  and the dissipation rate,  $\epsilon_0$ , can be used to relate the largest (the integral) and the smallest (the Kolmogorov) turbulence length scales:

$$\ell_0/\ell_K = Re_{\ell_0}^{3/4}. \quad (11.9)$$

The Taylor microscale,  $\ell_\lambda$ , also can be related to  $Re_{\ell_0}$  as follows [12]:

$$\ell_0/\ell_\lambda = Re_{\ell_0}^{1/2}. \quad (11.10)$$

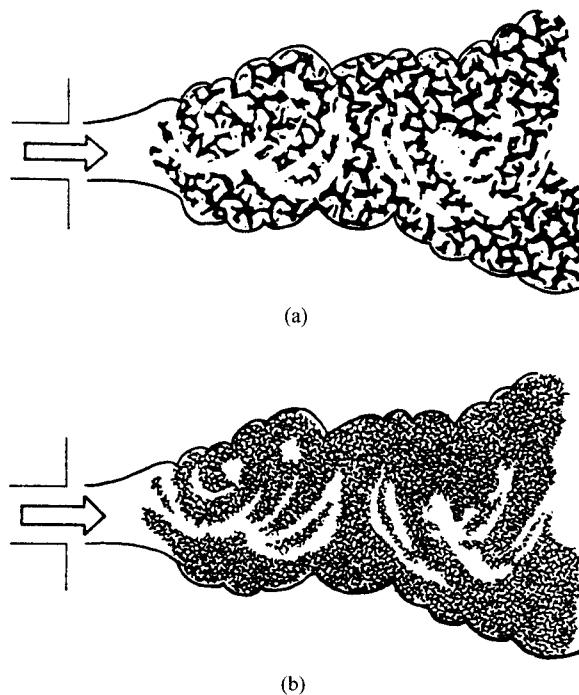

**Figure 11.4** Turbulent jets at (a) low and (b) high Reynolds numbers. The shading pattern illustrates the small-scale turbulence structure.  
| SOURCE: From Ref. [11], reprinted by permission of MIT Press.

Equation 11.9 expresses, in a semiquantitative way, the wide separation of length scales in high- $Re$  flows discussed earlier in this chapter. For example, with  $Re_{\ell_0} = 1000$ , the ratio  $\ell_0/\ell_K$  is about 178:1; but when  $Re_{\ell_0}$  is increased to 10,000, by increasing the mean flow velocity, say, the ratio becomes 1000:1. Figure 11.4 schematically illustrates this development of increasingly finer small-scale turbulence with increasing  $Re$ , while the largest scales in the flow remain unchanged. As we will see in Chapter 12, the size of the scales of turbulence, in relation to the laminar flame thickness, determines the character of the turbulent flame.

A natural-gas-fired industrial gas turbine rated at 3950 kW has the following specifications:

#### Example 11.1

Air flowrate = 15.9 kg/s,

$F/A = 0.017$ ,

Primary/secondary air split = 45/55,

Combustor pressure = 10.2 atm,

Combustor inlet temperature = 600 K,  
 Primary zone temperature = 1900 K,  
 Dilution zone temperature = 1300 K.

As shown in Fig. 11.5, gas-turbine combustors can be configured in several ways. The combustor for the turbine specified above is arranged in a can-annular (cannular) configuration with eight cans each of 0.20 m diameter. A single combustor can be seen in Fig. 2.4. The can length-to-diameter ratio is 1.5.

Assuming that the relative turbulence intensity is approximately 10 percent and that the integral length scale is about 1/10 the can diameter, estimate the Kolmogorov length scales at (i) the combustor inlet, (ii) within the primary zone, and (iii) at the end of the dilution zone.


### Solution

We can utilize Eqn. 11.9 to calculate the Kolmogorov length scale  $\ell_K$ . This requires that we first estimate the turbulence Reynolds number based on the integral scale  $\ell_0$ . To get the mean velocity through each can at the desired locations, overall continuity is applied:

$$v_j = \frac{\dot{m}_j}{\rho_j A}, \quad (I)$$

where the  $j$  subscript denotes the location of interest. The flowrates at the three locations can be calculated:

$$\dot{m}_j = \frac{(\text{fraction of total air at location } j)\dot{m}_A + (F/A)\dot{m}_A}{(\text{number of cans})}.$$

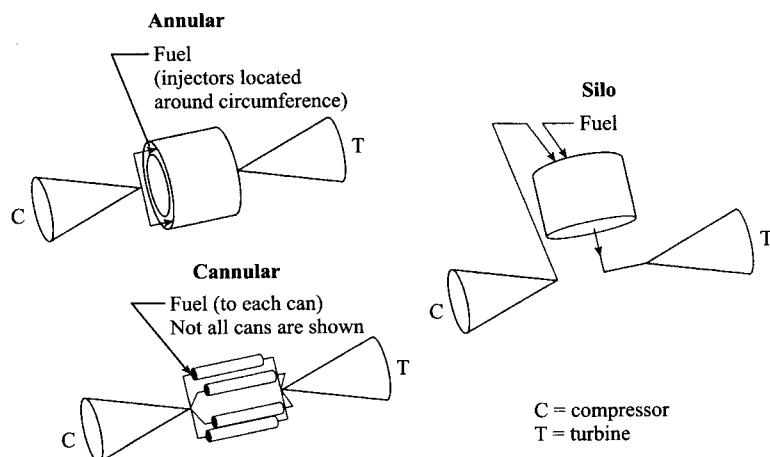

**Figure 11.5** Schematic representation of the three types of combustor configurations used in large stationary gas turbines.

| SOURCE: From Ref. [13], reprinted by permission, © 1992, Gordon & Breach Science Publishers.

Thus, at the combustor inlet and within the primary zone,

$$\dot{m}_i = \dot{m}_{ii} = \frac{0.45(15.9) + 0.017(15.9)}{8} = 0.928 \text{ kg/s.}$$

At the end of the dilution zone, i.e., at the turbine inlet,

$$\dot{m}_{iii} = \frac{1.0(15.9) + 0.017(15.9)}{8} = 2.02 \text{ kg/s.}$$

The flow area is

$$A = \frac{\pi D^2}{4} = \frac{\pi(0.20)^2}{4} = 0.0314 \text{ m}^2$$

and the densities at each location are estimated using the ideal-gas law with properties of air:

$$\rho_j = \frac{P}{(R_u/MW)T_j}.$$

Thus,

$$\rho_i = \frac{10.2(101,325)}{(8315/28.85)600} = 5.97 \text{ kg/m}^3,$$

$$\rho_{ii} = \rho_i \frac{T_i}{T_{ii}} = 5.97 \frac{600}{1900} = 1.89 \text{ kg/m}^3,$$

$$\rho_{iii} = \rho_i \frac{T_i}{T_{iii}} = 5.97 \frac{600}{1300} = 2.76 \text{ kg/m}^3.$$

From Eqn. I, the velocities are determined to be

$$v_i = \frac{\dot{m}_i}{\rho_i A} = \frac{0.928}{5.97(0.0314)} = 4.95 \text{ m/s},$$

$$v_{ii} = \frac{0.928}{1.89(0.0314)} = 15.6 \text{ m/s},$$

$$v_{iii} = \frac{2.02}{2.76(0.0314)} = 23.3 \text{ m/s.}$$

We now calculate Reynolds numbers based on mean flow and turbulence quantities:

$$Re_{L,i} = \frac{\rho_i v_i D}{\mu_i} = \frac{5.97(4.95)(0.20)}{305.8 \cdot 10^{-7}} = 1.93 \cdot 10^5,$$

$$Re_{L,ii} = \frac{1.89(15.6)(0.20)}{663 \cdot 10^{-7}} = 8.89 \cdot 10^4,$$

$$Re_{L,iii} = \frac{2.76(23.3)(0.20)}{496 \cdot 10^{-7}} = 2.59 \cdot 10^5,$$

$$Re_{\ell_0,i} = \frac{\rho_i v'_{rms} \ell_0}{\mu_i} = \frac{5.97(0.1)(4.95)(0.20/10)}{305.8 \cdot 10^{-7}} = 1930,$$

$$Re_{\ell_0,\text{ii}} = \frac{1.89(0.1)(15.6)(0.20/10)}{663 \cdot 10^{-7}} = 889,$$

$$Re_{\ell_0,\text{iii}} = \frac{2.76(0.1)(23.3)(0.20/10)}{496 \cdot 10^{-7}} = 2590.$$

In the above, viscosity values are approximated as those of air,  $v'_{rms} = 0.1v$ , and  $\ell_0 = L/10$ . The Kolmogorov scales are now estimated from Eqn. 11.9 as follows:

$$\ell_K = \ell_0 Re_{\ell_0}^{-3/4},$$

$$\ell_{K,\text{i}} = \frac{20 \text{ mm}}{10} (1930)^{-0.75} = 0.069 \text{ mm}$$

$$\ell_{K,\text{ii}} = \frac{20 \text{ mm}}{10} (889)^{-0.75} = 0.123 \text{ mm}$$

$$\ell_{K,\text{iii}} = \frac{20 \text{ mm}}{10} (2590)^{-0.75} = 0.055 \text{ mm}$$

#### Comment

We see that in this application the Kolmogorov scales are quite small, of the order of 0.1 mm, with the smallest at the turbine inlet.

## ANALYZING TURBULENT FLOWS

The basic conservation equations describing fluid motion that we have applied to laminar flows apply equally well to turbulent flows, provided, of course, that the unsteady terms are retained. For example, we can write the continuity (mass conservation) and Navier–Stokes (momentum conservation) equations for unsteady, constant-density, Newtonian fluid as follows (cf. Chapter 7).

#### Mass Conservation

$$\frac{\partial v_x}{\partial x} + \frac{\partial v_y}{\partial y} + \frac{\partial v_z}{\partial z} = 0. \quad (11.11)$$

#### x-Direction Momentum Conservation

$$\begin{aligned} \frac{\partial}{\partial t} \rho v_x + \frac{\partial}{\partial x} \rho v_x v_x + \frac{\partial}{\partial y} \rho v_y v_x + \frac{\partial}{\partial z} \rho v_z v_x \\ = \mu \left( \frac{\partial^2 v_x}{\partial x^2} + \frac{\partial^2 v_x}{\partial y^2} + \frac{\partial^2 v_x}{\partial z^2} \right) - \frac{\partial P}{\partial x} + \rho g_x. \end{aligned} \quad (11.12)$$

The above equations and their companions, the additional two components of momentum, conservation of energy and species, conceptually could be solved for the functions  $v_x(t)$ ,  $v_y(t)$ ,  $v_z(t)$ ,  $T(t)$ , and  $Y_i(t)$  at discrete points in the flow

using numerical techniques; however, the number of grid points required to resolve the details of the flow (recall the large range of length scales inherent in turbulent flows) would be huge. For example, Ref. [14] cites that  $10^9$  grid points would be necessary to deal with a simple plane-mixing layer of two adjacent fluids. At present, this overwhelms the best available computers. It should be pointed out, however, that full solutions are being accomplished, provided the Reynolds number is not too large [15].

## Reynolds Averaging and Turbulent Stresses

Rather than relying entirely on empirical experimental methods, techniques have been developed that allow turbulent flows to be analyzed to obtain useful information and to allow predictions. One fruitful method of analyzing turbulent flows is to write out the partial differential equations that embody the basic conservation principles—mass, momentum, energy, and species—perform a Reynolds decomposition, and then average the equations over time. The resulting governing equations are called the **Reynolds-averaged** equations. The averaging process has two major consequences: First, it eliminates the fine details of the flow; for example, the complex time-dependent velocity at a point, as illustrated in Fig. 11.1, could not be predicted using time-averaged equations of motion. The second consequence of averaging is the appearance of new terms in the time-averaged governing equations that have no counterpart in the original time-dependent equations. Finding a way to calculate or approximate these new terms is frequently referred to as the **closure problem** of turbulence.

**Two-Dimensional Boundary Layer** To develop some feel for the time-averaged approach, we will develop the time-averaged  $x$ -momentum equation for a two-dimensional boundary layer flow over a flat plate. For this flow, with  $x$  in the flow direction and  $y$  perpendicular to the plate, Eqn. 11.12 reduces to

$$\frac{\partial}{\partial t} \rho v_x + \frac{\partial}{\partial x} \rho v_x v_x + \frac{\partial}{\partial y} \rho v_y v_x = \mu \frac{\partial^2 v_x}{\partial y^2}. \quad (11.13)$$

①                  ②                  ③                  ④

The first step in the process is to substitute for each fluctuating quantity its representation as a mean and a fluctuating component, i.e., the Reynolds decomposition  $v_x = \bar{v}_x + v'_x$  and  $v_y = \bar{v}_y + v'_y$ . We will then time-average Eqn. 11.13, term by term, using the overbar to signify a time-averaged quantity. Thus, the first term can be averaged:

$$\overline{\frac{\partial}{\partial t} \rho (\bar{v}_x + v'_x)} = \overline{\frac{\partial}{\partial t} \rho \bar{v}_x} + \overline{\frac{\partial}{\partial t} \rho v'_x} = 0, \quad (11.14)$$

where each term on the right-hand-side of Eqn. 11.14 is identically zero; the first because we assume the flow is steady in an overall sense, i.e.,  $\bar{v}_x$  is a

constant, and the second, because the time-derivative of a random function with a zero mean is also a random function with a zero mean.

The third term in Eqn. 11.13 is the most interesting because it yields the dominant additional momentum flux arising from the velocity fluctuations:

$$\overline{\frac{\partial}{\partial y} \rho(\bar{v}_y + v'_y)(\bar{v}_x + v'_x)} = \overline{\frac{\partial}{\partial y} \rho(\bar{v}_x \bar{v}_y + \bar{v}_x v'_y + v'_x v'_y + \bar{v}_y v'_x)}. \quad (11.15)$$

Splitting out each term under the large overbar on the right-hand-side and evaluating their individual averages yields

$$\overline{\frac{\partial}{\partial y} \rho \bar{v}_x \bar{v}_y} = \frac{\partial}{\partial y} \rho \bar{v}_x \bar{v}_y, \quad (11.16a)$$

$$\overline{\frac{\partial}{\partial y} \rho \bar{v}_x v'_y} = 0, \quad (11.16b)$$

$$\overline{\frac{\partial}{\partial y} \rho v'_x v'_y} = \frac{\partial}{\partial y} \rho \overline{v'_x v'_y}, \quad (11.16c)$$

and

$$\overline{\frac{\partial}{\partial y} \rho \bar{v}_y v'_x} = 0. \quad (11.16d)$$

Similar operations can be performed on the second and fourth terms of Eqn. 11.13 and are left as an exercise for the reader. Reassembling, the now time-averaged Eqn. 11.13 yields

$$\begin{aligned} & \overline{\frac{\partial}{\partial x} \rho \bar{v}_x \bar{v}_x} + \overline{\frac{\partial}{\partial y} \rho \bar{v}_y \bar{v}_x} + \boxed{\overline{\frac{\partial}{\partial x} \rho v'_x v'_x}} \\ & + \boxed{\overline{\frac{\partial}{\partial y} \rho v'_x v'_y}} = \mu \frac{\partial^2 \bar{v}_x}{\partial y^2}. \end{aligned} \quad (11.17)$$

The terms in the dashed boxes are new terms arising from the turbulent nature of the flow. In a laminar flow,  $v'_x$  and  $v'_y$  are zero; thus, Eqn. 11.17 becomes identical with Eqn. 11.13 for a steady flow.

It is common practice to define

$$\tau_{xx}^{\text{turb}} \equiv -\rho \overline{v'_x v'_x} \quad (11.18a)$$

$$\tau_{xy}^{\text{turb}} \equiv -\rho \overline{v'_x v'_y}, \quad (11.18b)$$

which represent additional momentum fluxes resulting from the turbulent fluctuations. These terms have several designations and are referred to as components of the **turbulent momentum flux** (momentum flow per unit area), **turbulent stresses**, or **Reynolds stresses**. In a general formulation of the Reynolds-averaged momentum equation, a total of nine Reynolds stresses appear, analogous

to the nine components of the laminar viscous shear stresses, i.e.,  $\tau_{ij}^{\text{turb}} = -\rho \bar{v}_i' \bar{v}_j'$  where  $i$  and  $j$  represent the coordinate directions.

Rearranging Eqn. 11.17, and applying continuity to the evaluation of the derivatives of the velocity products, yields our final result for a two-dimensional turbulent boundary-layer flow:

$$\rho \left( \bar{v}_x \frac{\partial \bar{v}_x}{\partial x} + \bar{v}_y \frac{\partial \bar{v}_x}{\partial y} \right) = \mu \frac{\partial^2 \bar{v}_x}{\partial y^2} - \frac{\partial}{\partial y} \rho \bar{v}_x' \bar{v}_y', \quad (11.19)$$

where we assume that  $(\partial/\partial x)\tau_{xx}^{\text{turb}}$  can be neglected.

**Axisymmetric Jet** The turbulent axisymmetric jet is a particularly important flow in our study of combustion, so in this section we introduce the Reynolds-averaged form of the momentum equation analogous to the two-dimensional cartesian boundary layer presented in the previous section. For a constant-density jet, the continuity equation and axial momentum equation describing the steady flowfield were given in Chapter 9 (Eqns. 9.3 and 9.4). Performing the same operations of velocity decomposition and time-averaging to the axial momentum equation for an axisymmetric flow, yields, after simplification,

$$\rho \left( \bar{v}_x \frac{\partial \bar{v}_x}{\partial x} + \bar{v}_r \frac{\partial \bar{v}_x}{\partial r} \right) = \mu \frac{1}{r} \frac{\partial}{\partial r} \left( r \frac{\partial \bar{v}_x}{\partial r} \right) - \frac{1}{r} \frac{\partial}{\partial r} (r \rho \bar{v}_r' \bar{v}_x'). \quad (11.20)$$

In Eqn. 11.20, we now see the turbulent shear to be related to the fluctuations of the axial and radial velocities,  $\tau_{rx}^{\text{turb}} = -\rho \bar{v}_r' \bar{v}_x'$ .

In a subsequent section, we will see how Eqn. 11.20 can be employed to find the velocity distributions in a free (unconfined) turbulent jet.

## The Closure Problem

The Reynolds-averaging discussed above introduces new unknowns into the equations of motion, viz., the turbulent stresses,  $-\rho \bar{v}_i' \bar{v}_j'$ . Finding a way to evaluate these stresses and solving for any other additional unknowns that may be introduced in the process is termed the **closure problem** of turbulence. Presently, there are many techniques that are used to “close” the system of governing equations, ranging from the very straightforward to the quite sophisticated [16–19]. We now investigate the simplest ideas that can be employed to achieve closure, and apply these to solving our archetypal flow, the free jet.

**Eddy Viscosity** The first concept that we wish to explore is that of the **eddy viscosity**. The eddy viscosity is a fiction arising out of our treatment of the turbulent momentum fluxes as turbulent stresses. For example, we can rewrite Eqn. 11.20 explicitly in terms of the laminar (Newtonian) and turbulent (Reynolds) stresses as follows:

$$\rho \left( \bar{v}_x \frac{\partial \bar{v}_x}{\partial x} + \bar{v}_r \frac{\partial \bar{v}_x}{\partial r} \right) = \frac{1}{r} \frac{\partial}{\partial r} [r(\tau_{\text{lam}} + \tau_{\text{turb}})]. \quad (11.21)$$

Furthermore, we can define the stresses to be proportional to the mean velocity gradient, i.e.,

$$\tau_{\text{lam}} = \mu \frac{\partial \bar{v}_x}{\partial r} \quad (11.22a)$$

and

$$\tau_{\text{turb}} = \rho \varepsilon \frac{\partial \bar{v}_x}{\partial r}, \quad (11.22b)$$

where  $\mu$  is the molecular viscosity and  $\varepsilon$  is the kinematic eddy viscosity ( $\varepsilon = \mu_{\text{turb}}/\rho$ , where  $\mu_{\text{turb}}$  is the apparent turbulent viscosity). The relationship expressed by Eqn. 11.22a is just the familiar expression derived for a Newtonian fluid for the flow of interest; the relationship expressed by Eqn. 11.22b, however, is the definition of the so-called eddy viscosity. The idea of an eddy viscosity as defined in Eqn. 11.22b was first proposed by Boussinesq [20] in 1877. For our cartesian-coordinate problem (cf. Eqn. 11.19), the stresses are given by

$$\tau_{\text{lam}} = \mu \frac{\partial \bar{v}_x}{\partial y}, \quad (11.23a)$$

$$\tau_{\text{turb}} = \rho \varepsilon \frac{\partial \bar{v}_x}{\partial y}. \quad (11.23b)$$

An effective viscosity,  $\mu_{\text{eff}}$ , is defined as

$$\mu_{\text{eff}} = \mu + \mu_{\text{turb}} = \mu + \rho \varepsilon, \quad (11.24)$$

so that

$$\tau_{\text{tot}} = (\mu + \rho \varepsilon) \frac{\partial \bar{v}_x}{\partial y}. \quad (11.25)$$

For turbulent flows far from a wall,  $\rho \varepsilon \gg \mu$ , so  $\mu_{\text{eff}} \cong \rho \varepsilon$ ; however, near a wall, both  $\mu$  and  $\rho \varepsilon$  contribute to the total stress in the fluid.

Note that the introduction of the eddy viscosity *per se* does not achieve closure; the problem is now transformed into how to determine a value or the functional form of  $\varepsilon$ . Unlike the molecular viscosity  $\mu$ , which is a thermophysical property of the fluid itself, the eddy viscosity  $\varepsilon$  depends on the flow itself. One would not necessarily expect the same value of  $\varepsilon$  for two distinctly different flows; for example, a swirling confined flow with recirculation, and a free jet, are not likely to have the same values for  $\varepsilon$ . Moreover, since  $\varepsilon$  depends on the local flow properties, it will take on different values at different locations within the flow. Therefore, one must be careful not to take too literally the analogy between laminar and turbulent flows implied by Eqns. 11.22a and b

and 11.23a and b. Also, in some flows, the turbulent stresses are not proportional to the mean velocity gradients, as is required by Eqns. 11.22b and 11.23b [17].

**Mixing-Length Hypothesis** The simplest closure scheme would be to assume the eddy viscosity is a constant throughout the flowfield; unfortunately, experimental evidence shows this not to be a generally useful assumption, as expected. More sophisticated hypotheses, therefore, need to be applied. One of the most useful, and yet simple, hypotheses is that proposed by Prandtl [21]. Prandtl's hypothesis, by analogy with the kinetic theory of gases, states that the eddy viscosity is proportional to the product of the fluid density, a length scale called the **mixing length**, and a characteristic turbulent velocity, i.e.,

$$\mu_{\text{turb}} = \rho \varepsilon = \rho \ell_m v_{\text{turb}}. \quad (11.26)$$

Furthermore, Prandtl [21] assumed that the turbulent velocity,  $v_{\text{turb}}$ , is proportional to the product of the mixing length,  $\ell_m$ , and the magnitude of the mean velocity gradient,  $|\partial \bar{v}_x / \partial y|$ . Thus,

$$\mu_{\text{turb}} = \rho \varepsilon = \rho \ell_m^2 \left| \frac{\partial \bar{v}_x}{\partial y} \right|. \quad (11.27)$$

Equation 11.27 is useful in dealing with flows near a wall. For free (unconfined) turbulent flows, Prandtl [22] proposed an alternative hypothesis for the characteristic turbulent velocity in Eqn. 11.26, i.e.,  $v_{\text{turb}} \propto \bar{v}_{x,\text{max}} - \bar{v}_{x,\text{min}}$ . The corresponding turbulent viscosity is then

$$\mu_{\text{turb}} = \rho \varepsilon = 0.1365 \rho \ell_m (\bar{v}_{x,\text{max}} - \bar{v}_{x,\text{min}}), \quad (11.28)$$

where the numerical constant is chosen to agree with experimental results. Equation 11.28 is a key relation that we will invoke in our subsequent solution to the jet problem. Note, however, that we have yet to obtain closure since we have introduced yet another unknown! All that has been done so far is to replace the unknown velocity correlation  $\overline{v'_x v'_y}$  with an expression involving an unknown eddy viscosity, and, in turn, to relate that eddy viscosity to an unknown mixing length. Our next step finally attains closure by specifying the mixing length. Since the mixing length depends on the flow itself, different specifications generally are required for each kind of flow. Mixing-length functions are given for a wide variety of flows in Ref. [17]; we will focus, however, only on the mixing lengths required to solve the jet and wall-flow problems.

For a free axisymmetric jet,

$$\ell_m = 0.075 \delta_{99\%}, \quad (11.29)$$

where  $\delta_{99\%}$  is the half-width of the jet measured from the jet centerline to the radial location where  $\bar{v}_x$  has decayed to be only 1 percent of its centerline value. Note that the mixing length increases with distance from the jet origin since  $\delta_{99\%}$  grows with axial distance. Note also that there is no radial dependence specified for the mixing length; hence, Eqn. 11.29 implies that  $\ell_m$  is constant over the jet width at any axial station.

A different  $\ell_m$  obtains for flows near a wall, where a cross-stream dependence is inherent in the mixing length. For a wall boundary layer, the flow is conveniently divided into three zones: the **viscous sublayer** adjacent to the wall, a **buffer layer**, and a **fully developed** turbulent region far from the wall. The mixing length for each of these three regions is given by the following equations [17]:

*The laminar sublayer,*

$$\ell_m = 0.41y \left[ 1 - \exp\left(-\frac{y\sqrt{\rho\tau_w}}{26\mu}\right) \right], \quad (11.30a)$$

*The buffer layer,*

$$\ell_m = 0.41y \quad \text{for } y \leq 0.2195 \delta_{99\%}, \quad (11.30b)$$

*The fully developed region,*

$$\ell_m = 0.09 \delta_{99\%}. \quad (11.30c)$$

In the above expressions,  $\tau_w$  is the local wall shear stress, and  $\delta_{99\%}$  is the local boundary-layer thickness, defined as the  $y$ -location at which the velocity equals 99 percent of the freestream value. Note that in Eqn. 11.30a, proposed by van Driest [23], the mixing length vanishes as the distance from the wall  $y$  goes to zero; hence,  $\mu_{\text{eff}} = \mu$ . For sufficiently large  $y$ -values, Eqn. 11.30a degenerates to Eqn. 11.30b.

For turbulent flows in a circular pipe or tube, the mixing-length distribution given by Nikuradse [24] is frequently invoked:

$$\ell_m/R_0 = 0.14 - 0.08(r/R_0)^2 - 0.06(r/R_0)^4, \quad (11.31)$$

where  $R_0$  is the pipe radius. With the closure problem now solved, i.e., the specification of mixing lengths, we are now in a position to solve the governing equations to yield the velocity fields for our chosen example, the jet. This solution is discussed in the next section.

### Example 11.2

Determine a numerical value for the viscosity,  $\mu_{\text{turb}}$ , for a free jet of air at an axial location where the mean centerline velocity has decayed to 60 percent of the initial velocity, i.e.,  $\bar{v}_{x,0}/v_e = 0.6$ .

The jet width,  $\delta_{99\%}$ , at this location is 15 cm. The initial jet velocity is 70 m/s. The pressure is 1 atm and the temperature is 300 K. Also, compare the turbulent viscosity with the molecular (laminar) viscosity.

#### Solution

To evaluate  $\mu_{\text{turb}}$ , we will employ the defining relationship, Eqn. 11.28, together with the expression defining the jet mixing length, Eqn. 11.29. We start by finding the mixing length:

$$\begin{aligned} \ell_m &= 0.075 \delta_{99\%} \\ &= 0.075(0.15) = 0.01125 \text{ m} \end{aligned}$$

We obtain the density via the ideal-gas law:

$$\rho = \frac{P}{(R_u/MW)T} = \frac{101,325}{(8315/28.85)300} = 1.17 \text{ kg/m}^3.$$

The turbulent viscosity is (Eqn. 11.28)

$$\begin{aligned}\mu_{\text{turb}} &= 0.1365\rho\ell_m(\bar{v}_{x,\max} - \bar{v}_{x,\min}) \\ &= 0.1365(1.17)(0.01125)[0.6(70) - 0] = 0.0755.\end{aligned}$$

We then check units:

$$\begin{aligned}\mu_{\text{turb}} &[=] \frac{\text{kg}}{\text{m}^3} (\text{m}) \left(\frac{\text{m}}{\text{s}}\right) = \left(\frac{\text{M}\cdot\text{s}^2}{\text{m}^3}\right) (\text{m}) \left(\frac{\text{m}}{\text{s}}\right) = \frac{\text{N}\cdot\text{s}}{\text{m}^2} \\ \boxed{\mu_{\text{turb}} = 0.0755 \text{ N}\cdot\text{s}/\text{m}^2}\end{aligned}$$

From Appendix Table C.1, the molecular viscosity of air at 300 K is  $184.6 \cdot 10^{-7} \text{ N}\cdot\text{s}/\text{m}^2$ . Thus,

$$\boxed{\frac{\mu_{\text{turb}}}{\mu_{\text{lam}}} = \frac{0.0755}{184 \cdot 10^{-7}} = 4090}$$

#### Comment

These calculations show indeed that the turbulent viscosity dominates over the molecular viscosity, i.e.,  $\mu_{\text{eff}} \cong \mu_{\text{turb}}$ . We also note that the width of the jet is approximately 13 ( $\delta_{99\%}/\ell_m = 1/0.075$ ) mixing lengths.

## AXISYMMETRIC TURBULENT JET

The fundamental conservation equations (mass and axial momentum) that describe the turbulent jet are essentially the same as those used in Chapter 9 for the laminar jet; however, mean velocities replace instantaneous ones, and the molecular viscosity is replaced by the effective viscosity. For the turbulent jet, the molecular viscosity is negligible in comparison with the eddy viscosity (see Example 11.2). Thus, the axial momentum equation, Eqn. 9.4, becomes

$$\bar{v}_x \frac{\partial \bar{v}_x}{\partial x} + \bar{v}_r \frac{\partial \bar{v}_x}{\partial r} = \frac{1}{r} \frac{\partial}{\partial r} \left( r \epsilon \frac{\partial \bar{v}_x}{\partial r} \right), \quad (11.32)$$

and that for mass conservation (cf. Eqn. 9.3),

$$\frac{\partial(\bar{v}_x r)}{\partial x} + \frac{\partial(\bar{v}_r r)}{\partial r} = 0. \quad (11.33)$$

The boundary conditions for the mean velocities are identical to those used to solve the laminar jet problem, Eqns. 9.7a, b, and d.

To determine the eddy viscosity,  $\epsilon$ , we combine the mixing-length relationships of Eqns. 11.28 and 11.29 to yield

$$\varepsilon = 0.0102 \delta_{99\%}(x) \bar{v}_{x,\max}(x), \quad (11.34)$$

where both the jet width,  $\delta_{99\%}(x)$ , and maximum axial velocity,  $\bar{v}_{x,\max}(x)$ , are functions of axial position. The maximum axial velocity occurs on the jet centerline, so  $\bar{v}_{x,\max}(x) = \bar{v}_{x,0}(x)$ , and, in arriving at Eqn. 11.34, we assume that  $\bar{v}_{x,\min}$  is zero, since the jet is issuing into a quiescent medium. At this juncture, we will employ some empirical information [25]. First, measurements show that for turbulent jets,  $\delta_{99\%} \approx 2.5r_{1/2}$ , where  $r_{1/2}$  is the jet radius at which the axial velocity has fallen to half its centerline value. Figure 11.6 illustrates measurements of  $r_{1/2}$  and  $\delta_{99\%}$ . The other experimental evidence we wish to employ is that  $r_{1/2}$  grows in direct proportion to  $x$ , and  $\bar{v}_{x,0}$  declines in an inverse manner with  $x$ , i.e.,

$$r_{1/2} \propto x^1 \quad (11.35a)$$


$$\bar{v}_{x,0} \propto x^{-1}. \quad (11.35b)$$

Thus, the  $x$ -dependencies in Eqn. 11.34 cancel, yielding

$$\varepsilon = 0.0256 r_{1/2}(x) \bar{v}_{x,0}(x) = \text{constant}. \quad (11.36)$$

This is a rather fortunate result in that we can now use the laminar jet solutions (Eqns. 9.8 and 9.9) by simply replacing the constant molecular viscosity with the just-revealed constant eddy viscosity (times density),  $\rho\varepsilon$ . Thus, the mean velocity components are

$$\bar{v}_x = \frac{3}{8\pi} \frac{J_e}{\rho\varepsilon x} \left[ 1 + \frac{\xi^2}{4} \right]^{-2} \quad (11.37)$$

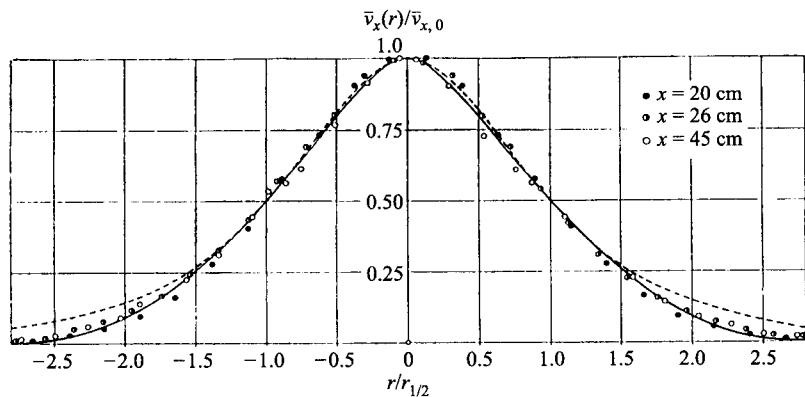

**Figure 11.6** Radial profile of axial velocity for a turbulent jet.  
SOURCE: From Ref. [25], reprinted by permission, © 1968, McGraw Hill.

$$\bar{v}_r = \left[ \frac{3J_e}{16\pi\rho_e} \right]^{1/2} \frac{1}{x} \frac{\xi - \frac{\xi^3}{4}}{\left[ 1 + \frac{\xi^2}{4} \right]^2}, \quad (11.38)$$

where  $J_e$  is the initial jet momentum flow, which for a uniform exit velocity,  $v_e$ , is expressed

$$J_e = \rho_e v_e^2 \pi R^2, \quad (11.39)$$

and

$$\xi = \left[ \frac{3J_e}{16\rho_e\pi} \right]^{1/2} \frac{1}{\varepsilon} \frac{r}{x}. \quad (11.40)$$

For the time being, let us retain the unknown constant  $\varepsilon$ , first finding relationships for  $r_{1/2}(x)$  and  $\bar{v}_{x,0}(x)$ . With these relationships and Eqn. 11.37, we can relate  $\varepsilon$ ,  $r_{1/2}(x)$ , and  $\bar{v}_{x,0}(x)$  solely to known jet parameters,  $v_e$  and  $R$ , and, thereby, conclude our theoretical development.

The axial velocity, normalized by the assumed uniform exit velocity  $v_e$ , is obtained by substituting Eqn. 11.39 into Eqn. 11.37 and rearranging:

$$\bar{v}_x/v_e = 0.375(v_e R/\varepsilon)(x/R)^{-1}[1 + \xi^2/4]^{-2}, \quad (11.41)$$

and the dimensionless centerline velocity decay is obtained by setting  $r = 0$  ( $\xi = 0$ ):

$$\bar{v}_{x,0}(x)/v_e = 0.375(v_e R/\varepsilon)(x/R)^{-1}. \quad (11.42)$$

To find an expression for  $r_{1/2}$ , we divide Eqn. 11.41 by 11.42, set the result equal to 1/2, i.e.,  $\bar{v}_x/\bar{v}_{x,0} = 1/2$ , and solve for  $r$  ( $= r_{1/2}$ ). Thus,

$$r_{1/2} = 2.97 \left( \frac{v_e R}{\varepsilon x} \right)^{-1}. \quad (11.43)$$

Simultaneously solving Eqns. 11.36, 11.42, and 11.43 yields our desired final results:

The jet velocity decay is

$$\bar{v}_{x,0}/v_e = 13.15(x/R)^{-1}, \quad (11.44)$$

The jet spreading rate is

$$r_{1/2}/x = 0.08468, \quad (11.45)$$

The eddy viscosity is

$$\varepsilon = 0.0285v_e R. \quad (11.46)$$

It is interesting to compare the velocity decays and spreading rates of the turbulent jet with those of the laminar axisymmetric jet (Eqns. 9.13 and 9.14). For the turbulent jet, we have the interesting behavior that neither the velocity

decay nor the spreading rate depend on the jet Reynolds number, while for the laminar jet, the velocity decay is directly proportional to  $Re_j$  (Eqn. 9.13) and the spreading rate is inversely proportional to  $Re_j$  (Eqn. 9.14). Thus, the character of a turbulent jet is independent of exit conditions, provided the Reynolds number is sufficiently high to assure fully turbulent flow. This result has interesting implications for turbulent jet flames, which we will discuss in Chapter 13.

## BEYOND THE SIMPLEST MODEL

We previously indicated the existence of closure methods more sophisticated than the simple prescribed mixing-length models presented earlier in this chapter. The usual step in the hierarchy of turbulence models beyond the mixing-length model is the so-called **two-equation models** for turbulence. Two-equation models comprise the Reynolds-averaged equations of motion for the mean flow variables,  $\bar{v}_x$  and  $\bar{v}_r$ , along with coupled partial differential equations for two turbulence variables. The overwhelming choice for the first variable is  $k$ , the turbulence kinetic energy, while the second variable is less generally agreed upon. Perhaps the most well-known choice for the second variable, but not necessarily the best [19], is the turbulence kinetic energy dissipation rate,  $\epsilon$  (cf. Eqn. 11.7). This choice results in the  **$k-\epsilon$  model**. Numerical solutions for the mean and turbulence quantities are generated most frequently using finite-difference approximations to the coupled set of governing equations. In effect, two-equation models calculate local mixing lengths throughout the flowfield, rather than requiring that the mixing length be known a priori. As in the mixing-length model, the Reynolds stresses appearing in the time-averaged momentum equations are the modeled quantities: The Boussinesq approximation is invoked, i.e.,  $-\overline{v'_x v'_y} = \mu_{\text{turb}} \partial \bar{v}_x / \partial y$  (cf. Eqn 11.22b), and the local turbulent viscosity is calculated from  $k$  and  $\epsilon$ :  $\mu_{\text{turb}} = C_\mu k^2 / \epsilon$ , where  $C_\mu$  is a constant. Spalding [26] presents some interesting historical insights in the development of two-equation models, while a very readable discussion of the formulation and implementation of these models can be found in Wilcox [19].

**Higher-order models** use additional partial differential equations to calculate the Reynolds stresses directly, rather than to model them, as is done in the two-equation models. In these so-called **Reynolds-stress models**, the closure problem is relegated to modeling the higher-order terms that now appear in the Reynolds-stress transport equations, for example, terms like  $\rho \overline{v'_x v'_y v'_z}$  and  $\overline{p' v'_x}$ . The philosophy here is that delaying the invocation of modeling assumptions to higher-order terms provides a closer representation of the true physics of the flow. Discussions of Reynolds-stress models are found in Refs. [19, 27, 28].

Both two-equation and higher-order approaches have their roots in the solution of time-averaged mathematical representations of the flow. Workers in the field admit the shortcomings of the statistical approach and associated

heuristic closure assumptions in representing the true physics of the flow [19, 27]; however, an extensive database has been built upon such methods that has been found to be quite useful in engineering practice.

An alternative to time-averaged, or statistical, approaches is **direct numerical simulation (DNS)**. We alluded to this approach in the section immediately preceding our discussion of Reynolds-averaging. With DNS, the complete time history of the velocity is resolved down to the Kolmogorov spatial and temporal scales throughout the flowfield. Computer requirements preclude the application of DNS to practical flows of engineering interest; however, DNS calculations are used to test models of turbulence and to provide insights into the correct physics of turbulent flows. The DNS results shown in Fig. 11.3 are an example of this. Good overviews of DNS and how this area of research has developed are found in the reviews of Moin and Mahesh [29] and Rogallo and Moin [30].

Large eddy simulation is an approach that combines attributes of both direct numerical simulation and statistical turbulence modeling methods. **Large-eddy simulation (LES)** temporarily and spatially resolves the flow to scales much larger than Kolmogorov scales, but models the turbulence at scales smaller than those resolved. The attractiveness of LES is that all of the large-scale, energy-containing motions of the flow are calculated, not modeled, thus preserving the true physics of the flow. As previously mentioned, this is particularly important for mixing and reaction. Although more economical than direct numerical simulation, large-eddy simulation still requires substantial computational effort, presently preventing it from being practical for solution of routine engineering problems. With continued advances in computing capability, LES may become a common engineering tool. Reviews of LES methods are presented in Refs. [30] and [31].

---

## SUMMARY

In this chapter, the groundwork is laid for subsequent discussions of premixed (Chapter 12) and nonpremixed (Chapter 13) turbulent combustion. Turbulence was defined and the concepts of mean and fluctuating properties and turbulence intensity were introduced. We discussed, albeit superficially, the structure of turbulent flows and defined four length scales that help to characterize turbulent flow structure. You should be familiar with the length scales and how they interrelate through various turbulent Reynolds numbers. In particular, you should be aware of how the range of length scales (the difference between the largest and smallest eddies) increases with Reynolds numbers. In introducing the mathematical concept of Reynolds-averaging, we saw how turbulent, or Reynolds, stresses arise in the time-averaged conservation equations, which, in turn, brought to light the problem of closure. You should have some appreciation for this issue. An example of closure, Prandtl's

mixing-length hypothesis, was presented, with formulae given for free jets and wall-bounded flows. The mixing-length theory was applied to a free jet, and we saw, as a consequence, that the normalized velocity field ( $v(r, x)/v_e$ ) scales with the initial jet diameter, indicating a universal (i.e.,  $Re$ -independent) structure of turbulent jets. Thus, the spreading angle is a constant, a finding distinctly different from the laminar case; this difference results in turbulent jet flames (Chapter 13) having properties that are considerably different than those of laminar flames.

## NOMENCLATURE

$A$	Area
$C_\mu$	$k-\epsilon$ model constant
$D$	Diameter
$g$	Gravitational acceleration ( $\text{m}/\text{s}^2$ )
$J$	Momentum flow ( $\text{kg}\cdot\text{m}/\text{s}^2$ )
$k, ke$	Kinetic energy per unit mass ( $\text{m}^2/\text{s}^2$ )
$\ell_0$	Integral scale or turbulence macroscale (m)
$\ell_\lambda$	Taylor microscale (m)
$\ell_K$	Kolmogorov microscale (m)
$\ell_m$	Mixing length (m)
$\dot{m}$	Flowrate
$MW$	Molecular weight
$L$	Characteristic width of flow or macroscale (m)
$p$	Arbitrary property
$P$	Pressure (Pa)
$r$	Radial coordinate (m)
$r_{1/2}$	Jet half-width at half-height (m)
$R$	Initial jet radius
$R_u$	Universal gas constant
$R_x$	Correlation coefficient, Eqn. 11.4
$R_0$	Pipe radius (m)
$Re$	Reynolds number
$t$	Time (s)
$T$	Temperature (K)
$v$	Velocity
$v_r, v_x$	Radial and axial velocity components, respectively ( $\text{m}/\text{s}$ )
$v_x, v_y, v_z$	Velocity components in cartesian coordinates ( $\text{m}/\text{s}$ )
$x, y, z$	Cartesian coordinates (m)
$Y$	Mass fraction ( $\text{kg}/\text{kg}$ )

### Greek Symbols

$\delta_{99\%}$	Jet width (m)
$\epsilon$	Eddy viscosity ( $\text{m}^2/\text{s}$ )

$\epsilon_0$	Dissipation rate, Eqn. 11.7 ( $m^2/s^3$ )
$\mu$	Absolute (molecular) viscosity ( $N\cdot s/m^2$ )
$\mu_{\text{eff}}$	Effective viscosity, Eqn. 11.24 ( $N\cdot s/m^2$ )
$\nu$	Kinematic viscosity ( $m^2/s$ )
$\rho$	Density ( $kg/m^3$ )
$\tau$	Shear stress ( $N/m^2$ )

### Subscripts

$e$	Exit
lam	Laminar
max	Maximum
min	Minimum
<i>rms</i>	Root-mean-square
turb	Turbulent
w	Wall

### Other Notation

$\overline{(\quad)}$	Time-averaged quantity
$(\quad)'$	Fluctuating quantity

## REFERENCES

1. Reynolds, O., "An Experimental Investigation of the Circumstances which Determine Whether the Motion of Water shall be Direct or Sinuous, and of the Law of Resistance in Parallel Channels," *Phil. Trans. Royal Society of London*, 174: 935–982, 1883.
2. Dimotakis, P. E., Lye, R. C., and Papantoniou, D. Z., "Structure and Dynamics of Round Turbulent Jets," *Fluid Dynamics Transactions*, 11: 47–76 (1982).
3. Van Dyke, M., *An Album of Fluid Motion*, Parabolic Press, Stanford, CA, p. 95, 1982.
4. Brown, G. L., and Roshko, A., "On Density Effects and Large Structure in Turbulent Mixing Layers," *Journal of Fluid Mechanics*, 64: 775–816 (1974).
5. Wygnanski, I., Oster, D., Fiedler, H., and Dziomba, B., "On the Perseverance of a Quasi-Two-Dimensional Eddy-Structure in a Turbulent Mixing Layer," *Journal of Fluid Mechanics*, 93: 325–335 (1979).
6. Andrews, G. E., Bradley, D., and Lwakabamba, S. B., "Turbulence and Turbulent Flame Propagation—A Critical Appraisal," *Combustion and Flame*, 24: 285–304 (1975).
7. Tennekes, H., "Simple Model for the Small-Scale Structure of Turbulence," *Physics of Fluids*, 11: 669–671 (1968).
8. Townsend, A. A., "On the Fine-Scale Structure of Turbulence," *Proceedings of the Royal Society of London, Series A*, 208: 534–542 (1951).

9. She, Z.-S., Jackson, E., and Orsag, S. A., "Intermittent Vortex Structures in Homogeneous Isotropic Turbulence," *Nature*, 344: 226–228 (1990).
10. She, Z.-S., Jackson, E., and Orsag, S. A., "Structure and Dynamics of Homogeneous Turbulence: Models and Simulations," *Proceedings of the Royal Society of London, Series A*, 434: 101–124 (1991).
11. Tennekes, H., and Lumley, J. L., *A First Course in Turbulence*, MIT Press, Cambridge, MA, 1972.
12. Libby, P. A., and Williams F. A., "Fundamental Aspects," in *Turbulent Reacting Flows* (P. A. Libby, and F. A. Williams, eds.), Springer-Verlag, New York, 1980.
13. Correa, S. M., "A Review of NO<sub>x</sub> Formation Under Gas-Turbine Combustion Conditions," *Combustion Science and Technology*, 87: 329–362 (1992).
14. Lumley, J. E. (ed.), "Whither Turbulence? Turbulence of the Crossroads," *Lecture Notes in Physics*, Vol. 357, Springer-Verlag, New York, 1990.
15. Moin, P., "Towards Large Eddy and Direct Simulation of Complex Turbulent Flows," *Computer Methods in Applied Mechanics and Engineering*, 87: 329–334 (1991).
16. Patankar, S. V., and Spalding, D. B., *Heat and Mass Transfer in Boundary Layers*, 2nd Ed., International Textbook, London, 1970.
17. Launder, B. E., and Spalding, D. B., *Lectures in Mathematical Models of Turbulence*, Academic Press, New York, 1972.
18. Schetz, J. A., *Injection and Mixing in Turbulent Flow*, Progress in Astronautics and Aeronautics, Vol. 68, American Institute of Aeronautics and Astronautics, New York, 1980.
19. Wilcox, D. C., *Turbulence Modeling for CFD*, DCW Industries, La Cañada, CA, 1993.
20. Boussinesq, T. V., "Théorie de l'écoulement Tourbillonnant," *Mém. prés. Acad. Sci.*, Paris, XXIII, 46 (1877).
21. Prandtl, L., "Über die ausgebildete Turbulenz," *Z.A.M.M.*, 5: 136–139 (1925).
22. Prandtl, L., "Bemerkungen zur Theorie der Freien Turbulenz," *Z.A.M.M.*, 22: 241–243 (1942).
23. van Driest, E. R., "On Turbulent Flow Near a Wall," *J. Aero. Sci.*, 23: 1007 (1956).
24. Nikuradse, J., "Laws of Flow in Rough Pipes," English Translation in NACA Technical Memorandum 1292, November 1950. (Original published in German, 1933.)
25. Schlichting, H., *Boundary-Layer Theory*, 6th Ed., McGraw-Hill, New York, 1968.
26. Spalding, D. B., "Kolmogorov's Two-Equation Model of Turbulence," *Proceedings of the Royal Society of London, Series A*, 434: 211–216 (1991).
27. Libby, P. A., *Introduction to Turbulence*, Taylor & Francis, Washington, DC, 1996.

28. Hanjalic, K., "Advanced Turbulence Closure Models: A View of Current Status and Future Prospects," *International Journal of Heat and Fluid Flow*, 15: 178–203 (1994).
29. Moin, P., and Mahesh, K., "Direct Numerical Simulation: A Tool in Turbulence Research," *Annual Review of Fluid Mechanics*, 30: 539–578 (1998).
30. Rogallo, R. S., and Moin, P., "Numerical Simulation of Turbulent Flows," *Annual Review of Fluid Mechanics*, 16: 99–137 (1984).
31. Lesieur, M., and Métais, O., "New Trends in Large-Eddy Simulations of Turbulence," *Annual Review of Fluid Mechanics*, 28: 45–82 (1996).

---

## QUESTIONS AND PROBLEMS

- 11.1** Make a list of all of the bold-faced words appearing in Chapter 11 and define each.
- 11.2** The axial velocity at a point in a flow is given by
$$v_x(t) = A \sin(\omega_1 t + \phi_1) + B \sin(\omega_2 t + \phi_2) + C.$$
A. Develop an expression for the time-mean velocity,  $\bar{v}_x$ .  
B. Develop an expression for  $v'_x$ .  
C. Develop an expression for  $v'_{x,rms}$ .
- 11.3** Perform the Reynolds-averaging process on the second and fourth terms of Eqn. 11.13. Compare your results with Eqn. 11.17.
- 11.4** In the realm of turbulence theory, what is meant by closure? Discuss. Illustrate closure concretely using the free jet as an example, citing appropriate equations as necessary.
- 11.5** In a spark-ignition engine, the integral scale,  $\ell_0$ , is found to be approximately equal to one-third the clearance height. At top-dead-center (TDC), the residual inlet jet has a velocity of 30 m/s and a relative turbulence intensity of 30 percent. Estimate the Taylor and Kolmogorov microscales at TDC, in millimeters, for a motoring (nonfiring) engine. Assume isentropic compression of air from  $P = 1 \text{ atm}$  and  $T = 300 \text{ K}$  with a volumetric compression ratio of 7:1. The TDC clearance height is 10 mm.
- 11.6** In play, a child blows through a 6-mm-diameter straw aimed at a sibling. If a velocity of 3 m/s is needed for the sibling to feel the jet, and the child can maintain an initial velocity of 35 m/s sufficiently long, how far away can the child stand from the sibling and the jet still be felt? Also, verify that the jet is turbulent.

# 12

## Turbulent Premixed Flames

---

### OVERVIEW


Paradoxically, turbulent premixed flames are of tremendous practical importance, being encountered in many useful devices, as discussed below, while their theoretical description is still a matter of uncertainty, or at least controversy. Because there is as yet no comprehensive, generally accepted theory of turbulent premixed flames, and because many of the descriptions are highly mathematical, we will avoid developing or discussing any particular theory in detail, departing from the approach of previous chapters. Rather, our approach will be more phenomenological and empirical, discussing some of the important issues that complicate a rigorous understanding of premixed combustion. Several reviews of this subject have been presented in the past few decades and are recommended as a starting point for those wishing to explore this complex subject in greater detail [1–8].

---

### SOME APPLICATIONS

#### Spark-Ignition Engines

The spark-ignition engine is a prime example of the use of premixed combustion. Figure 12.1 shows several spark-ignition, automobile-engine combustion chamber configurations. The fuel-air mixture is produced either by a carburetor system or, now almost universally in the United States, by a fuel-injection system. Even though the fuel may be introduced as a liquid, spark-ignition engine fuels are highly volatile, and the liquid has time to vaporize and thoroughly mix with the air before the mixture is ignited with a spark. The com-

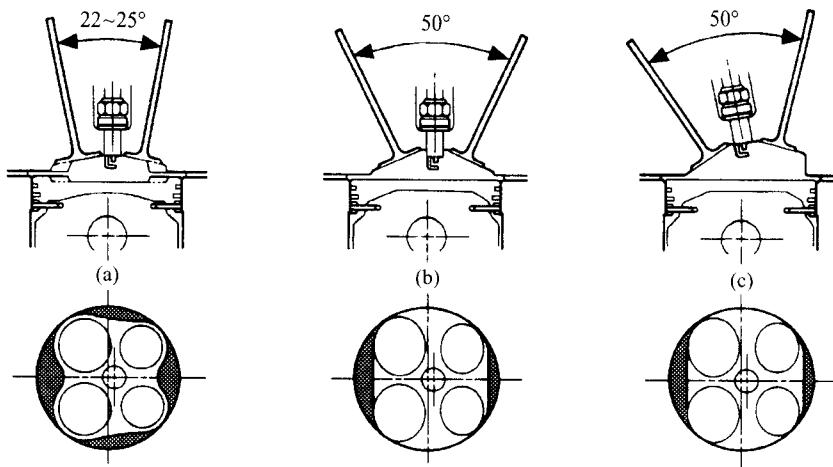


**Figure 12.1** Various configurations of four-valve, spark-ignition engine combustion chambers.

| SOURCE: Courtesy of General Motors Corporation.

bustion duration is an important parameter in the operation of spark-ignition engines and is controlled by the turbulent flame speed and the distribution of the combustion volume. Compact combustion chambers, such as shown in Fig. 12.1a, produce short combustion durations. Combustion duration governs, to a large degree, the lean-limit of stable operation, tolerance to exhaust-gas recirculation, thermal efficiency, and the production of oxides of nitrogen ( $\text{NO}_x$ ) emissions. More information directly related to spark-ignition engine combustion can be found in internal combustion engine textbooks, e.g., Refs. [9] and [10].

### Gas-Turbine Engines

While gas-turbine engines are primarily used to power aircraft, these engines are being employed more and more in stationary power systems. Current turbine combustor design is greatly influenced by the need to control simultaneously soot, carbon monoxide, and oxides of nitrogen emissions. Older engines employed purely nonpremixed combustion systems, with a near-stoichiometric flame zone integrated with secondary air streams to complete combustion and dilute the products to the proper temperature before entry into the turbine. Some current designs and experimental systems utilize various degrees of premixing to avoid high-temperature,  $\text{NO}_x$ -forming zones [11, 12]. Figure 12.2 illustrates a silo-type combustor (cf. Fig. 11.5) that employs natural-gas burners that can operate in a premixed mode. A low- $\text{NO}_x$  gas-turbine combustor can from a premixed cannular-type combustor is shown in Fig. 2.4. With the benefit of  $\text{NO}_x$  control from premixed combustion comes a number

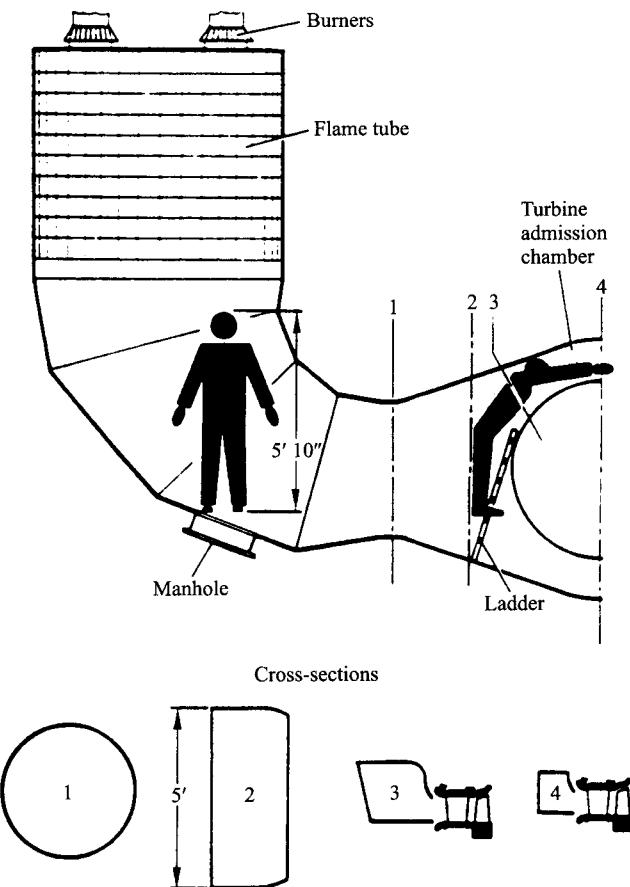


**Figure 12.2** Schematic of silo-type, gas-turbine combustor with ceramic-tile-lined chamber and access for inspection of the combustion chamber and the turbine inlet.

SOURCE: Reprinted from Ref. [12] by permission of the American Society of Mechanical Engineers.

of concerns; primary among them are turndown ratio (ratio of maximum to minimum flowrates), flame stability, and carbon monoxide emissions.


### Industrial Gas Burners

Premixed flames are used in a large number of industrial applications. Premixing of the fuel gas and air may be accomplished upstream of the burner nozzle using a mixer (see Fig. 12.3), or the fuel gas and air may be mixed within the burner nozzle. Figure 12.4 shows two examples of nozzle-mixing burners. Depending upon the degree of premixing achieved in the burner's nozzle, the flame produced by this type of burner may exhibit some nonpremixed or diffusion flame characteristics.

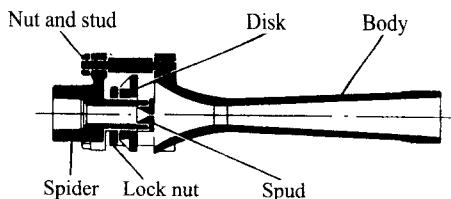


**Figure 12.3** Inspirator mixer uses high-pressure gas flow to entrain air. Mixing occurs downstream of the venturi throat as the fuel-air mixture passes to the burner (not shown).  
| SOURCE: From Ref. [13], reprinted by permission of North American Manufacturing Co.

Fully premixed burners are illustrated in Fig. 12.5. Small-port or ported-manifold burners (Fig. 12.5, top) are used in domestic appliances and industrial applications such as make-up air heating, drying ovens, baking ovens, food roasters, and deep-fat vats [14]. The large-port or pressure-type burners (Fig. 12.5, bottom), as well as nozzle-mixing burners, are used in many industrial applications: for example, kilns used in the manufacturing of bricks, porcelain, and tile, and furnaces for heat-treating, forging, and melting [14].

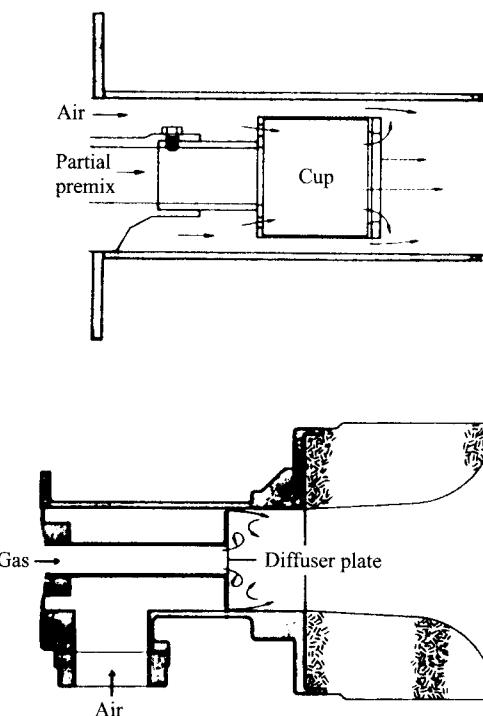

**Figure 12.4** Nozzle-mixing gas burners for industrial applications.  
| SOURCE: From Ref. [14], reprinted by permission of North American Manufacturing Co.

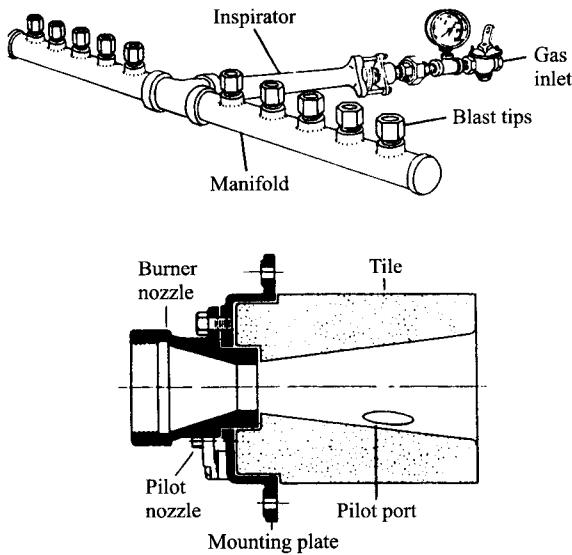

**Figure 12.5** Examples of premixed burners. Top example includes inspirator mixer illustrated in Fig. 12.3.

SOURCE: From Ref. [13], reprinted by permission of North American Manufacturing Co.

## DEFINITION OF TURBULENT FLAME SPEED


Unlike a laminar flame, which has a propagation velocity that depends uniquely on the thermal and chemical properties of the mixture, a turbulent flame has a propagation velocity that depends on the character of the flow, as well as on the mixture properties. This is consistent with the basic nature of turbulent flows as discussed in Chapter 11. For an observer traveling with the flame, we can define a turbulent flame speed,  $S_t$ , as the velocity at which unburned mixture enters the flame zone in a direction normal to the flame. In this definition, we assume that the flame surface is represented as some time-mean quantity, recognizing that the instantaneous position of the high-temperature reaction zone may be fluctuating wildly. Since the direct measurement of unburned gas velocities at a point near a turbulent flame is exceedingly difficult, at best, flame velocities usually are determined from measurements of reactant flowrates. Thus, the turbulent flame speed can be expressed as

$$S_t = \frac{\dot{m}}{\bar{A} \rho_u}, \quad (12.1)$$

where  $\dot{m}$  is the reactant flow rate,  $\rho_u$  is the unburned gas density, and  $\bar{A}$  is the time-smoothed flame area. Experimental determinations of turbulent flame speeds are complicated by determining a suitable flame area,  $\bar{A}$ , for thick, and frequently curved, flames. The ambiguity associated with determining

this flame area can result in considerable uncertainty in measurements of turbulent burning velocities.

Consider the measurement of turbulent flame speeds. An air-fuel mixture passes through a 40-mm  $\times$  40-mm flow channel with a flame anchored at the channel exit along the top and bottom walls, as shown in the sketch. Quartz sidewalls contain the flame beyond the exit, while the top and bottom are open to the laboratory. For a mean flow velocity of 68 m/s, the resulting wedge-shaped flame has an included angle of  $13.5^\circ$ , estimated from time-exposure photographs. Estimate the turbulent burning velocity at this condition. The properties of the unburned mixture are  $T = 293\text{ K}$ ,  $P = 1\text{ atm}$ , and  $MW = 29\text{ kg/kmol}$ .

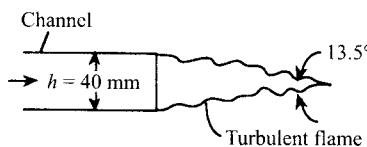**Example 12.1**

**Solution**

Equation 12.1 can be applied directly to find the turbulent burning velocity. The reactants flowrate is

$$\begin{aligned}\dot{m} &= \rho_u A_{\text{duct}} \bar{v}_{\text{duct}} \\ &= 1.206(0.04)^2 68 = 0.131\text{ kg/s.}\end{aligned}$$

where the reactants density is estimated using the ideal-gas law, i.e.,

$$\rho_u = \frac{P}{RT} = \frac{101,325}{(8315/29)293} = 1.206\text{ kg/m}^3.$$

From the flame geometry (wedge), we estimate the apparent flame area,  $\bar{A}$ , first by finding the length of the flame sheet,  $L$ :

$$\frac{h/2}{L} = \sin\left(\frac{13.5^\circ}{2}\right)$$

or

$$L = \frac{h/2}{\sin 6.75^\circ} = \frac{(0.04)/2}{\sin 6.75^\circ} = 0.17\text{ m.}$$

Thus,

$$\bar{A} = 2 \cdot \text{width} \cdot \text{length} = 2(0.04)0.17 = 0.0136\text{ m}^2.$$

The turbulent burning velocity is then

$$S_t = \frac{\dot{m}}{\bar{A}\rho_u} = \frac{0.131}{0.0136(1.206)} = 8.0\text{ m/s}$$

**Comment**

Note that we have calculated a mean turbulent burning velocity for the entire flame. The implied assumptions that the flame is perfectly wedge-shaped and that the unburned

mixture enters the reaction zone at a uniform velocity are only approximations; thus, local turbulent flame speeds may differ from the calculated mean.


---

## STRUCTURE OF TURBULENT PREMIXED FLAMES

### Experimental Observations

One particular view of the structure of turbulent flames is illustrated in Fig. 12.6. Here we see superimposed instantaneous contours of convoluted thin reaction zones (Fig. 12.6a), obtained by visualizing the large temperature gradients in the flame using schlieren photography at different instants. The flow is from bottom to top with the flame stabilized above a tube through which the reactants flow into the open atmosphere. The instantaneous flame front is highly convoluted, with the largest folds near the top of the flame. The positions of the reaction zones move rapidly in space, producing a time-averaged view that gives the appearance of a thick reaction zone (Fig. 12.6b). This apparently thick reaction zone is frequently referred to as a **turbulent flame brush**. The instantaneous view, however, clearly shows the actual reaction front to be relatively thin, as in a laminar premixed flame. These reaction fronts are sometimes referred to as **laminar flamelets**.

As mentioned above, spark-ignition engines operate with turbulent premixed flames. Recent developments in laser-based instrumentation have allowed researchers to explore, in much more detail than previously possible,

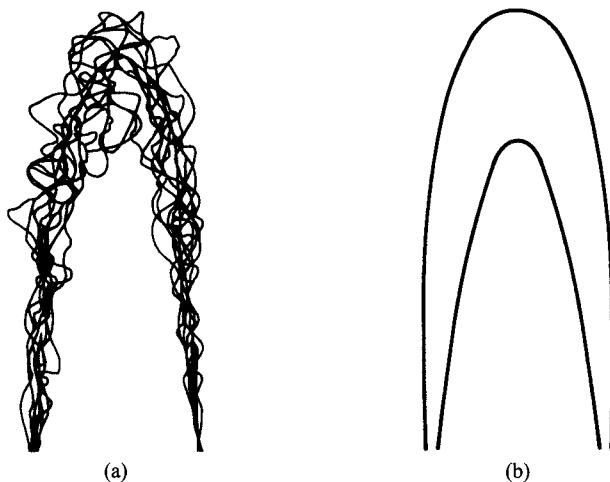


**Figure 12.6** (a) Superposition of instantaneous reaction fronts obtained at different times. (b) Turbulent flame "brush" associated with a time-averaged view of the same flame.  
| SOURCE: (a) After Ref. [15] from Ref [19], reprinted by permission of Academic Press.

the hostile environment of the internal combustion engine combustion chamber. Figure 12.7 shows a time sequence of two-dimensional flame visualizations in a spark-ignition engine from a study by zur Loyer and Bracco [16]. The flame begins to propagate outward from the spark plug, as shown in the first frame, and moves across the chamber until nearly all the gas is burned. In these flame visualizations, we see that the division between the unburned and burned gases occurs over a very short distance and the flame front is distorted by both relatively large- and small-scale wrinkles. For the specific conditions associated with Fig. 12.7, the burned gas and unburned gas are generally simply connected, i.e., there are very few islands or pockets of unburned gas within the burned gas, and vice versa. At higher engine speeds (2400 rpm), however, islands and pockets are seen frequently.

### Three Flame Regimes

The visualizations of turbulent flames presented above (Figs. 12.6 and 12.7), suggest that the effect of turbulence is to wrinkle and distort an essentially

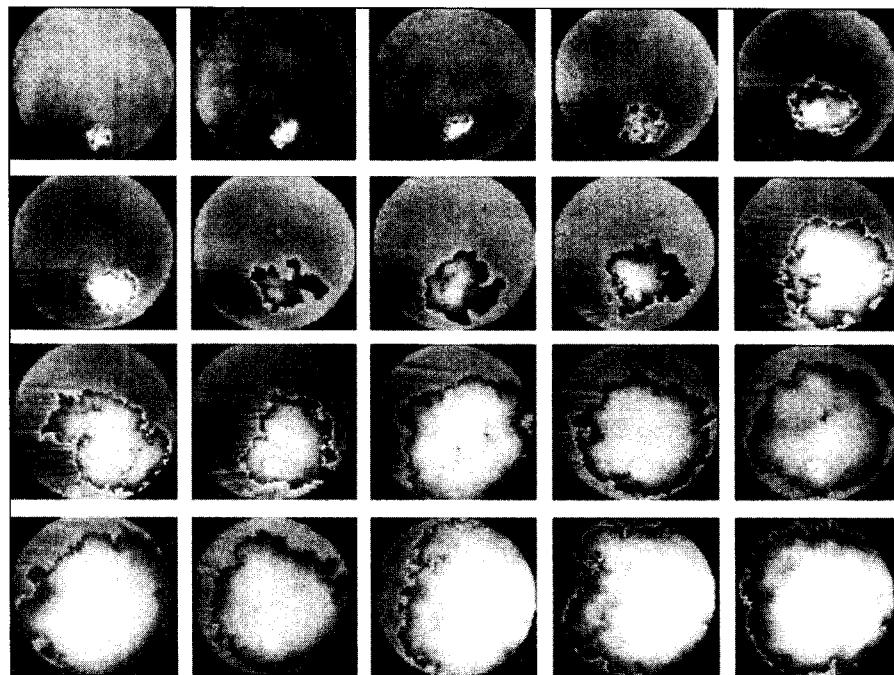

**Figure 12.7** Visualization of turbulent flame propagation in a spark-ignition engine operating at 1200 rpm. Images represent a planar slice through the combustion chamber with the sequence starting shortly after ignition (upper left) and proceeding until the flame nears the cylinder walls (lower right).

SOURCE: Reprinted, with permission, from Ref. [16], © 1987, Society of Automotive Engineers, Inc.

laminar flame front (Chapter 8). Turbulent flames of this type are referred to as being in the **wrinkled laminar-flame regime**. This is one pole in our classification of turbulent premixed flames. At the other pole is the **distributed-reaction regime**. Falling between these two regimes is a region sometimes referred to as the **flamelets-in-eddies regime**.

**Regime Criteria** Before we discuss each regime in more detail, it is helpful to develop a basic understanding of the factors that differentiate these three regimes. To do this, we appeal to some of the basic concepts of turbulent flow presented in Chapter 11, in particular, the idea that various length scales exist simultaneously in a turbulent flow. Recall that the smallest scale, the Kolmogorov microscale,  $\ell_K$ , represents the smallest eddies in the flow. These eddies rotate rapidly and have high vorticity, resulting in the dissipation of the fluid kinetic energy into internal energy, i.e., fluid friction results in a temperature rise of the fluid. At the other extreme of the length-scale spectrum is the integral scale,  $\ell_0$ , which characterizes the largest eddy sizes. The basic structure of a turbulent flame is governed by the relationships of  $\ell_K$  and  $\ell_0$  to the laminar flame thickness,  $\delta_L$  (cf. Chapter 8). The laminar flame thickness characterizes the thickness of a reaction zone controlled by molecular, not turbulent, transport of heat and mass. More explicitly, the three regimes are defined by

$$\text{Wrinkled laminar flames: } \delta_L \leq \ell_K, \quad (12.2a)$$

$$\text{Flamelets in eddies: } \ell_0 > \delta_L > \ell_K, \quad (12.2b)$$

$$\text{Distributed reactions: } \delta_L > \ell_0. \quad (12.2c)$$

Equations 12.2a and 12.2c have clear physical interpretations; when the flame thickness,  $\delta_L$ , is much thinner than the smallest scale of turbulence,  $\ell_K$ , the turbulent motion can only wrinkle or distort the thin laminar flame zone (Eqn. 12.2a). The criterion for the existence of a wrinkled laminar flame (Eqn. 12.2a) is sometimes referred to as the **Williams–Klimov criterion** [5]. At the other extreme, if all scales of turbulent motion are smaller than the reaction zone thickness ( $\delta_L$ ), then transport within the reaction zone is no longer governed solely by molecular processes, but is controlled, or at least influenced, by the turbulence. This criterion for the existence of a distributed-reaction zone is sometimes referred to as the **Damköhler criterion** [17].

It is convenient to discuss flame structure in terms of dimensionless parameters. The turbulence length scales and laminar flame thickness can be expressed as two dimensionless parameters:  $\ell_K/\delta_L$  and  $\ell_0/\delta_L$ . Two additional parameters are important to our discussion: the turbulence Reynolds number,  $Re_{\ell_0}$ , defined in Chapter 11, and the Damköhler number, which is introduced below.

**Damköhler Number** An important dimensionless parameter in combustion is the **Damköhler number,  $Da$** . This parameter appears in the description of many combustion problems and is quite important in understanding turbulent pre-

mixed flames. The fundamental meaning of the Damköhler number,  $Da$ , used here is that it represents the ratio of a characteristic flow or mixing time to a characteristic chemical time; thus,

$$Da \equiv \frac{\text{characteristic flow time}}{\text{characteristic chemical time}} = \frac{\tau_{\text{flow}}}{\tau_{\text{chem}}} \quad (12.3)$$

The evaluation of  $Da$  depends on the situation under study, in the same sense that the Reynolds number has many particular definitions derived from its fundamental meaning as the ratio of inertia to viscous forces. For our study of premixed flames, particularly useful characteristic times are the lifetimes of large eddies in the flow ( $\tau_{\text{flow}} \equiv \ell_0/v'_{rms}$ ) and a chemical time based on a laminar flame ( $\tau_{\text{chem}} \equiv \delta_L/S_L$ ). Using these characteristic times, we define the Damköhler number as


$$Da = \frac{\ell_0/v'_{rms}}{\delta_L/S_L} = \left( \frac{\ell_0}{\delta_L} \right) \left( \frac{S_L}{v'_{rms}} \right). \quad (12.4)$$

When chemical reaction rates are fast in comparison with fluid mixing rates, then  $Da \gg 1$ , and a **fast-chemistry regime** is defined. Conversely, when reaction rates are slow in comparison with mixing rates, then  $Da \ll 1$ . Note that the characteristic rates are inversely proportional to their corresponding characteristic times. The definition of  $Da$  in Eqn. 12.4 is also instructive in that it represents the product of the length-scale ratio,  $\ell_0/\delta_L$ , and the reciprocal of a relative turbulence intensity,  $v'_{rms}/S_L$ . Thus, if we fix the length-scale ratio, the Damköhler number falls as turbulence intensity goes up.

Thus far in our discussion, we have identified five dimensionless parameters:  $\ell_K/\delta_L$ ,  $\ell_0/\delta_L$ ,  $Re_{\ell_0}$ ,  $Da$ , and  $v'_{rms}/S_L$ . From their fundamental definitions, these five groups can be interrelated, and one such way of viewing these interrelationships is shown in Fig. 12.8 [17]. With such a representation (Fig. 12.8), we can estimate the flame regime that might occur in practical combustion devices, provided we have sufficient information characterizing the turbulent flowfield. The two bold lines in Fig. 12.8 define three separate regions on the graph of  $Da$  versus  $Re_{\ell_0}$  corresponding to the three regions defined by Eqns. 12.2a-c. Above the bold line denoted  $\ell_K/\delta_L = 1$ , reactions can take place in thin sheets, i.e., the wrinkled laminar-flame regime; below the other bold line, denoted  $\ell_0/\delta_L = 1$ , reactions will take place over a distributed region in space. The region between the two bold lines is our so-called flamelets-in-eddies regime. The boxed region containing the data symbols represents an estimate of the domain associated with spark-ignition engine combustion [17]. Here we see that combustion is predicted to occur with either wrinkled laminar flames or flamelets in eddies, depending on the specific operating conditions.

Estimate the Damköhler number and the ratio of the Kolmogorov length scale to the laminar flame thickness for conditions prevailing in the combustor of a utility-class gas-turbine engine. What flame regime does this suggest? Assume the unburned gas temperature is 650 K, the burned gas temperature is 2000 K, the pressure is 15 atm, the mean

**Example 12.2**

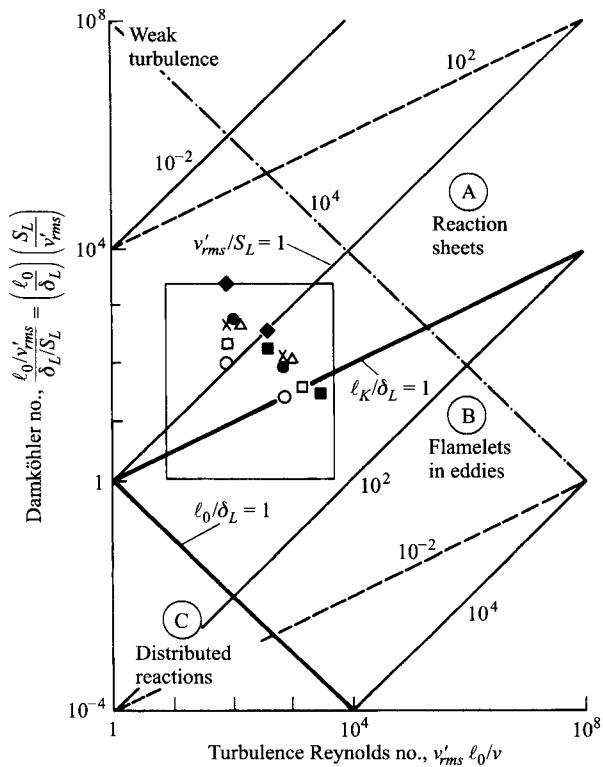

**Figure 12.8** Important parameters characterizing turbulent premixed combustion. Conditions satisfying the Williams–Klimov criterion for the existence of wrinkled flames lie above the solid line ( $\ell_K = \delta_L$ ), and conditions satisfying the Damköhler criterion for distributed reactions fall below the solid line ( $\ell_0 = \delta_L$ ).

SOURCE: After Ref. [17], reprinted with permission from SAE Paper No. 850345, © 1985, Society of Automotive Engineers, Inc.

velocity is 100 m/s, equivalence ratio is unity, fuel properties are those of isoctane, and the combustor can diameter is 0.3 m. Assume a relative turbulence intensity of 10 percent and an integral scale of 1/10 the can diameter. Treat the fuel and air as essentially premixed.

#### Solution

The Damköhler number is estimated from Eqn. 12.4, where the characteristic flow time is

$$\begin{aligned}\tau_{\text{flow}} &= \frac{\ell_0}{v'_{rms}} = \frac{D/10}{0.10\bar{v}} = \frac{0.30/10}{0.10/(100)} \\ &= 0.003 \text{ s} \quad \text{or} \quad 3 \text{ ms}\end{aligned}$$

and the characteristic chemical time is  $\delta_L/S_L$ . To estimate the chemical time, we will use the laminar flame speed correlations of Chapter 8 to find  $S_L$  (Eqn. 8.33), and the simple theory result (Eqn. 8.21b) to estimate the laminar flame thickness  $\delta_L$ . Following the

procedures of Example 8.3, we obtain the laminar flame speed, assuming the fuel burns similarly to isoctane:

$$\begin{aligned} S_L &= S_{L,\text{ref}} \left( \frac{T_u}{T_{u,\text{ref}}} \right)^\gamma \left( \frac{P}{P_{\text{ref}}} \right)^\beta \\ &= 24.9 \left( \frac{650}{298} \right)^{2.18} \left( \frac{15}{1} \right)^{-0.16} = 88.4 \text{ cm/s.} \end{aligned}$$

The laminar flame thickness (Eqn. 8.21b) is

$$\delta \cong 2\alpha/S_L.$$

The thermal diffusivity is estimated at the average temperature,  $0.5(T_b + T_u) = 1325 \text{ K}$ , using air properties (Appendix Table C.1) and corrected for the elevated pressure:

$$\alpha = 254 \cdot 10^{-6} \left( \frac{1 \text{ atm}}{15 \text{ atm}} \right) = 1.7 \cdot 10^{-5} \text{ m}^2/\text{s.}$$

Thus,

$$\begin{aligned} \delta_L &\cong 2(1.7 \cdot 10^{-5})/0.884 = 3.85 \cdot 10^{-5} \text{ m} \\ \delta_L &\cong 0.039 \text{ mm.} \end{aligned}$$

The characteristic chemical time is then

$$\begin{aligned} \tau_{\text{chem}} &= \frac{\delta_L}{S_L} = \frac{3.85 \cdot 10^{-5}}{0.884} = 4.4 \cdot 10^{-5} \text{ s} \\ &= 0.0435 \text{ ms.} \end{aligned}$$

The Damköhler number can now be estimated as

$$Da = \frac{\tau_{\text{flow}}}{\tau_{\text{chem}}} = \frac{3 \text{ ms}}{0.0435 \text{ ms}} = 69$$

We can locate a point on Fig. 12.8 after calculating  $Re_{\ell_0}$ :

$$\begin{aligned} Re_{\ell_0} &= \frac{\rho v'_{\text{rms}} \ell_0}{\mu} = \frac{(P/RT_b)(0.1\bar{v})(D/10)}{\mu_b} \\ &= \frac{15(101,325)/[(288.3)(2000)](0.1)100(0.30/10)}{689 \cdot 10^{-7}} = 11,477. \end{aligned}$$

This corresponds to  $\ell_K/\delta_L \approx 1$  from Fig. 12.8 and falls on the boundary between the wrinkled-flame and the flamelets-in-eddies regimes. More accurately, we can estimate  $\ell_K/\ell_L$  by calculating  $\ell_K$  from Eqn. 11.9, as in Example 11.1:

$$\ell_K = \ell_0 Re_{\ell_0}^{-3/4} = \left( \frac{0.30}{10} \right) (11,477)^{-0.75} = 2.7 \cdot 10^{-5} \text{ m}$$

$$\ell_K/\delta_L = 2.7 \cdot 10^{-5}/3.85 \cdot 10^{-5} = 0.70$$

$$\boxed{\ell_K/\delta_L = 0.7 \approx 1}$$

This confirms our estimate obtained from the graph.

**Comment**

In Fig. 12.8, our turbine example conditions fall just to the right of the box representing reciprocating engine conditions. Thus, we see that the turbulent combustion regimes of the two devices are not that far apart. We also note that our estimate of the mean thermal diffusivity was based on a density evaluated at the mean temperature, rather than the unburned gas density as employed previously in the theoretical developments in Chapter 8. Using  $\rho_u$  instead of  $\rho(\bar{T})$  to evaluate  $\alpha(\bar{T})$  yields  $\alpha = 8.8 \cdot 10^{-6} \text{ m}^2/\text{s}$ , which is about half as large as that calculated above. Regardless of which value is used for  $\alpha(\bar{T})$ , we still estimate that the conditions are near the boundary between the wrinkled-flame and flamelets-in-eddies regimes.

## WRINKLED LAMINAR-FLAME REGIME

In this regime, chemical reactions occur in thin sheets. Referring again to Fig. 12.8, we see that reaction sheets occur only for Damköhler numbers greater than unity, depending on the turbulence Reynolds numbers, clearly indicating that the reaction-sheet regime is characterized by fast chemistry (in comparison with fluid mechanical mixing). For example, typical values for the engine-data Damköhler numbers in the reaction-sheet regime are of the order of 500 for  $Re_{\ell_0} \approx 100$ . For these conditions, the turbulence intensity  $v'_{rms}$  is of the same order of magnitude as the laminar flame speed  $S_L$ .

One of the simplest ways of dealing with the wrinkled laminar-flame regime of turbulent combustion is to assume that the flamelets propagate with a velocity consistent with a plane (one-dimensional) laminar flame. In this view, the only effect of turbulence is the wrinkling of the flame, which results in an increase in flame area; therefore, the ratio of the turbulent flame speed to the laminar flame speed is simply a ratio of the wrinkled flamelet area to the time-mean flame area  $\bar{A}$  defined in Eqn. 12.1. This can be seen by expressing the turbulent burning rate,  $\dot{m}$ , in terms of flamelet area and speed, i.e.,


$$\dot{m} = \rho_u \bar{A} S_t = \rho_u A_{\text{flamelets}} S_L. \quad (12.5)$$

Thus,

$$S_t / S_L = A_{\text{flamelets}} / \bar{A}, \quad (12.6)$$

which is illustrated in Fig. 12.9. In reality,  $S_L$  will not be a single value but will depend on local flow properties. In particular, flame curvature, velocity gradients in the flow, and recirculation of burned products into the flame, can all alter the local laminar flame velocity [1]. A discussion of these effects is beyond the scope of this book, and the interested reader is referred to the literature and advanced textbooks, e.g., Refs. [4, 5, 18, 19].

Many theories have been developed to relate turbulent flame speeds to flow properties, based on the underlying concept of wrinkled laminar flamelets; for example, Andrews *et al.* [1], in 1975, cite 13 different models and more have

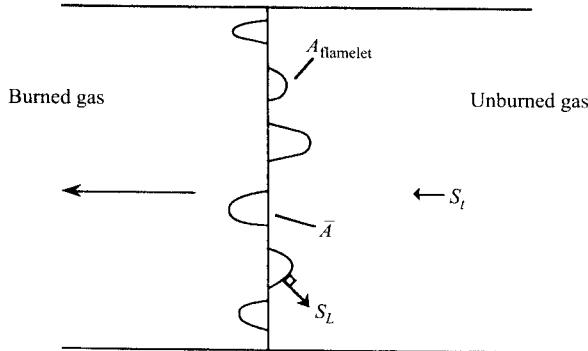

**Figure 12.9** Sketch of wrinkled laminar flame illustrating instantaneous flamelet area together with the mean area,  $\bar{A}$ , used to define the turbulent flame speed,  $S_t$ .

been developed since. We will not attempt to review the many theories, but, rather, present three models as examples. The first model is by Damköhler [20], and is expressed as

$$S_t/S_L = 1 + v'_{rms}/S_L; \quad (12.7)$$

the second, a more recent development, by Clavin and Williams [21], is given by

$$S_t/S_L = \left\{ 0.5 \left[ 1 + \left( 1 + 8Cv'_{rms}^2/S_L^2 \right)^{1/2} \right] \right\}^{1/2}, \quad (12.8a)$$

where  $C$  is a constant with a value of approximately 1. For small values of  $v'_{rms}/S_L$ , Eqn. 12.8a reduces to

$$S_t/S_L = 1 + Cv'_{rms}^2/S_L^2. \quad (12.8b)$$

The third relationship, proposed by Klimov [22], is

$$S_t/S_L = 3.5(v'_{rms}/S_L)^{0.7}, \quad (12.9)$$

for  $v'_{rms}/S_L \gg 1$ .

The Damköhler model (Eqn. 12.7) is based on the fact that for a constant laminar flame speed in a purely laminar flow, the flame area,  $A_{\text{flame}}$ , is directly proportional to the flow velocity,  $v_u$ , i.e.,  $\dot{m} = \rho_u v_u A = \rho_u S_L A_{\text{flame}}$ . Hence, the area ratio  $A_{\text{flame}}/A$  is equal to  $v_u/S_L$ , where  $A$  is the flow area, in accordance with the laminar flame concepts developed in Chapter 8. Analogously, this idea is then extended to the turbulent flow case by assuming that

$$A_{\text{wrinkles}}/\bar{A} = v'_{rms}/S_L, \quad (12.10)$$


where the area of the wrinkles is defined as the area in excess of the time-mean flame area, i.e.,  $A_{\text{wrinkles}} \equiv A_{\text{flamelets}} - \bar{A}$ . So, from our definition of turbulent flame speed (Eqn. 12.5), we recover the Damköhler model (Eqn. 12.7):

$$S_t = \frac{A_{\text{flamelets}}}{\bar{A}} S_L = \frac{\bar{A} + A_{\text{wrinkles}}}{\bar{A}} S_L = \left(1 + \frac{v'_{\text{rms}}}{S_L}\right) S_L. \quad (12.11)$$

The Clavin and Williams expressions (Eqns. 12.8a and b) are derived from a more rigorous treatment of the dynamics of wrinkled laminar flames for small values of  $v'_{\text{rms}}$ . Further discussion is beyond the scope of this book, while more information can be found in Refs. [6, 7, 21]. The functional form of the Klimov relationship (Eqn. 12.9) is based on theoretical grounds; however, the proportionality constant and exponent are based on experimental data in the Russian literature (Ref. [23] and others) cited by Klimov [22].


Figure 12.10 shows experimental data for turbulent flame speeds [23] and the predictions from the wrinkled laminar-flame models of Damköhler (Eqn. 12.7) and Klimov (Eqn. 12.9). Since the Klimov model [22] has constants partially derived from this experimental dataset, we expect good agreement. Note, however, that the straight-line form of the Damköhler model does not capture the experimental trend. Since the Clavin and Williams models (Eqns. 12.8) is based on low levels of  $v'_{\text{rms}}$ , the predictions of this model are not shown.

Although many different theoretical formulae have been developed to predict  $S_t$  for the wrinkled laminar-flame regime, there appears to be general agreement that  $S_t/S_L$  depends only on  $v'_{\text{rms}}/S_L$  and does not involve any other

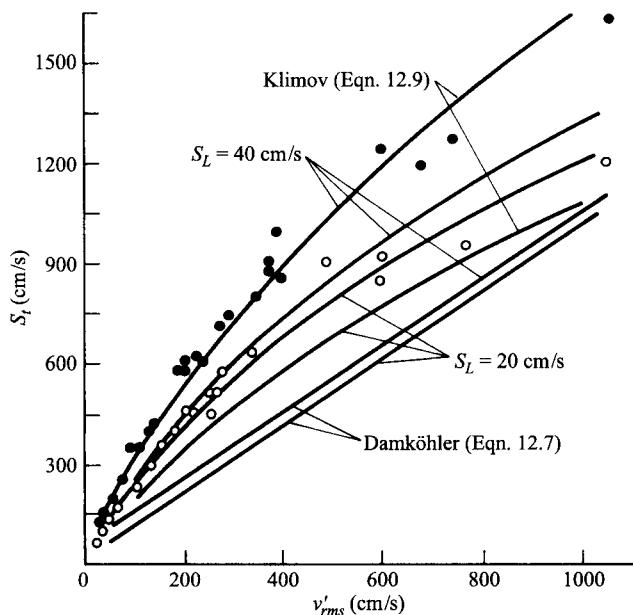

**Figure 12.10** Experimental data for  $S_t$  versus  $v'_{\text{rms}}$  compared with wrinkled laminar-flame theories of turbulent flame propagation.

| SOURCE: Data from Ref. [23].

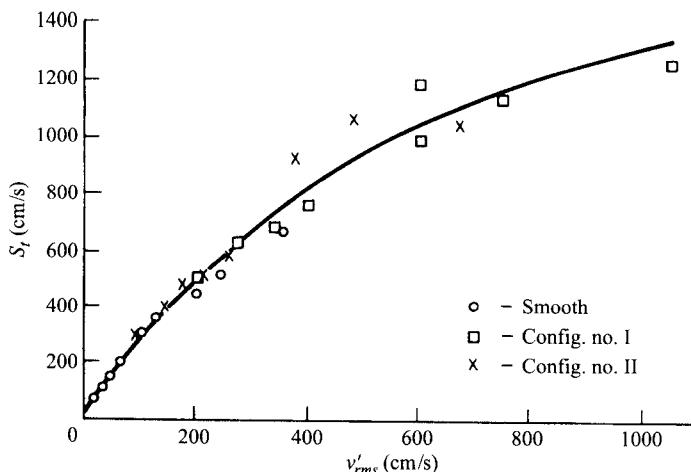

**Figure 12.11** Turbulent flame speeds for flames anchored downstream of a smooth section or turbulence-generating grids (configuration I, 8-mm rods; configuration II, 4-mm rods).  $S_L = 40 \text{ cm/s}$ .  
| SOURCE: From Ref. [23].

turbulence properties, such as length scales [4]. Figure 12.11 shows experimental results obtained for unconfined flames attached at the end of a channel, where the channel contained turbulence-generating grids of 8-mm (configuration I) or 4-mm (configuration II) rods or was smooth. Since the rods affect the turbulence length scales, the lack of any clear differentiation by configuration supports the idea of length-scale independence. Further research is needed before specific recommendations can be made for flame-speed relationships appropriate for engineering design purposes.

Laser Doppler anemometry is used to measure the mean and fluctuating velocities in a specially instrumented spark-ignition engine. Estimate the turbulent flame speed for the following conditions:  $v'_{rms} = 3 \text{ m/s}$ ,  $P = 5 \text{ atm}$ ,  $T_u = 500^\circ\text{C}$ , and  $\Phi = 1.0$  (propane-air). The mass fraction of the residual burned gases mixed with the fresh charge is 0.09.

### Example 12.3

#### Solution

We will employ the theoretical relations of Klimov (Eqn. 12.9) and Damköhler (Eqn. 12.7) to provide estimates of the turbulent burning velocity. Both relations require a value for the laminar flame speed  $S_L$  to evaluate  $S_t$ ; thus, we first employ the correlations of Chapter 8 to determine  $S_L$  (Eqn. 8.33) as follows:

$$\begin{aligned} S_{L,\text{ref}} &= B_M + B_2(\Phi - 1.08)^2 \\ &= 33.33 - 138.65(1 - 1.08)^2 = 32.44 \text{ cm/s} \end{aligned}$$

$$\begin{aligned} S_L &= 32.44 \left( \frac{T_u}{T_{u,\text{ref}}} \right)^\gamma \left( \frac{P}{P_{\text{ref}}} \right)^\beta (1 - 2.1 Y_{\text{dil}}) \\ &= 32.44 \left( \frac{773}{298} \right)^{2.18} \left( \frac{5}{1} \right)^{-0.16} [1 - 2.1(0.09)] = 162.4 \text{ cm/s}. \end{aligned}$$

Thus,

$$\frac{v'_{rms}}{S_L} = \frac{3}{1.62} = 1.85.$$

From Eqn. 12.9,

$$\begin{aligned} S_t &= 3.5 S_L \left( \frac{v'_{rms}}{S_L} \right)^{0.7} \\ &= 3.5(1.67)(1.8)^{0.7} \\ S_t &= 8.8 \text{ m/s} \end{aligned}$$

Or, from Eqn. 12.7,

$$\begin{aligned} S_t &= S_L + v'_{rms} \\ &= 1.67 + 3 \\ S_t &= 4.7 \text{ m/s} \end{aligned}$$


#### Comment

We note that the values from the two theories differ by nearly a factor of two. Also, since  $v'_{rms}/S_L$  is only 1.8, it is not clear that the condition of  $v'_{rms}/S_L \gg 1$  for Eqn. 12.9 has been met.

## DISTRIBUTED-REACTION REGIME


One way to enter this regime is to require small integral length scales,  $\ell_0/\delta_L < 1$ , and small Damköhler numbers ( $Da < 1$ ). This is difficult to achieve in a practical device, since these requirements imply that, simultaneously,  $\ell_0$  must be small and  $v'_{rms}$  must be large, i.e., small flow passages and very high velocities. (These conditions can be inferred easily from Fig. 12.8.) Pressure losses in such devices surely would be huge and, hence, render them impractical. Also, it is not clear that a flame can be sustained under such conditions [22]. Nonetheless, it is instructive to look at how chemical reactions and turbulence might interact in this regime, even if it is generally inaccessible for flame reactions, since many pollutant formation reactions are slow and, hence, occur in distributed regions.

Figure 12.12 heuristically illustrates a distributed-reaction zone in which all turbulence length scales are within the reaction zone. Since reaction times are longer than eddy lifetimes ( $Da < 1$ ), fluctuations in velocity,  $v'_{rms}$ , tempera-

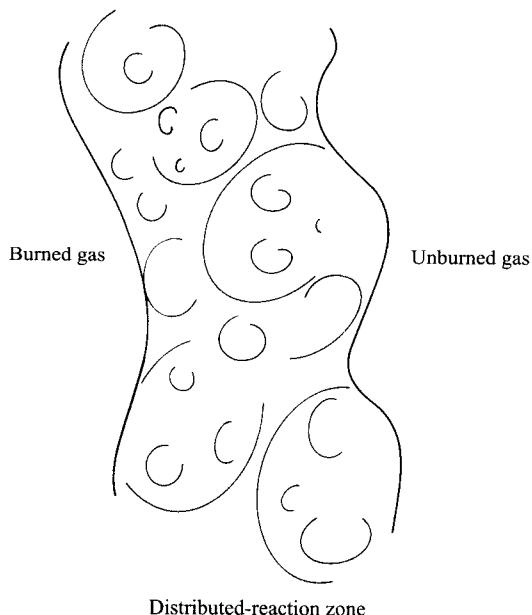

**Figure 12.12** Conceptual view of turbulent flame propagation in the distributed-reaction regime showing various length scales of turbulence within the reaction zone proper.

ture,  $T'_{rms}$ , and species mass fractions,  $Y'_{i,rms}$ , all occur simultaneously. Thus, the instantaneous chemical reaction rates depend on the instantaneous values of  $T (= \bar{T} + T')$  and  $Y_i (= \bar{Y}_i + Y'_i)$ , and fluctuate as well. Moreover, the time-average reaction rate is not simply evaluated using mean values, but involves correlations among the fluctuating quantities. (Recall from Chapter 11 that the correlation of velocity components results in the Reynolds stresses.) In the following, we develop a mean reaction rate for a single bimolecular reaction step,

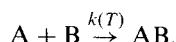

Recall from Chapter 4 that the reaction rate for species A,  $\dot{\omega}_A$  (kmol/m<sup>3</sup>-s) can be expressed

$$\dot{\omega}_A = -k[X_A][X_B], \quad (12.12)$$

where the brackets denote molar concentrations (kmol/m<sup>3</sup>) and  $k$  is the temperature-dependent rate coefficient. Expressing Eqn. 12.12 in terms of mass fractions yields

$$\frac{dY_A}{dt} = -k Y_A Y_B \frac{\rho}{MW_B}, \quad (12.13)$$

where  $\rho$  is the mixture density. Defining the instantaneous values for each variable,

$$\begin{aligned} k &= \bar{k} + k', \\ Y_A &= \bar{Y}_A + Y'_A, \\ Y_B &= \bar{Y}_B + Y'_B, \\ \rho &= \bar{\rho} + \rho', \end{aligned}$$

substituting into Eqn. 12.3, and taking the time average, as denoted by the overbar, we arrive at the average reaction rate,  $\overline{dY_A/dt}$ ,

$$\overline{dY_A/dt} = -\overline{k\rho Y_A Y_B} = -\overline{(\bar{k} + k')(\bar{\rho} + \rho')(\bar{Y}_A + Y'_A)(\bar{Y}_B + Y'_B)}, \quad (12.14)$$

where  $MW_B$  has been absorbed in the rate coefficient  $k$ . The right-hand-side of Eqn. 12.14 can be expanded to yield

$$\begin{aligned} -\frac{\overline{dY_A}}{dt} &= \bar{\rho}\bar{k}\bar{Y}_A\bar{Y}_B \\ &+ \bar{\rho}\bar{k}\overline{Y'_A Y'_B} + \text{five additional two-variable correlation terms} \\ &+ \bar{k}\overline{\rho' Y'_A Y'_B} + \text{three additional three-variable correlation terms} \\ &+ \overline{\rho' k' Y'_A Y'_B}. \end{aligned} \quad (12.15)$$

From Eqn. 12.15, the complications caused by turbulent fluctuations are immediately obvious, and multitudinous. The leading term on the right-hand-side of Eqn. 12.15 is the rate of reaction that would be obtained simply by substituting the mean values of  $\rho$ ,  $k$ ,  $Y_A$ , and  $Y_B$  into Eqn. 12.13. This term is then augmented by six two-variable correlations, four three-variable correlations, and a single four-variable correlation! Obviously, many terms could be eliminated by assuming isothermal ( $k = \text{constant}$ ) and constant-density flow, leaving only the correlations involving  $Y'_A$  and  $Y'_B$ ; however, the problem would still be formidable.

## FLAMELETS-IN-EDDIES REGIME

This regime lies in the wedge-shaped region between the wrinkled laminar-flame and distributed-reaction regimes as shown in Fig. 12.8. This region is typified by moderate Damköhler numbers and high turbulence intensities ( $v'_{rms}/S_L \gg 1$ ). This region is of particular interest in that it is likely that some practical combustion devices operate in this regime. For example, we note that a portion of the estimated region of spark-ignition engine combustion [17] lies in the flamelets-in-eddies regime. The experiments of Ballal and Lefebvre [24, 25], utilizing premixed propane flames in a confined flow, provide much of the experimental data related to this regime.


Figure 12.13 illustrates, conceptually, how combustion might proceed in this regime and follows the ideas that support the **eddy-breakup model** [4, 26]. This concept has met with success in predicting combustion rates in some devices. As illustrated in Fig. 12.13, the burning zone consists of parcels of burned gas and almost fully burned gas. The intrinsic idea behind the eddy-breakup model is that the rate of combustion is determined by the rate at which parcels of unburned gas are broken down into smaller ones, such that there is sufficient interfacial area between the unburned mixture and hot gases to permit reaction [4]. The implication of this is that chemical reaction rates play no role in determining the burning rates, but, rather, turbulent mixing rates completely control combustion. Implementing these ideas in mathematical form, the fuel mass burning rate per unit volume,  $\bar{\dot{m}}_F'''$ , can be expressed [7]:

$$\bar{\dot{m}}_F''' = -\rho C_F Y'_{F,rms} \epsilon_0 / (3v_{rms}^2/2), \quad (12.16)$$

where  $C_F$  is a constant ( $0.1 < C_F < 100$ , but is typically of the order of unity),  $Y'_{F,rms}$  is the root-mean-square fuel mass fraction fluctuation,  $\epsilon_0$  is the turbulence dissipation rate (defined in Chapter 11 by Eqn. 11.7) and  $3v_{rms}^2/2$  is the turbulence kinetic energy (per unit mass) assuming  $v'_{rms} = v'_{x,rms} = v'_{y,rms} = v'_{z,rms}$ , i.e., isotropic turbulence. Utilizing the definition of  $\epsilon_0$  and pulling all of the constants into  $C_F$ , we obtain

$$\bar{\dot{m}}_F''' = -\rho C_F Y'_{F,rms} v'_{rms} / \ell_0. \quad (12.17)$$

In Eqn. 12.17, we see that the volumetric mass burning rate depends directly on the characteristic fluctuation of  $Y$ ,  $Y'_{F,rms}$ , and the characteristic turn-around time of an eddy,  $v'_{rms}/\ell_0$ . Therefore, unlike the theories describing the wrinkled laminar-flame regime, this model predicts that the turbulence length scale is quite important in determining turbulent burning rates.

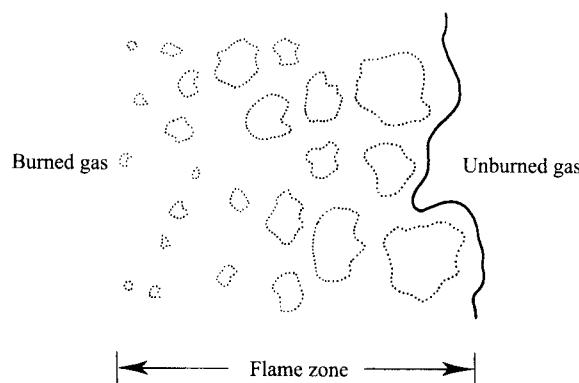

**Figure 12.13** Conceptual view of turbulent flame propagation in the flamelets-in-eddies regime.

## FLAME STABILIZATION

As mentioned earlier in this chapter, there are several important practical applications or specific devices that employ essentially turbulent premixed flames: premixed and nozzle-mixed gas burners for industrial or commercial applications, premixing/prevaporizing gas-turbine combustors, turbojet afterburners, and spark-ignition engines. In spark-ignition engines, no provision for flame stabilization is required since the flame freely propagates in a sealed chamber, and the concepts of flashback, liftoff, and blowoff (cf. Chapter 8) have no meaning here. Instability in spark-ignition (SI) engines is characterized, rather, by failure to achieve consistent ignition, or early flame growth, and incomplete propagation of the flame to all reaches of the combustion chamber. Therefore, our attention in this section will be directed toward applications other than SI engines.

In a practical device, a stable flame is one that is anchored at a desired location and is resistant to flashback, liftoff, and blowoff over the device's operating range. Several methods are employed to hold and stabilize flames:


- Low-velocity bypass ports.
- Refractory burner tiles.
- Bluff-body flameholders.
- Swirl or jet-induced recirculating flows.
- Rapid increase in flow area creating recirculating separated flow.

In some applications, several methods may be used simultaneously, and, in general, these same methods are employed in stabilizing turbulent non-premixed flames, as discussed in Chapter 13.

The essential principle involved in anchoring a flame in a turbulent flow, at conditions sufficiently removed from blowout, is that the local turbulent flame speed matches the local mean flow velocity. This is the same principle that we applied to the stabilization of laminar flames, except that now the turbulent flame speed replaces the laminar flame speed. Criteria establishing blowout, however, are more similar to those associated with ignition, as discussed below.

### Bypass Ports

Figure 12.14 illustrates the application of low-velocity bypass ports to stabilize an industrial burner flame. The same principle is used in hand-held propane torches and modern laboratory Bunsen burners, so it might be possible for you to get a first-hand look at such a device.

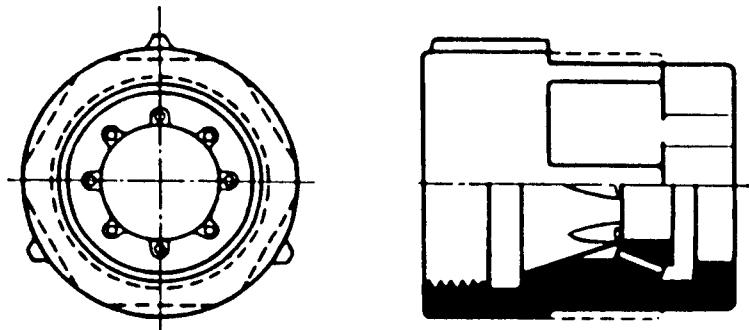

**Figure 12.14** Flame-retention-type industrial burner. The lower half of this burner nozzle is shown in section to illustrate the bypass ports which serve to relight the main flame in the event that it is blown out. A gas mixer must be provided upstream.

| SOURCE: From Ref. [13], reprinted by permission of North American Manufacturing Co.


## Burner Tiles

Flames are frequently stabilized within a refractory passageway, referred to as a **burner tile**, in industrial burners. Figure 12.5 (bottom) illustrates a typical burner tile for a premixed burner. After startup, the refractory tile represents a nearly adiabatic boundary, reradiating back to the flame and thereby maintaining near-adiabatic flame temperatures. This helps to keep turbulent burning velocities high through the strong temperature dependence of the laminar flame speed (cf. Eqns. 12.7 and 8.29). From Fig. 12.5, we also observe that the specific burner tile shown has been designed with a relatively large divergence angle; therefore, it is possible that the boundary layer separates and creates a recirculation zone within the tile. Recirculation of hot combustion products back upstream promotes ignition of the unburned mixture. Swirling flows, discussed below, are also frequently employed in conjunction with burner tiles. Presser *et al.* [27] present results of a numerical study that explored the effects of burner tile geometry and recirculation on flame stability.

## Bluff Bodies

Turbulent flames can also be stabilized in the wake of a bluff, i.e., an unstreamlined, body, as shown in Fig. 12.15. A considerable amount of research has been conducted on bluff-body stabilization, and a good review can be found in Ref. [29]. Applications utilizing bluff-body stabilizers include ramjets, turbojet afterburners, and nozzle-mixing burners, as shown in Fig. 12.4.

The principal characteristic of bluff-body stabilized flames is the existence of a strong recirculation zone behind the flameholding device, which is frequently in the form of a “vee gutter” with the point of the vee facing upstream. The recirculation zone consists of burned products of nearly uniform and

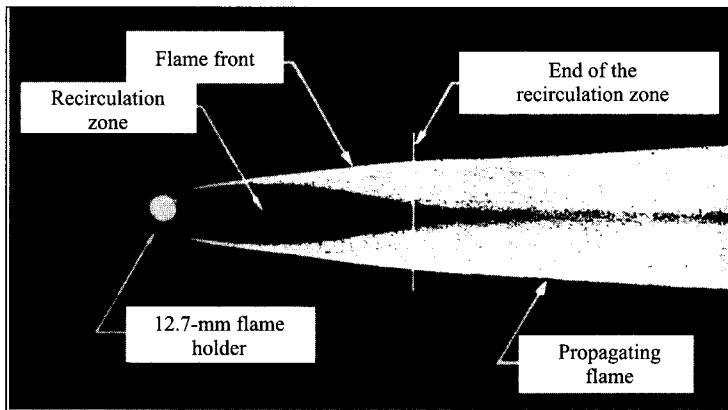

**Figure 12.15** Turbulent flame stabilized in the wake of a bluff body.  
| SOURCE: After Ref. [28], reprinted by permission of the authors and Butterworth-Heinemann.

adiabatic temperature. The flame stabilization point lies close to the edge of the flameholder, as suggested by Fig. 12.15. Blowout is governed by the processes occurring near the recirculation zone [29].

Several theories have been proposed to explain blowout from bluff-body stabilized flames; however, we will confine our discussion to the ideas of Spalding [30] and Zukoski and Marble [28], summarized and expanded by Williams [7, 29]. This model requires that a critical amount of energy must be released during the time that the initially unburned gases are in contact with the hot gases of the recirculation zone. Applying this model results in the following formula for the **blowoff velocity**, i.e., the value of the upstream velocity that causes the flame to blow off the flame holder:

$$v_{\text{blowout}} = 2\rho_0 L \left( \frac{S_L^2}{\rho \alpha_T} \right), \quad (12.18)$$


where  $\rho_0$  and  $\rho$  are the unburned and burned gas densities, respectively,  $L$  is a characteristic length of the recirculation zone, and  $\alpha_T$  denotes a so-called **turbulent thermal diffusivity**. If we assume a turbulent Prandtl number of unity, then  $\alpha_T = \epsilon$ , where  $\epsilon$  is the turbulent diffusivity, or eddy viscosity, as defined in Chapter 11.

Stabilization of flames by a rapid increase in flow area, the most drastic being a step, has much in common with bluff-body stabilization. Again, the presence of a strong recirculation zone of hot products ignites the unburned gases and provides a region where the local turbulent flame speed can match the local flow velocity. Steps for stabilization are used in premixed gas-turbine combustors and premixed industrial burners.


## Swirl or Jet-Induced Recirculating Flows

As discussed above, the creation of a recirculation zone using a solid obstruction or a rapid area change can anchor a flame. Recirculation zones also can be created by introducing a swirl component to the incoming gases or by directing jets in an appropriate manner into the combustion space. Figure 12.16 illustrates the recirculation zone created by inlet swirl, while Fig. 12.17 shows several configurations of can combustors with jet-induced recirculation zones [31].

Swirl stabilization is frequently used in industrial burners and gas-turbine combustors for both premixed and nonpremixed modes of combustion. Of course, with nonpremixed flames, the swirl-induced flow patterns affect not only mixing of products and reactants, but also the mixing of fuel and air. Further discussion of this aspect of swirling flows is presented in Chapter 13.

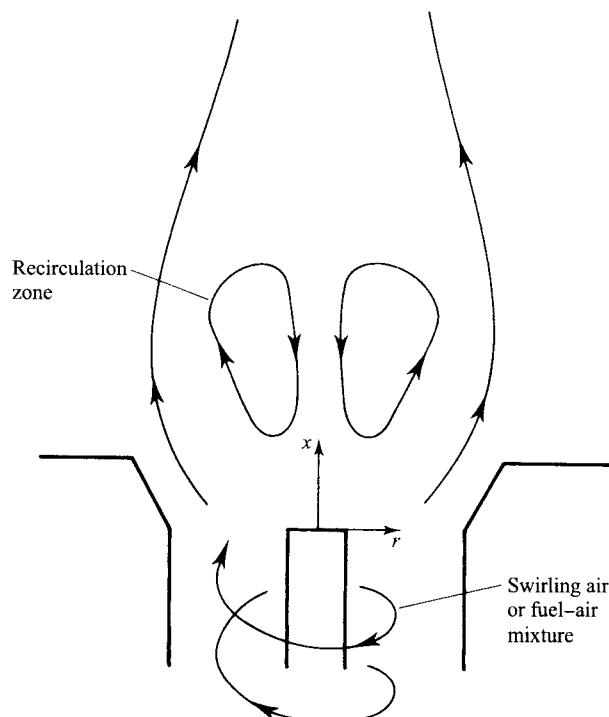

**Figure 12.16** Flow patterns for a flame with inlet swirl.

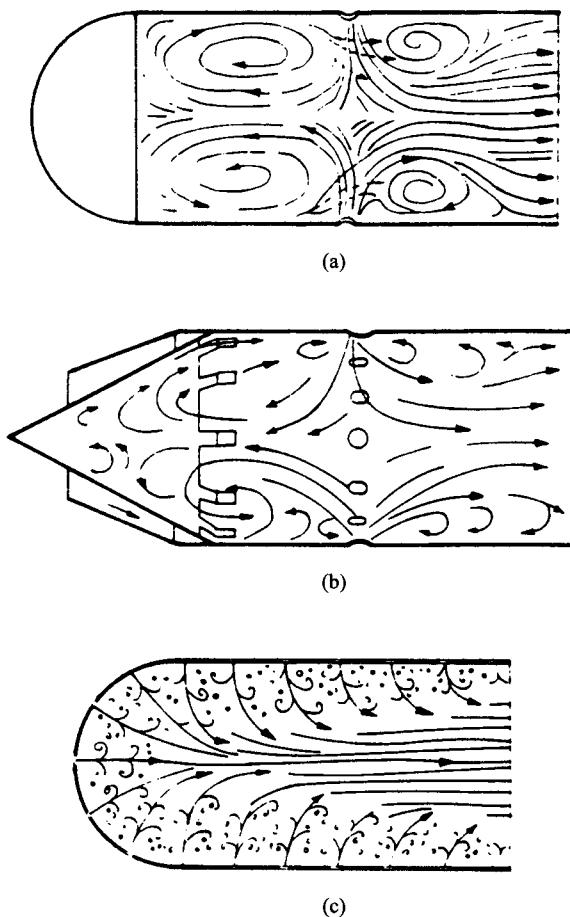

**Figure 12.17** Flow patterns for can combustors with (a) single row of holes with enclosed end, (b) shrouded cone, and (c) multiple rows of holes.

| SOURCE: From Ref. [31], reprinted by permission of The Combustion Institute.

---

## SUMMARY

In this chapter, you were introduced to the many applications of premixed turbulent combustion. The concept of a turbulent flame speed was introduced and defined, and the nature of turbulent premixed flames was described. We saw that there were three regimes of turbulent premixed combustion: the wrinkled laminar-flame regime, the flamelets-in-eddies regime, and the distributed-reaction regime. Criteria for combustion occurring in each of these regimes were defined. These criteria are based on the ratio of the laminar flame thickness to various turbulence length scales. The Damköhler number

was defined as the ratio of a characteristic flow time to a characteristic chemical time, and the idea of a fast-chemistry regime was presented. We briefly explored wrinkled laminar-flame theories and showed that there is no single theory that is generally agreed upon. We also explored the nature of the distributed-reaction regime and saw the tremendous complexity introduced into the species conservation equations as a result of the various turbulent correlations. In dealing with the intermediate flamelet-in-eddies regime, we discussed the eddy-breakup model, which assumes that the combustion rate is dominated by fluid mechanical, rather than chemical, phenomena. The chapter ends with a discussion of the several ways turbulent flames are stabilized in practice. These included low-velocity bypass ports, burner tiles, bluff bodies, swirl or jet-induced recirculation zones, and recirculation zones created by area-change-induced separation. All told, the understanding of turbulent premixed flames is in a tremendous state of flux. Therefore, our goal in this chapter has been to highlight some applications and to present some of the key theoretical concepts, supplemented by some experimental findings, to introduce this subject, cautioning the reader that, unlike some other mature engineering sciences, definitive answers to many questions are not yet available.

---

## NOMENCLATURE

$A$	Area ( $\text{m}^2$ )
$Da$	Damköhler number
$k$	Reaction rate coefficient (various units)
$\ell_K$	Kolmogorov microscale (m)
$\ell_0$	Integral scale or turbulence macroscale (m)
$\dot{m}$	Mass flowrate ( $\text{kg}/\text{s}$ )
$\dot{m}'''$	Volumetric mass production rate ( $\text{kg}/\text{s}\cdot\text{m}^3$ )
$MW$	Molecular weight ( $\text{kg}/\text{kmol}$ )
$Re$	Reynolds number
$S_L$	Laminar flame speed (m/s)
$S_t$	Turbulent flame speed (m/s)
$t$	Time (s)
$T$	Temperature (K)
$v$	Velocity (m/s)
$Y$	Mass fraction (kg/kg)

### Greek Symbols

$\alpha$	Thermal diffusivity ( $\text{m}^2/\text{s}$ )
$\alpha_T$	Turbulent thermal diffusivity ( $\text{m}^2/\text{s}$ )
$\delta_L$	Laminar flame thickness (m)
$\varepsilon$	Eddy viscosity ( $\text{m}^2/\text{s}$ )
$\epsilon_0$	Dissipation rate, Eqn. 11.7 ( $\text{m}^2/\text{s}^3$ )
$\nu$	Kinematic viscosity ( $\text{m}^2/\text{s}$ )

$\rho$	Density ( $\text{kg}/\text{m}^3$ )
$\tau$	Time (s)
$\dot{\omega}$	Reaction rate ( $\text{kmol}/\text{m}^3\text{-s}$ )

**Subscripts**

$b$	Burned
chem	Chemical
dil	Diluent
$F$	Fuel
ref	Reference state
$rms$	Root-mean-square
$u$	Unburned

**Other Notation**

$\overline{(\quad)}$	Time-averaged
$(\quad)'$	Fluctuating component
$[X]$	Molar concentration of species $X$ ( $\text{kmol}/\text{m}^3$ )

**REFERENCES**


1. Andrews, G. E., Bradley, D., and Lwakabamba, S. B., "Turbulence and Turbulent Flame Propagation—A Critical Appraisal," *Combustion and Flame*, 24: 285–304 (1975).
2. Abdel-Gayed, R. G., and Bradley, D., "Dependence of Turbulent Burning Velocity on Turbulent Reynolds Number and Ratio of Laminar Burning Velocity to R.M.S. Turbulent Velocity," *Sixteenth Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, pp. 1725–1735, 1976.
3. Libby, P. A., and Williams, F. A., "Turbulent Flows Involving Chemical Reactions," *Annual Review of Fluid Mechanics*, Vol. 8, Annual Reviews, Inc., Palo Alto, CA, pp. 351–376, 1976.
4. Bray, K. N. C., "Turbulent Flows with Premixed Reactants," in *Topics in Applied Physics*, Vol. 44, *Turbulent Reacting Flows* (P. A. Libby and F. A. Williams, eds.), Springer-Verlag, New York, pp. 115–183, 1980.
5. Williams F. A., "Asymptotic Methods in Turbulent Combustion," *AIAA Journal*, 24: 867–875 (1986).
6. Clavin, P., "Dynamic Behavior of Premixed Flame Fronts in Laminar and Turbulent Flows," *Progress in Energy and Combustion Science*, 11: 1–59 (1985).
7. Williams, F. A., *Combustion Theory*, 2nd Ed., Addison-Wesley, Redwood City, CA, 1985.
8. Chomiak, J., *Combustion: A Study in Theory, Fact and Application*, Gordon & Breach, New York, 1990.

9. Heywood, J. B., *Internal Combustion Engine Fundamentals*, McGraw-Hill, New York, 1988.
10. Obert, E. F., *Internal Combustion Engines and Air Pollution*, Harper & Row, New York, 1973.
11. David, L. B., and Washam, R. M., "Development of a Dry Low NO<sub>x</sub> Combustor," ASME 89-GT-255, Gas Turbine and Aeroengine Congress and Exposition, Toronto, ON, 4–8 June, 1988.
12. Maghon, H., Berenbrink, P., Termuehlen, H., and Gartner, G., "Progress in NO<sub>x</sub> and CO Emission Reduction of Gas Turbines," ASME 90-JPGC/GT-4, ASME/IEEE Power Generation Conference, Boston, 21–25 October, 1990.
13. North American Manufacturing Co., *North American Combustion Handbook*, The North American Manufacturing Co., Cleveland, OH, 1952.
14. North American Manufacturing Co., *North American Combustion Handbook*, 2nd Ed., North American Manufacturing Co., Cleveland, OH, 1978.
15. Fox, M. D., and Weinberg, F. J., "An Experimental Study of Burner Stabilized Turbulent Flames in Premixed Reactants," *Proceedings of the Royal Society of London, Series A*, 268: 222–239 (1962).
16. zur Loya, A. O., and Bracco, F. V., "Two-Dimensional Visualization of Premixed-Charge Flame Structure in an IC Engine," Paper 870454, SAE SP-715, Society of Automotive Engineers, Warrendale, PA, 1987.
17. Abraham, J., Williams, F. A., and Bracco, F. V., "A Discussion of Turbulent Flame Structure in Premixed Charges," Paper 850345, SAE P-156, Society of Automotive Engineers, Warrendale, PA, 1985.
18. Kuo, K. K., *Principles of Combustion*, John Wiley & Sons, New York, 1986.
19. Glassman, I., *Combustion*, 2nd Ed., Academic Press, Orlando, FL, 1987.
20. Damköhler, G., "The Effect of Turbulence on the Flame Velocity in Gas Mixtures," *Zeitschrift Electrochem*, 46: 601–626 (1940) (English translation, NACA TM 1112, 1947).
21. Clavin, P., and Williams, F. A., "Effects of Molecular Diffusion and of Thermal Expansion on the Structure and Dynamics of Premixed Flames in Turbulent Flows of Large Scale and Low Intensity," *Journal of Fluid Mechanics*, 116: 251–282 (1982).
22. Klimov, A. M., "Premixed Turbulent Flames—Interplay of Hydrodynamic and Chemical Phenomena," in *Flames, Lasers, and Reactive Systems* (J. R. Bowen, N. Manson, A. K. Oppenheim, and R. I. Soloukhin, eds.), Progress in Astronautics and Aeronautics, Vol. 88, American Institute of Aeronautics and Astronautics, New York, pp. 133–146, 1983.
23. Ill'yashenko, S. M., and Talantov, A. V., *Theory and Analysis of Straight-Through-Flow Combustion Chambers*, Edited Machine Translation, FTD-MT-65-143, Wright-Patterson AFB, Dayton, OH, 7 April 1966.
24. Ballal, D. R., and Lefebvre, A. H., "The Structure and Propagation of Turbulent Flames," *Proceedings of the Royal Society of London, Series A*, 344: 217–234 (1975).


25. Ballal, D. R., and Lefebvre, A. H., "The Structure of a Premixed Turbulent Flame," *Proceedings of the Royal Society of London, Series A*, 367: 353–380 (1979).
26. Mason, H. B., and Spalding, D. B., "Prediction of Reaction Rates in Turbulent Premixed Boundary-Layer Flows," *Combustion Institute European Symposium* (F. J. Weinberg, ed.,), Academic Press, New York, pp. 601–606, 1973.
27. Presser, C., Greenberg, J. B., Goldman, Y., and Timnat, Y. M., "A Numerical Study of Furnace Flame Root Stabilization Using Conical Burner Tunnels," *Nineteenth Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, pp. 519–527, 1982.
28. Zukoski, E. E., and Marble, F. E., "The Role of Wake Transition in the Process of Flame Stabilization on Bluff Bodies," in *Combustion Researches and Reviews, 1955*, AGARD, Butterworth, London, pp. 167–180, 1955.
29. Williams, F. A., "Flame Stabilization of Premixed Turbulent Gases," in *Applied Mechanics Surveys* (N. N. Abramson, H. Liebowitz, J. M. Crowley, and S. Juhasz, eds.), Spartan Books, Washington, DC, pp. 1157–1170, 1966.
30. Spalding, D. B., "Theoretical Aspects of Flame Stabilization," *Aircraft Engineering*, 25: 264–268 (1953).
31. Jeffs, R. A., "The Flame Stability and Heat Release Rates of Some Can-Type Combustion Chambers," *Eighth Symposium (International) on Combustion*, Williams & Wilkins, Baltimore, MD, pp. 1014–1027, 1962.

## PROBLEMS

- 12.1** Make a list of all the bold-faced words in Chapter 12 and discuss.
- 12.2** A turbulent flame is stabilized in a rectangular duct in the wake of a circular rod as shown in the sketch. The included angle of the V-shaped flame is  $11.4^\circ$ . Assuming the approach velocity of the unburned mixture is a uniform 50 m/s, estimate the turbulent flame speed.

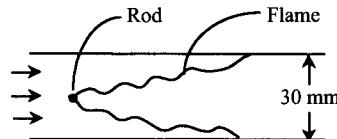

- 12.3** A turbulent flame is stabilized by a pilot flame at the exit of a 2-mm-diameter pipe coannular with a 25-mm-diameter duct. The flame is in the shape of a truncated cone. Assume that the flame goes all the way to the duct wall and that the unburned mixture velocity is constant. The flowrate through the duct is 0.03 kg/s. The unburned mixture is at 310 K at 1 atm with a molecular weight of 29.6 kg/kmol. Estimate the length of the flame zone,  $L$ , if the turbulent burning velocity is 5 m/s.

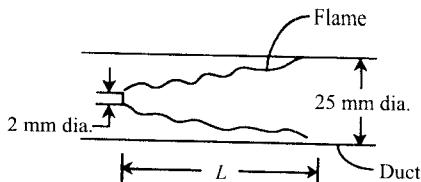

- 12.4** Estimate the turbulence intensity  $v'_{rms}$  and the relative intensity  $v'_{rms}/\bar{v}$  for the experiment described in Example 12.1.
- 12.5** Show that Eqn. 12.8b follows from 12.8a for  $v'_{rms}/S_L \ll 1$ .
- 12.6** If  $v'_{rms}$  is doubled in the calculations given in Example 12.2, does the estimated combustion regime change? If so, in what way?
- 12.7** Consider turbulent premixed combustion given the following conditions and parameters:

Propane-air mixture,

$$\Phi = 0.6,$$

$$T_u = 350 \text{ K},$$

$$P = 2 \text{ atm},$$

$$v'_{rms} = 4 \text{ m/s},$$

$$\ell_0 = 5 \text{ mm}.$$

Calculate the characteristic chemical and flow times and determine the value of the Damköhler number. Are these conditions representative of "fast" or "slow" chemistry?

- 12.8\*** Reference [17] suggests that turbulence intensities in spark-ignition engines can be estimated as  $v'_{rms}$  (at time of spark)  $\approx v_p/2$ , where  $v_p$  is the piston velocity. Also, the integral scale  $\ell_0 \approx h/2$ , where  $h$  is the instantaneous clearance between the top of the piston and the cylinder head in disk-shaped combustion chambers. The instantaneous piston speed (in m/s) is related to the rotational speed,  $N$  (rev/s), the crank angle after top-dead-center (TDC),  $\theta$ , and the ratio of the connecting rod length to crank radius,  $R^*$ , by the following:

$$v_p = 2LN \frac{\pi}{2} \sin \theta \left[ 1 + \frac{\cos \theta}{(R^{*2} - \sin^2 \theta)^{1/2}} \right],$$

where  $L$  is the engine stroke in meters. The instantaneous clearance height is expressed as

$$\frac{h}{h_{TDC}} = 1 + \frac{1}{2}(r_c - 1) \left[ R^* + 1 - \cos \theta - (R^{*2} - \sin^2 \theta)^{1/2} \right],$$

where  $r_c$  is the geometric compression ratio.

For the following conditions, estimate the turbulent Reynolds number based on the integral scale,  $Re_{\ell_0}$ , at the time of spark. Also, estimate the combustion

| \*Indicates optional use of computer.

regime implied by these parameters using Fig. 12.8. Use  $R^* = 3.5$ . For simplicity, use air properties to evaluate the thermal diffusivity at a mean temperature of  $\bar{T} = (T + T_{\text{flame}})/2$ . Although the flame temperature is different in each case, assume, again for simplicity, a constant value of  $\sim 2200$  K.

Parameter	Case i	Case ii	Case iii	Case iv
$r_c$	8.7	4.8	7.86	8.5
$L$ (mm)	83	114.3	89	95
$h_{\text{TDC}}$ (mm)	10.8	30	13	12.5
$N$ (rev/min)	1,500	1,380	1,220	5,000
$\Phi$	0.6	1.15	1.13	1.0
$P$ at spark (atm)	4.5	1.75	7.2	6
$T$ at spark (K)	580	450	570	650
Mass fraction of residual burned gases	0.10	0.20	0.20	0.10
Spark timing (° before TDC)	40	55	30	25
Fuel	Propane	Propane	Isooctane	Isooctane

- 12.9** A turbulent methane–air flame is stabilized in the wake of a circular rod ( $d = 6.4$  mm) held perpendicular to the flow. For inlet conditions of 1 atm and 298 K, the blowout velocity is 61 m/s when the equivalence ratio is unity. The recirculation zone behind the rod is six diameters long. Estimate the turbulent thermal diffusivity,  $\alpha_T$ . How does this value compare with the molecular thermal diffusivity,  $\alpha$ ? (Use air properties for  $\alpha$ .)
- 12.10** A turbulent premixed flame from a jet torch is used to heat-treat a metal plate. The plate is located 0.05 m from the torch exit. Estimate the turbulence intensity required to close the flame cone before the flame strikes the surface. The torch has an exit diameter of 10 mm and fires a preheated (600 K) mixture of propane and air ( $\Phi = 0.8$ ) at 1 atm. The firing rate is 20 kW.

# 13



## Turbulent Nonpremixed Flames

---

### OVERVIEW


Turbulent nonpremixed flames are employed in the majority of practical combustion systems, principally because of the ease with which such flames can be controlled [1]. With current concern for pollutant emissions, however, this advantage becomes something of a liability in that there is also less ability to control, or tailor, the combustion process for low emissions. For example, current practice for low- $\text{NO}_x$  gas-turbine combustors now employs premixed primary zones, rather than the nonpremixed systems used almost exclusively in the past.

Because of the many applications of nonpremixed combustion, there are many types of nonpremixed flames. For example, simple jet flames are employed in glass melting and cement clinker operations, among others; unsteady, liquid-fuel sprays of many shapes are burned in diesel engines (see Chapter 10); flames stabilized by strong recirculation zones created by swirling flows or diverging walls are used in many systems, such as utility and industrial boilers; flames stabilized behind bluff bodies are used in turbojet afterburners; and partially premixed flames, created by nozzle-mix burners (see Fig. 12.4), are employed in many industrial furnaces. Figure 13.1 shows a radiant-tube burner that employs a confined nonpremixed jet flame with some swirl imparted. In this application, a long flame length is desirable to provide uniform heating of the tube walls. The load is heated indirectly by radiation from the outer tube and, thus, avoids contact with the combustion products. A nonpremixed, or partially premixed, flame employing pure oxygen is illustrated in Fig. 13.2. Here we see that the mixing among several fluid streams is used to tailor the flame characteristics. Other examples include flaring operations in refineries and oil fields, and pool and other natural fires. As you can see, the list, although incomplete, is long.

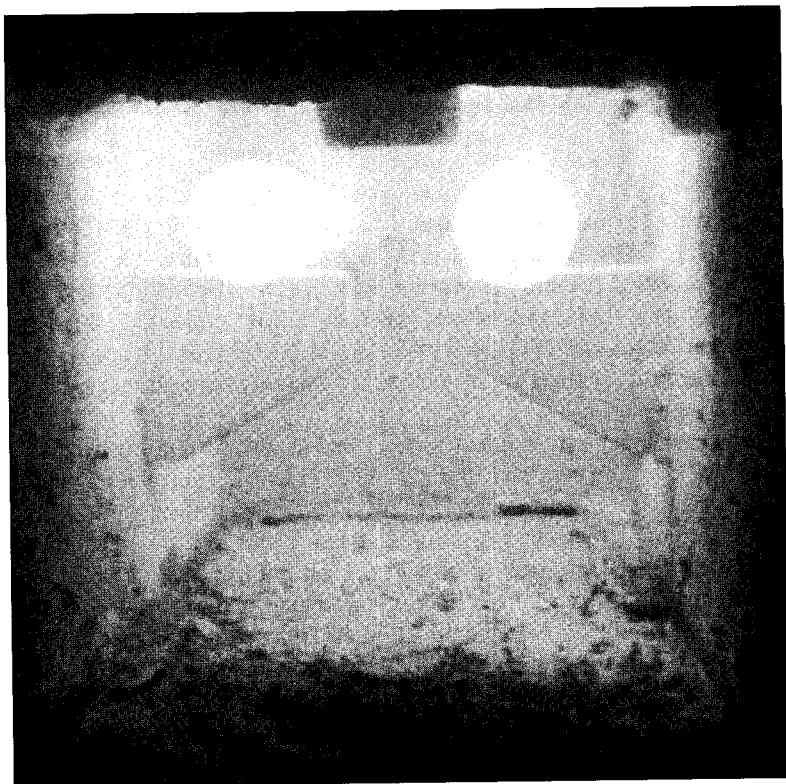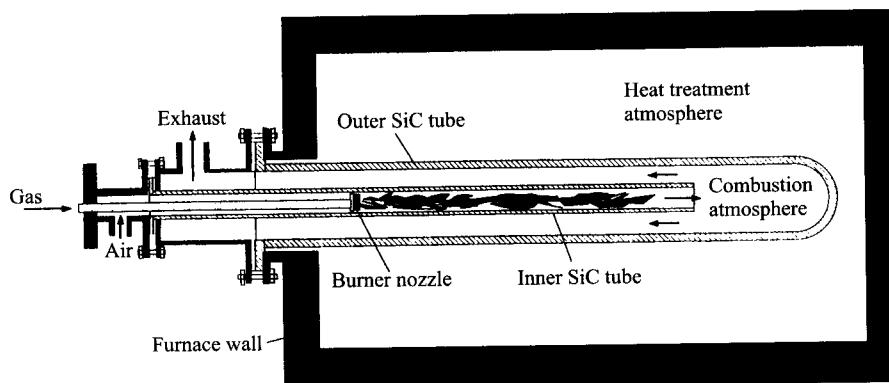

**Figure 13.1** Radiant-tube burner schematic (top). Photograph of two radiant-tube burners in an aluminum holding furnace (bottom).

SOURCE: (top) Reprinted with permission, the Center for Advanced Materials, Penn State University.  
(bottom) Courtesy of Eclipse Combustion, Rockford, IL.

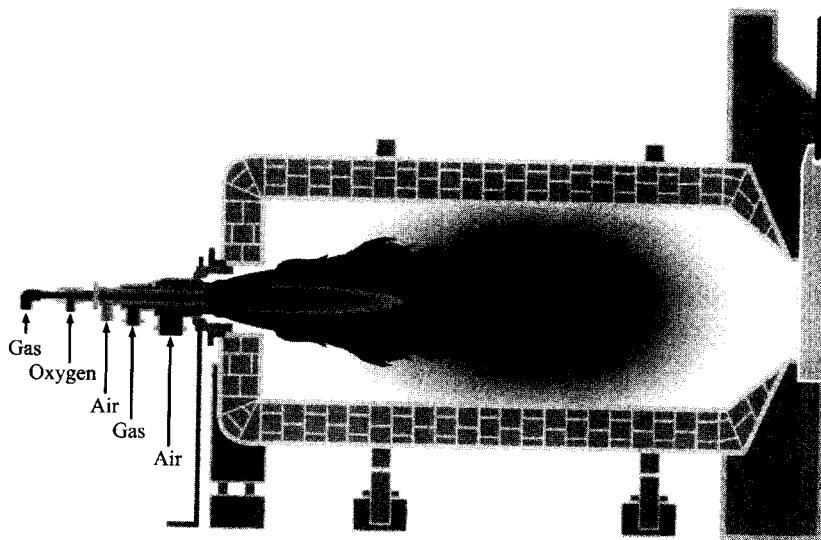

**Figure 13.2** Both air and pure oxygen are employed as oxidizers in some applications. This oxy-fuel burner is used in aluminum recycling furnaces.  
| SOURCE: Courtesy of Air Products.

The large variety of flame types reflects the wide range of needs in practical devices. For any particular application, the designer is faced with many issues. Foremost among them are the following:

- Flame shape and size
- Flame holding and stability
- Heat transfer
- Pollutant emissions.


The first three of these issues will guide our discussion in this chapter. To achieve a firm grasp of the nature of turbulent nonpremixed combustion, we will use the simple jet flame as our primary example. The jet flame is relatively uncomplicated, and, because of this, it has been the subject of many theoretical and experimental investigations. We will rely on this wealth of information. Also, the limitations of the jet flame in dealing with the design issues listed above provide motivation for looking at other flame systems frequently employed in practice.

## JET FLAMES


### General Observations

Turbulent nonpremixed jet flames visually have brushy or fuzzy edges, similar to premixed flames; however, the nonpremixed hydrocarbon flames generally are more luminous than their premixed counterparts, since some soot is usually present within the flame. Figure 13.3 illustrates these observations for an ethylene flame burning in air. The last flame in the sequence of photographs shown here is a 4-s time exposure. This image closely resembles the visual perception of a turbulent jet flame. The other photographs shown in Fig. 13.3 are instantaneous views of the flame. From these, we see that the instantaneous visible length of the flame is highly variable, as is the overall flame shape. Mungal and co-workers [2] investigated the far-field global structure of jet flames using computer-based volume rendering of motion picture records. Figure 13.4 is an example of the application of this technique. Figure 13.4a shows the burnout of a large eddy at the tip of an ethylene jet flame in a stack of images. The volume rendering (Fig. 13.4b) is a view of a large 3-D ( $x, y, t$ ) stack of images—many more than presented in Fig. 13.4a—and shows the trajectories of the large eddies. The character of the flame luminosity can be inferred from Fig. 13.3. The luminosity at the base of the flame is quite weak, is blue in color, and is characteristic of a soot-free region. At higher levels in the flame, considerable quantities of soot exist, and the flame takes on a bright-yellow appearance. For fuels with less sooting propensity, e.g., methane, the length of the blue-flame region is much longer and the luminosity in the soot-containing region is much less. Spectral radiation measurements by Gore [3] from laboratory methane-air flames showed that, although a flame may have some visible luminosity from soot, the contribution of the soot radiation to the total radiant loss may be insignificant. For more highly sooting fuels, however, soot radiation can be a major contribution to the total radiant heat loss [3]. Later in this chapter, we will discuss flame radiation in greater detail.

Figure 13.5 shows instantaneous planar images of OH radicals in an  $\text{H}_2$ -air jet flame [4, 5]. These images clearly show the convoluted nature of the high-temperature region in which OH radicals are in abundance. We see that the width of the “flame zone,” i.e., the OH zone, increases with downstream distance and the appearance of a large high-temperature region at the flame tip. Driscoll and co-workers [6] have made planar temperature measurements in jet flames. These temperature-field images show regions where thermal layers are thin and temperature gradients are large, as well as broad regions where temperatures are nearly uniform. The structure of the flow inside the narrow flame zone can be quite complicated. Figure 13.6 shows the rollup of the shear layer from the nozzle in the lower portion of the flame. As we will see in Chapter 15, the flame structure implied by these various images [4–7] has important consequences for pollutant emissions.

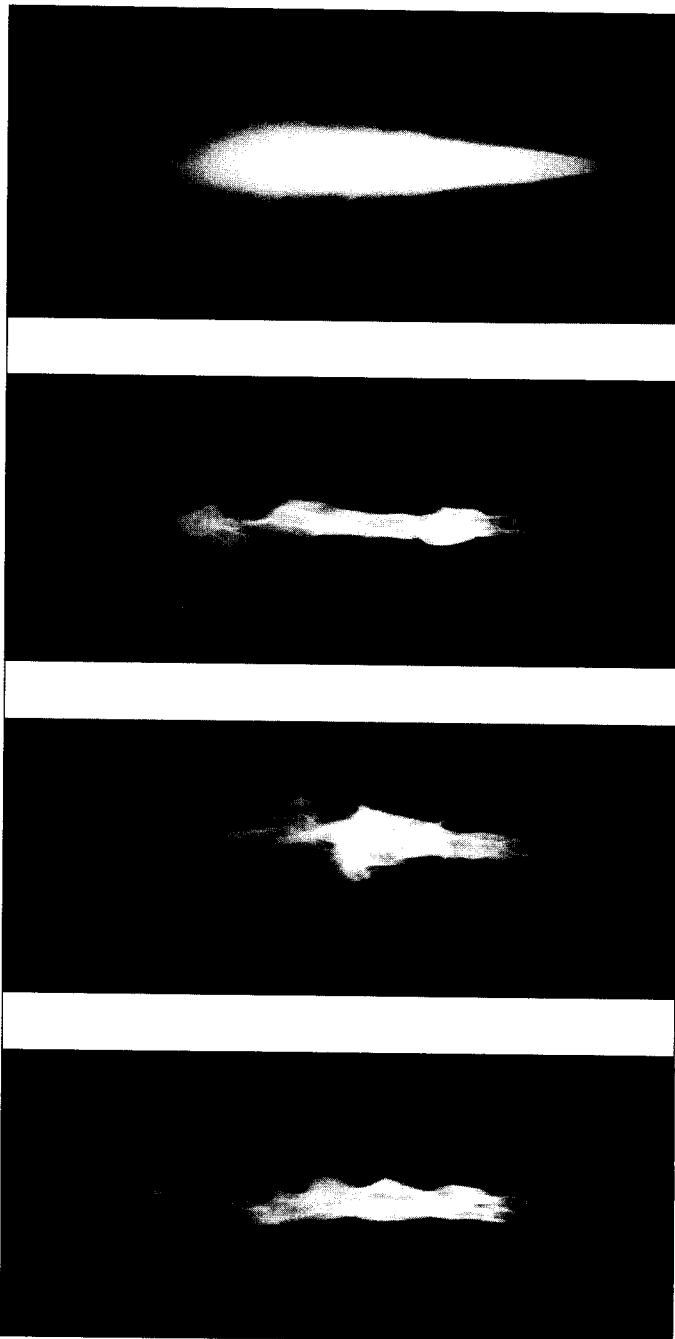

**Figure 13.3** Instantaneous and time-averaged photographs of turbulent jet diffusion flames ( $\text{C}_2\text{H}_4$ -air,  $d_j = 2.18 \text{ mm}$ ). Because of the low luminosity at the base of the flame, this region is not visible on the instantaneous images (the first three photographs).

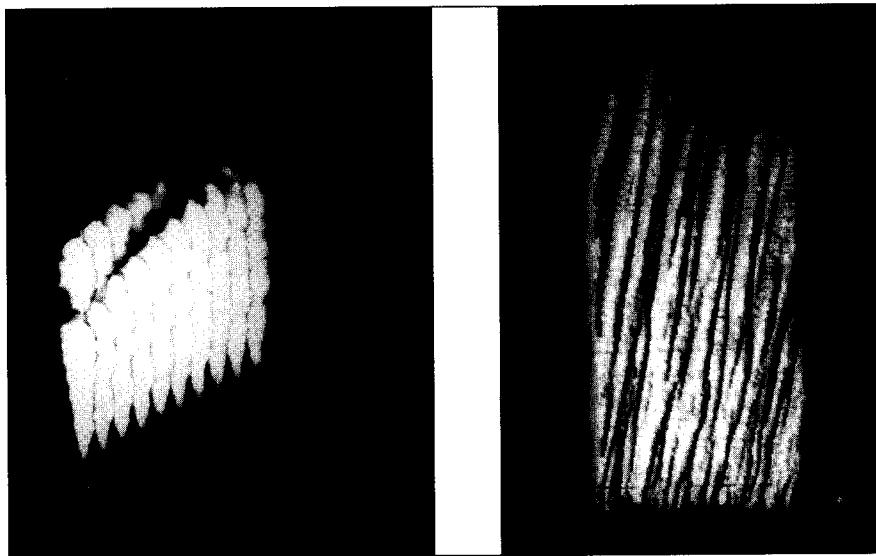


**Figure 13.4** (a) This shows a stack of individual images of an ethylene-air jet flame from cine records ( $v_e = 250 \text{ m/s}$ ,  $d_i = 3 \text{ mm}$ ). (b) This shows volume renderings (computer image of computer-shaded stack) viewed  $70^\circ$  from the time axis.

| SOURCE: Reprinted from Ref. [2] with permission of Gordon & Breach Science Publishers.

The second general observation we wish to discuss is the influence of initial jet diameter and fuel flowrate on the size of the flame. Figure 13.7 shows the results from the classical experiments of Wohl *et al.* [8]. Several important features of nonpremixed flames are apparent in this figure. First, at low flowrates, where the flames are laminar, the flame height is independent of the initial jet diameter, and depends only on the flowrate. This characteristic of laminar jet diffusion flames was discussed in Chapter 9. As the flowrate increases, turbulence begins to influence the flame height and a transitional regime can be seen. Over this transitional region, the increasing turbulence levels with flowrate result in the fully turbulent flames being shorter than their laminar counterparts, indicated by the local minimum in each curve. As the flowrate is increased further, flame lengths either remain essentially constant (tube diameters less than 0.133 in.), or increase at decreasing rates (tube diameters of 0.152 in. and greater). This is a consequence of the air entrainment and mixing rates being proportional, more or less, to the fuel flow. Furthermore, we observe a significant dependence of flame length on initial jet diameter. These interesting characteristics of turbulent jet flames will be discussed more fully in subsequent sections of this chapter.

Our last general observation concerns flame stability. At sufficiently low flowrates, the base of a jet flame lies quite close to the burner tube outlet (say, within a few millimeters) and is said to be **attached**. As the fuel flowrate is

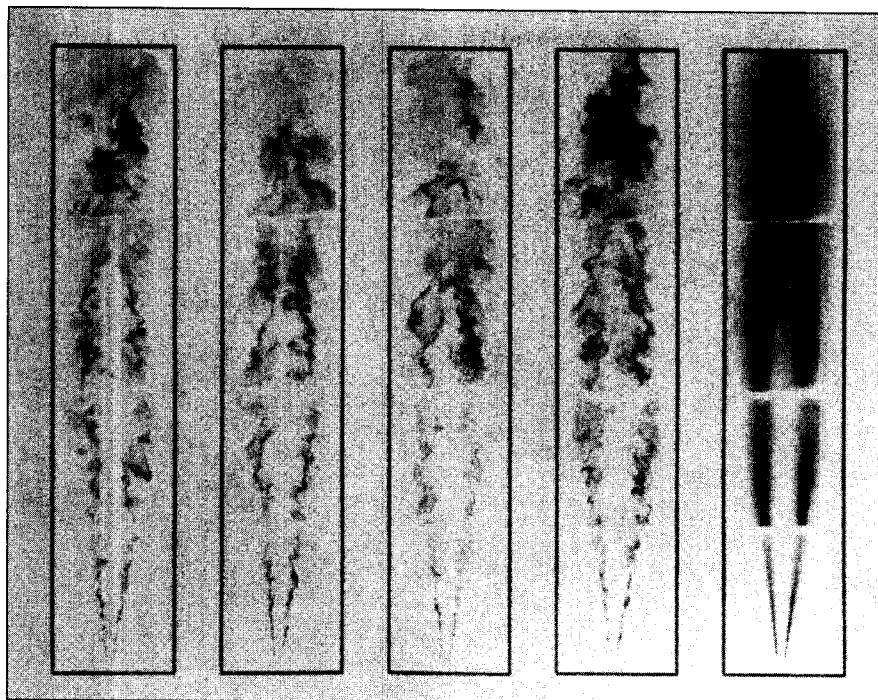

**Figure 13.5** Instantaneous planar images of OH radicals obtained using laser-induced fluorescence in an  $\text{H}_2$ -air jet flame at a jet Reynolds number of 25,000. The region shown is from the nozzle exit to 219 nozzle diameters downstream. The image on the far right shows the average of the instantaneous images.

SOURCE: Reproduced from Ref. [4] with permission of the author.


increased, holes begin to form in the flame sheet at the base of the flame, and with further increase in the flowrate, more and more holes form until there is no continuous flame close to the burner port. This condition is called **liftoff**. A lifted jet flame is shown in the photograph in Fig. 13.8. With yet further increases in flowrate, the **liftoff distance**—the distance from the burner port to the flame base—increases. At a sufficiently large flowrate, the flame blows out. Thus, there are two critical flow conditions related to flame stability: liftoff and **blowout**. In Chapter 8, we studied these phenomena as they apply to laminar premixed flames.

Flame stability has many implications for practical applications. For example, liftoff should be avoided so that the flame is close to the burner and its position is independent of the flowrate. This allows for positive ignition by a spark or pilot flame at the burner and assures that the flame position is controlled. Obviously, for reasons of safety, operation near the blowout limit should be avoided. A large furnace filled with a raw fuel-air mixture would be an immense hazard.



**Figure 13.6** Visualization of nozzle-fluid flow patterns using reactive Mie scattering in methane-air jet flame ( $v_e = 10 \text{ m/s}$ ,  $d_i = 10 \text{ mm}$ ). The total length of the image is approximately 20 nozzle-diameters. Near the nozzle, the flame zone resides just outside of the rollup of the nozzle shear layer. Near the top of the photograph, the flame zone interacts with the turbulent core. The visualization of an outer layer results from water vapor from the flame reacting with  $\text{TiCl}_4$  vapor in the surrounding air flow.

| SOURCE: Photograph courtesy of W. M. Roquemore. See also Ref. [7].

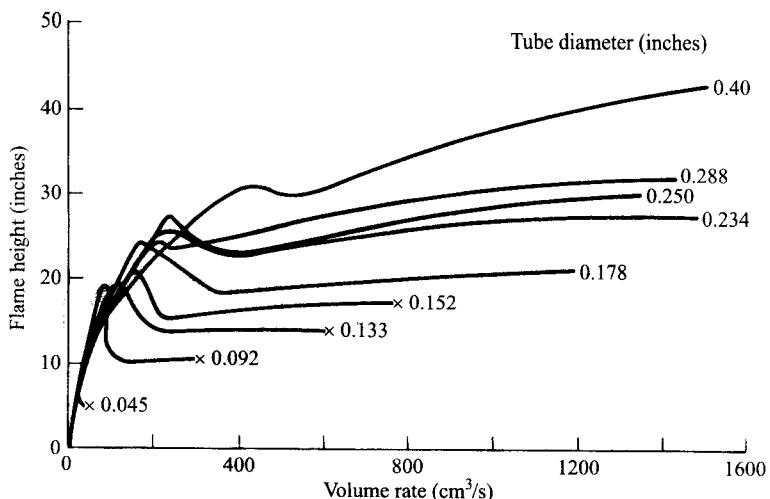


**Figure 13.7** Effects of flowrate on flame height illustrating behavior in laminar, transitional, and fully turbulent regimes.

| SOURCE: Reprinted from Ref. [8] by permission of The Combustion Institute.

## Simplified Analysis

Mathematical modeling of turbulent flames is a formidable task. As we saw in Chapter 11, analyzing an isothermal turbulent flow is in itself challenging, while with combustion, variable density and chemical reactions need to be taken into account in some manner. In keeping with the spirit of other chapters in this book, we will develop a very simplified mathematical model, this time for a jet flame, to illuminate some of the essential underlying physics. The modeling of turbulent combustion is a field where the state of the art is changing rapidly. Our intent here is to provide a basic foundation from which a greater understanding can be developed by study at a more advanced level.

**Comparison with Nonreacting Jets** In Chapter 11, we developed a simple mixing-length model of a constant-density turbulent jet and discovered the following three important characteristics: first, the velocity field is a “universal” function when all velocities are scaled by the exit velocity and the spatial coordinates  $x$  and  $r$  are scaled by the jet nozzle radius  $R$  ( $d_j \equiv 2R$ ); second, the jet spreading angle is a constant, independent of both jet exit velocity and diameter; and third, the so-called eddy viscosity,  $\varepsilon$ , is independent of location in the flowfield and is directly proportional to both the nozzle exit velocity,  $v_e$ , and diameter,  $d_j$ . Also, these simple theoretical results are in reasonable agreement with experimental findings.

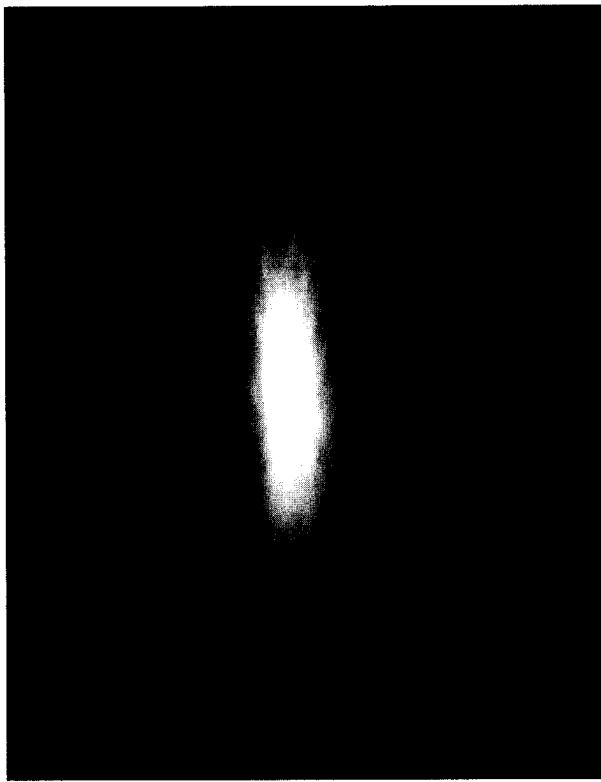

**Figure 13.8** Photograph of lifted ethylene-air jet flame ( $d_j = 2.18 \text{ mm}$ ). The base of the lifted flame is wide and appears blue. The burner exit is at the bottom of the frame.

It seems reasonable, at least to a first approximation, to propose that jet flames share some of these characteristics of isothermal jets. If we make this assumption, what implications follow? The primary implications concern flame shape and length. If we make the further assumption that the turbulent diffusivity for mass transfer is the same as that for momentum transfer, then the resulting fuel mass-fraction distribution should be equivalent to the dimensionless velocity distribution, i.e.,  $Y_F(x, r) = v(r, x)/v_e = f(x/d_j \text{ only})$ . However, this can only be true in the absence of combustion since  $Y_F$  is zero outside of the flame boundary, while, obviously, the velocity has not yet decayed to zero. As we saw in Chapter 9, the mixture fraction can be used instead of the fuel mass fraction and has behavior analogous to the dimensionless velocity field. Thus, we expect that, for a given fuel type, the flame length should be independent of jet velocity  $v_e$  and proportional to the nozzle diameter  $d_j$ , and the spreading angle should be independent of both  $v_e$  and  $d_j$ . The experimental results in Fig. 13.7 show that, for small-diameter tubes, flame lengths

are indeed independent of  $v_e$  and that the flame lengths are roughly proportional to  $d_j$ . As we will see later, buoyancy causes a breakdown of this simple analogy of jet flames to isothermal jets and can be used to explain the non-constancy of flame lengths for the larger diameter tubes. Nonetheless, it is instructive to see how the underlying physics of simple jets has much in common with jet flames.

**Conserved Scalars Revisited** In our simplified analysis of the jet flame, we wish to use the mixture fraction as a single variable to describe the composition of the flame at any location, rather than employing separate species conservation relations for fuel, oxidizer, and products. The concept of the mixture fraction and its conservation throughout the flowfield was discussed in Chapter 7 and developed for the laminar jet diffusion flame in Chapter 9. Although key definitions and relationships will be repeated here, it is recommended that the sections of Chapter 7 and 9 dealing with the conserved scalar concept be reviewed before proceeding.

From Chapter 7, the definition of the mixture fraction,  $f$ , which applies locally for a sufficiently small control volume, is

$$f \equiv \frac{\text{Mass of material having its origin in the fuel stream}}{\text{Mass of mixture}}. \quad (7.68)$$

This quantity has two particularly important characteristics: first, it can be used to define the flame boundaries, since it is uniquely related to the equivalence ratio as

$$f \equiv \frac{\Phi}{(A/F)_{\text{stoic}} + \Phi}, \quad (13.1)$$

where  $(A/F)_{\text{stoic}}$  is the stoichiometric air-fuel ratio for the fuel issuing from the nozzle. Thus, as we did for the laminar diffusion flame in Chapter 9, a flame boundary is defined as the location where  $\Phi = 1$ ; hence, the flame boundary is also defined by the location where the mixture fraction takes on the value  $f_s$ , defined as

$$f_s \equiv \frac{1}{(A/F)_{\text{stoic}} + 1}. \quad (13.2)$$

The second important characteristic of the mixture fraction is that it is conserved throughout the flowfield as defined by a “sourceless” governing equation. It is this property that allows us to use  $f$  in place of the individual species conservation equations and, as a result, greatly simplifies the mathematical formulation of the problem.

**Assumptions** The following assumptions are used to construct a simple mathematical model of a nonpremixed turbulent jet flame:

1. The time-averaged flow is steady and axisymmetric and is produced by a jet of fuel emerging from a circular nozzle of radius  $R$ , which burns in a quiescent, infinite reservoir of air.
2. Molecular transport of momentum, species, and thermal energy is unimportant in comparison with turbulent transport.
3. The turbulent momentum diffusivity, or eddy viscosity,  $\varepsilon (= \mu_{\text{turb}}/\rho)$ , is constant throughout the flowfield and is equal to  $0.0285v_eR$  (cf. Eqn. 11.46). This is an extension of the mixing-length hypothesis for the constant-density jet (Chapter 11) to the variable-density reacting jet by neglecting density fluctuations.
4. All correlations involving density fluctuations are neglected.
5. The turbulent transport of momentum, species, and thermal energy are all equal; i.e., the turbulent Schmidt, Prandtl, and Lewis numbers are all unity, so  $Sc_T = Pr_T = Le_T$ . The consequence of this assumption is that the turbulent momentum diffusivity (eddy viscosity,  $\varepsilon$ ) can be substituted for the turbulent mass diffusivity and thermal diffusivity,  $\varepsilon = D_T = \alpha_T$ .
6. Buoyancy is neglected.
7. Radiation heat transfer is negligible.
8. Only radial turbulent diffusion of momentum, species, and thermal energy is important; axial turbulent diffusion is neglected.
9. The fuel jet velocity is uniform at the nozzle exit, i.e., a top-hat profile.
10. Mixture properties are defined by three species: fuel, oxidizer, and products. All have equal molecular weights ( $MW = 29 \text{ kg/kmol}$ ) and specific heats ( $c_p = 1200 \text{ J/kg-K}$ ), and the fuel heat-of-combustion is  $4 \cdot 10^7 \text{ J/kg}_F$ . The stoichiometric mass air-fuel ratio is 15:1 ( $f_s = 1/16 = 0.0625$ ).
11. The fluctuations in mixture fraction are ignored in the state relations used to determine the mean density. In a more rigorous analysis, the mean density would be calculated from some assumed mixture-fraction probability distribution function characterized by a mean value and a variance.

**Application of Conservation Laws** With the above assumptions, the basic conservation equations are identical to those we derived in Chapter 7 and applied to the laminar jet flame in Chapter 9, except that time-averaged variables replace the instantaneous ones, and the turbulent transport properties (momentum, species, and thermal energy diffusivities) replace their molecular counterparts. Defining dimensionless variables using a characteristic length,  $R$ , and a characteristic velocity,  $v_e$ , overall mass conservation is written (Eqn. 9.36) as

$$\frac{\partial}{\partial x^*}(\bar{\rho}_x^* \bar{v}_x^*) + \frac{1}{r^*} \frac{\partial}{\partial r^*}(r^* \bar{\rho}_x^* \bar{v}_x^*) = 0. \quad (13.3)$$

Axial momentum conservation (Eqn. 9.37) becomes

$$\frac{\partial}{\partial x^*}(r^* \bar{\rho}^* \bar{v}_x^* \bar{v}_x^*) + \frac{\partial}{\partial r^*}(r^* \bar{\rho}^* \bar{v}_r^* \bar{v}_x^*) = \frac{\partial}{\partial r^*} \left[ \left( \frac{1}{Re_T} \right) r^* \frac{\partial \bar{v}_x^*}{\partial r^*} \right] \quad (13.4)$$

and the mixture-fraction equation (Eqn. 9.38) is given by

$$\frac{\partial}{\partial x^*}(r^* \bar{\rho}^* \bar{v}_x^* \bar{f}) + \frac{\partial}{\partial r^*}(r^* \bar{\rho}^* \bar{v}_r^* \bar{f}) = \frac{\partial}{\partial r^*} \left[ \left( \frac{1}{Re_T Sc_T} \right) r^* \frac{\partial \bar{f}}{\partial r^*} \right], \quad (13.5)$$

where the turbulent Reynolds number is defined as

$$Re_T \equiv \frac{v_e R}{\varepsilon}. \quad (13.6)$$

With our third assumption,  $Re_T = 35$ . Note that with a constant Reynolds number, the dimensionless solution to the problem,  $\bar{v}_x^*(r^*, x^*)$ ,  $\bar{v}_r^*(r^*, x^*)$ , and  $\bar{f}(r^*, x^*)$ , does not depend on either the initial jet velocity or nozzle diameter.

The boundary conditions are

$$\bar{v}_r^*(0, x^*) = 0, \quad (13.7a)$$


$$\frac{\partial \bar{v}_x^*}{\partial r^*}(0, x^*) = \frac{\partial \bar{f}}{\partial r^*}(0, x^*) = 0 \quad (\text{symmetry}), \quad (13.7b)$$

$$\bar{v}_x^*(\infty, x^*) = \bar{f}(\infty, x^*) = 0 \quad (13.7c)$$

$$\begin{aligned} \bar{v}_x^*(r^* \leq 1, 0) &= \bar{f}(r^* \leq 1, 0) = 1 && (\text{top-hat exit profiles}) \\ \bar{v}_x^*(r^* > 1, 0) &= \bar{f}(r^* > 1, 0) = 0. \end{aligned} \quad (13.7d)$$


Note that the boundary conditions on  $\bar{v}_x^*$  and  $\bar{f}$  are identical, and that the governing equations for  $\bar{v}_x^*$  and  $\bar{f}$  become identical for  $Sc_T = 1$  (assumption 5). With assumptions 10 and 11, the state relationship for temperature is a simple, piecewise-linear function of  $\bar{f}$  (cf. Chapter 9) as shown in Fig. 13.9. The mean density is then related simply to the mean temperature through the ideal-gas equation of state,  $\bar{\rho} = PMW/(R_u \bar{T})$ .

**Solution** A finite-difference numerical scheme was used to solve the problem posed above. The results of these calculations are shown in Fig. 13.10 where mixture-fraction contours are shown on the left, and mixture fractions are plotted versus radial distance for fixed axial distance on the right. Using the definition of flame length as the axial location where the mixture fraction takes on the stoichiometric value ( $\bar{f}/f_s = 1$ ), we see that the predicted flame length is about 45 nozzle diameters ( $L_f/d_j = 45$ ). Again, using the stoichiometric contour to define the flame boundary, the aspect ratio (ratio of flame length to

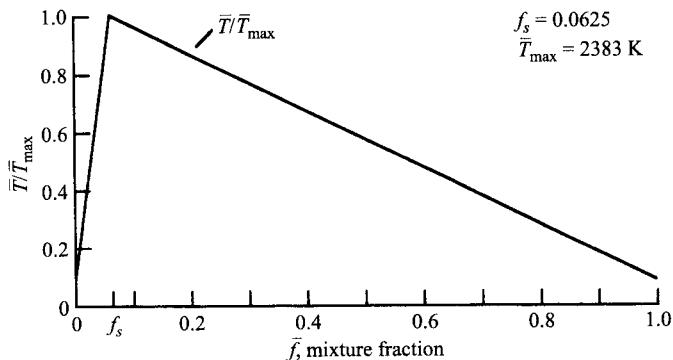

**Figure 13.9** State relationship for temperature for simplified chemistry.

width) is found to be about 11:1. This value is somewhat greater than experimental values of about 7:1 found for hydrocarbon jet flames. In spite of the great simplicity of our turbulent jet flame model, the general features of the flame are well predicted, although accuracy certainly cannot be claimed. Neglecting density fluctuations is probably the most serious oversimplification; for more realistic mathematical models of turbulent jet flames, which explicitly account for density fluctuations, the reader is referred to the literature [9–11].

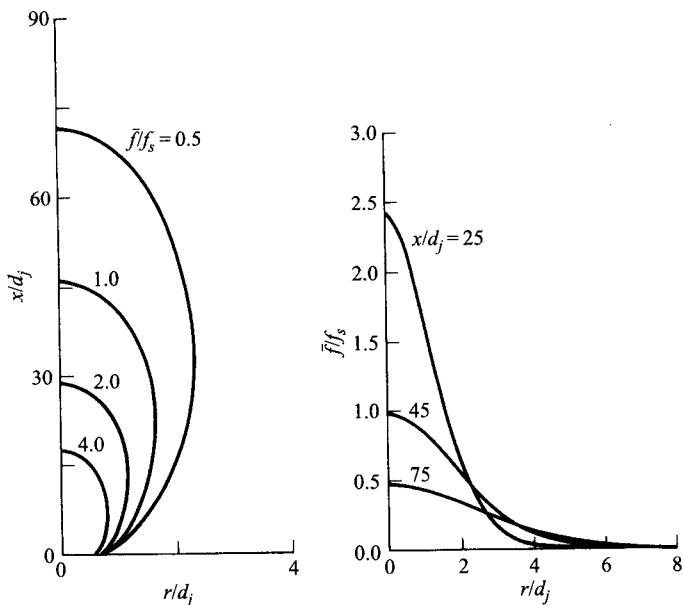

**Figure 13.10** Calculated mixture-fraction distribution using Prandtl's mixing-length model applied to a jet flame.

## Flame Length

Interest in being able to explain and predict turbulent jet flame lengths has a long history. The earliest, and now classical, studies are those of Hottel [12], Hawthorne *et al.* [13], and Wohl *et al.* [8] reported in the late 1940s and early 1950s. Major reviews of this subject were performed by Becker and Liang [14] and, more recently, by Delichatsios [15] and Blake and McDonald [16].

**Flame Length Definitions** Many definitions and techniques for measuring flame lengths are found in the literature, and no single definition is accepted as preferred. Therefore, care must be exercised in comparing results of different investigators and in the application of correlation formulae. Common definitions of flame length include visual determinations by a trained observer, averaging a number of individual instantaneous visible flame lengths from photographic records, measuring the axial location of the average peak centerline temperature using thermocouples, and measuring the axial location where the mean mixture fraction on the flame axis is the stoichiometric value using gas sampling. In general, visible flame lengths tend to be larger than those based on temperature or concentration measurements. For example, Ref. [17] reports temperature-based flame lengths to range between approximately 65 percent and 80 percent of time-averaged visible flame lengths, depending on fuel type.

**Factors Affecting Flame Length** For vertical flames created by a fuel jet issuing into a quiescent environment, four primary factors determine flame length:

- Relative importance of initial jet momentum flux and buoyant forces acting on the flame,  $Fr_f$ .
- Stoichiometry,  $f_s$ .
- Ratio of nozzle fluid to ambient gas density,  $\rho_e/\rho_\infty$ .
- Initial jet diameter,  $d_j$ .


The first of these factors, the relative importance of initial momentum and buoyancy, can be characterized by a flame Froude number,  $Fr_f$ . Recall that in Chapter 9, a flame Froude number was defined to establish momentum-controlled and buoyancy-controlled regimes for laminar jet flames (cf. Eqns. 9.68 and 9.69). For turbulent jet flames, the following definition of the flame Froude number is useful [15]:

$$Fr_f = \frac{v_e J_s^{3/2}}{\left(\frac{\rho_e}{\rho_\infty}\right)^{1/4} \left[\frac{\Delta T_f}{T_\infty} g d_j\right]^{1/2}}, \quad (13.8)$$

where  $\Delta T_f$  is the characteristic temperature rise resulting from combustion. Other similar definitions are defined in the literature [14, 18]. For very small


values of  $Fr_f$ , flames are dominated by buoyancy, while for very large values, the initial jet momentum controls the mixing and, hence, the velocity field within the flame. For example, the simplified analysis presented above ignores buoyancy and, thus, applies only in the limit of large  $Fr_f$ . Direct measurements of the effects of buoyancy on jet flames have been made under microgravity conditions by Bahaduri *et al.* [19]. Figure 13.11 shows how increased mixing, produced from buoyancy-induced motion, results in relatively shorter flames in comparison with the nonbuoyant case. Presumably, in the absence of the blowout phenomenon (discussed later), the flame heights for the two cases should approach the same asymptotic limit as the jet exit velocity increases. Using the correlation of Fig. 13.12, the asymptotic flame height is estimated to be 21.8 cm and is indicated in Fig. 13.11. Thus, we expect the nonbuoyant flame height to decrease, and the normal gravity flame height to increase. Experiments utilizing larger jet diameters would be required to verify this predicted behavior.

The remaining three factors are important regardless of whether or not buoyancy exerts an influence. For example, fuels with small values of stoichiometric mixture fraction,  $f_s$ , require greater quantities of air to be entrained per unit mass of fuel to achieve stoichiometric proportions in comparison with fuels with large values of  $f_s$ . This implies longer flames for smaller stoichiometric mixture fractions. As an illustration, the stoichiometric air requirement of propane is about six times that of carbon monoxide, and a propane flame is approximately seven times longer than a carbon monoxide flame [13].

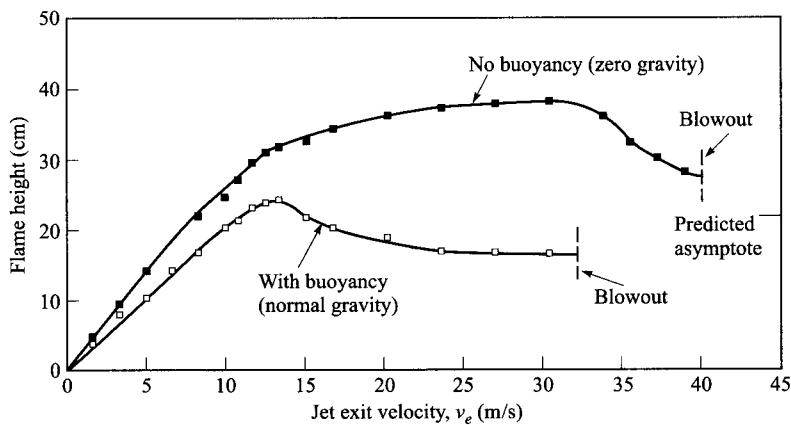

**Figure 13.11** Comparison of jet flame heights with and without buoyancy ( $C_3H_8$ -air,  $d_j = 0.8$  mm). Nonbuoyant conditions result from tests being conducted with near-zero ( $< 10^{-5}$  g) gravitational acceleration. Flames are nominally laminar at exit velocities up to approximately 10 m/s.

SOURCE: Data from Bahaduri *et al.* [19].

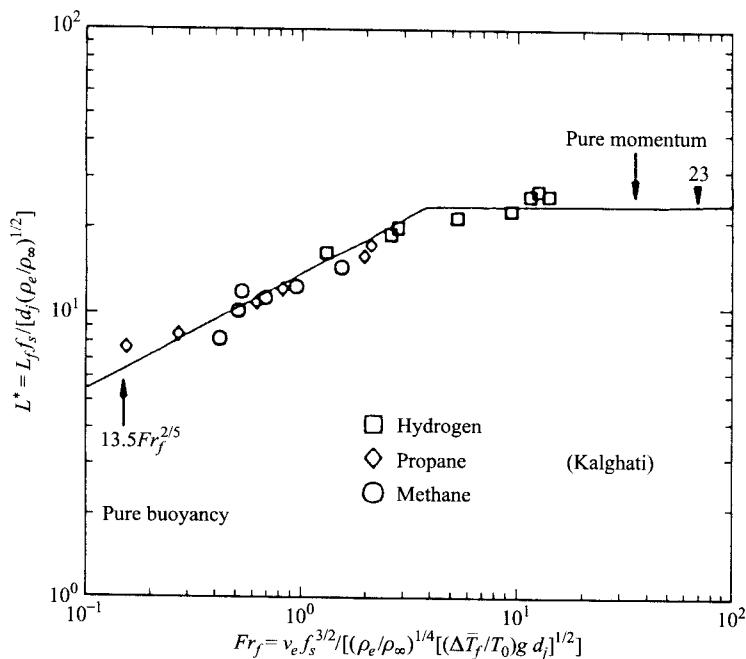

**Figure 13.12** Flame lengths for jet flames correlated with flame Froude number.  
SOURCE: Reprinted by permission of Elsevier Science, Inc., from Ref. [15]. © 1993, The Combustion Institute.

The density ratio,  $\rho_e/\rho_\infty$ , and initial jet diameter,  $d_j$ , can conveniently be combined as a single parameter, frequently referred to as the **momentum diameter**,  $d_j^*$ , and defined as

$$d_j^* = d_j (\rho_e / \rho_\infty)^{1/2}, \quad (13.9)$$

where a uniform exit velocity profile has been assumed. The basic idea embodied in this definition is that jets with identical initial jet momentum fluxes should have identical velocity fields. Thus, increasing the density of the nozzle fluid produces the same effect as increasing the nozzle diameter in accordance with Eqn. 13.9. Such a result is predicted by jet theory [20], and experimental evidence [21] shows this to be true.

**Correlations** Experimental results showing the combined influence of the four primary factors affecting flame length, discussed above, are shown in Fig. 13.12. The flame Froude number,  $Fr_f$ , appears as the abscissa, while the remaining three factors are used to define a dimensionless flame length, which is plotted on the ordinate, and given by

$$L^* \equiv \frac{L_f f_s}{d_j (\rho_e / \rho_\infty)^{1/2}} \quad (13.10a)$$

or

$$L^* = \frac{L_f f_s}{d_j^*}. \quad (13.10b)$$

Two regimes are identified in Fig. 13.12: a buoyancy-dominated regime that is correlated by the expression

$$L^* = \frac{13.5 Fr_f^{2/5}}{\left(1 + 0.07 Fr_f^2\right)^{1/5}} \quad \text{for } Fr_f < 5, \quad (13.11)$$

and a momentum-dominated regime where the dimensionless flame length  $L^*$  is constant, i.e.,

$$L^* = 23 \quad \text{for } Fr_f \geq 5. \quad (13.12)$$

Other correlations have been proposed [14]; however, the above are easy to use and probably as accurate as others. As previously discussed, various investigators use different definitions and experimental techniques to determine flame lengths; hence, the accuracy of any correlation depends on the consistency of the database used to establish it. The datapoints shown in Fig. 13.12 represent averages of measurements taken from individual video frames.

### Example 13.1

Estimate the flame length for a propane jet flame in air at ambient conditions ( $P = 1 \text{ atm}$ ,  $T_\infty = 300 \text{ K}$ ). The propane mass flowrate is  $3.66 \cdot 10^{-3} \text{ kg/s}$  and the nozzle exit diameter is 6.17 mm. Assume the propane density at the nozzle exit is  $1.854 \text{ kg/m}^3$ .

#### Solution

We will use the Delichatsios correlations (Eqns. 13.11 and 13.12) to find the propane flame length. To do so first requires us to determine the flame Froude number,  $Fr_f$ . The properties required are the following:

$$\rho_\infty = \rho_{\text{air}} = 1.1614 \text{ kg/m}^3 \quad (\text{Appendix Table C.1}),$$

$$T_f \cong T_{ad} = 2267 \text{ K} \quad (\text{Appendix Table B.1}),$$

$$f_s = \frac{1}{(A/F)_{\text{stoic}} + 1} = \frac{1}{15.57 + 1} = 0.06035.$$

The stoichiometric air-fuel ratio in the above is calculated from Eqn. 2.32. The nozzle exit velocity is calculated from the mass flowrate:

$$\begin{aligned} v_e &= \frac{\dot{m}_e}{\rho_e \pi d_j^2 / 4} \\ &= \frac{3.66 \cdot 10^{-3}}{1.854 \pi (0.00617)^2 / 4} = 66.0 \text{ m/s.} \end{aligned}$$

We now have all the information necessary to evaluate  $Fr_f$  (Eqn. 13.8):

$$\begin{aligned} Fr_f &= \frac{v_e f_s^{3/2}}{\left(\frac{\rho_e}{\rho_\infty}\right)^{1/4} \left(\frac{T_f - T_\infty}{T_\infty} g d_j\right)^{1/2}} \\ &= \frac{66.0(0.06035)^{1.5}}{\left(\frac{1.854}{1.1614}\right)^{0.25} \left[\left(\frac{2267 - 300}{300}\right) 9.81(0.00617)\right]^{0.5}} \\ &= 1.386. \end{aligned}$$

Since  $Fr_f < 5$ , we employ Eqn. 13.11 to find the dimensionless flame length,  $L^*$ :

$$\begin{aligned} L^* &= \frac{13.5 Fr_f^{2/5}}{(1 + 0.07 Fr_f^2)^{1.5}} \\ &= \frac{13.5(1.386)^{0.4}}{[1 + 0.07(1.386)^2]^{0.2}} \\ &= 15.0. \end{aligned}$$

From the definition of  $L^*$  (Eqn. 13.10) and  $d_j^*$  (Eqn. 13.9), we determine the actual flame length in meters:

$$\begin{aligned} d_j^* &= d_j \left(\frac{\rho_e}{\rho_\infty}\right)^{1/2} = 0.00617 \left(\frac{1.854}{1.1614}\right)^{0.5} \\ &= 0.0078 \text{ m} \end{aligned}$$

and

$$L_f = \frac{L^* d_j^*}{f_s} = \frac{15.0(0.0078)}{0.06035}$$

$$L_f = 1.94 \text{ m}$$

or

$$L_f / d_j = 314$$

#### Comment

From Fig. 13.12, we see that this flame is in the mixed regime where both the initial momentum flow and flame-generated buoyancy are important. It is also interesting to note that the flame length predicted above is somewhat less than, but quite close to, the visible flame length measured ( $L_f/d_j = 341$ ) in Ref. [17]. That the flame length estimated from Eqn. 13.11 is less than that measured is consistent with the different experimental techniques used to determine  $L_f$ .

**Example 13.2**

For the same heat release rate and nozzle exit diameter used in Example 13.1, determine the flame length when the fuel is methane and compare with the propane flame length. The density of methane is  $0.6565 \text{ kg/m}^3$ .

**Solution**

We can use the same procedures to find  $L_f$  as in Example 13.1, but first we must determine the methane flowrate. Since both flames release the same chemical energy,

$$\dot{m}_{\text{CH}_4} \text{LHV}_{\text{CH}_4} = \dot{m}_{\text{C}_3\text{H}_8} \text{LHV}_{\text{C}_3\text{H}_8}.$$

Using the lower heating values from Appendix Table B.1, we can find the  $\text{CH}_4$  flowrate:

$$\begin{aligned}\dot{m}_{\text{CH}_4} &= \dot{m}_{\text{C}_3\text{H}_8} \frac{\text{LHV}_{\text{C}_3\text{H}_8}}{\text{LHV}_{\text{CH}_4}} = 3.66 \cdot 10^{-3} \frac{46,357}{50,016} \\ &= 3.39 \cdot 10^{-3} \text{ kg/s.}\end{aligned}$$

Following the approach in Example 13.1, we obtain the following:

$$\rho_\infty = 1.1614 \text{ kg/m}^3,$$

$$T_f = 2226 \text{ K},$$

$$f_s = 0.0552,$$

$$v_e = 172.7 \text{ m/s.}$$

Using the above with Eqns. 13.8–13.11, we obtain the following:

$$Fr_f = 4.154,$$

$$L^* = 20.36,$$

$$d_j^* = 0.0046 \text{ m.}$$

Thus,

$$L_f = 1.71 \text{ m}$$

or

$$L_f/d_j = 277$$

Comparing the methane flame length with that of the propane flame,

$$\frac{L_{f,\text{CH}_4}}{L_{f,\text{C}_3\text{H}_8}} = \frac{1.71}{1.94} = 0.88,$$

we see that the  $\text{CH}_4$  flame is only about 12 percent shorter.

**Comment**

What factors contribute to the methane flame being shorter? First, we see that the  $\text{CH}_4$  flame is more nearly momentum controlled ( $Fr_{f,\text{CH}_4} > Fr_{f,\text{C}_3\text{H}_8}$ ), which implies a greater dimensionless flame length ( $L_{f,\text{CH}_4}^* = 20.36$  vs.  $L_{f,\text{C}_3\text{H}_8}^* = 15.0$ ). However, the lower density of the methane results in a significantly smaller momentum diameter ( $d_{j,\text{CH}_4}^* = 0.0046 \text{ m}$  vs.  $d_{j,\text{C}_3\text{H}_8}^* = 0.0078 \text{ m}$ ). This smaller  $d_j^*$  is the controlling factor in producing the shorter  $\text{CH}_4$  flame and outweighs the small opposing difference in stoichiometries.

## Flame Radiation

Turbulent nonpremixed flames can be highly radiating. In certain practical applications, this radiation is a desired attribute, contributing to heating a load. In other applications, however, radiant losses can contribute to loss of efficiency (e.g., diesel engines) or safety hazards (e.g., flaring operations). In gas-turbine engines, the radiant heat load is a major factor in the durability of the combustor liner. In this section, we will present a brief overview of the radiation characteristics of jet flames to acquaint the reader with this important subject. The review articles of Refs. [22] and [23] are recommended for readers seeking more information on radiation from combustion systems and applications other than jet flames.

A frequently used term in the combustion literature is the **radiant fraction**,  $\chi_R$ . The radiant fraction represents the ratio of the radiant heat-transfer rate from the flame to the surroundings,  $\dot{Q}_{\text{rad}}$ , to the total heat released by the flame,  $\dot{m}_F \Delta h_c$ , i.e.,


$$\chi_R \equiv \frac{\dot{Q}_{\text{rad}}}{\dot{m}_F \Delta h_c}, \quad (13.13)$$

where  $\dot{m}_F$  is the mass flowrate of fuel supplied to the flame and  $\Delta h_c$  is the fuel heat of combustion. Depending on fuel type and flow conditions, radiant fractions for jet flames range from a few percent to more than 50 percent. Figure 13.13 shows the variation of  $\chi_R$  with heat release rate,  $\dot{Q} (= \dot{m} \Delta h_c)$ , for three fuels and various sized burners [24].

Several interesting observations can be made from Fig. 13.13. First, we see that the radiant fractions for the three fuels arrange in the same order as the fuel's sooting propensity. From Table 9.5, the smoke points are  $\dot{m}_{sp}$  (mg/s) = 0.51 and 1.12 for  $\text{C}_2\text{H}_2$  and  $\text{C}_3\text{H}_6$ , respectively, while methane is nonsooting; the corresponding maximum radiant fractions are approximately 0.6, 0.45, and 0.15, respectively. This clearly suggests that the in-flame soot is important in determining a flame's radiant fraction. More will be said about this below. The second observation is that  $\chi_R$  depends on both flame size ( $d_f$ ) and heat release rate. The general trend is for  $\chi_R$  to decrease both as flame size decreases at a fixed firing rate, and as the firing rate increases for a fixed flame size. Although the actual processes involved are quite complicated, especially since soot kinetics is involved, these trends can be interpreted by a simple scaling analysis [18]. If we consider the entire flame to be a uniform source of both heat release and radiation, the rate at which energy is lost from the flame can be approximated as

$$\dot{Q}_{\text{rad}} \approx a_p V_f \sigma T_f^4, \quad (13.14)$$

where  $a_p$  is an appropriate absorption coefficient for the flame, and  $V_f$  and  $T_f$  are the flame volume and temperature, respectively. The radiant fraction, from Eqn. 13.13, becomes

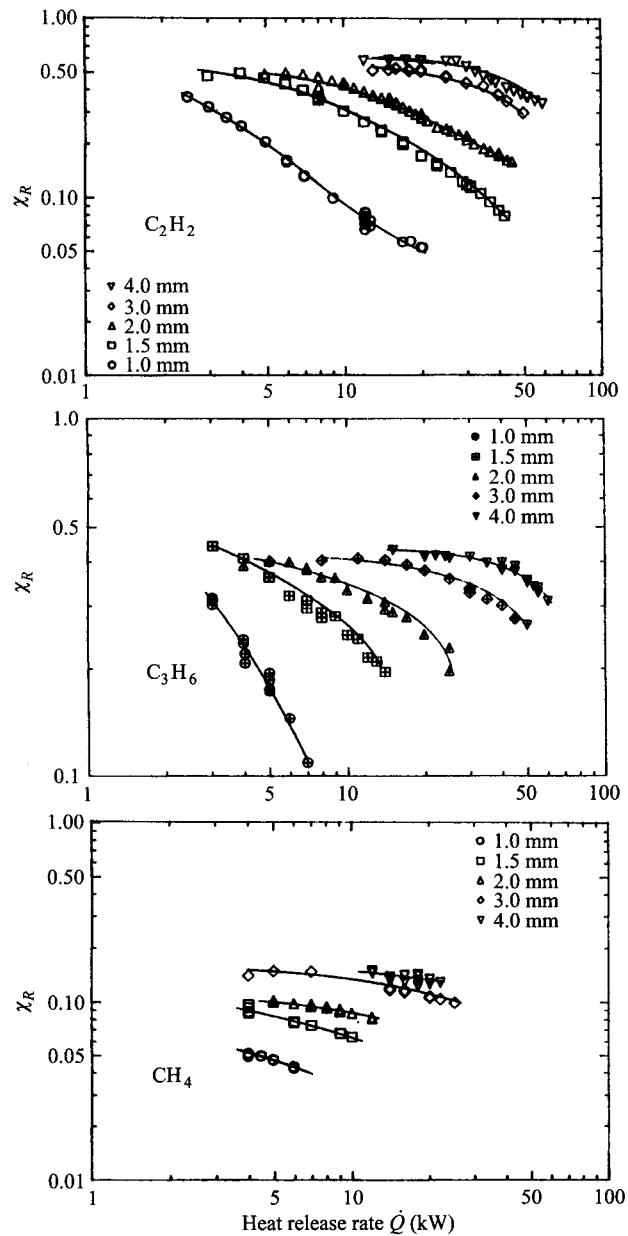

**Figure 13.13** Jet flame radiant fractions as functions of heat release rate and burner size.  
SOURCE: After Ref. [24]. Reprinted by permission of the Gas Research Institute.

$$\chi_R = \frac{a_p V_f \sigma T_f^4}{\dot{m}_F \Delta h_c}. \quad (13.15)$$

Now, from our previous discussion of flame lengths, we know that, in the momentum-dominated regime, the flame length is directly proportional to the burner diameter,  $d_j$ ; hence, we expect the following for the flame volume:

$$V_f \propto d_j^3.$$

Furthermore,

$$\dot{m}_F = \rho_F v_e \pi d_j^2 / 4.$$

Combining the  $V_f$  and  $\dot{m}_F$  scalings above into Eqn. 13.15 yields


$$\chi_R \propto a_p T_f^4 d_j / v_e, \quad (13.16)$$

which is consistent with the diameter and heat release rate influences on  $\chi_R$  shown in Fig. 13.13 for the larger  $\dot{Q}$  values. Note that  $\dot{Q} \propto v_e$  for fixed  $d_j$ . The basic idea expressed by Eqn. 13.16 is that  $\chi_R$  depends directly on the time available for radiant energy to be lost from the flame, where the characteristic time is proportional to  $d_j/v_e$ . It should be kept in mind that this simple analysis ignores buoyant effects and the interrelationships among  $a_p$ ,  $T_f$ , and  $\chi_R$ . More sophisticated approaches to radiation scaling in jet flames are available in the literature [25].

As mentioned above, the sooting propensity of the fuel is a major factor in determining the radiant loss from a flame. There are two sources of radiation in flames: molecular radiation, primarily from CO<sub>2</sub> and H<sub>2</sub>O; and essentially blackbody radiation from in-flame soot. The molecular radiation is concentrated in broadened bands of the infrared spectrum. Figures 13.14 and 13.15 show spectral radiation intensities for a methane flame, which contains very little in-flame soot (Fig. 13.14), and an ethylene flame (Fig. 13.15), which produces substantial in-flame soot [23, 26]. Comparing Figs. 13.14 and 13.15, we see that both flames exhibit significant intensity peaks in the bands at 2.5–3 μm and 4–5 μm. These correspond to the molecular radiation. In contrast, the ethylene flame (Fig. 13.15) exhibits strong continuum radiation at the short wavelengths, peaking near 1.5 μm. This continuum radiation is absent in the methane flame (Fig. 13.14). We can use Wien's displacement law [27] to estimate the wavelength associated with the maximum intensity of the soot blackbody radiation in the ethylene flame as follows:

$$\lambda_{\max} = \frac{2897.8 \mu\text{m}\cdot\text{K}}{T_f (\text{K})} \approx 1.22 \mu\text{m},$$

where the adiabatic flame temperature for a stoichiometric ethylene-air mixture (2369 K) has been used for  $T_f$ . Since the flame is nonadiabatic, the true flame temperature must be less than 2369 K and  $\lambda_{\max}$  larger than 1.22 μm. Using a  $\lambda_{\max}$  of 1.5 μm, which is consistent with the experimental data of Fig. 13.15, a characteristic flame temperature of about 1930 K is predicted.

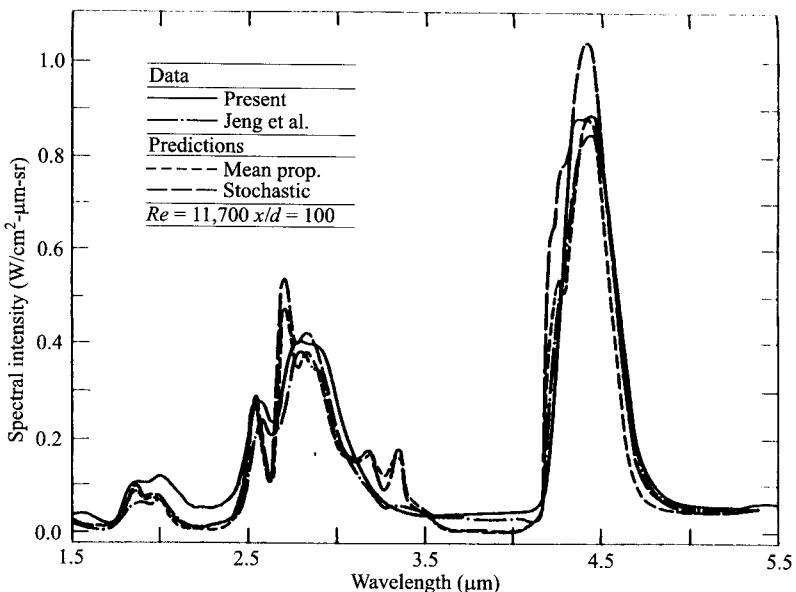

**Figure 13.14** Spectral measurements of thermal radiation from a nonpremixed methane-air jet flame showing strong peaks associated with molecular band radiation.


SOURCE: From Ref. [23]. Reproduced with permission of Taylor & Francis. All rights reserved.

### Liftoff and Blowout

As mentioned above and illustrated in Fig. 13.8, a jet flame will lift from an attached position at the burner exit if the exit velocity is sufficiently high. The **liftoff height**, the distance between the burner port and the base of the flame, will increase with additional increases in velocity until the flame blows out. The phenomena of liftoff and blowout of jet flames have been the subject of much research, and a good overview of this work can be found in Pitts [28]. Three different theories have been proposed to explain liftoff. The criteria for establishing the liftoff height are different for each theory and can be given as follows:

- Theory I      The local flow velocity at the position where the laminar flame speed is a maximum matches the turbulent burning velocity of a premixed flame, i.e.,  $\bar{v}(S_{L,\max}) = S_T$ .
- Theory II      The local strain rates in the fluid exceed the extinction strain rate for a laminar diffusion flamelet, i.e.,  $\epsilon > \epsilon_{\text{crit}}$ .
- Theory III      The time available for backmixing by large-scale flow structures of hot products with fresh mixture is less than a critical chemical time required for ignition, i.e.,  $\tau_{\text{local mixing}} < \tau_{\text{chem,crit}}$ .

The first of these theories has its origins with Wohl *et al.* [8] and was articulated by Vanquickenborne and Van Tiggelen [29], while the other two theories are of

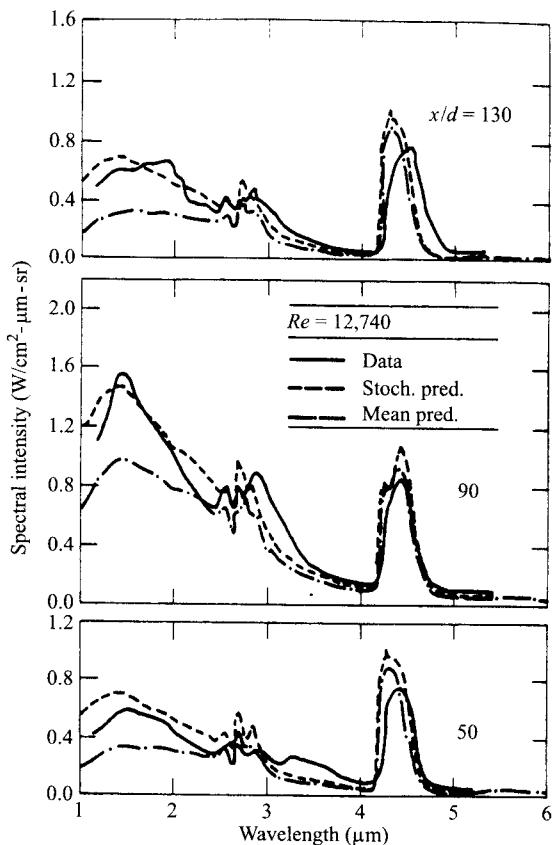


**Figure 13.15** Spectral measurements of thermal radiation from a nonpremixed ethylene-air jet flame showing both continuum radiation from soot and molecular band radiation.  
| SOURCE: Reprinted from Ref. [26] with permission of The Combustion Institute.

more recent origins [30–32]. Takahashi and Schmoll [33] also discuss the lift-off characteristics associated with thick-lipped, straight-tube burners, where additional phenomena are important.

Figure 13.16 shows lift-off heights,  $h$ , for methane, propane, and ethylene jet flames as functions of initial velocity,  $v_e$ . It is interesting to note the lack of a burner-diameter dependence and the ordering of the curves with respect to their laminar flame speeds ( $S_{L,\text{CH}_4} < S_{L,\text{C}_3\text{H}_8} < S_{L,\text{C}_2\text{H}_4}$ ). Kalghatgi [34], interpreting his data in terms of Theory I, developed the following correlation that can be used to describe the lift-off behavior of hydrocarbon-air flames:

$$\frac{\rho_e S_{L,\max} h}{\mu_e} = 50 \left( \frac{v_e}{S_{L,\max}} \right) \left( \frac{\rho_e}{\rho_\infty} \right)^{1.5}, \quad (13.17)$$

where  $S_{L,\max}$  is the maximum laminar flame speed, which occurs near stoichiometric ratios for hydrocarbons.

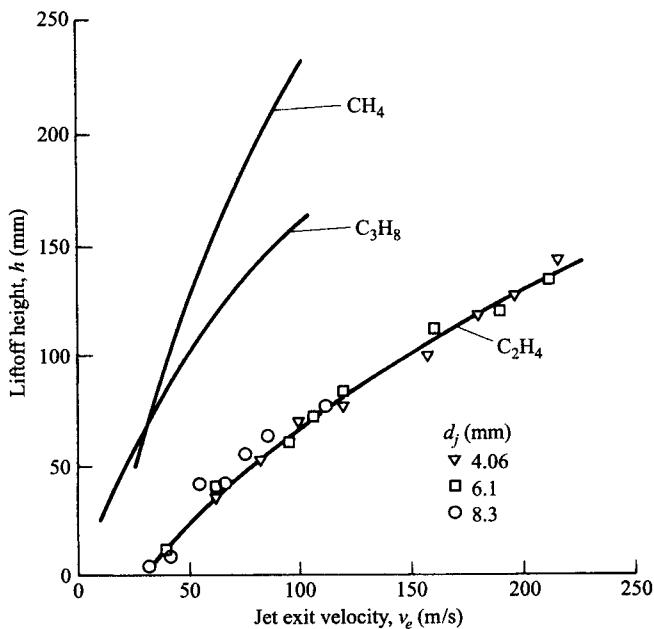

**Figure 13.16** Liftoff height versus jet exit velocity for methane, propane, and ethylene jet flames.

| SOURCE: After Kalghatgi [34].

The phenomenon of blowout can also be interpreted in terms of premixed turbulent flame concepts, i.e., Theory I, where it is assumed that the base of the lifted flame is a premixed flame. In this view, blowout occurs at a flowrate where the turbulent burning velocity falls more rapidly with distance downstream than does the local velocity at the position of  $S_{L,\max}$ . This explains the sudden occurrence of blowout just beyond a critical liftoff height, even though the mixture is still within the flammability limits at the flame base.


Kalghatgi [35] proposes the following correlation to estimate blowout flowrates for jet flames:

$$\frac{v_e}{S_{L,\max}} \left( \frac{\rho_e}{\rho_\infty} \right)^{1.5} = 0.017 Re_H (1 - 3.5 \cdot 10^{-6} Re_H), \quad (13.18a)$$

where the Reynolds number,  $Re_H$ , is given by

$$Re_H = \frac{\rho_e S_{L,\max} H}{\mu_e}. \quad (13.18b)$$

The characteristic length,  $H$ , is the distance along the burner axis where the mean fuel concentration has fallen to its stoichiometric value and can be estimated by

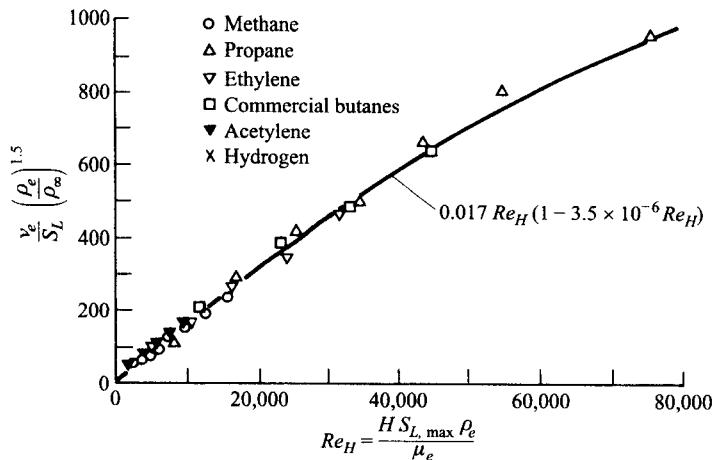

**Figure 13.17** Universal blowout stability curve from Kalghatgi [35].  
SOURCE: Reprinted with permission. © 1981, Gordon & Breach Publishers.

$$H = 4 \left[ \frac{Y_{F,e}}{Y_{F,\text{stoic}}} \left( \frac{\rho_e}{\rho_\infty} \right)^{1/2} - 5.8 \right] d_j. \quad (13.18c)$$

Figure 13.17 shows the applicability of Eqn. 13.18 to a wide range of fuels. Note that for a fixed fuel type, blowout velocities increase with jet diameter. This helps to explain the difficulty associated with blowing out oil-well fires.

Determine the blowoff velocity for a propane jet flame in air for a nozzle diameter of 6.17 mm. Also, estimate the lift-off height at the incipient blowoff condition. The ambient conditions are  $P = 1$  atm and  $T_\infty = 300$  K. The propane temperature at the nozzle exit is also 300 K. The propane density is  $1.854 \text{ kg/m}^3$ .

### Example 13.3

#### Solution

To determine the blowout velocity, we will employ Kalghatgi's correlation, Eqn. 13.18a. We must first determine the characteristic length  $H$  (Eqn. 13.18c) to find the Reynolds number  $Re_H$  (Eqn. 13.18b) required by the correlation.

To evaluate  $H$ , we note that

$$Y_{F,\text{stoic}} = f_s = 0.06035 \quad (\text{see Example 13.1})$$

$$Y_{F,e} = 1 \quad (\text{pure fuel at nozzle exit}).$$

Thus,

$$H = 4d_j \left[ \frac{Y_{F,e}}{f_s} \left( \frac{\rho_e}{\rho_\infty} \right)^{1/2} - 5.8 \right]$$

$$= 4(0.00617) \left[ \frac{1}{0.06035} \left( \frac{1.854}{1.1614} \right)^{0.5} - 5.8 \right]$$

$$= 0.3735 \text{ m.}$$

To evaluate  $Re_H$ , we also need to find the maximum laminar flame speed for a propane-air mixture,  $S_{L,\max}$ , and the propane viscosity,  $\mu$ , at 300 K:

$$\mu_e = 8.26 \cdot 10^{-6} \text{ N}\cdot\text{s/m}^2 \quad (\text{Appendix Table B.3 curvefits}).$$

Using the Metghalchi and Keck flame-speed correlations (Table 8.3):

$$S_{L,\max} = S_{L,\text{ref}} = 0.3422 \text{ m/s},$$

noting that  $S_{L,\max}$  occurs when  $\Phi = \Phi_M = 1.08$ .

We can now calculate  $Re_H$ :

$$Re_H = \frac{\rho_e S_{L,\max} H}{\mu_e} = \frac{1.854(0.3422)0.3735}{8.26 \cdot 10^{-6}}$$

$$= 28,688.$$

Using the blowout velocity correlation (Eqn. 13.18a), we evaluate

$$\frac{v_e}{S_{L,\max}} \left( \frac{\rho_e}{\rho_\infty} \right)^{1.5} = 0.017 Re_H (1 - 3.5 \cdot 10^{-6} Re_H)$$

$$= 0.017(28,688)[1 - 3.5 \cdot 10^{-6}(28,688)]$$

$$= 439.$$

Finally, we can use the above to solve for the blowout velocity,  $v_e$ :

$$v_e = 439(0.3422) \left( \frac{1.1614}{1.854} \right)^{1.5}$$

$v_e = 74.5 \text{ m/s}$

We can use this velocity to determine the liftoff height at incipient blowout. From Fig. 13.16, we obtain

$h_{\text{liftoff}} \cong 135 \text{ mm}$

#### Comment

Comparing the above results with the conditions in Example 13.1, we see that the Example 13.1 flame is close to the blowout condition and requires stabilization of some sort to prevent lifting. Experimental results corresponding to the Example 13.1 flame [17] show that a hydrogen pilot flame with a flowrate of 1.4 percent that of the propane was required to prevent lifting.


## OTHER CONFIGURATIONS

In most practical devices employing nonpremixed flames, the combustion air is usually introduced in some coflowing arrangement with the fuel, unlike the simple jet flames discussed above where the fuel jet flowed into a reservoir of air. Figure 13.18 illustrates a simple gas burner designed to produce long, luminous flames. In this particular design, the combustion air flows through an annulus surrounding the fuel tube. A burner tile (cf. Chapter 12) is used to anchor the flame to the burner outlet. By minimizing the relative velocity between the fuel and air streams, mixing rates are slow, resulting in long flames. Furthermore, the long residence times within the fuel jet core are favorable for the production of soot (cf. Chapter 9); thus, a highly luminous flame is produced. The burner type illustrated in Fig. 13.18 is useful for applications desiring a relatively uniform radiative heating over a large distance. Similarly, slow-mixing designs are used in radiant-tube burners (see Fig. 13.1) where uniform heating over the length of the tube is required.


Nozzle-mix burners (shown previously in Fig. 12.4), partially premix the air and fuel within the nozzle causing the flame to have some attributes of both premixed and nonpremixed combustion, the relative proportions depending upon the degree of mixing achieved at the nozzle.

Swirl is also frequently used in practical nonpremixed burners, particularly those employing sprays of liquid fuel or pulverized coal. Figure 13.19 illustrates an experimental burner arrangement where the degree of swirl is controlled by the relative amounts of air introduced tangentially and axially. In practical applications, vanes are typically used to impart swirl to the air and/or fuel streams. Figure 13.20 shows an adjustable swirl-vane arrangement for a furnace burner.

Swirl is useful for two reasons: first, swirl can stabilize a flame by creating a recirculation zone, if the amount of swirl is sufficiently great; and second, the

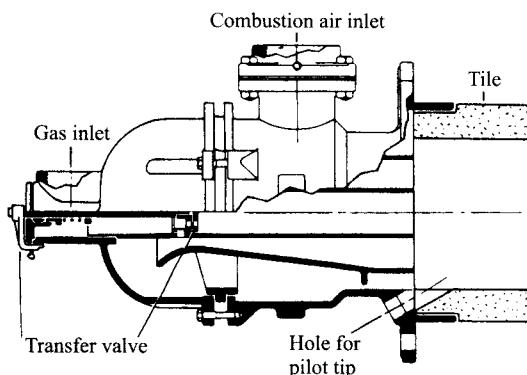


**Figure 13.18** Nonpremixed-flame burner employing annular flow of air around central fuel jet.

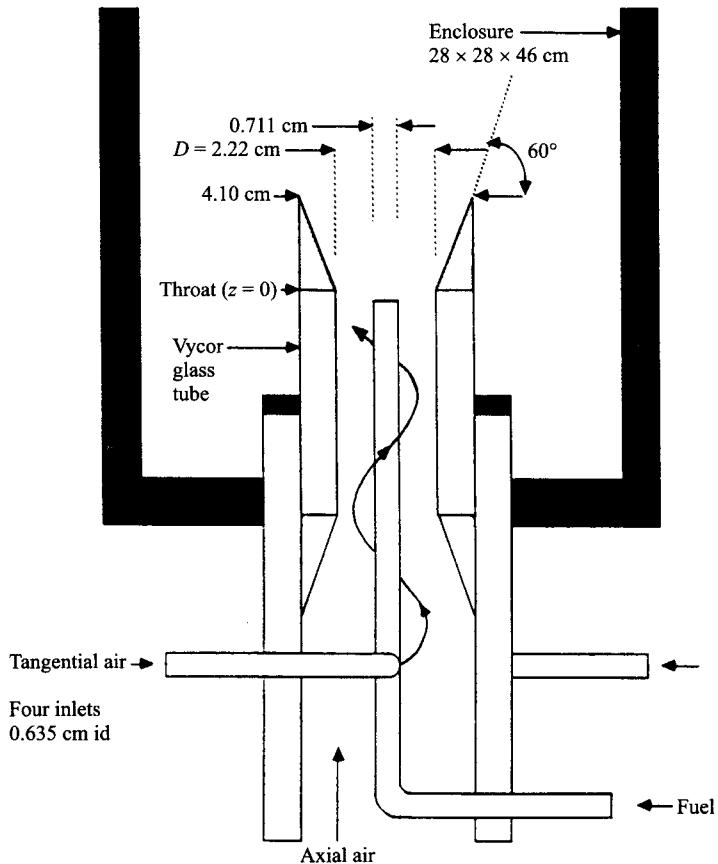

**Figure 13.19** Schematic diagram of experimental swirl-flame burner having both tangential and axial air entries.


| SOURCE: Reprinted from Ref. [36] with permission. © 1987, Gordon & Breach Science Publishers.

length of the flame can be controlled by the amount of swirl. These two aspects of swirl combustion are illustrated in Figs. 13.21 and 13.22, respectively. In Fig. 13.21, we see the dimensionless swirl number,  $S$ , and the tangential velocity component,  $v_\theta$ , plotted on the vertical axis, and the reciprocal of the overall equivalence ratio,  $1/\Phi$ , on the horizontal axis. Also shown on the horizontal axis are the corresponding fuel velocity,  $u_F$ , and the flame heat-release rate  $Q$ . To understand the influence of swirl on blowout stability, let us consider first the lower boundary of the region labeled stable. Below this line, no flame can be stabilized; however, as swirl is added to the inlet air, a condition is reached where a stable flame is possible. For example, at  $\Phi = 1$ , a stable flame results when the swirl number reaches approximately 0.4. The length of a horizontal line lying within the stable region gives a measure of the overall stability, expressed as a range of equivalence ratios over which stable flames occur.

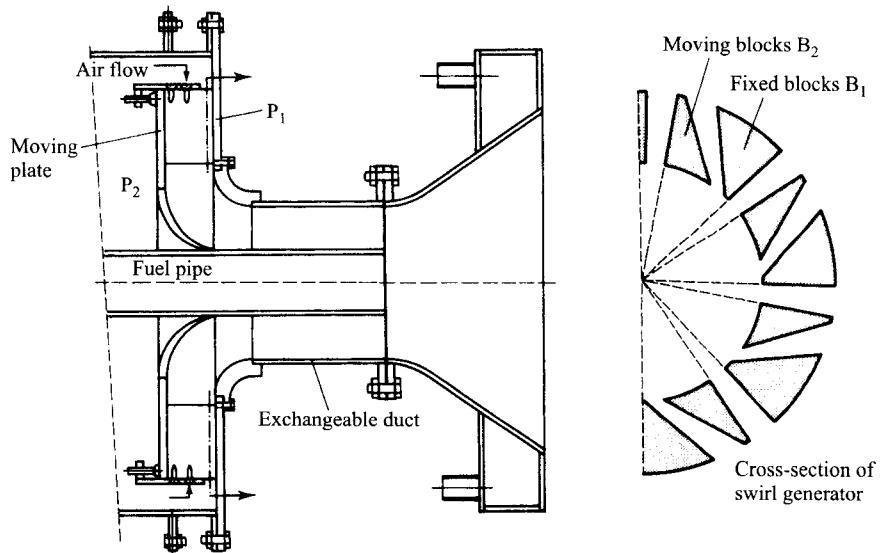


**Figure 13.20** Movable-block swirl-vane arrangement for furnace burner.

SOURCE: From Ref. [37] (Figure 5.3). Reprinted by permission of Krieger Publishing Co.

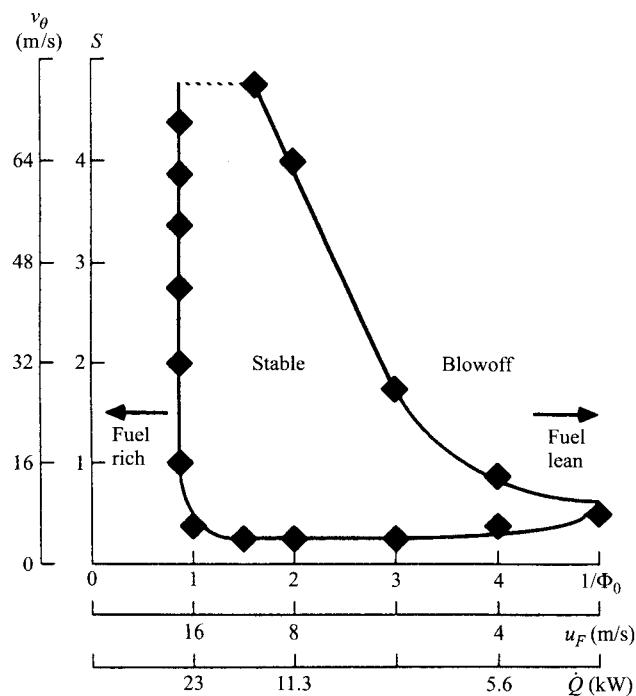

**Figure 13.21** Rich and lean blowout limits for swirl-stabilized flames for a fixed velocity of air of 19 m/s. Burner geometry corresponds to that of Fig. 13.19.

SOURCE: Reprinted from Ref. [36] with permission. © 1987, Gordon & Breach Science Publishers.

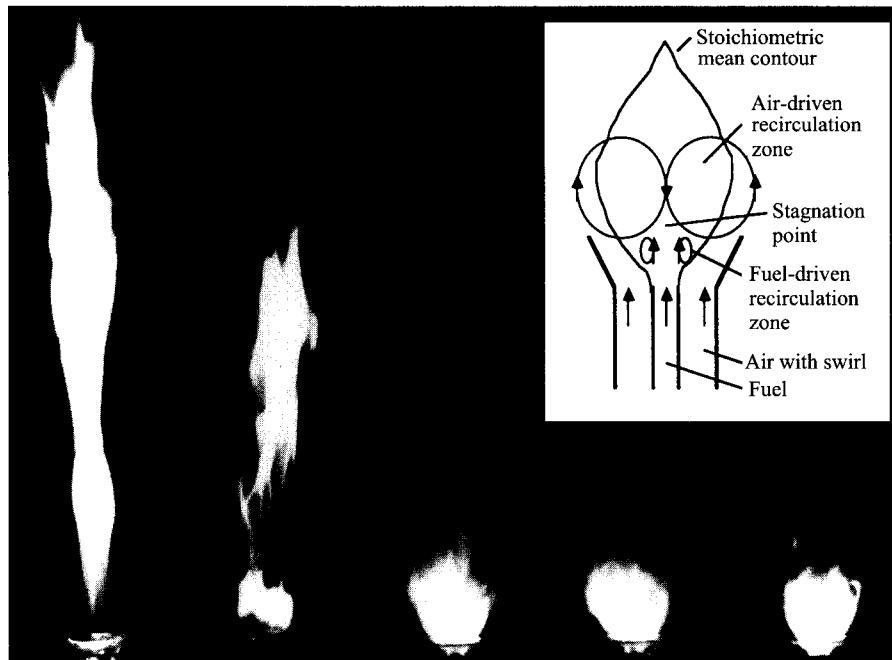

**Figure 13.22** Effect of swirl on flame length. Photographic sequence showing no swirl (left) progressing to a swirl number of  $S = 1.1$ .

| SOURCE: Reprinted from Ref. [38] with permission of The Combustion Institute.

Hence, the maximum overall stability occurs at about  $S = 0.6$ , with smaller ranges of stability for swirl numbers both larger and smaller than this value.

The dramatic effect of swirl on flame length is illustrated in the sequence of photographs shown in Fig. 13.22. Here we see that the addition of swirl ( $S = 1.1$ ) reduces the flame length by a factor of about five in comparison to the flame with no swirl. Swirl greatly enhances the mixing of air and fuel streams, thereby causing the shorter flame. Chen and Driscoll [38] provide scaling relations that relate flame length to both jet and swirl mixing parameters.

## SUMMARY

In this chapter, we explored turbulent nonpremixed combustion, focusing primarily on the simple turbulent jet flame. A simple mathematical analysis was developed that built upon our previous study of laminar nonpremixed jet flames (Chapter 9) and nonreacting turbulent jets (Chapter 11). The usefulness of conserved scalars was again demonstrated. We saw that when buoyancy is unimportant, the turbulent flame length is directly proportional to the nozzle diameter and independent of the initial jet velocity. Empirical correlations for

turbulent jet flame lengths, covering a wide range of flow conditions, were presented and applications of their use were shown. We also saw that radiation heat transfer is an important aspect of nonpremixed combustion. The concepts of liftoff and blowout were explored and, again, empirical correlations for these phenomena were presented for simple jet flames. Swirling flames, which are often used in practical devices, were introduced, emphasizing the ability of swirl to create a recirculation zone that acts to both stabilize and shorten the flame.

## NOMENCLATURE

$a_p$	Mean absorption coefficient ( $\text{m}^{-1}$ )
$A/F$	Air-fuel ratio ( $\text{kg}/\text{kg}$ )
$d$	Diameter (m)
$D$	Mass diffusivity ( $\text{m}^2/\text{s}$ )
$f$	Mixture fraction ( $\text{kg}/\text{kg}$ )
$Fr$	Froude number
$g$	Gravitational acceleration ( $\text{m}/\text{s}^2$ )
$h$	Liftoff height (m)
$H$	Characteristic length (m)
$L$	Length (m)
$Le$	Lewis number
$LHV$	Lower heating value ( $\text{J}/\text{kg}$ )
$\dot{m}$	Mass flowrate ( $\text{kg}/\text{s}$ )
$P$	Pressure (Pa)
$Pr$	Prandtl number
$\dot{Q}$	Heat transfer or heat release rate (W)
$r$	Radial coordinate (m)
$R$	Nozzle radius (m)
$Re$	Reynolds number
$S$	Swirl number
$S_L$	Laminar flame speed (m/s)
$Sc$	Schmidt number
$T$	Temperature (K)
$v$	Velocity (m/s)
$V$	Volume ( $\text{m}^3$ )
$x$	Axial coordinate (m)
$Y$	Mass fraction ( $\text{kg}/\text{kg}$ )

### Greek Symbols

$\alpha$	Thermal diffusivity ( $\text{m}^2/\text{s}$ )
$\Delta h_c$	Heat of combustion ( $\text{J}/\text{kg}$ )
$\varepsilon$	Eddy viscosity ( $\text{m}^2/\text{s}$ )
$\epsilon$	Strain rate ( $\text{s}^{-1}$ )

$\lambda$	Wavelength
$\mu$	Absolute viscosity ( $N \cdot s/m^2$ )
$\nu$	Kinematic viscosity ( $m^2/s$ )
$\rho$	Density ( $kg/m^3$ )
$\Phi$	Equivalence ratio
$\chi_R$	Radiant fraction

**Subscripts**

crit	Critical
$e$	Exit
$f$	Flame
$F$	Fuel
$j$	Jet
max	Maximum
$r$	Radial
rad	Radiation
$s$ , stoic	Stoichiometric
$sp$	Smoke point
turb, $T$	Turbulent
$\infty$	Ambient

**Other Notation**

( )*	Dimensionless variable
( )	Time-averaged quantity

**REFERENCES**

1. Weinberg, F. J., "The First Half-Million Years of Combustion Research and Today's Burning Problems," *Progress in Energy and Combustion Science*, 1: 17–31 (1975).
2. Mungal, M. G., Korasso, P. S., and Lozano, A., "The Visible Structure of Turbulent Jet Diffusion Flames—Large-Scale Organization and Flame Tip Oscillation," *Combustion Science and Technology*, 76: 165–185 (1991).
3. Gore, J. P., *A Theoretical and Experimental Study of Turbulent Flame Radiation*, Ph.D. Thesis, The Pennsylvania State University, University Park, PA, p. 119, 1986.
4. Seitzman, J. M., "Quantitative Applications of Fluorescence Imaging in Combustion," Ph.D. Thesis, Stanford University, Stanford, CA, June 1991.
5. Seitzman, J. M., Üngüt, A., Paul, P. H., and Hanson, R. K., "Imaging and Characterization of OH Structures in a Turbulent Nonpremixed Flame," *Twenty-Third Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, pp. 637–644, 1990.

6. Everest, D. A., Driscoll, J. F., Dahm, W. J. A., and Feikema, D. S., "Images of the Two-Dimensional Field and Temperature Gradients to Quantify Mixing Rates within a Non-Premixed Turbulent Jet Flame," *Combustion and Flame*, 101: 58–68 (1995).
7. Chen, L.-D., Roquemore, W. M., Goss, L. P., and Vilimoc, V., "Vorticity Generation in Jet Diffusion Flames," *Combustion Science and Technology*, 77: 41–57 (1991).
8. Wohl, K., Gazley, C., and Kapp, N., "Diffusion Flames," *Third Symposium on Combustion and Flame and Explosion Phenomena*, Williams & Wilkins, Baltimore, MD, p. 288, 1949.
9. Chen, J.-Y., Kollman, W., and Dibble, R. W., "PdF Modeling of Turbulent Nonpremixed Methane Jet Flames," *Combustion Science and Technology*, 64: 315–346 (1989).
10. Bilger, R. W., "Turbulent Flows with Nonpremixed Reactants," in *Turbulent Reacting Flows* (P. A. Libby, and F. A. Williams, eds.), Springer-Verlag, New York, pp. 65–113, 1980.
11. Bilger, R. W., "Turbulent Jet Diffusion Flames," *Progress in Energy and Combustion Science*, 1: 87–109 (1976).
12. Hottel, H. C., "Burning in Laminar and Turbulent Fuel Jets," *Fourth Symposium (International) on Combustion*, Williams & Wilkins, Baltimore, MD, p. 97, 1953.
13. Hawthorne, W. R., Weddell, D. S., and Hottel, H. C., "Mixing and Combustion in Turbulent Gas Jets," *Third Symposium on Combustion and Flame and Explosion Phenomena*, Williams & Wilkins, Baltimore, MD, p. 266, 1949.
14. Becker, H. A., and Liang, P., "Visible Length of Vertical Free Turbulent Diffusion Flames," *Combustion and Flame*, 32: 115–137 (1978).
15. Delichatsios, M. A., "Transition from Momentum to Buoyancy-Controlled Turbulent Jet Diffusion Flames and Flame Height Relationships," *Combustion and Flame*, 92: 349–364 (1993).
16. Blake, T. R., and McDonald, M., "An Examination of Flame Length Data from Vertical Turbulent Diffusion Flames," *Combustion and Flame*, 94: 426–432 (1993).
17. Turns, S. R., and Bandaru, R. B., "Oxides of Nitrogen Emissions from Turbulent Hydrocarbon/Air Jet Diffusion Flames," Final Report—Phase II, GRI 92/0470, Gas Research Institute, September 1992.
18. Turns, S. R., and Myhr, F. H., "Oxides of Nitrogen Emissions from Turbulent Jet Flames: Part I—Fuel Effects and Flame Radiation," *Combustion and Flame*, 87: 319–335 (1991).
19. Bahaduri, M. Y., Small, J. F., Jr., Hegde, U. G., Zhou, L., and Stocker, D. P., "Characteristics of Transitional and Turbulent Jet Diffusion Flames in Microgravity," NASA Conference Publication 10174, Third International Microgravity Combustion Workshop, Cleveland, OH, pp. 327–332, 11–13 April, 1995.

20. Thring, M. W., and Newby, M. P., "Combustion Length of Enclosed Turbulent Jet Flames," *Fourth Symposium (International) on Combustion*, Williams & Wilkins, Baltimore, MD, p. 789, 1953.
21. Ricou, F. P., and Spalding, D. B., "Measurements of Entrainment by Axisymmetrical Turbulent Jets," *Journal of Fluid Mechanics*, 11: 21–32 (1963).
22. Viskanta, R., and Mengüç, M. P., "Radiation Heat Transfer in Combustion Systems," *Progress in Energy and Combustion Science*, 13: 97–160 (1987).
23. Faeth, G. M., Gore, J. P., Chuech, S. G., and Jeng, S.-M., "Radiation from Turbulent Diffusion Flames," in *Annual Review of Numerical Fluid Mechanics and Heat Transfer*, Vol. 2, Hemisphere, Washington, DC, pp. 1–38, 1989.
24. Delichatsios, M. A., Markstein, G. H., Orloff, L., and deRis, J., "Turbulent Flow Characterization and Radiation from Gaseous Fuel Jets," Final Report, GRI 88/0100, Gas Research Institute, 1988.
25. Orloff, L., deRis, J., and Delichatsios, M. A., "Radiation from Buoyant Turbulent Diffusion Flames," *Combustion Science and Technology*, 84: 177–186 (1992).
26. Gore, J. P., and Faeth, G. M., "Structure and Spectral Radiation Properties of Turbulent Ethylene/Air Diffusion Flames," *Twenty-First Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, p. 1521, 1986.
27. Siegel, R., and Howell, J. R., *Thermal Radiation Heat Transfer*, 2nd Ed., McGraw-Hill, New York, 1981.
28. Pitts, W. M., "Importance of Isothermal Mixing Processes to the Understanding of Lift-Off and Blowout of Turbulent Jet Diffusion Flames," *Combustion and Flame*, 76: 197–212 (1989).
29. Vanquickenborne, L., and Van Tiggelen, A., "The Stabilization Mechanism of Lifted Diffusion Flames," *Combustion and Flame*, 10: 59–69 (1966).
30. Peters, N., "Local Quenching Due to Flame Stretch and Non-Premixed Turbulent Combustion," *Combustion Science and Technology*, 30: 1–17 (1983).
31. Janicka, J., and Peters, N. "Prediction of Turbulent Jet Diffusion Flame Lift-Off Using a PDF Transport Equation," *Nineteenth Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, p. 367, 1982.
32. Broadwell, J. E., Dahm, W. J. A., and Mungal, M. G., "Blowout of Turbulent Diffusion Flames," *Twentieth Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, p. 303, 1984.
33. Takahashi, F., and Schmoll, W. J., "Lifting Criteria of Jet Diffusion Flames," *Twenty-Third Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, p. 677, 1990.
34. Kalghatgi, G. T., "Lift-Off Heights and Visible Lengths of Vertical Turbulent Jet Diffusion Flames in Still Air," *Combustion Science and Technology*, 41: 17–29 (1984).

35. Kalghatgi, G. T., "Blow-Out Stability of Gaseous Jet Diffusion Flames. Part I: In Still Air," *Combustion Science and Technology*, 26: 233–239 (1981).
36. Tangirala, V., Chen, R. H., and Driscoll, J. F., "Effect of Heat Release and Swirl on the Recirculation within Swirl-Stabilized Flames," *Combustion Science and Technology*, 51: 75–95 (1987).
37. Beér, J. M., and Chigier, N. A., *Combustion Aerodynamics*, Krieger, Malabar, FL, 1983.
38. Chen, R.-H., and Driscoll, J. F., "The Role of the Recirculation Vortex in Improving Fuel-Air Mixing within Swirling Flames," *Twenty-Second Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, pp. 531–540, 1988.

---

## REVIEW QUESTIONS

1. Make a list of all of the bold-faced words in Chapter 13 and discuss.
2. Discuss the factors that cause different fuels to produce different jet-flame lengths for identical initial conditions, i.e., equal  $d_i$  values and  $v_e$  values.
3. Discuss why flame lengths for momentum-dominated jet flames do not depend on initial velocity, but, rather, are directly proportional to the initial jet diameter. Use the Prandtl mixing-length model applied to jets to support your arguments.
4. What happens to the length of a jet flame when an inert diluent is added to the fuel? Discuss.
5. Discuss the concept of flame stability and the various methods employed to stabilize nonpremixed turbulent flames.
6. Make a list of applications that employ turbulent nonpremixed combustion.
7. Discuss the factors that affect the radiant heat transfer from turbulent, non-premixed hydrocarbon-air flames.

---

## PROBLEMS

- 13.1** What nozzle exit velocities are required to achieve momentum-dominated propane and carbon monoxide jet flames for a nozzle diameter of 5 mm? At nozzle exit conditions, the density of propane is  $1.854 \text{ kg/m}^3$  and for carbon monoxide  $1.444 \text{ kg/m}^3$ . The adiabatic flame temperature for a CO-air flame is 2400 K. Discuss your results.
- 13.2** Calculate and compare the flame lengths for momentum-dominated propane-air and hydrogen-air jet flames for a nozzle exit diameter of 5 mm. Assume ambient and fuel temperatures of 300 K. Discuss your results.

- 13.3** Determine if the flames in problem 13.2 above will require some form of stabilization to prevent them from being blown out. Useful hydrogen properties are  $T_{ad} = 2383\text{ K}$ ,  $\mu_{300\text{K}} = 8.96 \cdot 10^{-6}\text{ N-s/m}^2$ , and  $S_{L,\max} = 3.25\text{ m/s}$ . Assume that the velocity is the minimum required for a momentum-dominated flame.
- 13.4** A propane-air jet flame has a nozzle exit velocity of 200 m/s. Determine the minimum nozzle exit diameter required to prevent the flame from being blown out.
- 13.5** Determine the length of the flame in problem 13.4.
- 13.6** A propene ( $\text{C}_3\text{H}_6$ )-air jet flame is stabilized on a 3-mm-diameter nozzle. The jet exit velocity is 52.7 m/s. Determine the radiant heat-transfer rate (kW) to the cold surroundings. Assume the propene density is approximately  $1.76\text{ kg/m}^3$  at the jet exit conditions.
- 13.7** Consider a methane-air jet flame. The nozzle exit diameter is 4 mm and the heat release rate of the flame is 25 kW. The density of the methane at the exit conditions is  $0.6565\text{ kg/m}^3$ .
- Estimate the liftoff height of the flame.
  - Compare the liftoff length calculated in part A above with the total flame length.
- 13.8** Estimate the change in flame length in a momentum-dominated ethane-air jet flame when the pure fuel stream is diluted with nitrogen to 50 percent  $\text{N}_2$  by volume. Assume ideal-gas behavior.
- 13.9** A defense contractor has developed an exotic fuel whose composition is thought to be  $\text{CO}_2\text{H}_4$ . A combustion test is to be conducted in which this fuel is injected axially at 367 K as a turbulent jet into a 1.83-m-long combustor. Air is provided at 811 K and 20 atm. Premixed combustion tests at the same temperatures and pressure indicate that the maximum laminar flame speed is approximately 0.61 m/s. The viscosity of the fuel is estimated to be  $5 \cdot 10^{-5}\text{ N-s/m}^2$  at 367 K. Determine the minimum number of jet flames and the corresponding nozzle size required to burn 1.82 kg/s of fuel within the length of the combustor. Assume that the length of the turbulent jet flames is momentum controlled, that there are no interactions among the flames, and that the coflowing air has negligible effect on the flame length. To achieve a practicable design, be sure to consider the possibility of blowout.

# 14

## Burning of Solids

---

### OVERVIEW

Thus far in our study of combustion, we have considered primarily the burning of gaseous fuels (Chapters 8, 9, 12 and 13), with some attention to liquid fuels (Chapters 3 and 10) where the combustion reactions ultimately involve gaseous species, i.e., the liquid must first vaporize before it can burn. In this chapter, we introduce the subject of burning solids. One of the most important solid fuels is coal, which is typically burned as a pulverized powder in utility boilers, as discussed in this chapter. Other applications involving solids combustion include refuse burning, metals combustion, hybrid rocket engines, wood burning, and carbon combustion (coal char or coke), among others.

As suggested by the diversity of the applications and types of fuels listed above, the problem of solids combustion is very complex, with the details depending upon both the nature of the fuel and the specific application. For example, an entire book (or several) would be required to treat coal combustion in detail. Therefore, our approach will be, first, to introduce some of the fundamental concepts that are important to solids combustion and, second, to apply these concepts to the development of simple models of the burning of a spherical solid carbon particle. The carbon combustion models provide some insight into the general nature of solids combustion and also have relevance to the problem of coal combustion. The chapter concludes with a brief overview of some of the real-world complications associated with the combustion of coal, as well as a few other solids.

## COAL-FIRED BOILERS

Figure 14.1 illustrates a typical pulverized-coal-fired boiler. The boiler produces steam for steam-turbine generation of electricity. Utility boilers are huge. The combustion space may be as large as  $15\text{ m} \times 20\text{ m}$ , with total heights reaching over 50 m. Crushed coal is pulverized so that most of the coal particles are smaller than about  $75\text{ }\mu\text{m}$ . The coal is blown into the primary zone (lower furnace) by the primary air. The primary air is of the order of 20 percent of the total air supplied, and the oxygen in the primary air is consumed in the combustion of the volatiles. Secondary air enters through the overfire port at high velocities, mixing with the char and the combustion products from the lower furnace. Heat from the flame gases is transferred through the tubes that line the combustion space to the superheated steam. Further downstream where the combustion gases are cooler, steam from the turbines is reheated, feedwater heated, and combustion air preheated. The combustion gases are then treated to remove particulate matter and reduce sulfur oxides and, in some cases, nitrogen oxides. A large portion of the boiler-system volume is occupied by the pollution control system(s).

Other configurations are also employed in coal burning. For example, larger coal particles can be burned on fixed or traveling grates. Cyclone combustors, with air and/or fuel streams directed to create a swirling flow, are used in some boilers. Also, fluidized-bed combustors are becoming more popular and development efforts are focused on scaleup for large power outputs [2].


---

## HETEROGENEOUS REACTIONS

Solids combustion differs in a fundamental way from our previous topics in that, now, heterogeneous chemical reactions assume importance. A **heterogeneous reaction** is a reaction involving species that exist in different physical states, i.e., gas–liquid or gas–solid reactions. Except for a passing mention of heterogeneous reactions in Chapter 4, and a brief discussion of soot oxidation in Chapter 9, all of our previous discussions assumed chemical reactions occurred as a result of colliding gas-phase molecules, i.e., **homogeneous reactions**. Again, a detailed study of heterogeneous reactions would require several volumes; therefore, our treatment here is but a very brief introduction. As a starting point for further study, basic textbooks on chemical kinetics are suggested, e.g., Ref. [3].

Gardiner [3] subdivides the overall process of gas–solid reactions into the following constituent processes:

1. Transport of the reactant molecule to the surface by convection and/or diffusion.
2. Adsorption of the reactant molecule on the surface.

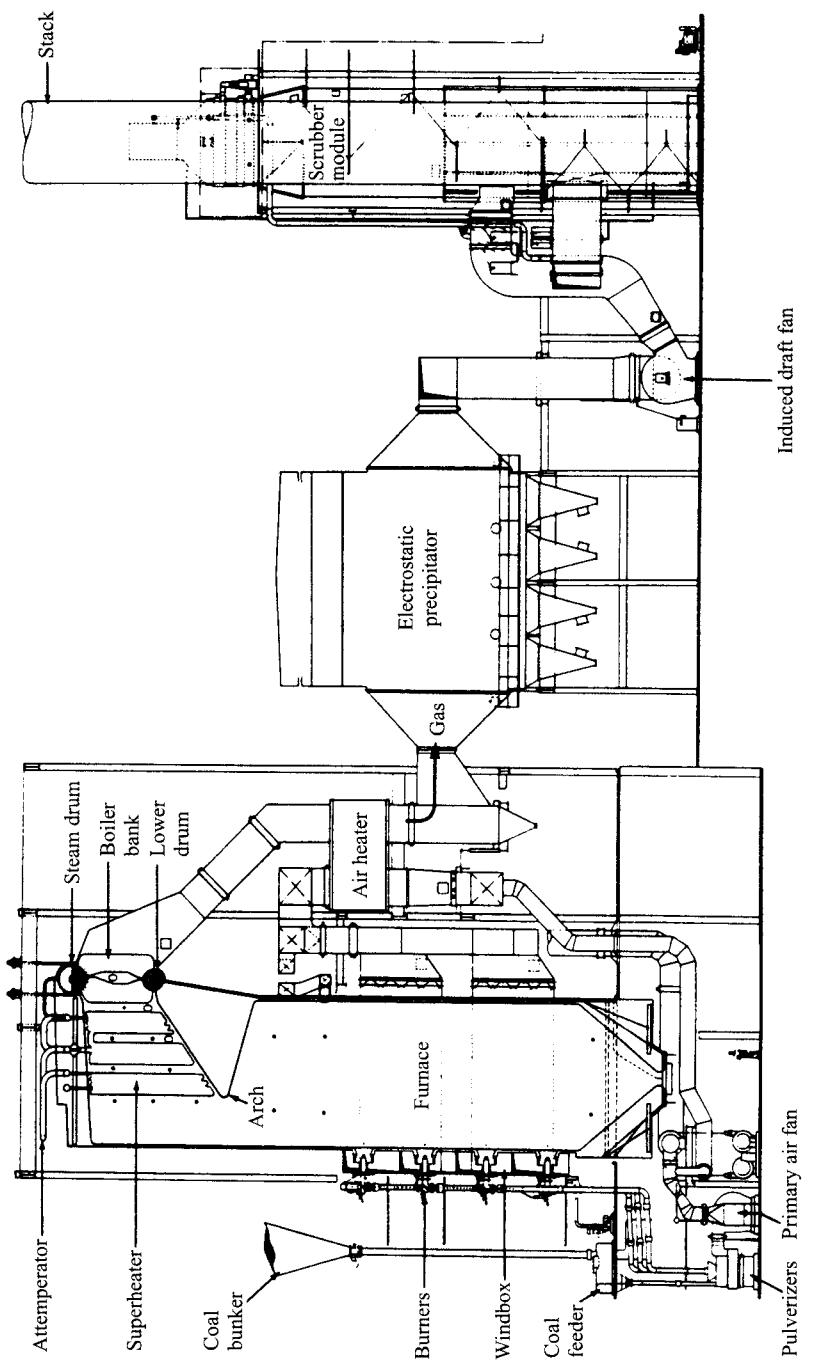

**Figure 14.1** Pulverized-coal boiler.  
SOURCE: Reprinted from Ref. [1] with permission of Babcock & Wilcox Co.

3. Elementary reaction steps involving various combinations of adsorbed molecules, the surface itself, and gas-phase molecules.
4. Desorption of product molecules from the surface.
5. Transport of the product molecules away from the surface by convection and/or diffusion.

The first and fifth steps are familiar to us and can be treated using the mass-transfer concepts developed in Chapter 3. The intervening steps are more complex, especially step 3, and are more properly in the realm of physical chemistry. Rather than elaborate on these steps, we will cite three “rate laws” [3] that arise as a result of how strongly the reactant and/or product molecules are adsorbed on the surface. First, if the reactant molecule A is weakly adsorbed, then the reaction rate,  $\mathfrak{R}$ , is proportional to the gas-phase concentration of A adjacent to the surface:

$$\mathfrak{R} = k(T)[A], \quad (14.1)$$

where  $k(T)$  is the rate coefficient. Second, if A is strongly adsorbed, then the reaction rate is independent of the gas-phase concentration of A, i.e.,

$$\mathfrak{R} = k(T). \quad (14.2)$$

The last case we consider is when the reactant molecule A is weakly adsorbed, while the product molecule B is strongly adsorbed. For this case,

$$\mathfrak{R} = k(T) \frac{[A]}{[B]}, \quad (14.3)$$

where [A] and [B] are the gas-phase concentrations of A and B immediately adjacent to the surface. The point in presenting Eqns. 14.1–14.3 is to illustrate how gas–solid reaction-rate expressions differ from those for elementary homogeneous reactions with which you are familiar (cf. Chapter 4). Furthermore, we will employ expressions of the form of Eqn. 14.1 in the development of our models of carbon combustion below.

## BURNING OF CARBON


In addition to providing a nice example to illustrate the general nature of solids combustion, carbon combustion is interesting for practical reasons as well. For example, in the combustion of pulverized coal, a carbon char is produced after the volatile matter has been driven from the coal particle and burned. The subsequent burnout of the carbon char is the limiting process establishing the necessary residence time requirements, and hence volume, of the combustion space. Moreover, a substantial amount of heat is radiated to the load from the burning char particles. Even though the real processes involved in coal-char combustion are much more complicated than implied by the models developed

here, these models provide insight into the real processes and can serve as order-of-magnitude approximations.

Because of its importance to coal combustion, carbon combustion has a large literature associated with it, for example, Refs. [4–6]; and many models have been developed. Caram and Amundson [7] review and compare 12 models developed between 1924 and 1977. Before beginning our simplified analysis, we first present an overview of the various processes involved.

## Overview

Figure 14.2 schematically shows a burning carbon surface within a reacting boundary layer. At the surface, the carbon can be attacked by either  $O_2$ ,  $CO_2$ , or  $H_2O$ , depending primarily upon the surface temperature, via the following global reactions:

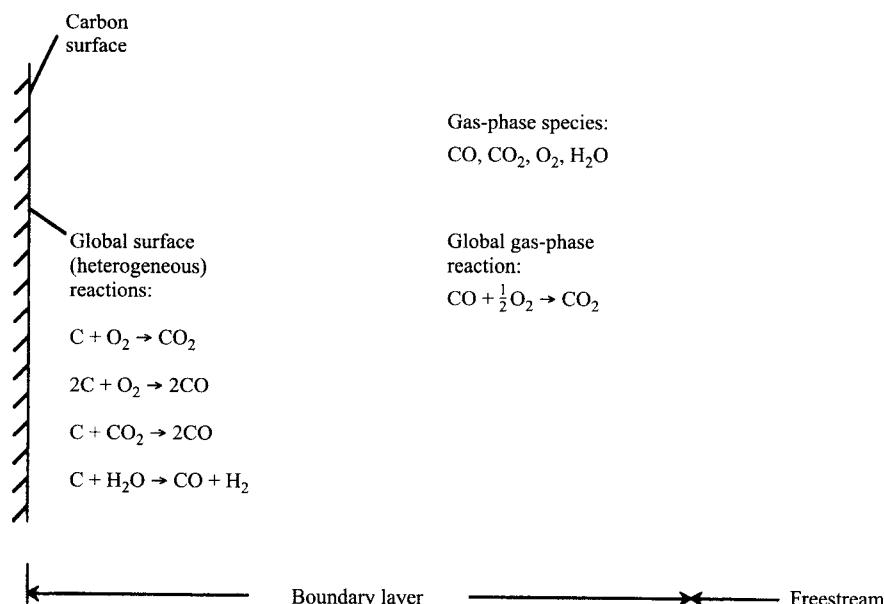

**Figure 14.2** General scheme for carbon combustion showing global heterogeneous and homogeneous reactions.

The principal product at the carbon surface is CO. The CO diffuses away from the surface through the boundary layer where it combines with the inward-diffusing O<sub>2</sub> according to the following global homogeneous reaction:



Of course, many elementary reaction steps are involved in R14.8, with one of the most important being CO + OH → CO<sub>2</sub> + H, as you may recall from Chapter 5.

In principle, the problem of carbon oxidation could be solved by writing the appropriate conservation equations for species, energy, and mass, defining all of the elementary reaction steps, and then solving these equations subject to appropriate boundary conditions at the surface and free stream. A major complication to this scenario, however, is that the carbon surface is porous and the detailed nature of the surface changes as the carbon oxidation proceeds. Thus, the process of **intraparticle diffusion** plays a major role in carbon combustion under certain conditions. A review of this subject can be found in Simons [8].

Simplified models of carbon combustion rely on the global reactions given in Fig. 14.2 and usually assume that the surface is impervious to diffusion. Depending upon the assumptions made for both the surface and gas-phase chemistry, different scenarios emerge which are generally classified as **one-film**, **two-film**, or **continuous-film** models. In the one-film models, there is no flame in the gas phase and the maximum temperature occurs at the carbon surface. In the two-film models, a flame sheet lies at some distance from the surface, where the CO produced at the surface reacts with incoming O<sub>2</sub>. In the continuous-film models, a flame zone is distributed within the boundary layer, rather than occurring in a sheet.

In our analyses below, we will develop both one-film and two-film models. The one-film model is quite simple to illustrate conveniently and clearly the combined effects of heterogeneous kinetics and gas-phase diffusion. The two-film model, although also still quite simplified, is more realistic in that it shows the sequential production and oxidation of CO. We then use these models to obtain estimates of carbon-char burning times.

### One-Film Model


The basic approach to the problem of carbon combustion is quite similar to our previous treatment of droplet evaporation in Chapter 3, except that now chemical reaction at the surface replaces evaporation. We consider the burning of a single spherical carbon particle subject to the following assumptions. Because of the similarity of the present analysis to previous ones, we will not elaborate on those assumptions that have been employed and explained previously. If the implications of certain assumptions are not clear, a review of the appropriate sections of Chapters 3 and 10 is recommended.

### Assumptions

1. The burning process is quasi-steady.
2. The spherical carbon particle burns in a quiescent, infinite ambient medium that contains only oxygen and an inert gas, such as nitrogen. There are no interactions with other particles, and the effects of convection are ignored.
3. At the particle surface, the carbon reacts kinetically with oxygen to produce carbon *dioxide*, i.e., reaction R14.4,  $\text{C} + \text{O}_2 \rightarrow \text{CO}_2$ , prevails. In general, this reaction choice is not particularly good since carbon *monoxide* is the preferred product at combustion temperatures. Nonetheless, this assumption eliminates the problem of how and where the CO oxidizes, and we will do better in our two-film model.
4. The gas phase consists of only  $\text{O}_2$ ,  $\text{CO}_2$ , and inert gas. The  $\text{O}_2$  diffuses inward, reacts with the surface to form  $\text{CO}_2$ , which then diffuses outward. The inert gas forms a stagnant layer as in the Stefan problem (cf. Chapter 3).
5. The gas-phase thermal conductivity,  $k$ , specific heat,  $c_p$ , and the product of the density and mass diffusivity,  $\rho\mathcal{D}$ , are all constants. Furthermore, we assume that the Lewis number is unity, i.e.,  $Le = k/(\rho c_p \mathcal{D}) = 1$ .
6. The carbon particle is impervious to gas-phase species; i.e., intraparticle diffusion is ignored.
7. The particle is of uniform temperature and radiates as a gray body to the surroundings without participation of the intervening medium.

Figure 14.3 illustrates the basic model embodied by the above assumptions, showing how the species mass fraction and temperature profiles vary with the radial coordinate. Here we see that the  $\text{CO}_2$  mass fraction is a maximum at the surface and is zero far from the particle surface. Conversely, the  $\text{O}_2$  mass fraction takes on its smallest value at the surface. Later, we will see that if the chemical kinetic rate of  $\text{O}_2$  consumption is very fast, the oxygen concentration at the surface,  $Y_{\text{O}_2,s}$ , approaches zero. If the kinetics are slow, there will be an appreciable concentration of  $\text{O}_2$  at the surface. Since we assume that there are no reactions occurring in the gas phase and all of the heat release occurs at the surface, the temperature monotonically falls from a maximum at the surface,  $T_s$ , to its value far from the surface,  $T_\infty$ .

**Problem Statement** Our primary objective in the following analysis is to determine expressions that allow evaluation of the mass burning rate of the carbon,  $\dot{m}_{\text{C}}$ , and the surface temperature,  $T_s$ . Intermediate variables of interest are the mass fractions of  $\text{O}_2$  and  $\text{CO}_2$  at the carbon surface. The problem is straightforward and requires dealing with only species and energy conservation.

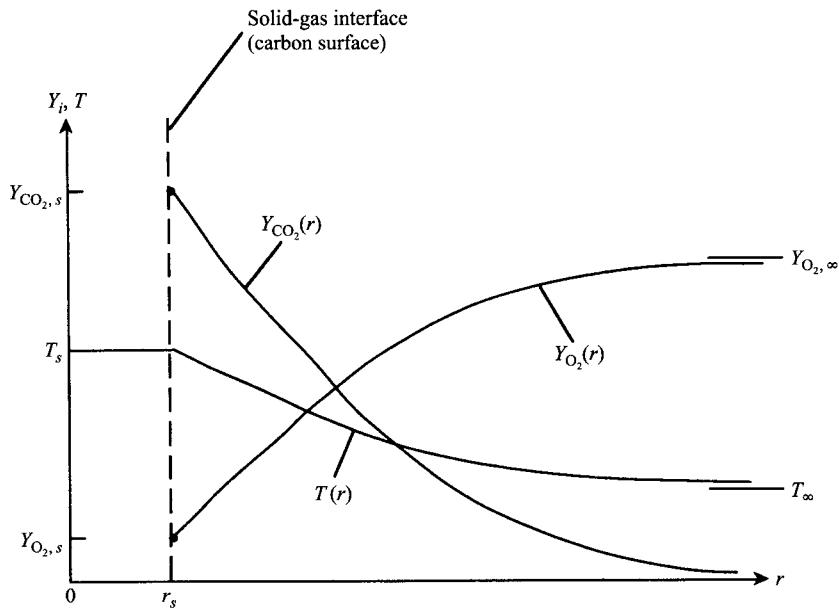

**Figure 14.3** Species and temperature profiles for one-film model of carbon combustion assuming that  $CO_2$  is the only product of combustion at the carbon surface.

**Overall Mass and Species Conservation** The relationship among the three species mass fluxes,  $\dot{m}_C''$ ,  $\dot{m}_{O_2}''$ , and  $\dot{m}_{CO_2}''$ , is illustrated in Fig. 14.4. At the surface, the mass flow of carbon must equal the difference between the outgoing flow of  $CO_2$  and incoming flow of  $O_2$ , i.e.,

$$\dot{m}_C'' = \dot{m}_{CO_2}'' - \dot{m}_{O_2}''. \quad (14.9)$$

Similarly, at any arbitrary radial position,  $r$ , the net mass flux is the difference between the  $CO_2$  and  $O_2$  fluxes:

$$\dot{m}_{\text{net}}'' = \dot{m}_{CO_2}'' - \dot{m}_{O_2}''. \quad (14.10)$$

Since the mass flowrates of each species are constant with respect to both radial position (no gas-phase reactions) and time (steady state), we have


$$\dot{m}_C'' 4\pi r_s^2 = \dot{m}_{\text{net}}'' 4\pi r^2 \quad (14.11)$$

or

$$\dot{m}_C'' = \dot{m}_{\text{net}}'' = \dot{m}_{CO_2}'' - \dot{m}_{O_2}''. \quad (14.12)$$


Thus, we see that the outward flowrate is just the carbon combustion rate, as expected. The  $CO_2$  and  $O_2$  flowrates can be related by the stoichiometry associated with the reaction at the surface:



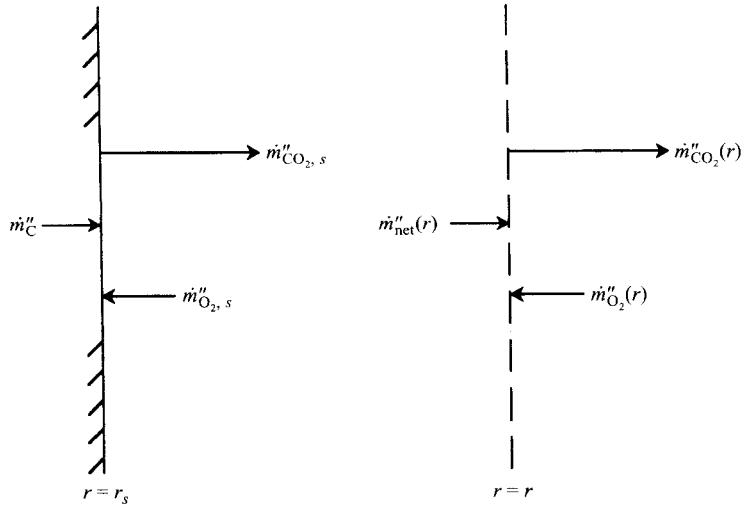

**Figure 14.4** Species mass fluxes at the carbon surface and at an arbitrary radial location.

On a per-kilogram-of-carbon basis, we have

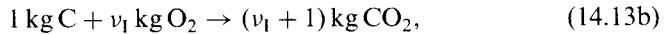

where the mass stoichiometric coefficient is

$$v_I = \frac{31.999 \text{ kg O}_2}{12.01 \text{ kg C}} = 2.664. \quad (14.14)$$

The subscript I is used to denote that this coefficient applies to the one-film model. A different value of the stoichiometric coefficient results for the two-film model.

We can now relate the gas-phase species flowrates to the carbon burning rate:

$$\dot{m}_{O_2} = v_I \dot{m}_C \quad (14.15a)$$

and

$$\dot{m}_{CO_2} = (v_I + 1) \dot{m}_C. \quad (14.15b)$$

Thus, the problem now is to find any one of the species flowrates. To do this, we apply Fick's law (Eqn. 3.1) to express the conservation of O<sub>2</sub>:

$$\dot{m}_{O_2}'' = Y_{O_2}(\dot{m}_{O_2}'' + \dot{m}_{CO_2}'') - \rho D \frac{dY_{O_2}}{dr}. \quad (14.16)$$

Recognizing that the mass fluxes are simply related to the mass flows as  $\dot{m}_i = 4\pi r^2 \dot{m}_i''$  and substituting Eqns. 14.15a and 14.15b, taking care to account

for the direction of the flows (inward flow is negative, outward flow is positive), Eqn. 14.16 becomes, with some additional manipulation,

$$\dot{m}_C = \frac{4\pi r^2 \rho D}{(1 + Y_{O_2}/v_I)} \frac{d(Y_{O_2}/v_I)}{dr}. \quad (14.17)$$

The boundary conditions that apply to the equation are

$$Y_{O_2}(r_s) = Y_{O_2,s} \quad (14.18a)$$

and

$$Y_{O_2}(r \rightarrow \infty) = Y_{O_2,\infty}. \quad (14.18b)$$

Having two boundary conditions for our first-order ordinary differential equation allows us to determine an expression for  $\dot{m}_C$ , the eigenvalue of the problem. Separating Eqn. 14.17 and integrating between the two limits given by Eqns. 14.18a and b yields

$$\dot{m}_C = 4\pi r_s \rho D \ln \left[ \frac{1 + Y_{O_2,\infty}/v_I}{1 + Y_{O_2,s}/v_I} \right]. \quad (14.19)$$

Since  $Y_{O_2,\infty}$  is treated as a given quantity, our problem would be solved if we knew the value of  $Y_{O_2,s}$ , the oxygen mass fraction at the carbon surface. To find this value, we apply our model of the chemical kinetics at the surface.

**Surface Kinetics** We assume that the reaction  $C + O_2 \rightarrow CO_2$  is first-order with respect to  $O_2$  and follows the form of Eqn. 14.1. Adopting the conventions of Ref. [7], the carbon reaction rate is expressed as

$$\mathfrak{R}_C (\text{kg/s-m}^2) = \dot{m}_{C,s}'' = k_c M W_C [O_{2,s}], \quad (14.20)$$

where  $[O_{2,s}]$  is the molar concentration ( $\text{kmol/m}^3$ ) of  $O_2$  at the surface and  $k_c$  is the rate coefficient, which is usually expressed in Arrhenius form, i.e.,  $k_c = A \exp[-E_A/R_u T_s]$ . Converting the molar concentration to a mass fraction,

$$[O_{2,s}] = \frac{M W_{\text{mix}}}{M W_{O_2}} \frac{P}{R_u T_s} Y_{O_2,s},$$

and relating the burning rate to the carbon mass flux at the surface ( $r = r_s$ ), Eqn. 14.20 becomes

$$\dot{m}_C = 4\pi r_s^2 k_c \frac{M W_C M W_{\text{mix}}}{M W_{O_2}} \frac{P}{R_u T_s} Y_{O_2,s}, \quad (14.21)$$

or, more compactly,

$$\dot{m}_C = K_{\text{kin}} Y_{O_2,s}, \quad (14.22)$$

where all of the kinetic parameters except  $Y_{O_2,s}$  have been absorbed into the factor  $K_{\text{kin}}$ . Note that  $K_{\text{kin}}$  depends on the pressure, the surface temperature, and the carbon particle radius.

Solving Eqn. 14.22 for  $Y_{O_2,s}$  and substituting into Eqn. 14.19 yields a single transcendental (and awkward) equation for the burning rate  $\dot{m}_C$ . Rather than working with such a result, we will adopt an electrical circuit analogy, similar to those that you may be familiar with for heat transfer, to more conveniently express our solution. Moreover, such an approach yields considerable physical insight.

**Circuit Analog** To develop our circuit analogy, we need to transform our two expressions for  $\dot{m}_C$  (Eqns. 14.19 and 14.22) into forms involving a so-called potential difference, or driving force, and a resistance. For Eqn. 14.22, this is trivial:

$$\dot{m}_C = \frac{(Y_{O_2,s} - 0)}{(1/K_{\text{kin}})} = \frac{\Delta Y}{R_{\text{kin}}}, \quad (14.23)$$

where the zero has been added to indicate a “potential difference,” and the “resistance” is the reciprocal of our kinetic factor  $K_{\text{kin}}$ . Equation 14.23 is thus analogous to Ohm’s law ( $i = \Delta V/R$ ), where  $\dot{m}_C$  is the “flow variable” or current analog.

Dealing with Eqn. 14.19 requires a bit of manipulation. First, we rearrange the logarithm term to yield

$$\dot{m}_C = 4\pi r_s \rho D \ln \left[ 1 + \frac{Y_{O_2,\infty} - Y_{O_2,s}}{v_I + Y_{O_2,s}} \right]. \quad (14.24)$$

As an aside, if we define a transfer number  $B_{O,m}$  to be

$$B_{O,m} \equiv \frac{Y_{O_2,\infty} - Y_{O_2,s}}{v_I + Y_{O_2,s}}, \quad (14.25)$$

Eqn. 12.24 becomes

$$\dot{m}_C = 4\pi r_s \rho D \ln(1 + B_{O,m}), \quad (14.26)$$

which is of the same form as the expression developed for liquid droplet evaporation (Eqn. 3.53) and combustion (Eqn. 10.68c). Returning to the problem at hand, Eqn. 14.26 can be linearized, if the numerical value of  $B_{O,m}$  is small, by truncating the series

$$\ln(1 + B_{O,m}) = B_{O,m} - \frac{1}{2} B_{O,m}^2 + \frac{1}{3} B_{O,m}^3 - \dots \quad (14.27a)$$

after the first term, i.e.,

$$\ln(1 + B_{O,m}) \approx B_{O,m}. \quad (14.27b)$$

Since  $v_I = 2.664$ , and  $Y_{O_2,s}$  must range between zero and  $Y_{O_2,\infty}$  ( $= 0.233$  for air), it is easy to show that our approximation (Eqn. 14.27b) is reasonable. The desired linearized version of Eqn. 14.19 is written

$$\dot{m}_C = 4\pi r_s \rho D \left[ \frac{Y_{O_2,\infty} - Y_{O_2,s}}{v_I + Y_{O_2,s}} \right], \quad (14.28)$$

where, in turn,  $\dot{m}_C$  can be expressed as the ratio of a “potential difference” and a “resistance,” i.e.,

$$\dot{m}_C = \frac{(Y_{O_2,\infty} - Y_{O_2,s})}{\left( \frac{v_I + Y_{O_2,s}}{4\pi r_s \rho D} \right)} \equiv \frac{\Delta Y}{R_{\text{diff}}}. \quad (14.29)$$

Note that the appearance of  $Y_{O_2,s}$  in  $R_{\text{diff}}$  is nonconstant, which creates a nonlinear relationship between  $\dot{m}_C$  and  $\Delta Y$ .

Since the burning rate expressed by Eqn. 14.23, derived from chemical kinetics, must be the same as that expressed by Eqn. 14.29, which was derived from mass-transfer considerations alone, a two-resistor series circuit results. Figure 14.5 illustrates the resulting circuit analog. Note that, since we chose our potentials to be O<sub>2</sub> mass fractions, the carbon flows from a low potential to a high potential, just the opposite of the electrical analog. Our analogy is perfectly consistent, however, when the flow variable is  $\dot{m}_{O_2}/v_I$  ( $= -\dot{m}_C$ ), which is also indicated on Fig. 14.5.

We can now determine the burning rate  $\dot{m}_C$  with the aid of the circuit analog. Referring to Fig. 14.5, we write

$$\dot{m}_C = \frac{(Y_{O_2,\infty} - 0)}{R_{\text{kin}} + R_{\text{diff}}}, \quad (14.30)$$

where


$$R_{\text{kin}} \equiv 1/K_{\text{kin}} = \frac{v_I R_u T_s}{4\pi r_s^2 M W_{\text{mix}} k_c P} \quad (14.31)$$

and

$$R_{\text{diff}} \equiv \frac{v_I + Y_{O_2,s}}{\rho D 4\pi r_s}. \quad (14.32)$$

Since  $R_{\text{diff}}$  involves the unknown value of  $Y_{O_2,s}$ , some iteration is still required in this approach. Alternatively, a quadratic equation can be formed and solved directly. In the following section, we further exploit the circuit analog (Eqns. 14.30–14.32).

**Limiting Cases** Depending on the particle temperature and size, primarily, one of the resistors may be much larger than the other, thus causing  $\dot{m}_C$  to depend essentially only on that resistor. For example, let us assume that

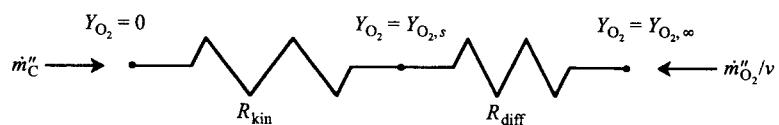

**Figure 14.5** Electrical circuit analog for a burning carbon particle showing chemical-kinetic and diffusional resistances in series.

**Table 14.1** Summary of carbon combustion regimes

Regime	$R_{\text{kin}}/R_{\text{diff}}$	Burning Rate Law	Conditions of Occurrence
Diffusionally controlled	$\ll 1$	$\dot{m}_C = Y_{O_2,\infty}/R_{\text{diff}}$	$r_s$ large, $T_s$ high, $P$ high
Intermediate	$\sim 1$	$\dot{m}_C = Y_{O_2,\infty}/(R_{\text{diff}} + R_{\text{kin}})$	—
Kinetically controlled	$\gg 1$	$\dot{m}_C = Y_{O_2,\infty}/R_{\text{kin}}$	$r_s$ small, $T_s$ low, $P$ low

$R_{\text{kin}}/R_{\text{diff}} \ll 1$ . In this case, the burning rate is said to be **diffusionally controlled**. When does this occur? What does this imply? Using the definitions of  $R_{\text{kin}}$  and  $R_{\text{diff}}$  (Eqns. 14.31 and 14.32) and taking their ratio, we obtain

$$\frac{R_{\text{kin}}}{R_{\text{diff}}} = \left( \frac{\nu_I}{\nu_I + Y_{O_2,s}} \right) \left( \frac{R_u T_s}{MW_{\text{mix}} P} \right) \left( \frac{\rho D}{k_c} \right) \left( \frac{1}{r_s} \right), \quad (14.33)$$

and can now see how individual parameters affect this quantity. This ratio can be made small in several ways. First,  $k_c$  can be very large; this implies a fast surface reaction. We also see that a large particle size,  $r_s$ , or high pressure,  $P$ , has the same effect. Although the surface temperature appears explicitly in the numerator of Eqn. 14.33, its effect is primarily through the temperature-dependence of  $k_c$ , where  $k_c$  typically increases rapidly with temperature since  $k_c = A \exp(-E_A/R_u T)$ . As a result of the burning being diffusionally controlled, we see that none of the chemical-kinetic parameters influence the burning rate and that the  $O_2$  concentration at the surface approaches zero.

The other limiting case, **kinetically controlled** combustion, occurs when  $R_{\text{kin}}/R_{\text{diff}} \gg 1$ . In this case, the  $R_{\text{diff}}$  is small and the nodes  $Y_{O_2,s}$  and  $Y_{O_2,\infty}$  are essentially at the same value, i.e., the concentration of  $O_2$  at the surface is large. Now the chemical-kinetic parameters control the burning rate and the mass-transfer parameters are unimportant. Kinetically controlled combustion occurs when particle sizes are small, pressures low, and temperatures low (a low temperature causes  $k_c$  to be small).

Table 14.1 summarizes our discussion of the limiting regimes of carbon combustion.

Estimate the burning rate of a 250- $\mu\text{m}$ -diameter carbon particle burning in still air ( $Y_{O_2,\infty} = 0.233$ ) at 1 atm. The particle temperature is 1800 K, and the kinetic rate constant  $k_c$  is 13.9 m/s. Assume the mean molecular weight of the gases at the surface is 30 kg/kmol. Also, what combustion regime prevails?

**Example 14.1**

**Solution**

We will employ the circuit analogy to find  $\dot{m}_C$ . The diffusional resistance is calculated from Eqn. 14.32, where the density is estimated from the ideal-gas law at the surface temperature:

$$\rho = \frac{P}{\left(\frac{R_u}{MW_{\text{mix}}}\right)T_s} = \frac{101,325}{\left(\frac{8315}{30}\right)1800} = 0.20 \text{ kg/m}^3,$$

and the mass diffusivity is estimated using a value for CO<sub>2</sub> in N<sub>2</sub> from Appendix Table D.1, corrected to 1800 K:

$$\mathcal{D} = \left(\frac{1800 \text{ K}}{393 \text{ K}}\right)^{1.5} 1.6 \cdot 10^{-5} \frac{\text{m}^2}{\text{s}} = 1.57 \cdot 10^{-4} \text{ m}^2/\text{s}.$$

Thus, assuming  $Y_{O_2,s} \approx 0$  for the time being,

$$\begin{aligned} R_{\text{diff}} &= \frac{\nu_I + Y_{O_2,s}}{\rho \mathcal{D} 4\pi r_s} = \frac{2.664 + 0}{0.2(1.57 \cdot 10^{-4})4\pi(125 \cdot 10^{-6})} \\ &= 5.41 \cdot 10^7 \text{ s/kg}. \end{aligned}$$

The chemical kinetic resistance is calculated from Eqn. 14.31:

$$\begin{aligned} R_{\text{kin}} &= \frac{\nu_I R_u T_s}{4\pi r_s^2 M W_{\text{mix}} k_c P} \\ &= \frac{2.664(8315)1800}{4\pi(125 \cdot 10^{-6})^2 30(13.9)101,325} \\ &= 4.81 \cdot 10^6 \text{ s/kg}. \end{aligned}$$

From the above calculations, we see that  $R_{\text{diff}}$  is slightly more than 10 times the value of  $R_{\text{kin}}$ ; thus, the combustion is **nearly diffusion controlled**. We can now estimate  $\dot{m}_C$  using Eqn. 14.30, and then find  $Y_{O_2,s}$  to get an improved value for  $R_{\text{diff}}$ , and iterate if necessary to get an improved value for  $\dot{m}_C$ :

$$\dot{m}_C = \frac{Y_{O_2,\infty}}{R_{\text{kin}} + R_{\text{diff}}} = \frac{0.233}{4.81 \cdot 10^6 + 5.41 \cdot 10^7}$$

$$\dot{m}_C = 3.96 \cdot 10^{-9} \text{ kg/s} \quad \text{1st iteration.}$$

From the circuit diagram (Fig. 14.5),

$$\begin{aligned} Y_{O_2,s} - 0 &= \dot{m}_C R_{\text{kin}} \\ &= 3.96 \cdot 10^{-9}(4.81 \cdot 10^6) \\ &= 0.019 \text{ or } 1.9\%. \end{aligned}$$

Thus,

$$\begin{aligned} R_{\text{diff}} &= \frac{2.664 + 0.019}{2.664} (R_{\text{diff}})_{\text{1st iter}} \\ &= 1.007(5.41 \cdot 10^7) = 5.45 \cdot 10^7 \text{ s/kg.} \end{aligned}$$

Since  $R_{\text{diff}}$  changes by less than 1 percent, no further iteration is required.

#### Comment

This example shows how the circuit analog provides a simple calculation procedure with easy iteration. We also see that an appreciable  $\text{O}_2$  concentration exists at the surface because of the non-negligible kinetic resistance. It should be emphasized that the one-film model, as developed, is not an accurate representation of the actual chemical processes occurring, but, rather, serves as a pedagogical tool to illuminate key concepts with a minimum of complexity.

**Energy Conservation** So far in our analysis we have treated the surface temperature  $T_s$  as a known parameter; however, this temperature cannot be any arbitrary value but is a unique value that depends upon energy conservation at the particle surface. As we will see, the controlling surface energy balance depends strongly on the burning rate, i.e., the energy and mass-transfer processes are coupled.

Figure 14.6 illustrates the various energy fluxes associated with the burning carbon surface. Writing the surface energy balance yields

$$\dot{m}_{\text{C}} h_{\text{C}} + \dot{m}_{\text{O}_2} h_{\text{O}_2} - \dot{m}_{\text{CO}_2} h_{\text{CO}_2} = \dot{Q}_{s-i} + \dot{Q}_{s-f} + \dot{Q}_{\text{rad}}. \quad (14.34)$$


Since we assume combustion occurs in a steady state, there is no heat conducted into the particle interior; thus,  $\dot{Q}_{s-i} = 0$ . Following the development in Chapter 10 (Eqns. 10.55–10.60), it is easy to show that the left-hand-side of Eqn. 14.34 is simply  $\dot{m}_{\text{C}} \Delta h_c$ , where  $\Delta h_c$  is the carbon–oxygen reaction heat of combustion ( $\text{J/kg}_c$ ). Thus, Eqn. 14.34 becomes

$$\dot{m}_{\text{C}} \Delta h_c = -k_g 4\pi r_s^2 \frac{dT}{dr} \Big|_{r_s} + \varepsilon_s 4\pi r_s^2 \sigma (T_s^4 - T_{\text{sur}}^4). \quad (14.35)$$

To obtain an expression for the gas-phase temperature gradient at the surface requires that we write an energy balance within the gas phase and solve for the temperature distribution. Since we have already done this for our droplet evaporation model, we simply use the result from Chapter 10 (Eqn. 10.10) substituting  $T_s$  for  $T_{\text{boil}}$ :

$$\frac{dT}{dr} \Big|_{r_s} = \frac{Z\dot{m}_{\text{C}}}{r_s^2} \left[ \frac{(T_{\infty} - T_s) \exp(-Z\dot{m}_{\text{C}}/r_s)}{1 - \exp(-Z\dot{m}_{\text{C}}/r_s)} \right], \quad (14.36)$$

where  $Z \equiv c_{pg}/(4\pi k_g)$ . Substituting Eqn. 14.36 into Eqn. 14.35 yields, upon rearrangement, our final result,

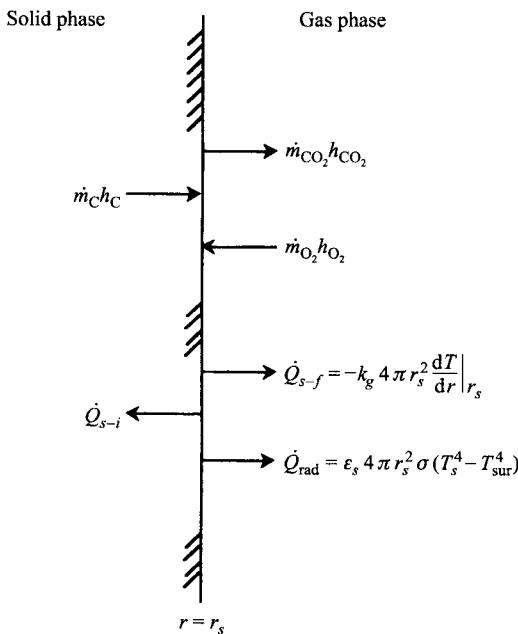

**Figure 14.6** Energy flows at surface of a spherical carbon particle burning in air.

$$\dot{m}_C \Delta h_c = \dot{m}_C c_{pg} \left[ \frac{\exp\left(\frac{-\dot{m}_C c_{pg}}{4\pi k_g r_s}\right)}{1 - \exp\left(\frac{-\dot{m}_C c_{pg}}{4\pi k_g r_s}\right)} \right] (T_s - T_\infty) + \epsilon_s 4\pi r_s^2 \sigma (T_s^4 - T_{sur}^4). \quad (14.37)$$

Note that Eqn. 14.37 contains two unknowns,  $\dot{m}_C$  and  $T_s$ . To effect the complete solution of the carbon burning problem requires the simultaneous solution of Eqns. 14.37 and 14.30. Since both of these equations are nonlinear, an iterative method is probably the best approach to their solution. Note too that, in the intermediate regime between diffusional and kinetic control,  $Y_{O_2,s}$  also becomes an unknown. Thus, Eqn. 14.21 will have to be added to the equation set.

#### Example 14.2

In the combustion of solid fuels, radiation usually plays a key role. Estimate the gas temperature required to keep a 250- $\mu\text{m}$ -diameter burning carbon particle at 1800 K for (i) when there is no radiation ( $T_s = T_{sur}$ ), and (ii) when the particle radiates as a blackbody to surroundings at 300 K. Conditions are identical to those presented in Example 14.1.

**Solution**

The surface energy balance (Eqn. 14.37) can be used to determine  $T_\infty$  for the two cases. We will estimate the gas-phase properties using those of air at 1800 K:

$$c_{pg}(1800 \text{ K}) = 1286 \text{ J/kg-K} \quad (\text{Appendix Table C.1})$$

$$k_g(1800 \text{ K}) = 0.12 \text{ W/m-K} \quad (\text{Appendix Table C.1}).$$

Since the particle is a blackbody, the emissivity,  $\varepsilon_s$ , is unity, and the heat of combustion for carbon,  $\bar{h}_{f,\text{CO}_2}^\theta / MW_C$  is

$$\Delta h_c = 3.2765 \cdot 10^7 \text{ J/kg} \quad (\text{Appendix Table A.2}).$$

i. In the absence of radiation, Eqn. 14.37 can be rearranged to solve for  $T_\infty$ , as

$$T_\infty = T_s - \frac{\Delta h_c}{c_{pg}} \frac{\left[ 1 - \exp\left(\frac{-\dot{m}_C c_{pg}}{4\pi k_g r_s}\right) \right]}{\exp\left(\frac{-\dot{m}_C c_{pg}}{4\pi k_g r_s}\right)}$$

and evaluated using the burning rate ( $\dot{m}_C = 3.96 \cdot 10^{-9} \text{ kg/s}$ ) from Example 14.1:

$$T_\infty = 1800 - \frac{3.2794 \cdot 10^7}{1286} \frac{\left[ 1 - \exp\left(\frac{-3.96 \cdot 10^{-4}(1286)}{4\pi(0.12)125 \cdot 10^{-6}}\right) \right]}{\exp\left(\frac{-3.96 \cdot 10^{-4}(1286)}{4\pi(0.12)125 \cdot 10^{-6}}\right)}$$

$$= 1800 - 698$$

$$T_\infty = 1102 \text{ K} \quad \text{without radiation.}$$

ii. With surroundings at 300 K, the radiation loss is

$$\begin{aligned} \dot{Q}_{\text{rad}} &= \varepsilon_s 4\pi r_s^2 \sigma (T_s^4 - T_{\text{sur}}^4) \\ &= (1.0)4\pi(125 \cdot 10^{-6})^2 5.67 \cdot 10^{-8} (1800^4 - 300^4) \\ &= 0.1168 \text{ W}. \end{aligned}$$

The chemical heat release is

$$\begin{aligned} \dot{m}_C \Delta h_c &= 3.96 \cdot 10^{-4} (3.2765 \cdot 10^7) \\ &= 0.1299 \text{ W}. \end{aligned}$$

The energy conducted from the particle surface is then

$$\dot{Q}_{\text{cond}} = \dot{m}_C \Delta h_c - \dot{Q}_{\text{rad}} = \dot{m}_C c_{pg} \frac{\exp\left(\frac{-\dot{m}_C c_{pg}}{4\pi k_g r_s}\right)}{1 - \exp\left(\frac{-\dot{m}_C c_{pg}}{4\pi k_g r_s}\right)} (T_s - T_\infty).$$

Solving for  $T_\infty$  using the numerical values given above yields

$$T_\infty = 1730 \text{ K} \quad \text{with radiation.}$$


#### Comment

We see that the gas temperature needs to be quite high to maintain the 1800 K surface temperature in the presence of radiation.

### Two-Film Model

As the one-film model developed above was intended to be more instructive than realistic, we now present a model that somewhat more realistically captures the chemical and physical processes involved in carbon combustion, at least for some conditions. In particular, the two-film model has the carbon oxidize to carbon monoxide, rather than carbon dioxide. Since the basic methods employed to develop the two-film model are the same as those for the one-film model, we will be more brief in this section, leaving the gaps to be filled in by the interested reader, or completed as homework assignments.

Figure 14.7 illustrates the species concentration and temperature profiles through the two gas films: one interior to the flame sheet and one exterior. In the two-film model, the carbon surface is attacked by  $\text{CO}_2$  according to the

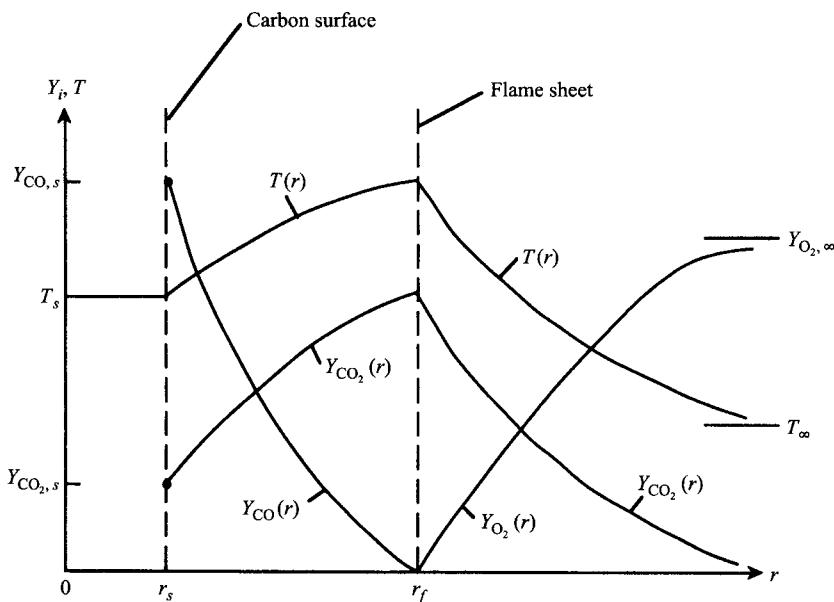

**Figure 14.7** Species mass fractions and temperature profiles for a two-film model of a burning spherical carbon particle.

global reaction R.14.6,  $\text{C} + \text{CO}_2 \rightarrow 2\text{CO}$ . The CO produced at the surface diffuses outward and is consumed at a flame sheet where it meets an inward-diffusing flow of  $\text{O}_2$  in stoichiometric proportions. The global reaction  $\text{CO} + \frac{1}{2}\text{O}_2 \rightarrow \text{CO}_2$  is assumed to be infinitely fast; thus, both CO and  $\text{O}_2$  are identically zero at the flame sheet. The temperature peaks at the flame sheet. Except for the carbon surface reaction, the scenario illustrated in Fig. 14.7 is identical to our previous treatment of droplet combustion in Chapter 10 (cf. Fig. 10.11). The basic assumptions of the one-film model still hold, except as modified by the preceding discussion. Our specific objective now is to find the burning rate  $\dot{m}_{\text{C}}$ .

**Stoichiometry** The mass flowrates of the various species can be related by simple mass balances at the particle surface and at the flame, as illustrated in Fig. 14.8. These are

*At the surface*


$$\dot{m}_{\text{C}} = \dot{m}_{\text{CO}} - \dot{m}_{\text{CO}_2,i} \quad (14.38\text{a})$$

*At the flame*

$$\dot{m}_{\text{CO}} = \dot{m}_{\text{CO}_2,i} - \dot{m}_{\text{CO}_2,o} - \dot{m}_{\text{O}_2} \quad (14.38\text{b})$$

or


$$\dot{m}_{\text{C}} = \dot{m}_{\text{CO}_2,o} - \dot{m}_{\text{O}_2}. \quad (14.38\text{c})$$

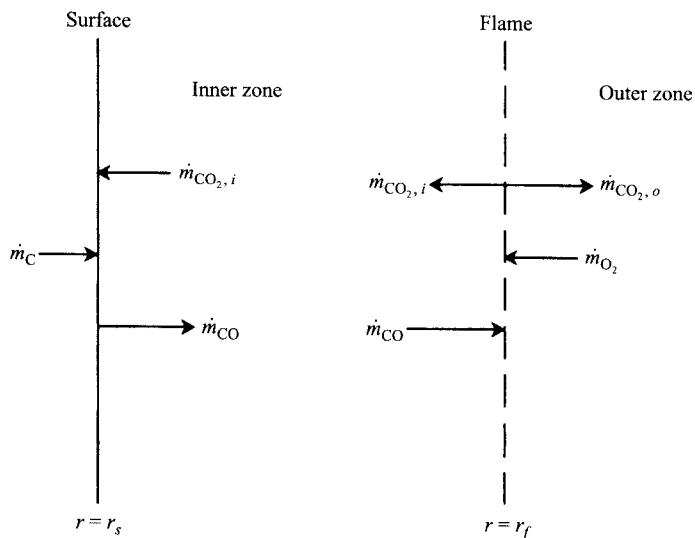


**Figure 14.8** Species mass flowrates at the carbon surface and the flame sheet.

Using the stoichiometric relations at the surface and at the flame, all of the flowrates can be related to the burning rate,  $\dot{m}_C$ :

*At the surface*

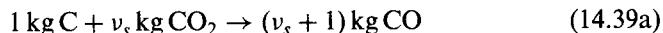

*At the flame*

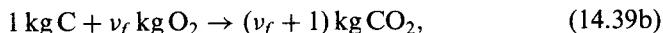

where

$$v_s = \frac{44.01}{12.01} = 3.664 \quad (14.40\text{a})$$

and

$$v_f = v_s - 1. \quad (14.40\text{b})$$

Thus, the magnitudes of the flowrates are

$$\dot{m}_{\text{CO}_2,i} = v_s \dot{m}_C, \quad (14.41\text{a})$$

$$\dot{m}_{\text{O}_2} = v_f \dot{m}_C = (v_s - 1) \dot{m}_C, \quad (14.41\text{b})$$

$$\dot{m}_{\text{CO}_2,o} = (v_f + 1) \dot{m}_C = v_s \dot{m}_C. \quad (14.41\text{c})$$

**Species Conservation** We proceed by applying Fick's law to obtain differential equations describing the distribution of  $\text{CO}_2$  in both the inner and outer zones and, similarly, an equation for the inert species ( $\text{N}_2$ ). These are

*Inner zone  $\text{CO}_2$*

$$\dot{m}_C = \frac{4\pi r^2 \rho D}{(1 + Y_{\text{CO}_2}/v_s)} \frac{d(Y_{\text{CO}_2}/v_s)}{dr}, \quad (14.42\text{a})$$

with boundary conditions

$$Y_{\text{CO}_2}(r_s) = Y_{\text{CO}_2,s} \quad (14.42\text{b})$$

$$Y_{\text{CO}_2}(r_f) = Y_{\text{CO}_2,f}. \quad (14.42\text{c})$$

*Outer zone  $\text{CO}_2$*

$$\dot{m}_C = \frac{-4\pi r^2 \rho D}{(1 - Y_{\text{CO}_2}/v_s)} \frac{d(Y_{\text{CO}_2}/v_s)}{dr}, \quad (14.43\text{a})$$

with boundary conditions

$$Y_{\text{CO}_2}(r_f) = Y_{\text{CO}_2,f} \quad (14.43\text{b})$$

$$Y_{\text{CO}_2}(r \rightarrow \infty) = 0. \quad (14.43\text{c})$$

*Inert* ( $N_2$ )

$$\dot{m}_{\text{C}} = \frac{4\pi r^2 \rho \mathcal{D}}{Y_{\text{I}}} \frac{d Y_{\text{I}}}{dr}, \quad (14.44\text{a})$$

with boundary conditions

$$Y_{\text{I}}(r_f) = Y_{\text{I},f} \quad (14.44\text{b})$$

$$Y_{\text{I}}(r \rightarrow \infty) = Y_{\text{I},\infty}. \quad (14.44\text{c})$$

Integration of these three equations (Eqns. 14.42–14.44) between the limits indicated by the boundary conditions yields the following three algebraic equations involving five unknowns— $\dot{m}_{\text{C}}$ ,  $Y_{\text{CO}_2,s}$ ,  $Y_{\text{CO}_2,f}$ ,  $Y_{\text{I},f}$ , and  $r_f$ :

$$\dot{m}_{\text{C}} = 4\pi \left( \frac{r_s r_f}{r_f - r_s} \right) \rho \mathcal{D} \ln \left[ \frac{1 + Y_{\text{CO}_2,f}/v_s}{1 + Y_{\text{CO}_2,s}/v_s} \right], \quad (14.45)$$

$$\dot{m}_{\text{C}} = -4\pi r_f \rho \mathcal{D} \ln(1 - Y_{\text{CO}_2,f}/v_s), \quad (14.46)$$

$$Y_{\text{I},f} = Y_{\text{I},\infty} \exp(-\dot{m}_{\text{C}}/(4\pi r_f \rho \mathcal{D})). \quad (14.47)$$

From  $\sum Y_i = 1$ , we also know that

$$Y_{\text{CO}_2,f} = 1 - Y_{\text{I},f}. \quad (14.48)$$

The remaining equation for closure results from writing a chemical kinetic expression involving  $\dot{m}_{\text{C}}$  and  $Y_{\text{CO}_2,s}$ , which is done in the next section.

**Surface Kinetics** The reaction  $\text{C} + \text{CO}_2 \rightarrow 2\text{CO}$  is first-order in  $\text{CO}_2$  concentration [9] and thus the rate is expressed in a form identical to that developed for the one-film model reaction:

$$\dot{m}_{\text{C}} = 4\pi r_s^2 k_c \frac{MW_{\text{C}} MW_{\text{mix}}}{MW_{\text{CO}_2}} \frac{P}{R_u T_s} Y_{\text{CO}_2,s}, \quad (14.49)$$

where

$$k_c (\text{m/s}) = 4.016 \cdot 10^8 \exp \left[ \frac{-29,790}{T_s (\text{K})} \right], \quad (14.50)$$

as given by Mon and Amundson [9]. Equation 14.49 can be written more compactly as

$$\dot{m}_{\text{C}} = K_{\text{kin}} Y_{\text{CO}_2,s}, \quad (14.51)$$

where

$$K_{\text{kin}} = 4\pi r_s^2 k_c \frac{MW_{\text{C}} MW_{\text{mix}}}{MW_{\text{CO}_2}} \frac{P}{R_u T_s}. \quad (14.52)$$

**Closure** To present a tractable solution to our problem, Eqns. 14.45–14.48 can be manipulated to eliminate all variables but  $\dot{m}_C$  and  $Y_{CO_2,s}$ ; i.e.,

$$\dot{m}_C = 4\pi r_s \rho D \ln(1 + B_{CO_2,m}), \quad (14.53)$$

where

$$B_{CO_2,m} = \frac{2 Y_{O_2,\infty} - [(v_s - 1)/v_s] Y_{CO_2,s}}{v_s - 1 + [(v_s - 1)/v_s] Y_{CO_2,s}}. \quad (14.54)$$

Equation 14.53 can be solved iteratively with Eqn. 14.51 to find  $\dot{m}_C$ . For diffusion-controlled burning,  $Y_{O_2,s}$  is zero and  $\dot{m}_C$  can be evaluated directly from Eqn. 14.53.

To obtain the surface temperature, it is necessary to write and solve energy balances at the surface and at the flame sheet. The procedures are the same as those employed earlier in this chapter and previously in Chapter 10. Determining the surface temperature is left as an exercise.

### Example 14.3

Assuming diffusion-controlled combustion and identical conditions ( $Y_{O_2,\infty} = 0.233$ ), compare the burning rates predicted by the one-film and two-film models.

#### Solution

The burning rates for both the one-film and two-film models are of the form

$$\dot{m}_C = 4\pi r_s \rho D \ln(1 + B_m).$$

For identical conditions, the  $B_m$ s are the only parameters having different values; thus,

$$\frac{\dot{m}_C (\text{two-film})}{\dot{m}_C (\text{one-film})} = \frac{\ln(1 + B_{CO_2,m})}{\ln(1 + B_{O_2,m})},$$

where the transfer numbers  $B_{CO_2,m}$  and  $B_{O_2,m}$  are evaluated from Eqns. 14.54 and 14.25, respectively. For diffusion control, the surface concentrations of  $CO_2$  (two-film model) and  $O_2$  (one-film model) are zero. The transfer numbers are thus evaluated:

$$\begin{aligned} B_{CO_2,m} &= \frac{2 Y_{O_2,\infty} - [(v_s - 1)/v_s] Y_{CO_2,s}}{v_s - 1 + [(v_s - 1)/v_s] Y_{CO_2,s}} \\ &= \frac{2(0.233) - 0}{3.664 - 1 + 0} = 0.175 \end{aligned}$$

and

$$B_{O_2,m} = \frac{Y_{O_2,\infty} - Y_{O_2,s}}{v_I + Y_{O_2,s}} = \frac{0.233 - 0}{2.664 + 0} = 0.0875.$$

The ratio of burning rates is then

$$\frac{\dot{m}_C (\text{two-film})}{\dot{m}_C (\text{one-film})} = \frac{\ln(1 + 0.175)}{\ln(1 + 0.087)} = 1.92$$

**Comment**

It is interesting to note that this difference in burning rates is not a result of the type of model, *per se*, but, rather, is a result of the reaction assumed to occur at the gasifying carbon surface. We can show that this is true by assuming that CO, rather than CO<sub>2</sub>, is the product formed at the surface in a one-film model. In this case,  $v_1 = 31.999/24.01 = 1.333$  and  $B_m$  then becomes 0.175, which is identical to the two-film model. In this case then, the one-film and two-film models predict identical burning rates independent of the fate of the CO produced at the surface and independent of the surface-attacking species (O<sub>2</sub> or CO<sub>2</sub>), as long as the product is CO.

Use the two-film model to estimate the burning rate of a 70-μm-diameter carbon particle burning in air ( $Y_{\text{O}_2,\infty} = 0.233$ ). The surface temperature is 1800 K, and the pressure is 1 atm. Assume the molecular weight of the gaseous mixture at the particle surface is 30 kg/kmol.

**Example 14.4****Solution**

The conditions of this problem are identical to those of Example 14.1, so the gas-phase properties are the same, i.e.,  $\rho = 0.2 \text{ kg/m}^3$  and  $D = 1.57 \cdot 10^{-4} \text{ m}^2/\text{s}$ .

From Eqn. 14.50, the kinetic rate constant for the C–CO<sub>2</sub> reaction is

$$\begin{aligned} k_c &= 4.016 \cdot 10^8 \exp\left[\frac{-29,790}{T_s}\right] \\ &= 4.016 \cdot 10^8 \exp\left[\frac{-29,790}{1800}\right] = 26.07 \text{ m/s.} \end{aligned}$$

The combustion rate can be expressed in terms of the surface CO<sub>2</sub> concentration (Eqns. 14.49 and 14.51):

$$\begin{aligned} \dot{m}_C &= 4\pi r_s^2 k_c \frac{MW_C MW_{\text{mix}}}{MW_{\text{CO}_2}} \frac{P}{R_u T_s} Y_{\text{CO}_{2,s}} \\ &= \frac{4\pi(35 \cdot 10^{-6})^2 (26.07) 12.01(30) 101,325}{44.01(8315) 1800} Y_{\text{CO}_{2,s}} \\ &= 2.22 \cdot 10^{-8} Y_{\text{CO}_{2,s}} \quad (\text{kg/s}). \end{aligned} \tag{I}$$

Equations 14.53 and 14.54 also provide an expression for  $\dot{m}_C$  in terms of  $Y_{\text{CO}_{2,s}}$ :

$$\begin{aligned} \dot{m}_C &= 4\pi r_s \rho D \ln(1 + B) \\ &= 4\pi(35 \cdot 10^{-6}) 0.20 (1.57 \cdot 10^{-4}) \ln(1 + B) \\ &= 1.381 \cdot 10^{-8} \ln(1 + B) \quad (\text{kg/s}) \end{aligned} \tag{II}$$

and

$$\begin{aligned} B &= \frac{2Y_{O_2,\infty} - [(v_s - 1)/v_s]Y_{CO_2,s}}{v_s - 1 + [(v_s - 1)/v_s]Y_{CO_2,s}} \\ &= \frac{2(0.233) - [(3.664 - 1)/3.664]Y_{CO_2,s}}{3.664 - 1 + [(3.664 - 1)/3.664]Y_{CO_2,s}} \\ &= \frac{0.466 - 0.727Y_{CO_2,s}}{2.664 + 0.727Y_{CO_2,s}}. \end{aligned} \quad (\text{III})$$

We now iteratively solve Eqns. I, II, and III for  $\dot{m}_C$ ,  $B$ , and  $Y_{CO_2,s}$ . We start the iteration assuming  $Y_{CO_2,s}$  is zero, the diffusion-controlled limit:

Iteration	$Y_{CO_2,s}$	$B$	$\dot{m}_C$ (kg/s)
1	0	0.1749	$2.225 \cdot 10^{-9}$
2	0.1003	0.1436	$1.853 \cdot 10^{-9}$
3	0.0835	0.1488	$1.915 \cdot 10^{-9}$
4	0.0863	0.1479	$1.905 \cdot 10^{-9}$

Given two-significant-figure accuracy, the solution converges to

$$\dot{m}_C = 1.9 \cdot 10^{-9} \text{ kg/s}$$

#### Comment

Ignoring chemical kinetics at the surface (cf. Example 14.1) results in overestimating the burning rate by about 16.8 percent ( $= 100\%(2.22 - 1.9)/1.9$ ). A lower surface temperature (or lower pressure) would make kinetics even more important. Kinetics also becomes increasingly important as the particle diameter decreases as it burns out.

### Particle Burning Times

For diffusion-controlled burning, it is a simple matter to find particle burning times. The procedure follows directly from those used in Chapters 3 and 10 to establish the  $D^2$  law and will not be repeated here. The particle diameter can be expressed as a function of time as follows:

$$D^2(t) = D_0^2 - K_B t, \quad (14.55)$$

where the burning rate constant,  $K_B$ , is given by

$$K_B = \frac{8\rho D}{\rho_C} \ln(1 + B). \quad (14.56)$$

Setting  $D = 0$  in Eqn. 14.55 gives the particle lifetime,

$$t_C = D_0^2 / K_B. \quad (14.57)$$

Depending whether a one-film or two-film analysis is employed, the transfer number  $B$  is either  $B_{O,m}$  (Eqn. 14.25) or  $B_{CO_2,m}$  (Eqn. 14.54), with the surface mass fractions set to zero. Note the appearance of two densities in Eqn. 14.56, where  $\rho$  applies to the gas phase and  $\rho_C$  to the solid carbon.

Thus far, our analyses have assumed a quiescent gaseous medium. To take into account the effects of a convective flow over a burning carbon particle, the *film-theory* analysis of Chapter 10 can be applied. For diffusion-controlled conditions with convection, the mass burning rates are augmented by the factor  $Sh/2$ , where  $Sh$  is the Sherwood number and plays the same role for mass transfer as the Nusselt number does for heat transfer. For unity Lewis number,  $Sh = Nu$ ; thus,

$$(\dot{m}_{C,diff})_{\text{with convection}} = \frac{Nu}{2} (\dot{m}_{C,diff})_{\text{without convection}}. \quad (14.58)$$

The Nusselt number can be evaluated using Eqn. 10.78 as a reasonable approximation.

Estimate the lifetime of a 70- $\mu\text{m}$ -diameter carbon particle assuming diffusional combustion at the conditions given in Example 14.4. Assume the carbon density is 1900 kg/m<sup>3</sup>.

### Example 14.5

#### Solution

The particle lifetime is straightforwardly calculated from Eqn. 14.57. The burning rate constant (Eqn. 14.56) is evaluated as

$$\begin{aligned} K_B &= \frac{8\rho D}{\rho_C} \ln(1 + B_{CO_2,m}) \\ &= \frac{8(0.20)1.57 \cdot 10^{-4}}{1900} \ln(1 + 0.1749) \\ &= 2.13 \cdot 10^{-8} \text{ m}^2/\text{s}, \end{aligned}$$

where the value for the transfer number  $B_{CO_2,m}$  is that for the first iteration in Example 14.4. The lifetime is evaluated as

$$t_C = D_0^2/K_B = (70 \cdot 10^{-6})^2/2.13 \cdot 10^{-8}$$

$$t_C = 0.23 \text{ s}$$

#### Comment

This value seems reasonable in that residence times in coal-fired boilers are of the order of a few seconds and the upper size limit of pulverized coal is about 70  $\mu\text{m}$ . It is important to note that in a real boiler  $Y_{O_2,\infty}$  does not remain constant, but decreases as the combustion process runs its course, which tends to increase particle combustion times. Opposing this effect, however, is the augmentation of burning rates by convection, which is present in real combustors. Note also that heterogeneous chemical kinetics controls the latter stages of burnout as the particle diameter decreases. Under

these conditions, the particle surface temperature becomes quite important, being greatly influenced by the radiation field within the combustor.

## COAL COMBUSTION

As mentioned at the outset of this chapter, the subject of coal combustion has a huge literature associated with it. Our goal here is merely to describe the physical and chemical nature of coal and some of the peculiarities of coal combustion.

A primary factor complicating a description of coal and its combustion is the wide variability of its composition. For example, anthracite coal mined in Pennsylvania has a much different composition than a Montana bituminous coal. Coal is a sedimentary rock formed principally from organic matter, but includes many minerals of different types and in different proportions. Table 14.2 shows the so-called **proximate analysis** of coal where the constituents of the rock are grouped into four categories. From this table, we see that a large portion of the coal may be noncombustible (moisture and mineral matter). The volatiles and char contribute to the useful energy value of the coal, while the mineral matter produces an ash and/or slag, which contributes to operational difficulties (or complexities) and to environmental problems. The mineral matter typically occurs as inclusions in the carbonaceous rock matrix.

The elemental composition of the “useful” portion of the coal, the so-called dry, mineral-matter-free portion (volatiles + char), also has a widely variable composition, as can be seen in Table 14.3. Such a breakdown is referred to as an **ultimate analysis**. The sulfur and nitrogen contribute to air pollution problems and frequently require removal from the stack gases of utility boilers, as you will see in Chapter 15.

As might be suggested by the heterogeneous nature of coal and the wide variation in its composition, all coals do not burn in the same manner; however, the general scheme is for the moisture to be driven off, followed by the evolution of the volatiles. The volatiles may burn homogeneously in the gas phase or at the coal-particle surface. The coal may swell and become porous as the volatiles are given off. The material left after devolatilization is the char

**Table 14.2** Proximate analysis of coal

Constituent Class	Mass Percentage Range (%) <sup>a</sup>
Moisture	10–30
Volatiles	10–30
Mineral matter	10–30
Char	Balance

<sup>a</sup>These ranges are typical. A particular coal may indeed fall outside of these ranges.

**Table 14.3** Elemental composition of dry, mineral-matter-free coal

Element	Typical Range of Composition (% by mass)
C	65–95
H	2–6
O	2–25
S	< 10
N	1–2

and its associated mineral matter. The char then burns and the mineral matter is transformed into ash, slag, and fine particulate fume in various proportions. The combustion of the char proceeds in a manner suggested by our previous discussion of carbon combustion, although the pore structure of the char can be quite important in the actual process.

---

## OTHER SOLIDS

Wood burning has much in common with coal burning in that the evolution of volatiles and char combustion are both important. A review of wood burning can be found in Tillman *et al.* [10]. Metals that burn heterogeneously include boron, silicon, titanium, and zirconium [11]. Boron has been investigated as a fuel additive for military applications because of its high energy density. The combustion of boron is complicated by the fact that the liquid product of combustion,  $B_2O_3$ , can form an inhibiting layer on the surface of the burning boron. A review of boron combustion can be found in King [12].

---

## SUMMARY

In this chapter, the concept of heterogeneous chemical reactions, i.e., those occurring on or at a surface, was introduced, and the importance of these reactions to solids combustion was discussed. Simple models of carbon combustion were developed to illustrate certain fundamental aspects common to the combustion of most solids. In particular, the idea of chemical kinetic processes occurring in series with diffusional processes was illustrated by developing an electrical circuit analog. Diffusionally controlled and kinetically controlled combustion are key concepts of this chapter and should be clearly understood. Means of estimating carbon-char particle combustion times were presented for diffusionally controlled combustion. The similarities and differences between solid combustion and droplet combustion should be understood by the reader. Finally, ever-so-brief discussions of coal and other solids combustion were presented.

## NOMENCLATURE

$B_m$	Spalding transfer number, Eqns. 14.25 and 14.54
$c_p$	Specific heat (J/kg-K)
$D$	Diameter (m)
$D$	Mass diffusivity ( $\text{m}^2/\text{s}$ )
$h$	Enthalpy (J/kg)
$k, k_c$	Thermal conductivity ( $\text{W}/(\text{m}\cdot\text{K})$ ) or kinetic rate constant (various units)
$K_B$	Burning rate constant ( $\text{m}^2/\text{s}$ )
$K_{\text{kin}}$	Parameter defined in Eqns. 14.22 and 14.52
$Le$	Lewis number
$\dot{m}$	Mass flowrate (kg/s)
$\dot{m}''$	Mass flux (kg/s-m <sup>2</sup> )
$MW$	Molecular weight (kg/kmol)
$Nu$	Nusselt number
$P$	Pressure (Pa)
$\dot{Q}$	Heat-transfer rate (W)
$r$	Radius or radial coordinate (m)
$R$	Mass-transfer resistance (s/kg)
$\mathfrak{R}$	Reaction rate (kg/s-m <sup>2</sup> )
$R_u$	Universal gas constant (J/kmol-K)
$Sh$	Sherwood number
$t$	Time (s)
$t_C$	Carbon particle lifetime (s)
$T$	Temperature (K)
$Y$	Mass fraction (kg/kg)
$Z$	Parameter in Eqn. 14.36, $c_{pg}/(4\pi k_g)$

### Greek Symbols

$\Delta h_c$	Heat of combustion (J/kg)
$\varepsilon$	Emissivity
$\nu$	Mass stoichiometric coefficient
$\rho$	Density
$\sigma$	Stefan–Boltzmann constant ( $\text{W}/(\text{m}^2\cdot\text{K}^4)$ )

### Subscripts

cond	Conduction
diff	Diffusion
<i>f</i>	Flame
<i>g</i>	Gas
<i>i</i>	Interior
I	One-film model or inert
mix	Mixture
<i>o</i>	Outward or exterior
rad	Radiation

*s*      Surface  
sur    Surroundings  
 $\infty$     Freestream

#### *Other Notation*

[*X*]    Molar concentration of *X* (kmol/m<sup>3</sup>)

---

## REFERENCES

1. Stultz, S. C., and Kitto, J. B. (eds.), *Steam: Its Generation and Use*, 40th Ed., Babcock & Wilcox, Barberton, OH, 1992.
2. Radovanovic, M. (ed.), *Fluidized Bed Combustion*, Hemisphere, Washington, DC, 1986.
3. Gardiner, W. C., Jr., *Rates and Mechanisms of Chemical Reactions*, Benjamin, Menlo Park, CA, 1972.
4. Smith, I. W., "The Combustion Rates of Coal Chars: A Review," *Nineteenth Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, p. 1045, 1983.
5. Laurendeau, N. M., "Heterogeneous Kinetics of Coal Char Gasification and Combustion," *Progress in Energy and Combustion Science*, 4: 221–270 (1978).
6. Mulcahy, M. F. R., and Smith, I. W., "Kinetics of Combustion of Pulverized Fuel: Review of Theory and Experiment," *Reviews of Pure and Applied Chemistry*, 19: 81–108 (1969).
7. Caram, H. S., and Amundson, N. R., "Diffusion and Reaction in a Stagnant Boundary Layer about a Carbon Particle," *Industrial Engineering Chemistry Fundamentals*, 16(2): 171–181 (1977).
8. Simons, G. A., "The Role of Pore Structure in Coal Pyrolysis and Gasification," *Progress in Energy and Combustion Science*, 9: 269–290 (1983).
9. Mon, E., and Amundson, N. R., "Diffusion and Reaction in a Stagnant Boundary Layer about a Carbon Particle. 2. An Extension," *Industrial Engineering Chemistry Fundamentals*, 17(4): 313–321 (1978).
10. Tillman, D. A., Amadeo, J. R., and Kitto, W. D., *Wood Combustion, Principles, Processes, and Economics*, Academic Press, New York, 1981.
11. Glassman, I., *Combustion*, 2nd Ed., Academic Press, Orlando, FL, 1987.
12. King, M. K., "Ignition and Combustion of Boron Particles and Clouds," *Journal of Spacecraft*, 19(4): 294–306 (1982).

## QUESTIONS AND PROBLEMS

- 14.1** List and define all of the bold-faced words in Chapter 14.
- 14.2** A. Determine the reaction rates in  $\text{kg}_C/\text{m}^2\text{-s}$  for the following reactions for surface temperatures of 500, 1000, 1500, and 2000 K:



where

$$k_1 = 3.007 \cdot 10^5 \exp(-17,966/T_s) [=] \text{m/s}$$

$$k_2 = 4.016 \cdot 10^8 \exp(-29,790/T_s) [=] \text{m/s}.$$

Assume unity mass fractions for  $Y_{\text{O}_2,s}$  and  $Y_{\text{CO}_2,s}$ .

- B. Determine the ratio  $\mathfrak{R}_1/\mathfrak{R}_2$  for the same temperatures. Discuss.
- 14.3\*** Use the one-film model to determine burning fluxes ( $= \dot{m}_C/4\pi r_s^2$ ) for carbon particles with radii of 500, 50 and  $5\text{ }\mu\text{m}$  burning in air at 1 atm. Assume a surface temperature of 1500 K and that the kinetic rate constant,  $k_c$ , can be approximated as  $3 \cdot 10^5 \exp(-17,966/T_s)$  with units of m/s. Assume the mixture molecular weight at the surface is 29 kg/kmol. In which combustion regime, diffusional controlled, kinetically controlled, or intermediate, does the burning occur for each particle size?
- 14.4\*** Use the one-film model to determine the surface temperature of a 1-mm-diameter carbon particle burning in air ( $Y_{\text{O}_2,\infty} = 0.233$ ). Both the air and the surroundings are at 300 K. Assume diffusional control and  $\varepsilon_s = 1$ . Is diffusional control a good assumption? Discuss.
- 14.5** Estimate the lifetime of the carbon particle in problem 14.4.
- 14.6** Explain why Eqns. 14.55 and 14.56 apply only for diffusional controlled combustion. How would you find the droplet lifetime if diffusional controlled combustion does not prevail?
- 14.7\*** Use the two-film model to determine the burning rate of a  $10\text{-}\mu\text{m}$ -diameter carbon particle burning in air ( $Y_{\text{O}_2,\infty} = 0.233$ ). Assume a surface temperature of 2000 K. Is the burning kinetically or diffusional controlled?
- 14.8** Determine the influence of the freestream oxygen mole fraction on the burning times of 1-mm-diameter carbon particles. Assume diffusional control. Let  $Y_{\text{O}_2,\infty} = 0.1165, 0.233$ , and  $0.466$ . Assume a surface temperature of 2000 K.
- 14.9** Fill in the missing steps in the development of the two-film model.

| \*Indicates required use of computer.

- 14.10** Rederive the two-film solution treating  $Y_{\text{CO}_2,\infty}$  as a parameter, rather than setting it equal to zero as was done in the Chapter 14 development.
- 14.11** Derive an expression to allow evaluation of the surface temperature for the two-film problem. Note that the reaction at the surface is endothermic and that heat will be conducted from the flame to the surface. Use the Chapter 10 development as a guide.
- 14.12** Consider the conditions of problem 14.3.
- Estimate the lifetime of the 500- $\mu\text{m}$ -radius particle. Assume the particle density is  $2100 \text{ kg/m}^3$ .
  - Calculate the ambient gas and surroundings temperature. Assume  $T_\infty = T_{\text{sur}}$ .
- 14.13** Estimate the burning rate ( $\text{kg/s}$ ) of a carbon particle (diameter =  $50 \mu\text{m}$ ) in air ( $Y_{\text{O}_2,\infty} = 0.233$ ) at  $P = 1 \text{ atm}$ . Assume the particle temperature is  $T_s = 1500 \text{ K}$ , the kinetic rate constant is  $k_c = 1.9 \text{ m/s}$ , and mean molecular weight of the gas at the particle surface is  $30 \text{ kg/kmol}$ . Estimate the diffusion coefficient using the value for  $\text{CO}_2$  in  $\text{N}_2$  given in Appendix Table D.1, being sure to correct for temperature. Which combustion regime prevails? If the burning rate were constant, independent of particle diameter, how long would it take to completely burn this particle? Assume the density of the particle is  $2300 \text{ kg/m}^3$ .

# 15

## Pollutant Emissions

---

### OVERVIEW

Control of pollutant emissions is a major factor in the design of modern combustion systems. Pollutants of concern include particulate matter, such as soot, fly ash, metal fumes, various aerosols, etc.; the sulfur oxides,  $\text{SO}_2$  and  $\text{SO}_3$ ; unburned and partially burned hydrocarbons, such as aldehydes; oxides of nitrogen,  $\text{NO}_x$ , which consist of  $\text{NO}$  and  $\text{NO}_2$ ; carbon monoxide; and greenhouse gases such as  $\text{N}_2\text{O}$ , but particularly  $\text{CO}_2$ . Table 15.1 summarizes general areas of current concern and the various combustion-generated pollutants associated with each. Early concerns with air pollution focused on the visible particulate emissions from industrial processes and stationary power generation. As was shown in Chapter 1, dramatic reductions in particulate emissions in the United States were achieved, starting in 1950 and leveling out in about 1980. In the 1950s, it became clear that the photochemical smog in the Los Angeles basin was primarily the result of automobile emissions of unburned hydrocarbons and  $\text{NO}_x$  [4]. Emission controls on vehicles were instituted in California in the 1960s, and national air quality standards were set in the federal Clean Air Act of 1963 for a variety of pollutants. Amendments to the Clean Air Act in 1970, 1977, and 1990 have generally imposed stricter standards and have brought more and more sources under scrutiny. In general, California emission standards have been more stringent than federal standards, and California frequently leads the nation in subjecting new sources to control. Other major industrialized nations also have adopted stringent emission standards and implemented emission controls.

This chapter takes a somewhat different approach than previous ones, being more descriptive and less theoretical. All of the theoretical concepts necessary to understanding this chapter have been previously developed.

**Table 15.1** Combustion-generated or related air pollution concerns

Concern (International Treaty/U.S. Regulation)	Combustion-Generated or Related Species
Local/Regional Air Quality (National Ambient Air Quality Standards [1])	Criteria pollutants: particles ( $PM_{10}$ ), <sup>a</sup> $O_3$ , $NO_2$ , $SO_2$ , CO, lead
Air Toxics/Hazardous Air Pollutants [2] (1990 Clean Air Act Amendments)	189 Substances: selected aliphatic, aromatic, and polycyclic aromatic hydrocarbons; selected halogenated hydrocarbons; various oxygenated organics; metals; and other compounds
Greenhouse Effect/Global Warming [3] (Kyoto Protocol, 1997)	$CO_2$ , $CH_4$ , $N_2O$ , stratospheric $H_2O$ , tropospheric and stratospheric $O_3$ , C (soot), sulfates <sup>b</sup>
Stratospheric Ozone Destruction [3] (Montreal Protocol, 1987)	$CH_4$ , $N_2O$ , $CH_3Cl$ , $CH_3Br$ , stratospheric $H_2O$ , stratospheric $O_3$

<sup>a</sup> $PM_{10}$  designates particles having aerodynamic diameters equal to or less than  $10\ \mu m$ .

<sup>b</sup>Sulfates ( $SO_2/SO_4^{2-}$ ) act as anti-greenhouse gases.

Also, much of Chapter 15 is specific to particular devices. We begin our discussion with a brief review of some of the consequences of combustion-generated pollutants, followed by a discussion of the many ways emissions are quantified. The remainder of the chapter is concerned with the origins of pollutants from premixed and nonpremixed systems.

## EFFECTS OF POLLUTANTS

Primary air pollutants (those emitted directly from the source) and secondary pollutants (those formed via reactions involving primary pollutants in the atmosphere) affect our environment and human health in many ways. Seinfeld [5] indicates four principal effects of air pollutants in the troposphere:

1. Altered properties of the atmosphere and precipitation.
2. Harm to vegetation.
3. Soiling and deterioration of materials.
4. Potential increase of morbidity (sickness) and mortality in humans.

Each of these effects is briefly discussed below.

Altered properties of the atmosphere affecting local areas include reduced visibility, resulting from the presence of carbon-based particulate matter, sulfates, nitrates, organic compounds, and nitrogen dioxide; increased fog formation and precipitation, resulting from high concentrations of  $SO_2$  that form sulfuric acid droplets, which then serve as condensation nuclei; reduced solar



radiation; and altered temperature and wind distributions. On a larger scale, greenhouse gases (see Table 15.1) may alter global climates. References [3, 6–9] provide an introduction to this fascinating, technically complex, and politically charged subject. Also, acid rain, produced from  $\text{SO}_x$  and  $\text{NO}_x$  emissions, affects lakes and susceptible soils [10–12].

Vegetation is harmed by the phytotoxins  $\text{SO}_2$ , peroxyacetyl nitrate (PAN),  $\text{C}_2\text{H}_4$ , and others. Phytotoxins destroy chlorophyll and disrupt photosynthesis.


Particulate matter soils clothing, buildings, and other structures, creating not only a reduced aesthetic quality, but also additional cleaning costs over pollution-free environments. Acid and alkaline particles—in particular, those containing sulfur—corrode paint, masonry, electrical contacts, and textiles, while ozone severely deteriorates rubber.

Because of the difficulty of conducting research on human subjects, and the large number of uncontrolled variables, controversy exists in assessing the effects of pollution on human health. However, it is well known that pollutants can aggravate pre-existing respiratory ailments. The occurrence of both acute and chronic bronchitis, as well as emphysema, can be correlated with  $\text{SO}_2$  and particulate matter. The famous air pollution episodes in Donora, Pennsylvania (1948), London (1952), and New York (1966), resulted in many excess deaths and other effects. These episodes were all consequences of simultaneously high levels of  $\text{SO}_2$  and particles. Secondary pollutants in photochemical smogs cause eye irritation. These pollutants—ozone, organic nitrates, oxygenated hydrocarbons, and photochemical aerosol—are formed primarily by the reactions among nitric oxide and various hydrocarbons. Also, carbon-based particles may contain adsorbed carcinogens. The health effects of carbon monoxide are well documented. Figure 15.1 shows the effects on humans of exposure to various levels of CO. As indicated in Table 15.1, National Ambient Air Quality Standards [1] exist for the six so-called **criteria pollutants** ( $\text{PM}_{10}$ ,  $\text{O}_3$ ,  $\text{NO}_2$ ,  $\text{SO}_2$ , CO, and Pb), while the 1990 Clean Air Act Amendments identify 189 **hazardous air pollutants (HAPs)** for control [2].

In addition to the concerns enumerated here, all of which are related to pollutants in the troposphere—the lowest layer of the atmosphere, emission of  $\text{NO}_x$  into the stratosphere by high-speed civil transport (HSCT) aircraft is also of interest. Concern here is about the catalytic destruction of stratospheric ozone by NO following the reaction mechanism

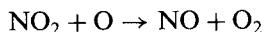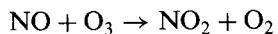

Note that  $\text{O}_3$  is destroyed in the first reaction by NO, while NO is regenerated in the second reaction to enter again into the  $\text{O}_3$ -destruction step. Removal of  $\text{O}_3$  from the stratosphere allows more harmful ultraviolet solar radiation to penetrate to Earth's surface. Recent evidence, however, suggests that sulfate emissions, which result from traces of sulfur in the fuel, complicate this

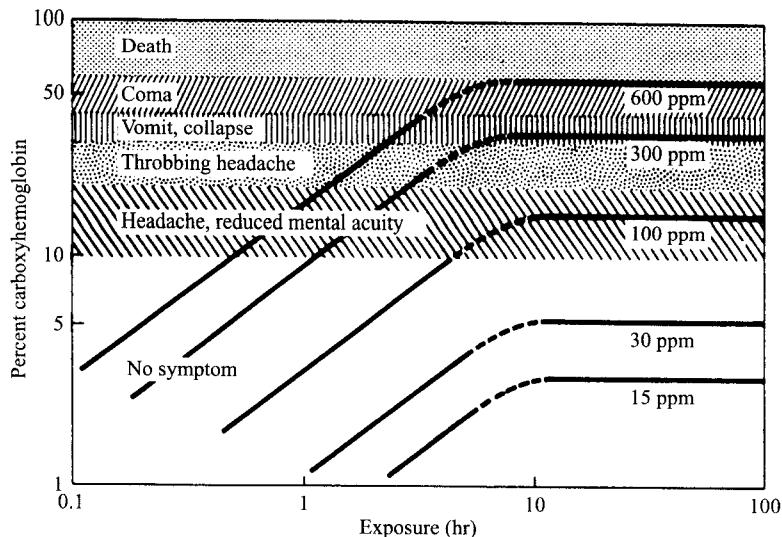

**Figure 15.1** Effects of CO exposure on humans.

SOURCE: From Ref. [5]. © 1986, Reprinted by permission of John Wiley & Sons, Inc.

scenario by decreasing catalytic destruction of ozone by NO, while simultaneously enhancing destruction via reactions involving ClO, BrO, and OH [13, 14]. Development of low- $\text{NO}_x$  combustors for supersonic transport aircraft is presently receiving much attention from NASA and engine manufacturers and is a major factor in determining the future growth of HSCT operations.

## QUANTIFICATION OF EMISSIONS

Emission levels are expressed in many different ways, which can make comparisons difficult and, sometimes, ambiguous. These differences arise from the needs of different technologies; for example, automobile emissions are expressed in grams-per-mile, utility boiler emissions in pounds-per-million BTUs, and many measurements are reported as parts-per-million (by volume) for a stated  $\text{O}_2$  concentration. Although the interconversion among various ways of quantifying emissions is not necessarily difficult, we develop some of them here because they are so frequently useful. Reference [15] provides information additional to that given here.

### Emission Indices

The **emission index** for species  $i$  is the ratio of the mass of species  $i$  to the mass of fuel burned by the combustion process:

$$EI_i = \frac{m_{i,\text{emitted}}}{m_{F,\text{burned}}} \quad (15.1)$$

In principle, the emission index is a dimensionless quantity, like the Reynolds number and other dimensionless groups; however, units such as g/kg, g/lb, etc., are used to avoid working with very small numbers, so caution must be exercised. The emission index is particularly useful in that it unambiguously expresses the amount of pollutant formed per mass of fuel, independent of any dilution of the product stream or efficiency of the combustion process. Thus, the emission index can be thought of as a measure of the efficiency of a particular combustion process in producing a particular pollutant, uncoupled from the specific application.

For the combustion of a hydrocarbon fuel in air, the emission index can be determined from concentration (mole fraction) measurements of the species of interest, together with those of all of the C-containing species. Assuming all of the fuel carbon appears as either  $\text{CO}_2$  or CO, the emission index is expressed

$$EI_i = \left( \frac{\chi_i}{\chi_{\text{CO}} + \chi_{\text{CO}_2}} \right) \left( \frac{x MW_i}{MW_F} \right), \quad (15.2)$$

where the  $\chi$ s are mole fractions;  $x$  is the number of moles of carbon in a mole of fuel,  $\text{C}_x\text{H}_y$ ; and  $MW_i$  and  $MW_F$  are the molecular weights of species  $i$  and the fuel, respectively. Physically, the first bracketed term in Eqn. 15.2 represents the number of moles of  $i$  per mole of carbon originating in the fuel, while the other term provides the necessary conversion of C moles to fuel moles and their respective conversion to mass units. From Eqn. 15.2, it is obvious that the measurement of an emission index is independent of any dilution by air, for example, since all of the measured concentrations appear as a ratio, with the effect of the diluent canceling.

### Example 15.1

A spark-ignition engine is running on a dynamometer test stand and the following measurements of the exhaust products are made:

$$\text{CO}_2 = 12.47\%,$$

$$\text{CO} = 0.12\%,$$

$$\text{O}_2 = 2.3\%,$$

$$\text{C}_6\text{H}_{14} (\text{equivalent}) = 367 \text{ ppm},$$

$$\text{NO} = 76 \text{ ppm}.$$

All concentrations are by volume on a dry basis. The engine is fueled by isoctane. Determine the emission index of the unburned hydrocarbons expressed as equivalent hexane.

#### Solution

If we ignore the fact that not all of the fuel appears as CO and  $\text{CO}_2$ , i.e., unburned hydrocarbons are measured, we can use Eqn. 15.2 directly. The molecular weights of hexane and isoctane are 86.2 and 114.2 kg/kmol, respectively. Thus,

$$EI_{C_6H_{14}} = \left( \frac{\chi_{C_6H_{14}}}{\chi_{CO} + \chi_{CO_2}} \right) \left( \frac{x MW_{C_6H_{14}}}{MW_{C_8H_{18}}} \right)$$

$$= \left( \frac{367 \cdot 10^{-6}}{0.0012 + 0.1247} \right) \frac{8(86.2)}{114.2}$$

$$EI_{C_6H_{14}} = 0.0176 \text{ kg/kg or } 17.6 \text{ g/kg}$$

We can redo this calculation, taking into account the unburned hydrocarbons, by adding  $6\chi_{C_6H_{14}}$  to  $\chi_{CO} + \chi_{CO_2}$  in the denominator of Eqn. 15.2:

$$EI_{C_6H_{14}} = \left( \frac{367 \cdot 10^{-6}}{0.0012 + 0.1247 + 6(367 \cdot 10^{-6})} \right) \frac{8(86.2)}{114.2}$$


$$EI_{C_6H_{14}} = 17.3 \text{ g/kg}$$

This value is lower than the previous value by about 1.7 percent; thus, the amount of fuel carbon appearing as unburned hydrocarbons has only a small effect on the calculated emission indices.

---

## Corrected Concentrations

Concentrations, corrected to a particular level of O<sub>2</sub> in the product stream, are frequently reported in the literature and used in practice. The purpose of correcting to a specific O<sub>2</sub> level is to remove the effect of various degrees of dilution so that true comparisons of emission levels can be made, while still retaining a familiar mole-fraction-like variable. Before discussing corrected concentrations, we need to define “wet” and “dry” concentrations (mole fractions) of an arbitrary species in a combustion product stream, since corrected concentrations may be expressed on either a **wet** or **dry** basis. Assuming stoichiometric or lean combustion with only trace amounts of CO, H<sub>2</sub>, and pollutants, the combustion of one mole of fuel with air (21 percent O<sub>2</sub>, 79 percent N<sub>2</sub> by volume) can be expressed as

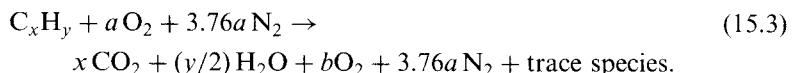

In many applications, moisture is removed from the exhaust sample prior to analysis, yielding so-called dry concentrations, while sometimes the sample is heated and the moisture retained. Assuming all the moisture is removed, the dry mole fraction for species *i* is then defined as

$$\chi_{i,\text{dry}} = \frac{N_i}{N_{\text{mix,dry}}} = \frac{N_i}{x + b + 3.76a}, \tag{15.4a}$$

while the corresponding wet mole fraction is

$$\chi_{i,\text{wet}} = \frac{N_i}{N_{\text{mix,wet}}} = \frac{N_i}{x + y/2 + b + 3.76a}. \quad (15.4b)$$

Using these definitions (Eqn. 15.4) and an atom balance for O atoms, we can find the ratio of the total number of moles in a wet mixture to the total number of moles in a dry mixture:

$$\frac{N_{\text{mix,wet}}}{N_{\text{mix,dry}}} = 1 + \frac{y}{2(4.76a - y/4)}, \quad (15.5)$$

where the oxygen coefficient  $a$  is defined by the measured  $\text{O}_2$  mole fraction as

$$a = \frac{x + (1 + \chi_{\text{O}_2,\text{wet}})y/4}{1 - 4.76\chi_{\text{O}_2,\text{wet}}} \quad (15.6a)$$

or

$$a = \frac{x + (1 - \chi_{\text{O}_2,\text{dry}})y/4}{1 - 4.76\chi_{\text{O}_2,\text{dry}}}. \quad (15.6b)$$

Equation 15.5 can then be used to interconvert wet and dry concentrations, i.e.,

$$\chi_{i,\text{dry}} = \chi_{i,\text{wet}} \frac{N_{\text{mix,wet}}}{N_{\text{mix,dry}}} \quad (15.7)$$

Remember that the above relations were derived assuming stoichiometric or lean mixtures. For rich mixtures, the situation is more complex since CO and  $\text{H}_2$  need to be considered (see Chapter 2 and Ref. [15]).

We return now to the concept of corrected concentrations, in which a “raw” measured mole fraction (wet or dry) is expressed as a mole fraction (wet or dry) corrected to a specific  $\text{O}_2$  mole fraction. An example of this usage is “200 ppm NO corrected to 3 percent  $\text{O}_2$ .” To correct a measured concentration or convert from one  $\text{O}_2$  level to another, one simply applies

$$\chi_i \left( \begin{array}{l} \text{corrected to} \\ \text{O}_2\text{-level 2} \end{array} \right) = \chi_i \left( \begin{array}{l} \text{corrected to} \\ \text{O}_2\text{-level 1} \end{array} \right) \frac{N_{\text{mix,O}_2\text{-level 1}}}{N_{\text{mix,O}_2\text{-level 2}}}, \quad (15.8)$$

where, for wet concentrations,

$$N_{\text{mix,wet}} = 4.76 \left[ \frac{x + (1 + \chi_{\text{O}_2,\text{wet}})y/4}{1 - 4.76\chi_{\text{O}_2,\text{wet}}} \right] + y/4 \quad (15.9a)$$

and, for dry concentrations,

$$N_{\text{mix,dry}} = 4.76 \left[ \frac{x + (1 - \chi_{\text{O}_2,\text{dry}})y/4}{1 - 4.76\chi_{\text{O}_2,\text{dry}}} \right] - y/4. \quad (15.9b)$$

Using the data provided in Example 15.1, convert the given NO concentration to a wet basis.

**Example 15.2****Solution**

The conversion from wet- to dry-basis concentrations is accomplished using Eqn. 15.7. We first calculate the ratio of the total number of moles in a wet mixture to the number of moles in a dry mixture using Eqns. 15.5 and 15.6b:

$$\begin{aligned} a &= \frac{x + (1 - \chi_{O_2, \text{dry}})y/4}{1 - 4.76\chi_{O_2, \text{dry}}} \\ &= \frac{8 + (1 - 0.023)18/4}{1 - 4.76(0.023)} = 13.92 \end{aligned}$$

$$\begin{aligned} \frac{N_{\text{mix,wet}}}{N_{\text{mix,dry}}} &= 1 + \frac{y}{2(4.76a - y/4)} \\ &= 1 + \frac{18}{2[(4.76)13.92 - 18/4]} = 1.146. \end{aligned}$$

The wet NO concentration can now be found as

$$\begin{aligned} \chi_{\text{NO,wet}} &= \chi_{\text{NO,dry}} \frac{N_{\text{mix,dry}}}{N_{\text{mix,wet}}} \\ &= 76 \text{ ppm} \frac{1}{1.146} \\ \chi_{\text{NO,wet}} &= 66.3 \text{ ppm} \end{aligned}$$

Thus, the wet-basis concentration is about 12.7 percent less than the dry-basis value.

**Comment**

From the calculation of the wet-to-dry total moles ratio, we see that the product stream originally contained 12.7 percent H<sub>2</sub>O. Presumably, nearly all of this moisture was removed prior to the gases being analyzed.

In Example 15.1, 76 ppm (dry) NO was measured in an exhaust stream containing 2.3 percent O<sub>2</sub>. What is the NO concentration corrected to 5 percent O<sub>2</sub>?

**Example 15.3****Solution**

To correct the NO concentration from 2.3 percent to 5 percent O<sub>2</sub>, we first calculate the total moles associated with each condition (Eqn. 15.9b):

$$\begin{aligned} N_{\text{mix}} @ \chi_{O_2} &= 4.76 \left[ \frac{x + (1 - \chi_{O_2})y/4}{1 - 4.76\chi_{O_2}} \right] - y/4, \\ N_{\text{mix}} @ 2.3\% O_2 &= 4.76 \left[ \frac{8 + (1 - 0.023)18/4}{1 - 4.76(0.023)} \right] - \frac{18}{4} = 61.76, \end{aligned}$$

$$N_{\text{mix}} @ 5\% \text{ O}_2 = 4.76 \left[ \frac{8 + (1 - 0.05)18/4}{1 - 4.76(0.05)} \right] - \frac{18}{4} = 72.18.$$

The corrected concentration is then (Eqn. 15.8):

$$\begin{aligned}\chi_{\text{NO}} @ 5\% \text{ O}_2 &= \chi_{\text{NO}} @ 2.3\% \text{ O}_2 \frac{N_{\text{mix}} @ 2.3\% \text{ O}_2}{N_{\text{mix}} @ 5\% \text{ O}_2} \\ &= 76 \text{ ppm} \frac{61.76}{72.18}\end{aligned}$$

$$\chi_{\text{NO}} @ 5\% \text{ O}_2 = 65 \text{ ppm}$$

#### Comment

Correcting to the 5 percent level reduces the given concentration by about 15 percent. When emissions are reported as concentrations, it is essential that the effect of dilution be taken into account when comparisons are made.

---

### Various Specific Emission Measures

In the dynamometer testing of spark-ignition and diesel engines, emissions are frequently expressed as

$$\text{Mass specific emission} = \frac{\text{Mass flow of pollutant}}{\text{Brake power produced}}, \quad (15.10)$$

where the units are typically g/kW-hr, or the mixed units of g/hp-hr. Mass specific emissions (MSE) are conveniently related to the emission index as

$$(\text{MSE})_i = \dot{m}_F EI_i / \dot{W}, \quad (15.11)$$

where  $\dot{m}_F$  is the fuel mass flowrate and  $\dot{W}$  is the power delivered.

Another frequently employed specific emission measure is the mass of pollutant emitted per amount of fuel energy supplied, which is expressed as

$$\frac{\text{Mass of pollutant } i}{\text{Fuel energy supplied}} = \frac{EI_i}{\Delta h_c}, \quad (15.12)$$

where  $\Delta h_c$  is the fuel heat of combustion. Usual units are g/MJ or lb/MMBTU, where MMBTU refers to  $10^6$  BTU. (Note that confusion can arise with the British units where MBTU refers to  $10^3$  BTU.)

Other measures of emissions may depend on obtaining a particular weighted average over a specified test cycle. Examples include the use of a driving cycle to determine emissions in grams-per-mile from automobiles [16], and test cycles for aircraft engines to establish emission levels in pounds per thousand pounds thrust per hour per cycle [17]. Such procedures are used to define legislated emission standards. Other emission measures are defined for various industrial processes.

Although all of the quantities discussed above make good sense and are quite useful as measures in specific applications, the emission index is a particularly useful parameter from a combustion point of view.

---

## EMISSIONS FROM PREMIXED COMBUSTION

The primary pollutants that we wish to deal with are oxides of nitrogen, carbon monoxide, unburned and partially burned hydrocarbons, and soot. Sulfur oxides are emitted quantitatively based on the sulfur content of the fuel. Since nearly all premixed combustion deals with very low sulfur-content fuels,  $\text{SO}_x$  ( $\text{SO}_2$  and  $\text{SO}_3$ ), emissions from such systems are usually not of concern. Natural gas contains essentially no sulfur, and gasoline less than 600 ppm S by weight. For nonpremixed systems burning coal or low-quality oils,  $\text{SO}_x$  is a major concern. Our discussion of  $\text{SO}_x$  emissions, therefore, will be taken up later.

### Oxides of Nitrogen

**Review of Chemical Mechanisms** The chemical kinetics of NO and  $\text{NO}_2$  formation and destruction were discussed in Chapter 5, and a review of that material now would be helpful. In Chapter 5, we saw that NO is formed through several mechanisms and variations thereof. Bowman [18] classifies these into the following three categories:

1. The extended Zeldovich (or thermal) mechanism in which O, OH, and  $\text{N}_2$  species are at their equilibrium values and N atoms are in steady state (Reactions N.1–N.3 in Chapter 5).
2. Mechanisms whereby NO is formed more rapidly than predicted by the thermal mechanism above, either by (i) the Fenimore CN and HCN pathways (Reactions N.7 and N.8), (ii) the  $\text{N}_2\text{O}$ -intermediate route (Reactions N.4–N.6), or (iii) as a result of superequilibrium concentrations of O and OH radicals in conjunction with the extended Zeldovich scheme.
3. Fuel nitrogen mechanism, in which fuel-bound nitrogen is converted to NO.

The primary nitrogen oxide from combustion systems is NO; although, in some systems, appreciable  $\text{NO}_2$  is produced, usually as a result of  $\text{NO} \rightarrow \text{NO}_2$  conversion in low-temperature mixing regions of nonpremixed systems (see Reactions N.12–N.15 in Chapter 5). Therefore, in this section, our discussion focuses on NO.

Calculation of NO formed via the thermal mechanism with equilibrium O and OH radicals is relatively straightforward, following the principles of

Chapter 4. In fact, several of the Chapter 4 examples and homework problems are based on this mechanism. Neglecting reverse reactions, we found that

$$\frac{d[NO]}{dt} = 2k_{1f}[O]_e[N_2]_e \quad (15.13)$$

where  $k_{1f}$  is the forward rate coefficient for the rate-limiting reaction  $O + N_2 \rightarrow NO + N$ . Of course, reverse reactions need to be included when NO levels become appreciable. The basic premise behind the use of Eqn. 15.13 is that the NO chemistry is much slower than the combustion chemistry; thus, the O- and OH-atom concentrations have had time to equilibrate. This assumption of uncoupled combustion and NO-formation chemistry breaks down, however, when O and OH atoms are formed in quantities well over equilibrium (up to a factor of  $10^3$ !), which can occur in flame zones. In this case, NO is formed via the Zeldovich reactions much more rapidly than if O atoms were in equilibrium. Calculation of superequilibrium radical concentrations is quite complex and must be coupled to the fuel oxidation kinetics. Also, within the flame zone, the Fenimore prompt-NO pathways can be important, and the possibility exists for NO formation through NNH [19–21] as well. Although workers have had some success in using only the thermal-equilibrium-O mechanism to predict NO emissions in the past, our current understanding of NO production shows that the situation is indeed more complex. Of course, there are applications where the thermal mechanism dominates, and the simple mechanism is thus useful.

Table 15.2 presents calculated relative contributions of the various NO production pathways in premixed combustion [18]. The effect of pressure on NO from laminar flames is given by the first data grouping. Here we see that at low pressures, the NO yield is dominated by the Fenimore ( $HC - N_2$ ) and super-equilibrium O, OH routes. At 10 atm, the simple thermal mechanism produces a little more than half of the  $NO_x$ , with the other three routes making substantial contributions. These data have significance for spark-ignition engines where stoichiometric mixtures are employed and pressures can go up to more than 20 atm.

The second data grouping in Table 15.2 shows the effect of equivalence ratio for rich conditions. The principal observation here is that as the mixture is made increasingly rich, the Fenimore mechanism dominates, yielding 95 percent of the total NO at  $\Phi = 1.32$ . At sufficiently rich mixtures, however, this mechanism no longer dominates [25]. Also of interest, but not shown in Table 15.2, is the question of what mechanism(s) dominate at ultralean conditions, which are employed in low- $NO_x$ , premixing, prevaporizing gas-turbine combustors. Although still the subject of research, Correa and Smooke [26] suggest that the  $N_2O$ -intermediate route dominates.

The well-stirred-reactor data in Table 15.2 show that under conditions of strong backmixing of reactants and products, the superequilibrium O, OH route dominates for lean mixtures, while the Fenimore mechanism controls for stoichiometric and rich mixtures.


**Table 15.2** Relative contributions of various mechanisms to NO<sub>x</sub> formation in premixed combustion<sup>a</sup>

Flame	$\Phi$	P(atm)	Total NO <sub>x</sub> (ppm)	Fraction of Total NO Formation			
				Equilibrium Thermal	Super-equilibrium	HC-N <sub>2</sub>	N <sub>2</sub> O
Premixed, laminar, CH <sub>4</sub> -air [22]	1	0.1	9 @ 5 ms	0.04	0.22	0.73	0.01
	1	1.0	111	0.50	0.35	0.10	0.05
	1	10.0	315	0.54	0.15	0.21	0.10
Premixed, laminar, CH <sub>4</sub> -air [23]	1.05	1	29 @ 5 mm	0.53	0.30	0.17	—
	1.16	1	20	0.30	0.20	0.50	—
	1.27	1	20	0.05	0.05	0.90	—
	1.32	1	23	0.02	0.03	0.95	—
	0.7	1	12 @ 3 ms	≈0	0.65	0.05	0.30
Well-stirred reactor, CH <sub>4</sub> -air [23, 24]	0.8	1	20	—	0.85	0.10	0.05
	1.0	1	70	—	0.30	0.70	—
	1.2	1	110	—	0.10	0.90	—
	1.4	1	55	—	—	1.00	—

<sup>a</sup> SOURCE: From Ref. [18]. Sources of original data are Refs. [22-24].

The third NO-formation mechanism, the fuel-N route, is not generally important in premixed combustion applications since most fuels used in premixed combustion (natural gas and gasolines) contain little or no bound nitrogen. Pulverized coal and heavy distillate fuels, however, contain significant quantities of fuel nitrogen; thus, we defer our discussion of the fuel-N mechanism until the section on nonpremixed combustion.

**NO<sub>x</sub> Control Strategies** For processes dominated by thermal NO formation, time, temperature, and oxygen availability are the primary variables affecting NO<sub>x</sub> yields. The rate coefficient for the O + N<sub>2</sub> → NO + N reaction has a very large activation temperature ( $E_A/R_u = 38,370\text{ K}$ ) and thus increases rapidly at temperatures above about 1800 K. From Fig. 2.14, we see that for adiabatic, constant-pressure combustion, the maximum equilibrium O-atom mole fraction lies near  $\Phi = 0.9$ . This is also approximately the same equivalence ratio where the maximum kinetically formed NO is found for spark-ignition engines, as can be seen in Fig. 15.2. Unfortunately, from the viewpoint of emission

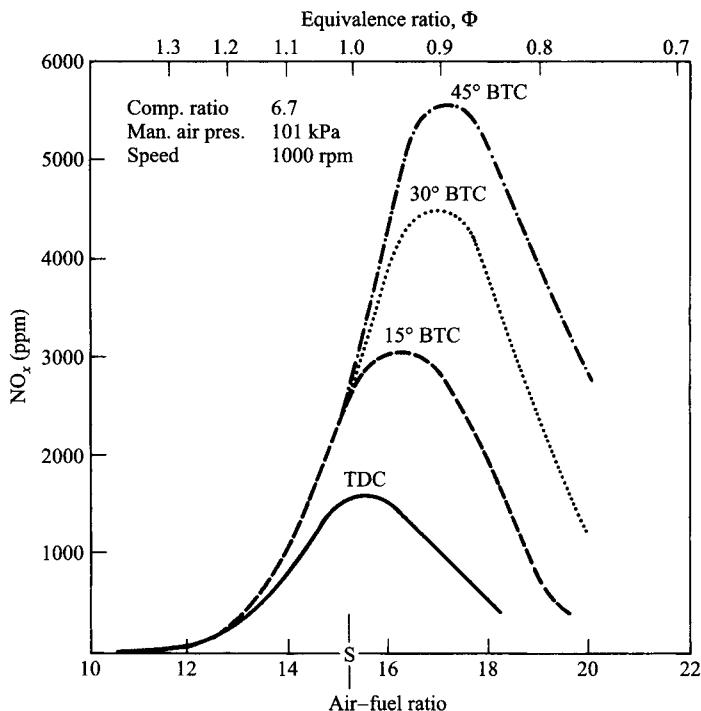


**Figure 15.2** NO<sub>x</sub> concentrations as functions of air-fuel and equivalence ratios for various spark timings.

SOURCE: After Ref. [27]. Reprinted with permission of the Air and Waste Management Association.


control, maximum efficiency also is achieved near this equivalence ratio for many practical devices.

Reducing peak temperatures can significantly reduce  $\text{NO}_x$  emissions. In industrial burners and spark-ignition engines, this can be achieved by mixing flue gases or exhaust gases with the fresh air or fuel. Figure 15.3 shows experimental results for exhaust-gas recirculation, frequently denoted EGR, for a spark-ignition engine. The effect of EGR or FGR (flue-gas recirculation) is to increase the heat capacity of the burned gases for a given quantity of heat release, thus lowering the combustion temperature. Figure 15.4 shows the correlation of NO reduction with diluent heat capacity for an SI engine. The effect of ultralean operation also is to increase the heat capacity of the products and, consequently, reduce temperatures.

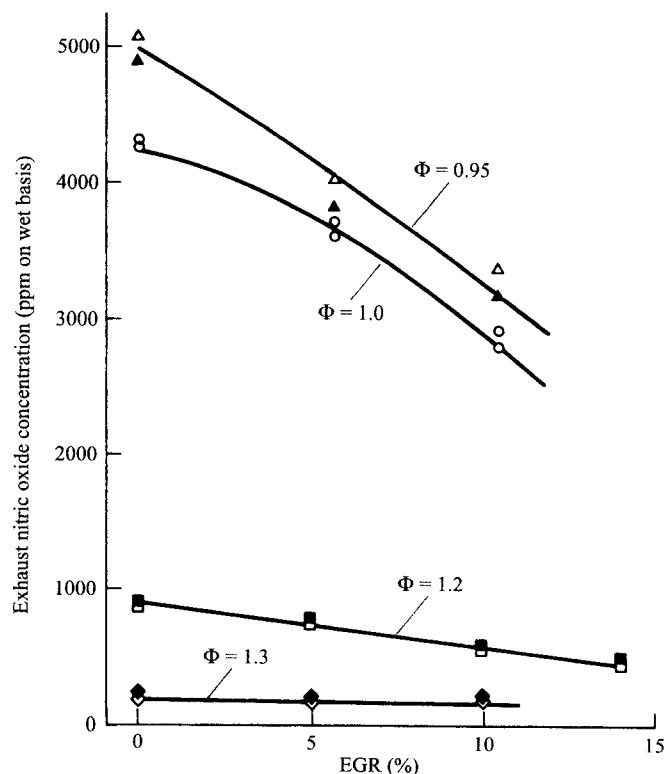

**Figure 15.3** Effect of exhaust-gas recirculation (EGR) on  $\text{NO}_x$  emissions from a spark-ignition engine.

SOURCE: Reprinted with permission from Ref. [28], © 1973, Society of Automotive Engineers, Inc.

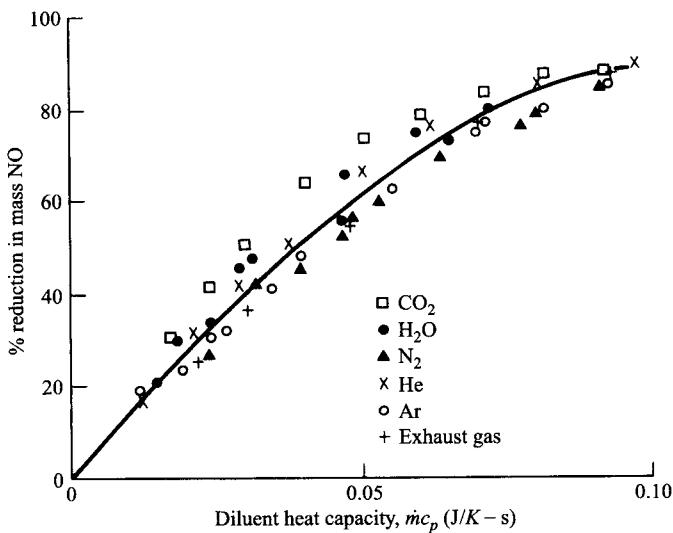

**Figure 15.4** Correlation of NO reduction with diluent heat capacity,  $\dot{m}c_p$ , for a spark-ignition engine.

SOURCE: Reprinted from Ref. [29], © 1971, Society of Automotive Engineers, Inc.

#### Example 15.4

Consider nitric oxide formation in the postflame gases of a stoichiometric propane-air mixture at atmospheric pressure. Assuming adiabatic conditions, how does the initial rate of NO formation (ppm/s) from the Zeldovich mechanism compare for no dilution and 25 percent dilution by  $\text{N}_2$  (moles  $\text{N}_2$  added equals 0.25 the number of moles of air). The reactants and  $\text{N}_2$  diluent are initially at 298 K.

#### Solution

We first calculate the equilibrium adiabatic flame temperature and equilibrium composition for the two cases using an equilibrium routine (see Chapter 2 and Appendix F). Results of this computation are

	No Dilution	25% Dilution $\text{N}_2$
$T_{ad}$ (K)	2,267.9	2,033.2
$\chi_{\text{O},e}$	$3.12 \cdot 10^{-4}$	$3.59 \cdot 10^{-5}$
$\chi_{\text{N}_2,e}$	0.721	0.777

We can use Eqn. 15.13 to evaluate  $d[\text{NO}]/dt$ :

$$\frac{d[\text{NO}]}{dt} = 2k_{1f} [\text{O}]_e [\text{N}_2]_e,$$

where the rate coefficient  $k_{1f}$  from Chapter 5 is

$$k_{1f} = 1.82 \cdot 10^{11} \exp[-38,370/T(\text{K})] \text{ m}^3/\text{kmol}\cdot\text{s}.$$

For the case of no dilution,

$$k_{1f} = 1.82 \cdot 10^{11} \exp[-38,370/2267.9] = 8173 \text{ m}^3/\text{kmol-s}$$

and, converting molar concentrations to mole fractions,

$$\begin{aligned} \frac{d\chi_{\text{NO}}}{dt} &= 2k_{1f} \chi_{\text{O},e} \chi_{N_2,e} \frac{P}{R_u T_{ad}} \\ &= 2(8173)3.12 \cdot 10^{-4}(0.721) \frac{101,325}{8315(2267.9)} \\ \left(\frac{d\chi_{\text{NO}}}{dt}\right)_{\text{no dil}} &= 1.98 \cdot 10^{-2} \text{ 1/s or } 19,750 \text{ ppm/s.} \end{aligned}$$

With 25 percent N<sub>2</sub> dilution,

$$k_{1f} = 1.82 \cdot 10^{11} \exp[-38,370/2033.2] = 1159 \text{ m}^3/\text{kmol-s}$$

and

$$\begin{aligned} \left(\frac{d\chi_{\text{NO}}}{dt}\right)_{25\% \text{ N}_2} &= 2(1159)3.59 \cdot 10^{-5}(0.777) \frac{101,325}{8315(2033.2)} \\ &= 3.875 \cdot 10^{-4} \text{ 1/s or } 388 \text{ ppm/s.} \end{aligned}$$

The ratio of the formation rates with and without dilution is

$$\frac{\left(\frac{d\chi_{\text{NO}}}{dt}\right)_{25\% \text{ N}_2}}{\left(\frac{d\chi_{\text{NO}}}{dt}\right)_{\text{no dil}}} = \frac{388}{19,750} = 0.0196$$

Thus, without dilution the initial NO formation rate is about 50 times greater!

#### Comment


From this example, we see that thermal NO<sub>x</sub> can be greatly reduced by dilution with cold inert. The two major factors in reducing the formation rates are the decreased value of the rate coefficient (a factor of ~7) and the decreased equilibrium O-atom concentration (a factor of ~9), both of which are controlled by the temperature.

Another means to lower combustion temperatures in spark-ignition engines is to retard the spark timing. Late spark timing shifts the combustion event so that peak pressures occur when the piston is well beyond top-dead-center (minimum volume), resulting in lower pressures and temperatures. This effect can easily be seen in Fig. 15.2 where each curve represents a different spark timing. Significant fuel-economy penalties result from retarded spark timings.

The amount of thermal NO<sub>x</sub> produced in a device is strongly linked to the time that combustion products spend at high temperatures. For conditions where NO levels are well below their equilibrium values and reverse reactions are unimportant, the NO yield is directly proportional to time (see Example 4.4). In the design of a combustion system, therefore, the temperature-versus-

time relationship is key to the control of NO emissions; however, drastic alteration of the time-temperature relationship for the gas flow may compromise the useful operation of the device. Obviously, a furnace that has low NO<sub>x</sub> emissions, but fails to properly heat the load, is not a useful device.

Staged combustion, in which a rich-lean or lean-rich combustion sequence takes place, is also an NO<sub>x</sub> control strategy. The basic concept is illustrated in Fig. 15.5 for a rich-lean sequence. The idea here is first to take advantage of both the good stability and low NO<sub>x</sub> emissions associated with rich combustion and, subsequently, to complete the combustion of the unburned CO and H<sub>2</sub> in a lean stage where additional NO<sub>x</sub> production is also low. For staging to be effective, the mixing of rich products and air must be very rapid, or a substantial amount of heat must be removed between stages. Consider the ideal staged-combustion process in Fig. 15.5 represented by the path 0-1-2'-2, where the bell-shaped curve represents the NO<sub>x</sub> yield for a fixed residence time,  $\Delta t (= \Delta t_{\text{rich}})$ . In the rich stage, the amount of NO<sub>x</sub> formed in the time  $\Delta t_{\text{rich}}$  is represented by the segment 0-1. Secondary air is then instantaneously mixed ( $\Delta t_{\text{mix}} = 0$ ) with the rich products (segment 1-2') with no additional NO<sub>x</sub> formed. In the lean stage, the CO and H<sub>2</sub> are oxidized and an additional amount of NO<sub>x</sub> is formed (segment 2'-2) in the time associated with the lean stage ( $\Delta t_{\text{lean}}$ ). If the mixing is not instantaneous, as it must be in any real process, additional NO<sub>x</sub> is formed during the mixing process as the stoichiometry passes through the region of high NO<sub>x</sub> formation rates (path 1-3). Obviously, the success of staging depends on how well the mixing process can be controlled in practice. Although the ideal staged combustion (0-1-2'-2) is

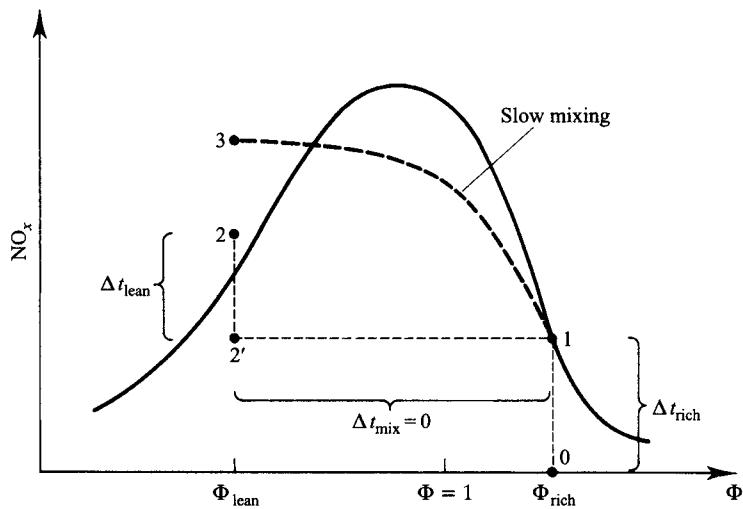

**Figure 15.5** Schematic representation of staged combustion on NO<sub>x</sub>-equivalence ratio coordinates. The path 0-1-2'-2 represents the ideal case of instantaneous secondary air mixing, while 0-1-3 indicates the path for slow secondary mixing.


represented as a sequence of two premixed combustion processes, most real processes become nonpremixed because of the in-situ mixing of rich products and secondary air. Siewert and Turns [30] describe the implementation of an ideal staged sequence in which two different cylinders of a spark-ignition engine are employed. The rich products are cooled and mixed with air before combustion is again initiated and completed in the second cylinder. Very low  $\text{NO}_x$  levels were demonstrated, although CO and unburned hydrocarbon emissions were found to be unacceptably high without aftertreatment.

In automotive applications, combustion system modifications alone are unable to reduce  $\text{NO}_x$  levels below legislated standards, and, thus, catalytic converters are also employed to reduce  $\text{NO}_x$  in the exhaust stream. We will discuss catalytic converters later, in conjunction with CO and unburned hydrocarbon control strategies.

## Carbon Monoxide

As we saw in Chapter 2, CO is a major species in rich-combustion products; thus, substantial CO will be produced whenever rich mixtures are used. In normal operation of most devices, rich conditions are generally avoided; however, spark-ignition engines employ rich mixtures during startup to prevent stalling, and at wide-open-throttle conditions to provide maximum power. For stoichiometric and slightly lean mixtures, CO is found in substantial quantities at typical combustion temperatures as a result of the dissociation of  $\text{CO}_2$ . The upper curve in Fig. 15.6 shows CO concentrations ranging from 1.2 percent (by vol.) at  $\Phi = 1$  to 830 ppm at  $\Phi = 0.8$  in the product gases of adiabatic, atmospheric-pressure, propane-air flames. Carbon monoxide concentrations rapidly fall with temperature, as illustrated by the values shown in Fig. 15.6 for equilibrium at a temperature of 1500 K. Thus, if CO were to remain equilibrated as useful energy is extracted from the combustion products, very low levels of CO would be found in the exhaust system. In furnaces, where residence times are of the order of a second, equilibrium is likely to prevail; however, in spark-ignition engines, temperatures fall very rapidly during the expansion and exhaust processes, CO is not equilibrated and passes into the exhaust stream frozen at levels somewhere between equilibrium at peak temperatures and pressures, and exhaust temperatures and pressures [31, 32]. Calculations indicate that the important reaction,  $\text{CO} + \text{OH} \rightleftharpoons \text{CO}_2 + \text{H}$  (Reaction CO.3 from Chapter 5) is equilibrated during the expansion and blowdown processes; however, the three-body recombination processes, e.g.,  $\text{H} + \text{OH} + \text{M} \rightarrow \text{H}_2\text{O} + \text{M}$ , are not fast enough to maintain equilibrium among all the radicals. This causes the partial-equilibrium CO concentrations to be well above those for full equilibrium [32, 33].

Other CO production mechanisms include quenching by cold surfaces, following the ideas presented above, and partial oxidation of unburned fuel. The latter is the subject of the next section.

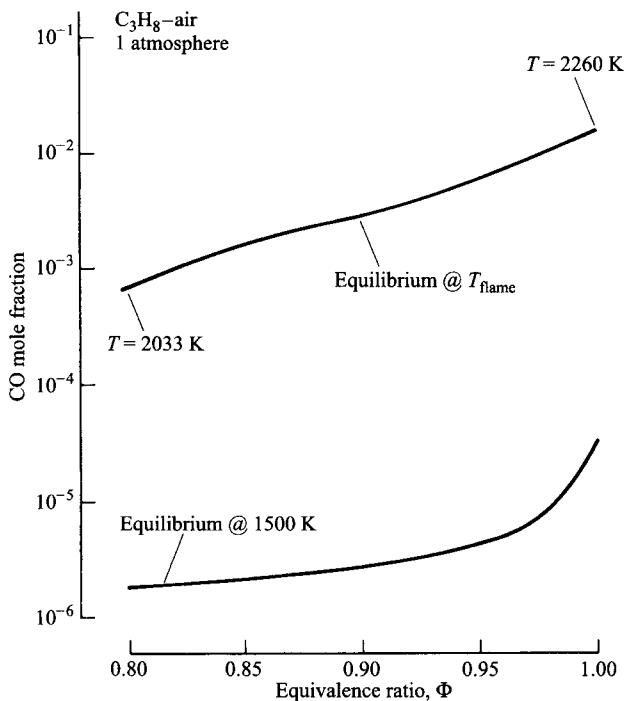


**Figure 15.6** Equilibrium carbon monoxide mole fractions in propane–air combustion products at adiabatic flame temperatures and at 1500 K.

### Unburned Hydrocarbons

In most devices employing premixed reactants, unburned hydrocarbons are usually negligible. An exception to this is the spark-ignition engine. The problem of SI-engine hydrocarbon emissions has a large literature, and Heywood's textbook [34] provides an excellent review of this subject. In this section, we will briefly discuss some of the most salient aspects of this problem.

In Chapter 8, we discussed the process of flame quenching, whereby a flame is extinguished a short distance from a cold surface. The quenching process leaves a thin layer of unburned fuel–air mixture adjacent to the wall. Whether or not this **quench layer** contributes to unburned hydrocarbon emissions depends upon subsequent diffusion, convection, and oxidation processes. In an SI engine, most of the hydrocarbons from wall quenching ultimately mix with hot gases and are oxidized; however, unburned hydrocarbons can result from flame quenching within and at the entrance to **crevices**, such as those formed by the piston topland and ring pack [35]. The helical spark-plug thread crevice can also be a source of unburned hydrocarbons. Figure 15.7 illustrates this crevice-volume mechanism for unburned hydrocarbons emissions in engines. Other known contributors to unburned hydrocarbon emissions in

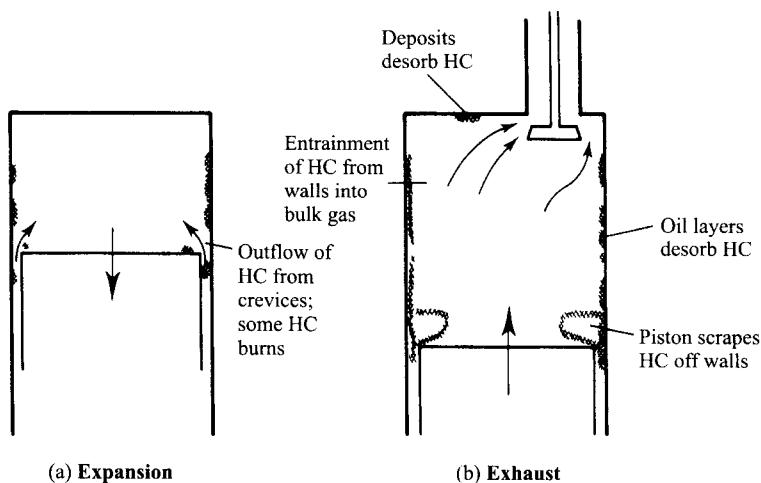

**Figure 15.7** Schematic representation of unburned hydrocarbon emission mechanism for spark-ignition engines.  
[ SOURCE: After Ref. [34]. ]

engines are absorption and subsequent desorption of fuel into oil layers on the cylinder walls (Fig. 15.7). A similar process can occur for wall deposits, which for unleaded-fuel operations are carbonaceous. Unburned hydrocarbon emissions can also result from incomplete flame propagation in the bulk of the charge. This occurs for lean and/or dilute mixtures approaching the flammability limits [36, 37].

Only about a third of the unburned hydrocarbons found in the untreated exhaust are fuel molecules [38]. The remainder are fuel pyrolysis and partial oxidation products, as shown in Table 15.3. The partial oxidation of hydrocarbons results in the production of CO, aldehydes, and other particularly undesirable compounds. For lean operation, this partial oxidation of crevice, oil, and deposit-layer hydrocarbons is the major source of CO, since the previously discussed CO-mechanisms cannot account for the level of CO found at such conditions.


### Catalytic Aftertreatment

Catalytic aftertreatment is the primary technique applied to control, simultaneously, nitric oxide, carbon monoxide, and unburned hydrocarbon emissions from spark-ignition engines. Figures 15.8 and 15.9 illustrate the two principal types of catalytic converters currently employed. In both types, noble-metal catalysts, e.g., platinum, palladium, and rhodium, provide active sites for reactions that oxidize carbon monoxide and unburned hydrocarbons while simultaneously reducing nitric oxide. To achieve high conversion efficiencies, i.e. pollutant destruction, requires that the composition of the stream through

**Table 15.3** Typical composition of spark-ignition engine unburned hydrocarbons without aftertreatment<sup>a</sup>


Species	Fraction of Total Unburned Constituents
Ethylene	19.0
Methane	13.8
Propylene	9.1
Toluene	7.9
Acetylene	7.8
1-Butane, <i>i</i> -Butane, 1,3-Butadiene	6.0
<i>p</i> -Xylene, <i>m</i> -Xylene, <i>o</i> -Xylene	2.5
<i>i</i> -Pentane	2.4
<i>n</i> -Butane	2.3
Ethane	2.3
Total	73.1

<sup>a</sup> SOURCE: From Ref. [38].

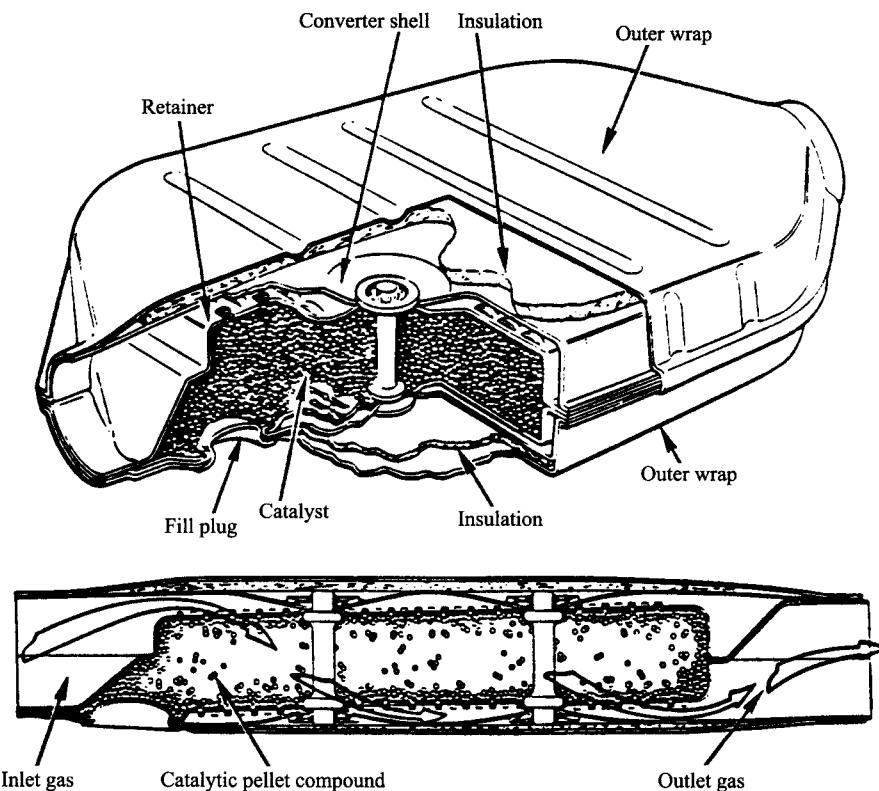

**Figure 15.8** Pellet bed-type catalytic converter.

SOURCE: Reprinted from Ref. [39] with permission of the American Society of Mechanical Engineers.

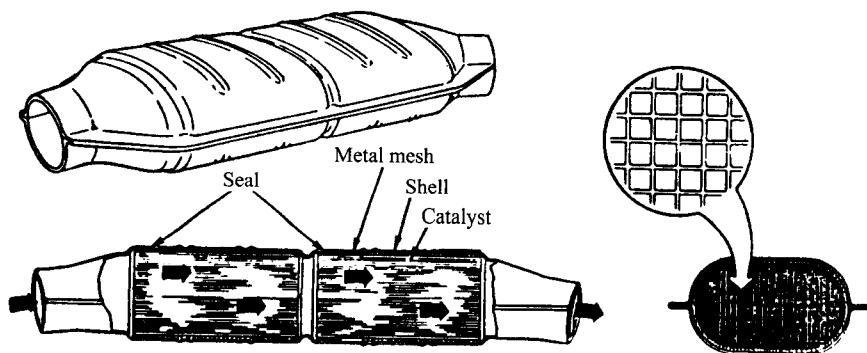


**Figure 15.9** Monolith catalytic converter.

| SOURCE: Reprinted from Ref. [39] with permission of the American Society of Mechanical Engineers.

the converter be maintained in a narrow range near the stoichiometric ratio ( $\Phi = 1$ ). Typical three-way catalyst conversion efficiencies are illustrated in Fig. 15.10. Reference [34] contains more detailed information on three-way catalyst systems and additional references.

## Particulate Matter

Emissions of particulate matter from premixed combustion results only from rich operation or from fuel additives. With the removal of tetraethyl lead from gasolines, this source of particulate matter from spark-ignition engines has been eliminated. Fuel-air mixtures sufficiently rich to produce soot are usually the result of some malfunction, rather than typical operation. Table 15.4 shows

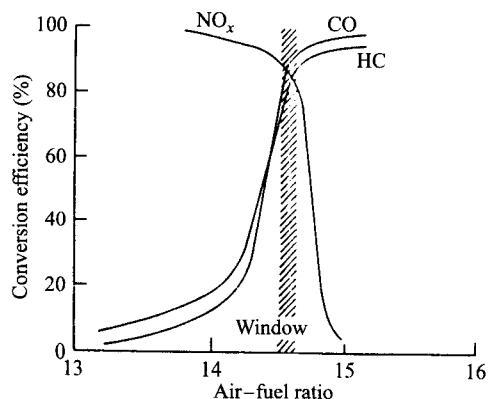

**Figure 15.10** Conversion efficiencies for a typical three-way automotive catalyst, showing narrow air-fuel ratio window for simultaneous destruction of unburned hydrocarbons, CO, and NO<sub>x</sub>.

| SOURCE: Reprinted from Ref. [39] with permission of the American Society of Mechanical Engineers.

**Table 15.4** Limiting equivalence ratios for the formation of soot in premixed flames<sup>a</sup>

Fuel	Limiting Equivalence Ratio, $\Phi_c$
Ethane	1.67
Propane	1.56
<i>n</i> -Hexane	1.45
<i>n</i> -Octane	1.39
Isooctane	1.45
Isodecane	1.41
Acetylene	2.08
Ethylene	1.82
Propylene	1.67
Ethanol	1.52
Benzene	1.43
Toluene	1.33

| <sup>a</sup> SOURCE: From Ref. [40].

limiting equivalence ratios ( $\Phi_c$ ) for the formation of soot in atmospheric-pressure premixed flames for selected fuels with air. Soot forms at equivalence ratios equal to, or greater than,  $\Phi_c$ . For premixed combustion, the difference in sooting tendencies of various fuel types is related not only to fuel structure but also to differences in flame temperature, as discussed by Glassman [41].

---

## EMISSIONS FROM NONPREMIXED COMBUSTION

Although the chemical processes are the same in premixed and nonpremixed combustion, the additional physical processes associated with nonpremixed combustion, e.g., evaporation and mixing, can produce a range of local compositions spanning a wide range of stoichiometries. For example, the overall mixture may be stoichiometric, but within the combustion space there may be regions that are quite rich, while others may be quite lean. This aspect of nonpremixed combustion adds considerable complexity to the problem of pollutant formation in such systems. In some situations, however, combustion can occur essentially in a premixed mode when fuel evaporation and subsequent mixing are sufficiently rapid, even though the fuel and air are introduced separately into the combustion space. For such systems, pollutant production should be interpreted within the premixed framework discussed earlier. Because of the great complexity involved in pollutant formation in non-premixed systems, and because emissions in such systems frequently depend on specific details of the system (e.g., the droplet size distribution of the fuel spray), we present here only a brief introduction to the subject and point to the literature for further information.


## Oxides of Nitrogen

In this section, we first look at the  $\text{NO}_x$  emission characteristics of a simple nonpremixed system, a vertical jet flame in a quiescent environment. This continues our study of this flame type begun in Chapter 13 and serves as a good introduction to the discussions of the more complex nonpremixed systems that follow.

**Simple Turbulent Jet Flames** The  $\text{NO}_x$  emissions from turbulent jet flames have been extensively studied, and a recent overview of the issues involved can be found in Refs. [42, 43]. The structure of jet flames, indicated by the OH imaging shown previously in Fig. 13.5, suggests that NO is produced in thin laminarlike flamelet regions in the lower-to-mid regions of the flame and in relatively large and broadened reaction zones in the upper regions of the flame. The simple thermal, superequilibrium-O, and Fenimore mechanisms for NO formation are all likely to be active in hydrocarbon jet flames, while the determination of the relative contribution of each mechanism to the total  $\text{NO}_x$  yield is yet a subject of research. In applications where flame temperatures are quite high, such as flames in furnaces with reradiating walls or flames using oxygen-enriched air,  $\text{NO}_x$  emissions are likely to be controlled by Zeldovich kinetics.

As indicated in our discussion of Zeldovich kinetics in premixed systems, temperature, composition, and time are the important variables determining  $\text{NO}_x$  emissions, and these variables are also controlling in nonpremixed flames. In nonpremixed jet flames, however, the composition varies from point to point in the flow and is governed by fluid mechanical mixing. Likewise, the temperature distribution can be coupled to the composition distribution, as we saw in Chapter 13, through the use of the conserved scalar. Although simple analyses, such as those employed in Chapter 13, are useful for predicting global flame properties, such as flame length, more complicated approaches are required to capture kinetic effects associated with pollutant formation. A discussion of these approaches is beyond the scope of this book, and we will have to be content with the generality that thermal NO is produced primarily in flame regions that have simultaneously high temperatures and high concentrations of O and OH atoms, i.e., conditions near stoichiometric. These regions may be the thin laminarlike flame regions low in the jet flame or the broad regions near the flame tip. The detailed temperature and composition distributions within these regions are determined by fluid mechanical, chemical-kinetic, and thermal effects. The larger regions with longer residence times are particularly susceptible to radiation heat losses.

Figure 15.11 shows fuel-energy specific  $\text{NO}_x$  emissions for simple propane-air and ethylene-air jet flames. We observe that the characteristic trend with heat release rate varies with both fuel type and initial jet diameter. These trends are explained by offsetting effects of residence time and temperature [44]. Increasing the fuel flowrate (heat release rate) reduces global and local residence times, which tends to reduce NO formation. Reduced residence

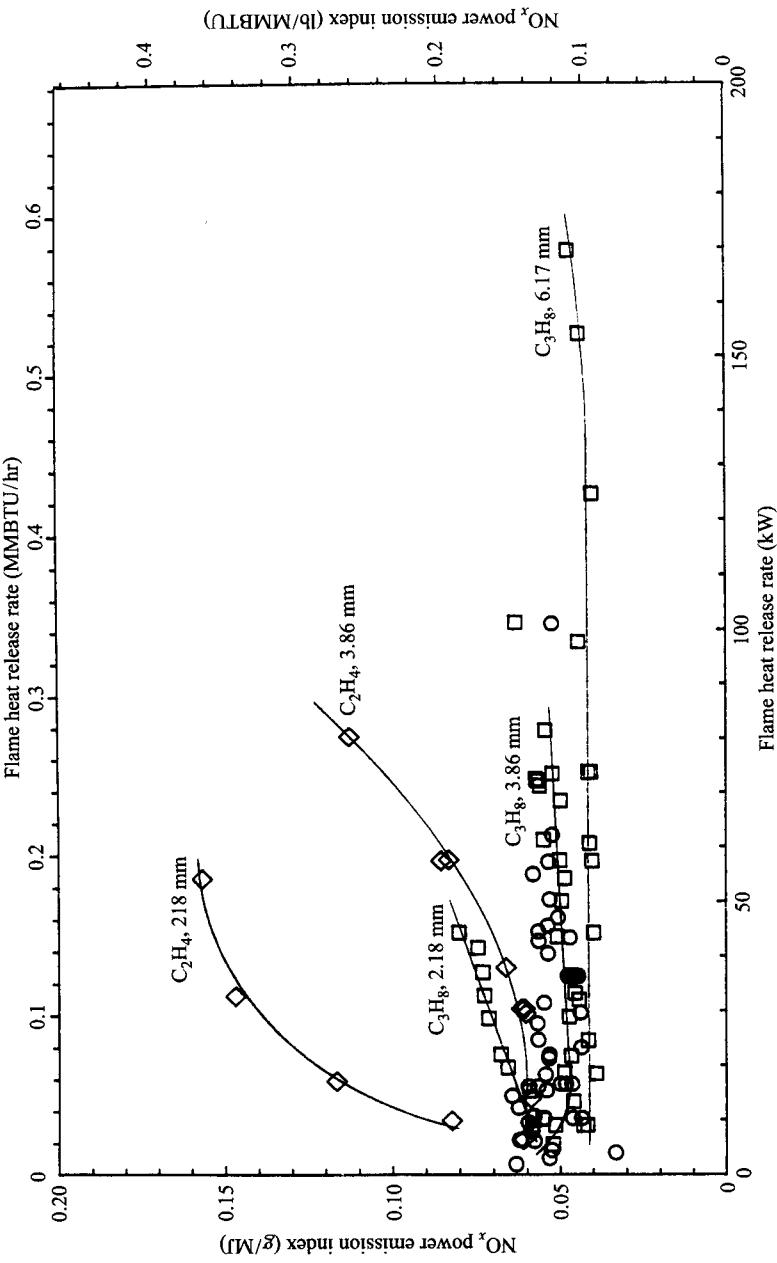


**Figure 15.11** Oxides of nitrogen emissions from turbulent hydrocarbon-air jet flames for highly luminous ( $\text{C}_2\text{H}_4$ ) and less-luminous ( $\text{C}_3\text{H}_8$ ) flames of various sizes ( $d_j = 2.18, 3.86$ , and  $6.17$  mm).

SOURCE: Reprinted by permission of Elsevier Science, Inc. From Ref. [44]. © 1991, The Combustion Institute.

times also allow the flames to be more adiabatic since less time is available for radiant losses to occur. Smaller flames (smaller  $d_f$ ) also yield shorter residence times. Thus, we see that for the more luminous flames and larger flames, temperature effects prevail, causing the increasing trend of  $\text{NO}_x$  with heat release.

The importance of flame radiation is more clearly delineated in the results shown in Fig. 15.12, where four fuels with different luminosities, and hence radiation characteristics, were employed. As shown at the top of the figure, the ethylene flames had the greatest radiant fractions followed by propane, methane, and a mixture of carbon monoxide and hydrogen. This is consistent

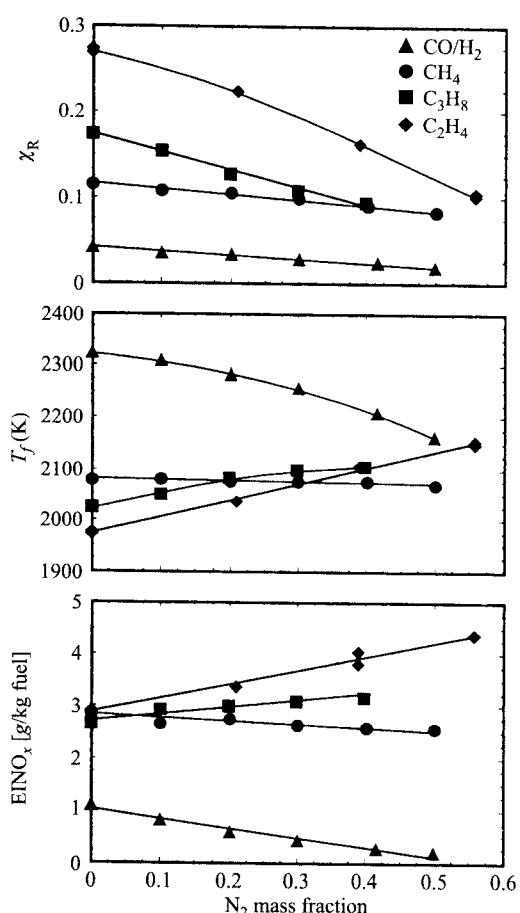

**Figure 15.12** The influence of  $\text{N}_2$  dilution on radiant fractions, characteristic flame temperatures, and  $\text{NO}_x$  emission indices for jet flames having various luminosities (sooting propensities).

SOURCE: Reprinted by permission of Elsevier Science, Inc. From Ref. [45]. © 1993, The Combustion Institute.

with the discussion of sooting tendencies of nonpremixed flames (Chapter 9). The addition of N<sub>2</sub> to the fuel has two effects: first, dilution causes a decrease in adiabatic flame temperature; and, second, N<sub>2</sub> decreases the amount of soot formed in the flame. For the most-luminous flames (C<sub>2</sub>H<sub>4</sub>), the decrease in radiant heat losses more than compensates for the adiabatic flame temperature effect, and characteristic flame temperatures increase (Fig. 15.12, center). For the nonluminous (nonsooting) CO–H<sub>2</sub> flames, the adiabatic flame temperature effect controls. The C<sub>3</sub>H<sub>8</sub> and CH<sub>4</sub> flames show intermediate characteristics. At the bottom of Fig. 15.12, we see that the NO<sub>x</sub>-versus-N<sub>2</sub>-dilution trends all mirror the flame-temperature-versus-dilution trends, clearly showing the importance of heat losses on NO<sub>x</sub> emissions [44, 45]. Finite-rate chemistry effects associated with prompt-NO, however, may also play a role [42, 46].

For simple hydrocarbon-air turbulent jet flames radiating to room-temperature surroundings, Turns *et al.* [45] correlated NO<sub>x</sub> emissions with characteristic flame temperatures  $T_f$  (K), and global residence times  $\tau_G$  (s), as follows:

$$\ln\left[\frac{[\text{NO}_x]}{\tau_G}\right] = A + B \ln \tau_G + C/T_f, \quad (15.14)$$

where

$$\begin{aligned} A &= 1.1146, \\ B &= -0.7410, \\ C &= -16,347, \end{aligned}$$

and [NO<sub>x</sub>] is defined as gmol of NO<sub>x</sub> per cm<sup>3</sup> at stoichiometric conditions at the nonadiabatic flame temperature,  $T_f$ . The global residence time is defined by

$$\tau_G \equiv \frac{\rho_f W_f^2 L_f f_{\text{stoic}}}{3\rho_{F,0} d_j^2 v_e} \quad (15.15)$$

where  $\rho_f$ ,  $W_f$ , and  $L_f$  are flame density, maximum visible width, and visible length, respectively;  $\rho_{F,0}$  is the cold fuel density; and  $f_{\text{stoic}}$  is the mass fraction of fuel in a stoichiometric mixture.

**Industrial Combustion Equipment** In addition to boilers, this class of devices includes process heaters, furnaces, and ovens, all burning, primarily, natural gas. Discussion of oil- and coal-fired devices is limited to the section on utility boilers, which follows. Legislated control of NO<sub>x</sub> emissions from industrial combustion devices is much more recent—for example, in comparison to automobiles—and, for that reason, much less information is available concerning their NO<sub>x</sub> emissions. Table 15.5 shows the wide range of NO<sub>x</sub> levels associated with such equipment, while Table 15.6 shows California South Coast Air Quality Management District standards. For some devices, very large reductions are required in order to be in compliance. The federal Clean Air Act Amendments of 1990 also require reduced emissions from industrial sources.

**Table 15.5** Typical uncontrolled NO<sub>x</sub> levels for industrial processes<sup>a</sup>

Process	Range, ppm at 3% O <sub>2</sub>
High-temperature direct	
High preheat	500–2,000
Low preheat	200–800
High-temperature indirect	200–600
Low temperature	30–100
Boilers	25–100

<sup>a</sup> SOURCE: Courtesy of Energy and Environmental Research Corp.

Figure 15.13 shows various strategies employed to reduce NO<sub>x</sub> emissions from gas-fired equipment [47]. Certain of these techniques also apply to oil-fired devices. The NO<sub>x</sub> reduction techniques are divided into those involving combustion modifications and those involving post-combustion controls. Within each broad classification there are several specific techniques (Fig. 15.13). Each of these will be briefly discussed here, while more detailed information can be found in Refs. [47] and [48].

**Low Excess Air** Thermal NO<sub>x</sub> emissions peak at leaner than stoichiometric equivalence ratios (cf. Fig. 15.2). This NO<sub>x</sub> reduction technique involves reducing the air supplied to move down the NO<sub>x</sub>–Φ curve from the peak toward stoichiometric. Only limited NO<sub>x</sub> reductions are possible with this method since CO emissions rise as the amount of excess air is decreased.


**Staged Combustion** In this method of NO<sub>x</sub> control, operation of existing burners in a multiburner device is modified to create, typically, a rich–lean staging of combustion. This is achieved by having upstream burners operate rich, while adjusting downstream burners to supply air only; or by adjusting some burners to run rich and some lean; or by adjusting all burners to operate

**Table 15.6** The NO<sub>x</sub> emission regulations for industrial sources<sup>a</sup> (California SCAQMD)<sup>b</sup>

Process	Limit	Rule No.
Industrial boilers (5–40 MMbtu)	40 ppm (3% O <sub>2</sub> )	1146
Industrial boilers (> 40 MMbtu)	30 ppm (3% O <sub>2</sub> )	1146.1
Refining heaters	30 ppm (3% O <sub>2</sub> )	1109
Glass-melting furnaces	4 lb/ton of glass	1117
Gas turbines (no SCR)	15 ppm (15% O <sub>2</sub> )	1134
Gas turbines (SCR)	9 ppm (15% O <sub>2</sub> )	1134
Others	Best available current technology	

<sup>a</sup> SOURCE: Courtesy of Energy and Environmental Research Corp.

<sup>b</sup> South Coast Air Quality Management District.

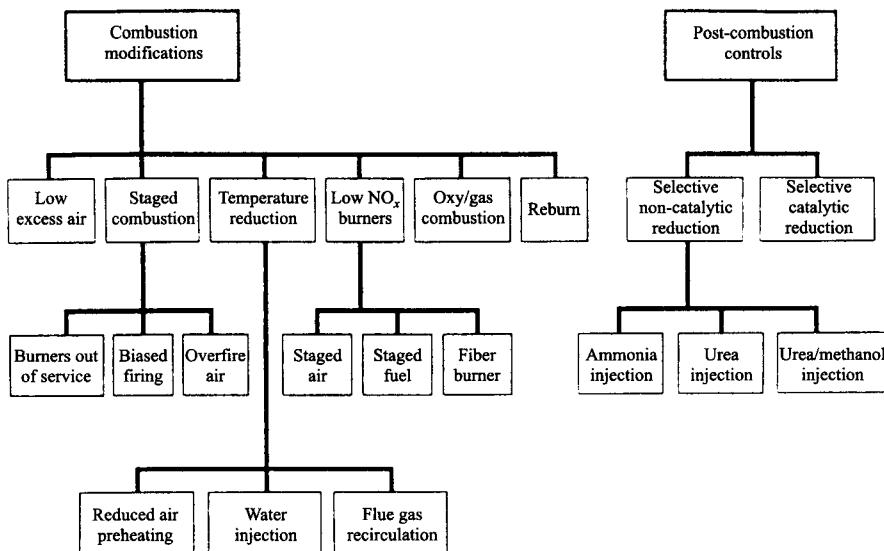


**Figure 15.13** The NO<sub>x</sub> control technologies for gas-fired industrial combustion equipment.  
SOURCE: Reprinted from Ref. [47] with permission of the Gas Research Institute.

rich, with additional air supplied through downstream ports. The NO<sub>x</sub> reductions attainable with these techniques range from 10 to 40 percent [47].


**Temperature Reduction** In many combustion devices, the combustion air is preheated by the hot exhaust gases to improve thermal efficiency. Reducing the amount of air preheat reduces combustion temperatures and, consequently, NO<sub>x</sub> formation. Injecting water reduces flame temperatures because combustion energy is used to vaporize and superheat the water to combustion temperatures. In concept, water injection is the same as flue-gas recirculation (FGR) in that both act as diluents. The effectiveness of FGR depends on both the quantity and temperature of the recirculated gas. Figure 15.14 shows the effects of FGR on NO<sub>x</sub> for burners operating with ambient and 500°F (533 K) combustion air [49]. NO<sub>x</sub> reductions from approximately 50 to 85 percent are possible with FGR in gas-fired industrial boilers [47].

**Low-NO<sub>x</sub> Burners** Burners designed for low NO<sub>x</sub> emissions employ fuel or air staging. Fuel staging creates a sequential lean-rich (actually, less lean) combustion process (Fig. 15.15), while air staging creates a rich-lean process (Fig. 15.16). Another class of low-NO<sub>x</sub> burners are the fiber-matrix burners. These burners employ premixed combustion above or within a metal or ceramic fiber matrix. Because of radiation and convection heat transfer from the matrix, combustion temperatures are quite low, as are NO<sub>x</sub> emissions. A fiber burner is illustrated in Fig. 15.17.

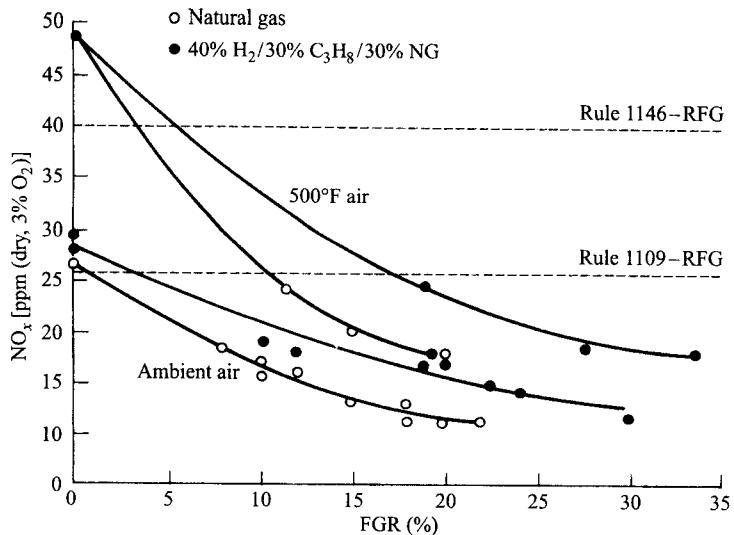


**Figure 15.14** Effects of flue-gas recirculation (FGR) on NO<sub>x</sub> emissions from staged-fuel burners using ambient or preheated air.

SOURCE: Courtesy of John Zink Co., Tulsa, OK.

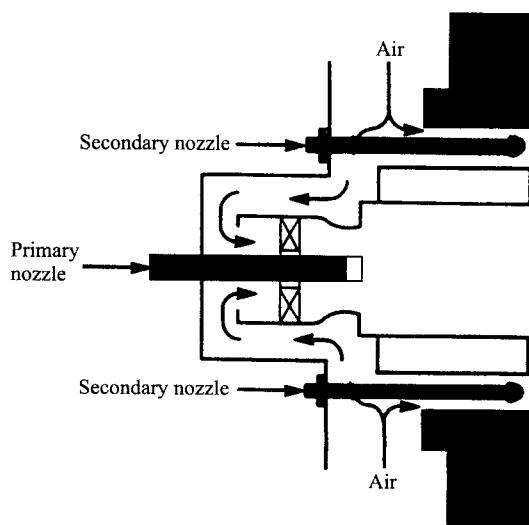

**Figure 15.15** Low-NO<sub>x</sub> burner employing fuel staging (lean-rich combustion).

SOURCE: From Ref. [48].

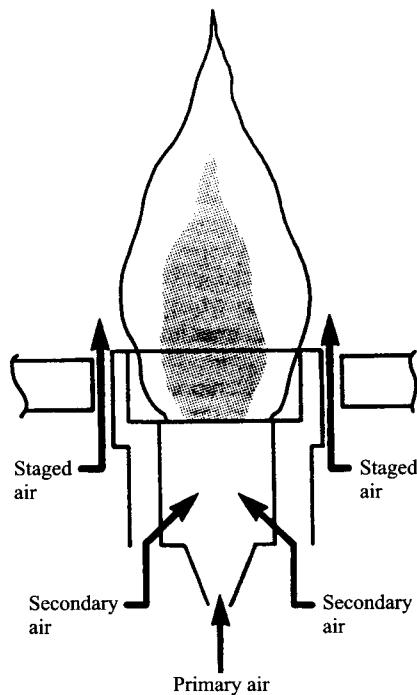


**Figure 15.16** Low-NO<sub>x</sub> burner employing air staging (rich-lean combustion).  
| SOURCE: From Ref. [48].

**Oxy/Gas Combustion** The concentration of nitrogen in the combustion system can be reduced by supplying additional oxygen to the combustion air. With sufficiently large O<sub>2</sub> additions, the decreased N<sub>2</sub> concentration outweighs the increased combustion temperatures and NO<sub>x</sub> levels can be reduced. If air leaks into the combustion chamber can be prevented, operation with pure O<sub>2</sub> ideally eliminates all NO<sub>x</sub> production, assuming that no nitrogen is contained in the fuel.

**Reburn** In this method of NO<sub>x</sub> control [50], about 15 percent of the total fuel is introduced downstream of the main, fuel-lean combustion zone. Within the reburning zone ( $\Phi > 1$ ), NO is reduced via reactions with hydrocarbons and hydrocarbon intermediates, such HCN, similar to those involved in the Fenimore mechanism. Additional air is then supplied to provide the final burnout of the reburn fuel. Reductions of NO<sub>x</sub> of about 60 percent are typical for boilers employing reburn technology [51]. The reburn process is schematically shown in Fig. 15.18, and additional information on reburn chemistry and physical processes can be found in Refs. [18, 52–55].


**Selective Non-Catalytic Reduction (SNCR)** In this post-combustion control technique, a nitrogen-containing additive, either ammonia, urea, or cyanuric

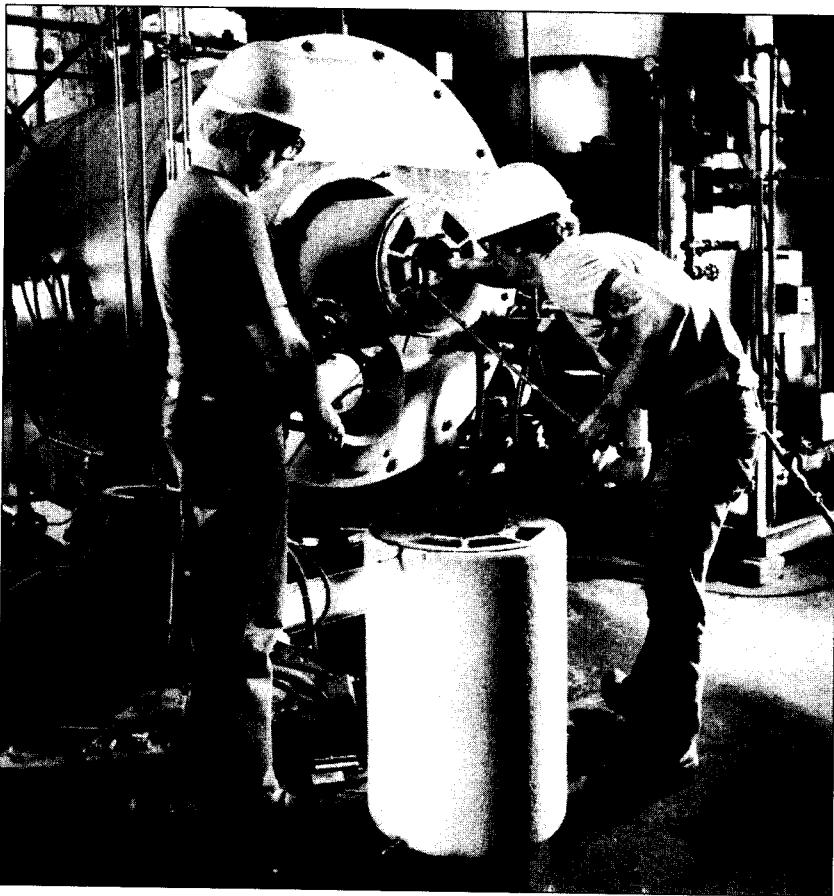

**Figure 15.17** Ceramic fiber burner being installed in high-pressure steam boiler.  
| SOURCE: Courtesy of the Gas Research Institute.

acid, is injected and mixed with flue gases to effect chemical reduction of NO to N<sub>2</sub> without the aid of a catalyst. The method that utilizes ammonia, discovered by Lyon [56], is frequently referred to as the thermal de-NO<sub>x</sub> process. Temperature is a critical variable, and operation within a relatively narrow range of temperatures is required to achieve large NO<sub>x</sub> reductions. Figure 15.19 illustrates this point [18]. With imperfect mixing and nonuniformity of temperature in an actual exhaust stream, NO<sub>x</sub> reductions in practice are somewhat less than the maximum shown in Fig. 15.19 for a laboratory-scale reactor. Additional information on SNCR can be found in Refs. [18, 23, 57–61].

**Selective Catalytic Reduction (SCR)** In this technique, a catalyst is used in conjunction with ammonia injection to reduce NO to N<sub>2</sub>. The temperature window for effective reduction depends upon the catalyst used, but is contained

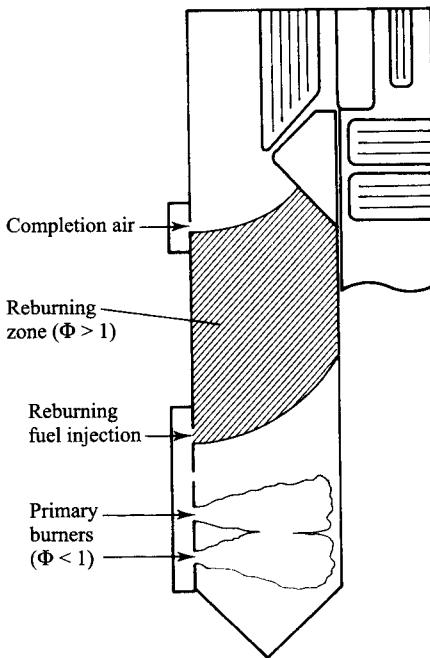


**Figure 15.18** Industrial boiler equipped with reburn NO<sub>x</sub> control.  
| SOURCE: After Ref. [51].

within the range of about 480 K (400°F) to 780 K (950°F) [47]. The advantage of SCR over SNCR is that greater NO<sub>x</sub> reductions are possible, and the operating window is at lower temperatures. Costs of NO<sub>x</sub> removal (\$/ton) with SCR are generally the highest of all NO<sub>x</sub> control techniques because of both the initial high cost and the operating costs associated with catalyst replacement [47]. Sources of additional information on selective catalytic reduction are Refs. [18, 62–65].

**Utility Boilers** As a class, electric utility boilers produce approximately 34 percent of the NO<sub>x</sub> produced by combustion sources in the United States [18], and they are subject to some of the most stringent emission standards worldwide [18]. These boilers are fired predominantly by coal (54.3 percent in 1972), followed by gas (27 percent) and oil (18.6 percent). These fuels are sometimes used in combination.

Burning coal and heavy oils provides an additional source of NO<sub>x</sub> over devices burning natural gas and light distillate fuels because of the bound nitrogen in the fuel. Table 15.7 compares the nitrogen content of coal and liquid fuels. Light distillate fuels have small amounts of nitrogen in comparison with both coal and heavy distillate fuels, which can contain up to a few percent nitrogen by weight.

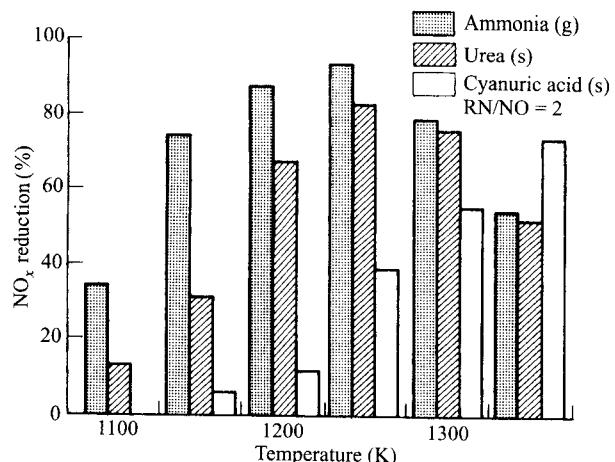

**Figure 15.19** The NO<sub>x</sub> reduction effectiveness for selective non-catalytic reduction (SNCR) techniques.

| SOURCE: Reprinted from Ref. [18] by permission of The Combustion Institute.

For gas-fired units, all of the combustion modification techniques and aftertreatment methods discussed in the previous section can be employed for NO<sub>x</sub> reduction. For oil- and coal-fired boilers, combustion modifications which tend to limit O<sub>2</sub> availability, e.g., low excess air and staged combustion, reduce both thermal and fuel NO<sub>x</sub>, while temperature-reduction techniques (e.g., FGR and water injection) have their effect primarily on thermal NO<sub>x</sub> [67]. In oil- and coal-fired units, about 20–40 percent of the fuel-N is converted to NO<sub>x</sub> that appears in the flue gases, resulting in as much as half of the total NO<sub>x</sub> emitted [66]. Application of post-combustion NO<sub>x</sub> reduction techniques (SNCR and SCR) are complicated by the sulfur in coal (see Chapter 14) and in residual oils, and by particulate matter [63, 64, 68]. Ammonia used in either SNCR or SCR reacts with SO<sub>3</sub> to form ammonium bisulfate (NH<sub>4</sub>HSO<sub>4</sub>), an extremely corrosive substance [63, 64, 68]. Poisoning of catalysts by SO<sub>3</sub> and plugging of the catalyst surface by particulate matter make application of SCR

**Table 15.7** Typical bound nitrogen content of coals and distillate fuels

Fuel	Average Nitrogen, wt. %	Range, wt. %
Coal and coal-derived fuels <sup>a</sup>	1.3	0.5–2.0
Crude oil <sup>b</sup>	0.65	0.2–3.0
Heavy distillates <sup>b</sup>	1.40	0.60–2.15
Light distillates <sup>b</sup>	0.07	0.002–0.60
Natural gas	Nil	—

| <sup>a</sup> SOURCE: From Ref. [18].

| <sup>b</sup> SOURCE: From Ref. [66].

much more difficult for oil and coal than for natural gas [63, 64, 68]. Techniques are also being developed that simultaneously remove both  $\text{NO}_x$  and  $\text{SO}_2$  [68].


**Gas-Turbine and Diesel Engines** Thus far in our discussion of  $\text{NO}_x$  emissions from nonpremixed combustion systems, we have focused on stationary combustion devices that operate essentially at atmospheric pressure. Gas-turbine and diesel engines, on the other hand, may be mobile or stationary, and combustion occurs at high pressure. For stationary gas turbines, combustion occurs in a range of 10–15 atm, while aircraft-engine combustors operate in a range of 20–40 atm [69]. Diesel engines operate at even higher pressures, up to 100 atm. Compression of air from atmospheric conditions to these high pressures results in the air entering the combustor at temperatures well above atmospheric. For example, adiabatic compression of 300 K air from 1 to 40 atm results in a temperature of 860 K. Peak combustion temperatures are thus high, and, consequently, NO formation rates are very rapid. Residence times range over a few milliseconds in aircraft engines and 10–20 ms in stationary applications [69]. In diesel engines [70, 71], and turbine engines without emission controls, NO is formed in the high-temperature, near-stoichiometric regions of the flame. Therefore, the combustion modification techniques employed to reduce  $\text{NO}_x$  are those that lower temperatures. Exhaust-gas recirculation is employed in diesels, and water or steam injection in stationary turbines. Late injection timing in diesels also reduces peak temperatures and, hence,  $\text{NO}_x$  emissions.

The diesel engine combustion process depends on diffusion burning and, therefore, is inherently less flexible than that of gas turbines. To achieve very low emissions with diesels requires post-combustion controls; selective non-catalytic reduction using cyanuric acid as the reducing agent and selective catalytic reduction with ammonia have been employed to reduce  $\text{NO}_x$  in stationary diesel installations [18].

For gas turbines, options other than SNCR and SCR are being investigated to achieve so-called ultralow  $\text{NO}_x$  emissions, the most prominent being lean premixed combustion and rich-lean staging [69]. Figure 15.20 illustrates the latter concept. Both techniques have applicability to both stationary and aircraft engines, although presently there are no operational systems for aircraft [69]. At the time of this writing, lean premixed combustion appears to be the system of choice for ultralow  $\text{NO}_x$ . There is considerable research and development activity in this area, and some manufacturers currently produce lean premixed engines [73].

### Unburned Hydrocarbons and Carbon Monoxide

In nonpremixed combustion systems, there are two sources of unburned hydrocarbons and carbon monoxide that result directly from the nature of

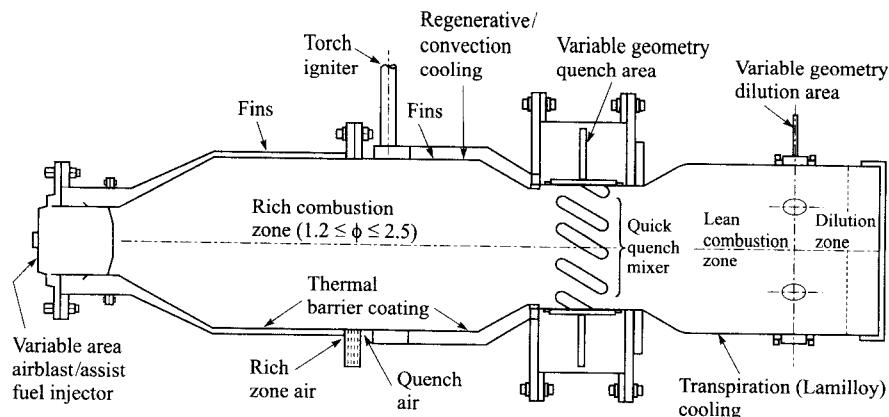

**Figure 15.20** Sketch of rich/quench/lean (RQL) staged gas-turbine combustor. Very rapid mixing of the rich combustion products with air is required to keep peak temperatures low (cf. Fig. 15.5).

| SOURCE: From Ref. [72]. Reprinted with permission of the authors.

nonpremixed combustion. First, overly lean regions are created within the combustion chamber that do not support rapid combustion. Fuel injector characteristics and fuel-air mixing patterns are important parameters in this mechanism. Since a normal flame does not propagate through overlean regions, fuel pyrolysis and partial oxidation products are formed. Among these are oxygenated species, such as aldehydes, and carbon monoxide. The overlean mechanism is particularly important at light loads when the amount of excess air is great.

The second source of incomplete combustion products directly related to nonpremixed combustion is the creation of overly rich regions that subsequently do not mix with sufficient additional air, or, if they do, there is insufficient time for oxidation reactions to go to completion. Overrich regions are more likely to be a source of unburned and partially burned species at heavy loads, where excess air levels are low.

Additional mechanisms that can result in unburned and partially burned species are the following:

- Wall quenching (diesel engines).
- Quenching by secondary or dilution air jets (gas-turbine engines).
- Fuel dribble from the volume between the injector valve seat and the hole exposed to the combustion space, i.e., the nozzle sac volume (diesel engines).
- Occasional formation of very large rogue fuel droplets (gas-turbine engines).

Whether or not these mechanisms contribute to emissions depends to a large degree on specific details of hardware design, particularly the fuel-

injection system. For example, fuel issuing from the nozzle sac volume is a major contributor to diesel engine hydrocarbons and can be affected only by changes in nozzle design [74].

In addition to unburned hydrocarbons, partially burned species are emitted from nonpremixed systems without emission controls. These species (aldehydes, ketones, etc.) typically are quite reactive in photochemical smog, act as eye irritants, and are odorous. The wide variety of diesel exhaust odors result from the different compositions of oxygenates produced under various operating conditions [75].

### Particulate Matter

With the exception of the mineral-matter ash produced by coal burning, which is removed from the effluent stream by electrostatic precipitators, baghouse filters, or other means, the primary particulate matter produced in nonpremixed combustion is soot. Formation of soot can be considered an intrinsic property of most diffusion flames. In Chapter 9, we saw that soot is formed in the rich regions of diffusion flames, and whether or not soot is emitted from a flame depends upon competition between soot formation and soot oxidation processes. Combustion system modifications to minimize soot thus can act to reduce the amount of soot produced prior to oxidation and/or to increase oxidation rates. In diesel engines, particulate traps are used as post-combustion control devices.

### Oxides of Sulfur

In combustion processes, all of the sulfur that is present in the fuel appears as  $\text{SO}_2$  or  $\text{SO}_3$  in the combustion products, the combination of the two being denoted  $\text{SO}_x$ . Because of this quantitative conversion of fuel sulfur, there are only two possible ways to control  $\text{SO}_x$  emissions: remove the sulfur from the fuel, or remove the  $\text{SO}_x$  from the product gases. Both of these techniques are used in varying degrees in practice. Table 15.8 provides estimates of the sulfur

**Table 15.8** Sulfur content of various fuels<sup>a</sup>

Fuel wt. %	Range %
Coal	$\leq 10$
Heavy residual oil	0.5–4
Blended residuals and crudes	0.2–3
Diesel fuel (No. 2)	0.1–0.8
Unleaded gasoline	0.015–0.06

<sup>a</sup> SOURCE: Data from Refs. [34] and [76].

content of various fuels. Coal and residual oils are particularly high in sulfur, while there is very little sulfur in unleaded gasoline.


The amount of  $\text{SO}_3$  produced is typically only a few percent of the amount of  $\text{SO}_2$ , although the  $\text{SO}_3$  is usually found in greater than equilibrium concentrations. Sulfur trioxide readily reacts with water to form sulfuric acid ( $\text{SO}_3 + \text{H}_2\text{O} \rightarrow \text{H}_2\text{SO}_4$ ); thus, sulfuric acid is formed in exhaust streams because of the simultaneous presence of  $\text{SO}_3$  and  $\text{H}_2\text{O}$ . In addition to the obvious deleterious effects of producing sulfuric acid,  $\text{SO}_3$  also poisons automotive three-way catalysts; thus, sulfur levels are low in gasolines (see Table 15.8).

The fate of  $\text{SO}_2$  in the atmosphere is for it to be oxidized by, primarily, OH radicals in gas-phase reactions, or after it has been absorbed on a particle or droplet [5]. Subsequent reaction with water then produces sulfuric acid.

The most commonly used method of removing  $\text{SO}_x$  from flue gases involves reacting  $\text{SO}_2$  with limestone ( $\text{CaCO}_3$ ) or lime ( $\text{CaO}$ ) [77, 78]. In this control method, an aqueous slurry of limestone or lime is sprayed in a tower through which the flue gases pass. The overall reactions for the process are, for limestone,



and, for lime,

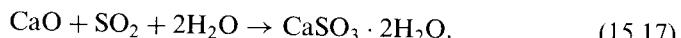

The process can be either **wet** or **dry** depending upon whether the reactions occur in solution (wet) or with particles from which the water has evaporated (dry). In a wet process, the final product, calcium sulfite dihydrate ( $\text{CaSO}_3 \cdot 2\text{H}_2\text{O}$ ), precipitates from a retention tank and is disposed of in a pond or landfill, while in a dry process, electrostatic precipitators are used to remove the particulate product. Other methods of  $\text{SO}_x$  control are discussed in Refs. [77] and [78].

---

## SUMMARY

In this relatively long chapter, we discussed first the implications of pollutant emissions from combustion systems. You should have a knowledge of the major effects of the primary pollutants,  $\text{NO}_x$ , CO, unburned and partially burned hydrocarbons, particulate matter, and  $\text{SO}_x$ ; that is, what is it that makes these species pollutants? Next we investigated the various ways used to quantify pollutants. The bases for all of the measures are simple species or atom balances and mass conservation. You should understand why some measures are more useful than others depending on the application, and be able to convert from one measure to another. The next major topics dealt with the formation and control of emissions; first, from premixed systems, and second, from nonpremixed systems. Much of the material concerning pollutant formation relies on previous chapters, particularly sections of Chapters 4, 5, 8, and 9.

Review of that material would be appropriate now to consolidate your understanding. Although not comprehensive, many practical applications were also discussed in this chapter. You should be able to discuss the most important pollutant formation and control mechanisms and how they apply to spark-ignition engines, gas-fired industrial combustion equipment, utility boilers, and diesel and gas-turbine engines. Particular emphasis was placed on  $\text{NO}_x$  emissions because of their current importance.

---

## NOMENCLATURE

$c_p$	Specific heat (J/kg-K)
$d_j$	Jet diameter (m)
$EI$	Emission index (kg/kg or related)
$f$	Mixture fraction (kg/kg)
$L$	Length (m)
$m$	Mass (kg)
$\dot{m}$	Mass flowrate (kg/s)
$MW$	Molecular weight (kg/kmol)
$N$	Number of moles (kmol)
$P$	Pressure (Pa)
$R_u$	Universal gas constant (J/kmol-K)
$t$	Time (s)
$T$	Temperature (K)
$v_e$	Exit velocity (m/s)
$W$	Width (m)
$\dot{W}$	Power (W)
$x$	Number of carbon atoms in fuel molecule
$y$	Number of hydrogen atoms in fuel molecule

### Greek Symbols

$\Delta h_c$	Heat of combustion (J/kg)
$\rho$	Density (kg/m <sup>3</sup> )
$\tau_G$	Global residence time (s)
$\Phi$	Equivalence ratio
$\chi$	Mole fraction (kmol/kmol)
$\chi_R$	Radiant fraction

### Subscripts

$ad$	Adiabatic
$c$	Critical for soot production
$e$	Equilibrium
$f$	Flame
$F$	Fuel
$i$	species $i$

mix Mixture  
stoic Stoichiometric

#### ***Other Symbols***

[*X*] Molar concentration of species *X* (kmol/m<sup>3</sup>)

---

## **REFERENCES**

1. Code of Federal Regulations, "National Primary and Secondary Ambient Air Quality Standards," Title 40, Vol. 2, Part 50, U.S. Government Printing Office, July 1997.
2. Koshland, C. P., "Impacts and Control of Air Toxics from Combustion," *Twenty-Sixth Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, pp. 2049–2065, 1996.
3. Prather, M. J., and Logan, J. A., "Combustion's Impact on the Global Atmosphere," *Twenty-Fifth Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, pp. 1513–1527, 1994.
4. Haagen-Smit, A. J., "Chemistry and Physiology of Los Angeles Smog," *Industrial Engineering Chemistry*, 44: 1342–1346 (1952).
5. Seinfeld, J. H., *Atmospheric Chemistry and Physics of Air Pollution*, John Wiley & Sons, New York, 1986.
6. Hoskins, B., "A Perspective on Global Warming," *Renewable Energy*, 1: 101–108 (1991).
7. Garrett, C. W., "On Global Climate Change, Carbon Dioxide, and Fossil Fuel Combustion," *Progress in Energy and Combustion Science*, 18: 369–407 (1992).
8. Kheshgi, H. S., and White, B. S., "Does Recent Global Warming Suggest an Enhanced Greenhouse Effect?" *Climate Change*, 23: 121–131 (1993).
9. Hansen, J., Ruedy, R., Sato, M., and Reynolds, R., "Global Surface Air Temperature in 1995: Return to Pre-Pinatubo Level," *Geophysical Research Letters*, 23: 1665–1668 (1996).
10. Irwin, J. G., and Williams, M. L., "Acid Rain: Chemistry and Transport," *Environmental Pollution*, 50: 29–59 (1988).
11. Whelpdale, D. M., Summers, P. W., and Sanhueza, E., "Global Overview of Atmospheric Acid Deposition Fluxes," *Environmental Monitoring and Assessment*, 48: 217–247 (1977).
12. Rua, A., Gimeno, L., and Hernandez, E., "Relationships between Air Pollutants Emission Patterns and Rainwater Acidity," *Toxicological and Environmental Chemistry*, 59: 199–207 (1997).
13. Weisenstein, D. K., Ko, M. K. W., Sze, N.-D., and Rodriguez, J. M., "Potential Impact of SO<sub>2</sub> Emissions from Stratospheric Aircraft on Ozone," *Geophysical Research Letters*, 23: 161–164 (1996).

14. Stolarski, R. S., Baughcum, S. L., Brune, W. H., Douglass, A. R., and Fahey, D. W., "1995 Scientific Assessment of the Atmospheric Effects of Stratospheric Aircraft," NASA Reference Publication 1381, 1995.
15. Stivender, D. L., "Development of a Fuel-Based Mass Emission Measurement Procedure," SAE Paper 710604, 1971.
16. Federal Register, "Control of Air Pollution from New Motor Vehicles and New Motor Vehicle Engines," U.S. Department of Health, Education, and Welfare, Vol. 35, No. 2, Part II, July 1970.
17. Jones, R. E., "Gas Turbine Engine Emissions—Problems, Progress and Future," *Progress in Energy and Combustion Science*, 4: 73–113 (1978).
18. Bowman, C. T., "Control of Combustion-Generated Nitrogen Oxide Emissions: Technology Driven by Regulations," *Twenty-Fourth Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, pp. 859–878, 1992.
19. Bozzelli, J. W., and Dean, A. M., "O + NNH: A Possible New Route for NO<sub>x</sub> Formation in Flames," *International Journal of Chemical Kinetics*, 27: 1097–1109 (1995).
20. Harrington, J. E., *et al.*, "Evidence for a New NO Production Mechanism in Flames," *Twenty-Sixth Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, pp. 2133–2138, 1996.
21. Hayhurst, A. N., and Hutchinson, E. M., "Evidence for a New Way of Producing NO via NNH in Fuel-Rich Flames at Atmospheric Pressure," *Combustion and Flame*, 114: 274–279 (1998).
22. Drake, M. C., and Blint, R. J., "Calculations of NO<sub>x</sub> Formation Pathways in Propagating Laminar, High Pressure Premixed CH<sub>4</sub>/Air Flames," *Combustion Science and Technology*, 75: 261–285 (1991).
23. Miller, J. A., and Bowman, C. T., "Mechanism and Modeling of Nitrogen Chemistry in Combustion," *Progress in Energy and Combustion Science*, 15: 287–338 (1989).
24. Glarborg, P., Miller, J. A., and Kee, R. J., "Kinetic Modeling and Sensitivity Analysis of Nitrogen Oxide Formation in Well-Stirred Reactors," *Combustion and Flame*, 65: 177–202 (1986).
25. Bachmeir, F., Eberius, K. H., and Just, Th., "The Formation of Nitric Oxide and the Detection of HCN in Premixed Hydrocarbon–Air Flames at 1 Atmosphere," *Combustion Science and Technology*, 7: 77–84 (1973).
26. Correa, S. M., and Smooke, M. D., "NO<sub>x</sub> in Parametrically Varied Methane Flames," *Twenty-Third Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, pp. 289–295, 1990.
27. Nebel, G. J., and Jackson, M. W., "Some Factors Affecting the Concentration of Oxides of Nitrogen in Exhaust Gases from Spark-Ignition Engines," *Journal of the Air Pollution Control Association*, 8: 213–219 (1958).
28. Komiyama, K., and Heywood, J. B., "Predicting NO<sub>x</sub> Emissions and Effects of Exhaust Gas Recirculation in Spark-Ignition Engines," SAE Paper 730475, 1973.

29. Quader, A. A., "Why Intake Charge Dilution Decreases NO Emissions from S. I. Engines," Paper 710009, *SAE Transactions*, 80: 20–30 (1971).
30. Siewert, R. M., and Turns, S. R., "The Staged Combustion Compound Engine (SCCE): Exhaust Emissions and Fuel Economy Potential," Paper 750889, *SAE Transactions*, 84: 2391–2420 (1975).
31. Newhall, H. K., "Kinetics of Engine-Generated Nitrogen Oxides and Carbon Monoxide," *Twelfth Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, pp. 603–613, 1968.
32. Delichatsios, M. M., "The Kinetics of CO Emissions from an Internal Combustion Engine," S. M. Thesis, Massachusetts Institute of Technology, Cambridge, MA, June 1972.
33. Keck, J. C., and Gillespie, D., "Rate-Controlled Partial-Equilibrium Method for Treating Reacting Gas Mixtures," *Combustion and Flame*, 17: 237–241 (1971).
34. Heywood, J. B., *Internal Combustion Engine Fundamentals*, McGraw-Hill, New York, 1988.
35. Ishizawa, S., "An Experimental Study of Quenching Crevice Widths in the Combustion Chamber of a Spark-Ignition Engine," *Twenty-Sixth Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, pp. 2605–2611, 1996.
36. Quader, A. A., "Lean Combustion and the Misfire Limit in Spark Ignition Engines," SAE Paper 741055, 1974.
37. Hadjiconstantinou, N., Min, K., and Heywood, J. B., "Relationship between Flame Propagation Characteristics and Hydrocarbon Emissions under Lean Operating Conditions in Spark-Ignition Engines," *Twenty-Sixth Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, pp. 2637–2644, 1996.
38. Jackson, M. W., "Effects of Some Engine Variables and Control Systems on Composition and Reactivity of Exhaust Hydrocarbons," SAE Paper 660404, 1966.
39. Mondt, J. R., "An Historical Overview of Emission-Control Techniques for Spark Ignition Engines: Part B—Using Catalytic Converters," in *History of the Internal Combustion Engine* (E. F. C. Sommerscales and A. A. Zagotta, eds.), ICE—Vol. 8, American Society of Mechanical Engineers, New York, 1989.
40. Street, J. C., and Thomas, A., "Carbon Formation in Pre-mixed Flames," *Fuel*, 34: 4–36 (1955).
41. Glassman, I., *Combustion*, 3rd Ed., Academic Press, San Diego, CA, 1996.
42. Turns, S. R., "Understanding NO<sub>x</sub> Formation in Nonpremixed Flames: Experiments and Modeling," *Progress in Energy and Combustion Science*, 21: 361–385 (1995).
43. Driscoll, J. F., Chen, R.-H., and Yoon, Y., "Nitric Oxide Levels of Turbulent Jet Diffusion Flames: Effects of Residence Time and Damköhler Number," *Combustion and Flame*, 88: 37–49 (1992).

44. Turns, S. R., and Myhr, F. H., "Oxides of Nitrogen Emissions from Turbulent Jet Flames: Part I—Fuel Effects and Flame Radiation," *Combustion and Flame*, 87: 319–335 (1991).
45. Turns, S. R., Myhr, F. H., Bandaru, R. V., and Maund, E. R., "Oxides of Nitrogen Emissions from Turbulent Jet Flames: Part II—Fuel Dilution and Partial Premixing Effects," *Combustion and Flame*, 43: 255–269 (1993).
46. Røkke, N. A., Hustad, J. E., Sønju, O. K., and Williams, F. A., "Scaling of Nitric Oxide Emissions from Buoyancy-Dominated Hydrocarbon Turbulent-Jet Diffusion Flames," *Twenty-Fourth Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, pp. 385–393, 1992.
47. Bluestein, J., "NO<sub>x</sub> Controls for Gas-Fired Industrial Boilers and Combustion Equipment: A Survey of Current Practices," GRI-92/0374, Gas Research Institute Report, October 1992.
48. U.S. Environmental Protection Agency, "Nitrogen Oxide Control of Stationary Combustion Sources," EPA-625/5-86/020, July 1986.
49. Waibel, R. T., Price, D. N., Tish, P. S., and Halprin, M. L., "Advanced Burner Technology for Stringent NO<sub>x</sub> Regulations," API Midyear Refining Meeting, Orlando, FL, 8 May 1990.
50. Wendt, J. O. L., Sternling, C. V., and Matovich, M. A., "Reduction of Sulfur Trioxide and Nitrogen Oxides by Secondary Fuel Injection," *Fourteenth Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, pp. 897–904, 1973.
51. U.S. Environmental Protection Agency, "Sourcebook: NO<sub>x</sub> Control Technology Data," EPA-600/2-91/029, Control Technology Center, July 1991.
52. Glarborg, P., Alzueta, M. U., Dam-Johansen, K., and Miller, J. A., "Kinetic Modeling of Hydrocarbon/Nitric Oxide Interactions in a Flow Reactor," *Combustion and Flame*, 115: 1–27 (1998).
53. Zamansky, V. M., Ho, L., Maly, P. M., and Seeker, W. R., "Reburning Promoted by Nitrogen- and Sodium-Containing Compounds," *Twenty-Sixth Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, pp. 2075–2082, 1996.
54. Lanier, W. S., Mulholland, J. A., and Beard, J. T., "Reburning Thermal and Chemical Processes in a Two-Dimensional Pilot-Scale System," *Twenty-First Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, pp. 1171–1179, 1986.
55. Chen, S. L., *et al.*, "Bench and Pilot Scale Process Evaluation of Reburning for In-Furnace NO<sub>x</sub> Reduction," *Twenty-First Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, pp. 1159–1169, 1986.
56. Lyon, R. K., "The NH<sub>3</sub>–NO–O<sub>2</sub> Reaction," *International Journal of Chemical Kinetics*, 8: 315–318 (1976). (See also U.S. Patent 3,900,554, 1975.)

57. Chen, S. L., *et al.*, "Advanced NO<sub>x</sub> Reduction Processes Using -NH and -CN Compounds in Conjunction with Staged Air Addition," *Twenty-Second Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, pp. 1135–1145, 1988.
58. Heap, M. P., Chen, S. L., Kramlick, J. C., McCarthy, J. M., and Pershing, D. W., "Advanced Selective Reduction Processes for NO<sub>x</sub> Control," *Nature*, 335: 620–622 (1988).
59. Sarv, H., and Rodgers, L. W., "NO<sub>x</sub> Reduction in an Industrial-Scale Boiler by Injecting Cyanuric Acid Powder," Paper WSS/CI 89-87, 1989 Fall Meeting, Western States Section/The Combustion Institute, Livermore, CA, 23–24 October 1989.
60. Muzio, L. J., Montgomery, T. A., Quartucy, G. C., Cole, J. A., and Kramlick, J. C., " $\text{N}_2\text{O}$  Formation in Selective Non-Catalytic NO<sub>x</sub> Reduction Processes," *Proceedings: 1991 Joint Symposium on Stationary Combustion NO<sub>x</sub> Control*, Vol. 2, EPRI GS-7447, Electric Power Research Institute, Palo Alto, CA, pp. 5A73–5A96, November 1991.
61. Kjærgaard, K., Glarborg, P., Dam-Johansen, K., and Miller, J. A., "Pressure Effects on the Thermal De-NO<sub>x</sub> Process," *Twenty-Sixth Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, pp. 2067–2074, 1996.
62. May, P. A., Campbell, L. M., and Johnson, K. L., "Environmental and Economic Evaluation of Gas Turbine SCR NO<sub>x</sub> Control," *Proceedings: 1991 Joint Symposium on Stationary Combustion NO<sub>x</sub> Control*, Vol. 2, EPRI GS-7447, Electric Power Research Institute, Palo Alto, CA, pp. 5B19–5B36, November 1991.
63. Behrens, E. S., Ikeda, S., Teruo, Y., Mittelbach, G., and Makato, Y., "SCR Operating Experience on Coal-Fired Boilers and Recent Progress," *Proceedings: 1991 Joint Symposium on Stationary Combustion NO<sub>x</sub> Control*, Vol. 1, EPRI GS-7447, Electric Power Research Institute, Palo Alto, CA, pp. 4B59–4B77, November 1991.
64. Robie, C. P., Ireland, P. A., and Cichanowicz, J. E., "Technical Feasibility and Cost of SCR for U.S. Utility Application," *Proceedings: 1991 Joint Symposium on Stationary Combustion NO<sub>x</sub> Control*, Vol. 1, EPRI GS-7447, Electric Power Research Institute, Palo Alto, CA, pp. 4B81–4B100, November 1991.
65. Hums, E., "Standstill in Advanced SCR Technology? A Provocation for the Academic Community and Catalyst Manufacturers," *Reduction of NO<sub>x</sub> and SO<sub>x</sub> from Combustion Sources, Proceedings of the 1997 214th National Meeting of the American Chemical Society*, American Chemical Society, Washington, DC, pp. 778–780, 1997.
66. Bowman, C. T., "Kinetics of Pollutant Formation and Destruction in Combustion," *Progress in Energy and Combustion Science*, 1: 33–45 (1975).
67. Sarofim, A. F., and Flagan, R. C., "NO<sub>x</sub> Control for Stationary Combustion Sources," *Progress in Energy and Combustion Sciences*, 2: 1–25 (1976).


68. Rosenberg, H. S., Curran, L. M., Slack, A. V., Ando, J., and Oxley, J. H., "Post Combustion Methods for Control of NO<sub>x</sub> Emissions," *Progress in Energy and Combustion Science*, 6: 287–302 (1980).
69. Correa, S. M., "A Review of NO<sub>x</sub> Formation Under Gas-Turbine Combustion Conditions," *Combustion Science and Technology*, 87: 329–362 (1992).
70. Plee, S. L., Ahmad, T., and Myers, J. P., "Diesel NO<sub>x</sub> Emissions—A Simple Correlation Technique for Intake Air Effects," *Nineteenth Symposium (International) on Combustion*, The Combustion Institute, Pittsburgh, PA, pp. 1495–1502, 1983.
71. Ahmad, T., and Plee, S. L., "Application of Flame Temperature Correlations to Emissions from a Direct-Injection Diesel Engine," Paper 831734, *SAE Transactions*, 92: 4.910–4.921 (1983).
72. Rizk, N. K., and Mongia, H. C., "Three-Dimensional NO<sub>x</sub> Model for Rich/Lean Combustor," AIAA Paper AIAA-93-0251, 1993.
73. Davis, L. B., and Washam, R. M., "Development of a Dry Low NO<sub>x</sub> Combustor," ASME 89-GT-255, Gas Turbine and Aeroengine Congress and Exposition, Toronto, ON, 4–8 June 1988.
74. Greeves, G., Khan, I. M., Wang, C. H. T., and Fenne, I., "Origins of Hydrocarbon Emissions from Diesel Engines," SAE Paper 770259, 1977.
75. Levins, P. C., Kendall, D. A., Caragay, A. B., Leonardos, G., and Oberholter, J. E., "Chemical Analysis of Diesel Exhaust Odor Species," SAE Paper 740216, 1974.
76. Lefebvre, A. H., *Gas Turbine Combustion*, Hemisphere, Washington, DC, 1983.
77. Flagan, R. C., and Seinfeld, J. H., *Fundamentals of Air Pollution Engineering*, Prentice Hall, Englewood Cliffs, NJ, 1988.
78. Heinsohn, R. J., and Kabel, R. L., *Sources and Control of Air Pollution—Engineering Principles*, Prentice Hall, Upper Saddle River, NJ, 1999.

---

## QUESTIONS AND PROBLEMS

- 15.1** Make a list of the bold-faced words in Chapter 15 and discuss their meaning and significance.
- 15.2** Discuss the implications of each of the following to environmental and human health effects: nitric oxide, sulfur trioxide, unburned hydrocarbons, carbon monoxide, and diesel exhaust particulate matter.
- 15.3** A value of 375 ppm was obtained for a "wet" measurement of nitric oxide in a combustion product stream containing 5 percent O<sub>2</sub>. Does correcting the nitric oxide measurement to 3 percent O<sub>2</sub> result in a lower, higher, or unchanged value? Does converting the NO measurement to a "dry basis" result in a lower, higher, or unchanged value?

- 15.4** Calculate the nitric oxide emission index for a combustor burning ethane ( $C_2H_6$ ) with air, given the following mole fraction measurements in the exhaust duct:  $\chi_{CO_2} = 0.110$ ,  $\chi_{O_2} = 0.005$ ,  $\chi_{H_2O} = 0.160$ , and  $\chi_{NO} = 185 \cdot 10^{-6}$ . Assume that the CO and unburned hydrocarbon concentrations are negligible. Do your results depend on whether the concentrations are “wet” or “dry”?
- 15.5** A natural gas-fired, stationary gas-turbine engine is used for electrical power generation. The exhaust emission level of nitric oxide is 20 ppm (by vol.), measured in the exhaust with an oxygen concentration of 13 percent (by vol.). No aftertreatment (SNCR or SCR) is used.
- What is the nitric oxide concentration corrected to 3 percent oxygen?
  - Determine the  $NO_x$  emission index in grams of  $NO_x$  ( $NO_2$  equivalent) per kilogram of fuel burned. Assume that the natural gas is essentially all methane.
  - Would this engine meet the California South Coast Air Quality Management District—Rule 1134 emission standards?
- 15.6** A heavy-duty naturally aspirated diesel engine is being evaluated on a dynamometer test stand. Operating at an air–fuel ratio of 21:1 with a fuel flowrate of  $4.89 \cdot 10^{-3}$  kg/s, the engine produces 80 kW of brake power. The multicomponent fuel has the equivalent formula  $C_{12}H_{22}$ . The unburned hydrocarbon concentration measured in the exhaust stream is 120 ppm  $C_1$  (wet basis).
- Determine the unburned hydrocarbon concentration of a dry basis.
  - Determine the unburned hydrocarbon emission index (g/kg) for the engine. Assume that the hydrogen–carbon ratio of the unburned  $C_1$  equivalent is the same as the original fuel molecule.
  - Find the brake-specific unburned hydrocarbon emission in g/kW-hr for the engine.
- 15.7** An engineer runs a test on an experimental aircraft engine burning isoctane ( $C_8H_{18}$ ) and measures the burned gas composition using the sampling system sketched below:

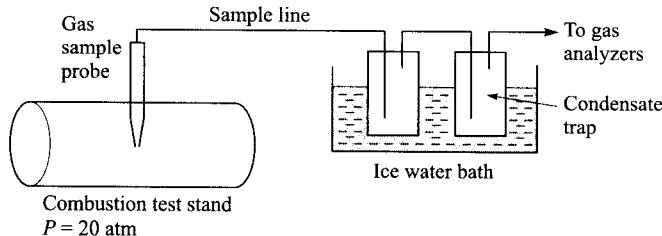

A water-cooled gas sample probe withdraws a sample of the hot burned gas. The sample gas passes through two condensate traps held in an ice bath to remove water, so all of the analyzers receive essentially dry gas.

The gas analyzers record the following gas composition: 8.44 percent  $CO_2$ , 8.79 percent  $O_2$ , 76 ppm  $NO_x$ , 44 ppm CO, and 15 ppm unburned hydrocarbons.

- A. What are the  $\text{NO}_x$ , CO, and unburned hydrocarbon concentrations on a dry 15-percent- $\text{O}_2$  basis?
- B. What are the  $\text{NO}_x$ , CO, and unburned hydrocarbon concentrations on a dry 3-percent- $\text{O}_2$  basis?
- C. What is the  $\text{NO}_x$  emission index in g/kg-fuel?

**15.8** A utility company operates a 250-MW combined-cycle power plant, fired with natural gas ( $\text{CH}_4$ ). A government inspector has arrived to verify that the power plant is in compliance with all applicable emissions regulations. If the power plant is emitting more than 25 ppm  $\text{NO}_x$  (on a dry-15-percent- $\text{O}_2$  basis), the plant will not be in compliance.

The inspector withdraws a gas sample from the stack and measures the following dry gas composition using portable gas analyzers: 4.4 percent  $\text{CO}_2$ , 14.5 percent  $\text{O}_2$ , 29 ppm  $\text{NO}_x$ , and 42 ppm CO.

- A. Based upon the inspector's measurements, what are the  $\text{NO}_x$  emissions from the power plant (on a dry 15-percent- $\text{O}_2$  basis)? Is the plant in compliance?
- B. The plant supervisor has asked the chief engineer to review the inspector's gas measurements. The chief engineer knows that the plant runs at an overall equivalence ratio of 0.4. Based on this observation, and assuming complete combustion, calculate the dry  $\text{O}_2$  concentration that the inspector's  $\text{O}_2$  analyzer **should** have read. Using this new  $\text{O}_2$  concentration, recalculate the  $\text{NO}_x$  emissions from the power plant. Is the power plant in compliance now or not? Should the inspector check the calibration of his  $\text{O}_2$  analyzer and visit the plant again?

**15.9** Consider the idealized combustion of a hydrocarbon fuel ( $\text{CH}_4$ ) and air in stoichiometric proportions. Assume no dissociation and constant and equal specific heats for reactants and products of  $1200 \text{ J/kg-K}$ . Assume a fuel heating value of  $4 \cdot 10^7 \text{ J/kg}$ .

- A. Calculate the adiabatic constant-pressure flame temperatures for zero, 10 and 20 percent of the undiluted reactants (by mass) exhaust-gas recycle. Assume that both the reactants and recycled gas are initially at 300 K.
- B. Repeat the calculations of part A, but assume the recycled gas is at 1200 K and the air and fuel are at 300 K.
- C. Discuss the implications of your calculations for  $\text{NO}_x$  production.

**15.10** Explain the differences among the nitric oxide formation mechanisms denoted simple thermal (Zeldovich) mechanism, superequilibrium mechanism, and the prompt Fenimore mechanism. Use information from Chapter 5 as necessary.

**15.11** Derive an expression for  $d[\text{NO}]/dt$  for the thermal NO mechanism assuming equilibrium  $[\text{O}]$  concentrations and steady-state  $[\text{N}]$ . Neglect reverse reactions. Eliminate  $[\text{O}]_e$  as a variable, using  $[\text{O}_2]_e$  instead from the equilibrium  $\frac{1}{2}\text{O}_2 \leftrightarrow \text{O}$ . *Hint:* Your final result should involve only the forward rate constant  $k_1$  for the

reaction  $\text{O} + \text{N}_2 \rightarrow \text{NO} + \text{N}$ , the equilibrium constant  $K_p$ ,  $[\text{O}_2]_e$ ,  $[\text{N}_2]_e$ , and the temperature.

**15.12\*** Starting with the result from problem 15.11,

- A. Convert your expression involving molar concentrations ( $\text{kmol}/\text{m}^3$ ) to one involving mole fractions.
- B. Calculate the initial rate of NO formation ( $\text{ppm}/\text{s}$ ) for  $k_1 = 7.6 \cdot 10^{10} \exp(-38,000/T(\text{K})) \text{ m}^3/\text{kmol}\cdot\text{s}$  and  $K_p = 3.6 \cdot 10^3 \exp(-31,090/T(\text{K}))$  for the following conditions:
  - i.  $\chi_{\text{O}_2,e} = 0.20$ ,  $\chi_{\text{N}_2,e} = 0.67$ ,  $T = 2000$ ,  $P = 1 \text{ atm}$ .
  - ii.  $\chi_{\text{O}_2,e} = 0.10$ , with other conditions as part i.
  - iii.  $\chi_{\text{O}_2,e} = 0.05$ , with other conditions as part i.
  - iv.  $\chi_{\text{O}_2,e} = 0.20$ ,  $\chi_{\text{N}_2,e} = 0.67$ ,  $T = 1800$ ,  $P = 1 \text{ atm}$ .
  - v.  $T = 2200$ , with other conditions as part iv.
- C. Plot your results from part B to show the effects of  $\chi_{\text{O}_2,e}$  and  $T$ . Use separate graphs. Discuss.

**15.13** Discuss the fundamental differences between the origins of unburned hydrocarbons in spark-ignition engines and gas-turbine engines. What source of unburned hydrocarbons occurs with diesel engines that is not present in either SI or gas-turbine engines?

**15.14** The CO emissions measured in the tailpipe of a spark-ignition engine are 2000 ppm. Calculations show that the equilibrium concentration of CO for the tailpipe conditions is 2 ppm. Explain the origin of the 2000 ppm CO level in the tailpipe.

**15.15\*** Use an equilibrium code to determine the equilibrium composition of the products of  $\text{CH}_4$ -air combustion over a range of equivalence ratios from 1.0 to 1.4 for the following conditions: (i)  $T = 2000 \text{ K}$  and  $P = 10 \text{ atm}$ , (ii)  $T = 925 \text{ K}$  and  $P = 1 \text{ atm}$ .

- A. Plot the CO mole fractions versus  $\Phi$  for both cases on the same graph.
- B. Assuming conditions i approximate a point early in the SI engine expansion process, and conditions ii approximate conditions in the exhaust pipe, what are the implications of the plot you made in part A?

**15.16** Discuss why the formation of  $\text{SO}_3$  in a combustion system is more undesirable than the formation of  $\text{SO}_2$ .

**15.17** An oil-fired industrial boiler uses No. 2 fuel oil. Estimate the likely range of concentrations of  $\text{SO}_2$  in the flue gases for an  $\text{O}_2$  level of 3 percent.

| \*Indicates required use of computer.

# 16

## Detonations

---

### OVERVIEW

In this chapter, we explore the differences between detonations and flames (deflagrations) and then proceed to develop a simple, one-dimensional analysis of a detonation wave in the same spirit as previous analyses of flames. From this analysis, approximate expressions are developed to estimate detonation velocities. The chapter concludes with a brief discussion of both the idealized, one-dimensional structure of a detonation wave and the complex, three-dimensional structure of real detonations.

---

### PHYSICAL DESCRIPTION

#### Definition

In Chapter 8, we simply defined a detonation as a combustion wave propagating at supersonic velocities. We now expand that definition to relate a detonation to a shock wave, a concept that you may have seen in an introductory fluid mechanics course: a **detonation** is a **shock wave** sustained by the energy released by combustion. The combustion process, in turn, is initiated by the shock-wave compression and the resulting high temperatures. Thus, we see that a detonation comprises the interaction between a hydrodynamic process, the shock wave, and a thermochemical process, the combustion.<sup>1</sup>


<sup>1</sup>In some literature, the term detonation refers to a rapid homogeneous energy release in a combustible mixture, i.e., an explosion. An example of this is the use of the word detonation to refer to engine knock (see Example 6.1).

## Principal Characteristics

A detonation can be initiated by igniting a combustible mixture at the closed end of a long tube that is open at the opposite end. In this situation, the flame initiated at the closed end is accelerated as it propagates through the mixture as a result of the expansion of the burned gas confined between the flame and the closed end. This acceleration leads to the formation of a shock wave preceding the combustion zone and propagation at supersonic velocities.

Figure 16.1 illustrates a control volume containing the detonation wave. In the laboratory frame, the detonation wave moves downstream, i.e., from right to left in the figure; however, by fixing the coordinate system to the detonation wave, the wave is stationary, with the reactants entering at a velocity  $v_{x,1}$ , and combustion products exiting at a velocity  $v_{x,2}$ . The qualitative differences between the upstream and downstream properties across the detonation wave for the most part are quite similar to the property differences across an ordinary **normal shock**. The principal difference is that, while for the normal shock the downstream velocity is always subsonic, for the detonation this velocity is always the local speed of sound.

To obtain somewhat quantitative comparisons of normal shocks (no combustion), detonations, and deflagrations, Table 16.1 shows upstream and downstream Mach numbers ( $Ma \equiv v/c$ ) and the ratios of downstream-to-upstream properties. Here we see that the normal-shock property ratios are qualitatively similar to those of detonations and of the same order of magnitude, with the caveat that for the detonation,  $v_{x,2}$  is the sonic velocity, as previously indicated. In contrast, when comparing deflagrations with detonations we see that the Mach number increases across the flame,<sup>2</sup> the velocity increases greatly, and the density drops significantly. All these effects are opposite in direction to those corresponding in either shocks or detonations.

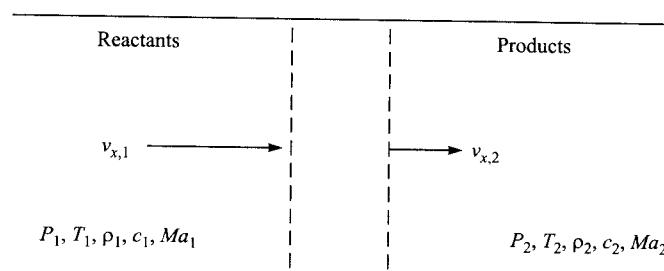

**Figure 16.1** One-dimensional detonation wave in a constant-area duct. The coordinate system is fixed to the wave.

<sup>2</sup>Note, however, that the Mach number is very small and thus is not a very useful parameter to characterize a deflagration.

**Table 16.1** Typical properties of normal shocks, detonations, and deflagrations

Property	Normal shock <sup>a</sup>	Detonation <sup>b</sup>	Deflagration <sup>c</sup>
$Ma_1$	5.0	5–10	0.001
$Ma_2$	0.42	1.0	0.003
$v_{x_2}/v_{x_1}$	0.20	0.4–0.7	7.5
$P_2/P_1$	29	13–55	$\approx 1$
$T_2/T_1$	5.8	8–21	7.5
$\rho_2/\rho_1$	5.0	1.7–2.6	0.13

<sup>a</sup>Properties based on air with  $\gamma = 1.4$  and the upstream Mach number arbitrarily assumed to be 5.0.

<sup>b</sup>Typical values from Friedman [1].

<sup>c</sup>Estimates from laminar, adiabatic combustion of a stoichiometric methane-air mixture at 1 atm with an initial temperature of 298 K.

Another striking difference is that the pressure is essentially constant across a deflagration (actually there is a very slight decrease), while a major feature of a detonation is the high pressure downstream of the propagating wave. The only characteristic shared by detonations, deflagration, and normal shock waves is the large increase in temperature across the wavefront.

## ONE-DIMENSIONAL ANALYSIS

Although the structure of real detonations is highly three-dimensional, considerable insight is provided by a one-dimensional analysis. The first attempts to explain detonations (Chapman in 1899 [2]) relied on a one-dimensional approach, and this approach is still useful today as it provides a foundation from which to build a more detailed understanding.

### Assumptions

If our control volume (Fig. 16.1) is chosen such that the upstream and downstream boundaries lie in regions where there are no temperature or species concentration gradients, we can perform a fairly rigorous analysis with only the following few assumptions:

1. One-dimensional, steady flow.
2. Constant area.
3. Ideal-gas behavior.
4. Constant and equal specific heats.
5. Negligible body forces.
6. Adiabatic conditions (no heat losses to surroundings).

These assumptions are the same as those typically invoked in one-dimensional analyses of normal shocks that you may have seen in your previous studies of thermodynamics or fluid mechanics.

## Conservation Laws

Since the flow is one-dimensional and steady, we can easily write the integral conservation laws for the finite control volume bounded by the dashed lines shown in Fig. 16.1.

**Mass Conservation** For steady flow, the mass flowrate  $\dot{m}$  is constant; moreover, if the area is fixed, the mass flux ( $\dot{m}'' = \dot{m}/A$ ) is also a constant. Thus,

$$\dot{m}'' = \rho_1 v_{x,1} = \rho_2 v_{x,2}. \quad (16.1)$$

**Momentum Conservation** Since there are neither shear nor body forces acting on the control volume, the sole force acting is pressure. Axial momentum conservation is thus simply expressed:

$$P_1 + \rho_1 v_{x,1}^2 = P_2 + \rho_2 v_{x,2}^2. \quad (16.2)$$

**Energy Conservation** Energy conservation is expressed as

$$h_1 + v_{x,1}^2/2 = h_2 + v_{x,2}^2/2, \quad (16.3)$$

where the enthalpy is the absolute (standardized) enthalpy. Splitting out the sensible and heat-of-formation contributions to the total enthalpy is helpful to our analysis in that it explicitly allows us to define a “heat release” or “heat addition” resulting from reaction.

We can write a calorific equation of state,

$$h(T) = \sum Y_i h_{f,i}^o + \sum Y_i \int_{T_{\text{ref}}}^T c_{p,i} dT, \quad (16.4)$$

where the  $h_{f,i}^o$  values are found at the reference temperature. With our assumption of constant specific heats, Eqn. 16.4 simplifies to the following:

$$h(T) = \sum Y_i h_{f,i}^o + c_p (T - T_{\text{ref}}). \quad (16.5)$$

Substituting Eqn. 16.5 into our conservation of energy expression (Eqn. 16.3) yields

$$c_p T_1 + v_{x,1}^2/2 + \left[ \sum_{\text{state 1}} Y_i h_{f,i}^o - \sum_{\text{state 2}} Y_i h_{f,i}^o \right] = c_p T_2 + v_{x,2}^2/2. \quad (16.6)$$

The bracketed term in Eqn. 16.6 is just the heat of combustion per mass of mixture. Adopting the convention frequently found in the literature, we define the “heat addition”  $q$  to be

$$q \equiv \sum_{\text{state 1}} Y_i h_{f,i}^o - \sum_{\text{state 2}} Y_i h_{f,i}^o. \quad (16.7)$$

This notation results in an energy equation that looks like one you may have encountered in your study of compressible gas dynamics:

$$c_p T_1 + v_{x,1}^2/2 + q = c_p T_2 + v_{x,2}^2/2. \quad (16.8)$$

It is important to emphasize that the heat release  $q$  appearing in the above equation is a property of the mixture, the magnitude of which depends on the specific fuel–oxidizer combination and the mixture strength, i.e. the equivalence ratio,  $\Phi$ , as can be seen from its definition (Eqn. 16.7).

**State Relationships** With the assumption of ideal-gas behavior, we can write

$$P_1 = \rho_1 R_1 T_1 \quad (16.9)$$

$$P_2 = \rho_2 R_2 T_2, \quad (16.10)$$

where  $R_1$  and  $R_2$  are the specific gas constants ( $R_i = R_u/MW_i$ ). These state relationships, together with the calorific equation of state (Eqn. 16.5) presented above in our discussion of energy conservation, provide closure to our equation set.

## Combined Relations

In this section, we combine the above conservation and state relationships to obtain a qualitative understanding of a detonation wave.

**The Rayleigh Line** Simultaneous solution of the continuity and momentum conservation equations, Eqns. 16.1 and 16.2, yields the following relationships:

$$\frac{P_2 - P_1}{1/\rho_2 - 1/\rho_1} = -\dot{m}''^2 \quad (16.11a)$$

or, using the specific volume,  $v$ ,

$$\frac{P_2 - P_1}{v_2 - v_1} = -\dot{m}''^2. \quad (16.11b)$$

Using Eqn. 16.11 to plot  $P$  versus  $1/\rho (= v)$  for a fixed flowrate results in the **Rayleigh line**. For example, fixing  $P_1$  and  $v_1$  and rearranging Eqn. 16.11b yields the generic linear relationship

$$P = av_2 + b, \quad (16.12a)$$

where the slope  $a$  is given by

$$a = -\dot{m}''^2 \quad (16.12b)$$


and the intercept  $b$  is given by

$$b = P_1 + \dot{m}''^2 v_1. \quad (16.12c)$$

Figure 16.2 shows a plot of a Rayleigh line for state 1 fixed by  $P_1$  and  $v_1$ . Increasing the mass flux  $\dot{m}''$  causes the line to steepen, pivoting through the point  $(P_1, v_1)$ . In the limit of an infinite mass flux, the Rayleigh line would be vertical; while in the opposing limit of zero mass flux, the line becomes horizontal. Since these two extremes contain all possible mass fluxes, no solutions to Eqn. 16.11 are possible in the two quadrants labeled A and B formed by the dashed lines going through point  $(P_1, v_1)$ . Regions A and B are physically inaccessible. We will use this fact later to help decide what final states are possible for a detonation wave.

**The Rankine–Hugoniot Curve** The Rankine–Hugoniot curve<sup>3</sup> results when we require that the energy equation (Eqn. 16.8) be satisfied in addition to the continuity and momentum conservation equations (Eqns. 16.1 and 16.2). Combining Eqns. 16.1, 16.2, and 16.8, and employing the ideal-gas equation of state and other ideal-gas relations (e.g.,  $\gamma \equiv c_p/c_v$ ), yields the following:

$$\frac{\gamma}{\gamma - 1} (P_2/\rho_2 - P_1/\rho_1) - \frac{1}{2} (P_2 - P_1)(1/\rho_1 + 1/\rho_2) - q = 0 \quad (16.13a)$$

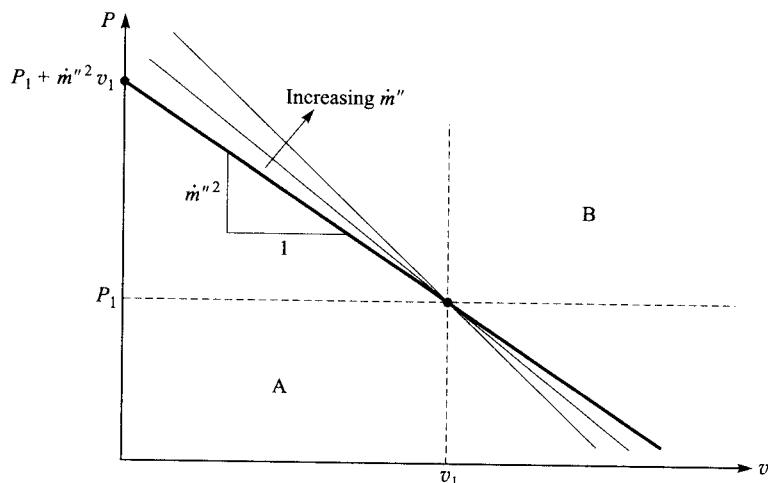

**Figure 16.2** Bold line with slope  $-\dot{m}''^2$  is the Rayleigh line for flow defined by  $\dot{m}''$ ,  $P_1$ , and  $v_1$ . Increasing the mass flux  $\dot{m}''$  while maintaining the initial state  $(P_1, v_1)$  causes the slope of the line to become steeper (more negative).

| <sup>3</sup>This is sometimes referred to as simply the Hugoniot curve.

or

$$\frac{\gamma}{\gamma-1}(P_2 v_2 - P_1 v_1) - \frac{1}{2}(P_2 - P_1)(v_1 + v_2) - q = 0. \quad (16.13b)$$

Detailed derivation of the above is left as an exercise for the reader.

Let us assume that the heat release  $q$  is a known parameter. We also fix the values of  $P_1$  and  $v_1$  as we did before in our analysis of the Rayleigh line. Equation 16.13b then becomes a transcendental relation between  $P_2$  and  $v_2$ ; i.e.,


$$f(P_2, v_2) = 0, \quad (16.14a)$$

or, more generically,

$$f(P, v) = 0. \quad (16.14b)$$

We can now plot the pressure  $P$  as a function of specific volume  $v$  for  $P_1$ ,  $v_1$ , and  $q$  fixed at particular known values. The point  $(P_1, v_1)$  is sometimes referred to as the origin of the Rankine–Hugoniot curve. Figure 16.3 illustrates the particular Rankine–Hugoniot curve associated with the fixed values  $P_1$ ,  $v_1$ , and  $q_1$ . In this figure, we indicate the origin as point A, and define the **upper branch** of the Hugoniot curve as those points on the Hugoniot lying above point B and the **lower branch** as those points lying below point C.

We now proceed to determine what points on the Hugoniot correspond to realizable physical states. Since any real process going from state 1 to state 2 must satisfy both the Rayleigh relation (Eqn. 16.11) **and** the Hugoniot relation (Eqn. 16.13), we immediately see that the points between B and C on the

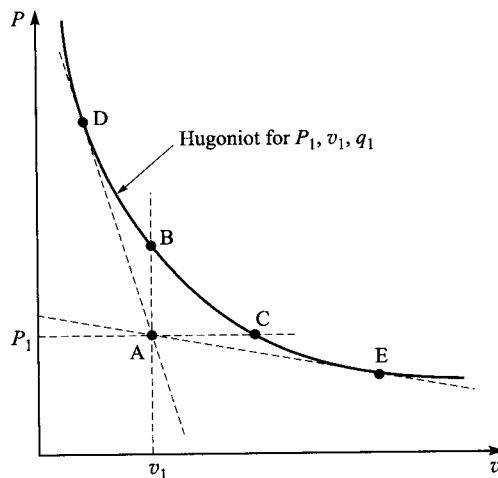

**Figure 16.3** Rankine–Hugoniot curve for  $q = q_1$  with origin A at  $(P_1, v_1)$ . Note that the curve does not actually pass through the so-called origin. Dashed lines passing through A are Rayleigh lines.

Hugoniot curve are unrealizable because no valid Rayleigh line can be drawn between point A and any point between B and C. We also see that, for the upper branch of the Hugoniot, there is a limiting Rayleigh line that is just tangent to the Hugoniot at point D. This point of tangency is designated the **upper Chapman–Jouguet point**. Similarly, there is a limiting Rayleigh line, just tangent to the lower branch of the Hugoniot. This point of tangency is called the **lower Chapman–Jouguet point**.

The four limiting Rayleigh lines (A–D, A–B, A–C, and A–E) divide the Hugoniot into five segments. The physical characteristics associated with each Hugoniot segment are presented in Table 16.2. Above the upper Chapman–Jouguet point (D) are states associated with **strong detonations**. Although these states are mathematically realizable for our one-dimensional analysis, strong detonations are difficult to produce [3]. Between D and B is the region of **weak detonations**. Weak detonations, too, require special conditions (very rapid reaction rate) for them to occur. Although real detonations are not one-dimensional, conditions at the upper Chapman–Jouguet point reasonably approximate those associated with actual detonations. It can be shown that, at the upper Chapman–Jouguet point,  $v_{x,2}$ , the velocity of the burned gas relative to the traveling detonation wave is the sonic velocity.

Before we focus our attention on the structure of detonations, it is useful to see how we might fit together what we learned in Chapter 8 about laminar premixed flames, i.e., deflagrations, and the information contained in the Hugoniot curve of Fig. 16.3. Consider a point on the Hugoniot just below C to be representative of the conditions in the burned gases behind a one-dimensional flame. We note, first, that the pressure is just slightly less than that of the unburned gases. This is consistent with our assumption that the pressure is uniform throughout a flame and adds the information that there is actually a small pressure drop associated with the flame. The second point we wish to make is that the burned gas state must lie below C, as the Rayleigh line, A–C, associated with point C is a horizontal line. Since the slope of the Rayleigh line is  $-\dot{m}^2$ , the flow rate associated with A–C is zero; hence, the physically inaccessible region includes the point C.

**Table 16.2** Physical phenomena associated with various segments of the Hugoniot curve

Region or Segment of Hugoniot Curve	Characteristic	Burned Gas Velocity, <sup>a</sup> $v_{x,2}$
Above D	Strong detonation	Subsonic
D–B	Weak detonation	Supersonic
B–C	Inaccessible	—
C–E	Weak deflagration	Subsonic
Below E	Strong deflagration	Supersonic

<sup>a</sup>Relative to wavefront.

In Chapter 8, we learned that typical flame speeds for hydrocarbon–air mixtures are typically less than 1 m/s; thus, the mass fluxes ( $\dot{m}'' = \rho_u S_L$ ) associated with such flames are quite small, especially when compared with the mass flux of a detonation traveling at supersonic speeds. For example, the mass flux for a stoichiometric methane–air mixture with reactants at 1 atm and 298 K is  $0.45 \text{ kg/s-m}^2$ ; while for an equivalent detonation, the estimated mass flux is  $2000 \text{ kg/s-m}^2$ . We conclude then that the slope of the Rayleigh line associated with a real flame in Fig. 16.3 must be quite small. This is our justification for choosing a point below C to be representative of a real flame.

**Example 16.1**

A combustion wave propagates with a mass flux of  $3500 \text{ kg/s-m}^2$  through a mixture initially at 298 K and 1 atm. The molecular weight and specific-heat ratio of the mixture (burned and unburned) are 29.0 kg/kmol and 1.30, respectively, and the heat release is  $3.40 \cdot 10^6 \text{ J/kg}$ . Determine the state  $(P_2, v_2)$  of the burned gas and determine in which region this state lies on the Rankine–Hugoniot curve. Also, determine the Mach number of the burned gases.

**Solution**

Before performing any calculations, we can obtain some insight into the problem solution by referring to Fig. 16.3. First, we note that the final state must lie above point B or below point C on the Hugoniot, as the region B–C is inaccessible. We also know that, if the burned gas state lies below C, the resulting combustion wave will be a deflagration. The given mass flux of  $3500 \text{ kg/s-m}^2$  is quite large compared with deflagrations associated with ordinary fuels for the given unburned state properties; i.e., typical mixture densities and flame (deflagration) speeds are both of the order of unity, so  $\dot{m}'' = \rho_u S_L$  is also of the order of unity, a value much smaller than 3500. We thus conclude that the final state most likely lies above B. Furthermore, unless by coincidence the final state happens to be at the upper Chapman–Jouguet point, two possible final states will exist since a Rayleigh line passing through the origin at A crosses the Hugoniot twice: first, at a location between B and D and, again, at a location above D. This preliminary exercise also shows that to obtain the solution requires the simultaneous solution of Eqn. 16.11b (the Rayleigh line) and Eqn. 16.13b (the Hugoniot curve).

To effect this simultaneous solution, we solve Eqn. 16.11b for  $P_2$ ; that is,

$$P_2 = P_1 + \dot{m}''^2(v_1 - v_2),$$

and substitute this result into Eqn. 16.13b to yield

$$\begin{aligned} \frac{\gamma}{\gamma-1} &\left[ [P_1 + \dot{m}''^2(v_1 - v_2)]v_2 - P_1 v_2 \right] \\ &- \frac{1}{2} \left[ [P_1 + \dot{m}''^2(v_1 - v_2)] - P_1 \right] (v_1 - v_2) - q = 0. \end{aligned}$$

Expanding the above and collecting terms, we obtain the following quadratic equation in  $v_2$ :

$$av_2^2 + bv_2 + c = 0,$$

where

$$\begin{aligned} a &= \frac{1+\gamma}{2(1-\gamma)} \dot{m}''^2, \\ b &= \frac{\gamma}{\gamma-1} (P_1 v + \dot{m}''^2 v_1), \\ c &= \frac{\gamma}{1-\gamma} P_1 v_1 - \frac{1}{2} \dot{m}''^2 v_1^2 - q. \end{aligned}$$

To evaluate  $a$ ,  $b$ , and  $c$  numerically requires a value for  $v_1$ . This we easily obtain through the ideal-gas equation of state; i.e.,

$$v_1 = \frac{R_1 T_1}{P_1} = \frac{(8315/29)298}{101,325} = 0.843 \text{ m}^3/\text{kg}.$$

Thus,

$$\begin{aligned} a &= \frac{1+1.3}{2(1-1.3)} (3500)^2 = -4.696 \cdot 10^7, \\ b &= \frac{1.3}{1.3-1} (101,325 + (3500)^2 0.843) = 4.519 \cdot 10^7, \\ c &= \frac{1.3}{1-1.3} 101,325(0.843) - 0.5(3500)^2(0.843)^2 - 3.4 \cdot 10^6 = -8.122 \cdot 10^6. \end{aligned}$$

Solving for  $v_2$ ,

$$\begin{aligned} v_2 &= \frac{-b \pm (b^2 - 4ac)^{1/2}}{2a} \\ &= \frac{-4.519 \cdot 10^7 \pm \left[ (-4.519 \cdot 10^7)^2 - 4(-4.696 \cdot 10^7)(-8.122 \cdot 10^6) \right]^{1/2}}{2(-4.696 \cdot 10^7)} \\ &= \frac{0.9623 \pm 0.4839}{2} \end{aligned}$$

$$v_2 = 0.723 \text{ or } 0.239 \text{ m}^3/\text{kg}$$

We can now apply Eqn. 16.11b to determine the pressures associated with each of the specific volumes:

$$P_2 = P_1 + \dot{m}''^2(v_1 - v_2),$$

which for  $v_2 = 0.723$  yields

$$P_2 = 101,325 + (3500)^2 (0.843 - 0.723)$$

$$P_2 = 1.57 \cdot 10^6 \text{ Pa}$$

and for  $v_2 = 0.239$ , yields

$$P_2 = 7.50 \cdot 10^6 \text{ Pa}$$

We see that, as expected, two burned gas states result. The first solution ( $P_2 = 1.57 \cdot 10^6 \text{ Pa}$ ,  $v_2 = 0.723 \text{ m}^3/\text{kg}$ ) lies on the Hugoniot somewhere between points B and D (see Fig. 16.3); while the second solution ( $P_2 = 7.50 \cdot 10^6 \text{ Pa}$ ,  $v_2 = 0.239 \text{ m}^3/\text{kg}$ ) lies above D.

To calculate the Mach numbers requires that we know both the velocities and local sound speeds. The velocities are calculated from the mass flux,  $\dot{m}''$  ( $= \rho_2 v_{x,2} = v_{x,2}/v_2$ ):

$$\begin{aligned} v_{x,2} &= \dot{m}'' v_2 \\ &= 3500 (0.723) \text{ or } 3500 (0.239) \\ &= 2530 \text{ or } 837 \text{ m/s.} \end{aligned}$$

To calculate the sound speed, we first determine the state-2 temperature from the ideal-gas equation of state:

$$\begin{aligned} T_2 &= P_2 v_2 / R_2 \\ &= \frac{1.57 \cdot 10^6 (0.723)}{286.7} = 3960 \text{ K} \end{aligned}$$

or

$$T_2 = \frac{7.50 \cdot 10^6 (0.239)}{286.7} = 6250 \text{ K,}$$

where  $R_2 = 8315/29 = 286.7 \text{ J/kg-K}$ . Thus,

$$\begin{aligned} c_2 &= (\gamma_2 R_2 T_2)^{1/2} \\ &= [1.3(286.7)3960]^{1/2} = 1210 \text{ m/s} \end{aligned}$$

or

$$c_2 = [1.3(286.7)6250]^{1/2} = 1530 \text{ m/s.}$$

Applying the definition  $Ma = v_x/c$ , the two corresponding Mach numbers are now readily determined:

$$Ma_2 = v_{x,2}/c_2$$

$$Ma_2 = 2530/1210 = 2.09$$

or

$$Ma_2 = 837/1530 = 0.55$$

#### Comment

This example clearly illustrates how the burned gas states in a detonation are determined by the simultaneous solution of the Rayleigh line and the Hugoniot curve. The first of two solutions ( $Ma_2 = 2.09 > 1$ ) lies in the weak detonation region in which velocities are supersonic (cf. Table 16.2); while the second ( $Ma_2 = 0.55 < 1$ ) represents a strong detonation, where velocities are subsonic.

## DETONATION VELOCITIES

In Chapter 8, the concept of flame speed was a major focus of our study of laminar premixed flames. In the same spirit, we now use the analysis of the previous section to determine detonation velocities. To accomplish this goal, we need add only one assumption to our previous list:

The pressure of the burned gases is much greater than that of the unburned mixture, i.e.,  $P_2 \gg P_1$ .

We see from Table 16.1 that this is a reasonable approximation since  $P_2$  is typically more than an order of magnitude greater than  $P_1$ .

To start our analysis, we define the **detonation velocity**,  $v_D$ , to be equal to the velocity at which the unburned mixture enters the detonation wave for an observer riding with the detonation. This definition is analogous to, and consistent with, our definition of the laminar flame speed in Chapter 8. From Fig. 16.1, it is obvious that

$$v_D \equiv v_{x,1}. \quad (16.15)$$

Recognizing that state 2 for the detonation is the upper Chapman-Jouguet point, where the gas velocity is sonic, we rewrite mass conservation (Eqn. 16.1) as

$$\rho_1 v_{x,1} = \rho_2 c_2. \quad (16.16)$$

Solving for  $v_{x,1}$  and utilizing the fact that  $c_2 = (\gamma R_2 T_2)^{1/2}$ , we obtain

$$v_{x,1} = \frac{\rho_2}{\rho_1} (\gamma R_2 T_2)^{1/2}. \quad (16.17)$$

Our problem now is to relate the density ratio,  $\rho_2/\rho_1$ , and  $T_2$  to upstream (state 1) or other known quantities. To find an appropriate expression for  $\rho_2/\rho_1$ , we start with momentum conservation Eqn. 16.2, divide through by  $\rho_2/v_{x,2}^2$ , and neglect  $P_1$  compared with  $P_2$ , since we have assumed that  $P_2 \gg P_1$ . This yields the following:

$$\frac{\rho_1 v_{x,1}^2}{\rho_2 v_{x,2}^2} - \frac{P_2}{\rho_2 v_{x,2}^2} = 1. \quad (16.18)$$

We now apply continuity (Eqn. 16.1) to eliminate  $v_{x,1}(= (\rho_2/\rho_1)v_{x,2})$  and solve the resulting expression for the density ratio  $\rho_2/\rho_1$ ; i.e.,

$$\frac{\rho_2}{\rho_1} = 1 + \frac{P_2}{\rho_2 v_{x,2}^2}. \quad (16.19)$$

The next step is to replace  $v_{x,2}^2$  with  $c_2^2 (= \gamma R_2 T_2)$ ; thus,

$$\frac{\rho_2}{\rho_1} = 1 + \frac{P_2}{\rho_2 \gamma R_2 T_2}. \quad (16.20)$$

The final step is to recognize that, for an ideal gas,  $P_2 = \rho_2 R_2 T_2$ . With this, Eqn. 16.20 simplifies to the following:

$$\frac{\rho_2}{\rho_1} = 1 + \frac{1}{\gamma} = \frac{\gamma + 1}{\gamma}. \quad (16.21)$$

We now focus on relating  $T_2$  to known quantities. Solving the energy conservation equation (Eqn. 16.8) for  $T_2$  yields

$$T_2 = T_1 + \frac{v_{1,x}^2 - v_{2,x}^2}{2c_p} + \frac{q}{c_p}. \quad (16.22)$$

As before, we can eliminate  $v_{x,1}$  through continuity (Eqn. 16.1), and, in turn, substitute for  $v_{x,2}^2$  the square of the sound speed,  $c_2^2 = \gamma R_2 T_2$ . We eliminate the density ratio, which appears from our use of continuity, using Eqn. 16.21. Performing these operations yields the following:

$$T_2 = T_1 + \frac{q}{c_p} + \frac{\gamma R_2 T_2}{2c_p} \left[ \left( \frac{\gamma + 1}{\gamma} \right)^2 - 1 \right]. \quad (16.23)$$

Solving Eqn. 16.23 for  $T_2$  results in

$$T_2 = \frac{2\gamma^2}{\gamma + 1} \left( T_1 + \frac{q}{c_p} \right), \quad (16.24)$$

where the substitution of  $\gamma - 1$  for  $\gamma R_2/c_p$  has been employed. This last substitution is easily derived from the property relation  $c_p - c_v = R_2$ .

We are now in a position to obtain closure on our derivation of an approximate expression for the detonation velocity. To accomplish this, Eqns. 16.21 and 16.24 are substituted into Eqn. 16.17 to yield

$$v_D = v_{x,1} = [2(\gamma + 1)\gamma R_2(T_1 + q/c_p)]^{1/2}. \quad (16.25)$$

We caution that Eqn. 16.25 is approximate, not only because of the approximations employed in specifying the physics, but also because of the numerical approximation that  $P_2 \gg P_1$ .

If we relax the assumption of constant and equal specific heats, the following more accurate, but still approximate, expressions for the state-2 temperature and the detonation velocity can be derived:

$$T_2 = \frac{2\gamma_2^2}{\gamma_2 + 1} \left( \frac{c_{p,1}}{c_{p,2}} T_1 + \frac{q}{c_{p,2}} \right) \quad (16.26)$$

$$v_D = \left[ 2(\gamma_2 + 1)\gamma_2 R_2 \left( \frac{c_{p,1}}{c_{p,2}} T_1 + \frac{q}{c_{p,2}} \right) \right]^{1/2}, \quad (16.27)$$

where  $c_{p,1}$  and  $c_{p,2}$  are mixture specific heats at states 1 and 2, respectively. Similarly, Eqn. 16.21 becomes


$$\rho_2/\rho_1 = (\gamma_2 + 1)/\gamma_2. \quad (16.28)$$

A more exact mathematical description of the one-dimensional detonation wave is presented by Kuo [3] and others [4]. A numerical solution method for such a formulation is described by Gordon and McBride [4] and implemented in the NASA Chemical Equilibrium Code (CEC).

Estimate the detonation velocity for a stoichiometric C<sub>2</sub>H<sub>2</sub>-air mixture initially at 298 K and 1 atm. Neglect dissociation in the products. The molar specific heat of C<sub>2</sub>H<sub>2</sub> at 298 K is 43.96 kJ/kmol-K.

**Example 16.2**
**Solution**

To estimate the detonation velocity, we will apply Eqn. 16.27. To do this requires an estimation of  $q$  and the burned gas properties  $c_{p,2}$ ,  $\gamma_2$ , and  $R_2$ . Also needed is the unreacted mixture specific heat,  $c_{p,1}$ . To obtain these properties, we first determine the compositions of the unreacted and reacted mixtures. Applying Eqns. 2.30 and 2.31 yields

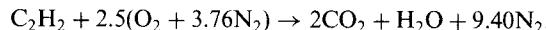

With this, we can determine the species mole and mass fractions:

	$MW_i$	$N_i$	$\chi_i = N_i/N_{\text{tot}}$	$Y_i = \chi_i MW_i / MW_{\text{mix}}$
<i>Reactants (State 1)</i>				
C <sub>2</sub> H <sub>2</sub>	26.038	1	0.0775	0.0705
O <sub>2</sub>	31.999	2.5	0.1938	0.2166
N <sub>2</sub>	28.013	9.4	0.7287	0.7129
$MW_1 = \sum \chi_i MW_i = 28.63$				
<i>Products (State 2)</i>				
CO <sub>2</sub>	44.011	2	0.1613	0.2383
H <sub>2</sub> O	18.016	1	0.0806	0.0487
N <sub>2</sub>	28.013	9.4	0.7581	0.7129
$MW_2 = 29.79$				

Using the above and tabulated values of  $\bar{c}_{p,\text{O}_2}$  and  $\bar{c}_{p,\text{N}_2}$  from Appendix A, we calculate  $c_{p,1}$ :

$$\begin{aligned} c_{p,1} &= \sum_{\text{state 1}} \chi_i \bar{c}_{p,i} / MW_1 \\ &= [0.0775(43.96) + 0.1938(29.315) + 0.7287(29.071)]/28.63 \\ &= 30.272/28.63 = 1.057 \text{ kJ/kg-K}. \end{aligned}$$

To determine the properties at state 2 requires us to guess the temperature  $T_2$  and, subsequently, iterate. We guess  $T_2 = 3500$  K. Using  $\bar{c}_{p,i}$ s at 3500 K from Appendix A,

$$\begin{aligned} c_{p,2} &= \sum_{\text{state 2}} \chi_i \bar{c}_{p,i} / MW_2 \\ &= [0.1613(62.718) + 0.0806(57.076) + 0.7581(37.302)]/29.79 \\ &= 42.995/29.79 = 1.443 \text{ kJ/kg-K}. \end{aligned}$$

We now determine  $R_2$  and  $\gamma_2$ :

$$\begin{aligned} R_2 &= R_u/MW_2 \\ &= 8.315/29.79 = 0.2791 \text{ kJ/kg-K} \end{aligned}$$

$$\begin{aligned} \gamma_2 &= \frac{c_{p,2}}{c_{v,2}} = \frac{c_{p,2}}{c_{p,2} - R_2} \\ &= 1.443/(1.443 - 0.2791) = 1.240. \end{aligned}$$

We calculate  $q$  from Eqn. 16.7 using enthalpies-of-formation from Appendices A and B converted to a mass basis:

$$\begin{aligned} q &= \sum_{\text{state 1}} Y_i h_{f,i}^o - \sum_{\text{state 2}} Y_i h_{f,i}^o \\ &= 0.0705(8708) + 0.2166(0) + 0.7129(0) \\ &\quad - 0.2383(-8942) - 0.0487(-13,424) - 0.7129(0) \\ &= 3398.5 \text{ kJ/kg}. \end{aligned}$$

We now have all of the information to calculate the detonation velocity from Eqn. 16.27:

$$\begin{aligned} v_D &= \left[ 2(\gamma_2 + 1)\gamma_2 R_2 \left( \frac{c_{p,1}}{c_{p,2}} T_1 + \frac{q}{c_{p,2}} \right) \right]^{1/2} \\ &= \left[ 2(2.240)(1.240)279.1 \left( \frac{1.057}{1.443} 298 + \frac{3398.5}{1.443} \right) \right]^{1/2} \\ v_D &= 1998 \text{ m/s} \end{aligned}$$

Note that the above requires the use of  $R_2$  with dimensions of J/kg-K not kJ/kg-K. We now check the reasonableness of our initial guess of  $T_2 = 3500$  K using Eqn. 16.26:

$$\begin{aligned} T_2 &= \frac{2\gamma_2^2}{\gamma_2 + 1} \left( \frac{c_{p,1}}{c_{p,2}} T_1 + \frac{q}{c_{p,2}} \right) \\ &= \frac{2(1.240)^2}{2.240} \left( \frac{1.057}{1.443} 298 + \frac{3398.5}{1.443} \right) \\ &= 3533 \text{ K}. \end{aligned}$$


We could now repeat the calculation with  $c_{p,2}$  and  $\gamma_2$  evaluated at 3533 K; however, we conclude that, for our purposes here, the estimate of  $v_D$  is sufficiently accurate.

#### Comment

With a final temperature of 3533 K, dissociation—an effect we have neglected—is likely to be quite important. Knowing the density ratio (Eqn. 16.28) and the temperature ratio also allows us to estimate how well the approximation  $P_2 \gg P_1$  is met: with  $P_2/P_1 = (\rho_2/\rho_1)(MW_1/MW_2)(T_2/T_1) = (1.806)(28.63/29.79)(3533/298) = 20.6$ , we conclude that the approximation holds to first order.

## STRUCTURE OF DETONATION WAVES

The structure of an actual detonation wave is quite complex. It is useful, however, to think conceptually of a detonation wave as consisting of a leading shock wave followed by a reaction zone. Since the thickness of a shock is of the order of a few molecular mean-free-paths, little or no chemical reaction occurs in this zone. In our study of chemical kinetics in Chapter 4, we saw that the probability of reaction occurring during a collision of reactive molecules is typically much less than unity; therefore, in the shock wave, where there are only a few collisions, reactive collisions become rare events. We thus conclude that the reaction zone follows the shock wave and is considerably greater in thickness. This general picture, idealized as one-dimensional, was conceived independently by Zeldovich [5], von Neumann [6], and Döring [7], and has come to be known as the ZND model of detonation structure. Figure 16.4 schematically illustrates this structure. For the ZND model, it is a relatively easy task to determine the state of the gas downstream of the shock zone before any reaction occurs using ideal-gas shock relationships, while the final state downstream of the reaction zone is determined by the analysis shown in the previous section. The following example illustrates these ideas.

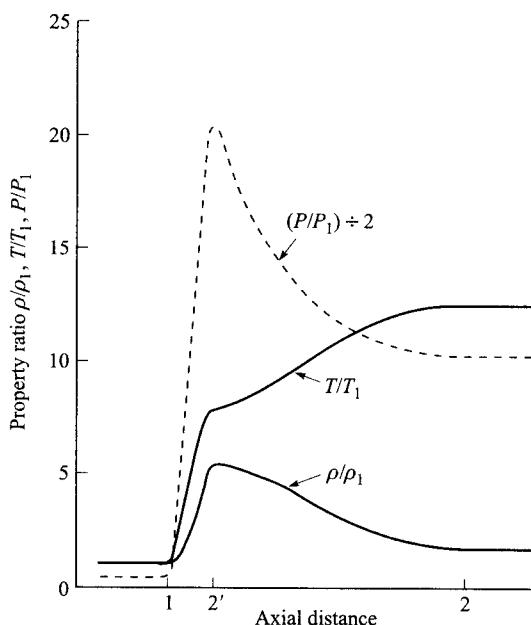

**Figure 16.4** Schematic representation of ZND detonation structure. State points 1, 2', and 2 denote upstream conditions, conditions at the end of the leading shock, and the Chapman–Jouguet point, respectively.

**Example 16.3**

Consider the detonation wave defined in Example 16.2. Using the ZND model for the detonation structure, estimate the gas-mixture properties ( $T$ ,  $P$ ,  $\rho$ , and  $Ma$ ) immediately following the shock front (state 2') and compare these with the properties at the end of the combustion zone (state 2).

**Solution**

To determine the state-2' properties, we employ the following ideal-gas normal-shock equations, which are derived and presented in many basic fluid mechanics and thermodynamics textbooks [8–10]:

$$\frac{P_{2'}}{P_1} = \frac{1}{\gamma + 1} [2\gamma Ma_1^2 - (\gamma - 1)], \quad (\text{I})$$

$$\frac{T_{2'}}{T_1} = [2 + (\gamma - 1) Ma_1^2] \frac{2\gamma Ma_1^2 - (\gamma - 1)}{(\gamma + 1)^2 Ma_1^2}, \quad (\text{II})$$

$$\frac{\rho_{2'}}{\rho_1} = \frac{(\gamma + 1) Ma_1^2}{(\gamma - 1) Ma_1^2 + 2}. \quad (\text{III})$$

To evaluate Eqns. I, II, and III requires only a knowledge of the mixture specific-heat ratio,  $\gamma$ , and the Mach number at state 1. In Example 16.2,  $c_{p,1}$  was calculated to be 1057 J/kg-K; thus,

$$\begin{aligned} c_{v,1} &= c_{p,1} - R_u/MW_1 \\ &= 1057 - 8315/28.63 \\ &= 766.6 \text{ J/kg-K} \end{aligned}$$

and

$$\begin{aligned} Ma_1 &= v_{x,1}/c_1 = v_{x,1}/(\gamma R_1 T_1)^{1/2} \\ &= \frac{1998}{[1.379(8315/28.63) 298]^{1/2}} = \frac{1998}{345.5} \\ &= 5.78. \end{aligned}$$

The state-2' properties are now straightforwardly calculated from Eqns. I and II:

$$\begin{aligned} \frac{P_{2'}}{P_1} &= \frac{1}{1.379 + 1} [(2)1.379(5.78)^2 - (1.379 - 1)] \\ &= 38.57, \end{aligned}$$

so,

$$P_{2'} = 38.57 P_1 = 38.57 (101,325)$$

$$P_{2'} = 3.908 \cdot 10^6 \text{ Pa}$$

$$\begin{aligned}\frac{T_{2'}}{T_2} &= [2 + (1.379 - 1)(5.78)^2] \frac{(2)1.379(5.78)^2 - (1.379 - 1)}{(1.379 + 1)^2(5.78)^2} \\ &= \frac{14.66(91.76)}{189.1} = 7.11,\end{aligned}$$

so

$$T_{2'} = 7.11 T_1 = 7.11 (298)$$

$$T_{2'} = 2119 \text{ K}$$

Rather than applying Eqn. III to find  $\rho_{2'}/\rho_1$ , it is easier to use the ideal-gas equation of state,  $\rho = P/RT$ :

$$\rho_{2'} = \frac{3.908 \cdot 10^6}{(8315/28.63) 2119}$$

$$\rho_{2'} = 6.35 \text{ kg/m}^3$$

For completeness, we calculate the density ratio,

$$\frac{\rho_{2'}}{\rho_1} = \frac{P_{2'}}{P_1} \frac{T_1}{T_{2'}} = \frac{38.57}{7.11} = 5.42.$$

To determine the state-2' Mach number, we first obtain  $v_{x,2'}$  from mass conservation,  $\dot{m}'' = \rho_{2'} v_{x,2'} = \rho_1 v_{x,1}$ , using the value of  $v_{x,1}$  ( $= 1998 \text{ m/s}$ ) obtained in Example 16.2:

$$v_{x,2'} = \frac{\rho_1}{\rho_{2'}} v_{x,1} = \frac{1998}{5.42} = 369 \text{ m/s.}$$

Thus,

$$\begin{aligned}Ma_{2'} &= v_{x,2'}/c_{2'} = v_{x,2'}/(\gamma_2 R_{2'} T_{2'})^{1/2} \\ &= \frac{369}{[1.379(8315/28.63) 2119]^{1/2}} = \frac{369}{921} \\ &= 0.040.\end{aligned}$$

In the above calculation, we assume that  $\gamma_2 \approx \gamma_1$  for simplicity and consistency with the constant-property assumption used to determine the state-2' properties from Eqns. I, II, and III. This completes our determination of the state-2' properties.

In Example 16.2, the temperature of the burned gases following the combustion zone of the detonation wave was determined; i.e.,  $T_2 = 3533 \text{ K}$ . Remaining for us is to calculate the other state-2 properties. We estimate the density using Eqn. 16.28, recognizing that this relation is approximate and holds only for  $P_2 \gg P_1$ :

$$\begin{aligned}\rho_2/\rho_1 &= (\gamma_2 + 1)/\gamma_2 = (1.240 + 1)/1.240 \\ &= 1.806,\end{aligned}$$

so,

$$\begin{aligned}\rho_2 &= 1.806\rho_1 = 1.806 \frac{P_1}{R_1 T_1} \\ &= \frac{1.806(101,325)}{(8315/28.63)298} = 2.114 \text{ kg/m}^3.\end{aligned}$$

The pressure is found from the ideal-gas equation of state:

$$\begin{aligned}P_2 &= \rho_2 R_2 T_2 \\ &= 2.114(8315/29.79)3533 \\ &= 2.085 \cdot 10^6 \text{ Pa.}\end{aligned}$$

The state-2 Mach number should be unity, the value associated with the upper Chapman-Jouguet point. We verify this as a check on our previous calculations. Once again, using the value of  $v_{x,1}$  obtained in Example 16.2, the state-2 velocity is obtained through mass conservation ( $\dot{m}'' = \rho_2 v_{x,2} = \rho_1 v_{x,1}$ ):

$$v_{x,2} = \frac{\rho_1}{\rho_2} v_{x,1} = \frac{1998}{1.806} = 1106 \text{ m/s.}$$

Thus

$$\begin{aligned}Ma_2 &= v_{x,2}/c_2 = v_{x,2}/(\gamma_2 R_2 T_2)^{1/2} \\ &= \frac{1106}{[1.240(8315/29.79)3533]^{1/2}} = \frac{1106}{1106} \\ &= 1,\end{aligned}$$


as expected!

The following table of results facilitates comparison of the properties at states 1, 2', and 2:

Property	State 1	State 2'	State 2
$\rho/\rho_1$	1	5.42	1.806
$P/P_1$	1	38.6	20.6
$T/T_1$	1	7.11	11.85
$Ma$	5.78	0.40	1.00

#### Comment

From the table above, we see that the large density and pressure ratios across the initial shock front, 5.42 and 38.6, respectively, are ameliorated somewhat through the combustion zone as the temperature continues to increase as a result of the heat release. It is also interesting to point out that the flow is subsonic after the shock front (state 2') and then accelerates to the sonic point at the trailing edge of the detonation wave (state 2).

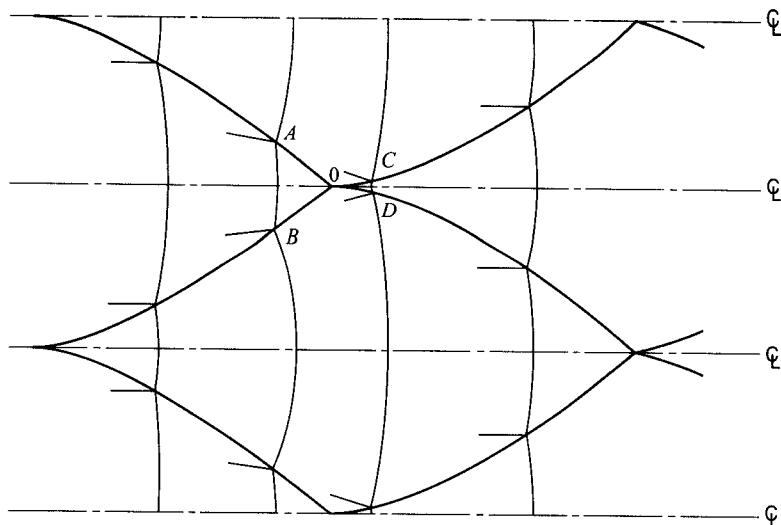

**Figure 16.5** Shock fronts in an idealized two-dimensional detonation wave. Points labeled A, B, C, and D indicate triple-shock interactions. The wave is moving from left to right, thus the flow direction is opposite to that shown in Fig. 16.1.

SOURCE: From Strehlow [11]. Reprinted with permission of Krieger Publishing Co.

Unfortunately, real detonations do not globally conform to the ZND structure, although the general idea of a thin, reactionless, shock wave followed by a much thicker reaction zone is a useful substructure. Various researchers [11–14] have investigated detonations in the laboratory and found that there are several shock fronts interacting in the traveling detonation wave. A characteristic structure within a detonation wave is the triple-shock interaction, schematically illustrated in Fig. 16.5. In this figure, we see that the nominally normal shock front is composed of convex segments facing upstream (e.g., A–B) and that there is a transverse wave structure formed by the oblique shock fronts emanating from the triple-shock interactions. The detailed nature of this transverse wave structure is strongly dependent on the geometry of any confining tube, while the transverse wave structure is random for unconfined spherical detonations [11]. In tube-confined flows, the transverse detonation waves couple with transverse acoustic modes of the tube [11]. For a detailed description of detonation wave structure, the reader is referred to Williams [15].

## SUMMARY

We began this chapter with comparisons of detonations, shocks, and deflagrations. You should now be familiar with the commonalities and differences among these. Using a simplified one-dimensional analysis, we developed the

concept of the Rankine–Hugoniot curve. Five separate segments of the Hugoniot were distinguished, with each of these corresponding to various physical phenomena. We discovered that the upper Chapman–Jouguet point defines the typical state of the gases after passage of a detonation wave. The one-dimensional analysis was further extended to obtain an approximate expression for calculating the detonation velocity. We examined the one-dimensional Zeldovich–von Neumann–Döring (ZND) model of shock structure, which consists of a thin normal shock with no reaction followed by a somewhat thicker reaction zone. You should be able to calculate the properties after the shock zone and at the end of the reaction zone using idealized one-dimensional approaches. The chapter concluded with a brief discussion of real detonation waves. You should be aware that these are highly three-dimensional and that the detailed structure of the detonation depends on the geometry of the confining environment, or the lack of such confinement.

## NOMENCLATURE

<i>A</i>	Area ( $\text{m}^2$ )
<i>c</i>	Sound speed (m/s)
<i>c<sub>p</sub></i>	Constant-pressure specific heat (J/kg-K)
<i>c<sub>v</sub></i>	Constant-volume specific heat (J/kg-K)
<i>h</i>	Enthalpy (J/kg)
<i>h<sub>f</sub><sup>o</sup></i>	Enthalpy of formation (J/kg)
<i>ṁ</i>	Mass flowrate (kg/s)
<i>ṁ''</i>	Mass flowrate (kg/s)
<i>Ma</i>	Mach number
<i>MW</i>	Molecular weight (kg/kmol)
<i>P</i>	Pressure (Pa)
<i>q</i>	Heat addition, Eqn. 16.7 (J/kg)
<i>R</i>	Specific gas constant (J/kg-K)
<i>R<sub>u</sub></i>	Universal gas constant (J/kmol-K)
<i>T</i>	Temperature (K)
<i>v<sub>D</sub></i>	Detonation velocity (m/s)
<i>v<sub>x</sub></i>	Axial velocity (m/s)
<i>v</i>	Specific volume ( $\text{m}^3/\text{kg}$ )
<i>Y</i>	Mass fraction

### Greek Symbols

$\gamma$	Specific-heat ratio, $c_p/c_v$
$\rho$	Density ( $\text{kg}/\text{m}^3$ )
$\Phi$	Equivalence ratio

**Subscripts**

- mix Mixture  
1 Upstream condition  
2 Downstream condition  
2' Shock-wave trailing edge

---

**REFERENCES**

1. Friedman, R., "Kinetics of the Combustion Wave," *American Rocket Society Journal*, 23: 349–354 (1953).
2. Chapman, D. L., "On the Rate of Explosion of Gases," *Philosophical Magazine*, 47: 90–103 (1899).
3. Kuo, K. K., *Principles of Combustion*, Wiley, New York, 1986.
4. Gordon, S., and McBride, B. J., "Computer Program for Calculation of Complex Chemical Equilibrium Compositions, Rocket Performance, Incident and Reflected Shocks, and Chapman-Jouguet Detonations," NASA SP-273, 1976.
5. Zeldovich, Y. B., "The Theory of the Propagation of Detonation in Gaseous Systems," *Experimental and Theoretical Physics, S.S.S.R.*, 10: 542 (1940). (English translation, NACA TM 1261, 1950).
6. von Neumann, J., "Theory of Detonation Waves," Progress Report No. 238 (April 1942). OSRD Report No. 549, 1949.
7. Döring, W., "Über den Detonationsvorgang in Gasen," *Ann. Phys. Leipzig*, 43: 421–436 (1943).
8. White, F. M., *Fluid Mechanics*, 3rd Ed., McGraw-Hill, New York, p. 530, 1994.
9. Shames, I. H., *Mechanics of Fluids*, 3rd Ed., McGraw-Hill, New York, p. 506, 1992.
10. Moran, M. J., and Shapiro, H. N., *Fundamentals of Engineering Thermodynamics*, 3rd Ed., Wiley, New York, p. 435, 1995.
11. Strehlow, R. A., *Fundamentals of Combustion*, Krieger Publishing Co., Malabar, FL, 1979.
12. Strehlow, R. A., "Multi-Dimensional Detonation Wave Structure," *Astronautica Acta*, 15: 345–357 (1970).
13. Oppenheim, A. K., and Soloukin, R. I., "Experiments in Gas Dynamics of Explosions," *Annual Review of Fluid Mechanics*, 5: 31–58 (1973).
14. Lee, J. H. S., "Dynamic Parameters of Gaseous Detonations," *Annual Review of Fluid Mechanics*, 16: 311–336 (1984).
15. Williams, F. A., *Combustion Theory*, 2nd Ed., Addison-Wesley, Redwood City, CA, 1985.
16. Lewis, B., and von Elbe, G., *Combustion, Flames and Explosions of Gases*, 3rd Ed., Academic Press, Orlando, FL, p. 545, 1987.

## PROBLEMS

- 16.1** Derive the Rankine–Hugoniot relation, Eqn. 16.13.
- 16.2** Determine the velocity of a detonation wave propagating through an ideal-gas mixture having a constant specific heat,  $c_p$ , of 1200 J/kg-K. The mixture is initially at 2 atm and 500 K. The heat release per unit mass of mixture is  $3 \cdot 10^6$  J/kg and the mixture molecular weight is 29 kg/kmol.
- 16.3** Assuming a ZND structure, determine the key state properties for the detonation wave described in problem 16.2; i.e., calculate  $\rho$ ,  $P$ ,  $T$ , and  $Ma$  at states 1, 2', and 2.
- 16.4** Using the detonation wave of problem 16.2 and the results of problem 16.3 as a base case, determine the effect of the heat release parameter,  $q$ , on all of the properties of the detonation wave:  $\rho$ ,  $P$ ,  $T$ , and  $Ma$  at states 1, 2' and 2. To accomplish this, use a value of  $q$  twice as large as that given in problem 16.2. Does the detonation velocity increase or decrease? Does the maximum pressure increase or decrease? Discuss.
- 16.5** Consider a detonation wave traveling in a H<sub>2</sub>-O<sub>2</sub> mixture having a molar oxidizer-to-fuel ratio of 3.0. Estimate the detonation velocity for an initial state  $P_1 = 1$  atm and  $T_1 = 291$  K. Neglect dissociation. How does your result compare to the experimentally determined value of 1700 m/s [16]? Discuss reasons why these values differ.

---

**A P P E N D I X****A****SELECTED THERMODYNAMIC PROPERTIES OF GASES  
COMPRISING C-H-O-N SYSTEM**

---

**TABLES A.1 TO A.12**

Ideal-gas values for standard reference state ( $T = 298.15\text{ K}$ ,  $P = 1\text{ atm}$ ) for

$\bar{c}_p(T)$ ,  $\bar{h}^o(T) - \bar{h}_{f,\text{ref}}^o$ ,  $\bar{h}_f^o(T)$ ,  $\bar{s}^o(T)$ ,  $\bar{g}_f^o(T)$       for  
CO, CO<sub>2</sub>, H<sub>2</sub>, H, OH, H<sub>2</sub>O, N<sub>2</sub>, N, NO, NO<sub>2</sub>, O<sub>2</sub>, O.

Enthalpy of formation and Gibbs function of formation for compounds are calculated from the elements as

$$\begin{aligned}\bar{h}_{f,i}^o(T) &= \bar{h}_i^o(T) - \sum_{j \text{ elements}} v_j' \bar{h}_j^o(T) \\ \bar{g}_{f,i}^o(T) &= \bar{g}_i^o(T) - \sum_{j \text{ elements}} v_j' \bar{g}_j^o(T) \\ &= \bar{h}_{f,i}^o(T) - T \bar{s}_i^o(T) - \sum_{j \text{ elements}} v_j' [-T \bar{s}_j^o(T)].\end{aligned}$$

SOURCE: Tables were generated from curvefit coefficients given in Kee, R. J., Rupley, F. M., and Miller, J. A., "The Chemkin Thermodynamic Data Base," Sandia Report, SAND87-8215B, March 1991.

---

**TABLE A.13**

Curvefit coefficients for  $\bar{c}_p(T)$  for the same gases as above.

SOURCE: ibid.

**Table A.1** Carbon monoxide (CO), MW = 28.010, enthalpy of formation @ 298 K  
(kJ/kmol) = -110,541

T(K)	$\bar{c}_p$ (kJ/kmol-K)	$(\bar{h}^o(T) - \bar{h}^o_f(298))$ (kJ/kmol)	$\bar{h}^o_f(T)$ (kJ/kmol)	$\bar{s}^o(T)$ (kJ/kmol-K)	$\bar{g}^o_f(T)$ (kJ/kmol)
200	28.687	-2,835	-111,308	186.018	-128,532
298	29.072	0	-110,541	197.548	-137,163
300	29.078	54	-110,530	197.728	-137,328
400	29.433	2,979	-110,121	206.141	-146,332
500	29.857	5,943	-110,017	212.752	-155,403
600	30.407	8,955	-110,156	218.242	-164,470
700	31.089	12,029	-110,477	222.979	-173,499
800	31.860	15,176	-110,924	227.180	-182,473
900	32.629	18,401	-111,450	230.978	-191,386
1,000	33.255	21,697	-112,022	234.450	-200,238
1,100	33.725	25,046	-112,619	237.642	-209,030
1,200	34.148	28,440	-113,240	240.595	-217,768
1,300	34.530	31,874	-113,881	243.344	-226,453
1,400	34.872	35,345	-114,543	245.915	-235,087
1,500	35.178	38,847	-115,225	248.332	-243,674
1,600	35.451	42,379	-115,925	250.611	-252,214
1,700	35.694	45,937	-116,644	252.768	-260,711
1,800	35.910	49,517	-117,380	254.814	-269,164
1,900	36.101	53,118	-118,132	256.761	-277,576
2,000	36.271	56,737	-118,902	258.617	-285,948
2,100	36.421	60,371	-119,687	260.391	-294,281
2,200	36.553	64,020	-120,488	262.088	-302,576
2,300	36.670	67,682	-121,305	263.715	-310,835
2,400	36.774	71,354	-122,137	265.278	-319,057
2,500	36.867	75,036	-122,984	266.781	-327,245
2,600	36.950	78,727	-123,847	268.229	-335,399
2,700	37.025	82,426	-124,724	269.625	-343,519
2,800	37.093	86,132	-125,616	270.973	-351,606
2,900	37.155	89,844	-126,523	272.275	-359,661
3,000	37.213	93,562	-127,446	273.536	-367,684
3,100	37.268	97,287	-128,383	274.757	-375,677
3,200	37.321	101,016	-129,335	275.941	-383,639
3,300	37.372	104,751	-130,303	277.090	-391,571
3,400	37.422	108,490	-131,285	278.207	-399,474
3,500	37.471	112,235	-132,283	279.292	-407,347
3,600	37.521	115,985	-133,295	280.349	-415,192
3,700	37.570	119,739	-134,323	281.377	-423,008
3,800	37.619	123,499	-135,366	282.380	-430,796
3,900	37.667	127,263	-136,424	283.358	-438,557
4,000	37.716	131,032	-137,497	284.312	-446,291
4,100	37.764	134,806	-138,585	285.244	-453,997
4,200	37.810	138,585	-139,687	286.154	-461,677
4,300	37.855	142,368	-140,804	287.045	-469,330
4,400	37.897	146,156	-141,935	287.915	-476,957
4,500	37.936	149,948	-143,079	288.768	-484,558
4,600	37.970	153,743	-144,236	289.602	-492,134
4,700	37.998	157,541	-145,407	290.419	-499,684

**Table A.1** (continued)

<i>T</i> (K)	$\tilde{c}_p$ (kJ/kmol-K)	$(\tilde{h}^o(T) - \tilde{h}^o_f(298))$ (kJ/kmol)	$\tilde{h}^o_f(T)$ (kJ/kmol)	$\tilde{s}^o(T)$ (kJ/kmol-K)	$\tilde{g}^o_f(T)$ (kJ/kmol)
4,800	38.019	161,342	-146,589	291.219	-507,210
4,900	38.031	165,145	-147,783	292.003	-514,710
5,000	38.033	168,948	-148,987	292.771	-522,186

**Table A.2** Carbon dioxide ( $\text{CO}_2$ ), MW = 44.011, enthalpy of formation @ 298 K  
(kJ/kmol) = -393,546

$T(\text{K})$	$\bar{c}_p$ (kJ/kmol-K)	$(\bar{h}^\circ(T) - \bar{h}_f^\circ(298))$ (kJ/kmol)	$\bar{h}_f^\circ(T)$ (kJ/kmol)	$\bar{s}^\circ(T)$ (kJ/kmol-K)	$\bar{g}_f^\circ(T)$ (kJ/kmol)
200	32.387	-3,423	-393,483	199.876	-394,126
298	37.198	0	-393,546	213.736	-394,428
300	37.280	69	-393,547	213.966	-394,433
400	41.276	4,003	-393,617	225.257	-394,718
500	44.569	8,301	-393,712	234.833	-394,983
600	47.313	12,899	-393,844	243.209	-395,226
700	49.617	17,749	-394,013	250.680	-395,443
800	51.550	22,810	-394,213	257.436	-395,635
900	53.136	28,047	-394,433	263.603	-395,799
1,000	54.360	33,425	-394,659	269.268	-395,939
1,100	55.333	38,911	-394,875	274.495	-396,056
1,200	56.205	44,488	-395,083	279.348	-396,155
1,300	56.984	50,149	-395,287	283.878	-396,236
1,400	57.677	55,882	-395,488	288.127	-396,301
1,500	58.292	61,681	-395,691	292.128	-396,352
1,600	58.836	67,538	-395,897	295.908	-396,389
1,700	59.316	73,446	-396,110	299.489	-396,414
1,800	59.738	79,399	-396,332	302.892	-396,425
1,900	60.108	85,392	-396,564	306.132	-396,424
2,000	60.433	91,420	-396,808	309.223	-396,410
2,100	60.717	97,477	-397,065	312.179	-396,384
2,200	60.966	103,562	-397,338	315.009	-396,346
2,300	61.185	109,670	-397,626	317.724	-396,294
2,400	61.378	115,798	-397,931	320.333	-396,230
2,500	61.548	121,944	-398,253	322.842	-396,152
2,600	61.701	128,107	-398,594	325.259	-396,061
2,700	61.839	134,284	-398,952	327.590	-395,957
2,800	61.965	140,474	-399,329	329.841	-395,840
2,900	62.083	146,677	-399,725	332.018	-395,708
3,000	62.194	152,891	-400,140	334.124	-395,562
3,100	62.301	159,116	-400,573	336.165	-395,403
3,200	62.406	165,351	-401,025	338.145	-395,229
3,300	62.510	171,597	-401,495	340.067	-395,041
3,400	62.614	177,853	-401,983	341.935	-394,838
3,500	62.718	184,120	-402,489	343.751	-394,620
3,600	62.825	190,397	-403,013	345.519	-394,388
3,700	62.932	196,685	-403,553	347.242	-394,141
3,800	63.041	202,983	-404,110	348.922	-393,879
3,900	63.151	209,293	-404,684	350.561	-393,602
4,000	63.261	215,613	-405,273	353.161	-393,311
4,100	63.369	221,945	-405,878	353.725	-393,004
4,200	63.474	228,287	-406,499	355.253	-392,683
4,300	63.575	234,640	-407,135	356.748	-392,346
4,400	63.669	241,002	-407,785	358.210	-391,995
4,500	63.753	247,373	-408,451	359.642	-391,629
4,600	63.825	253,752	-409,132	361.044	-391,247
4,700	63.881	260,138	-409,828	362.417	-390,851

**Table A.2** (continued)

<i>T</i> (K)	$\bar{c}_p$ (kJ/kmol-K)	$(\bar{h}^o(T) - \bar{h}_f^o(298))$ (kJ/kmol)	$\bar{h}_f^o(T)$ (kJ/kmol)	$\bar{s}^o(T)$ (kJ/kmol-K)	$\bar{g}_f^o(T)$ (kJ/kmol)
4,800	63.918	266,528	-410,539	363.763	-390,440
4,900	63.932	272,920	-411,267	365.081	-390,014
5,000	63.919	279,313	-412,010	366.372	-389,572

## Appendix A

**Table A.3** Hydrogen ( $H_2$ ), MW = 2.016, enthalpy of formation @ 298 K (kJ/kmol) = 0

<i>T</i> (K)	$\bar{c}_p$ (kJ/kmol-K)	$(\bar{h}^o(T) - \bar{h}^o_f(298))$ (kJ/kmol)	$\bar{h}^o_f(T)$ (kJ/kmol)	$\bar{s}^o(T)$ (kJ/kmol-K)	$\bar{g}^o_f(T)$ (kJ/kmol)
200	28.522	-2,818	0	119.137	0
298	28.871	0	0	130.595	0
300	28.877	53	0	130.773	0
400	29.120	2,954	0	139.116	0
500	29.275	5,874	0	145.632	0
600	29.375	8,807	0	150.979	0
700	29.461	11,749	0	155.514	0
800	29.581	14,701	0	159.455	0
900	29.792	17,668	0	162.950	0
1,000	30.160	20,664	0	166.106	0
1,100	30.625	23,704	0	169.003	0
1,200	31.077	26,789	0	171.687	0
1,300	31.516	29,919	0	174.192	0
1,400	31.943	33,092	0	176.543	0
1,500	32.356	36,307	0	178.761	0
1,600	32.758	39,562	0	180.862	0
1,700	33.146	42,858	0	182.860	0
1,800	33.522	46,191	0	184.765	0
1,900	33.885	49,562	0	186.587	0
2,000	34.236	52,968	0	188.334	0
2,100	34.575	56,408	0	190.013	0
2,200	34.901	59,882	0	191.629	0
2,300	35.216	63,388	0	193.187	0
2,400	35.519	66,925	0	194.692	0
2,500	35.811	70,492	0	196.148	0
2,600	36.091	74,087	0	197.558	0
2,700	36.361	77,710	0	198.926	0
2,800	36.621	81,359	0	200.253	0
2,900	36.871	85,033	0	201.542	0
3,000	37.112	88,733	0	202.796	0
3,100	37.343	92,455	0	204.017	0
3,200	37.566	96,201	0	205.206	0
3,300	37.781	99,968	0	206.365	0
3,400	37.989	103,757	0	207.496	0
3,500	38.190	107,566	0	208.600	0
3,600	38.385	111,395	0	209.679	0
3,700	38.574	115,243	0	210.733	0
3,800	38.759	119,109	0	211.764	0
3,900	38.939	122,994	0	212.774	0
4,000	39.116	126,897	0	213.762	0
4,100	39.291	130,817	0	214.730	0
4,200	39.464	134,755	0	215.679	0
4,300	39.636	138,710	0	216.609	0
4,400	39.808	142,682	0	217.522	0
4,500	39.981	146,672	0	218.419	0
4,600	40.156	150,679	0	219.300	0
4,700	40.334	154,703	0	220.165	0

**Table A.3** (continued)

<i>T</i> (K)	$\bar{c}_p$ (kJ/kmol-K)	$(\bar{h}^o(T) - \bar{h}^o_f(298))$ (kJ/kmol)	$\bar{h}^o_f(T)$ (kJ/kmol)	$\bar{s}^o(T)$ (kJ/kmol-K)	$\bar{g}^o_f(T)$ (kJ/kmol)
4,800	40.516	158,746	0	221.016	0
4,900	40.702	162,806	0	221.853	0
5,000	40.895	166,886	0	222.678	0

**Table A.4** Hydrogen atom (H), MW = 1.008, enthalpy of formation @ 298 K (kJ/kmol)  
= 217,977

T(K)	$\bar{c}_p$ (kJ/kmol-K)	$(\bar{h}^o(T) - \bar{h}_f^o(298))$ (kJ/kmol)	$\bar{h}_f^o(T)$ (kJ/kmol)	$\bar{s}^o(T)$ (kJ/kmol-K)	$\bar{g}_f^o(T)$ (kJ/kmol)
200	20.786	-2,040	217,346	106.305	207,999
298	20.786	0	217,977	114.605	203,276
300	20.786	38	217,989	114.733	203,185
400	20.786	2,117	218,617	120.713	198,155
500	20.786	4,196	219,236	125.351	192,968
600	20.786	6,274	219,848	129.351	187,657
700	20.786	8,353	220,456	132.345	182,244
800	20.786	10,431	221,059	135.121	176,744
900	20.786	12,510	221,653	137.569	171,169
1,000	20.786	14,589	222,234	139.759	165,528
1,100	20.786	16,667	222,793	141.740	159,830
1,200	20.786	18,746	223,329	143.549	154,082
1,300	20.786	20,824	223,843	145.213	148,291
1,400	20.786	22,903	224,335	146.753	142,461
1,500	20.786	24,982	224,806	148.187	136,596
1,600	20.786	27,060	225,256	149.528	130,700
1,700	20.786	29,139	225,687	150.789	124,777
1,800	20.786	31,217	226,099	151.977	118,830
1,900	20.786	33,296	226,493	153.101	112,859
2,000	20.786	35,375	226,868	154.167	106,869
2,100	20.786	37,453	227,226	155.181	100,860
2,200	20.786	39,532	227,568	156.148	94,834
2,300	20.786	41,610	227,894	157.072	88,794
2,400	20.786	43,689	228,204	157.956	82,739
2,500	20.786	45,768	228,499	158.805	76,672
2,600	20.786	47,846	228,780	159.620	70,593
2,700	20.786	49,925	229,047	160.405	64,504
2,800	20.786	52,003	229,301	161.161	58,405
2,900	20.786	54,082	229,543	161.890	52,298
3,000	20.786	56,161	229,772	162.595	46,182
3,100	20.786	58,239	229,989	163.276	40,058
3,200	20.786	60,318	230,195	163.936	33,928
3,300	20.786	62,396	230,390	164.576	27,792
3,400	20.786	64,475	230,574	165.196	21,650
3,500	20.786	66,554	230,748	165.799	15,502
3,600	20.786	68,632	230,912	166.954	9,350
3,700	20.786	70,711	231,067	166.954	3,194
3,800	20.786	72,789	231,212	167.508	-2,967
3,900	20.786	74,868	231,348	168.048	-9,132
4,000	20.786	76,947	231,475	168.575	-15,299
4,100	20.786	79,025	231,594	169.088	-21,470
4,200	20.786	81,104	231,704	169.589	-27,644
4,300	20.786	83,182	231,805	170.078	-33,820
4,400	20.786	85,261	231,897	170.556	-39,998
4,500	20.786	87,340	231,981	171.023	-46,179
4,600	20.786	89,418	232,056	171.480	-52,361
4,700	20.786	91,497	232,123	171.927	-58,545

**Table A.4** (continued)

<i>T</i> (K)	$\bar{c}_p$ (kJ/kmol-K)	$(\bar{h}^\circ(T) - \bar{h}_f^\circ(298))$ (kJ/kmol)	$\bar{h}_f^\circ(T)$ (kJ/kmol)	$\bar{s}^\circ(T)$ (kJ/kmol-K)	$\bar{g}_f^\circ(T)$ (kJ/kmol)
4,800	20.786	93,575	232,180	172.364	-64,730
4,900	20.786	95,654	232,228	172.793	-70,916
5,000	20.786	97,733	232,267	173.213	-77,103

**Table A.5** Hydroxyl (OH), MW = 17.007, enthalpy of formation @ 298 K (kJ/kmol)  
= 38,985

T(K)	$\bar{c}_p$ (kJ/kmol-K)	$(\bar{h}^o(T) - \bar{h}^o_f(298))$ (kJ/kmol)	$\bar{h}^o_f(T)$ (kJ/kmol)	$\bar{s}^o(T)$ (kJ/kmol-K)	$\bar{g}^o_f(T)$ (kJ/kmol)
200	30.140	-2,948	38,864	171.607	35,808
298	29.932	0	38,985	183.604	34,279
300	29.928	55	38,987	183.789	34,250
400	29.718	3,037	39,030	192.369	32,662
500	29.570	6,001	39,000	198.983	31,072
600	29.527	8,955	38,909	204.369	29,494
700	29.615	11,911	38,770	208.925	27,935
800	29.844	14,883	38,599	212.893	26,399
900	30.208	17,884	38,410	216.428	24,885
1,000	30.682	20,928	38,220	219.635	23,392
1,100	31.186	24,022	38,039	222.583	21,918
1,200	31.662	27,164	37,867	225.317	20,460
1,300	32.114	30,353	37,704	227.869	19,017
1,400	32.540	33,586	37,548	230.265	17,585
1,500	32.943	36,860	37,397	232.524	16,164
1,600	33.323	40,174	37,252	234.662	14,753
1,700	33.682	43,524	37,109	236.693	13,352
1,800	34.019	46,910	36,969	238.628	11,958
1,900	34.337	50,328	36,831	240.476	10,573
2,000	34.635	53,776	36,693	242.245	9,194
2,100	34.915	57,254	36,555	243.942	7,823
2,200	35.178	60,759	36,416	245.572	6,458
2,300	35.425	64,289	36,276	247.141	5,099
2,400	35.656	67,843	36,133	248.654	3,746
2,500	35.872	71,420	35,986	250.114	2,400
2,600	36.074	75,017	35,836	251.525	1,060
2,700	36.263	78,634	35,682	252.890	-275
2,800	36.439	82,269	35,524	254.212	-1,604
2,900	36.604	85,922	35,360	255.493	-2,927
3,000	36.759	89,590	35,191	256.737	-4,245
3,100	36.903	93,273	35,016	257.945	-5,556
3,200	37.039	96,970	34,835	259.118	-6,862
3,300	37.166	100,681	34,648	260.260	-8,162
3,400	37.285	104,403	34,454	261.371	-9,457
3,500	37.398	108,137	34,253	262.454	-10,745
3,600	37.504	111,882	34,046	263.509	-12,028
3,700	37.605	115,638	33,831	264.538	-13,305
3,800	37.701	119,403	33,610	265.542	-14,576
3,900	37.793	123,178	33,381	266.522	-15,841
4,000	37.882	126,962	33,146	267.480	-17,100
4,100	37.968	130,754	32,903	268.417	-18,353
4,200	38.052	134,555	32,654	269.333	-19,600
4,300	38.135	138,365	32,397	270.229	-20,841
4,400	38.217	142,182	32,134	271.107	-22,076
4,500	38.300	146,008	31,864	271.967	-23,306
4,600	38.382	149,842	31,588	272.809	-24,528
4,700	38.466	153,685	31,305	273.636	-25,745

**Table A.5** (continued)

$T(\text{K})$	$\bar{c}_p$ (kJ/kmol-K)	$(\bar{h}^\circ(T) - \bar{h}^\circ_f(298))$ (kJ/kmol)	$\bar{h}^\circ_f(T)$ (kJ/kmol)	$\bar{s}^\circ(T)$ (kJ/kmol-K)	$\bar{g}^\circ_f(T)$ (kJ/kmol)
4,800	38.552	157,536	31,017	274.446	-26,956
4,900	38.640	161,395	30,722	275.242	-28,161
5,000	38.732	165,264	30,422	276.024	-29,360

**Table A.6** Water ( $\text{H}_2\text{O}$ ), MW = 18.016, enthalpy of formation @ 298 K (kJ/kmol) = -241,845, enthalpy of vaporization (kJ/kmol) = 44,010

$T(\text{K})$	$\bar{c}_p$ (kJ/kmol-K)	$(\bar{h}^\circ(T) - \bar{h}_f^\circ(298))$ (kJ/kmol)	$\bar{h}_f^\circ(T)$ (kJ/kmol)	$\bar{s}^\circ(T)$ (kJ/kmol-K)	$\bar{g}_f^\circ(T)$ (kJ/kmol)
200	32.255	-3,227	-240,838	175.602	-232,779
298	33.448	0	-241,845	188.715	-228,608
300	33.468	62	-241,865	188.922	-228,526
400	34.437	3,458	-242,858	198.686	-223,929
500	35.337	6,947	-243,822	206.467	-219,085
600	36.288	10,528	-244,753	212.992	-214,049
700	37.364	14,209	-245,638	218.665	-208,861
800	38.587	18,005	-246,461	223.733	-203,550
900	39.930	21,930	-247,209	228.354	-198,141
1,000	41.315	25,993	-247,879	232.633	-192,652
1,100	42.638	30,191	-248,475	236.634	-187,100
1,200	43.874	34,518	-249,005	240.397	-181,497
1,300	45.027	38,963	-249,477	243.955	-175,852
1,400	46.102	43,520	-249,895	247.332	-170,172
1,500	47.103	48,181	-250,267	250.547	-164,464
1,600	48.035	52,939	-250,597	253.617	-158,733
1,700	48.901	57,786	-250,890	256.556	-152,983
1,800	49.705	62,717	-251,151	259.374	-147,216
1,900	50.451	67,725	-251,384	262.081	-141,435
2,000	51.143	72,805	-251,594	264.687	-135,643
2,100	51.784	77,952	-251,783	267.198	-129,841
2,200	52.378	83,160	-251,955	269.621	-124,030
2,300	52.927	88,426	-252,113	271.961	-118,211
2,400	53.435	93,744	-252,261	274.225	-112,386
2,500	53.905	99,112	-252,399	276.416	-106,555
2,600	54.340	104,524	-252,532	278.539	-100,719
2,700	54.742	109,979	-252,659	280.597	-94,878
2,800	55.115	115,472	-252,785	282.595	-89,031
2,900	55.459	121,001	-252,909	284.535	-83,181
3,000	55.779	126,563	-253,034	286.420	-77,326
3,100	56.076	132,156	-253,161	288.254	-71,467
3,200	56.353	137,777	-253,290	290.039	-65,604
3,300	56.610	143,426	-253,423	291.777	-59,737
3,400	56.851	149,099	-253,561	293.471	-53,865
3,500	57.076	154,795	-253,704	295.122	-47,990
3,600	57.288	160,514	-253,852	296.733	-42,110
3,700	57.488	166,252	-254,007	298.305	-36,226
3,800	57.676	172,011	-254,169	299.841	-30,338
3,900	57.856	177,787	-254,338	301.341	-24,446
4,000	58.026	183,582	-254,515	302.808	-18,549
4,100	58.190	189,392	-254,699	304.243	-12,648
4,200	58.346	195,219	-254,892	305.647	-6,742
4,300	58.496	201,061	-255,093	307.022	-831
4,400	58.641	206,918	-255,303	308.368	5,085
4,500	58.781	212,790	-255,522	309.688	11,005
4,600	58.916	218,674	-255,751	310.981	16,930
4,700	59.047	224,573	-255,990	312.250	22,861

**Table A.6** (continued)

<i>T</i> (K)	$\bar{c}_p$ (kJ/kmol-K)	$(\bar{h}^o(T) - \bar{h}_f^o(298))$ (kJ/kmol)	$\bar{h}_f^o(T)$ (kJ/kmol)	$\bar{s}^o(T)$ (kJ/kmol-K)	$\bar{g}_f^o(T)$ (kJ/kmol)
4,800	59.173	230,484	-256,239	313.494	28,796
4,900	59.295	236,407	-256,501	314.716	34,737
5,000	59.412	242,343	-256,774	315.915	40,684

**Table A.7** Nitrogen ( $N_2$ ), MW = 28.013, enthalpy of formation @ 298 K (kJ/kmol) = 0

$T(K)$	$\bar{c}_p$ (kJ/kmol-K)	$(\bar{h}^o(T) - \bar{h}^o_f(298))$ (kJ/kmol)	$\bar{h}^o_f(T)$ (kJ/kmol)	$\bar{s}^o(T)$ (kJ/kmol-K)	$\bar{g}^o_f(T)$ (kJ/kmol)
200	28.793	-2,841	0	179.959	0
298	29.071	0	0	191.511	0
300	29.075	54	0	191.691	0
400	29.319	2,973	0	200.088	0
500	29.636	5,920	0	206.662	0
600	30.086	8,905	0	212.103	0
700	30.684	11,942	0	216.784	0
800	31.394	15,046	0	220.927	0
900	32.131	18,222	0	224.667	0
1,000	32.762	21,468	0	228.087	0
1,100	33.258	24,770	0	231.233	0
1,200	33.707	28,118	0	234.146	0
1,300	34.113	31,510	0	236.861	0
1,400	34.477	34,939	0	239.402	0
1,500	34.805	38,404	0	241.792	0
1,600	35.099	41,899	0	244.048	0
1,700	35.361	45,423	0	246.184	0
1,800	35.595	48,971	0	248.212	0
1,900	35.803	52,541	0	250.142	0
2,000	35.988	56,130	0	251.983	0
2,100	36.152	59,738	0	253.743	0
2,200	36.298	63,360	0	255.429	0
2,300	36.428	66,997	0	257.045	0
2,400	36.543	70,645	0	258.598	0
2,500	36.645	74,305	0	260.092	0
2,600	36.737	77,974	0	261.531	0
2,700	36.820	81,652	0	262.919	0
2,800	36.895	85,338	0	264.259	0
2,900	36.964	89,031	0	265.555	0
3,000	37.028	92,730	0	266.810	0
3,100	37.088	96,436	0	268.025	0
3,200	37.144	100,148	0	269.203	0
3,300	37.198	103,865	0	270.347	0
3,400	37.251	107,587	0	271.458	0
3,500	37.302	111,315	0	272.539	0
3,600	37.352	115,048	0	273.590	0
3,700	37.402	118,786	0	274.614	0
3,800	37.452	122,528	0	275.612	0
3,900	37.501	126,276	0	276.586	0
4,000	37.549	130,028	0	277.536	0
4,100	37.597	133,786	0	278.464	0
4,200	37.643	137,548	0	279.370	0
4,300	37.688	141,314	0	280.257	0
4,400	37.730	145,085	0	281.123	0
4,500	37.768	148,860	0	281.972	0
4,600	37.803	152,639	0	282.802	0
4,700	37.832	156,420	0	283.616	0

**Table A.7** (continued)

$T(\text{K})$	$\bar{c}_p$ (kJ/kmol-K)	$(\bar{h}^\vartheta(T) - \bar{h}_f^\vartheta(298))$ (kJ/kmol)	$\bar{h}_f^\vartheta(T)$ (kJ/kmol)	$\bar{s}^\vartheta(T)$ (kJ/kmol-K)	$\bar{g}_f^\vartheta(T)$ (kJ/kmol)
4,800	37.854	160,205	0	284.412	0
4,900	37.868	163,991	0	285.193	0
5,000	37.873	167,778	0	285.958	0

**Table A.8** Nitrogen atom (N), MW = 14.007, enthalpy of formation @ 298 K (kJ/kmol)  
= 472,629

T(K)	$\bar{c}_p$ (kJ/kmol-K)	$(\bar{H}^o(T) - \bar{H}^o_f(298))$ (kJ/kmol)	$\bar{H}^o_f(T)$ (kJ/kmol)	$\bar{s}^o(T)$ (kJ/kmol-K)	$\bar{g}^o_f(T)$ (kJ/kmol)
200	20.790	-2,040	472,008	144.889	461,026
298	20.786	0	472,629	153.189	455,504
300	20.786	38	472,640	153.317	455,398
400	20.786	2,117	473,258	159.297	449,557
500	20.786	4,196	473,864	163.935	443,562
600	20.786	6,274	474,450	167.725	437,446
700	20.786	8,353	475,010	170.929	431,234
800	20.786	10,431	475,537	173.705	424,944
900	20.786	12,510	476,027	176.153	418,590
1,000	20.786	14,589	476,483	178.343	412,183
1,100	20.792	16,668	476,911	180.325	405,732
1,200	20.795	18,747	477,316	182.134	399,243
1,300	20.795	20,826	477,700	183.798	392,721
1,400	20.793	22,906	478,064	185.339	386,171
1,500	20.790	24,985	478,411	186.774	379,595
1,600	20.786	27,064	478,742	188.115	372,996
1,700	20.782	29,142	479,059	189.375	366,377
1,800	20.779	31,220	479,363	190.563	359,740
1,900	20.777	33,298	479,656	191.687	353,086
2,000	20.776	35,376	479,939	192.752	346,417
2,100	20.778	37,453	480,213	193.766	339,735
2,200	20.783	39,531	480,479	194.733	333,039
2,300	20.791	41,610	480,740	195.657	326,331
2,400	20.802	43,690	480,995	196.542	319,612
2,500	20.818	45,771	481,246	197.391	312,883
2,600	20.838	47,853	481,494	198.208	306,143
2,700	20.864	49,938	481,740	198.995	299,394
2,800	20.895	52,026	481,985	199.754	292,636
2,900	20.931	54,118	482,230	200.488	285,870
3,000	20.974	56,213	482,476	201.199	279,094
3,100	21.024	58,313	482,723	201.887	272,311
3,200	21.080	60,418	482,972	202.555	265,519
3,300	21.143	62,529	483,224	203.205	258,720
3,400	21.214	64,647	483,481	203.837	251,913
3,500	21.292	66,772	483,742	204.453	245,099
3,600	21.378	68,905	484,009	205.054	238,276
3,700	21.472	71,048	484,283	205.641	231,447
3,800	21.575	73,200	484,564	206.215	224,610
3,900	21.686	75,363	484,853	206.777	217,765
4,000	21.805	77,537	485,151	207.328	210,913
4,100	21.934	79,724	485,459	207.868	204,053
4,200	22.071	81,924	485,779	208.398	197,186
4,300	22.217	84,139	486,110	208.919	190,310
4,400	22.372	86,368	486,453	209.431	183,427
4,500	22.536	88,613	486,811	209.936	176,536
4,600	22.709	90,875	487,184	210.433	169,637
4,700	22.891	93,155	487,573	210.923	162,730

**Table A.8** (continued)

$T(\text{K})$	$\bar{c}_p$ (kJ/kmol-K)	$(\bar{h}^o(T) - \bar{h}^o_f(298))$ (kJ/kmol)	$\bar{h}^o_f(T)$ (kJ/kmol)	$\bar{s}^o(T)$ (kJ/kmol-K)	$\bar{g}^o_f(T)$ (kJ/kmol)
4,800	23.082	95,454	487,979	211.407	155,814
4,900	23.282	97,772	488,405	211.885	148,890
5,000	23.491	100,111	488,850	212.358	141,956

**Table A.9** Nitric oxide (NO), MW = 30.006, enthalpy of formation @ 298 K (kJ/kmol) = 90,297

T(K)	$\bar{c}_p$ (kJ/kmol-K)	$(\bar{h}^o(T) - \bar{h}^o_f(298))$ (kJ/kmol)	$\bar{h}^o_f(T)$ (kJ/kmol)	$\bar{s}^o(T)$ (kJ/kmol-K)	$\bar{g}^o_f(T)$ (kJ/kmol)
200	29.374	-2,901	90,234	198.856	87,811
298	29.728	0	90,297	210.652	86,607
300	29.735	55	90,298	210.836	86,584
400	30.103	3,046	90,341	219.439	85,340
500	30.570	6,079	90,367	226.204	84,086
600	31.174	9,165	90,382	231.829	82,828
700	31.908	12,318	90,393	236.688	81,568
800	32.715	15,549	90,405	241.001	80,307
900	33.489	18,860	90,421	244.900	79,043
1,000	34.076	22,241	90,443	248.462	77,778
1,100	34.483	25,669	90,465	251.729	76,510
1,200	34.850	29,136	90,486	254.745	75,241
1,300	35.180	32,638	90,505	257.548	73,970
1,400	35.474	36,171	90,520	260.166	72,697
1,500	35.737	39,732	90,532	262.623	71,423
1,600	35.972	43,317	90,538	264.937	70,149
1,700	36.180	46,925	90,539	267.124	68,875
1,800	36.364	50,552	90,534	269.197	67,601
1,900	36.527	54,197	90,523	271.168	66,327
2,000	36.671	57,857	90,505	273.045	65,054
2,100	36.797	61,531	90,479	274.838	63,782
2,200	36.909	65,216	90,447	276.552	62,511
2,300	37.008	68,912	90,406	278.195	61,243
2,400	37.095	72,617	90,358	279.772	59,976
2,500	37.173	76,331	90,303	281.288	58,711
2,600	37.242	80,052	90,239	282.747	57,448
2,700	37.305	83,779	90,168	284.154	56,188
2,800	37.362	87,513	90,089	285.512	54,931
2,900	37.415	91,251	90,003	286.824	53,677
3,000	37.464	94,995	89,909	288.093	52,426
3,100	37.511	98,744	89,809	289.322	51,178
3,200	37.556	102,498	89,701	290.514	49,934
3,300	37.600	106,255	89,586	291.670	48,693
3,400	37.643	110,018	89,465	292.793	47,456
3,500	37.686	113,784	89,337	293.885	46,222
3,600	37.729	117,555	89,203	294.947	44,992
3,700	37.771	121,330	89,063	295.981	43,766
3,800	37.815	125,109	88,918	296.989	42,543
3,900	37.858	128,893	88,767	297.972	41,325
4,000	37.900	132,680	88,611	298.931	40,110
4,100	37.943	136,473	88,449	299.867	38,900
4,200	37.984	140,269	88,283	300.782	37,693
4,300	38.023	144,069	88,112	301.677	36,491
4,400	38.060	147,873	87,936	302.551	35,292
4,500	38.093	151,681	87,755	303.407	34,098
4,600	38.122	155,492	87,569	304.244	32,908
4,700	38.146	159,305	87,379	305.064	31,721

**Table A.9** (continued)

$T(K)$	$\bar{c}_p$ (kJ/kmol-K)	$(\bar{h}^o(T) - \bar{h}^o_f(298))$ (kJ/kmol)	$\bar{h}^o_f(T)$ (kJ/kmol)	$\bar{s}^o(T)$ (kJ/kmol-K)	$\bar{g}^o_f(T)$ (kJ/kmol)
4,800	38.162	163,121	87,184	305.868	30,539
4,900	38.171	166,938	86,984	306.655	29,361
5,000	38.170	170,755	86,779	307.426	28,187

## Appendix A

**Table A.10** Nitrogen dioxide ( $\text{NO}_2$ ), MW = 46.006, enthalpy of formation @ 298 K  
(kJ/kmol) = 33,098

$T(\text{K})$	$\bar{c}_p$ (kJ/kmol-K)	$(\bar{H}^\circ(T) - \bar{H}_f^\circ(298))$ (kJ/kmol)	$\bar{h}_f^\circ(T)$ (kJ/kmol)	$\bar{s}^\circ(T)$ (kJ/kmol-K)	$\bar{g}_f^\circ(T)$ (kJ/kmol)
200	32.936	-3,432	33,961	226.016	45,453
298	36.881	0	33,098	239.925	51,291
300	36.949	68	33,085	240.153	51,403
400	40.331	3,937	32,521	251.259	57,602
500	43.227	8,118	32,173	260.578	63,916
600	45.737	12,569	31,974	268.686	70,285
700	47.913	17,255	31,885	275.904	76,679
800	49.762	22,141	31,880	282.427	83,079
900	51.243	27,195	31,938	288.377	89,476
1,000	52.271	32,375	32,035	293.834	95,864
1,100	52.989	37,638	32,146	298.850	102,242
1,200	53.625	42,970	32,267	303.489	108,609
1,300	54.186	48,361	32,392	307.804	114,966
1,400	54.679	53,805	32,519	311.838	121,313
1,500	55.109	59,295	32,643	315.625	127,651
1,600	55.483	64,825	32,762	319.194	133,981
1,700	55.805	70,390	32,873	322.568	140,303
1,800	56.082	75,984	32,973	325.765	146,620
1,900	56.318	81,605	33,061	328.804	152,931
2,000	56.517	87,247	33,134	331.698	159,238
2,100	56.685	92,907	33,192	334.460	165,542
2,200	56.826	98,583	32,233	337.100	171,843
2,300	56.943	104,271	33,256	339.629	178,143
2,400	57.040	109,971	33,262	342.054	184,442
2,500	57.121	115,679	33,248	344.384	190,742
2,600	57.188	121,394	33,216	346.626	197,042
2,700	57.244	127,116	33,165	348.785	203,344
2,800	57.291	132,843	33,095	350.868	209,648
2,900	57.333	138,574	33,007	352.879	215,955
3,000	57.371	144,309	32,900	354.824	222,265
3,100	57.406	150,048	32,776	356.705	228,579
3,200	57.440	155,791	32,634	358.529	234,898
3,300	57.474	161,536	32,476	360.297	241,221
3,400	57.509	167,285	32,302	362.013	247,549
3,500	57.546	173,038	32,113	363.680	253,883
3,600	57.584	178,795	31,908	365.302	260,222
3,700	57.624	184,555	31,689	366.880	266,567
3,800	57.665	190,319	31,456	368.418	272,918
3,900	57.708	196,088	31,210	369.916	279,276
4,000	57.750	201,861	30,951	371.378	285,639
4,100	57.792	207,638	30,678	372.804	292,010
4,200	57.831	213,419	30,393	374.197	298,387
4,300	57.866	219,204	30,095	375.559	304,772
4,400	57.895	224,992	29,783	376.889	311,163
4,500	57.915	230,783	29,457	378.190	317,562
4,600	57.925	236,575	29,117	379.464	323,968
4,700	57.922	242,367	28,761	380.709	330,381

**Table A.10** (continued)

$T(\text{K})$	$\bar{c}_p$ (kJ/kmol-K)	$(\bar{h}^o(T) - \bar{h}^o_f(298))$ (kJ/kmol)	$\bar{h}^o_f(T)$ (kJ/kmol)	$\bar{s}^o(T)$ (kJ/kmol-K)	$\bar{g}^o_f(T)$ (kJ/kmol)
4,800	57.902	248,159	28,389	381.929	336.803
4,900	57.862	253,947	27,998	383.122	343.232
5,000	57.798	259,730	27,586	384.290	349,670

## Appendix A

**Table A.11** Oxygen ( $O_2$ ), MW = 31.999, enthalpy of formation @ 298 K (kJ/kmol) = 0

$T(K)$	$\bar{c}_p$ (kJ/kmol-K)	$(\bar{h}^o(T) - \bar{h}^o_f(298))$ (kJ/kmol)	$\bar{k}_f^o(T)$ (kJ/kmol)	$\bar{s}^o(T)$ (kJ/kmol-K)	$\bar{g}_f^o(T)$ (kJ/kmol)
200	28.473	-2,836	0	193.518	0
298	29.315	0	0	205.043	0
300	29.331	54	0	205.224	0
400	30.210	3,031	0	213.782	0
500	31.114	6,097	0	220.620	0
600	32.030	9,254	0	226.374	0
700	32.927	12,503	0	231.379	0
800	33.757	15,838	0	235.831	0
900	34.454	19,250	0	239.849	0
1,000	34.936	22,721	0	243.507	0
1,100	35.270	26,232	0	246.852	0
1,200	35.593	29,775	0	249.935	0
1,300	35.903	33,350	0	252.796	0
1,400	36.202	36,955	0	255.468	0
1,500	36.490	40,590	0	257.976	0
1,600	36.768	44,253	0	260.339	0
1,700	37.036	47,943	0	262.577	0
1,800	37.296	51,660	0	264.701	0
1,900	37.546	55,402	0	266.724	0
2,000	37.788	59,169	0	268.656	0
2,100	38.023	62,959	0	270.506	0
2,200	38.250	66,773	0	272.280	0
2,300	38.470	70,609	0	273.985	0
2,400	38.684	74,467	0	275.627	0
2,500	38.891	78,346	0	277.210	0
2,600	39.093	82,245	0	278.739	0
2,700	39.289	86,164	0	280.218	0
2,800	39.480	90,103	0	281.651	0
2,900	39.665	94,060	0	283.039	0
3,000	39.846	98,036	0	284.387	0
3,100	40.023	102,029	0	285.697	0
3,200	40.195	106,040	0	286.970	0
3,300	40.362	110,068	0	288.209	0
3,400	40.526	114,112	0	289.417	0
3,500	40.686	118,173	0	290.594	0
3,600	40.842	122,249	0	291.742	0
3,700	40.994	126,341	0	292.863	0
3,800	41.143	130,448	0	293.959	0
3,900	41.287	134,570	0	295.029	0
4,000	41.429	138,705	0	296.076	0
4,100	41.566	142,855	0	297.101	0
4,200	41.700	147,019	0	298.104	0
4,300	41.830	151,195	0	299.087	0
4,400	41.957	155,384	0	300.050	0
4,500	42.079	159,586	0	300.994	0
4,600	42.197	163,800	0	301.921	0
4,700	42.312	168,026	0	302.829	0

**Table A.11** (continued)

<i>T</i> (K)	$\bar{c}_p$ (kJ/kmol-K)	$(\bar{h}^o(T) - \bar{h}^o_f(298))$ (kJ/kmol)	$\bar{h}^o_f(T)$ (kJ/kmol)	$\bar{s}^o(T)$ (kJ/kmol-K)	$\bar{g}^o_f(T)$ (kJ/kmol)
4,800	42.421	172,262	0	303.721	0
4,900	42.527	176,510	0	304.597	0
5,000	42.627	180,767	0	305.457	0

## Appendix A

**Table A.12** Oxygen atom (O), MW = 16.000, enthalpy of formation @ 298 K (kJ/kmol)  
= 249,197

T(K)	$\bar{c}_p$ (kJ/kmol-K)	$(\bar{h}^\circ(T) - \bar{h}^\circ_f(298))$ (kJ/kmol)	$\bar{h}^\circ_f(T)$ (kJ/kmol)	$\bar{s}^\circ(T)$ (kJ/kmol-K)	$\bar{g}^\circ_f(T)$ (kJ/kmol)
200	22.477	-2,176	248,439	152.085	237,374
298	21.899	0	249,197	160.945	231,778
300	21.890	41	249,211	161.080	231,670
400	21.500	2,209	249,890	167.320	225,719
500	21.256	4,345	250,494	172.089	219,605
600	21.113	6,463	251,033	175.951	213,375
700	21.033	8,570	251,516	179.199	207,060
800	20.986	10,671	251,949	182.004	200,679
900	20.952	12,768	252,340	184.474	194,246
1,000	20.915	14,861	252,698	186.679	187,772
1,100	20.898	16,952	253,033	188.672	181,263
1,200	20.882	19,041	253,350	190.490	174,724
1,300	20.867	21,128	253,650	192.160	168,159
1,400	20.854	23,214	253,934	193.706	161,572
1,500	20.843	25,299	254,201	195.145	154,966
1,600	20.834	27,383	254,454	196.490	148,342
1,700	20.827	29,466	254,692	197.753	141,702
1,800	20.822	31,548	254,916	198.943	135,049
1,900	20.820	33,630	255,127	200.069	128,384
2,000	20.819	35,712	255,325	201.136	121,709
2,100	20.821	37,794	255,512	202.152	115,023
2,200	20.825	39,877	255,687	203.121	108,329
2,300	20.831	41,959	255,852	204.047	101,627
2,400	20.840	44,043	256,007	204.933	94,918
2,500	20.851	46,127	256,152	205.784	88,203
2,600	20.865	48,213	256,288	206.602	81,483
2,700	20.881	50,300	256,416	207.390	74,757
2,800	20.899	52,389	256,535	208.150	68,027
2,900	20.920	54,480	256,648	208.884	61,292
3,000	20.944	56,574	256,753	209.593	54,554
3,100	20.970	58,669	256,852	210.280	47,812
3,200	20.998	60,768	256,945	210.947	41,068
3,300	21.028	62,869	257,032	211.593	34,320
3,400	21.061	64,973	257,114	212.221	27,570
3,500	21.095	67,081	257,192	212.832	20,818
3,600	21.132	69,192	257,265	213.427	14,063
3,700	21.171	71,308	257,334	214.007	7,307
3,800	21.212	73,427	257,400	214.572	548
3,900	21.254	75,550	257,462	215.123	-6,212
4,000	21.299	77,678	257,522	215.662	-12,974
4,100	21.345	79,810	257,579	216.189	-19,737
4,200	21.392	81,947	257,635	216.703	-26,501
4,300	21.441	84,088	257,688	217.207	-33,267
4,400	21.490	86,235	257,740	217.701	-40,034
4,500	21.541	88,386	257,790	218.184	-46,802
4,600	21.593	90,543	257,840	218.658	-53,571
4,700	21.646	92,705	257,889	219.123	-60,342

**Table A.12** (continued)

$T(\text{K})$	$\bar{c}_p$ (kJ/kmol-K)	$(\bar{h}^o(T) - \bar{h}^o_f(298))$ (kJ/kmol)	$\bar{h}^o_f(T)$ (kJ/kmol)	$\bar{s}^o(T)$ (kJ/kmol-K)	$\bar{g}^o_f(T)$ (kJ/kmol)
4,800	21.699	94,872	257,938	219.580	-67,113
4,900	21.752	97,045	257,987	220.028	-73,886
5,000	21.805	99,223	258,036	220.468	-80,659

**Table A.13** Curvefit coefficients for thermodynamic properties (C–H–O–N system)

Species	<i>T</i> (K)	<i>a</i> <sub>1</sub>	<i>a</i> <sub>2</sub>	<i>a</i> <sub>3</sub>	<i>a</i> <sub>4</sub>	<i>a</i> <sub>5</sub>	<i>a</i> <sub>6</sub>	<i>a</i> <sub>7</sub>
CO	1,000–5,000	0.03025078E+02	0.14426685E–02	-0.05630827E–05	0.10183813E–09	-0.06910951E–13	-0.1428350E+05	0.06108217E+02
	300–1,000	0.0326251E+02	0.15119409E–02	-0.03881755E–04	0.05581944E–07	-0.02474951E–10	-0.14310539E+05	0.04848897E+02
CO <sub>2</sub>	1,000–5,000	0.04453623E+02	0.03140168E–01	-0.12784105E–05	0.02393996E–08	-0.16690333E–13	-0.04896696E+06	-0.09553395E+01
	300–1,000	0.02275724E+02	0.09922072E–01	-0.10409113E–04	0.06866686E–07	-0.02117280E–10	-0.04837314E+06	0.10188488E+02
H <sub>2</sub>	1,000–5,000	0.02991423E+02	0.07000644E–02	-0.05633828E–06	-0.09231578E–10	0.15827519E–14	-0.08350340E+04	-0.13551101E+01
	300–1,000	0.03298124E+02	0.08249441E–02	-0.08143015E–05	-0.0947534E–09	0.04134872E–11	-0.10122209E+04	-0.03294094E+02
H	1,000–5,000	0.02500000E+02	0.00000000E+00	0.00000000E+00	0.00000000E+00	0.00000000E+00	0.02547162E+06	-0.04601176E+01
	300–1,000	0.02500000E+02	0.00000000E+00	0.00000000E+00	0.00000000E+00	0.00000000E+00	0.02547162E+06	-0.04601176E+01
OH	1,000–5,000	0.02882730E+02	0.10139743E–02	-0.02276877E–05	0.02174683E–09	-0.05126305E–14	0.03886888E+05	0.05595712E+02
	300–1,000	0.03637266E+02	0.01850910E–02	-0.16761646E–05	0.02387202E–07	-0.08431442E–11	0.0366781E+05	0.1358860E+01
H <sub>2</sub> O	1,000–5,000	0.02672145E+02	0.03056293E–01	-0.08730260E–05	0.12009964E–09	-0.06391618E–13	-0.02989921E+06	0.06862817E+02
	300–1,000	0.03386842E+02	0.03474982E–01	-0.06354696E–04	0.06968381E–07	-0.02506588E–10	-0.03020811E+06	0.02590233E+02
N <sub>2</sub>	1,000–5,000	0.02926640E+02	0.14879768E–02	-0.05684760E–05	0.10097038E–09	-0.06753351E–13	-0.09227977E+04	0.03980528E+02
	300–1,000	0.03298677E+02	0.14082404E–02	-0.03963222E–04	0.05641515E–07	-0.02444854E–10	-0.10208999E+04	0.03950372E+02
N	1,000–5,000	0.02450268E+02	0.10661458E–03	-0.07465337E–06	0.01879562E–09	-0.10259839E–14	0.05611604E+06	0.04448758E+02
	300–1,000	0.02503071E+02	-0.02180018E–03	0.05420529E–06	-0.05647560E–09	0.02099904E–12	0.05609890E–06	0.04167566E+02
NO	1,000–5,000	0.03245435E+02	0.12691383E–02	-0.05015890E–05	0.09169283E–09	-0.06275419E–13	0.0980840E+05	0.06417293E+02
	300–1,000	0.03375541E+02	0.12530634E–02	-0.03302730E–04	0.05217810E–07	-0.02446262E–10	0.09817961E+05	0.05829590E+02
NO <sub>2</sub>	1,000–5,000	0.04682859E+02	0.02462429E–01	-0.10422585E–05	0.01976902E–08	-0.13917168E–13	0.02261292E+05	0.09885985E+01
	300–1,000	0.02670600E+02	0.07838500E–01	-0.08063864E–04	0.06161714E–07	-0.02320150E–10	0.02396290E+05	0.11612071E+02

**Table A.13** (continued)

Species	<i>T</i> (K)	<i>a</i> <sub>1</sub>	<i>a</i> <sub>2</sub>	<i>a</i> <sub>3</sub>	<i>a</i> <sub>4</sub>	<i>a</i> <sub>5</sub>	<i>a</i> <sub>6</sub>	<i>a</i> <sub>7</sub>
O <sub>2</sub>	1,000-5,000	0.03697578E+02	0.06135197E-02	-0.12388420E-06	0.01775281E-09	-0.11364354E-14	-0.12339301E+04	0.03189165E+02
	300-1,000	0.03212936E+02	0.11274864E-02	-0.05756150E-05	0.13138773E-08	-0.08768554E-11	-0.10052490E+04	0.06034737E+02
O	1,000-5,000	0.02542059E+02	-0.02755061E-03	-0.03102803E-07	0.04551067E-10	-0.04368051E-14	0.02923080E+06	0.04920308E+02
	300-1,000	0.02946428E+02	-0.16381665E-02	0.02421031E-04	-0.16023431E-08	0.03890696E-11	0.02914764E+06	0.02963995E+02

SOURCE: Kee, R. J., Rupley, F. M., and Miller, J. A., "The Chemkin Thermodynamic Data Base," Sandia Report, SAND87-8215B, reprinted March 1991.

---

**A P P E N D I X**

**B**

**FUEL PROPERTIES**

**Table B.1** Selected properties of hydrocarbon fuels: enthalpy of formation,<sup>a</sup> Gibbs function of formation,<sup>a</sup> entropy,<sup>a</sup> and higher and lower heating values all at 298.15 K and 1 atm; boiling points<sup>b</sup> and latent heat of vaporization<sup>c</sup> at 1 atm; constant-pressure adiabatic flame temperature at 1 atm;<sup>d</sup> liquid density<sup>e</sup>

Formula	Fuel	MW (kg/kmol)	$\bar{h}_f^\rho$ (kJ/kmol)	$\bar{g}_f^\rho$ (kJ/kmol)	$\bar{s}^\rho$ (kJ/kmol·K)	HHV <sup>f</sup> (kJ/kg)	LHV <sup>f</sup> (kJ/kg)	Boiling pt. (°C)	$h_{fg}$ (kJ/kg)	$T_{ad}^\ddagger$ (K)	$\rho_{\text{liq}}^*$ (kg/m <sup>3</sup> )
CH <sub>4</sub>	Methane	16.043	-74.831	-50,794	186,188	55,528	50,016	-164	509	2,226	300
C <sub>2</sub> H <sub>2</sub>	Acetylene	26.038	226,748	209,200	200,819	49,923	48,225	-84	—	2,539	—
C <sub>2</sub> H <sub>4</sub>	Ethene	28.054	52,283	68,124	219,827	50,313	47,161	-103.7	—	2,369	—
C <sub>2</sub> H <sub>6</sub>	Ethane	30.069	-84,667	-32,886	229,492	51,901	47,489	-88.6	488	2,259	370
C <sub>3</sub> H <sub>6</sub>	Propene	42.080	20,414	62,718	266,939	48,936	45,784	-47.4	437	2,334	514
C <sub>3</sub> H <sub>8</sub>	Propane	44.096	-103,847	-23,489	269,910	50,388	46,357	-42.1	425	2,267	500
C <sub>4</sub> H <sub>8</sub>	1-Butene	56.107	1,172	72,036	307,440	48,471	45,319	-63	391	2,322	595
C <sub>4</sub> H <sub>10</sub>	<i>n</i> -Butane	58.123	-124,733	-15,707	310,034	49,546	45,742	-0.5	386	2,270	579
C <sub>5</sub> H <sub>10</sub>	1-Pentene	70.134	-20,920	78,605	347,607	48,152	45,000	30	358	2,314	641
C <sub>5</sub> H <sub>12</sub>	<i>n</i> -Pentane	72.150	-146,440	-8,201	348,402	49,032	45,355	36.1	358	2,272	626
C <sub>6</sub> H <sub>6</sub>	Benzene	78.113	82,927	129,658	269,199	42,277	40,579	80.1	393	2,342	879
C <sub>6</sub> H <sub>12</sub>	1-Hexene	84.161	-41,673	87,027	385,974	47,955	44,803	63.4	335	2,308	673
C <sub>6</sub> H <sub>14</sub>	<i>n</i> -Hexane	86.177	-167,193	209	386,811	48,696	45,105	69	335	2,273	659
C <sub>7</sub> H <sub>14</sub>	1-Heptene	98.188	-62,132	95,563	424,383	47,817	44,665	93.6	—	2,305	—
C <sub>7</sub> H <sub>16</sub>	<i>n</i> -Heptane	100.203	-187,820	8,745	425,262	48,456	44,926	98.4	316	2,274	684
C <sub>8</sub> H <sub>16</sub>	1-Octene	112.214	-82,927	104,140	462,792	47,712	44,560	121.3	—	2,302	—
C <sub>8</sub> H <sub>18</sub>	<i>n</i> -Octane	114.230	-208,447	17,322	463,671	48,275	44,791	125.7	300	2,275	703
C <sub>9</sub> H <sub>18</sub>	1-Nonene	126.241	-103,512	112,717	501,243	47,631	44,478	—	—	2,300	—
C <sub>9</sub> H <sub>20</sub>	<i>n</i> -Nonane	128.257	-229,032	25,857	502,080	48,134	44,686	150.8	295	2,276	718
C <sub>10</sub> H <sub>20</sub>	1-Decene	140.268	-124,139	121,294	539,652	47,565	44,413	170.6	—	2,298	—
C <sub>10</sub> H <sub>22</sub>	<i>n</i> -Decane	142.284	-249,639	34,434	540,531	48,020	44,602	174.1	277	2,277	730
C <sub>11</sub> H <sub>22</sub>	1-Undecene	154.295	-144,766	129,830	578,061	47,512	44,360	—	—	2,296	—
C <sub>11</sub> H <sub>24</sub>	<i>n</i> -Undecane	156.311	-270,286	43,012	578,940	47,926	44,512	195.9	265	2,277	740

**Table B.1** (continued)

Formula	Fuel	MW (kg/kmol)	$\bar{h}_f^o$ (kJ/kmol)	$\bar{g}_f^o$ (kJ/kmol)	$\bar{s}^o$ (kJ/kmol-K)	HHV† (kJ/kg)	LHV† (kJ/kg)	Boiling pt. (°C)	$h_{fg}$ (kJ/kg)	$T_{ad}^\ddagger$ (K)	$\rho_{\text{liq}}^*$ (kg/m³)
C <sub>12</sub> H <sub>24</sub>	1-Dodecene	168.322	-165,332	138,407	616,471	47,468	44,316	213.4	—	2,295	—
C <sub>12</sub> H <sub>26</sub>	n-Dodecane	170.337	-292,162	—	—	47,841	44,467	216.3	236	2,277	749

† Based on gaseous fuel.

‡ For stoichiometric combustion with air (79 percent N<sub>2</sub>, 21 percent O<sub>2</sub>).

\* For liquids at 20°C or for gases at the boiling point of the liquefied gas.

## SOURCES:

aRossini, F. D., et al., *Selected Values of Physical and Thermodynamic Properties of Hydrocarbons and Related Compounds*, Carnegie Press, Pittsburgh, PA, 1953.bWeast, R. C. (ed.), *Handbook of Chemistry and Physics*, 56th Ed., CRC Press, Cleveland, OH, 1976.cObert, E. F., *Internal Combustion Engines and Air Pollution*, Harper & Row, New York, 1973.

dCalculated using HFFLAME (Appendix F).

**Table B.2**Curvefit coefficients for fuel specific heat and enthalpy<sup>a</sup> for reference state of zero enthalpy of the elements at 298.15 K, 1 atm

$$\bar{c}_p \text{ (kJ/kmol/K)} = 4.184(a_1 + a_2\theta + a_3\theta^2 + a_4\theta^3 + a_5\theta^{-2}),$$

$$\bar{h}^\circ \text{ (kJ/kmol)} = 4184 (a_1\theta + a_2\theta^2/2 + a_3\theta^3/3 + a_4\theta^4/4 - a_5\theta^{-1} + a_6),$$

where  $\theta \equiv T \text{ (K)}/1000$ 

Formula	Fuel	MW	$a_1$	$a_2$	$a_3$	$a_4$	$a_5$	$a_6$	$a_8^b$
CH <sub>4</sub>	Methane	16.043	-0.29149	26.327	-10.610	1.5656	0.16573	-18.331	4.300
C <sub>3</sub> H <sub>8</sub>	Propane	44.096	-1.4867	74.339	-39.065	8.0543	0.01219	-27.313	8.852
C <sub>6</sub> H <sub>14</sub>	Hexane	86.177	-20.777	210.48	-164.125	52.832	0.56635	-39.836	15.611
C <sub>8</sub> H <sub>18</sub>	Isooctane	114.230	-0.55313	181.62	-97.787	20.402	-0.03095	-60.751	20.232
CH <sub>3</sub> OH	Methanol	32.040	-2.7059	44.168	-27.501	7.2193	0.20299	-48.288	5.3375
C <sub>2</sub> H <sub>5</sub> OH	Ethanol	46.07	6.990	39.741	-11.926	0	0	-60.214	7.6135
C <sub>8.26</sub> H <sub>15.5</sub>	Gasoline	114.8	-24.078	256.63	-201.68	64.750	0.5808	-27.562	17.792
C <sub>7.76</sub> H <sub>13.1</sub>		106.4	-22.501	227.99	-177.26	56.048	0.4845	-17.578	15.232
C <sub>10.8</sub> H <sub>18.7</sub>	Diesel	148.6	-9.1063	246.97	-143.74	32.329	0.0518	-50.128	23.514

<sup>a</sup>SOURCE: From Heywood, J. B., *Internal Combustion Engine Fundamentals*, McGraw-Hill, New York, 1988, by permission of McGraw-Hill, Inc.<sup>b</sup>To obtain 0 K reference state for enthalpy, add  $a_8$  to  $a_6$ .

**Table B.3** Curvefit coefficients for fuel vapor thermal conductivity, viscosity, and specific heat<sup>a</sup>

Formula	Fuel	T-range (K)	Property	$a_1$	$a_2$	$a_3$	$a_4$	$a_5$	$a_6$	$a_7$
$C_4H_8$	Methane	100-1,000 70-1,000	$k$ $\mu$ $c_p$	-1.3404990E-2 2.96826700E-1 See Table B.2	3.6630760E-4 3.71120100E-2	-1.82248608E-6 1.21829800E-5	5.93987998E-9 -7.02426000E-8	-9.14055050E-12 7.54326900E-11	-6.78968890E-15 -2.72371660E-14	-1.95048736E-18 0
$C_5H_{12}$	Propane	200-500 270-600	$k$ $\mu$ $c_p$	-1.07682209E-2 -3.54371100E-1 See Table B.2	8.38590325E-5 3.08009600E-2	4.22059864E-8 -6.99723000E-6	0 0	0 0	0 0	0 0
$C_6H_{14}$	n-Hexane	150-1,000 270-900	$k$ $\mu$ $c_p$	1.28757500E-3 1.54541200E-0 See Table B.2	-2.0499443E-5 1.15089900E-2	2.37568831E-7 2.72216500E-5	-1.60944555E-10 -3.26900000E-8	7.71027290E-14 1.24545900E-11	0 0	0 0
$C_7H_{16}$	n-Heptane	250-1,000 370-580	$k$ $\mu$ $c_p$	-4.60614700E-2 1.54097000E-0 9.46260000E-1 -7.40308000E-2	5.95652224E-4 1.09315700E-2 5.86099700E+0 1.08935370E+1	-2.98893153E-6 1.80066400E-5 -1.98231320E-3 -1.26512400E-2	8.44612876E-9 -1.36379000E-8 -6.88695300E-8 9.84376300E-6	-1.22997E-11 0 0 -4.32282960E-9	9.0127E-15 0 0 7.86366500E-13	-2.62961E-18 0 0 0
$C_8H_{18}$	n-Octane	250-500 300-650	$k$ $\mu$ $c_p$	-4.01391940E-3 8.32435400E-1 2.14419800E-2 2.43598860E-3	3.38796092E-5 1.40045000E-2 5.35690500E+0 -4.46819470E+0	8.19291819E-8 8.79376500E-6 -1.17497000E-3 -1.66843290E-2	0 0 -6.84030000E-9 -6.99115500E-7	0 0 0 8.64282020E-9	0 0 0 -1.61426500E-12	0
$C_{10}H_{22}$	n-Decane	250-500 300-700	$k$ $\mu$ $c_p$	-5.88274000E-3 Not available -1.35345890E+4	3.7244964E-5 9.1487900E+1	7.55109624E-8 -2.20700000E-1	-1.07155000E-6 2.91406000E-4	0 -2.15307400E-7	0 8.3860000E-11	-1.34404000E-14
$CH_3OH$	Methanol	300-550 250-650	$k$ $\mu$ $c_p$	-2.02986750E-2 1.19790000E-40 See Table B.2	1.21910922E-4 2.45028000E-2	-2.23748473E-8 1.86162740E-5	0 -1.30674820E-8	0 0	0 0	0
$C_2H_5OH$	Ethanol	250-550 270-600	$k$ $\mu$ $c_p$	-2.46663000E-2 -6.13595000E-2 See Table B.2	1.55892550E-4 3.20713470E-2	-8.22954922E-8 -6.25079376E-6	0 0	0 0	0 0	0

<sup>a</sup>SOURCE: Andrews, J. R., and Biblarz, O., "Temperature Dependence of Gas Properties in Polynomial Form," Naval Postgraduate School, NPS67-81-001, January 1981.

---

**APPENDIX**

## SELECTED PROPERTIES OF AIR, NITROGEN, AND OXYGEN

**Table C.1** Selected properties of air at 1 atm<sup>o</sup>

T (K)	$\rho$ (kg/m <sup>3</sup> )	$c_p$ (kJ/kg-K)	$\mu \cdot 10^7$ (N-s/m <sup>2</sup> )	$\nu \cdot 10^6$ (m <sup>2</sup> /s)	$k \cdot 10^3$ (W/m-K)	$\alpha \cdot 10^6$ (m <sup>2</sup> /s)	Pr
100	3.5562	1.032	71.1	2.00	9.34	2.54	0.786
150	2.3364	1.012	103.4	4.426	13.8	5.84	0.758
200	1.7458	1.007	132.5	7.590	18.1	10.3	0.737
250	1.3947	1.006	159.6	11.44	22.3	15.9	0.720
300	1.1614	1.007	184.6	15.89	26.3	22.5	0.707
350	0.9950	1.009	208.2	20.92	30.0	29.9	0.700
400	0.8711	1.014	230.1	26.41	33.8	38.3	0.690
450	0.7740	1.021	250.7	32.39	37.3	47.2	0.686
500	0.6964	1.030	270.1	38.79	40.7	56.7	0.684
550	0.6329	1.040	288.4	45.57	43.9	66.7	0.683
600	0.5804	1.051	305.8	52.69	46.9	76.9	0.685
650	0.5356	1.063	322.5	60.21	49.7	87.3	0.690
700	0.4975	1.075	338.8	68.10	52.4	98.0	0.695
750	0.4643	1.087	354.6	76.37	54.9	109	0.702
800	0.4354	1.099	369.8	84.93	57.3	120	0.709
850	0.4097	1.110	384.3	93.80	59.6	131	0.716
900	0.3868	1.121	398.1	102.9	62.0	143	0.720
950	0.3666	1.131	411.3	112.2	64.3	155	0.723
1,000	0.3482	1.141	424.4	121.9	66.7	168	0.726
1,100	0.3166	1.159	449.0	141.8	71.5	195	0.728
1,200	0.2902	1.175	473.0	162.9	76.3	224	0.728
1,300	0.2679	1.189	496.0	185.1	82	238	0.719
1,400	0.2488	1.207	530	213	91	303	0.703
1,500	0.2322	1.230	557	240	100	350	0.685
1,600	0.2177	1.248	584	268	106	390	0.688

**Table C.1** (continued)

<i>T</i> (K)	<i>ρ</i> (kg/m <sup>3</sup> )	<i>c<sub>p</sub></i> (kJ/kg-K)	<i>μ · 10<sup>7</sup></i> (N-s/m <sup>2</sup> )	<i>v · 10<sup>6</sup></i> (m <sup>2</sup> /s)	<i>k · 10<sup>3</sup></i> (W/m-K)	<i>α · 10<sup>6</sup></i> (m <sup>2</sup> /s)	<i>Pr</i>
1,700	0.2049	1.267	611	298	113	435	0.685
1,800	0.1935	1.286	637	329	120	482	0.683
1,900	0.1833	1.307	663	362	128	534	0.677
2,000	0.1741	1.337	689	396	137	589	0.672
2,100	0.1658	1.372	715	431	147	646	0.667
2,200	0.1582	1.417	740	468	160	714	0.655
2,300	0.1513	1.478	766	506	175	783	0.647
2,400	0.1448	1.558	792	547	196	869	0.630
2,500	0.1389	1.665	818	589	222	960	0.613
3,000	0.1135	2.726	955	841	486	1,570	0.536

<sup>a</sup>SOURCE: Incropera, F. P., and DeWitt, D. P., *Fundamentals of Heat and Mass Transfer*, 3rd Ed.  
Reprinted by permission, ©1990, John Wiley & Sons, Inc.

**Table C.2** Selected properties of nitrogen and oxygen at 1 atm<sup>a</sup>

<i>T</i> (K)	<i>ρ</i> (kg/m <sup>3</sup> )	<i>c<sub>p</sub></i> (kJ/kg-K)	<i>μ · 10<sup>7</sup></i> (N-s/m <sup>2</sup> )	<i>v · 10<sup>6</sup></i> (m <sup>2</sup> /s)	<i>k · 10<sup>3</sup></i> (W/m-K)	<i>α · 10<sup>6</sup></i> (m <sup>2</sup> /s)	<i>Pr</i>
<i>Nitrogen (N<sub>2</sub>)</i>							
100	3.4388	1.070	68.8	2.00	9.58	2.60	0.768
150	2.2594	1.050	100.6	4.45	13.9	5.86	0.759
200	1.6883	1.043	129.2	7.65	18.3	10.4	0.736
250	1.3488	1.042	154.9	11.48	22.2	15.8	0.727
300	1.1233	1.041	178.2	15.86	25.9	22.1	0.716
350	0.9625	1.042	200.0	20.78	29.3	29.2	0.711
400	0.8425	1.045	220.4	26.16	32.7	37.1	0.704
450	0.7485	1.050	239.6	32.01	35.8	45.6	0.703
500	0.6739	1.056	257.7	38.24	38.9	54.7	0.700
550	0.6124	1.065	274.7	44.86	41.7	63.9	0.702
600	0.5615	1.075	290.8	51.79	44.6	73.9	0.701
700	0.4812	1.098	321.0	66.71	49.9	94.4	0.706
800	0.4211	1.22	349.1	82.90	54.8	116	0.715
900	0.3743	1.146	375.3	100.3	59.7	139	0.721
1,000	0.3368	1.167	399.9	118.7	64.7	165	0.721
1,100	0.3062	1.187	423.2	138.2	70.0	193	0.718
1,200	0.2807	1.204	445.3	158.6	75.8	224	0.707
1,300	0.2591	1.219	466.2	179.9	81.0	256	0.701
<i>Oxygen (O<sub>2</sub>)</i>							
100	3.945	0.962	76.4	1.94	9.25	2.44	0.796
150	2.585	0.921	114.8	4.44	13.8	5.80	0.766
200	1.930	0.915	147.5	7.64	18.3	10.4	0.737
250	1.542	0.915	178.6	11.58	22.6	16.0	0.723
300	1.284	0.920	207.2	16.14	26.8	22.7	0.711
350	1.100	0.929	233.5	21.23	29.6	29.0	0.733
400	0.9620	0.942	258.2	26.84	33.0	36.4	0.737
450	0.8554	0.956	281.4	32.90	36.3	44.4	0.741
500	0.7698	0.972	303.3	39.40	41.2	55.1	0.716
550	0.6998	0.988	324.0	46.30	44.1	63.8	0.726
600	0.6414	1.003	343.7	53.59	47.3	73.5	0.729
700	0.5498	1.031	380.8	69.26	52.8	93.1	0.744
800	0.4810	1.054	415.2	86.32	58.9	116	0.743
900	0.4275	1.074	447.2	104.6	64.9	141	0.740
1,000	0.3848	1.090	477.0	124.0	71.0	169	0.733
1,100	0.3498	1.103	505.5	144.5	75.8	196	0.736
1,200	0.3206	1.115	532.5	166.1	81.9	229	0.725
1,300	0.2960	1.125	588.4	188.6	87.1	262	0.721

<sup>a</sup>SOURCE: Incropera, F. P., and DeWitt, D. P., *Fundamentals of Heat and Mass Transfer*, 3rd Ed.  
Reprinted by permission, © 1990 John Wiley & Sons, Inc.

---

**A P P E N D I X****D****BINARY DIFFUSION COEFFICIENTS AND METHODOLOGY  
FOR THEIR ESTIMATION****Table D.1** Binary diffusion coefficients at 1 atm<sup>a,b</sup>

Substance A	Substance B	T (K)	$D_{AB} \cdot 10^5$ (m <sup>2</sup> /s)
Benzene	Air	273	0.77
Carbon dioxide	Air	273	1.38
Carbon dioxide	Nitrogen	293	1.63
Cyclohexane	Air	318	0.86
<i>n</i> -Decane	Nitrogen	363	0.84
<i>n</i> -Dodecane	Nitrogen	399	0.81
Ethanol	Air	273	1.02
<i>n</i> -Hexane	Nitrogen	288	0.757
Hydrogen	Air	273	0.611
Methanol	Air	273	1.32
<i>n</i> -Octane	Air	273	0.505
<i>n</i> -Octane	Nitrogen	303	0.71
Toluene	Air	303	0.88
2,2,4-Trimethyl pentane (Isooctane)	Nitrogen	303	0.705
2,2,3-Trimethyl heptane	Nitrogen	363	0.684
Water	Air	273	2.2

<sup>a</sup>SOURCE: Perry, R. H., Green, D. W., and Maloney, J. O., *Perry's Chemical Engineers' Handbook*, 6th Ed., McGraw-Hill, New York, 1984.

<sup>b</sup>Assuming ideal-gas behavior, the pressure and temperature dependence of the binary diffusion coefficient can be estimated using  $D_{AB} \propto T^{3/2}/P$ .

## PREDICTING BINARY DIFFUSION COEFFICIENTS FROM THEORY

The following approach for predicting binary diffusion coefficients is a brief summary of that presented by Reid *et al.* [1]. The methodology is based on the Chapman–Enskog theoretical description of binary mixtures of gases at low to moderate pressures. In this theory, the binary diffusion coefficient for the species pair A and B is

$$\mathcal{D}_{AB} = \frac{3}{16} \frac{(4\pi k_B T / MW_{AB})^{1/2}}{(P/R_u T) \pi \sigma_{AB}^2 \Omega_D} f_D, \quad (D.1)$$

where  $k_B$  is the Boltzmann constant,  $T$  (K) is the absolute temperature,  $P$  (Pa) is the pressure,  $R_u$  is the universal gas constant, and  $f_D$  is a theoretical correction factor whose value is sufficiently close to unity to be assumed to be the same. The remaining terms are defined below:

$$MW_{AB} = 2[(1/MW_A) + (1/MW_B)]^{-1}, \quad (D.2)$$

where  $MW_A$  and  $MW_B$  are the molecular weights of species A and B, respectively;

$$\sigma_{AB} = (\sigma_A + \sigma_B)/2, \quad (D.3)$$

where  $\sigma_A$  and  $\sigma_B$  are the hard-sphere collision diameters of species A and B, respectively, values of which are shown in Table D.2 for several species of interest in combustion.

The collision integral,  $\Omega_D$ , is a dimensionless quantity calculated using the following expression:

$$\Omega_D = \frac{A}{(T^*)^B} + \frac{C}{\exp(DT^*)} + \frac{E}{\exp(FT^*)} + \frac{G}{\exp(HT^*)}, \quad (D.4)$$

where

$$\begin{aligned} A &= 1.06036, & B &= 0.15610, \\ C &= 0.19300, & D &= 0.47635, \\ E &= 1.03587, & F &= 1.52996, \\ G &= 1.76474, & H &= 3.89411, \end{aligned}$$

and where the dimensionless temperature  $T^*$  is defined by

$$T^* = k_B T / \varepsilon_{AB} = k_B T / (\varepsilon_A \varepsilon_B)^{1/2}. \quad (D.5)$$

Values of the characteristic Lennard–Jones energy,  $\varepsilon_i$ , are also tabulated in Table D.2 [1].

**Table D.2** Lennard-Jones parameters for selected species [2]

Species	$\sigma$ (Å)	$\varepsilon/k_B$ (K)	Species	$\sigma$ (Å)	$\varepsilon/k_B$ (K)
Air	3.711	78.6	<i>n</i> -C <sub>5</sub> H <sub>12</sub>	5.784	341.1
Al	2.655	2750	C <sub>6</sub> H <sub>6</sub>	5.349	412.3
Ar	3.542	93.3	C <sub>6</sub> H <sub>12</sub>	6.182	297.1
B	2.265	3331	<i>n</i> -C <sub>6</sub> H <sub>14</sub>	5.949	399.3
BO	2.944	596	H	2.708	37.0
B <sub>2</sub> O <sub>3</sub>	4.158	2092	H <sub>2</sub>	2.827	59.7
C	3.385	30.6	H <sub>2</sub> O	2.641	809.1
CH	3.370	68.7	H <sub>2</sub> O <sub>2</sub>	4.196	389.3
CH <sub>3</sub> OH	3.626	481.8	He	2.551	10.22
CH <sub>4</sub>	3.758	148.6	N	3.298	71.4
CN	3.856	75	NH <sub>3</sub>	2.900	558.3
CO	3.690	91.7	NO	3.492	116.7
CO <sub>2</sub>	3.941	195.2	N <sub>2</sub>	3.798	71.4
C <sub>2</sub> H <sub>2</sub>	4.033	231.8	N <sub>2</sub> O	3.828	232.4
C <sub>2</sub> H <sub>4</sub>	4.163	224.7	O	3.050	106.7
C <sub>2</sub> H <sub>6</sub>	4.443	215.7	OH	3.147	79.8
C <sub>3</sub> H <sub>8</sub>	5.118	237.1	O <sub>2</sub>	3.467	106.7
<i>n</i> -C <sub>3</sub> H <sub>7</sub> OH	4.549	576.7	S	3.839	847
<i>n</i> -C <sub>4</sub> H <sub>10</sub>	4.687	531.4	SO	3.993	301
<i>iso</i> -C <sub>4</sub> H <sub>10</sub>	5.278	330.1	SO <sub>2</sub>	4.112	335.4

Substituting numerical values for the constants in Eqn. D.1 results in

$$\mathcal{D}_{AB} = \frac{0.0266 T^{3/2}}{PMW_{AB}^{1/2} \sigma_{AB}^2 \Omega_D} \quad (D.6)$$

with the following associated units:  $\mathcal{D}_{AB}$ [=]m<sup>2</sup>/s,  $T$ [=]K,  $P$ [=]Pa, and  $\sigma_{AB}$ [=]Å.

---

## REFERENCES

1. Reid, R. C., Prausnitz, J. M., and Poling, B. E., *The Properties of Gases and Liquids*, 4th Ed., McGraw-Hill, New York, 1987.
2. Svehla, R. A., "Estimated Viscosities and Thermal Conductivities of Gases at High Temperatures," NASA Technical Report R-132, 1962.

---

**A P P E N D I X****E****GENERALIZED NEWTON'S METHOD FOR THE SOLUTION  
OF NONLINEAR EQUATIONS**

The Newton-Raphson method, Eqn. E.1, can be extended and applied to a system of nonlinear equations, Eqn. E.2:

$$x_{k+1} = x_k - \frac{f(x_k)}{f'(x_k)} = x_k - \frac{f(x_k)}{\frac{df}{dx}(x_k)} ; \quad k \equiv \text{iteration.} \quad (\text{E.1})$$

System:

$$\begin{aligned} f_1(x_1, x_2, x_3, \dots, x_n) &= 0, \\ f_2(x_1, x_2, x_3, \dots, x_n) &= 0, \\ &\vdots \\ f_n(x_1, x_2, x_3, \dots, x_n) &= 0. \end{aligned} \quad (\text{E.2})$$

Each of these may be expanded in Taylor's series form (truncating second-order and higher terms) as

$$f_i(\tilde{x} + \delta) = f_i(\tilde{x}) + \frac{\partial f_i}{\partial x_1} \delta_1 + \frac{\partial f_i}{\partial x_2} \delta_2 + \frac{\partial f_i}{\partial x_3} \delta_3 + \dots + \frac{\partial f_i}{\partial x_n} \delta_n, \quad (\text{E.3})$$

for  $i = 1, 2, 3, \dots, n$ , where

$$\tilde{x} \equiv \{x\}.$$

At the solution,  $f(\tilde{x} + \delta) \rightarrow 0$ ; the above can be arranged as a set of *linear* equations in the matrix form,

$$\left[ \frac{\partial f}{\partial x} \right] \{\delta\} = -\{f\};$$

that is,

$$\begin{bmatrix} \frac{\partial f_1}{\partial x_1} & \frac{\partial f_1}{\partial x_2} & \cdots & \frac{\partial f_1}{\partial x_n} \\ \vdots & \vdots & & \vdots \\ \frac{\partial f_n}{\partial x_1} & \frac{\partial f_n}{\partial x_2} & \cdots & \frac{\partial f_n}{\partial x_n} \end{bmatrix} \begin{Bmatrix} \delta_1 \\ \vdots \\ \delta_n \end{Bmatrix} = \begin{Bmatrix} -f_1 \\ \vdots \\ -f_n \end{Bmatrix} \quad (\text{E.4})$$

where the coefficient matrix on the left-hand-side is called the **Jacobian**.

Equation E.4 may be solved (for  $\delta$ ) using Gauss elimination; once  $\delta$  is known, the next (better) approximation is found from the recursion relation,

$$\{x\}_{k+1} = \{x\}_k + \{\delta\}_k.$$

The process of forming the Jacobian, solving Eqn. E.4, and calculating new values for  $\{x\}$  is repeated until a stop criterion is met. The following is suggested by Suh and Radcliffe [1]:

<i>Stop criterion</i>	<i>Condition</i>
$ \delta_j/x_j  \leq 10^{-7}$	$ x_j  \geq 10^{-7}$
or	
$ \delta_j  \leq 10^{-7}$	$ x_j  \leq 10^{-7}$

for  $j = 1, 2, 3, \dots, n$ .

Estimates to the partial derivatives may be formed numerically from

$$\frac{\partial f_i}{\partial x_j} = \frac{f_i(x_1, x_2, \dots, x_j + \varepsilon, \dots, x_n) - f_i(x_1, x_2, x_3, \dots, x_j, \dots, x_n)}{\varepsilon}$$

where

$$\begin{aligned} \varepsilon &= 10^{-5}|x_j| \quad \text{for } |x_j| > 1.0 \\ \varepsilon &= 10^{-5} \quad \text{for } |x_j| < 1.0. \end{aligned}$$

**Instability** may (in many cases) be avoided as follows:

1. Compare the norm of the new function vector to the norm of the previous function vector, where

$$\text{norm} = \sum_{i=1}^n |f_i(\tilde{x})|.$$

2. If the norm of the new function vector is greater than that of the old, assume that the full step  $\{\delta\}$  would not be productive and take a partial step  $\{\delta\}/5$ ; otherwise, take a full step as usual.

The process of comparing norms and dividing  $\{\delta\}$  by an arbitrary constant is termed “damping” and has proved successful in obtaining convergence even with very poor initial guesses.

A weakness of the Newton-Raphson method is that the Jacobian must be calculated at every step.

---

## REFERENCE

1. Suh, C. H., and Radcliffe, C. W., *Kinematics and Mechanisms Design*, John Wiley & Sons, New York, pp. 143–144, 1978.

---

**A P P E N D I X****F**

## **COMPUTER CODES FOR EQUILIBRIUM PRODUCTS OF HYDROCARBON-AIR COMBUSTION**

Supplied with this book is a diskette containing the following files:

<i>File</i>	<i>Purpose</i>
README	File containing instructions and other information concerning the use of the files listed below
TPEQUIL	Executable module that calculates combustion products equilibrium composition and properties for specified fuel, equivalence ratio, temperature, and pressure
TPEQUIL.F	Fortran source listing for TPEQUIL
INPUT.TP	Input file read by TPEQUIL containing user specifications for fuel, equivalence ratio, temperature, and pressure
HPFLAME	Executable module that calculates the adiabatic flame temperature, equilibrium composition, and properties of the products of combustion for <b>adiabatic constant-pressure combustion</b> with specified fuel composition, reactant enthalpy, equivalence ratio, and pressure
HPFLAME.F	Fortran source listing for HPFLAME
INPUT.HP	Input file read by HPFLAME containing user specifications for fuel, reactant enthalpy (per kilomole of fuel), equivalence ratio, and pressure
UVFLAME	Executable module that calculates the adiabatic flame temperature, equilibrium composition, and properties of the products of combustion for <b>adiabatic constant-</b>

	<b>volume combustion</b> with specified fuel composition, reactant enthalpy, equivalence ratio, and initial temperature and pressure
UVFLAME.F	Fortran source listing for UVFLAME
INPUT.UV	Input file read by UVFLAME containing user specifications for fuel, reactant enthalpy (per kilomole of fuel), equivalence ratio, moles of reactants per mole of fuel, molecular weight of reactants, and initial temperature and pressure
GPROP.DAT	Thermodynamic property datafile

The various codes above all incorporate the Olikara and Borman routines [1] for calculating equilibrium products of combustion for a fuel composed of C, H, O, and N atoms, given by  $C_NH_MO_LN_K$  and air.<sup>1</sup> Thus, oxygenated fuels, such as alcohols, and fuels with bound nitrogen can be handled by the code. For simple hydrocarbons, the numbers of fuel oxygen and nitrogen atoms,  $L$  and  $K$ , respectively, are set equal to zero in the user-modified input files. The oxidizer is assumed to be air with the simplified composition of 79 percent N<sub>2</sub>, and 21 percent O<sub>2</sub> and is specified in the subroutine TABLES. A more complex oxidizer composition, including Ar, for example, can be obtained easily by modifying this subroutine and recompiling the source code. Eleven species are considered in the products of combustion: H, O, N, H<sub>2</sub>, OH, CO, NO, O<sub>2</sub>, H<sub>2</sub>O, CO<sub>2</sub>, and N<sub>2</sub>. The code also considers Ar if it is included in the oxidizer. The Olikara and Borman routines [1] have been modified to deal in SI units. Other modifications to the original code include the way the JANAF thermodynamic data and equilibrium constants are input, as indicated in the source listings.

---

## REFERENCE

1. Olikara, C., and Borman, G. L., "A Computer Program for Calculating Properties of Equilibrium Combustion Products with Some Applications to I. C. Engines," SAE Paper 750468, 1975.

<sup>1</sup>The imbedded codes from Ref. [1], with modifications, are used with permission of the Society of Automotive Engineers, Inc., © 1975.

