
Model 1 VA7 Procedure




Model 1 VA7 – Audio – Component Removal


Removing IC9 recommended (optional)

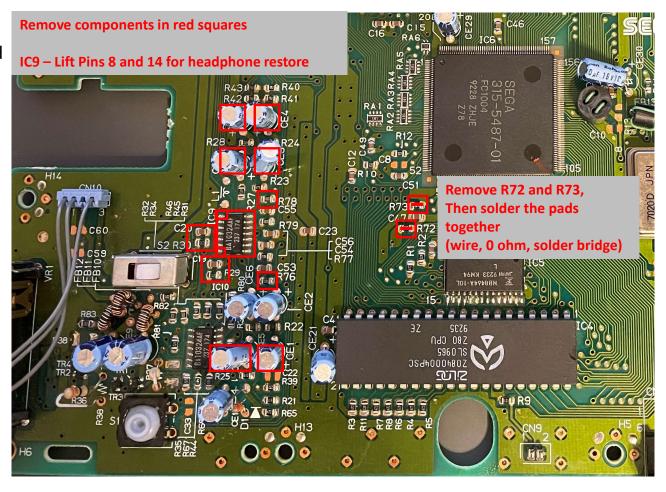

Model 1 VA7 – Audio – Signal Points

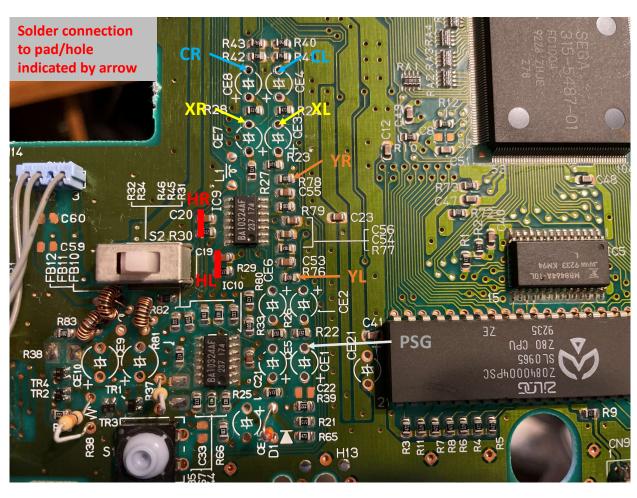

Model 1 VA7 – Video Connections

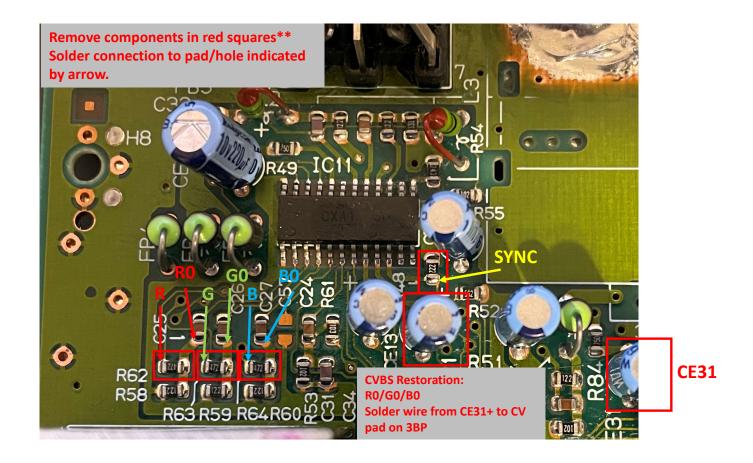

Model 1 VA7 – Supply Voltage

 Solder a wire from the "O" (output) pin of the 5V regulator to the 5V pad on the 3BP to complete the installation



Model 1 VA7 – 3BP Jumpers and Wrap-Up

- ***If re-using the RF shield, remember to bend/cut any points that may contact the 3BP***
- Bridge the following solder jumpers:
 - 2
 - If NO CVBS restore S75
- The other jumpers are unnecessary for this model using this guide.

M1VA7 – Installation Complete w/ CVBS Restore and Headphone Restore

