
## Model 1 VA7 Procedure




## Model 1 VA7 – Audio – Component Removal


Removing IC9 is optional, but recommended

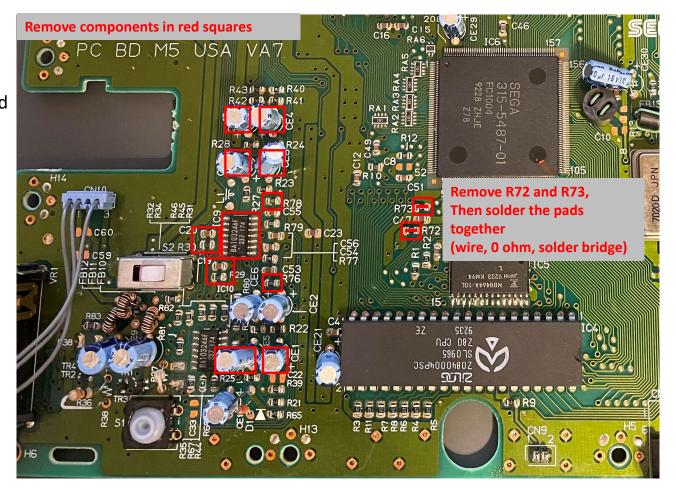

## Model 1 VA7 – Audio – Signal Points

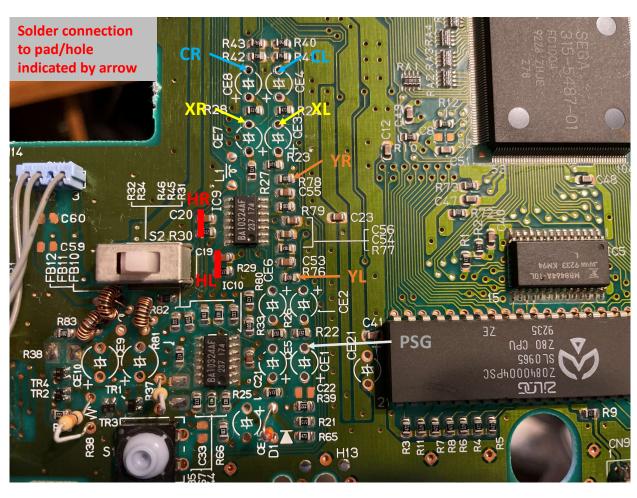

#### Model 1 VA7 – Video Connections

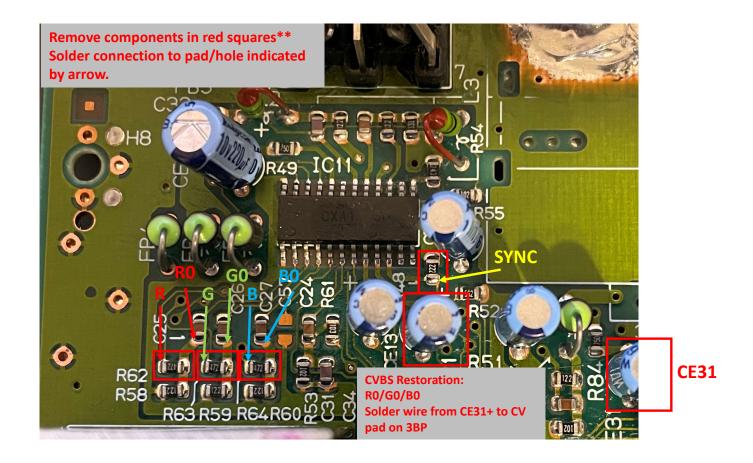

# Model 1 VA7 – Supply Voltage

 Solder a wire from the "O" (output) pin of the 5V regulator to the 5V pad on the 3BP to complete the installation



### Model 1 VA7 – 3BP Jumpers and Wrap-Up

- \*\*\*If re-using the RF shield, remember to bend/cut any points that may contact the 3BP\*\*\*
- Following this guide, the jumpers on the back aren't correct. Use the following jumpers:
  - S75
  - 2
- The other jumpers are unnecessary for this model using this guide.

# M1VA7 – Installation Complete w/ CVBS Restore and Headphone Restore

