


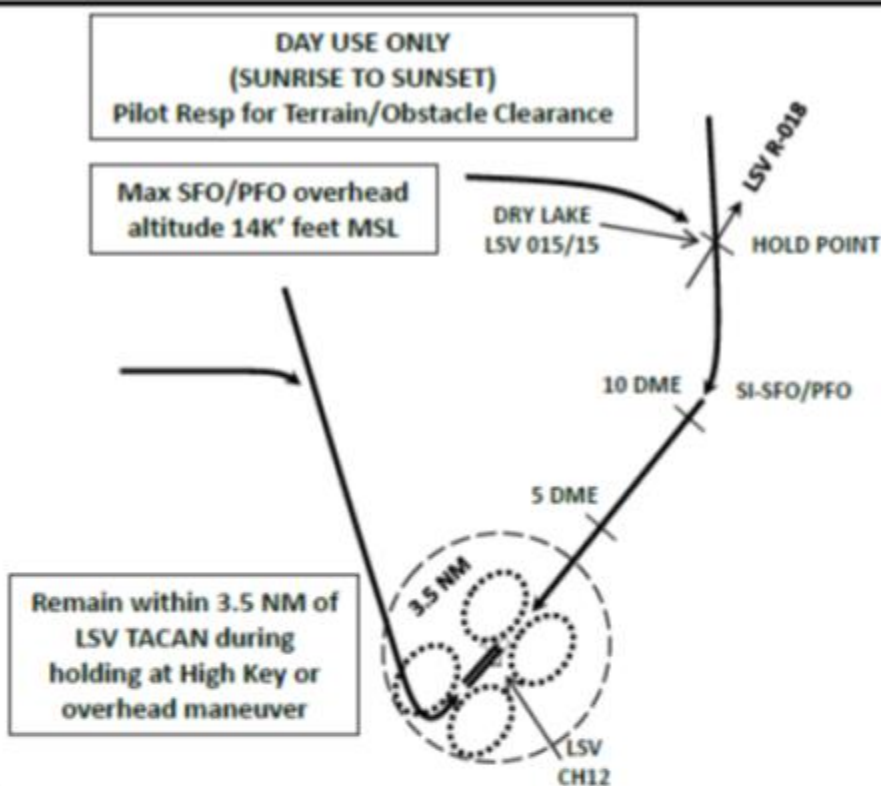

GENERAL:

1. Day use only (Sunrise to Sunset)
2. Weather Requirements: Ceiling 1,000' feet above highest altitude to be flown/5 NM visibility
3. Request SFO/PFO with desired altitude [maximum 14,000'] with NATCF or Tower
4. Holding: Hold VFR at Dry Lake, left turns, at altitude directed by NATCF/Tower
5. Breakout Instructions:
 - a. Overhead: Descend to 4K' feet MSL, proceed direct FLEX and comply w/ FLEX reentry
 - b. SI-SFO/PFO: As instructed by NATCF/Tower

OVERHEAD SFO/PFO: Report "High Key", "Low Key" and "Base, gear down, low approach"

STRAIGHT-IN SFO/PFO (RWY 21L/R ONLY):

1. If cleared by NATCF, proceed to 10 DME final
2. Report position and altitude to Tower on initial contact
3. Report "Aircraft ID, 10 mile Straight In SFO/PFO"
4. Report "Aircraft ID, 5 mile final, gear down, low approach"