MTL 85 R Earth auger



Documents

Motor assy

Crankcase and starter assy


Tank and air filter

Reduction gear

Handle assy and drills

Carburetor


Copyright EMAK S.P.A.

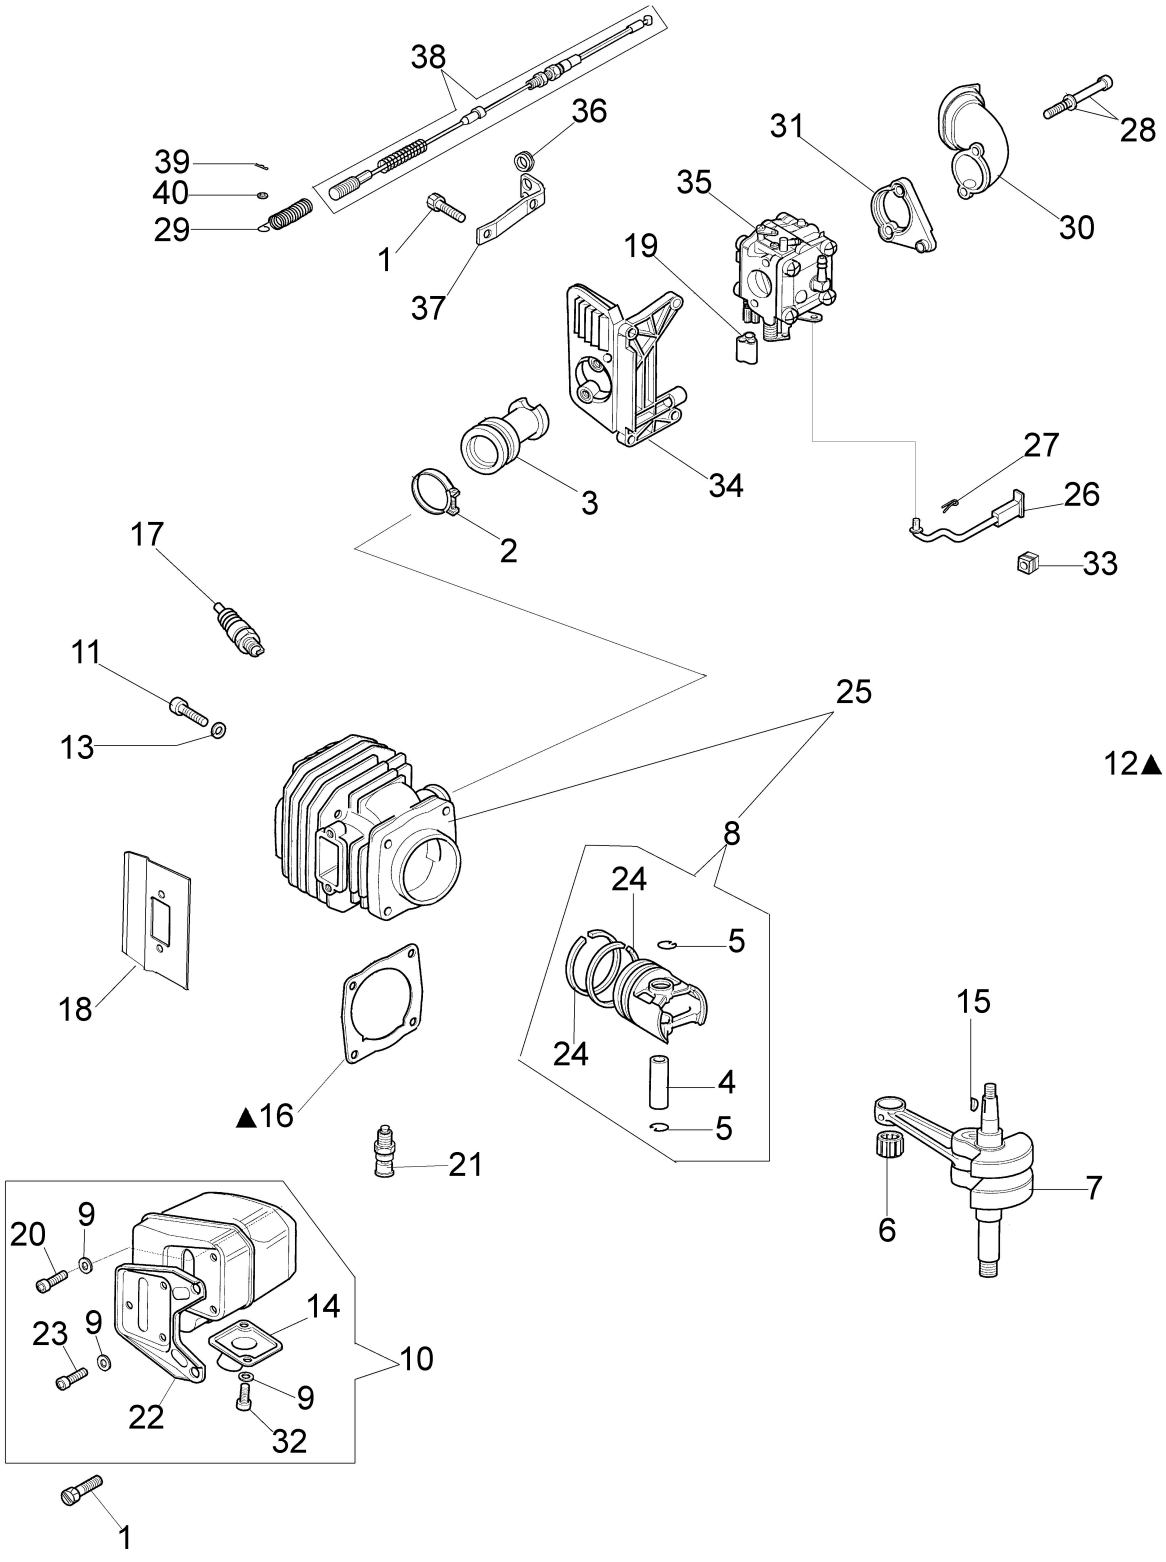

Copyright EMAK S.P.A.

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	3	097000092AR	Screw				
2	1	097000059A	Spring				
3	1	098000010	Manifold				
4	1	094500007R	Piston pin				
5	2	007201198R	Ring				
6	1	006000010	Bearing				
7	1	098000001R	Crankshaft				
8	1	098000312B	Piston assy Ø52				
9	2	3033074	Washer				
10	1	52010441A	Muffler				
11	1	005100906AR	Screw				
12	1	097000215A	Gasket set				
13	4	3833076	Washer				
14	1	53030029R	Deflector				
15	1	094500028R	Key				
16	1	52010458AR	Gasket				
17	1	3055101	Spark plug				
18	1	097000094CR	Gasket				
19	1	097000323A	Screw guide				
20	2	3801045R	Screw				
21	1	50010215R	Decompressor				
22	1	097000342A	Cover				
23	3	3801052R	Screw				
24	2	098000004R	Piston ring Ø52				
25	1	50102012F	Complete cylinder				
26	1	52010078AR	Starter lever				
27	1	006000102R	Cotter pin				
28	2	61052009BR	Screw				
29	1	53030037	Spring				
30	1	098000043	Fittings				
31	1	097000333	Flange				
32	1	005100913B	Screw				
33	1	097000057R	Grommet				
34	1	097000280	Support				
35	1	53030049	Carburetor kit WJ-72A				
36	1	006000187	Grommet				
37	1	53030054	Cable				
38	1	53030019	Throttle cable				
39	1	004000059	Cotter pin				
40	1	3916003R	Washer				

Copyright EMAK S.P.A.

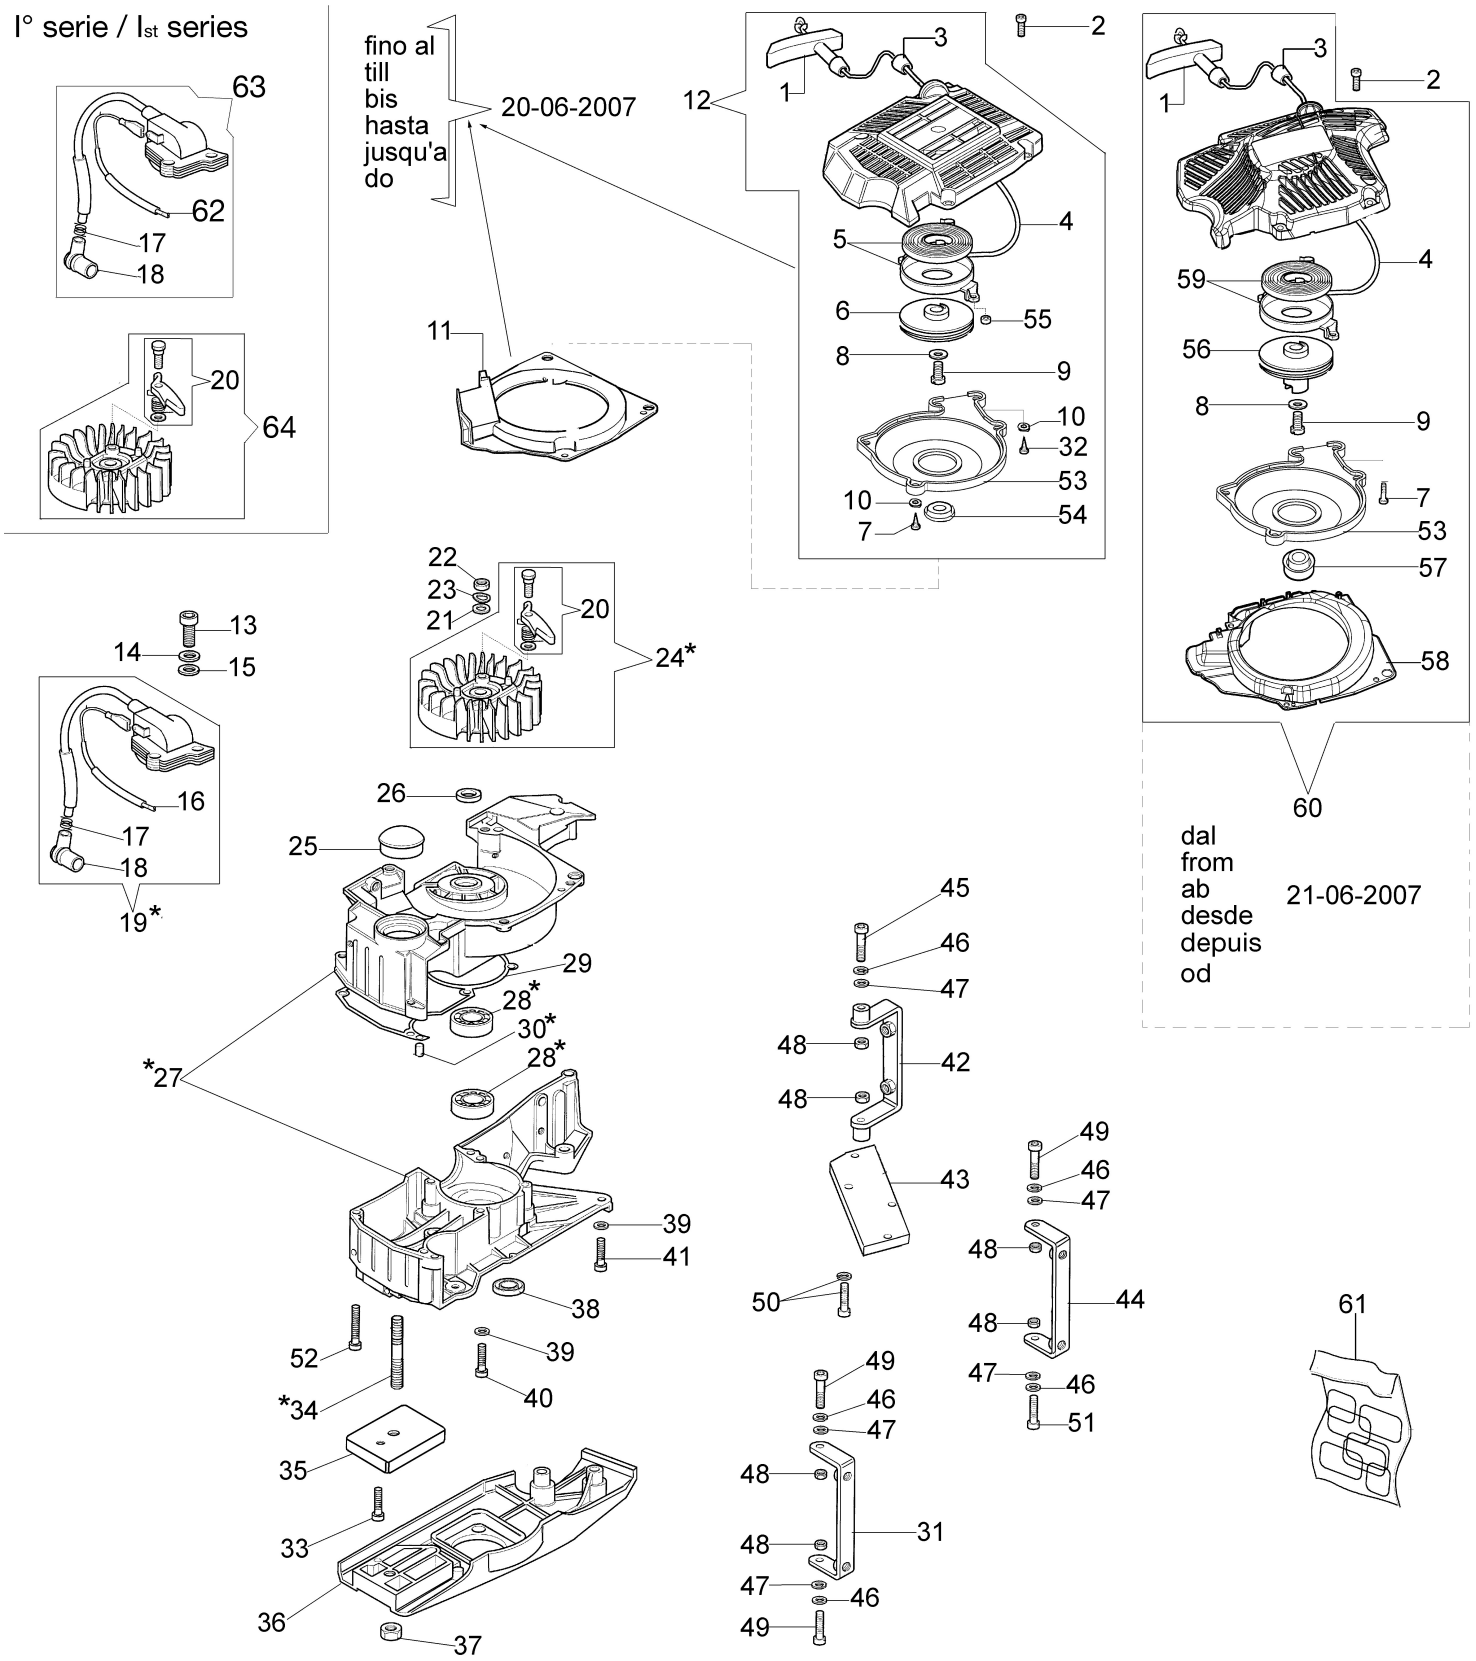

Copyright EMAK S.P.A.

Illustration Crankcase and starter assy


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	50140060	Handle				BT6-066-09/07
2	4	097000092AR	Screw				
3	1	50140056	Cap				BT6-066-09/07
4	1	098000079R	Starter rope				BT6-066-09/07
5	1	098000060AR	Spring				BT6-066-09/07
6	1	52010439CR	Pulley				BT6-066-09/07
7	5	3960017AR	Screw				BT6-066-09/07
8	1	3918006	Washer				BT6-066-09/07
9	1	3908036	Screw				BT6-066-09/07
10	5	3819005R	Washer				BT6-066-09/07
11	1	097000019C	Flange				BT6-066-09/07
12	1	52010495C	Starter kit				BT6-066-09/07
13	2	094000227	Screw				
14	2	006000315R	Washer				
15	2	3916004R	Washer				
16	1	53030054	Cable	SN 5648050063			BT6-067-01/08,
17	1	094600169AR	Spring				
18	1	094600097AR	Spark plug cap				
19	1	50200162R	Ignition coil	SN 5647240760			BT6-067-01/08
20	1	52012027	Pawl kit				
21	1	3916009R	Washer				
22	1	004000142R	Nut				
23	1	3833080R	Washer				
24	1	52010136BR	Flywheel	SN 5647240760			BT6-067-01/08
25	1	52010143A	Tank cap				
26	1	094500004R	Seal ring				
27	1	53030050B	Crankcase assy				BT6-067-01/08
28	1	099900006R	Bearing				
29	1	097000215A	Gasket set				
30	2	3023008R	Plug				
31	1	53030005	Bracket				
32	1	3960116	Screw				BT6-066-09/07
33	1	3801004	Screw				
34	1	53030022	Stud				
35	1	53030031	Plate				
36	1	53030001	Cover				
37	2	008200913R	Nut				
38	1	099900014R	Seal ring				
39	6	3833073R	Washer				
40	4	3801035	Screw				
41	1	006000064	Screw				
42	1	53030007	Bracket				

Copyright EMAK S.P.A.

Illustration Crankcase and starter assy

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
43	1	53030010	Plate				
44	1	53030006	Bracket				
45	1	3801016R	Screw				
46	4	3819006R	Washer				
47	4	3916005R	Washer				
48	6	3914003R	Nut				
49	2	3801032R	Screw				
50	1	4196163R	Screw				
51	1	3801015R	Screw				
52	1	006100303R	Screw				
53	1	50140055	Cover				BT6-066-09/07
54	1	52010410	Cap				BT6-066-09/07
55	1	52010404	Spacer				BT6-066-09/07
56	1	52010485BR	Starter pulley				BT6-066-09/07
57	1	52010489R	Cap				BT6-066-09/07
58	1	52010484BR	Flange				BT6-066-09/07
59	1	52012118BR	Complete spring				BT6-066-09/07
60	1	52010495C	Starter kit				BT6-066-09/07
61	1	53032017	Labels kit				
62	1	53030023	Cable		SN 5647240759		BT6-067-01/08
63	1	53030038AR	Ignition coil		SN 5647240759		BT6-067-01/08
64	1	52010136BR	Flywheel		SN 5647240759		BT6-067-01/08
65		53030050B	Crankcase assy	SN 5647240760			BT6-067-01/08

Copyright EMAK S.P.A.

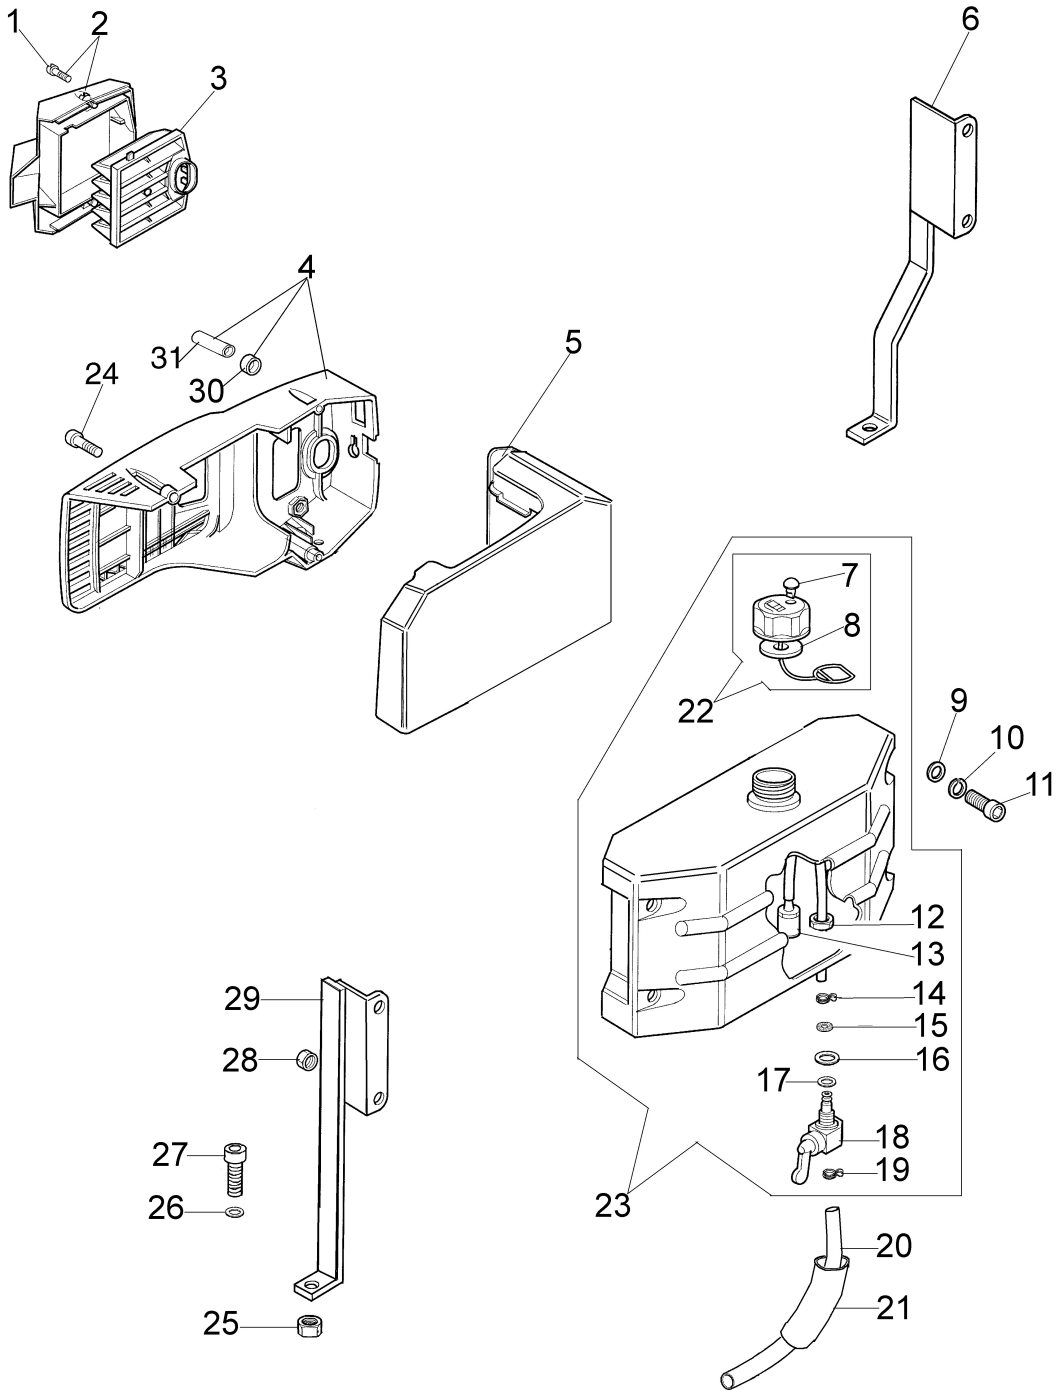


Copyright EMAK S.P.A.

Illustration Tank and air filter

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	2	093000468A	Screw				
2	1	098000136R	Cover				
3	1	098000092R	Air filter nylon				
4	1	53030060R	Clutch cover				
5	1	53030044	Guard				
6	1	53030013	Support				
7	1	4098658AR	Breather valve				
8	1	4100308AR	Gasket				
9	4	3918005R	Washer				
10	4	3819006R	Washer				
11	4	3801011R	Screw				
12	1	3912011R	Nut				
13	1	50010218R	Fuel filter				
14	1	3059012	Band				
15	1	3049006R	O-ring				
16	1	3078010	Washer				
17	1	3055098	Ring				
18	1	3055046	Tap				
19	1	4098377R	Band				
20	1	53030018	Tube				
21	1	53030041R	Sheath				
22	1	4151258R	Complete cap				
23	1	53012004R	Fuel tank				
24	3	099900296R	Screw				
25	2	3914010R	Nut				
26	2	3818011AR	Washer				
27	2	3801048	Screw				
28	2	3914003R	Nut				
29	1	53030021	Support				
30	1	3088001R	Grommet				
31	1	094500183	Tube				

Copyright EMAK S.P.A.

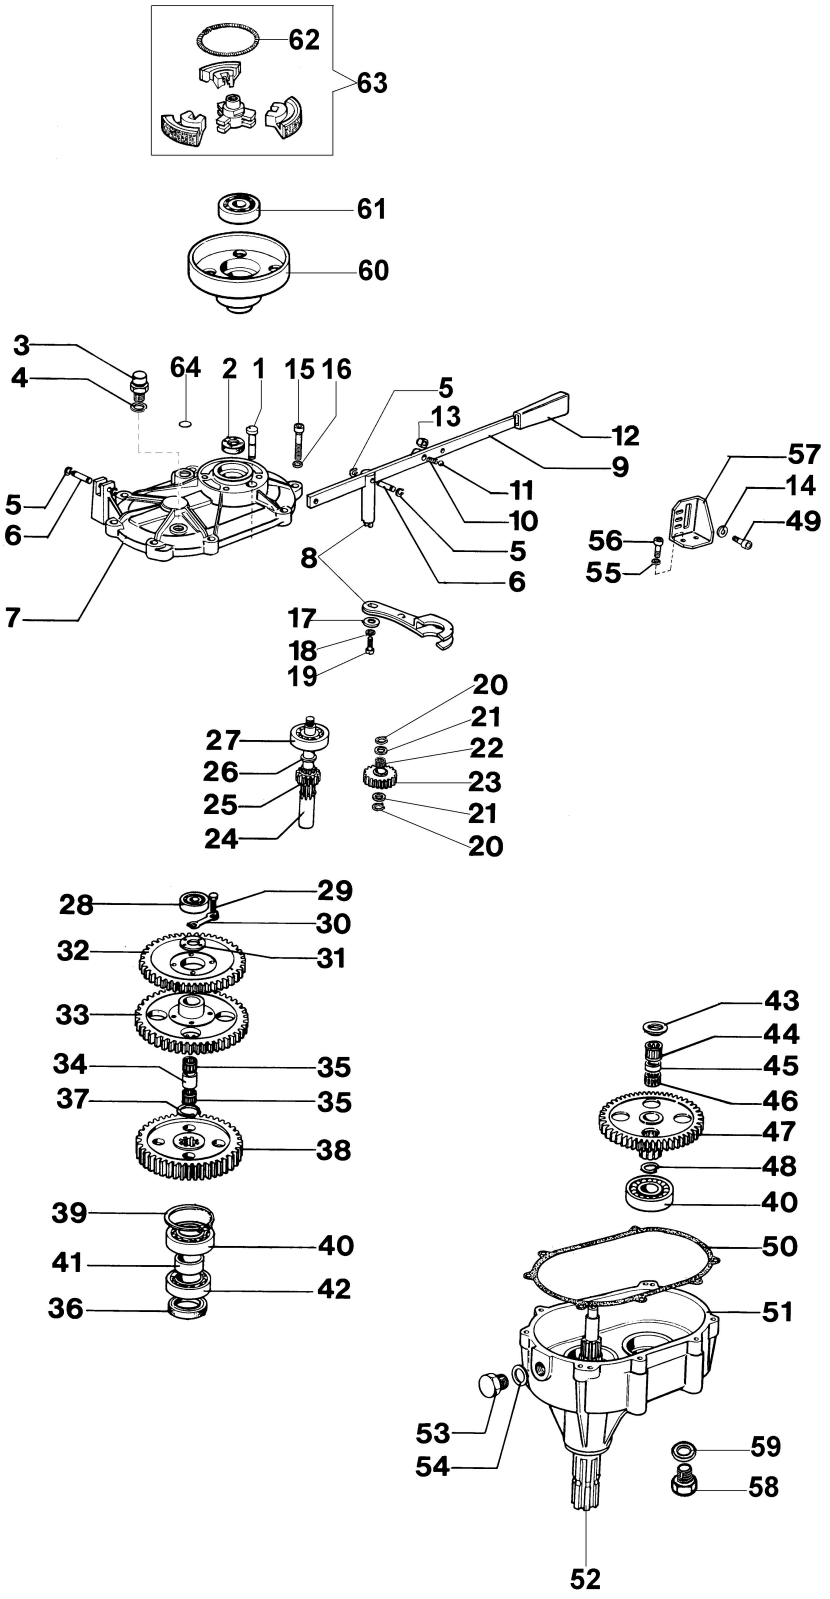


Copyright EMAK S.P.A.


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	028200063	Shaft				
2	1	028200010	Seal ring				
3	1	028200331	Cap				
4	1	028200038	Washer				
5	2	3024006	Snap ring				
6	1	53010032	Pin				
7	1	53010028R	Cover				
8	1	53010084	Pin and rod kit				
9	1	53010031A	Lever				
10	1	53010034	Spring				
11	1	3033002	Ball				
12	1	3046020	Knob				
13	1	3914003R	Nut				
14	1	3918005R	Washer				
15	1	3801027R	Screw				
16	1	3833076	Washer				
17	1	3918003R	Washer				
18	1	3072014	Washer				
19	1	3801003	Screw				
20	1	3024009R	Ring				
21	1	028200065R	Washer				
22	1	028200066	Bearing				
23	1	028200067R	Sprocket				
24	1	028200009	Shaft				
25	1	028200013	Sprocket				
26	1	004000423	Washer				
27	1	028200011	Bearing				
28	1	028200021R	Bearing				
29	1	3806022R	Screw				
30	1	028200025	Plate				
31	1	028200022	Washer				
32	1	028200026	Chain sprocket				
33	1	028200027	Chain sprocket				
34	1	028200024	Spacer				
35	2	028200023R	Bearing				
36	1	028200034	Seal ring				
37	1	3024025	Ring				
38	1	028200119	Chain sprocket				
39	1	028200031R	Ring				
40	1	028200020	Bearing				
41	1	028200032	Spacer				
42	1	028200033R	Bearing				


Copyright EMAK S.P.A.


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
43	1	028200014	Washer				
44	1	028200015	Bearing				
45	1	028200016	Spacer				
46	1	028200017	Bearing				
47	1	028200018	Chain sprocket				
48	1	028200019	Ring				
49	1	3801010R	Screw				
50	1	028200007R	Gasket				
51	1	53010029	Gear case				
52	1	028200028	Shaft				
53	1	028200037	Cap				
54	1	028200036	Washer				
55	1	3819006R	Washer				
56	1	3801011R	Screw				
57	1	53010033	Slide				
58	1	028200039R	Screw				
59	1	028200040R	Washer				
60	1	53010066	Clutch drum				
61	1	012000041R	Bearing				
62	1	099900227R	Spring				
63	1	53030017AR	Clutch				
64	1	3049014R	O-ring				

Copyright EMAK S.P.A.

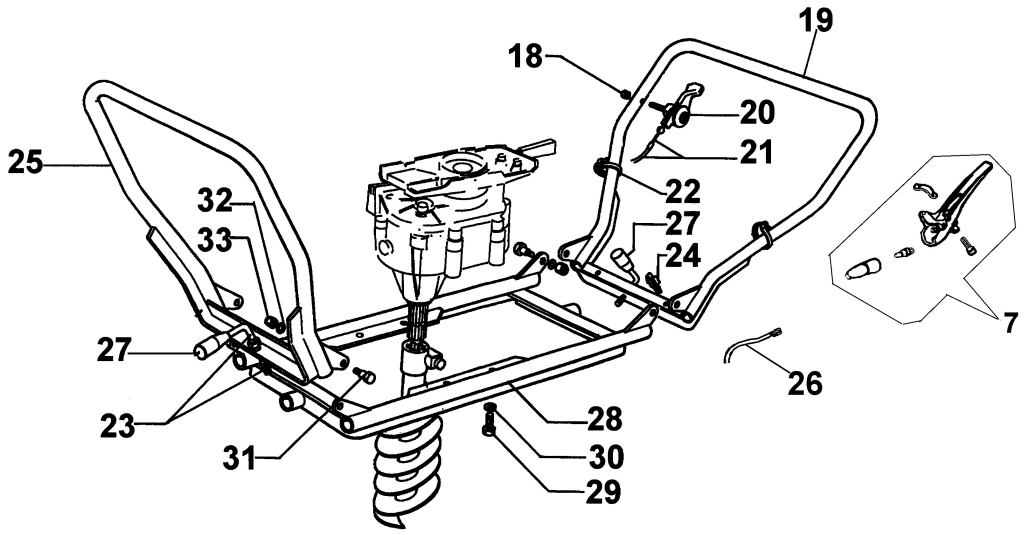

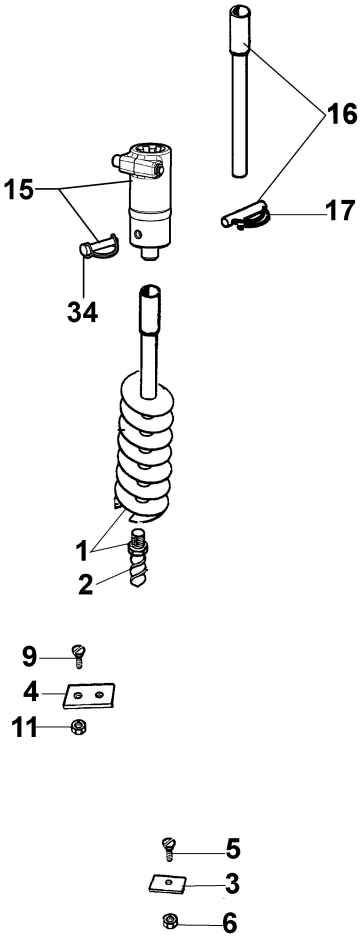

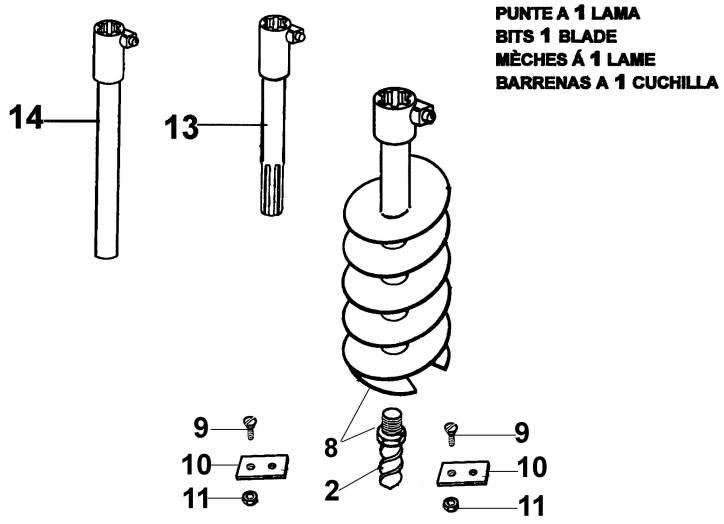

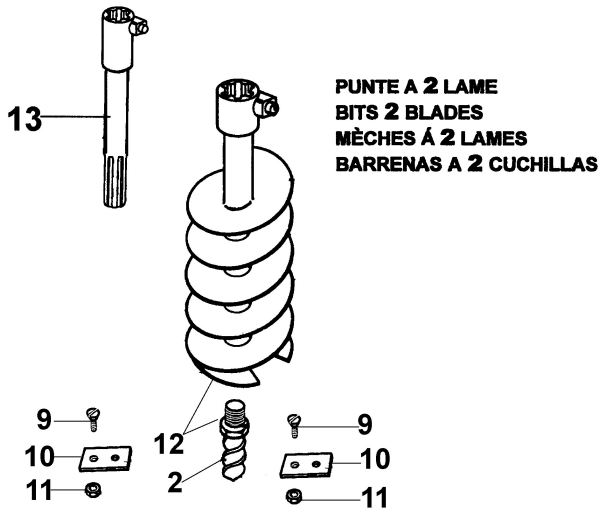

Copyright EMAK S.P.A.

Illustration Handle assy and drills


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	375100028A	Single flute bit Ø8x100 cm				
1	1	375100029A	Single flute bit Ø10x100 cm				
1	1	375100030A	Single flute bit Ø15x100 cm				
1	1	375100031A	Single flute bit Ø20x100 cm				
2	1	375100088A	Cap 10÷50 cm				
2	1	375100090A	Cap 8 cm				
3	1	375100091A	Blade 8 cm				
3	1	375100092AR	Blade cm 10				
4	1	375100093A	Blade cm 15				
4	1	375100094A	Blade cm 20				
5	1	3802007R	Screw				
6	1	320000028R	Nut				
7	1	53032012	Throttle lever				
8	1	53030061	Single flute bit Ø25x85 cm				BT6-090-11/10
8	1	53030062	Single flute bit Ø30x85 cm				BT6-090-11/10
8	1	53030063	Single flute bit Ø35x85 cm				BT6-090-11/10
9	2	028000055R	Screw				
10	2	028000067A	Blade cm 25				
10	2	028000068A	Blade cm 30				
10	2	028000069A	Blade cm 35				
10	2	028000078A	Blade cm 40				
10	2	028200255	Blade for bit Ø45				
10	2	028200256	Blade for Ø50 bit				
11	2	006000091R	Nut				
12	1	028200252	Double flute bit Ø45x100 cm				
12	1	028200253	Double flute bit Ø50x100 cm				
12	1	028200297	Double flute bit Ø25x100 cm				
12	1	028200298	Double flute bit Ø30x100 cm				
12	1	028200299	Double flute bit Ø35x100 cm				
12	1	028200306	Double flute bit Ø40x100 cm				
13	1	028200289	Extension				BT6-090-11/10
14	1	028200287	Extension				BT6-090-11/10
15	1	028200354	Support + pin kit				BT6-090-11/10
16	1	375100115	Extension + cotter pin				
17	1	3033139	Plug				BT6-090-11/10

Copyright EMAK S.P.A.

Illustration Handle assy and drills

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
18	1	3914006R	Nut				
19	1	53010007	Handle				
20	1	365100024	Throttle lever				
21	1	53030019	Throttle cable				
22	1	072700237	Band				
23	1	53010010	Screw				
24	1	3044103	Band				
25	1	53010009	Handle				
26	1	53030023	Cable				
27	2	3046021R	Knob				
28	1	53010055A	Support				
29	4	3806094R	Screw				
30	4	3819014R	Grower				
31	4	53010013	Pin				
32	2	3916008R	Washer				
33	2	3914010R	Nut				
34	1	3033141	Plug				BT6-090-11/10

Copyright EMAK S.P.A.

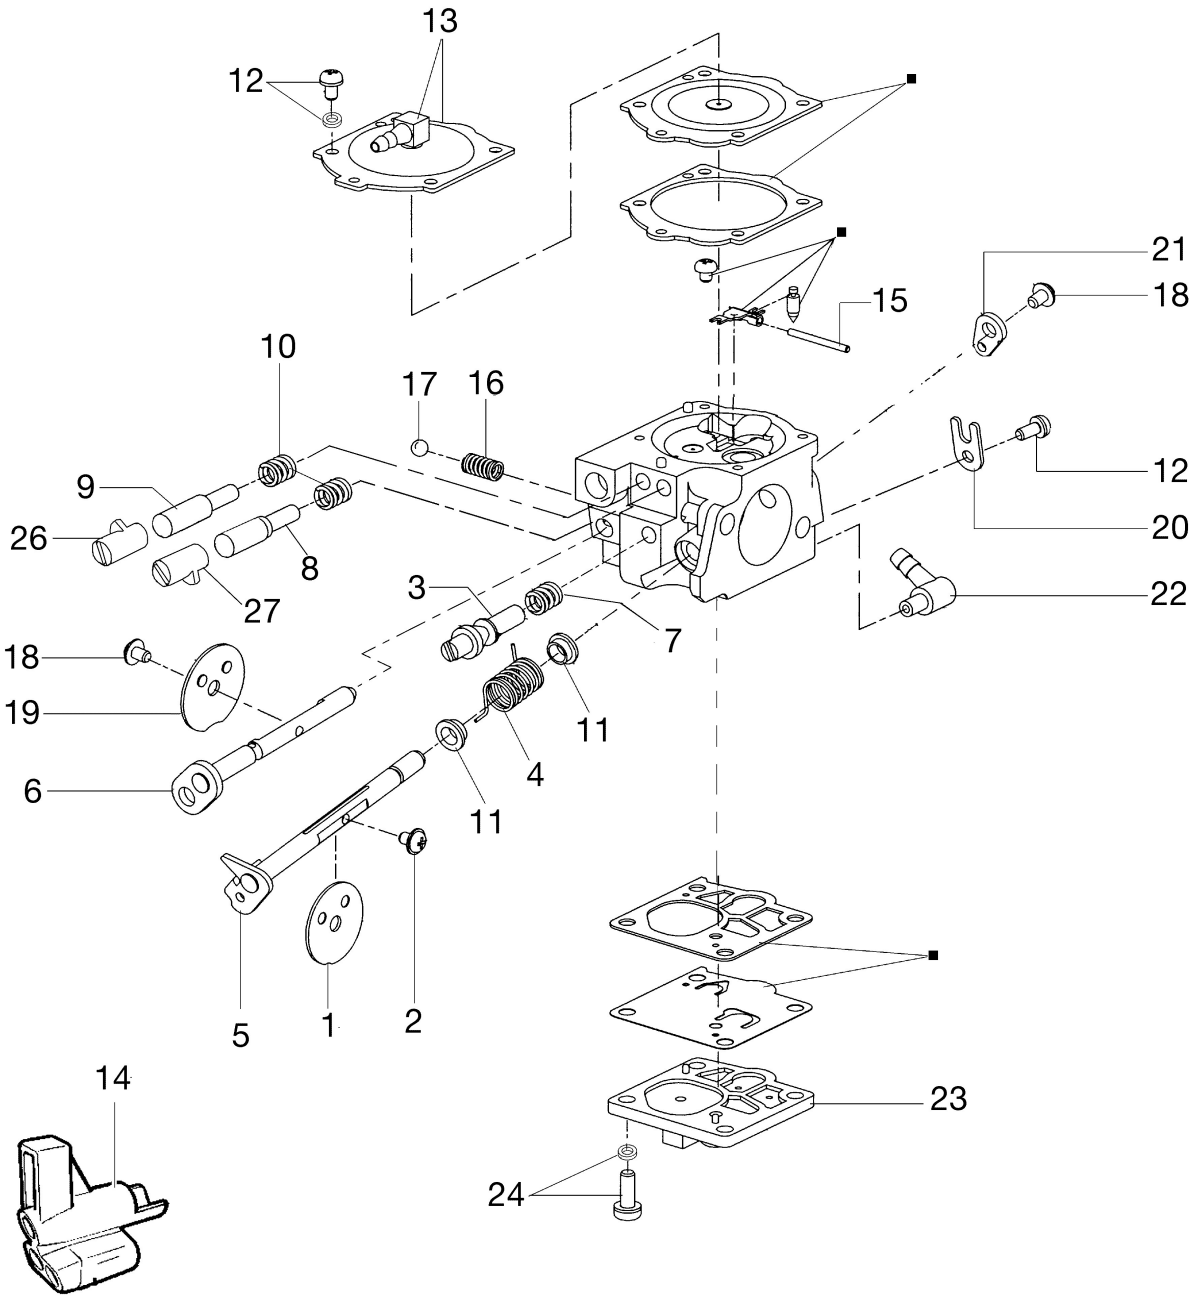

■ 25 Kit riparazione / Repair kit

Copyright EMAK S.P.A.

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	028400110	Shutter				
2	1	097000162	Screw				
3	1	097000162	Screw				
4	1	097000161	Spring				
5	1	097000154	Shaft				
6	1	097000155	Shaft				
7	1	2318763	Spring				
8	1	2318772	Screw L				
9	1	2318773	Screw H				
10	1	097000223	Spring				
11	2	097000224	Bushing				
12	5	035000162	Screw				
13	1	097000156	Cover				
14	1	097000323A	Screw guide				
15	1	035000169	Spindle				
16	1	035000164	Spring				
17	1	006000325	Ball				
18	1	50010141	Screw				
19	1	035000151	Shutter				
20	1	035000149	Plate				
21	1	097000160	Lever				
22	1	003300036	Fittings				
23	1	097000157	Cover				
24	4	035000161	Screw				
25	1	2318672	Repair kit				
26	1	2318695	Cap				
27	1	2318694	Cap				

Copyright EMAK S.P.A.