

User's Manual for HCA8C Series Programmable Controller

This manual gives a detailed introduction of HCA8C specification. This manual should be read and understood before attempting to install or use the unit.

1. Product overview

1.1 Basic functions

[Up to 256 input/output points]

Maximum number of input/output points (including I/O points of extension blocks and the main unit) is 256 points, up to max. 384 points when HC-LINK is used.

[Powered extension units/blocks that can be connected]

HCA8C Series input/output extension blocks can be connected. Up to 7 HCA8C Series special function units/blocks can be connected.

[Program memory]

The PLC has a 64K-step RAM memory.

[Operation instructions]

Various instructions, such as floating-point and character string processing instructions and scaling instructions, are provided.

[Built-in RUN/STOP switch]

The PLC can be started and stopped with the built-in switch. RUN and STOP commands can be given to the PLC through a general-purpose input terminal or peripheral device.

[Writing during RUN]

The programming software for personal computer enables you to modify the program while the PLC is running.

[Built-in clock function]

The PLC has a clock function to control the time.

[Programming tool]

Use a version of HCP-WORKS applicable to HCA8C.

[Remote debugging of program]

Programming software enables you to remotely transfer the program and monitor the PLC operation through a modem connected to the RS-232C expansion board or RS-232C communication special adapter.

1.2 Input/output high-speed processing function of main unit

[High-speed counter function]

- 1-phase 100 kHz x 6 points + 10 kHz x 2 points
- 2-phase 50 kHz x 2 points

[Pulse catch function]

Signals with short ON width or OFF width can be captured without a complicated program.

Input terminal	Signal ON/OFF width
X000~X005	5μs
X006, X007	50μs

[Input interruption function (with delay function)]

Interruption routines can be processed preferentially by external signals with a minimum ON or OFF width of 5 μs (X0 to X5).

[Pulse output function]

Pulses of up to 100kHz can be output simultaneously (Y000-Y003). Program can be easily created using various instructions.

Instruction	Description
DSZR	Mechanical zero return instruction with DOG search function
ABS	Instruction to read the current value from a servo amplifier with absolute position (ABS) detecting function
DRV1	Positioning (relative positioning) to specify the movement from the current position
DRVA	Positioning (absolute positioning) to specify the target position based on an absolute value 0
DPLSV	Instruction to change the pulse train output frequency
DVIT	Positioning for fixed-feed interruption drive

1.3 Communication and network functions

An expansion board, special adapter or special function block for each communication function can be connected.

[Kinds of communication functions]


- ◆ Programming communication through RS485C, Rs422
- ◆ Parallel link
- ◆ Computer link
- ◆ No-protocol communication through RS-232C/ Rs485
- ◆ Inverter communication

1.4 Analog functions

[Types of analog functions]

- ◆ Voltage/current input
- ◆ Voltage/current output
- ◆ Temperature sensor input (thermocouple, Pt100, Pt1000)
- ◆ Temperature control

1.5 Interpretation of model names (Main unit, I/O extension blocks)

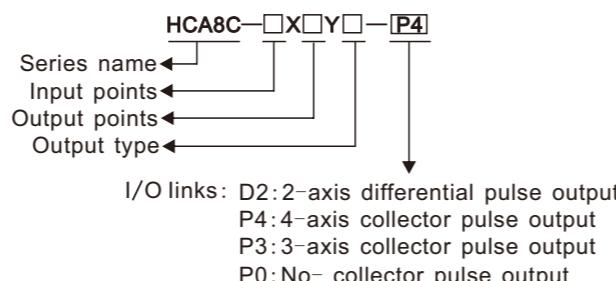

2. List of products

2.1 Main unit

Model Name	Input		Output		Connection type	Drive power supply	5V DC power supply capacity (mA)
	Points	Type	Points	Type			
HCA8C-8X8YT-P4	8	24VDC	8	Transistor	Terminal block	24VDC	350
HCA8C-8X8YR	8	24VDC	8	Relay	Terminal block	24VDC	350
HCA8C-16X16YT-P4	16	24VDC	16	Transistor	Connector	24VDC	350
HCA8C-8X8YT-D2	8	24VDC	8	6-channel transistor / 2-channel differential	Terminal block	24VDC	

2.2. I/O extension blocks

Model Name	Input		Output		Connection type	I/O occupied points	5V DC power supply capacity
	Points	Type	Points	Type			
HCA8C-4EX4EYR	4	24VDC	4	Relay	Terminal block	8	40
HCA8C-4EX4EYT	4	24VDC	4	Transistor	Terminal block	8	40
HCA8C-8EX	8	24VDC	--	--	Terminal block	8	25
HCA8C-8EYR	--	--	8	Relay	Terminal block	8	30
HCA8C-8EYT	--	--	8	Transistor	Terminal block	8	30
HCA8C-8EX8EYR	8	24VDC	8	Relay	Terminal block	8	60
HCA8C-8EX8EYT	8	24VDC	8	Transistor	Terminal block	8	60
HCA8C-16EX	16	24VDC	8	--	Terminal block	16	30
HCA8C-16EYR	--	--	16	Relay	Terminal block	16	50
HCA8C-16EYT	--	--	16	Transistor	Terminal block	16	50
HCA8C-16EX-C	16	24VDC	--	--	Connector	--	30
HCA8C-16EXT-C	--	--	16	Transistor	Connector	16	50


2.3 Terminal layout

Main unit


X	Y	X	Y	X	Y	X	Y
X0	Y0	X0	Y0+	X0	X10	X0	X10
X1	Y1	X1	Y0-	X1	X11	X1	X11
X2	Y2	X2	Y1+	X2	X12	X2	X12
X3	Y3	X3	Y1-	X3	X13	X3	X13
X4	COM1	X4	Y2	X4	X14	X4	X14
X5		X5	Y3	X5	X15	X5	X15
X6		X6	Y4	X6	X16	X6	X16
X7		X7	Y5	X7	X17	X7	X17
+24V		+24V		0V	+24V	S/S	+24V
0V		0V					
S/S	COM2	COM					

HCA8C-8X8Y-D2
(Y2-Y6 share a COM port)

Power supply terminal

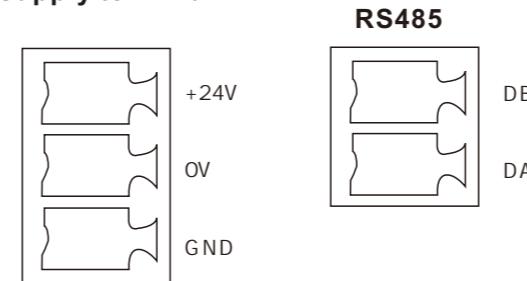

2.4 Part names

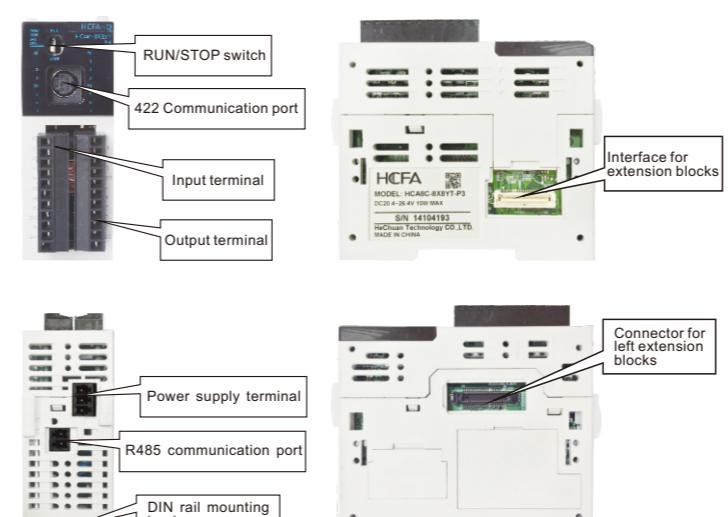

3. Generic specification and safety precautions

3.1 Generic specification

Items	Specification				
	Ambient temperature	Frequency (Hz)	Acceleration (m/s2)	Half amplitude (mm)	Sweep Count for X, Y, Z: 10
Vibration resistance	When installed on DIN rail	10 to 57 57 to 150	-- 4.9	0.035 --	30



When installed directly	--	0.075	times (80 min. in each direction)
Shock resistance	(147m/s2 Acceleration, Action time: 11ms, 3 times by half-sine pulse in each direction X, Y, and Z)	9.8	--
Noise resistance	500V AC for one minute		
Dielectric withstand voltage	By noise simulator at noise voltage of 1,000Vp-p, noise width of 1μs, rise time of 1ns and period of 30 to 100Hz		
Insulation resistance	5MΩ or more by 500V DC megger		
Grounding	Class D grounding (grounding resistance: 100Ω or less) <Common grounding with a heavy electrical system is not allowed.>		
Working atmosphere	Free from corrosive or flammable gas and excessive conductive dusts		
Working altitude	<2000m		

3.2 Safety precautions

Design Precautions

- Make sure to have the following safety circuits outside of the PLC to ensure safe system operation even during external power supply problems or PLC failure.
 - 1) Most importantly, have the following: an emergency stop circuit, a protection circuit, an interlock circuit for opposite movements (such as normal vs. reverse rotation), and an interlock

3.3 24V DC input specification

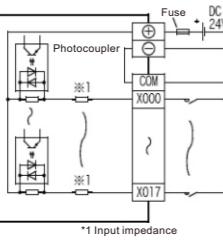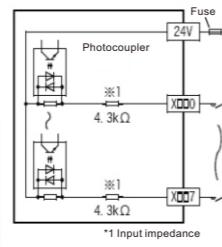Items	24V DC input specification	
	Main unit/ HCA8C input extension blocks	HCA8C input extension blocks
Input circuit configuration		
Input signal voltage	24V DC +20% -15% Ripple Voltage (p-p) 5% or less	
Input impedance	Main unit X000~X005 3.9kΩ X006~X007 3.3kΩ X010~X017 4.3kΩ	4.3kΩ
HCA8C extension blocks	4.3kΩ	
Input signal current	Main unit X000~X005 6mA/24V DC X006~X007 7mA/24V DC X010~X017 5mA/24V DC	5mA/24V DC
HCA8C extension blocks	5mA/24V DC	
Input sensitivity current	Main unit X000~X005 3.5mA or more X006~X007 4.5mA or more X010~X017 3.5mA or more	3.5mA or more
HCA8C extension blocks	3.5mA or more	
ON	1.5mA or less	1.5mA or less
OFF		
Input response time	Approx. 10ms	Approx. 10ms
Input signal form	Sink input: No-voltage contact input/NPN open collector transistor Source input: No-voltage contact input/PNP open collector transistor	
Circuit insulation	Photocoupler insulation	
Input operation display	Main unit Turning on the input will light	HCA8C extension blocks the LED indicator lamp

3.3.1 Input terminals

There are two optional connection methods (sink input/ source input) between input terminals and S/S terminal.



Instructions for connecting input devices:

1) In the case of no-voltage contact:

The input current of this PLC is 5 to 7 mA/24V DC. Use input devices applicable to this minute current.

2) In the case of input device with built-in series diode:

When lead switches with a series LED are used, up to two switches can be connected in series.

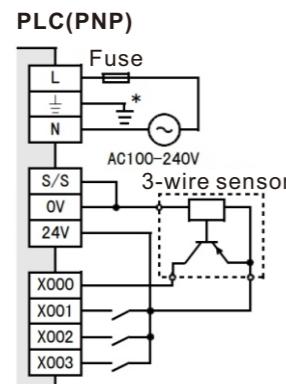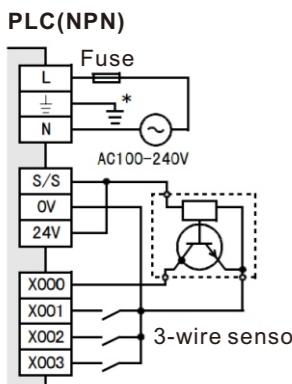

3.3.2 Input circuit

The primary and secondary circuits for input are insulated with a photocoupler, and the second circuit is provided with a C-R filter.

The C-R filter is designed to prevent malfunctions caused by chattering of the input contact and noise from the input line.

X000 to X017 have digital filters, and the filter time can be changed in increments of 1ms in the range from 0 to 60ms through applied instructions. When 0 is specified for the time, the input filter values are set as shown in the following table.

Input number	Input filter value when 0 is specified
X000 to X005	5 μs*1
X006, X007	50 μs
X010 to X017	200 μs

*1 When setting the input filter to 5μs or capturing pulses of a response frequency of 50 to 100kHz with a high-speed counter, wire the terminals as stated below.

- The wiring length should be 5m or less.
- Connect a bleeder resistance of 1.5kΩ(1W or more) to the input terminal, so that the sum of the load current of the open collector transistor output on the mating device and the input current of the main body is 20mA or more.

3.3.3 Input sensitivity


The Main units input current and input sensitivity are shown in the following table.

When DC diodes or resistors are provided at input contacts or when parallel resistors or leakage current are present at input contacts, perform wiring in accordance with this user's manual.

Items	X000 to X005	X006, X007	X010 to X017
Input voltage	24V DC +20% -15% Ripple Voltage (p-p) 5% or less		
Input current	6mA	7mA	5mA
Input sensitivity	ON 3.5mA or more OFF 1.5mA or less	4.5mA or more 1.5mA or less	3.5mA or more 1.5mA or less

3.4 Output specification

Transistor output specification

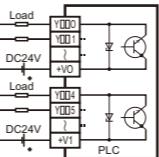
Items	Specification	
Output circuit configuration (PNP)		
External power supply	5 to 30V DC	
Main unit	Y000 to Y003 0.3A/1 point Y004 to Y017 0.1A/1 point	Make sure that the total load current of 16 resistance load points is 1.6A or less
HCA8C-16EYT, HCA8C-32EYT	0.1A/1 point	
HCA8C-16EYT-C	0.3A/1 point	Make sure that the total load current of 16 resistance load points is 1.6A or less
HCA8C-8EYT, HCA8C-16EYT, HCA8C-16EYR	0.5A/1 point	The total load current of resistance loads per common terminal should be the following value. 4points/common: 0.8A 8points/common: 1.6A
HCA8C-8EYTR	1A/1 point	Make sure that the total load current of 4 resistance load points is 2A or less.
Main unit	Y000 to Y003 7.2W/1 point (24V DC) Y004 to Y017 2.4W/1 point (24V DC)	Make sure that the total load of 16 inductive load points is 38.4W/24V DC or less.
HCA8C-16EYT, HCA8C-32EYT	2.4W/1 point (24V DC)	
HCA8C-16EYT-C	7.2W/1 point (24V DC)	
HCA8C-8EYT, HCA8C-16EYT, HCA8C-16EYR	12W/1 point (24V DC)	
HCA8C-8EYTR-H	24W/1 point (24V DC)	
Main unit	Y000 to Y003 0.9W/1 point (24V DC) Y004 to Y017 0.3W/1 point (24V DC)	Make sure that the total load of 16 lamp load points is 4.8W/24V DC or less.
HCA8C-16EYT, HCA8C-32EYT	0.3W/1 point (24V DC)	
HCA8C-16EYT-C	1W/1 point (24V DC)	
HCA8C-8EYT, HCA8C-16EYT, HCA8C-16EYR	1.5W/1 point (24V DC)	
HCA8C-8EYR	3W/1 point (24V DC)	

Open circuit leakage current	0.1mA or less/30V DC
ON voltage	1.5V
Response time	OFF Main unit Y000 to Y003 5μs or less/10mA or more (5 to 24V DC) Y004 to Y017 0.2ms or less/100mA (24V DC)
	ON Main unit Y000 to Y003 5μs or less/10mA or more (5 to 24V DC) Y004 to Y017 0.2ms or less/100mA (24V DC)
Circuit insulation	Photocoupler insulation
Output operation	Main unit Monitored by the display module
display	Extension blocks LED on panel lights when photocoupler is driven.

4 or 8 transistor output points are covered by one common terminal. For driving the load, use a smoothing power supply of 5 to 30V DC that can output current two or more times the rated current of the fuse connected to the load circuit.

The internal circuit of the PLC and the output transistor are insulated with a photocoupler. The common blocks are separated from one another. Operation indicator LEDs are built into the main unit and output extension blocks, and turn ON when photocouplers are actuated. The response time from when the PLC drives (or shuts down) the photocoupler until the transistor is turned on (or off) is 5 μs or less.

(1) Output terminals (PNP)
4, 8 or 16 transistor output points are covered by one common terminal. Two COM terminals connected each other inside the PLC are provided for sink outputs in the HCA8C-8X8YT main unit, transistor output type extension blocks for output. HCA8C. For external wiring, connect two COM terminals outside the PLC so that the load applied on each COM terminal becomes smaller.

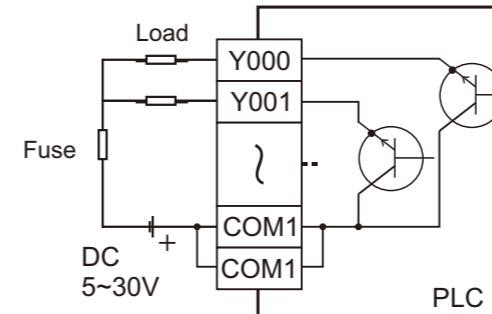

(6) Output current

The ON voltage of the output transistor is approx. 1.5V. When driving a semiconductor element, carefully check the input voltage characteristics of the applied element.


Model	Output current	Limitation
Main unit Y000 to Y003	0.3A/1 point*1	Make sure that the total load current of resistance loads per common terminal (16points/common) is 1.6A so that temperature rise is restrained
Y004 to Y017	0.1A/1 point	
HCA8C-16EYT, HCA8C-32EYT	0.1A/1 point	
HCA8C-16EYT-C	0.3A/1 point	Make sure that the total load current of 16 resistance load points is 1.6A or less.
HCA8C-8EYT, HCA8C-16EYT	0.5A/1 point	The total load current of resistance loads per common terminal should be the following value. 4points/common: 0.8A 8points/common: 1.6A
HCA8C-8EYTR-H	1A/1 point	Make sure that the total load current of 4 resistance load points is 2A or less.

*1. When using an instruction related to pulse train output or positioning, make sure to set the load current to 10 to 100mA (5 to 24V DC).

(7) Open circuit leakage current

0.1mA or less

■ Relay output specification

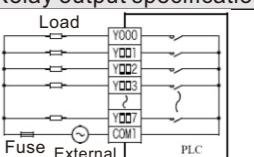
Items	Relay output specification	
Output circuit diagram		
External power supply	30V DC or less or 250V AC or less	
Resistance load	Resistance load HCA8C-16EYT 2A/1 point	Make sure that the total load current of 16 resistance load points is 8A or less.
Max. load	HCA8C-8EYTR-HCA8C-16EYR 2A/1 point	The total resistance load current per common should be as follows: 4 output points/common: 8A or less 8 output points/common: 8A or less
Inductive load	HCA8C-8EYTR-HCA8C-16EYR-HCA8C-16EYR 80VA	
Minimum load	5V DC, 2mA (reference values)	
Open circuit leakage current	--	
Response time	OFF-ON Approx. 10 ms ON-OFF Approx. 10 ms	
Circuit insulation	Mechanical insulation	
Display of output operation	Supplying power to the relay coil will light the LED indicator lamp on panel.	

(1) Product life of relay contacts

The standard life of contacts used for inductive loads, such as contactors and solenoid valves, is 500,000 operations at 20VA.

The following table shows the approximate life of a relay based on the results of an operation life test.
Test condition: 1 sec. ON/1 sec. OFF


	Load capacity	Contact life
20VA	0.2A/100V AC 0.1A/200V AC	3,000,000 times
35VA	0.35A/100V AC 0.17A/200V AC	1,000,000 times
80VA	0.8A/100V AC 0.4A/200V AC	200,000 times

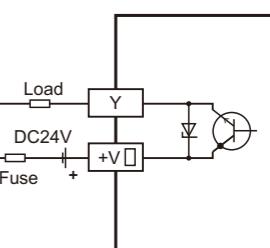

(2) Output terminals

One common terminal is used for 4 or 8 relay output points. The common terminal blocks can drive loads of different circuit voltage systems. Use an external power supply of 30V DC or less or 250VAC or less for loads.

When power is applied to the output relay coil, the LED is lit, and the output contact is turned on. The response time of the output relay from when the power is applied to the coil until the output contact is turned on and from when the coil is shut off until the output contact is turned off is approx. 10ms.

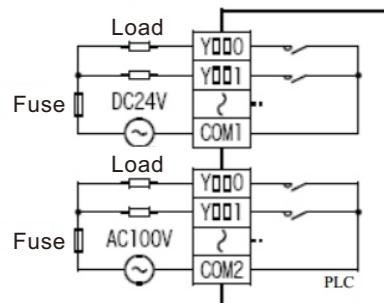**(3) External power supply**

Use an external power supply of 30V DC or less or 250VAC or less for loads.

(4) Circuit insulation

The PLC internal circuit and external load circuits are electrically insulated between the output relay coil and contact. The common terminal blocks are separated from one another.

(5) Display of operation

When power is applied to the output relay coil, the LED is lit, and the output contact is turned on.

(6) Response time

The response time of the output relay from when the power is applied to the coil until the output contact is turned on and from when the coil is shut off until the output contact is turned off is approx. 10ms.

(7) Output current

At a circuit voltage of 250V AC or less, a resistance load of 2A per point or an inductive load of 80VA or less (100V AC or 200V AC) or the lamp load of 100W or less (100V AC or 200V AC) can be driven.

When an inductive load is switched, connect a diode (for commutation) or a surge absorber in parallel with this load.

DC Circuit	Diode (for commutation)
AC Circuit	Surge absorber

(8) Open circuit leakage current

Because there is no leakage current even while output contacts are OFF, the neon ball, etc. can be driven directly.

4. Troubleshooting with LEDs

When trouble occurs, check the LEDs on the PLC to identify the problem with the PLC.

4.1 POW LED [on/flashing/off]

State of LED	State of PLC	Remedies
On	Power of the specified voltage is being correctly supplied to the power supply terminal.	The power supply is normal.
Flashing	One of the following problems may have occurred. ■ Power of the specified voltage and current is not being supplied to the power supply terminal. ■ External wiring is incorrect. ■ Internal error of PLC	■ Check the supply voltage. ■ After disconnecting the cables other than the power cable, reapply power to the PLC, and check for changes in the state. If no improvement is obtained, consult your local HCFA distributor.
Off	One of the following problems may have occurred. ■ The power supply is off. ■ External wiring is incorrect. ■ Power of the specified voltage is	■ If the power is not off, check the power supply and the power supply route. ■ If power is being supplied correctly, consult your local HCFA distributor.

4.4 RUN LED

When the RUN LED is on, Data link is being executed; When off, Data link is stopped.

5. RS-485 communication**1> Wiring**

HCFA new product, HCA8C has built-in RS-485 on one channel (half-duplex, two-pair wiring).

2> Non-Protocol Communication

Non-programming Communication function contains N:N network, Parallel Link, Computer Link, Non-Protocol Communication (RS, RS2 instruction) and MODBUS master-slave protocol.

not being supplied to the power supply terminal. ■ The power cable is broken.	■ After disconnecting the cables other than the power cable, reapply power to the PLC, and check for changes in the state. If no improvement is obtained, consult your local HCFA distributor.
--	--

4.2 BAT LED [on/off]

State of LED	State of PLC	Remedies
On	The battery voltage is low.	Immediately replace the battery.
Off	The battery voltage is higher than the value set with D8006.	Normal

4.3 ERR LED [on/flashing/off]

State of LED	State of PLC	Remedies
On	A watchdog timer error may have occurred, or the hardware of the PLC may be damaged.	1) Stop the PLC, and re-apply power. If ERR LED goes off, a watchdog timer error may have occurred. Take any of the following measures. - Review the program The maximum value (D8012) of the scan time should not exceed the setting (D8000) of the watchdog timer. - Check that the input used for input interruption or pulse catch is not being abnormally turned on and off in one scan. - Check that the frequency of the pulse (duty of 50%) input to the high-speed counter does not exceed the specified range. - Add the WDT instructions. Add some WDT instructions to the program, and reset the watchdog timer several times in one scan. - Change the setting of the watchdog timer. Change the watchdog timer setting (D8000) in the program so that the setting is larger than the maximum value of the scan time (D8012). 2) Remove the PLC and supply power to it from another power supply on a desk. If the ERR LED goes off, noise may have affected the PLC. Take the following measures. - Check the ground wiring, and reexamine the wiring route and installation location. - Fit a noise filter onto the power supply line. 3) If the ERR LED does not go off even after the measures stated in (1) and (2) are taken, consult your local HCFA distributor.
flashing	One of the following errors has occurred in the PLC. ■ Parameter error ■ Syntax error ■ Ladder error	Perform PLC diagnosis and program check with the programming tool. For the remedies, refer to Section "Judgment by Error Codes and Representation of Error Codes".
Off	No errors that stop the PLC have occurred.	If the operations of the PLC are abnormal, perform PLC diagnosis and program check with the programming tool. An I/O error, Comms. error or Runtime error may have occurred.

Make sure if the devices of communication format (D8120, D8400, D8420), N:N network (D8176~D8180) and parallel link (M8070, M8071) are used in the sequence control program.

If the devices are used, communication cannot be executed normally.

3> Communication setting in the sequence program

Set the communication format using a sequence program. The tables below show the setting details.

■ Communication format setting by RS instruction

D8120 (communication format)


This device can set the data length, parity, baud rate, etc.

The table below shows the contents of the communication format setting.

Bit No.	Name	Contents	
		0 (bit = OFF)	1 (bit = ON)
b0	Data length	7-bit	8-bit
b1 b2	Parity	b2, b1 (0, 0): Not provided (0, 1): Odd (1, 1): Even	
	b3	Stop bit	1-bit 2-bit
b4 b5 b6 b7	Baud rate (bps)	b7, b6, b5, b4 (0, 0, 1, 1): 300 (0, 1, 0, 0): 600 (0, 1, 0, 1): 1200 (0, 1, 1, 0): 2400	b7, b6, b5, b4 (0, 1, 1, 1): 4800 (1, 0, 0, 0): 9600 (1, 0, 0, 1): 19200 (0, 1, 0, 0): 38400*1
	b8	Header	Not provided
b9	Terminator	Not provided	Provided (D8124) Initial value: STX (02H)
b10 b11	Control line	Non-protocol	b11, b10 (0, 0): Not provided <RS-232C interface> (0, 1): Standard mode <RS-232C interface> (1, 0): Interlink mode <RS-232C interface> (1, 1): Modem mode <RS-232C interface, RS-485/RS-422 interface*3>
	Computer link	b11, b10 (0, 0): RS-485/RS-422 interface (1, 0): RS-232C interface	
b12		Not applicable	
b13*2	Sum check	Not added	Added
b14*2	Protocol	Not used	Used
b15*2	Control procedure	Format 1	Format 4

*1 Make sure to set as "0" when using non-protocol communication.

*2 When using the RS-485/RS-422 interface, only HCA8 and HCA8C PLCs are applicable.

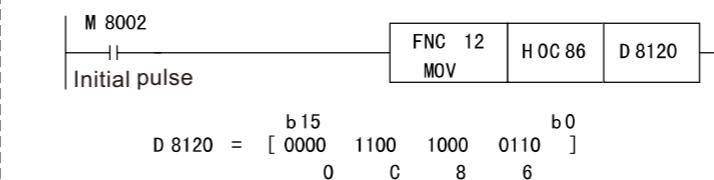Communication settings are shown below.

Data length	7-bit
Parity	Even
Stop bit	1-bit
Baud rate (bps)	9600bps
Protocol	Non-protocol
Header	Non-protocol
Terminator	Non-protocol
Control line	Modem mode

Manual number: DOC-HCFA-HCA8C

Manual version: V1.0

Date: Dec.1st, 2013

Website: <http://www.hechuanplc.net/>