MMC

How To perform: Date:

practical - 1:

1. Build target.
2. Debug.
3. memory 1 → Address (d: 50h)
4. put any 2 value: (ex: 4, 7)
5. Run.

Output: 04 07 01 1C

practical - 2:

1. Build target.
2. Debug.
3. peripheral → I/O port → port 1, 2.
4. write or perform 00 to 09 outputs.

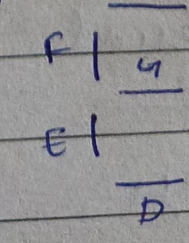

Date:

Practical - 3:

1. Build Target.
2. Debug
3. peripheral → port 1.
   → Timer 1.
4. Timer 1 → 1.16 bit Timer.
5. Analysis window → Logic Analyzer
6. Set up → New → p1.5 Enter ↵
7. Run.
8. Zoom Out → auto.

Practical - 4:

1. Build target.
2. Debug.
3. peripheral → I/O port → port1
   → Timer 1. → 1.16 bit.
4. Analysis window → Logic Analyzer → Set up → New(p1.2) Enter
   → ~~auto~~ Run → auto.

Date:

practical - 5:

1. Build target
2. Debug
3. peripheral :
   (i) I/O port → 1, 2, 3
   (ii) Timer 0.
4. Timer 0 : (After Run)
   ✓ TR0.
   TH0 — 0XFF
5. parallel port 3:

click here and the value of TCON will change from 0x18 to 0x10.

Date:

practical - 6 :

1. Build Target.
2. Debug.
3. peripheral → I/O port 1 ; 3
   → Timer 1.
4. Run.
5. TH1 : 0XFF and TL1 : 0XFA
6. Go in port 3 from 0 to 5th place.

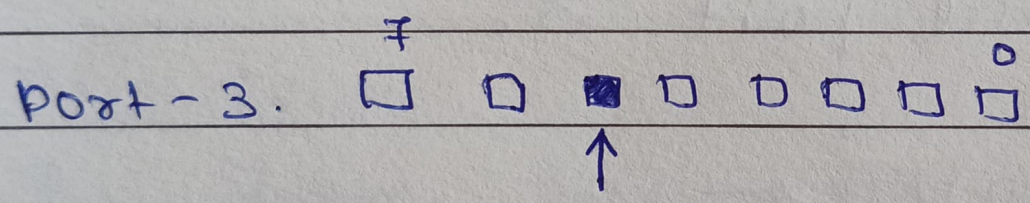

Click here and the value of TL1 will be changing on every click from FA, FB, FC, FD, FE, FF

Date:

practical - 7:

1. Build Target.
2. Debug.
3. Serial window → UART #1
4. Run.

practical - 8:

1. Build Target.
2. Debug.
3. peripheral → Timer 1. → 2. 8 bit.
4. Serial → SBUF 0x80.
5. Serial window → UART #1
6. Run.

Output : €

practical - 9: (Same as 7)

Build Target → Debug → Serial window → UART #1 → Run