



# Chapter 5

Large and Fast: Exploiting  
Memory Hierarchy

# Memory Technology

- Static RAM (SRAM)
  - 0.5ns – 2.5ns, \$2000 – \$5000 per GB
- Dynamic RAM (DRAM)
  - 50ns – 70ns, \$20 – \$75 per GB
- Magnetic disk
  - 5ms – 20ms, \$0.20 – \$2 per GB
- Ideal memory
  - Access time of SRAM
  - Capacity and cost/GB of disk



# Principle of Locality

- Programs access a small proportion of their address space at any time
- Temporal locality (in time)
  - Items accessed recently are likely to be accessed again soon
    - e.g., instructions in a loop, induction variables
- Spatial locality (in space)
  - Items near those accessed recently are likely to be accessed soon
    - E.g., sequential instruction access, array data




# Taking Advantage of Locality

- Memory hierarchy
- Store everything on disk
- Copy recently accessed (and nearby) items from disk to smaller DRAM memory
  - Main memory
- Copy more recently accessed (and nearby) items from DRAM to smaller SRAM memory
  - Cache memory attached to CPU

# Memory Hierarchy Levels

- Block (aka line): unit of copying
  - May be multiple words
- If accessed data is present in upper level
  - Hit: access satisfied by upper level
    - Hit ratio: hits/accesses
- If accessed data is absent
  - Miss: block copied from lower level
    - Time taken: miss penalty
    - Miss ratio: misses/accesses  
 $= 1 - \text{hit ratio}$
  - Then accessed data supplied from upper level

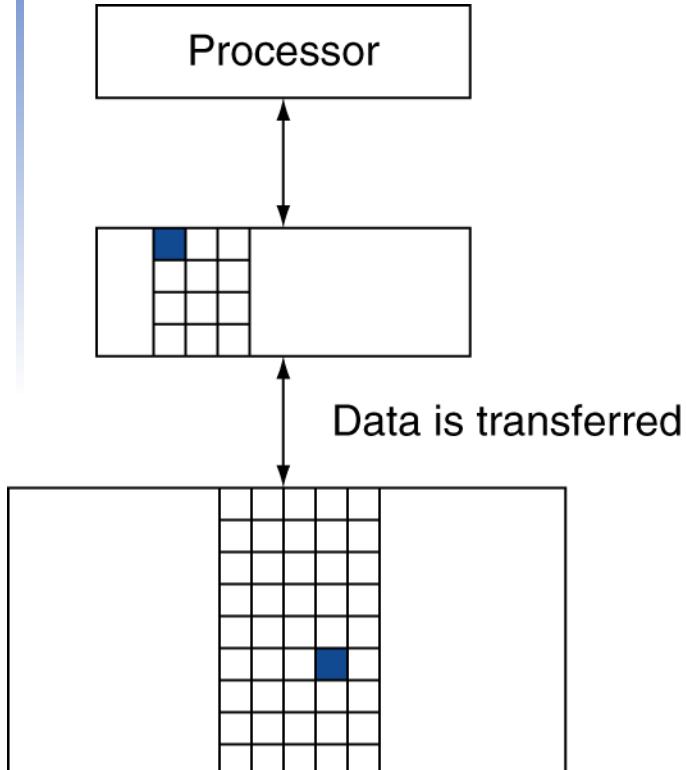


# The Memory Hierarchy: Terminology

- **Hit Rate:** the fraction of memory accesses found in a level of the memory hierarchy
  - **Hit Time:** Time to access that level which consists of  
Time to access the block + Time to determine hit/miss
- **Miss Rate:** the fraction of memory accesses *not* found in a level of the memory hierarchy  $\Rightarrow 1 - (\text{Hit Rate})$ 
  - **Miss Penalty:** Time to replace a block in that level with the corresponding block from a lower level which consists of  
Time to access the block in the lower level + Time to transmit that block to the level that experienced the miss + Time to insert the block in that level + Time to pass the block to the requestor


Hit Time  $\ll$  Miss Penalty

# Cache Memory

- Cache memory
  - The level of the memory hierarchy closest to the CPU
- Given accesses  $X_1, \dots, X_{n-1}, X_n$

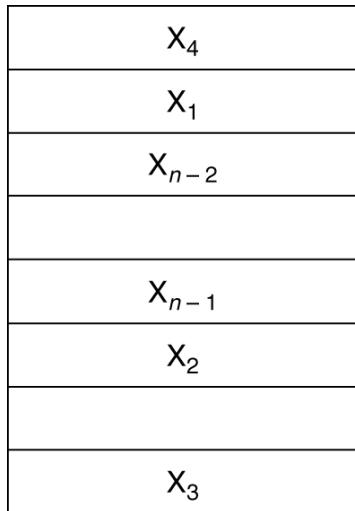

a. Before the reference to  $X_n$

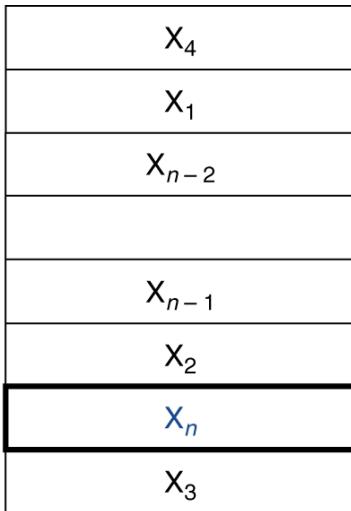


b. After the reference to  $X_n$

- How do we know if the data is present?
- Where do we look?

# Direct Mapped Cache

- Location determined by address
- Direct mapped: only one choice
  - (Block address) modulo (#Blocks in cache)

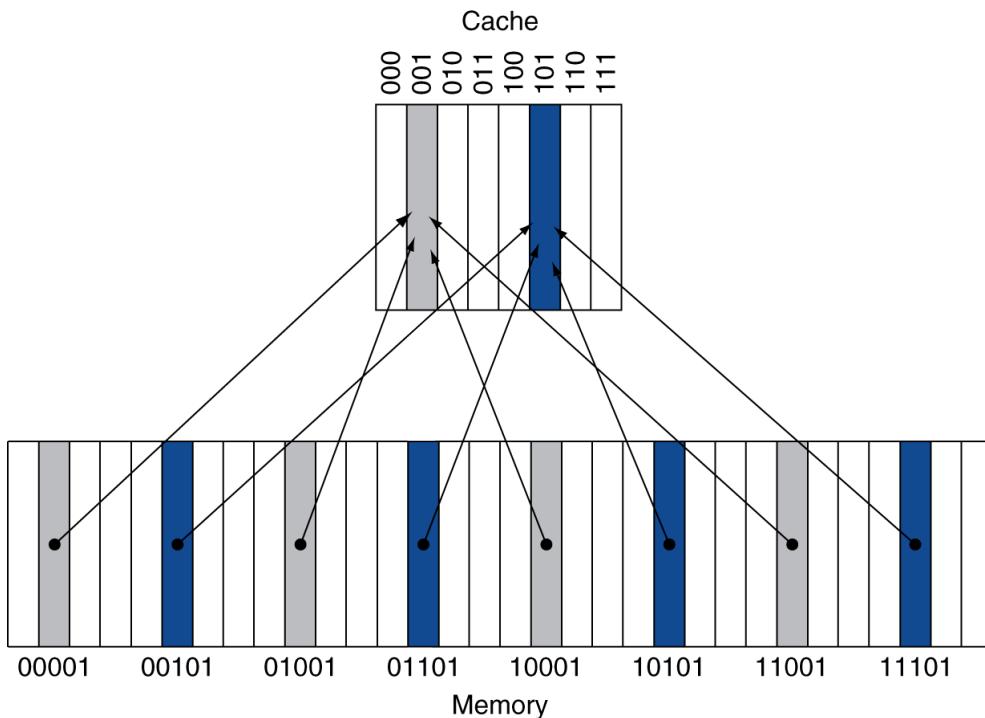

- #Blocks is a power of 2
- Use low-order address bits

# Tags and Valid Bits

- How do we know which particular block is stored in a cache location?
  - Store block address as well as the data
  - Actually, only need the high-order bits
  - Called the tag
- What if there is no data in a location?
  - Valid bit: 1 = present, 0 = not present
  - Initially 0

# Cache Example

- 8-blocks, 1 word/block, direct mapped
- Initial state

Index	V	Tag	Data
000	N		
001	N		
010	N		
011	N		
100	N		
101	N		
110	N		
111	N		

# Cache Example

Word addr	Binary addr	Hit/miss	Cache block
22	10 110	Miss	110

Index	V	Tag	Data
000	N		
001	N		
010	N		
011	N		
100	N		
101	N		
110	Y	10	Mem[10110]
111	N		



# Cache Example

Word addr	Binary addr	Hit/miss	Cache block
26	11 010	Miss	010

Index	V	Tag	Data
000	N		
001	N		
010	Y	11	Mem[11010]
011	N		
100	N		
101	N		
110	Y	10	Mem[10110]
111	N		



# Cache Example

Word addr	Binary addr	Hit/miss	Cache block
22	10 110	Hit	110
26	11 010	Hit	010

Index	V	Tag	Data
000	N		
001	N		
010	Y	11	Mem[11010]
011	N		
100	N		
101	N		
110	Y	10	Mem[10110]
111	N		

# Cache Example

Word addr	Binary addr	Hit/miss	Cache block
16	10 000	Miss	000
3	00 011	Miss	011
16	10 000	Hit	000


Index	V	Tag	Data
000	Y	10	Mem[10000]
001	N		
010	Y	11	Mem[11010]
011	Y	00	Mem[00011]
100	N		
101	N		
110	Y	10	Mem[10110]
111	N		

# Cache Example

Word addr	Binary addr	Hit/miss	Cache block
18	10 010	Miss	010

Index	V	Tag	Data
000	Y	10	Mem[10000]
001	N		
<b>010</b>	<b>Y</b>	<b>10</b>	<b>Mem[10010]</b>
011	Y	00	Mem[00011]
100	N		
101	N		
110	Y	10	Mem[10110]
111	N		

# Address Subdivision

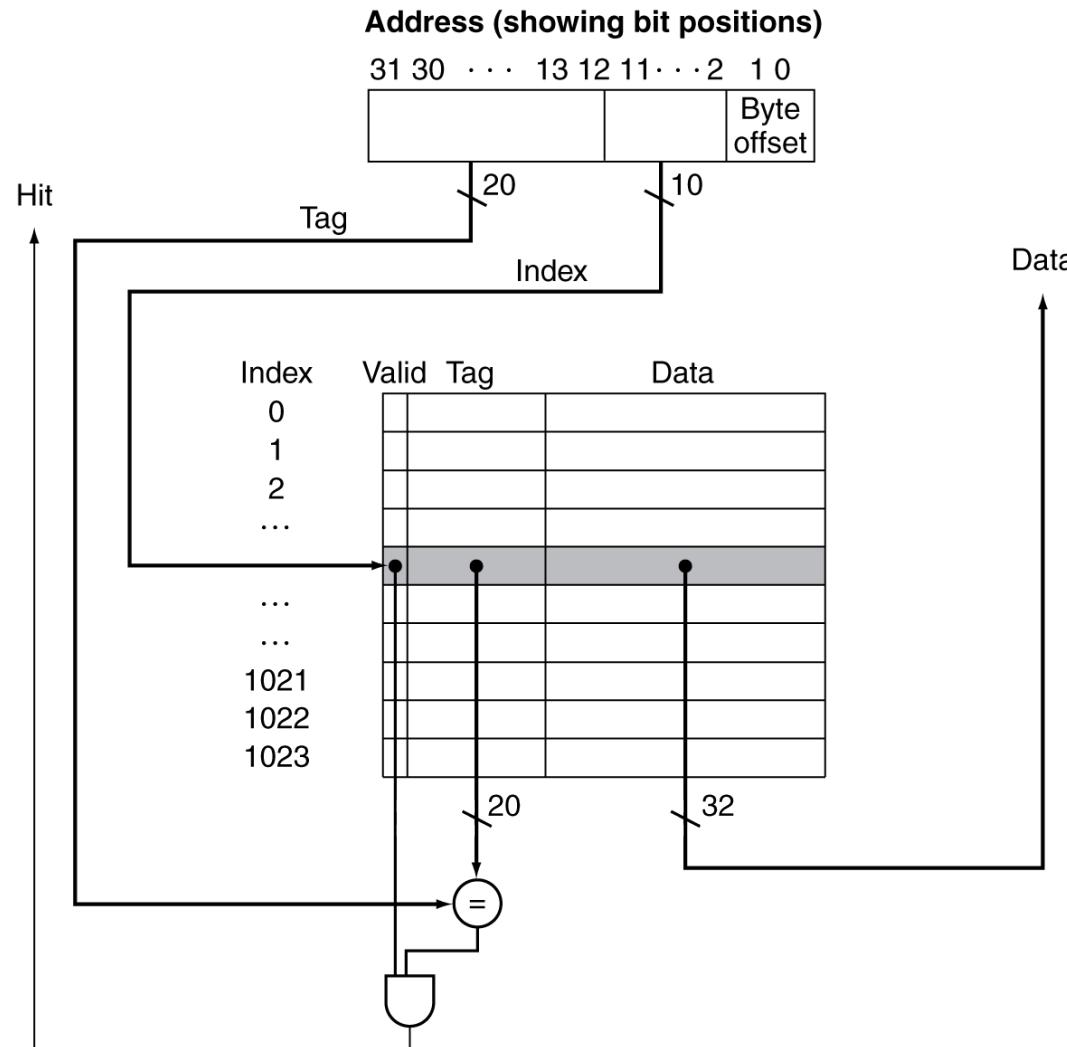

# Caching: A Simple First Example


## Cache

Index   Valid   Tag   Data

00			
01			
10			
11			

Q1: Is it there?

Compare the cache tag to the high order 2 memory address bits to tell if the memory block is in the cache

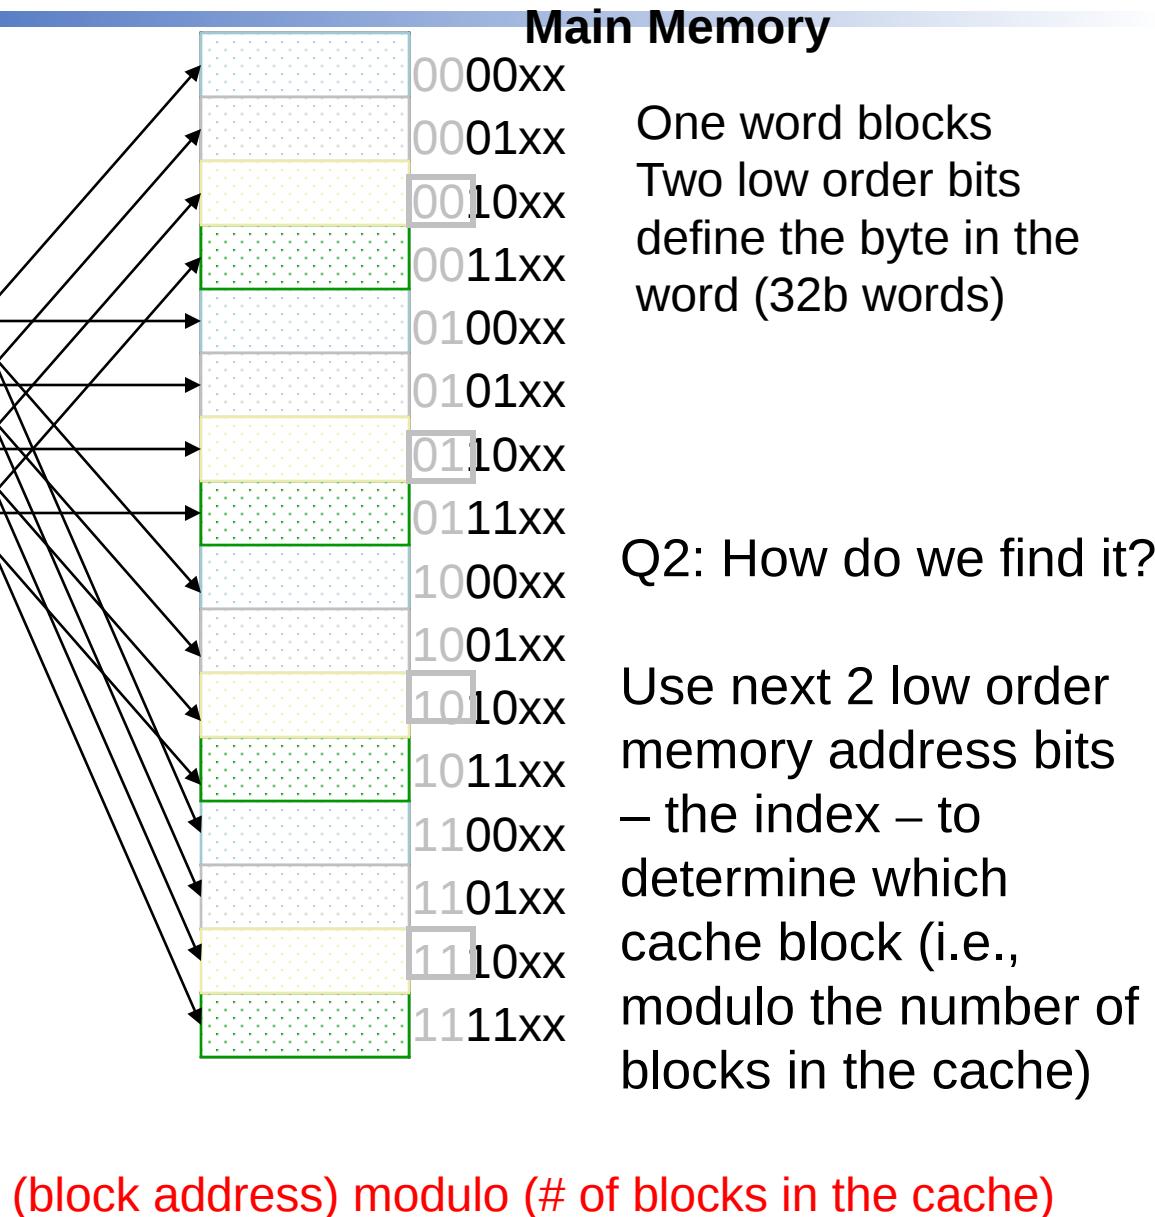

# Direct Mapped Cache

- Consider the main memory word reference string

Start with an empty cache - all blocks initially marked as not valid

0 1 2 3 4 3 4 15

0 miss

00	Mem(0)

1 miss

00	Mem(0)
00	Mem(1)

2 miss

00	Mem(0)
00	Mem(1)
00	Mem(2)

3 miss

00	Mem(0)
00	Mem(1)
00	Mem(2)
00	Mem(3)

4 miss

01	Mem(0)
00	Mem(1)
00	Mem(2)
00	Mem(3)

3 hit

01	Mem(4)
00	Mem(1)
00	Mem(2)
00	Mem(3)

4 hit

01	Mem(4)
00	Mem(1)
00	Mem(2)
00	Mem(3)


15 miss

01	Mem(4)
00	Mem(1)
00	Mem(2)
00	Mem(3)

- 8 requests, 6 misses

# MIPS Direct Mapped Cache Example

- One word blocks, cache size = 1K words (or 4KB)

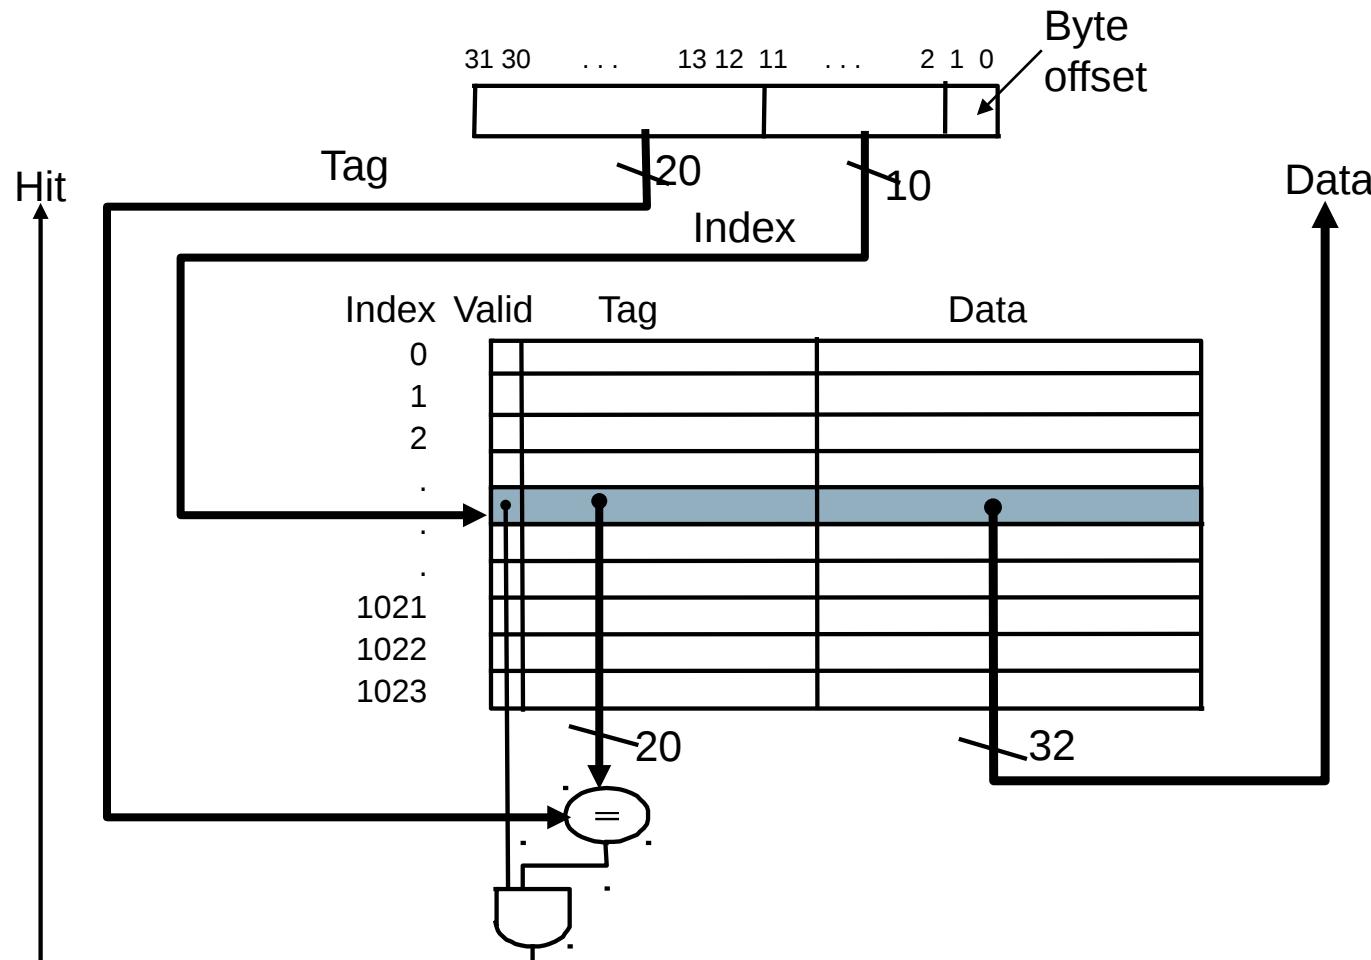


*What kind of locality are we taking advantage of?*



# Multiword Block Direct Mapped Cache

- Four words/block, cache size = 1K words

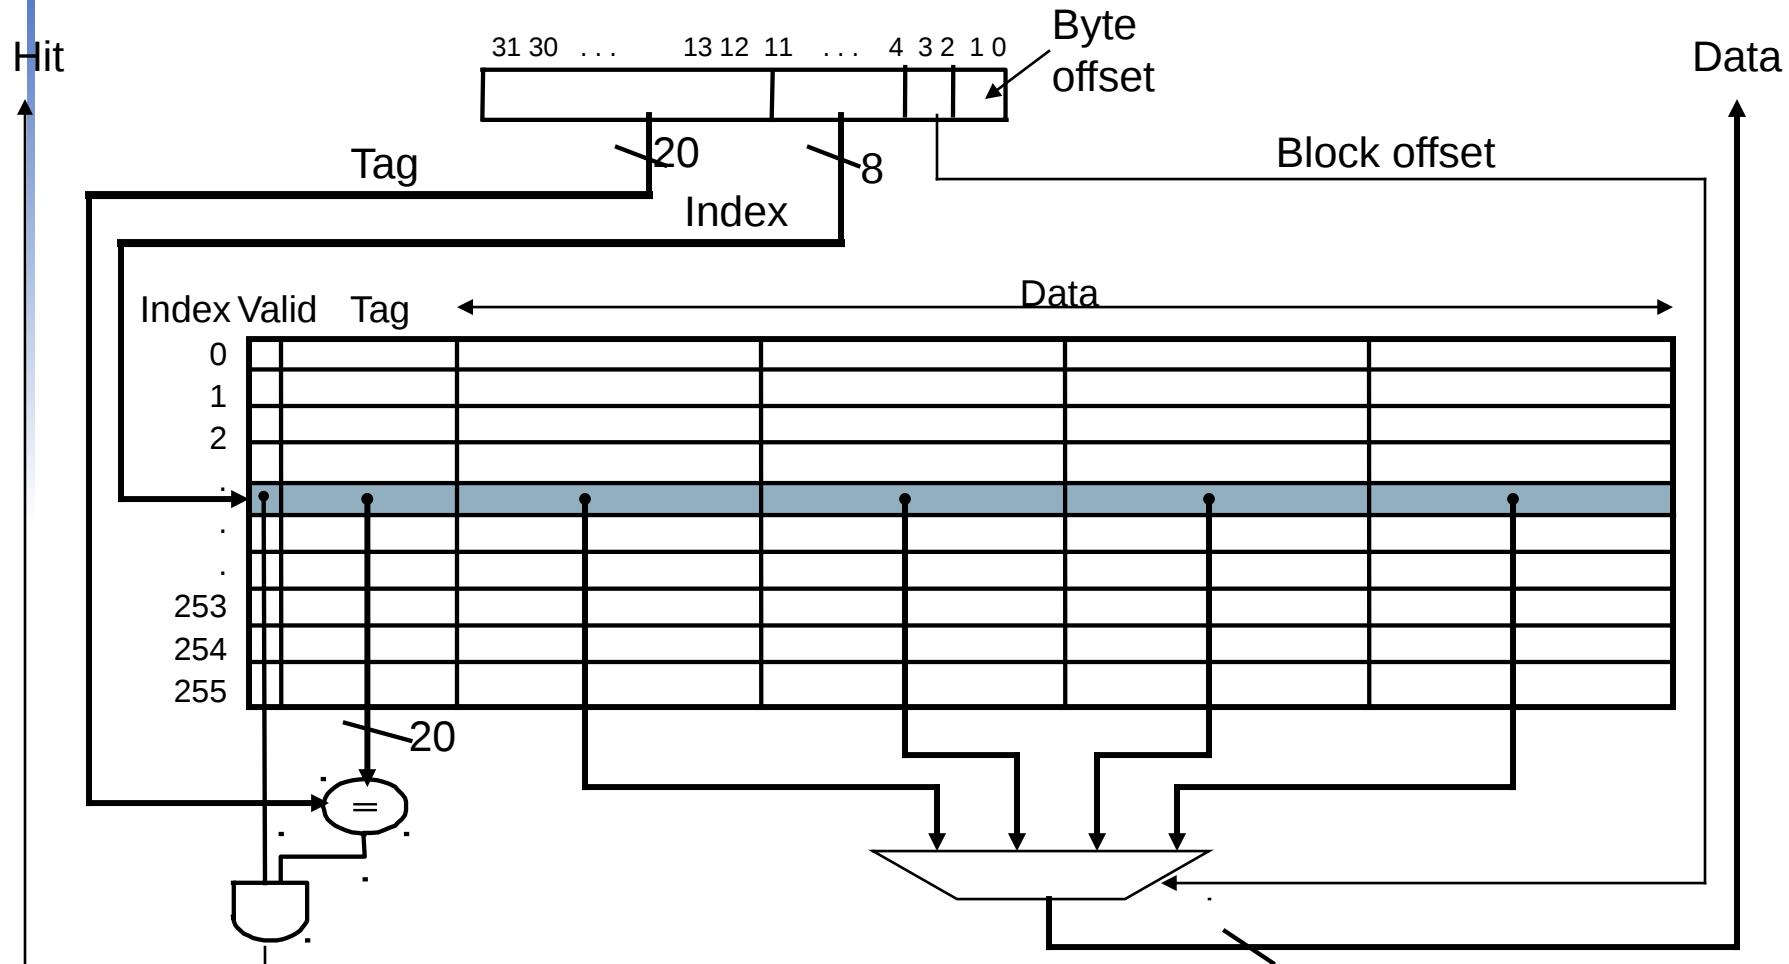

What kind of locality are we taking advantage of? <sup>32</sup>

# Taking Advantage of Spatial Locality

- Let cache block hold more than one word

Start with an empty cache - all blocks initially marked as not valid

0 1 2 3 4 3 4 15

**0 miss**

00	Mem(1)	Mem(0)

**1 hit**

00	Mem(1)	Mem(0)

**2 miss**

00	Mem(1)	Mem(0)
00	Mem(3)	Mem(2)

**3 hit**

00	Mem(1)	Mem(0)
00	Mem(3)	Mem(2)

**4 miss**

01	Mem(1)	Mem(0)
00	Mem(3)	Mem(2)

**3 hit**

01	Mem(5)	Mem(4)
00	Mem(3)	Mem(2)

**4 hit**

01	Mem(5)	Mem(4)
00	Mem(3)	Mem(2)

**15 miss**

11	Mem(5)	Mem(4)
00	Mem(3)	Mem(2)



8 requests, 4 misses



# Total # of bit needed for a cache

- function of the cache size and the address size.
- For the following
  - 32-bit byte addresses
  - A direct-mapped cache
  - The cache size is  $2^n$  blocks
    - n bits for the index
  - The block size is  $2^m$  words ( $2^{m+2}$  bytes)
    - m bits for the word within the block
  - tag size =  $32 - (n+m+2)$ .
  - Total # of bits =  $2^n * (\text{block size} + \text{tag size} + \text{valid field size})$

# Example

## Bits in a Cache

How many total bits are required for a direct-mapped cache with 16 KB of data and 4-word blocks, assuming a 32-bit address?

We know that 16 KB is 4K ( $2^{12}$ ) words. With a block size of 4 words ( $2^2$ ), there are 1024 ( $2^{10}$ ) blocks. Each block has  $4 \times 32$  or 128 bits of data plus a tag, which is  $32 - 10 - 2 - 2$  bits, plus a valid bit. Thus, the total cache size is


$$2^{10} \times (4 \times 32 + (32 - 10 - 2 - 2) + 1) = 2^{10} \times 147 = 147 \text{ Kbits}$$

or 18.4 KB for a 16 KB cache. For this cache, the total number of bits in the cache is about 1.15 times as many as needed just for the storage of the data.



# Example: Larger Block Size

- 64 blocks, 16 bytes/block
  - To what block number does address 1200 map?
- Block address =  $\lceil 1200/16 \rceil = 75$
- Block number =  $75 \text{ modulo } 64 = 11$

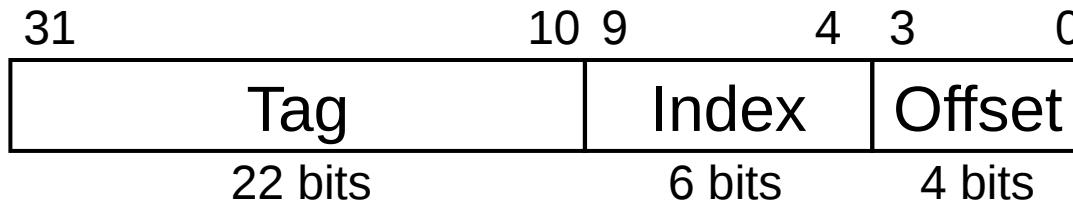

# Sources of Cache Misses

- **Compulsory** (cold start or process migration, first reference):
  - First access to a block, “cold” fact of life, not a whole lot you can do about it. If you are going to run “millions” of instruction, compulsory misses are insignificant
  - Solution: increase block size (increases miss penalty; very large blocks could increase miss rate)
- **Capacity**:
  - Cache cannot contain all blocks accessed by the program
  - Solution: increase cache size (may increase access time)
- **Conflict (collision)**:
  - Multiple memory locations mapped to the same cache location
  - Solution 1: increase cache size
  - Solution 2: increase associativity (stay tuned) (may increase access time)




# Block Size Considerations

- Larger blocks should reduce miss rate
  - Due to spatial locality
- But in a fixed-sized cache
  - Larger blocks  $\Rightarrow$  fewer of them
    - More competition  $\Rightarrow$  increased miss rate
  - Larger blocks  $\Rightarrow$  pollution
- Larger miss penalty
  - Can override benefit of reduced miss rate
  - Early restart
    - Resume exe. as soon as the requested word of the block is returned
  - critical-word-first



# Miss Rate Versus Block Size

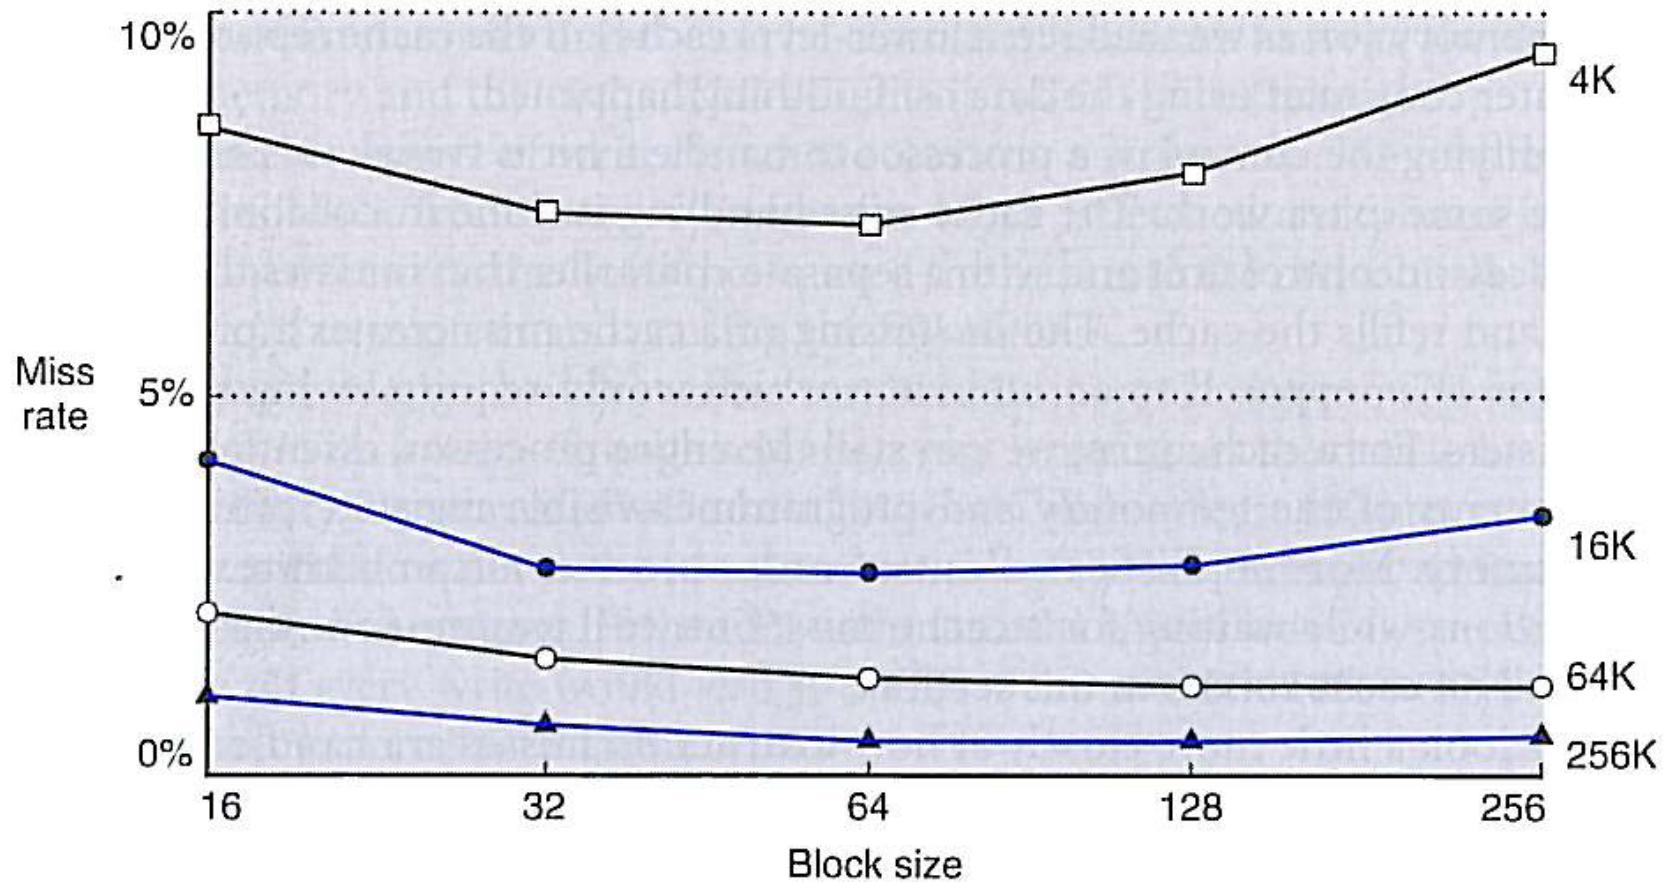

# Cache Misses

- On cache hit, CPU proceeds normally
- On cache miss
  - Stall the CPU pipeline
  - Fetch block from next level of hierarchy
  - Instruction cache miss
    - Restart instruction fetch
  - Data cache miss
    - Complete data access

# Write-Through

- On data-write hit, could just update the block in cache
  - But then cache and memory would be inconsistent
- Write through: **All writes go to main memory as well as cache**
  - Lots of traffic
  - Slows down writes
- But makes writes take longer
  - e.g., if base CPI = 1 without misses, 10% of instructions are stores, write to memory takes 100 cycles
    - Effective CPI =  $1 + 0.1 \times 100 = 11$

# Write-Through

- Solution: write buffer
  - Holds data waiting to be written to memory
  - CPU continues immediately
    - Only stalls on write if write buffer is already full

# Write-Back

- Alternative: On data-write hit (*block is already in cache but needs to be updated*) just update the block in cache
  - Keep track of whether each block is dirty
- When a dirty block is replaced
  - Write it back to memory
  - Can use a write buffer to allow replacing block to be read first

# Write Allocation


- What should happen on a write miss?
- Alternatives for write-through
  - Allocate on miss: fetch the block
  - Write around: don't fetch the block
    - Since programs often write a whole block before reading it (e.g., initialization)
- For write-back
  - Usually fetch the block

# Example: Intrinsity FastMATH

- Embedded MIPS processor
  - 12-stage pipeline
  - Instruction and data access on each cycle
- Split cache: separate I-cache and D-cache
  - Each 16KB: 256 blocks × 16 words/block
  - D-cache: write-through or write-back
- SPEC2000 miss rates
  - I-cache: 0.4%
  - D-cache: 11.4%
  - Weighted average: 3.2%



# Example: Intrinsity FastMATH

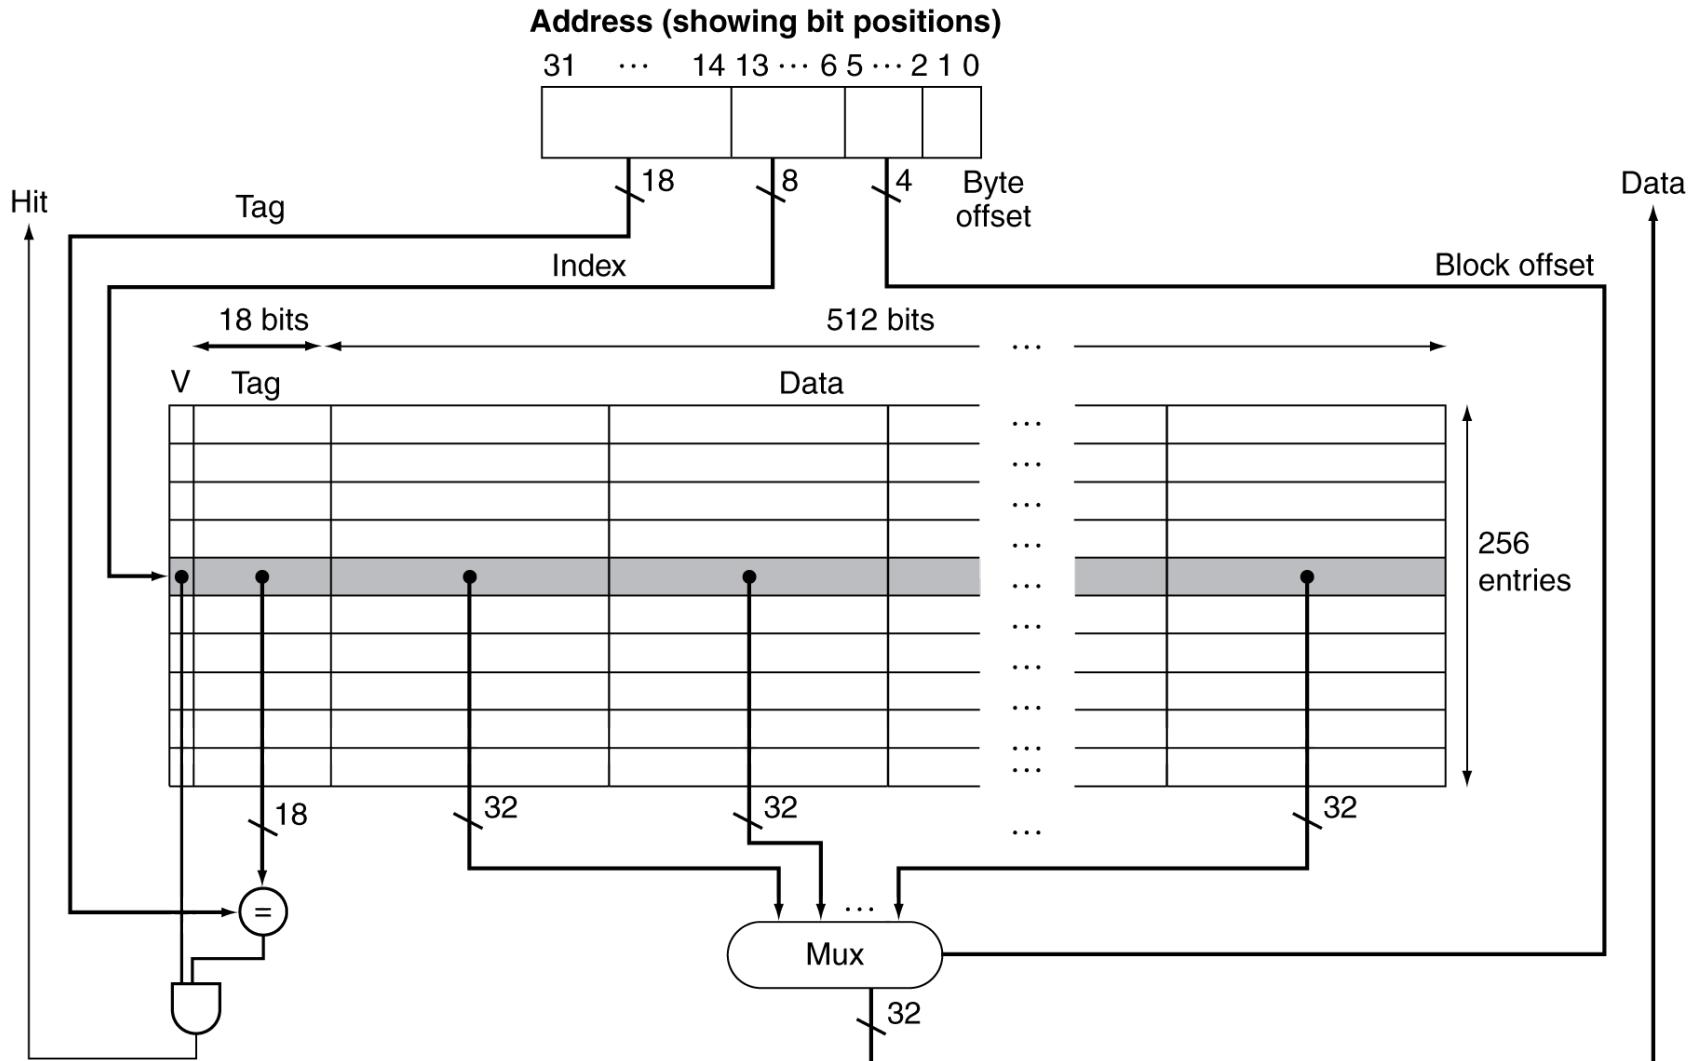


# Main Memory Supporting Caches


- Use DRAMs for main memory
  - Fixed width (e.g., 1 word)
  - Connected by fixed-width clocked bus
    - Bus clock is typically slower than CPU clock
- Example cache block read
  - 1 bus cycle for address transfer
  - 15 bus cycles per DRAM access
  - 1 bus cycle per data transfer
- For 4-word block, 1-word-wide DRAM
  - Miss penalty =  $1 + 4 \times 15 + 4 \times 1 = 65$  bus cycles
  - The number of bytes transferred per bus cycle for a single miss is
    - **Bandwidth = 16 bytes / 65 cycles = 0.25 B/cycle**




# Increasing Memory Bandwidth

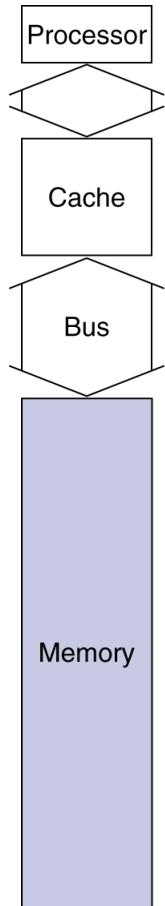

a. One-word-wide  
memory organization

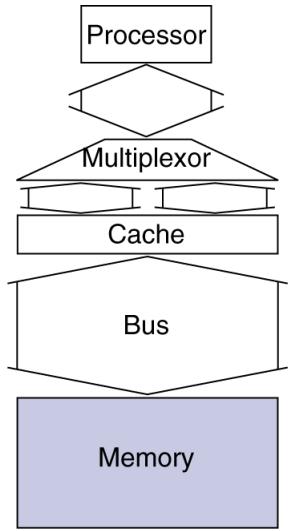

b. Wider memory organization

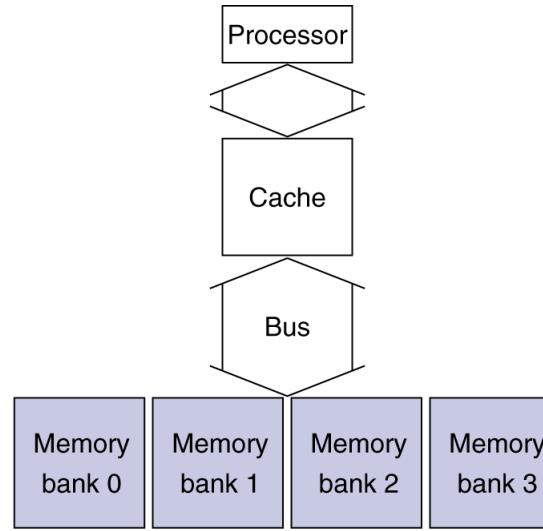

c. Interleaved memory organization

- **4-word wide memory**
  - Miss penalty =  $1 + 15 + 1 = 17$  bus cycles
  - Bandwidth =  $16 \text{ bytes} / 17 \text{ cycles} = 0.94 \text{ B/cycle}$
- **4-bank interleaved memory**
  - Miss penalty =  $1 + 15 + 4 \times 1 = 20$  bus cycles
  - Bandwidth =  $16 \text{ bytes} / 20 \text{ cycles} = 0.8 \text{ B/cycle}$




# Advanced DRAM Organization

- Bits in a DRAM are organized as a rectangular array
  - DRAM accesses an entire row
  - Burst mode: supply successive words from a row with reduced latency
- Double data rate (DDR) DRAM
  - Transfer on rising and falling clock edges
- Quad data rate (QDR) DRAM
  - Separate DDR inputs and outputs

# DRAM Generations

Year	Capacity	\$/GB
1980	64Kbit	\$1500000
1983	256Kbit	\$500000
1985	1Mbit	\$200000
1989	4Mbit	\$50000
1992	16Mbit	\$15000
1996	64Mbit	\$10000
1998	128Mbit	\$4000
2000	256Mbit	\$1000
2004	512Mbit	\$250
2007	1Gbit	\$50

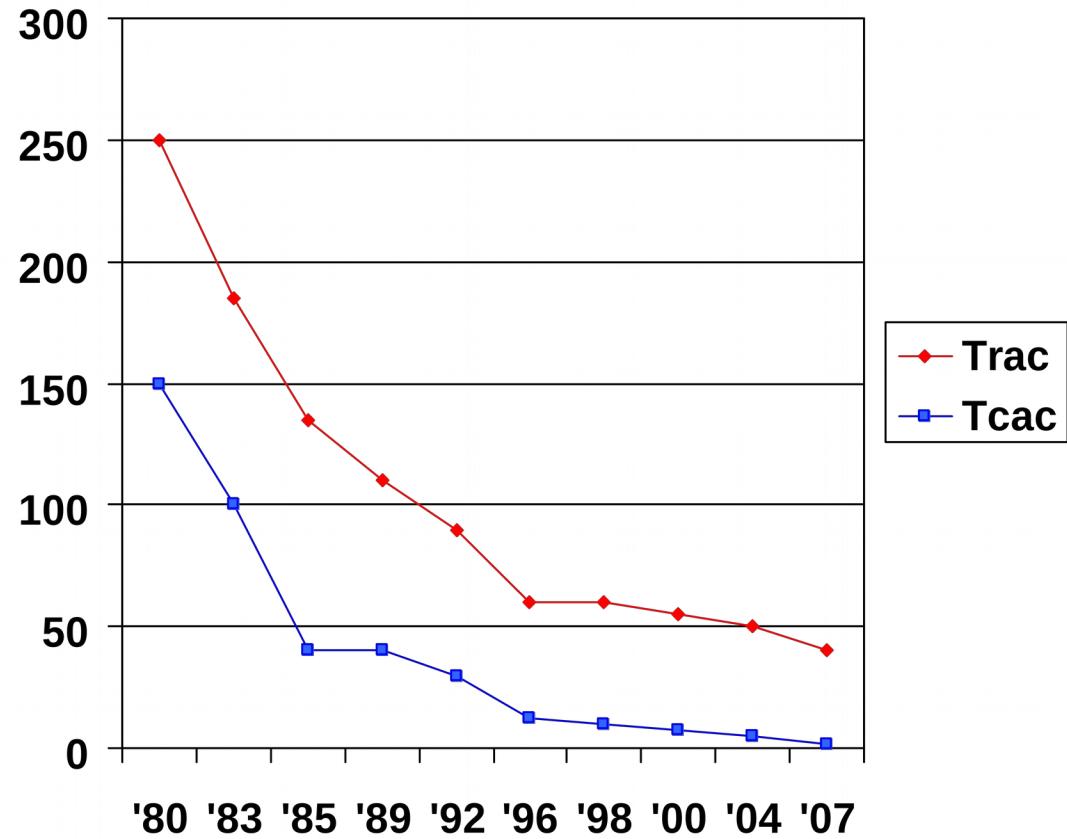

# Measuring Cache Performance

- Components of CPU time
  - Program execution cycles
    - Includes cache hit time
  - Memory stall cycles
    - Mainly from cache misses
- With simplifying assumptions:

Memory stall cycles

$$= \frac{\text{Memory accesses}}{\text{Program}} \times \text{Miss rate} \times \text{Miss penalty}$$

$$= \frac{\text{Instructions}}{\text{Program}} \times \frac{\text{Misses}}{\text{Instruction}} \times \text{Miss penalty}$$



# Cache Performance Example

- Given
  - I-cache miss rate = 2%
  - D-cache miss rate = 4%
  - Miss penalty = 100 cycles
  - Base CPI (ideal cache) = 2
  - Load & stores are 36% of instructions
- Miss cycles per instruction
  - I-cache:  $0.02 \times 100 = 2$
  - D-cache:  $0.36 \times 0.04 \times 100 = 1.44$
- Actual CPI =  $2 + 2 + 1.44 = 5.44$ 
  - Ideal CPU is  $5.44/2 = 2.72$  times faster



# Average Access Time

- Hit time is also important for performance
- Average memory access time (AMAT)
  - $AMAT = \text{Hit time} + \text{Miss rate} \times \text{Miss penalty}$
- Example
  - CPU with 1ns clock, hit time = 1 cycle, miss penalty = 20 cycles, I-cache miss rate = 5%
  - $AMAT = 1 + 0.05 \times 20 = 2\text{ns}$ 
    - 2 cycles per instruction

# Performance Summary

- When CPU performance increased
  - Miss penalty becomes more significant
- Decreasing base CPI
  - Greater proportion of time spent on memory stalls
- Increasing clock rate
  - Memory stalls account for more CPU cycles
- Can't neglect cache behavior when evaluating system performance


# Associative Caches

- Fully associative
  - Allow a given block to go in any cache entry
  - Requires all entries to be searched at once
  - Comparator per entry (expensive)
- $n$ -way set associative
  - Each set contains  $n$  entries
  - Block number determines which set
    - (Block number) modulo (#Sets in cache)
  - Search all entries in a given set at once
  - $n$  comparators (less expensive)



# Associative Cache Example


**Direct mapped**

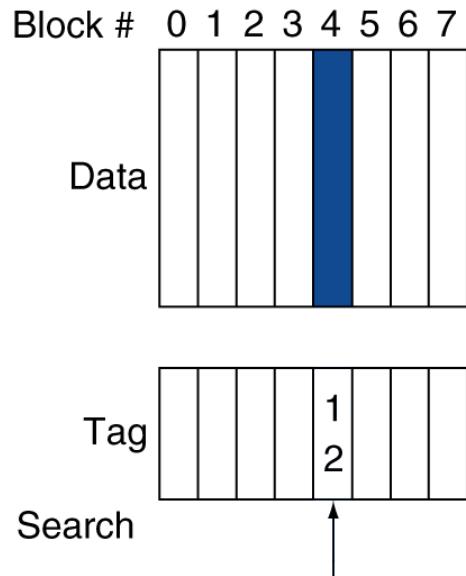

**Set associative**



**Fully associative**

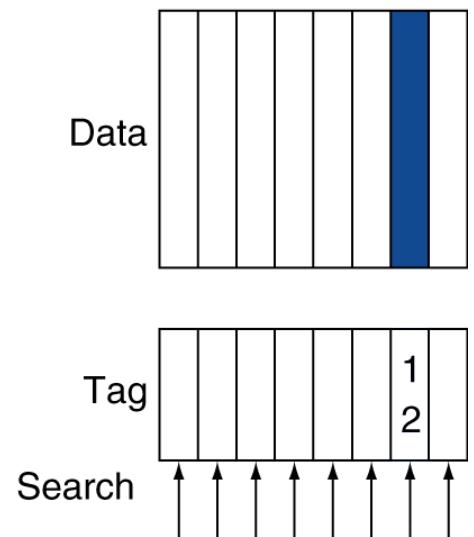

# Spectrum of Associativity

- For a cache with 8 entries

**One-way set associative**

(direct mapped)

Block	Tag	Data
0		
1		
2		
3		
4		
5		
6		
7		

**Two-way set associative**

Set	Tag	Data	Tag	Data
0				
1				
2				
3				

**Four-way set associative**

Set	Tag	Data	Tag	Data	Tag	Data	Tag	Data
0								
1								

**Eight-way set associative (fully associative)**

Tag	Data												

# Associativity Example

- Compare 4-block caches
  - Direct mapped, 2-way set associative, fully associative
  - Block access sequence: 0, 8, 0, 6, 8
- Direct mapped

Block address	Cache index	Hit/miss	Cache content after access			
			0	1	2	3
0	0	miss	Mem[0]			
8	0	miss	Mem[8]			
0	0	miss	Mem[0]			
6	2	miss	Mem[0]		Mem[6]	
8	0	miss	Mem[8]		Mem[6]	

# Associativity Example

## ■ 2-way set associative

Block address	Cache index	Hit/miss	Cache content after access	
			Set 0	Set 1
0	0	miss	Mem[0]	
8	0	miss	Mem[0]	Mem[8]
0	0	hit	Mem[0]	Mem[8]
6	0	miss	Mem[0]	Mem[6]
8	0	miss	Mem[8]	Mem[6]


## ■ Fully associative

Block address		Hit/miss	Cache content after access			
			Mem[0]	Mem[8]	Mem[8]	Mem[6]
0		miss	Mem[0]			
8		miss	Mem[0]	Mem[8]		
0		hit	Mem[0]	Mem[8]		
6		miss	Mem[0]	Mem[8]	Mem[8]	Mem[6]
8		hit	Mem[0]	Mem[8]	Mem[8]	Mem[6]

# How Much Associativity

- Increased associativity decreases miss rate
  - But with diminishing returns
- Simulation of a system with 64KB D-cache, 16-word blocks, SPEC2000
  - 1-way: 10.3%
  - 2-way: 8.6%
  - 4-way: 8.3%
  - 8-way: 8.1%

# Set Associative Cache Organization

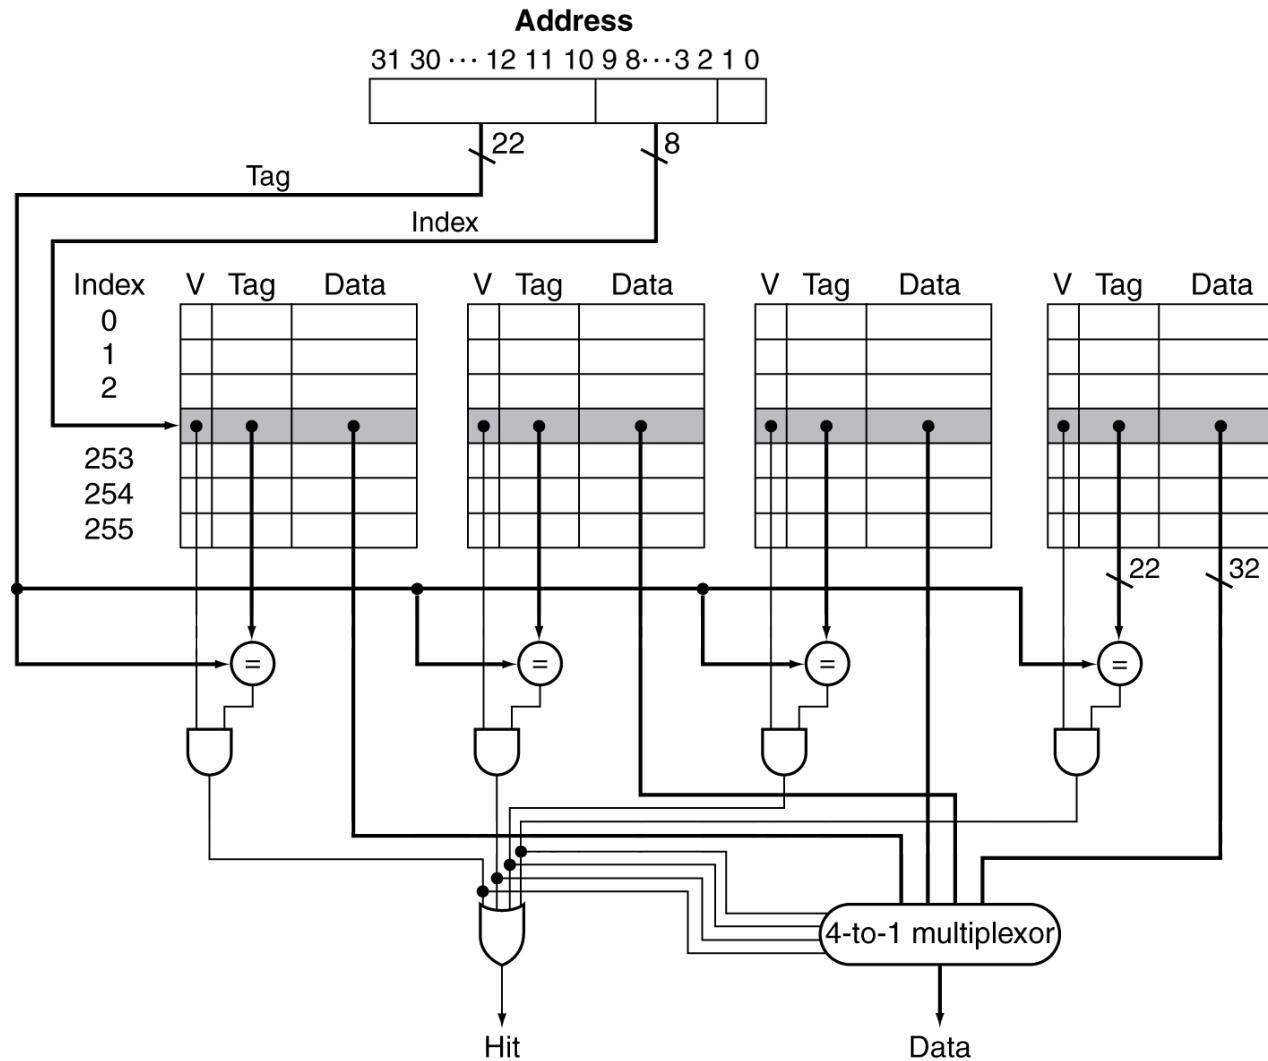

# Replacement Policy

- Direct mapped: no choice
- Set associative
  - Prefer non-valid entry, if there is one
  - Otherwise, choose among entries in the set
- Least-recently used (LRU)
  - Choose the one unused for the longest time
    - Simple for 2-way, manageable for 4-way, too hard beyond that
- Random
  - Gives approximately the same performance as LRU for high associativity

## Size of Tags versus Set Associativity

Increasing associativity requires more comparators and more tag bits per cache block. Assuming a cache of 4K blocks, a 4-word block size, and a 32-bit address, find the total number of sets and the total number of tag bits for caches that are direct mapped, two-way and four-way set associative, and fully associative.

Since there are 16 ( $= 2^4$ ) bytes per block, a 32-bit address yields  $32 - 4 = 28$  bits to be used for index and tag. The direct-mapped cache has the same number of sets as blocks, and hence 12 bits of index, since  $\log_2(4K) = 12$ ; hence, the total number is  $(28 - 12) \times 4K = 16 \times 4K = 64$  K tag bits.

Each degree of associativity decreases the number of sets by a factor of 2 and thus decreases the number of bits used to index the cache by 1 and increases the number of bits in the tag by 1. Thus, for a two-way set-associative cache, there are 2K sets, and the total number of tag bits is  $(28 - 11) \times 2 \times 2K = 34 \times 2K = 68$  Kbits. For a four-way set-associative cache, the total number of sets is 1K, and the total number is  $(28 - 10) \times 4 \times 1K = 72 \times 1K = 72$  K tag bits.

For a fully associative cache, there is only one set with 4K blocks, and the tag is 28 bits, leading to  $28 \times 4K \times 1 = 112$ K tag bits.



# Multilevel Caches

- Primary cache attached to CPU
  - Small, but fast
- Level-2 cache services misses from primary cache
  - Larger, slower, but still faster than main memory
- Main memory services L-2 cache misses
- Some high-end systems include L-3 cache

# Multilevel Cache Example

- Given
  - CPU base CPI = 1, clock rate = 4GHz
  - Miss rate/instruction = 2%
  - Main memory access time = 100ns
- With just primary cache
  - Miss penalty =  $100\text{ns}/0.25\text{ns} = 400$  cycles
  - Effective CPI =  $1 + 0.02 \times 400 = 9$

# Example (cont.)

- Now add L-2 cache
  - Access time = 5ns
  - Global miss rate to main memory = 0.5%
- Primary miss with L-2 hit
  - Penalty =  $5\text{ns}/0.25\text{ns} = 20$  cycles
- Primary miss with L-2 miss
  - Extra penalty = 500 cycles
- CPI =  $1 + 0.02 \times 20 + 0.005 \times 400 = 3.4$
- Performance ratio =  $9/3.4 = 2.6$



# Multilevel Cache Considerations

- Primary cache
  - Focus on minimal hit time (shorter clock cycle)
- L-2 cache
  - Focus on low miss rate to avoid main memory access
  - Hit time has less overall impact
- Results
  - L-1 cache usually smaller than a single cache
  - L-1 block size smaller than L-2 block size




# Interactions with Advanced CPUs

- Out-of-order CPUs can execute instructions during cache miss
  - Pending store stays in load/store unit
  - Dependent instructions wait in reservation stations
    - Independent instructions continue
- Effect of miss depends on program data flow
  - Much harder to analyse
  - Use system simulation



# Interactions with Software

- Misses depend on memory access patterns
  - Algorithm behavior
  - Compiler optimization for memory access

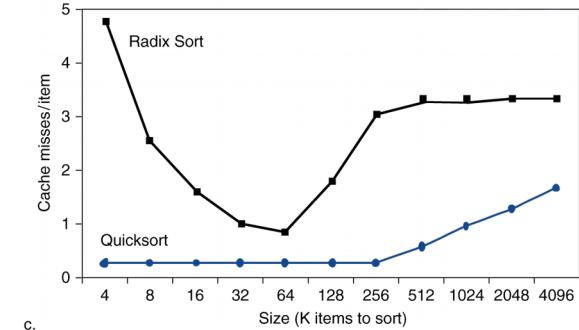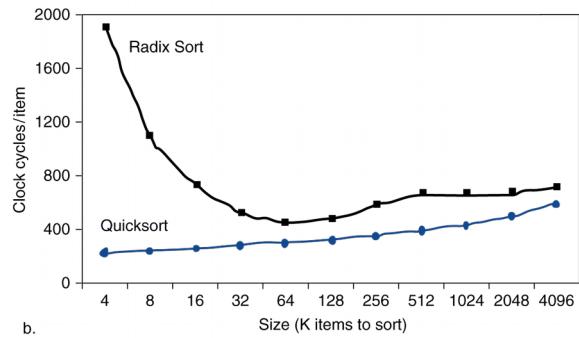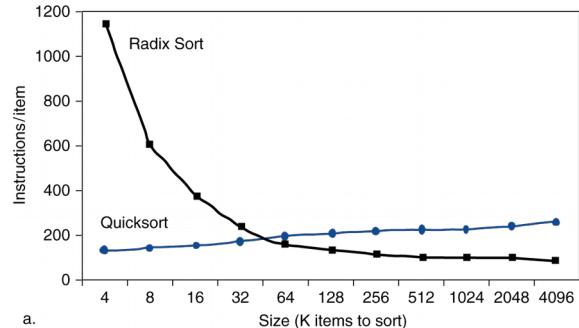



# Virtual Memory

- Use main memory as a “cache” for secondary (disk) storage
  - Managed jointly by CPU hardware and the operating system (OS)
- Programs share main memory
  - Each gets a private virtual address space holding its frequently used code and data
  - Protected from other programs
- CPU and OS translate virtual addresses to physical addresses
  - VM “block” is called a page
  - VM translation “miss” is called a page fault



# Address Translation

- Fixed-size pages (e.g., 4K)

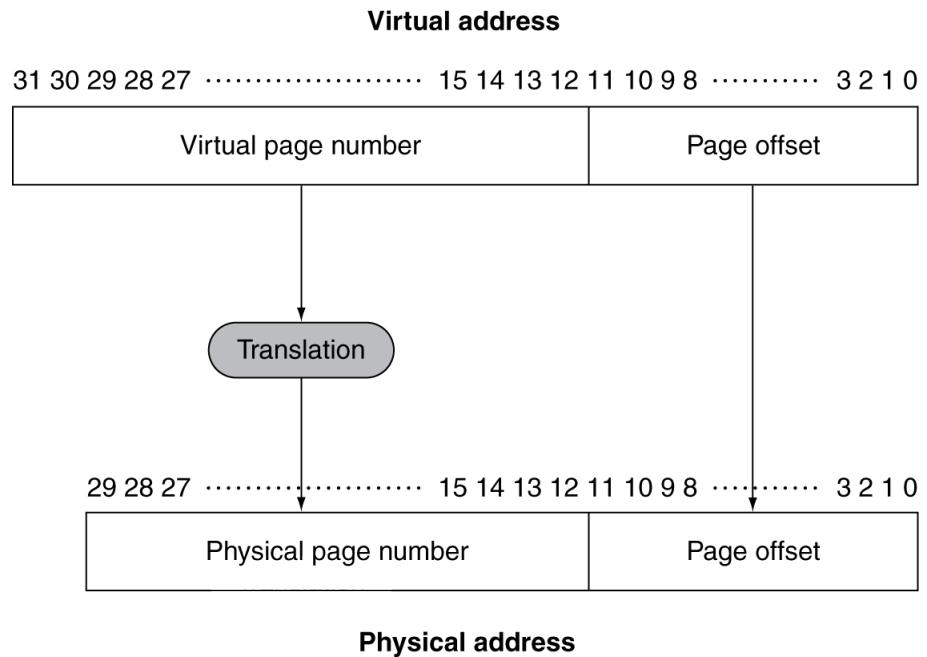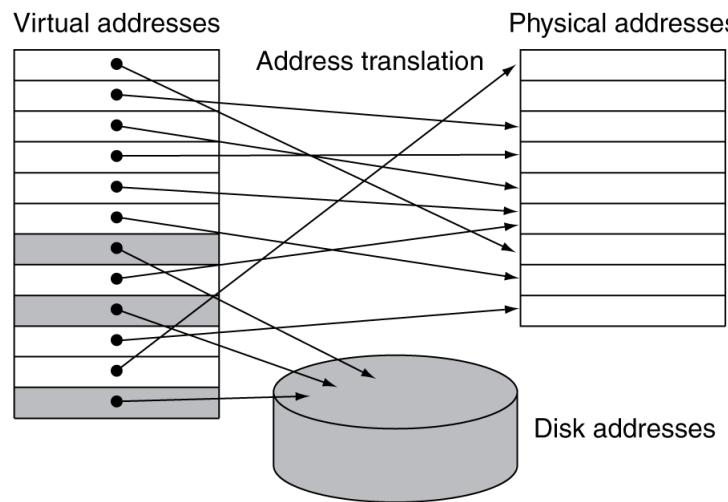

Virtual memory implements the translation of a program's address space to physical addresses (address in main memory)

# Page Fault Penalty


- On page fault, the page must be fetched from disk
  - Takes millions of clock cycles
  - Handled by OS code
- Try to minimize page fault rate
  - Fully associative placement
  - Smart replacement algorithms
- Locate pages using a table that indexes the memory (page table)



# Page Tables

- Stores placement information
  - Each program has its own page table
  - Array of page table entries, indexed by virtual page number
  - Page table register in CPU points to page table in physical memory
- If page is present in memory
  - PTE stores the physical page number
  - Plus other status bits (referenced, dirty, ...)

# Translation Using a Page Table

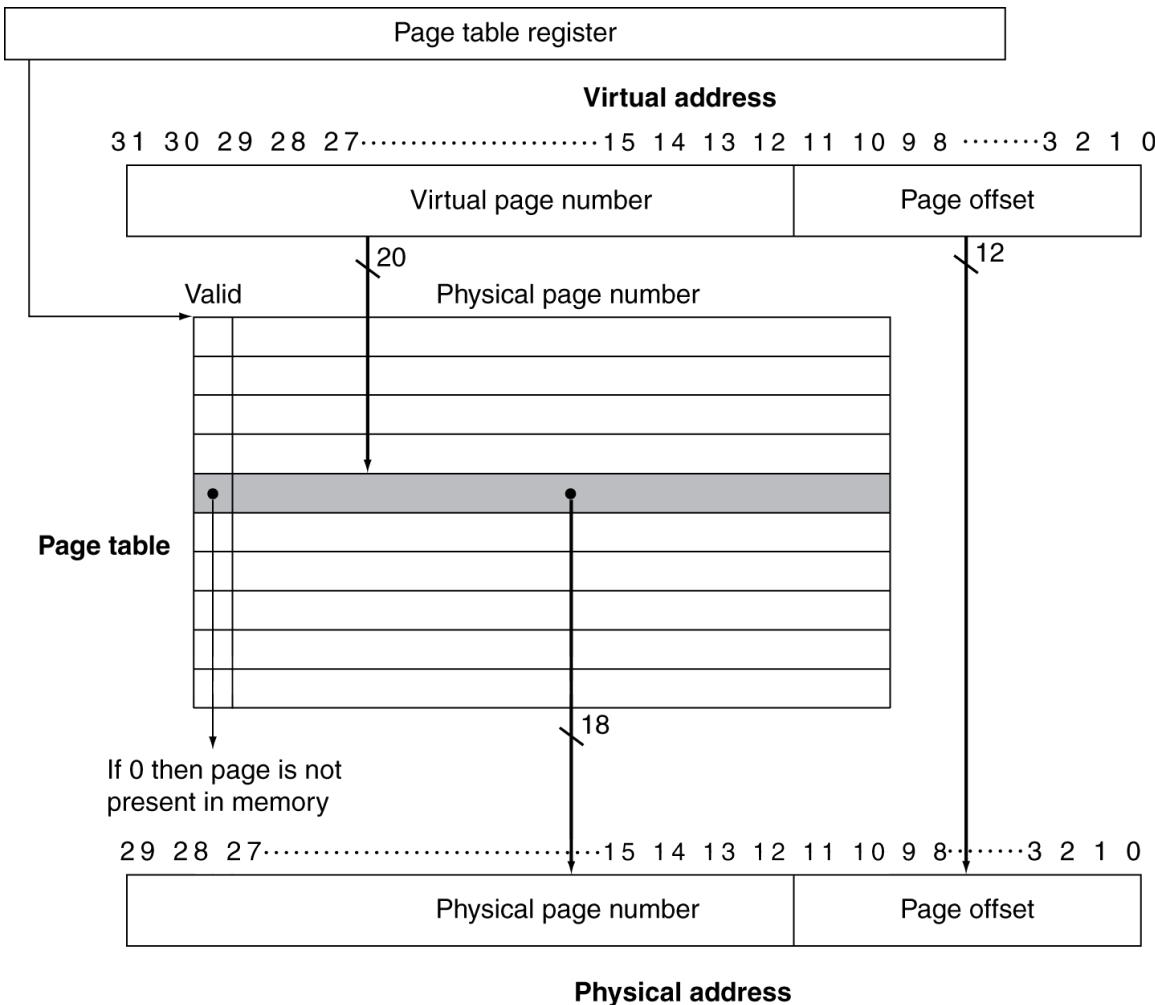

# Page Tables


## If page is not present

- OS gets control and find the page in the next level
- PTE can refer to location in swap space on disk

## Swap space

- The space on the disk reserved for the **full virtual memory space of a process**
- OS creates data structure to record where each virtual page is stored on disk
  - May be part of the page table or auxiliary data structure indexed the same way as page table.

# Mapping Pages to Storage

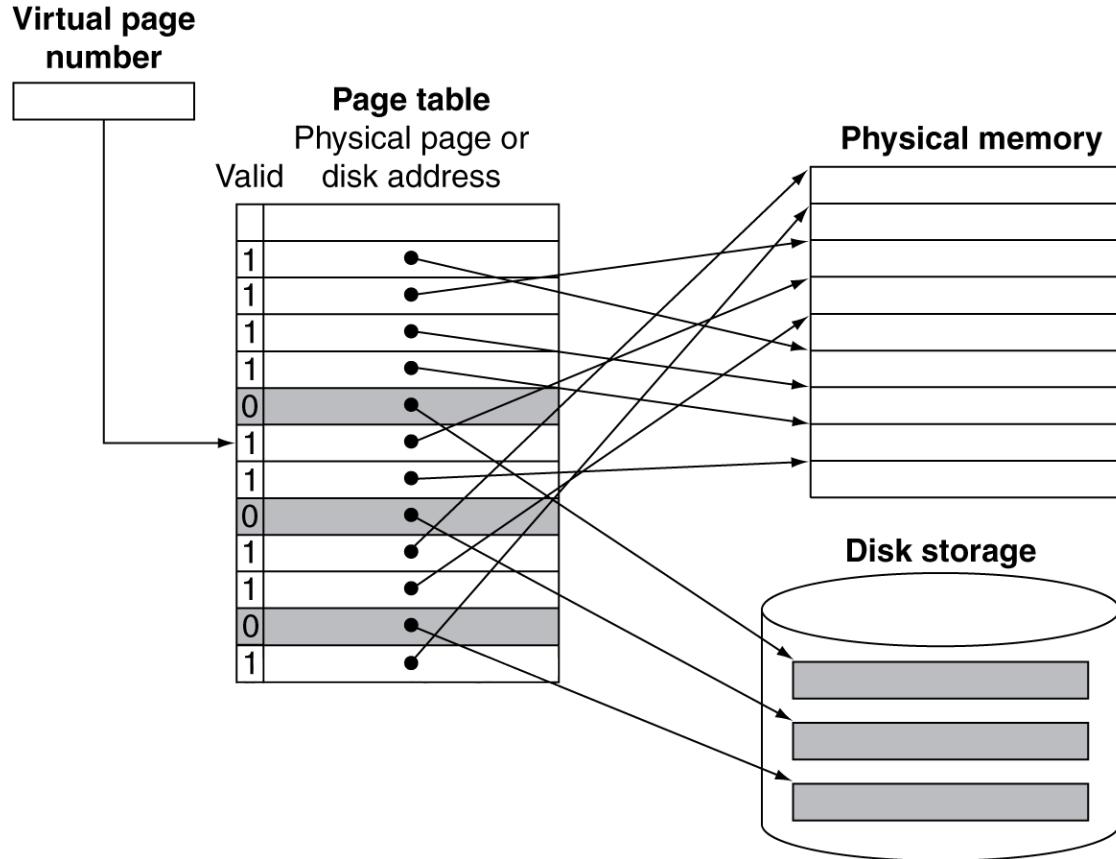

# Replacement and Writes


- To reduce page fault rate, prefer least-recently used (LRU) replacement
  - Reference bit (aka use bit) in PTE set to 1 on access to page
  - Periodically cleared to 0 by OS
  - A page with reference bit = 0 has not been used recently
- Disk writes take millions of cycles
  - Block at once, not individual locations
  - Write through is impractical
  - Use write-back
  - Dirty bit in PTE set when page is written



# Fast Translation Using a TLB

- Address translation would appear to require extra memory references
  - One to access the PTE
  - Then the actual memory access
- But access to page tables has good locality
  - So use a fast cache of PTEs within the CPU
  - Called a Translation Look-aside Buffer (TLB)
  - Typical: 16–512 PTEs, 0.5–1 cycle for hit, 10–100 cycles for miss, 0.01%–1% miss rate
  - Misses could be handled by hardware or software

# Fast Translation Using a TLB

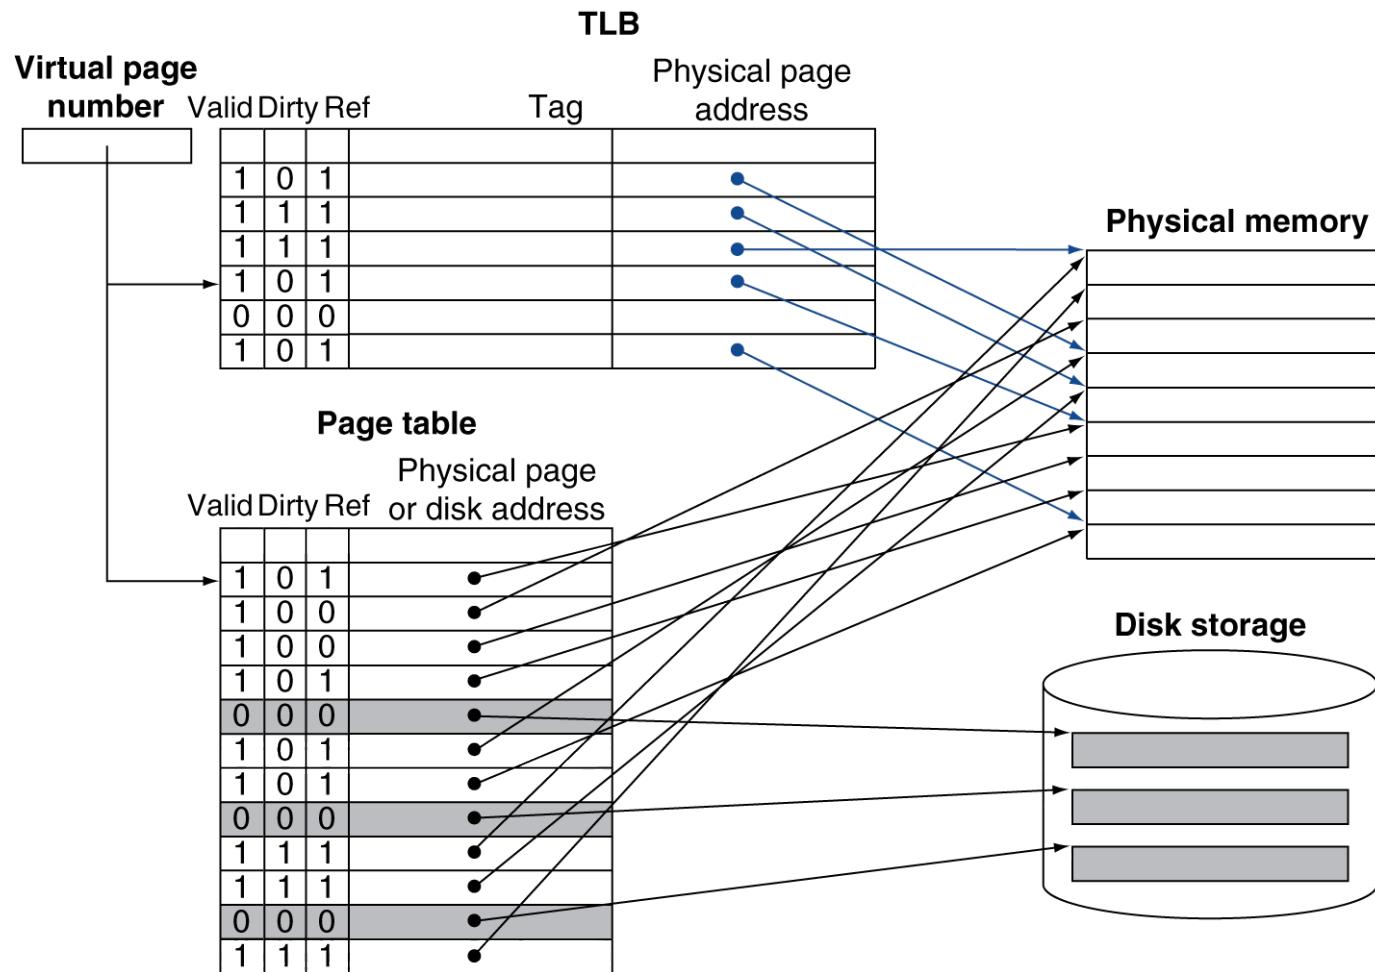

# TLB Misses

- If page is in memory
  - Load the PTE from memory and retry
  - Could be handled in hardware
    - Can get complex for more complicated page table structures
  - Or in software
    - Raise a special exception, with optimized handler
- If page is not in memory (page fault)
  - OS handles fetching the page and updating the page table
  - Then restart the faulting instruction



# TLB Miss Handler


- TLB miss indicates
  - Page present, but PTE not in TLB
  - Page not present
- Must recognize TLB miss before destination register overwritten (exception asserted by the end of the same clock cycle that the memory access occur)
  - Raise exception with the next clock cycle.
- Handler copies PTE from memory to TLB
  - Then restarts instruction
  - If page not present, page fault will occur



# Page Fault Handler

- Use faulting virtual address to find PTE
- Locate page on disk
- Choose page to replace
  - If dirty, write to disk first
- Read page into memory and update page table
- Make process runnable again
  - Restart from faulting instruction

# TLB and Cache Interaction

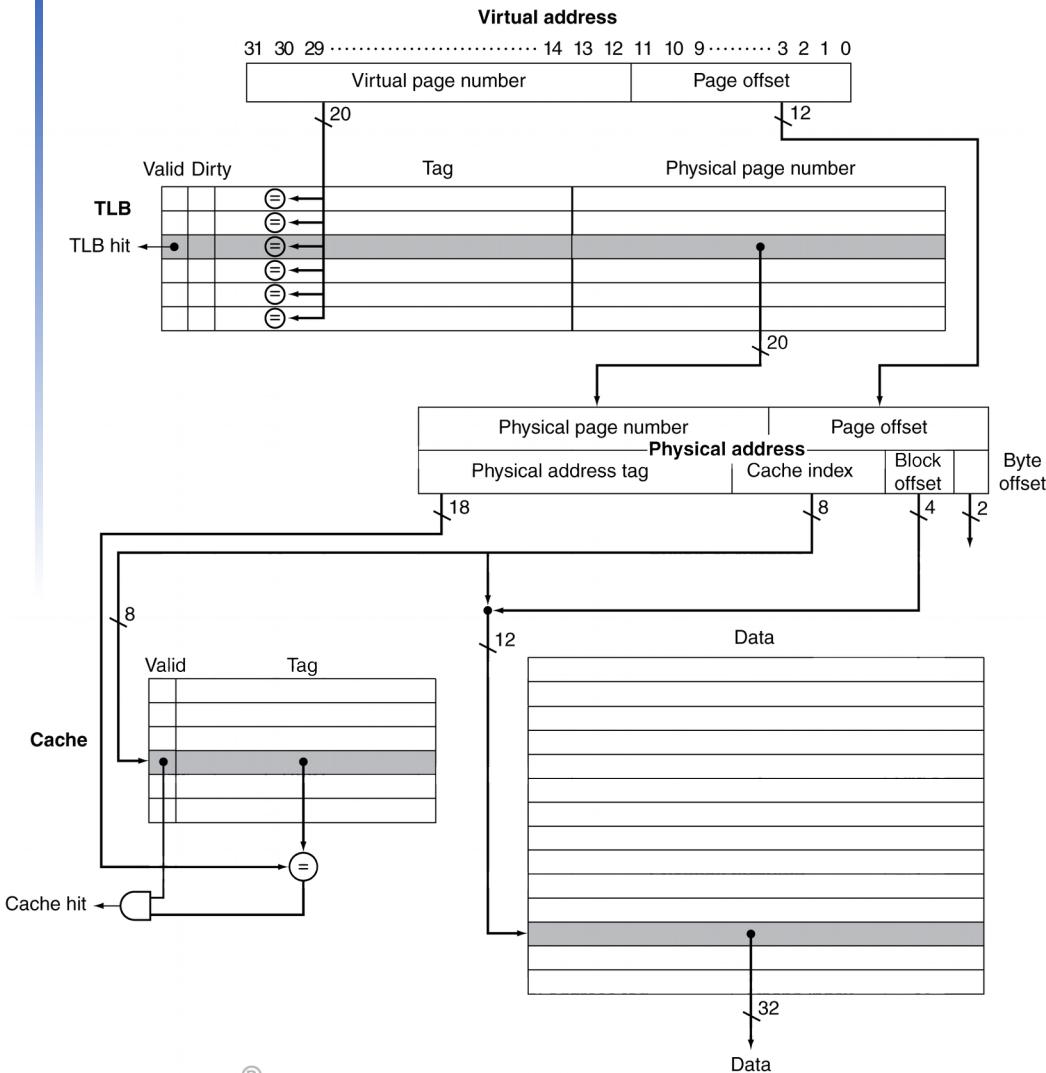

- If cache tag uses physical address
  - Need to translate before cache lookup
- Alternative: use virtual address tag
  - Complications due to aliasing
    - Different virtual addresses for shared physical address

# Memory Protection

- Different tasks can share parts of their virtual address spaces
  - But need to protect against errant access
  - Requires OS assistance
- Hardware support for OS protection
  - Privileged supervisor mode (aka kernel mode)
  - Privileged instructions
  - Page tables and other state information only accessible in supervisor mode
  - System call exception (e.g., syscall in MIPS)



To enable the operating system to implement protection in the virtual memory system, the hardware must provide at least the three basic capabilities summarized below.

1. Support at least two modes that indicate whether the running process is a user process or an operating system process, variously called a **supervisor** process, a **kernel** process, or an *executive* process.
2. Provide a portion of the processor state that a user process can read but not write. This includes the user/supervisor mode bit, which dictates whether the processor is in user or supervisor mode, the page table pointer, and the TLB. To write these elements, the operating system uses special instructions that are only available in supervisor mode.
3. Provide mechanisms whereby the processor can go from user mode to supervisor mode and vice versa. The first direction is typically accomplished by a **system call** exception, implemented as a special instruction (*syscall* in the MIPS instruction set) that transfers control to a dedicated location in supervisor code space. As with any other exception, the program counter from the point of the system call is saved in the exception PC (EPC), and the processor is placed in supervisor mode. To return to user mode from the exception, use the *return from exception* (ERET) instruction, which resets to user mode and jumps to the address in EPC.

# The Memory Hierarchy

## The BIG Picture

- Common principles apply at all levels of the memory hierarchy
  - Based on notions of caching
- At each level in the hierarchy
  - Block placement
  - Finding a block
  - Replacement on a miss
  - Write policy



# Block Placement

- Determined by associativity
  - Direct mapped (1-way associative)
    - One choice for placement
  - n-way set associative
    - n choices within a set
  - Fully associative
    - Any location
- Higher associativity reduces miss rate
  - Increases complexity, cost, and access time

# Finding a Block

Associativity	Location method	Tag comparisons
Direct mapped	Index	1
n-way set associative	Set index, then search entries within the set	n
Fully associative	Search all entries	#entries
	Full lookup table	0

- Hardware caches
  - Reduce comparisons to reduce cost
- Virtual memory
  - Full table lookup makes full associativity feasible
  - Benefit in reduced miss rate

# Replacement

- Choice of entry to replace on a miss
  - Least recently used (LRU)
    - Complex and costly hardware for high associativity
  - Random
    - Close to LRU, easier to implement
- Virtual memory
  - LRU approximation with hardware support

# Write Policy

- Write-through
  - Update both upper and lower levels
  - Simplifies replacement, but may require write buffer
- Write-back
  - Update upper level only
  - Update lower level when block is replaced
  - Need to keep more state
- Virtual memory
  - Only write-back is feasible, given disk write latency

# Sources of Misses

- Compulsory misses (aka cold start misses)
  - First access to a block
- Capacity misses
  - Due to finite cache size
  - A replaced block is later accessed again
- Conflict misses (aka collision misses)
  - In a non-fully associative cache
  - Due to competition for entries in a set
  - Would not occur in a fully associative cache of the same total size

# Cache Design Trade-offs

Design change	Effect on miss rate	Negative performance effect
Increase cache size	Decrease capacity misses	May increase access time
Increase associativity	Decrease conflict misses	May increase access time
Increase block size	Decrease compulsory misses	Increases miss penalty. For very large block size, may increase miss rate due to pollution.

# Virtual Machines

- Host computer emulates guest operating system and machine resources
  - Improved isolation of multiple guests
  - Avoids security and reliability problems
  - Aids sharing of resources
- Virtualization has some performance impact
  - Feasible with modern high-performance computers
- Examples
  - IBM VM/370 (1970s technology!)
  - VMWare
  - Microsoft Virtual PC



# Virtual Machine Monitor

- Maps virtual resources to physical resources
  - Memory, I/O devices, CPUs
- Guest code runs on native machine in user mode
  - Traps to VMM on privileged instructions and access to protected resources
- Guest OS may be different from host OS
- VMM handles real I/O devices
  - Emulates generic virtual I/O devices for guest

# Example: Timer Virtualization

- In native machine, on timer interrupt
  - OS suspends current process, handles interrupt, selects and resumes next process
- With Virtual Machine Monitor
  - VMM suspends current VM, handles interrupt, selects and resumes next VM
- If a VM requires timer interrupts
  - VMM emulates a virtual timer
  - Emulates interrupt for VM when physical timer interrupt occurs




# Instruction Set Support

- User and System modes
- Privileged instructions only available in system mode
  - Trap to system if executed in user mode
- All physical resources only accessible using privileged instructions
  - Including page tables, interrupt controls, I/O registers
- Renaissance of virtualization support
  - Current ISAs (e.g., x86) adapting




# Cache Control

- Example cache characteristics
  - Direct-mapped, write-back, write allocate
  - Block size: 4 words (16 bytes)
  - Cache size: 16 KB (1024 blocks)
  - 32-bit byte addresses
  - Valid bit and dirty bit per block
  - Blocking cache
    - CPU waits until access is complete

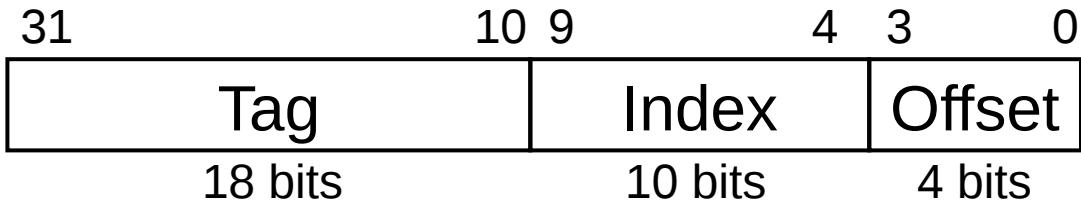


# Interface Signals

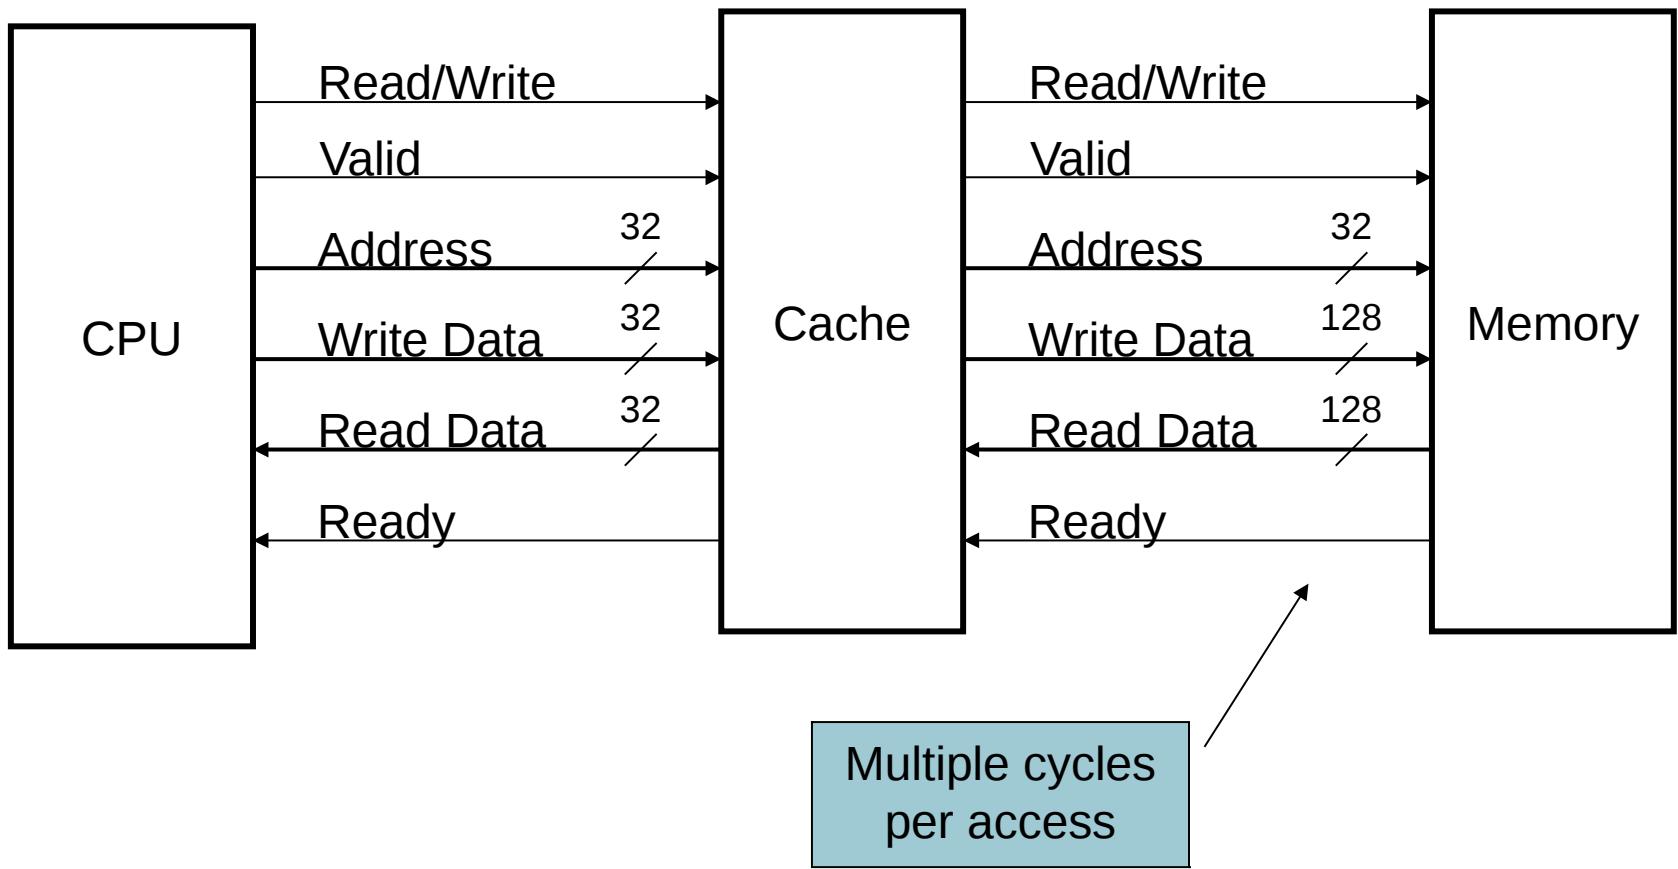


# Finite State Machines

- Use an FSM to sequence control steps
- Set of states, transition on each clock edge
  - State values are binary encoded
  - Current state stored in a register
  - Next state =  $f_n$  (current state, current inputs)
- Control output signals =  $f_o$  (current state)

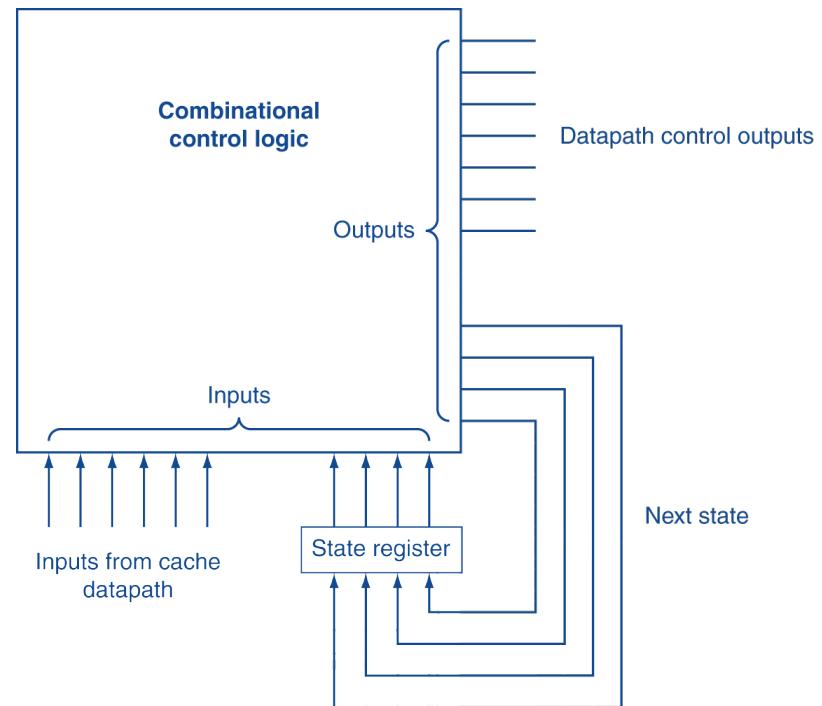

# Cache Controller FSM

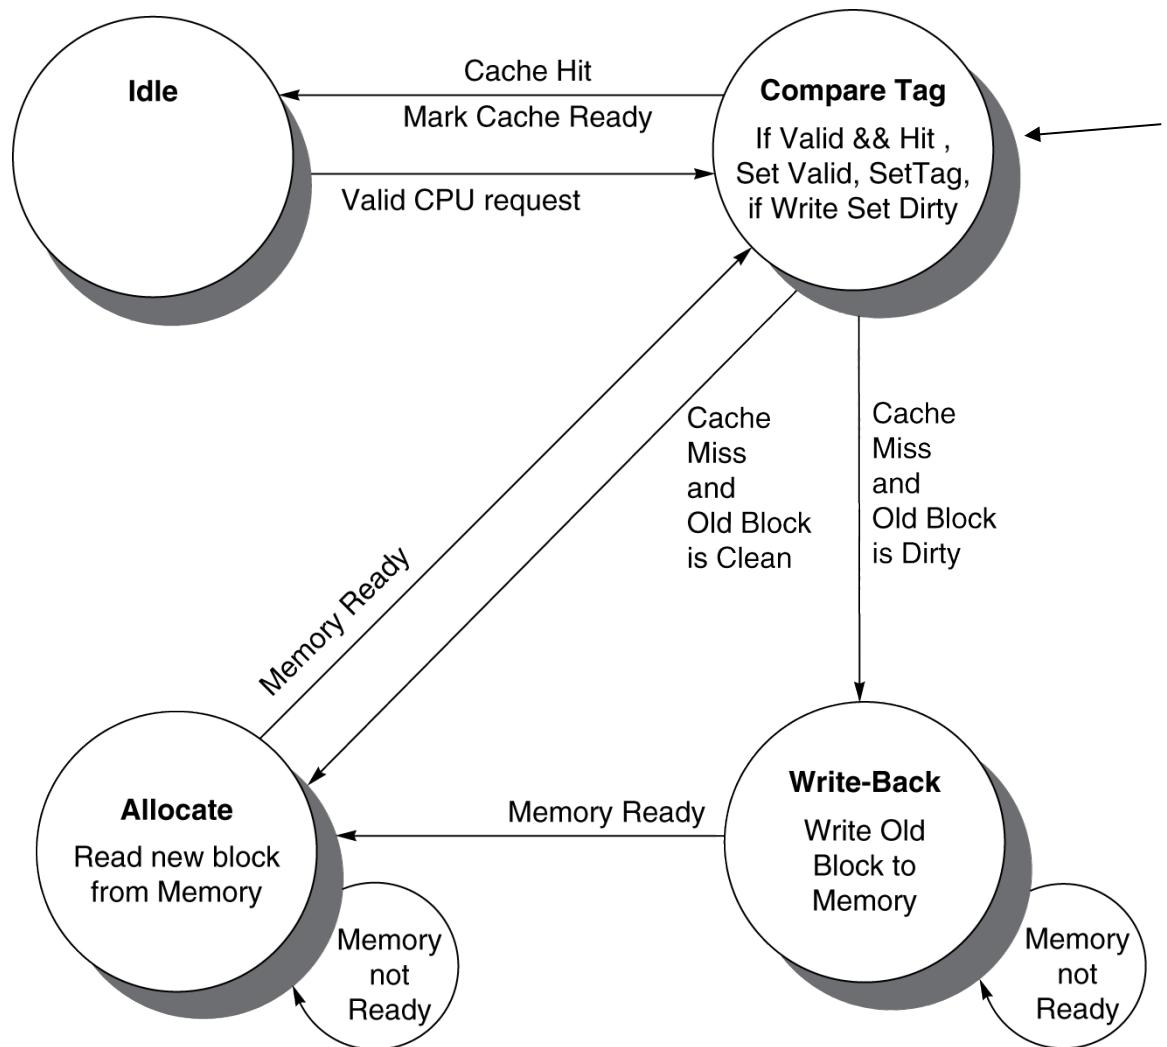

Could partition into separate states to reduce clock cycle time

# Cache Coherence Problem

- Suppose two CPU cores share a physical address space
  - Write-through caches

Time step	Event	CPU A's cache	CPU B's cache	Memory
0				0
1	CPU A reads X	0		0
2	CPU B reads X	0	0	0
3	CPU A writes 1 to X	1	0	1

# Coherence Defined

- Informally: Reads return most recently written value
- Formally:
  - P writes X; P reads X (no intervening writes)  
⇒ read returns written value
  - $P_1$  writes X;  $P_2$  reads X (sufficiently later)  
⇒ read returns written value
    - c.f. CPU B reading X after step 3 in example
  - $P_1$  writes X,  $P_2$  writes X  
⇒ all processors see writes in the same order
    - End up with the same final value for X

# Cache Coherence Protocols

- Operations performed by caches in multiprocessors to ensure coherence
  - Migration of data to local caches
    - Reduces bandwidth for shared memory
  - Replication of read-shared data
    - Reduces contention for access
- Snooping protocols
  - Each cache monitors bus reads/writes
- Directory-based protocols
  - Caches and memory record sharing status of blocks in a directory



# Invalidating Snooping Protocols

- Cache gets exclusive access to a block when it is to be written
  - Broadcasts an invalidate message on the bus
  - Subsequent read in another cache misses
    - Owning cache supplies updated value

CPU activity	Bus activity	CPU A's cache	CPU B's cache	Memory
				0
CPU A reads X	Cache miss for X	0		0
CPU B reads X	Cache miss for X	0	0	0
CPU A writes 1 to X	Invalidate for X	1		0
CPU B read X	Cache miss for X	1	1	1


# Memory Consistency

- When are writes seen by other processors
  - “Seen” means a read returns the written value
  - Can’t be instantaneously
- Assumptions
  - A write completes only when all processors have seen it
  - A processor does not reorder writes with other accesses
- Consequence
  - P writes X then writes Y  
⇒ all processors that see new Y also see new X
  - Processors can reorder reads, but not writes



# Multilevel On-Chip Caches

Intel Nehalem 4-core processor

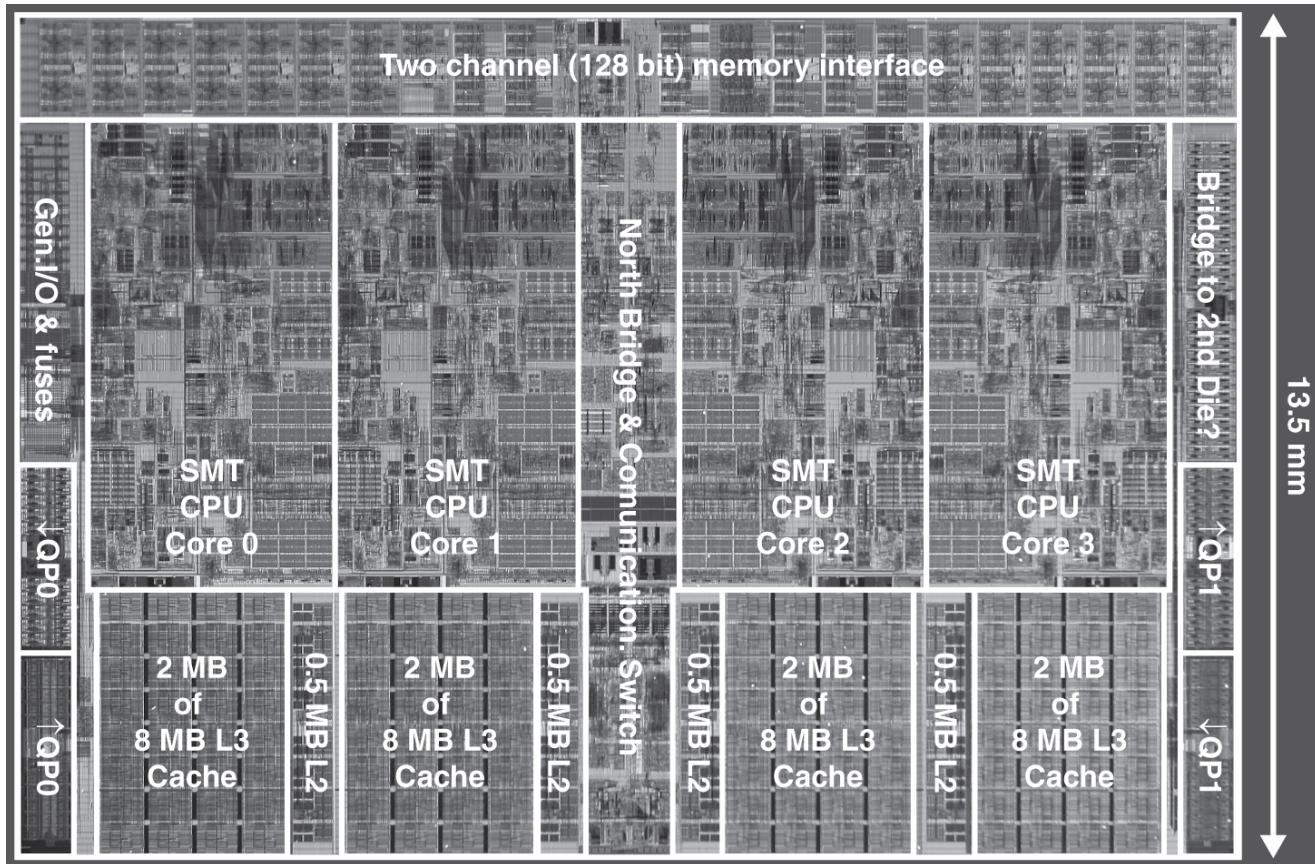

Per core: 32KB L1 I-cache, 32KB L1 D-cache, 512KB L2 cache



# 2-Level TLB Organization

	Intel Nehalem	AMD Opteron X4
Virtual addr	48 bits	48 bits
Physical addr	44 bits	48 bits
Page size	4KB, 2/4MB	4KB, 2/4MB
L1 TLB (per core)	L1 I-TLB: 128 entries for small pages, 7 per thread (2×) for large pages L1 D-TLB: 64 entries for small pages, 32 for large pages Both 4-way, LRU replacement	L1 I-TLB: 48 entries L1 D-TLB: 48 entries Both fully associative, LRU replacement
L2 TLB (per core)	Single L2 TLB: 512 entries 4-way, LRU replacement	L2 I-TLB: 512 entries L2 D-TLB: 512 entries Both 4-way, round-robin LRU
TLB misses	Handled in hardware	Handled in hardware



# 3-Level Cache Organization

	Intel Nehalem	AMD Opteron X4
L1 caches (per core)	L1 I-cache: 32KB, 64-byte blocks, 4-way, approx LRU replacement, hit time n/a  L1 D-cache: 32KB, 64-byte blocks, 8-way, approx LRU replacement, write-back/allocate, hit time n/a	L1 I-cache: 32KB, 64-byte blocks, 2-way, LRU replacement, hit time 3 cycles  L1 D-cache: 32KB, 64-byte blocks, 2-way, LRU replacement, write-back/allocate, hit time 9 cycles
L2 unified cache (per core)	256KB, 64-byte blocks, 8-way, approx LRU replacement, write-back/allocate, hit time n/a	512KB, 64-byte blocks, 16-way, approx LRU replacement, write-back/allocate, hit time n/a
L3 unified cache (shared)	8MB, 64-byte blocks, 16-way, replacement n/a, write-back/allocate, hit time n/a	2MB, 64-byte blocks, 32-way, replace block shared by fewest cores, write-back/allocate, hit time 32 cycles

n/a: data not available



# Mis Penalty Reduction

- Return requested word first
  - Then back-fill rest of block
- Non-blocking miss processing
  - Hit under miss: allow hits to proceed
  - Mis under miss: allow multiple outstanding misses
- Hardware prefetch: instructions and data
- Opteron X4: bank interleaved L1 D-cache
  - Two concurrent accesses per cycle

# Pitfalls

- Byte vs. word addressing
  - Example: 32-byte direct-mapped cache, 4-byte blocks
    - Byte 36 maps to block 1
    - Word 36 maps to block 4
- Ignoring memory system effects when writing or generating code
  - Example: iterating over rows vs. columns of arrays
  - Large strides result in poor locality

# Pitfalls

- In multiprocessor with shared L2 or L3 cache
  - Less associativity than cores results in conflict misses
  - More cores  $\Rightarrow$  need to increase associativity
- Using AMAT to evaluate performance of out-of-order processors
  - Ignores effect of non-blocked accesses
  - Instead, evaluate performance by simulation

# Pitfalls

- Extending address range using segments
  - E.g., Intel 80286
  - But a segment is not always big enough
  - Makes address arithmetic complicated
- Implementing a VMM on an ISA not designed for virtualization
  - E.g., non-privileged instructions accessing hardware resources
  - Either extend ISA, or require guest OS not to use problematic instructions



# Concluding Remarks

- Fast memories are small, large memories are slow
  - We really want fast, large memories ☹
  - Caching gives this illusion ☺
- Principle of locality
  - Programs use a small part of their memory space frequently
- Memory hierarchy
  - L1 cache  $\leftrightarrow$  L2 cache  $\leftrightarrow \dots \leftrightarrow$  DRAM memory  
 $\leftrightarrow$  disk
- Memory system design is critical for multiprocessors