


Q- Set up a basic wireless network using a home Wi-Fi router and connect your laptop or phone to it, then note down the SSID and the default channel used by the router.

To set up a basic wireless network using a wireless router and connect a laptop to the network. The SSID and default wireless channel are recorded.

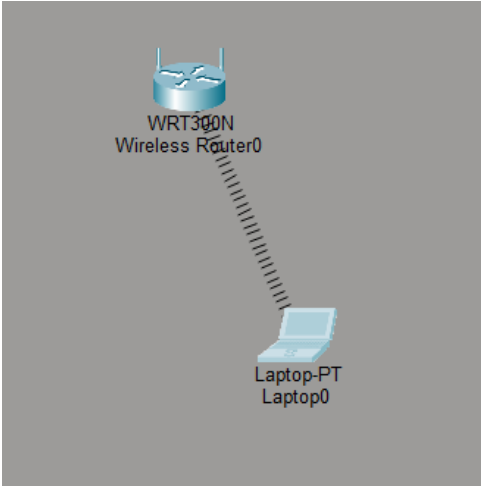

Parameter	Configuration
Device	Wireless Router
SSID	MyHomeWiFi
Wireless Channel	6
Connected Device	Laptop
Connection Type	Wireless
IP Address	192.168.0.100
Default Gateway	192.168.0.1
Status	Connected

- Open **Cisco Packet Tracer**.
- Add a **Wireless Router** from **Network Devices → Wireless Devices**.
- Add a **Laptop** from **End Devices**.
- Open the Wireless Router and go to **GUI → Wireless → Basic Wireless Settings**.
- Set the **SSID** to MyHomeWiFi.
- Set the **Channel** to 6.
- Save the settings.
- Open the Laptop → **Desktop → PC Wireless**.
- Select MyHomeWiFi and connect to it.
- Open **Desktop → Command Prompt** and use ipconfig to verify the IP address.
- Use ping 192.168.0.1 to verify connectivity.

Cisco Packet Tracer PC Command Line 1.0

C:\>

ipconfig

Bluetooth Connection:(default port)

Connection-specific DNS Suffix..:

Link-local IPv6 Address.....: ::

IPv6 Address.....: ::

IPv4 Address.....: 0.0.0.0

Subnet Mask.....: 0.0.0.0

Default Gateway.....: ::

0.0.0.0

Wireless0 Connection:

Connection-specific DNS Suffix..:

Link-local IPv6 Address.....: FE80::207:ECFF:FE88:C1EE

IPv6 Address.....: ::

IPv4 Address.....: 192.168.0.100

Subnet Mask.....: 255.255.255.0

Default Gateway.....: ::

192.168.0.1

C:\>