






M3 Threaded Insert

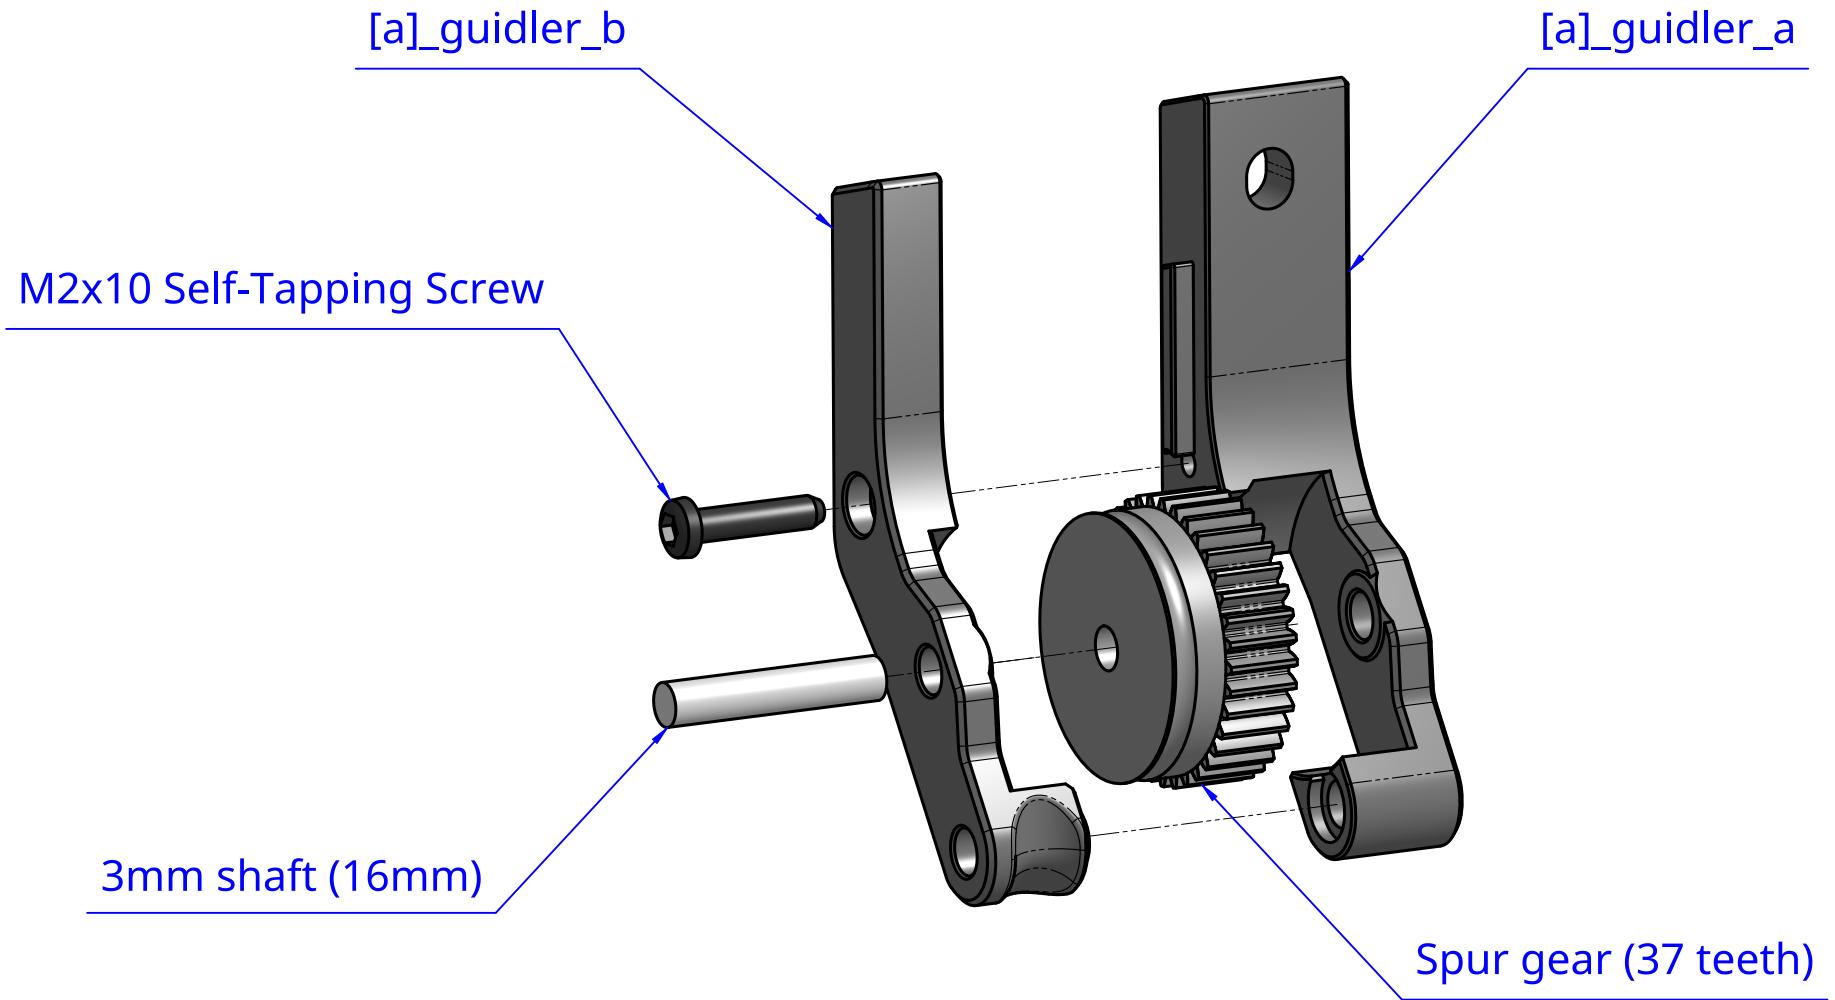


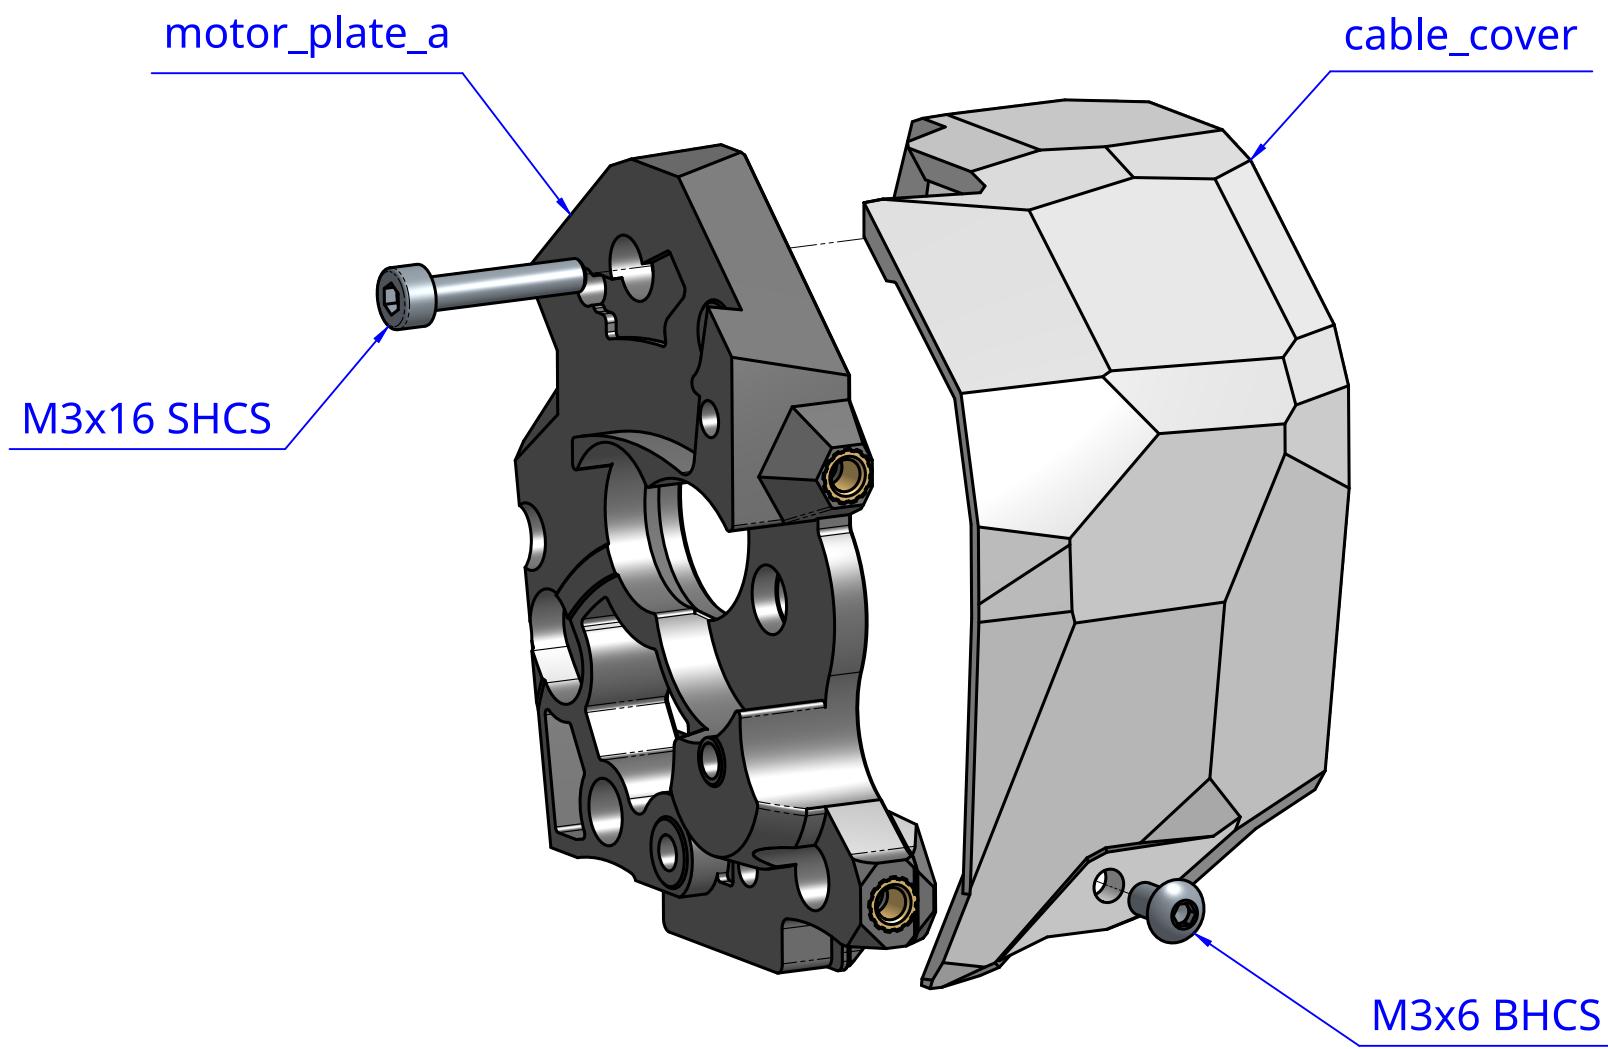


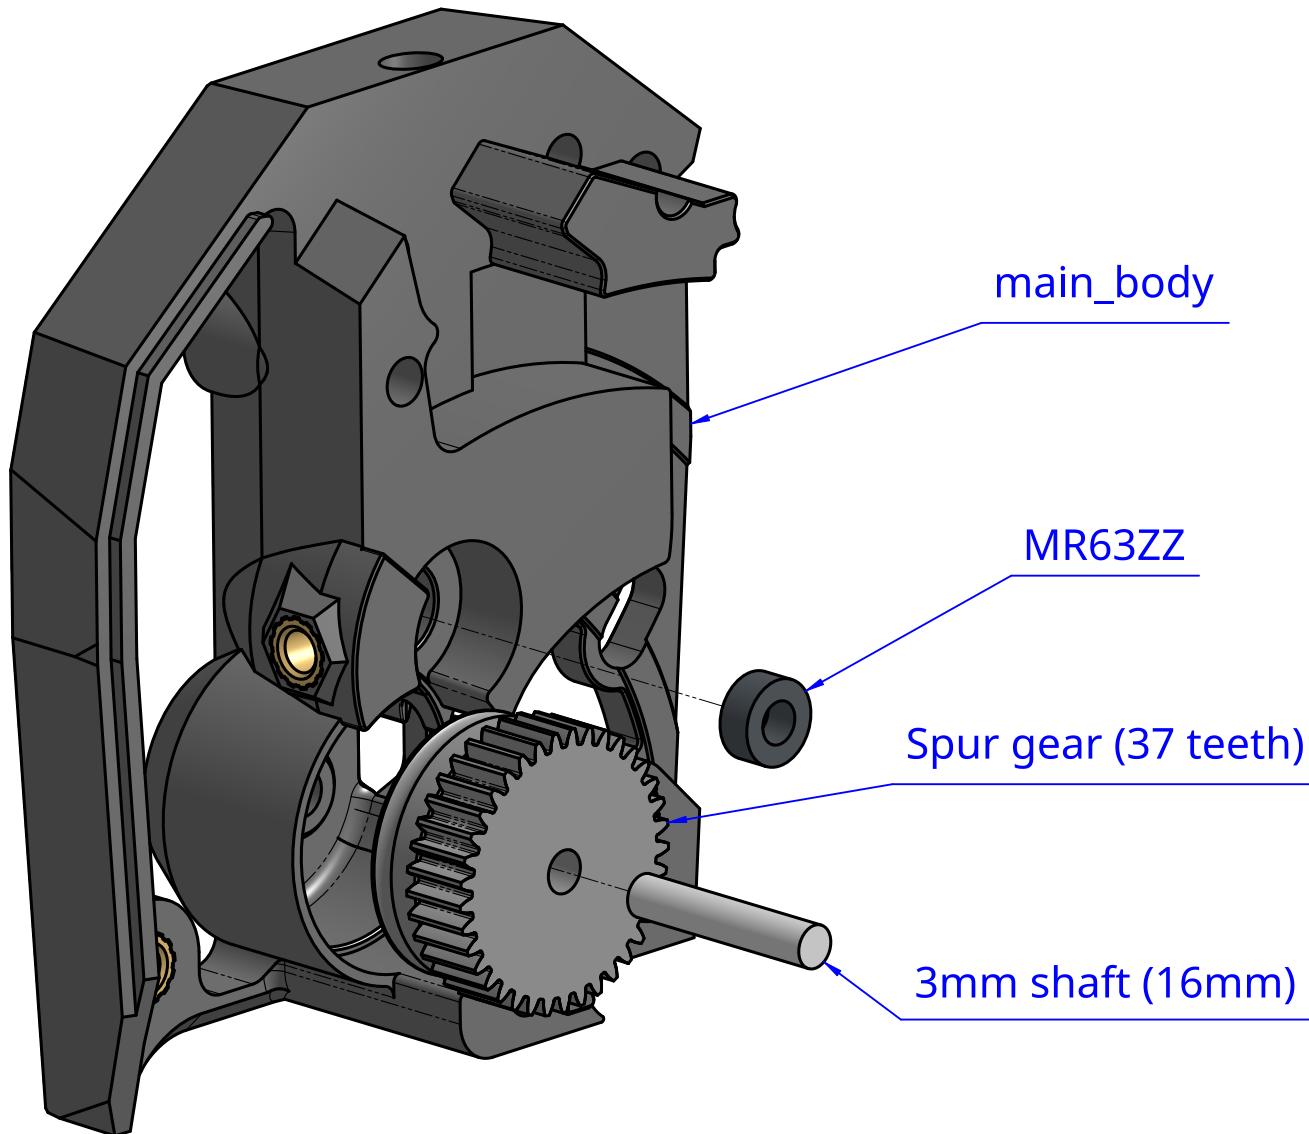


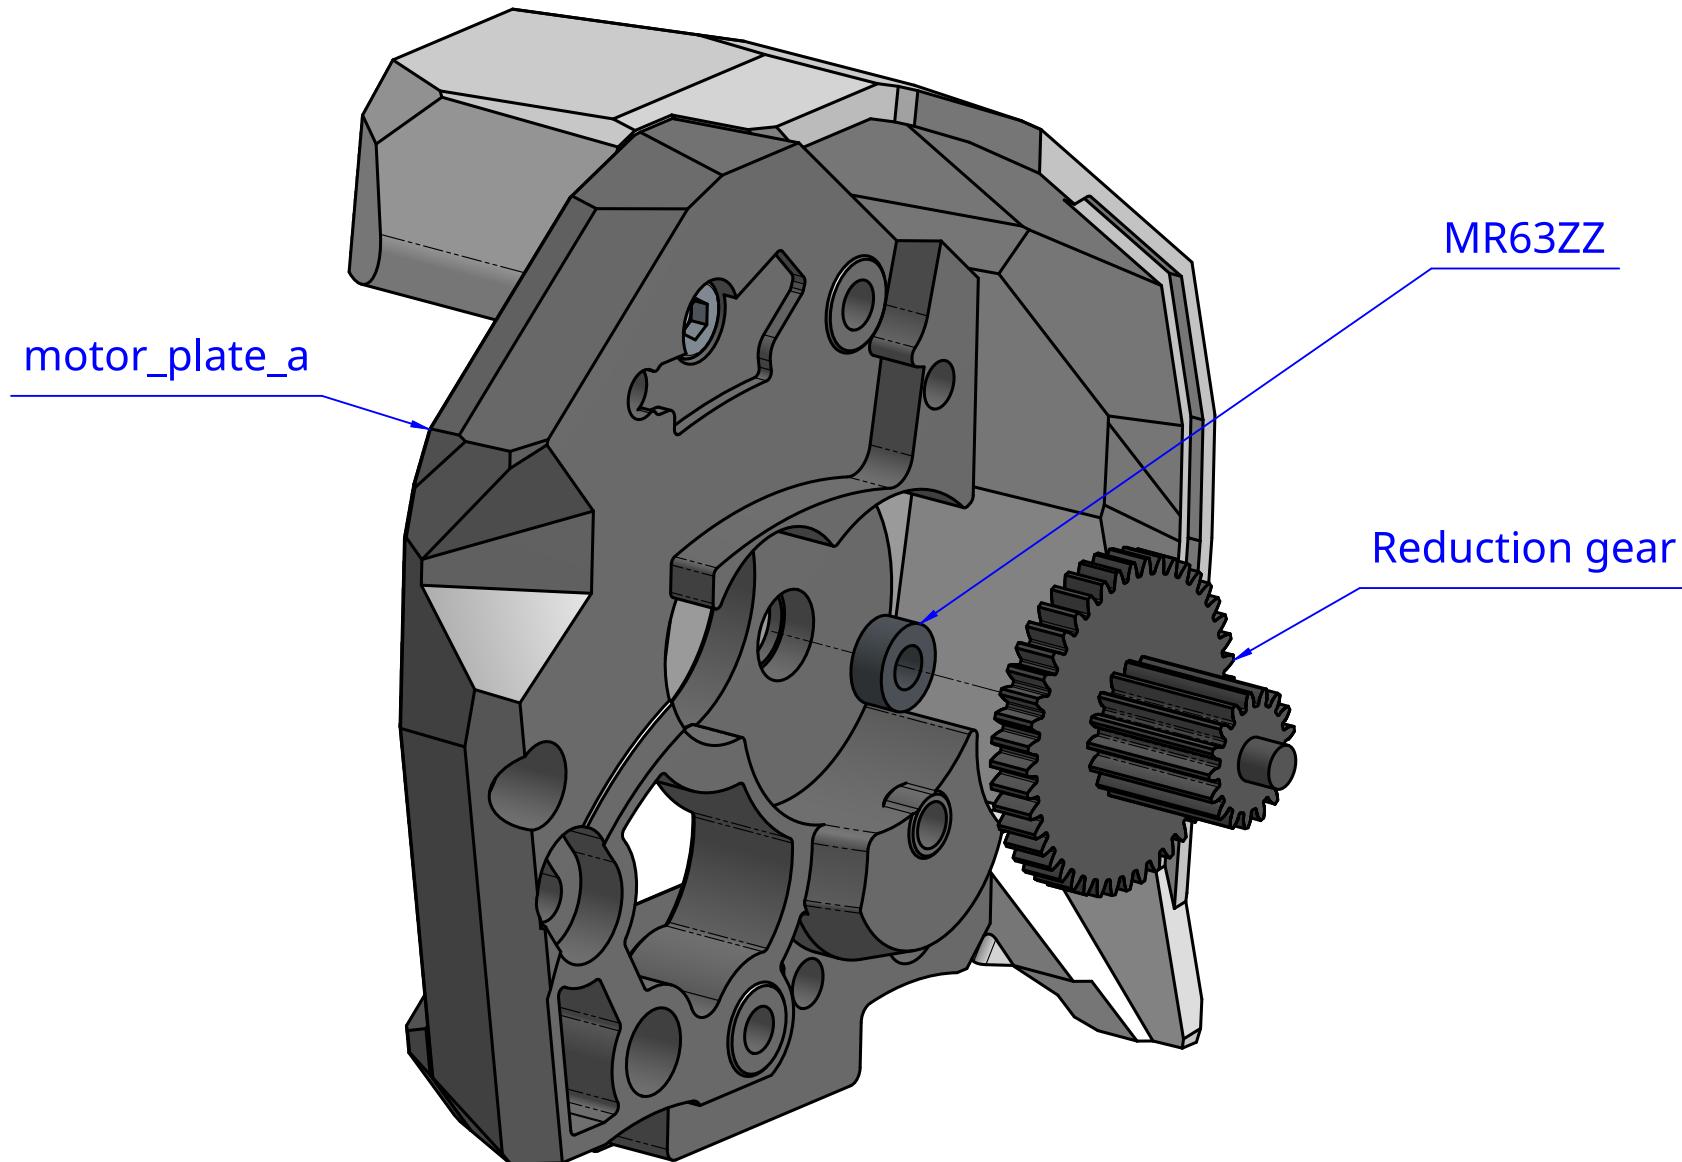


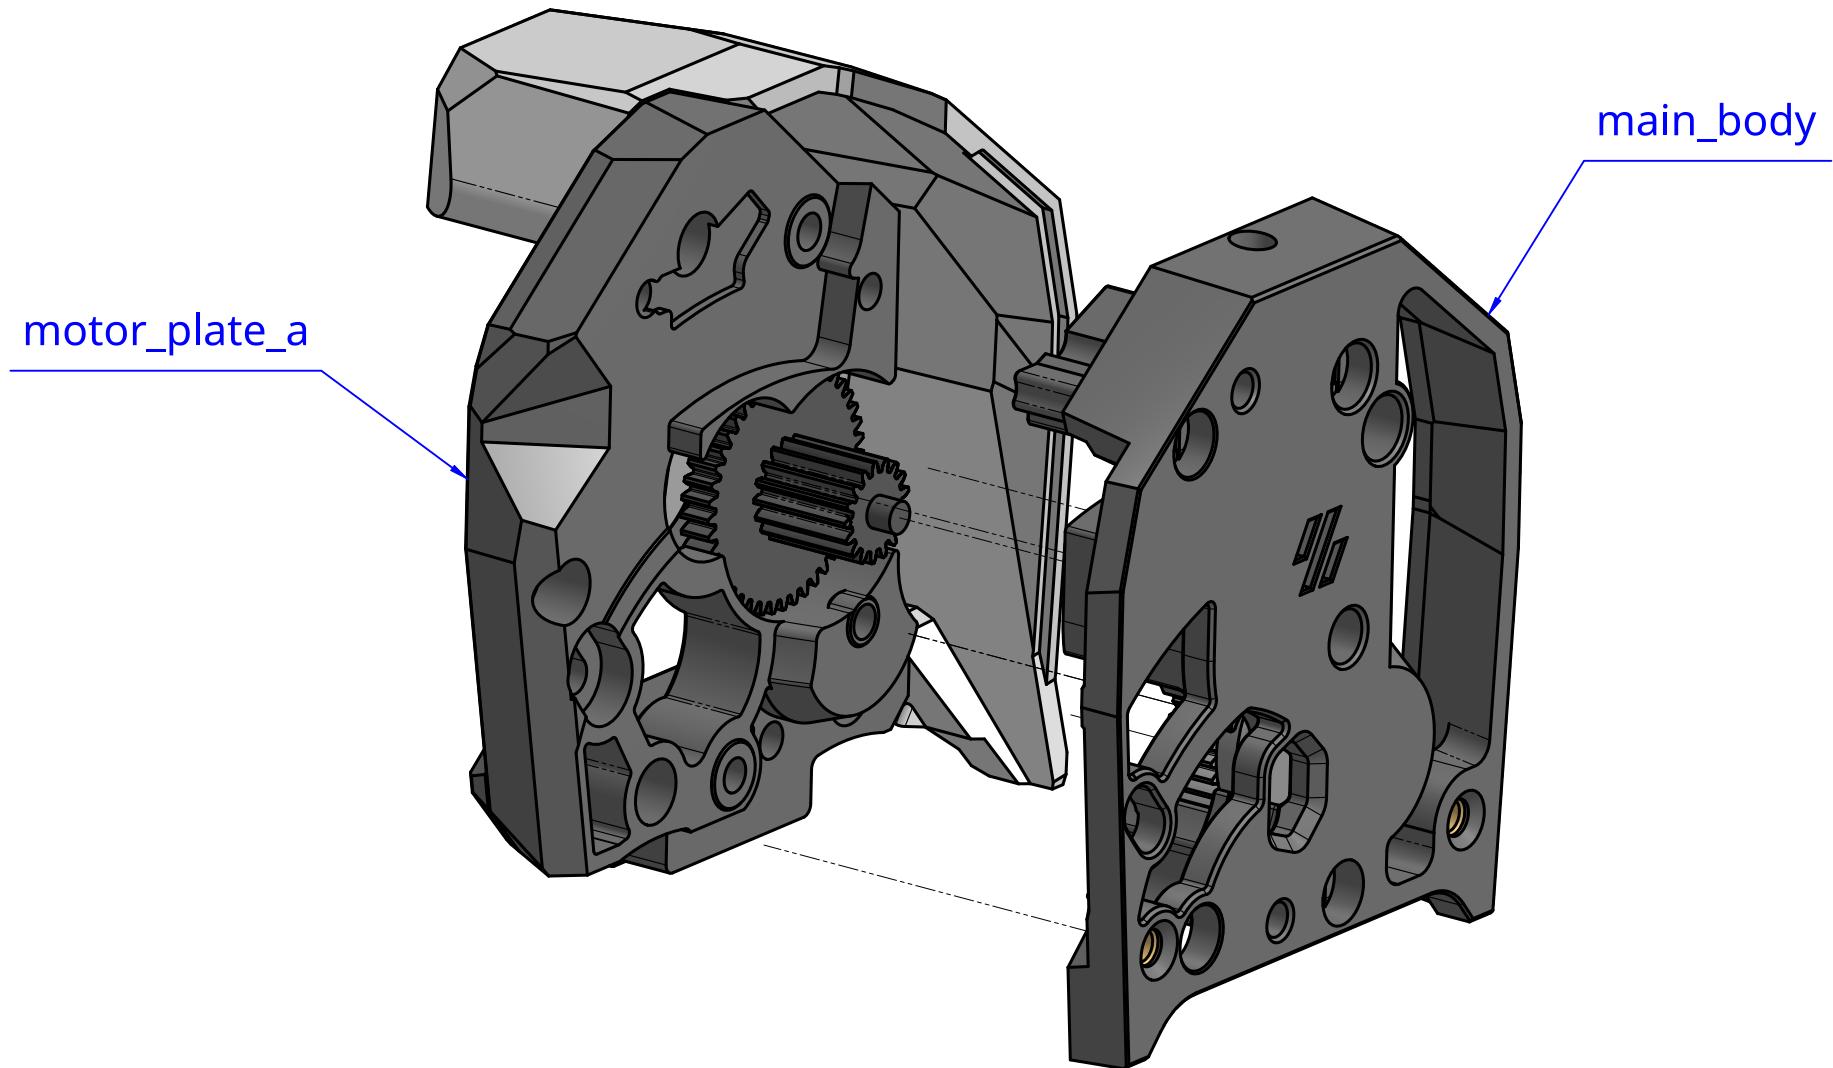

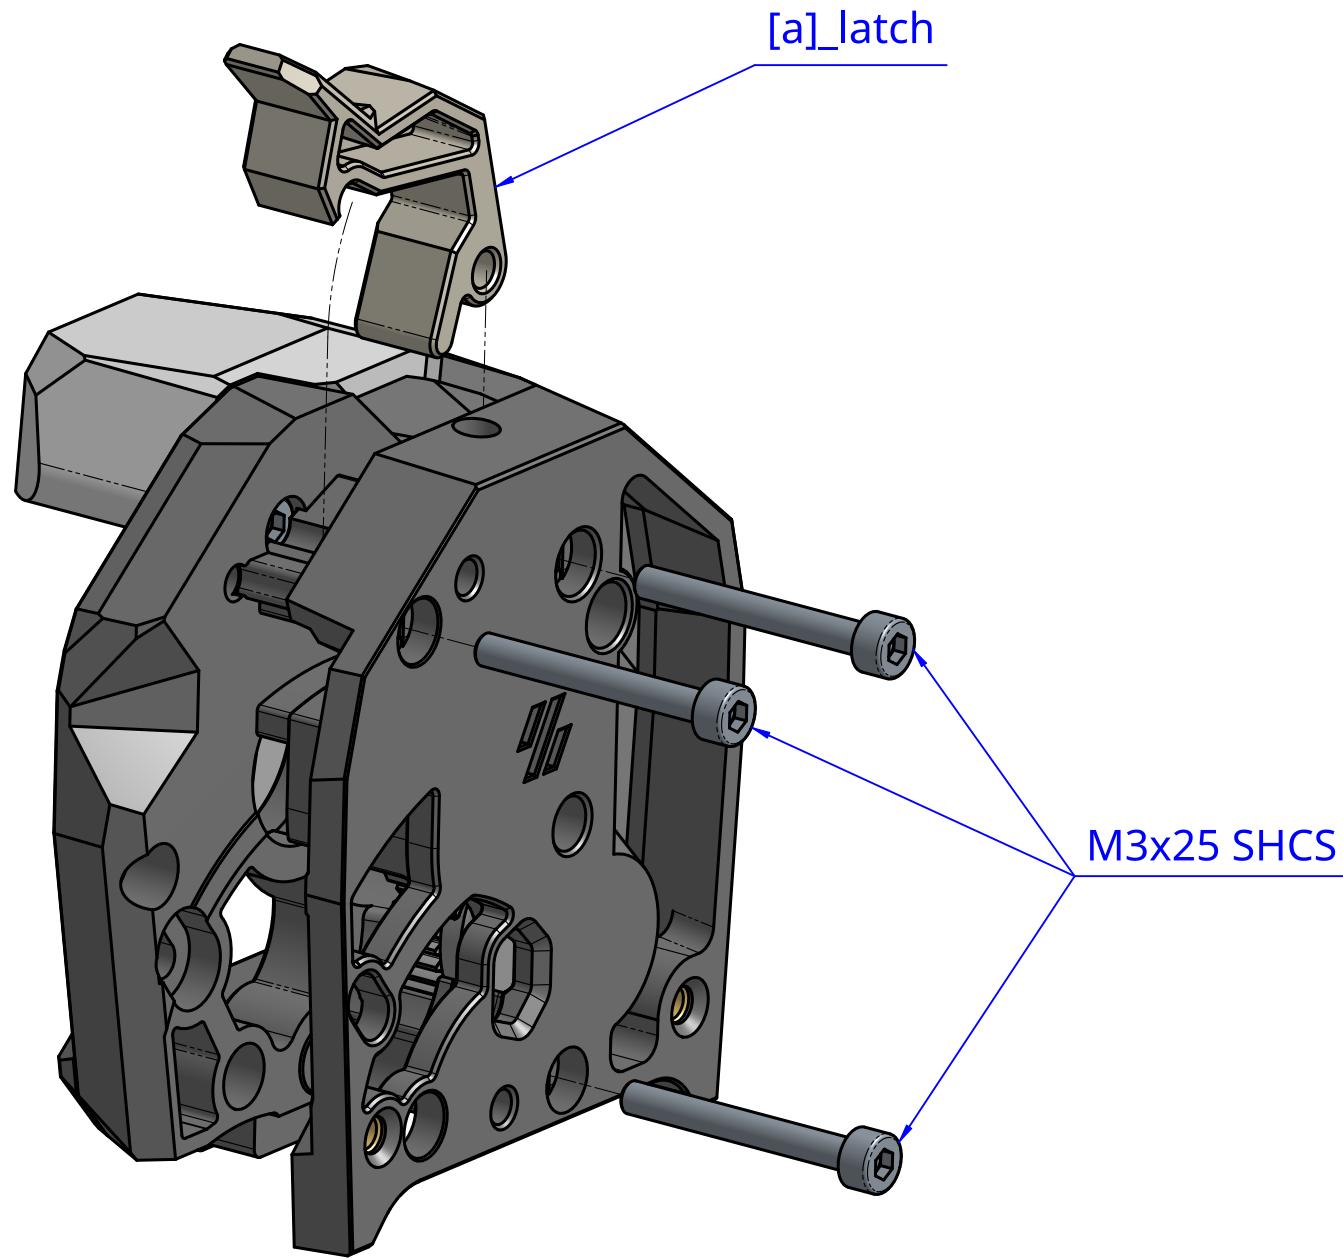

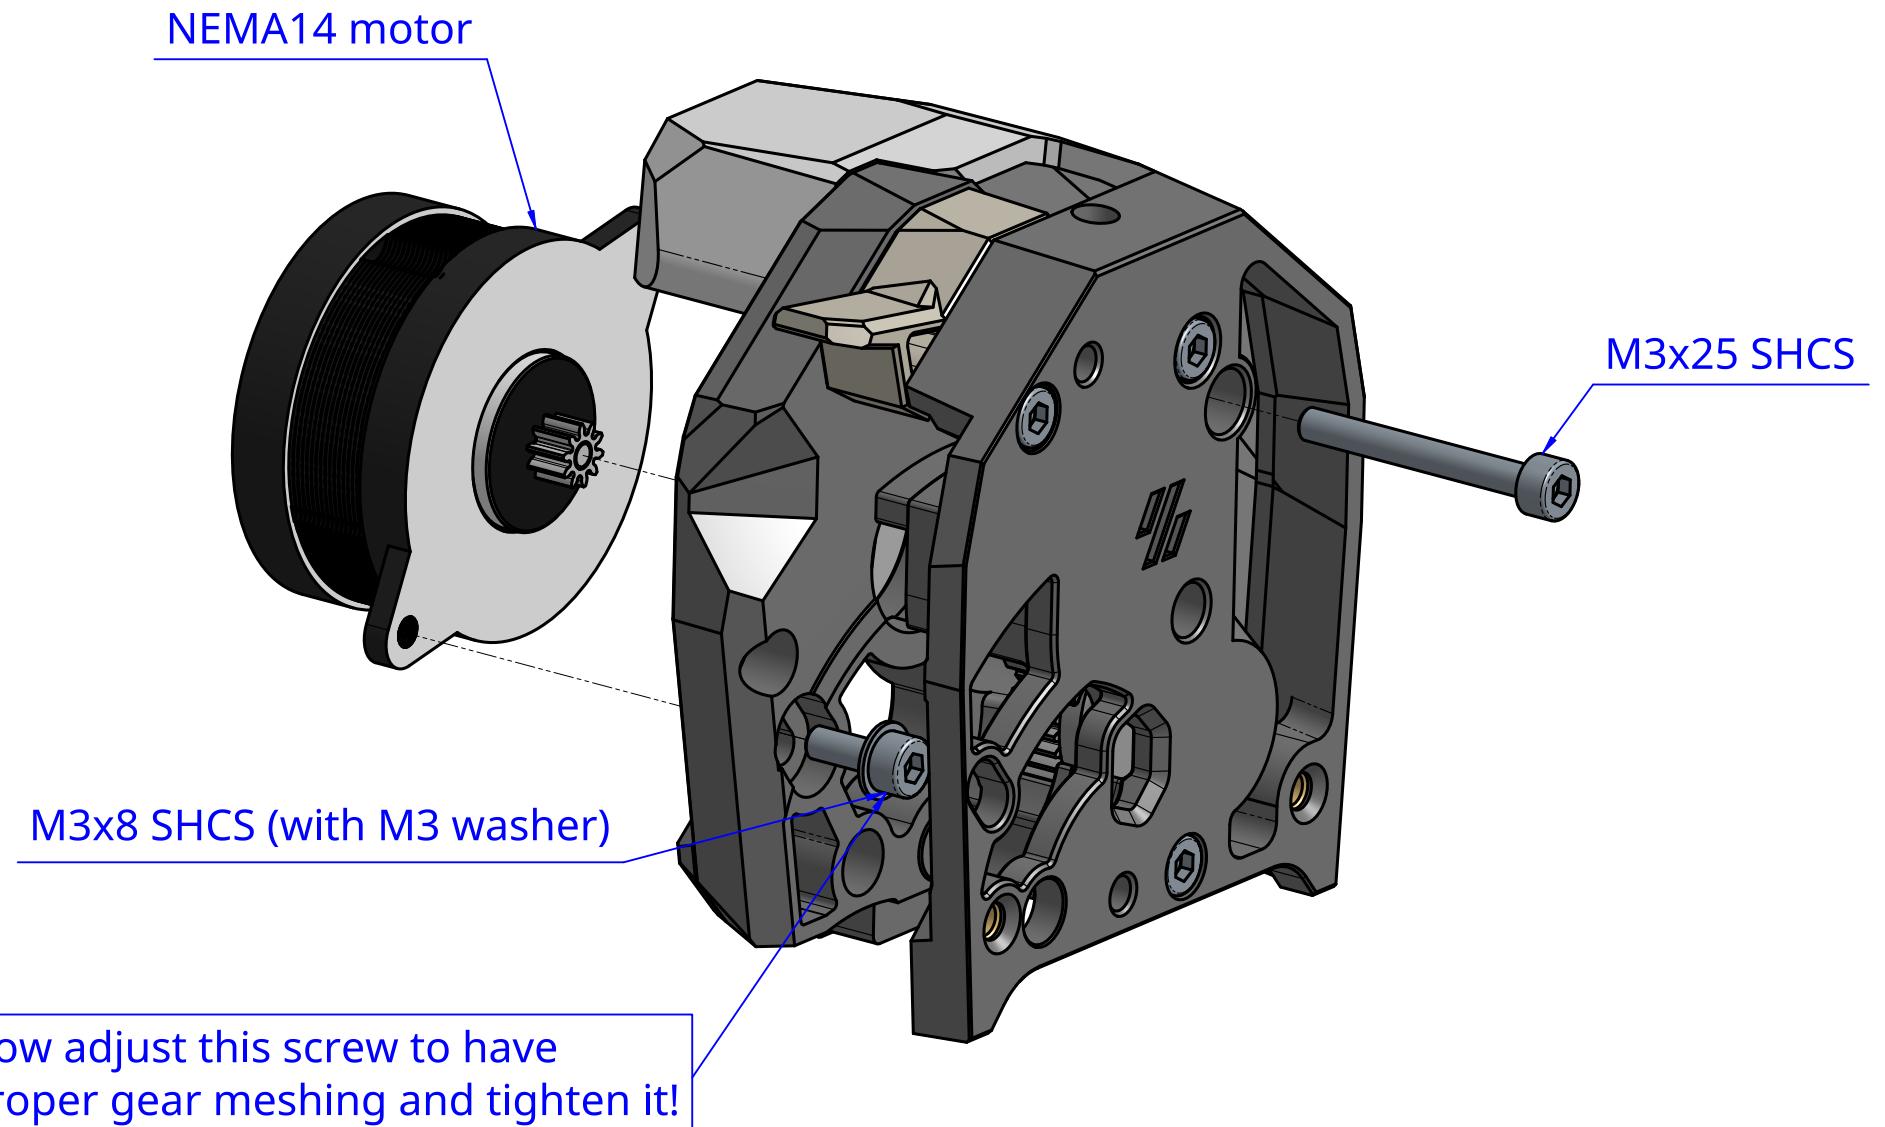

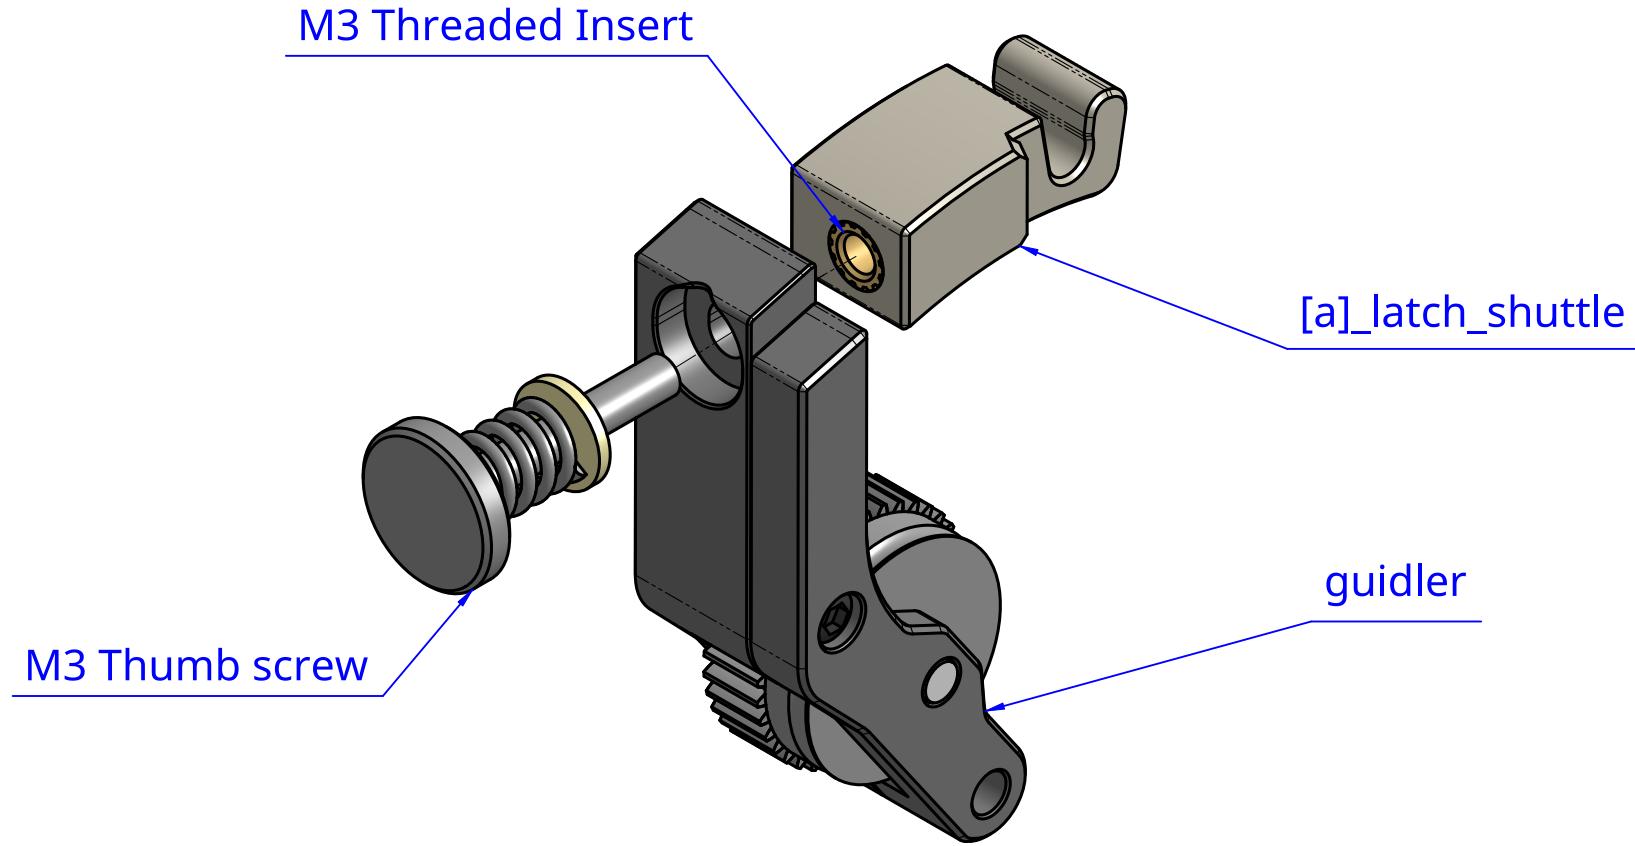

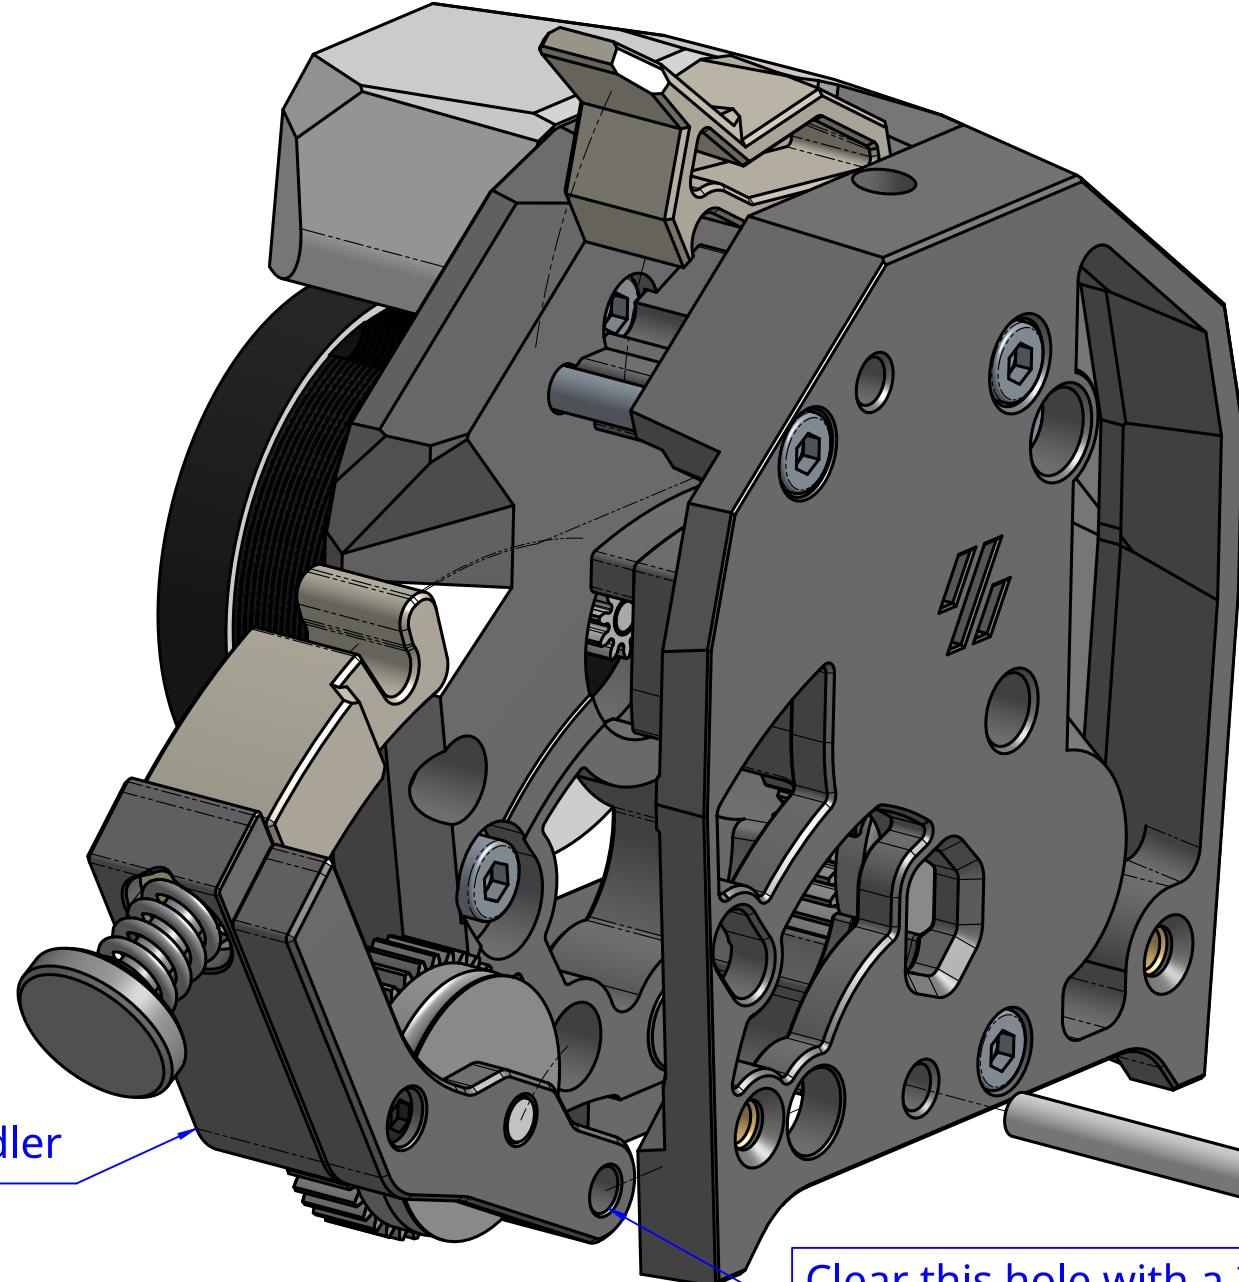

guidler

3mm shaft (24mm)

Clear this hole with a 3mm drill bit or reamer
so the shaft can pass freely

Now your extruder is assembled!

