


## Bed Protection Installation Instructions Read Carefully before Installing Short and long box

Section A Bed protection installation.

- Clean the bedrail surface completely of all dirt and debris before beginning installation.
- 2. Place (3) pieces of two sided tape on the bedrail as shown in illustration A.
- Lightly position the bed protection on the bed rail. Once the bed protection is in the desired location, press down firmly on the taped areas to hold the bed protection in place.
- 4. The bed protection can be mounted by drilling (3) 9/32" holes thru the bed protection and the inside lip of the box, and mounting with 1/4" carriage bolts, washers and nuts. (See illustration B). Some models may have holes punched in the bed protection, if so use those holes as a guide to drill thru.
- 5. The bed protection can also be mounted by drilling (3) 9/32" holes down thru the top of the bed protection and the bedrail and fastening with 1/4" carriage bolts, washers, and nuts. (See illustration C.)

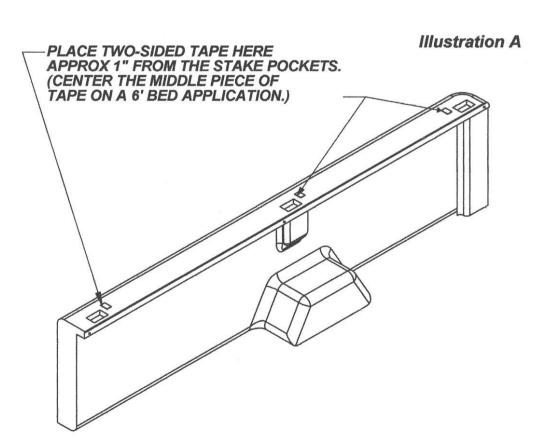


BOI	M BED PROTECTION BRITE & BL	ACK	
PART#	DESCRIPTION	BRITE	BLACK
BED PROTECTION	BED WRAPS OR NON WRAPS	2	2
1100	BOLT PACK	1	
P-0131	BOLT PACK		1
TPO1	DOUBLE SIDED TAPE	6	6
000011CC	WARRANTY CARD	1	1
10292	INSTRUCTION SHEET	1	1

NUMBER	PART	
1	BED PROTECTION	
2	1/4-20 X 1" CARRIAGE BOLT	
3	1/4" HEX NUT	
4	1/4" FLAT WASHER	
5	1/4" LOCK WASHER	

## Illustration B

## Illustration C

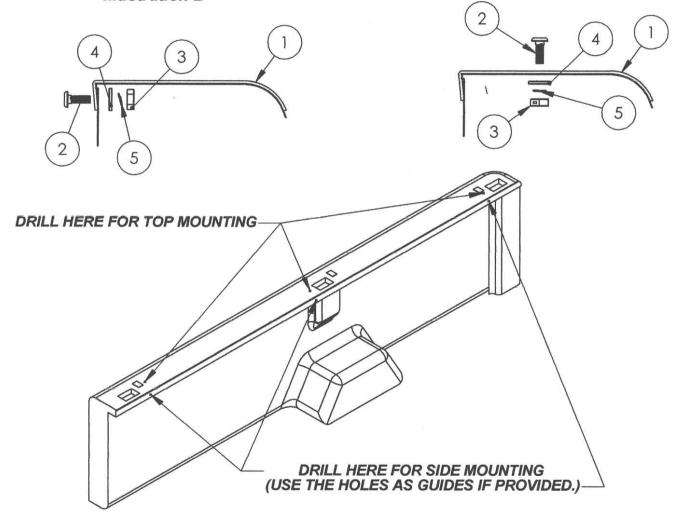



Lund International

800-241-7219 • Visit us at lundinternational.com

@ 2012 Lund International, Inc. All rights reserved. Lund\* and the Lund\* logo are trademarks of Lund International, Inc.