
HOW TO INSTALL MOLDED CARPET


Bucket Seats, 2 WD & 4 WD Floor Shift Truck and Speciality Trucks

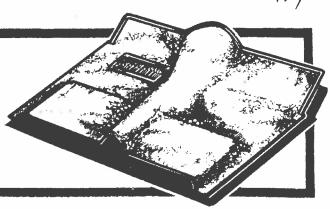

WARNING

Failure to read and follow instruction sheet voids any claims or returns to manufacturer or dealer.

TOOLS

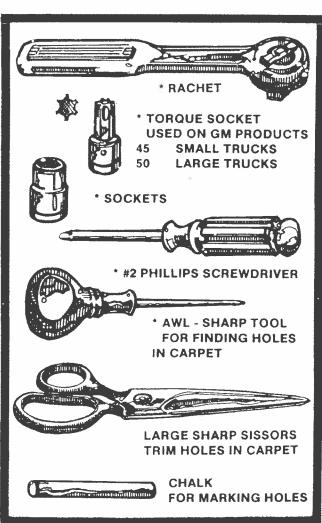

HELPFUL HINTS

If seat is not removed, move back, and if truck is equipped with tilt wheel, tilt up for more working room.

- 1. Slip carpet over floor shifter.
- 2. Slip carpet under brake and gas pedal.
- 3- Work carpet under dash and around kickpanels, then smooth back to seats.
- 4. Many Bolts, such as seat belts need not be removed, carpet may be slit and trimed around. But to achieve an orginal look, remove bolts, install carpet, and replace bolts.

TRIM ADHESIVE OPTIONAL


3M offers spray trim adhesive for bonding carpet and jute pads.

3M General trim adhesive Part 08080


3M 76 high tack adhesive




PARTS REMOVAL

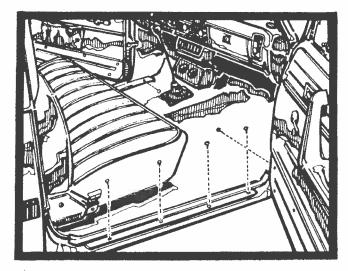


STEP 1Using #2 phillips screwdriver remove door sill plates.

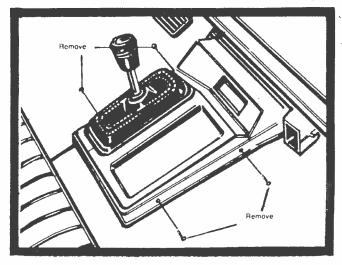


STEP 4Remove shifter console using #2 phillips screwdriver.

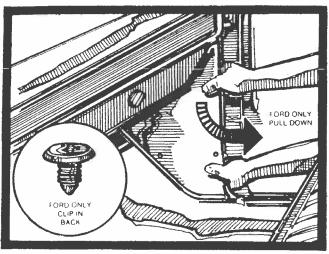


STEP 2Unscrew or carefully unclip kick panel, if truck is not equipped with kick panels move to next step.

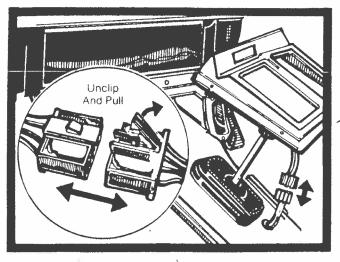


STEP 4a
Diconnect electrical connectors.

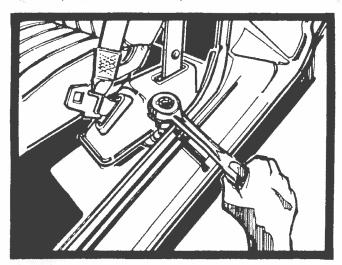

STEP 3Remove outer seat belt harness or carpet can be trimed around harness when installed.

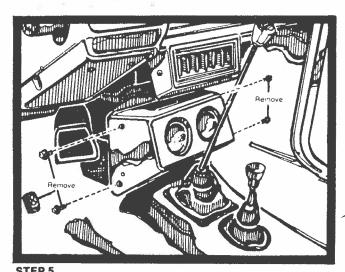


Remove under dash gauge panel, (disconnect electrical connectors see 4a)

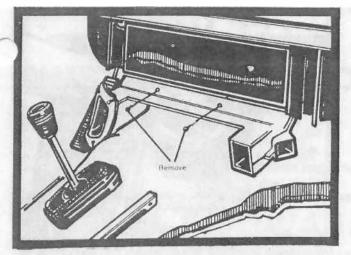


OPTIONAL

Remove A/C, heater vent use phillips screwdriver to remove screws.

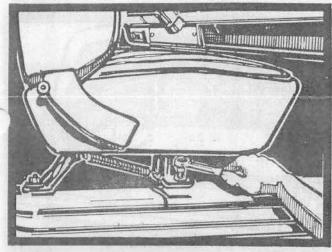


STEP 7

Remove seat boits (4 boits Bench = 8 boits buckets) disconnect electrical connector (see 4a) before removing seats.

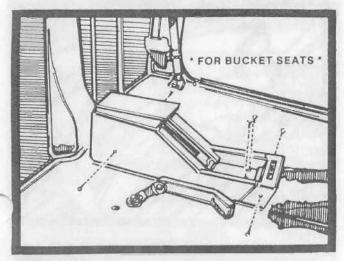

STEP 8


Remove center console using #2 phillips screwdriver or correct socket.

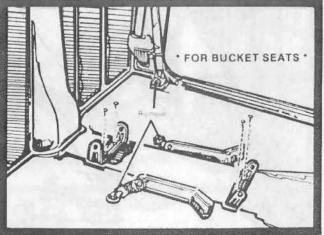

STEP 8a

Remove center console brackets and inner seal belt seat


READY TO INSTALL MOLDED CARPET

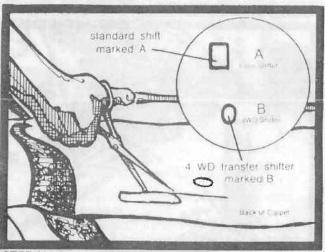

STEP 1


Cut carpet as marked on reverse side, for shifter holes and accelerator,

silver dots show position of seat, belts, and center console

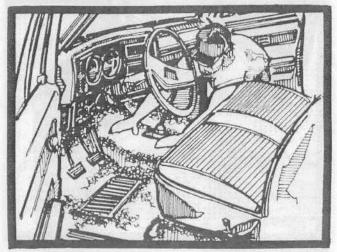

STEP 2

Place moided carpet over existing mat located carpet so it conforms to floor contours in all areas.

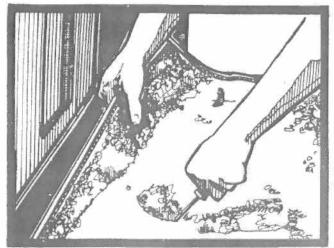


STEP 3


To make holes for bolts pull back carpet align hole with awl by pushing through carpet mark with chalk, and trim with scissors. Make hole for electrical connector

STEP 4

Replace door sills, kick panels, seal belts and other parts removed.

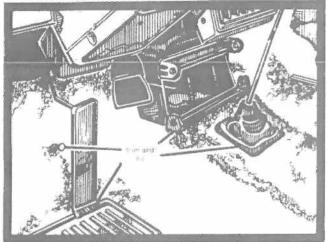


STEP 5 Using scissors trim and fit carpet

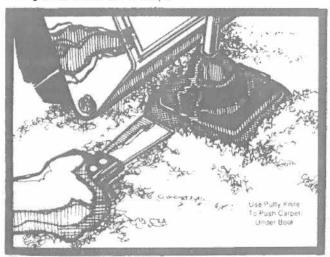

OPTIONAL


Use putty knife to push carpet under boot.

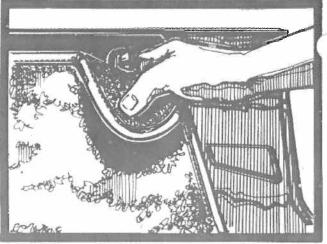


OPTIONAL

Align carpet with kick panels, use the two upper corner mat hold tabs to secure carpet.

INSTALL REAR CARPET FOR SPECIALITY TRUCKS

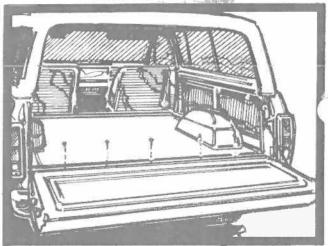

STEP 1 Remove rear sill plate and rear seat.

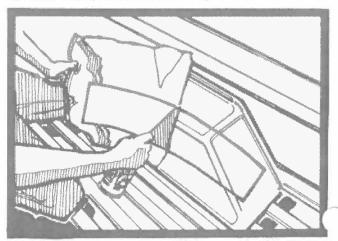

STEP 2

Position rear wheel well carpet. Fold to one side, spray frim adhesive to both carpet and wheel well. Place back to position, fold over to other side and spray and position. Install rear carpet into position, replace rear sill plates and seat