I - Sheet Number VV07 DIP Rev.A

Side Window Deflector

Important Safety Information



- CAUTION Before driving, ensure that the wind deflector is properly secured to vehicle.
- Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.Periodically check all components for tightness.
- Wash only with mild soap & dry with a clean cloth.

Contents - 2 Piece Set

NOTE: Actual product may vary from illustration.












Alcohol Pad x2

Contents - 4 Piece Set












Scotch Brite Pad



Alcohol Pad x4


Tools Required



Putty Knife

Preparation Before Painting / Installation

- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash your vehicle to remove any debris and/or dirt from installation area.
- Dry the installation area with a clean towel.

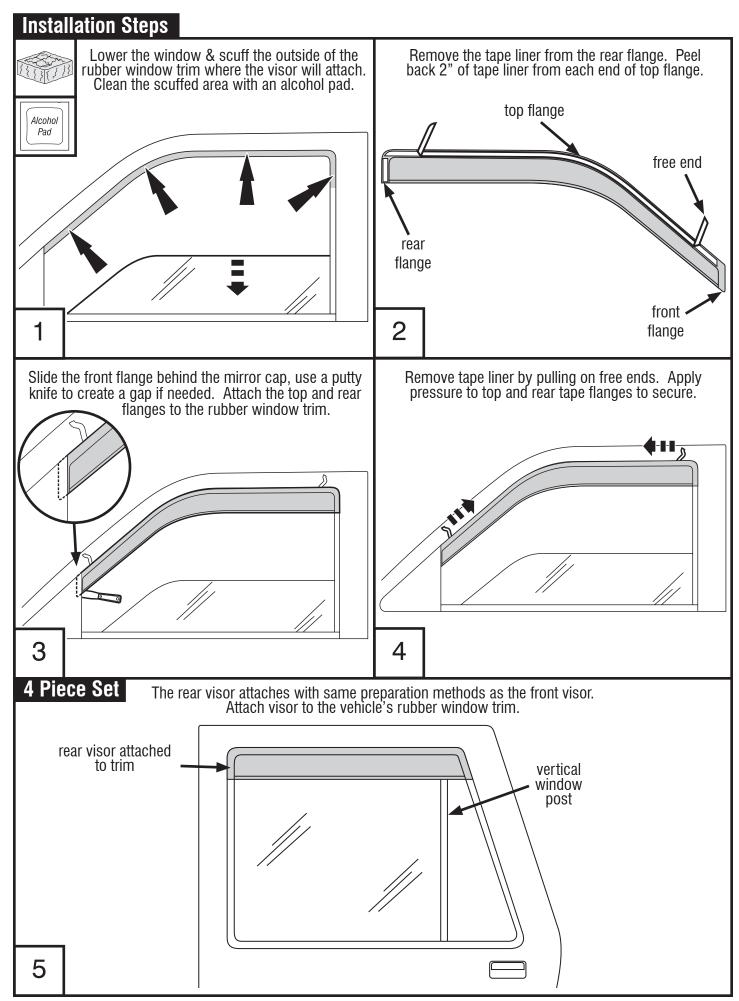

Page 2 of 2