

1-800-328-4843 www.lundinternational.com

## WindJammer Rear Air Deflector INSTALLATION INSTRUCTIONS

Thank you for purchasing one of many quality products manufactured by Lund Industries, Inc. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. For easiest installation and optimal appearance, read all instructions BEFORE beginning installation.

**NOTE:** We suggest that all fitting and positioning be done before painting. This product can be painted using normal auto body techniques and equipment. Lund Industries, Inc. **DOES NOT AND WILL NOT** accept for return or credit any part that has been PAINTED. Please confirm the fit of this part, BEFORE PAINTING. NO EXCEPTIONS TO THIS RETURN POLICY WILL BE MADE.

**STEP 1:** Clean the rear of the vehicle with soapy water and wipe dry with a clean towel. **See FIGURE 1** 

**NOTE:** This product is a tape only installation. The adhesive on the 3M double-sided tape has excellent holding power when installed at 65°F or above. However, if the temperature of the vehicle is below 65°F, installation of this part is not recommended. Temperature requirements only affect installation.


**STEP 2:** Position the WindJammer in the correct location on the rear of the vehicle. Ensure the part is properly aligned with the top and side edges of the hatchback door. Then, indicate the tape location of the WindJammer for reference later. If painting is desired, do so now.


**STEP 3:** Apply the black rubber trim to the rear edge of the part. Next wipe the previously determined tape mounting locations with the alcohol prep pads. Then apply one coat of adhesive promoter onto the same area.


**STEP 4:** Expose approximately 2" of tape from each tape length by peeling back protective liner. **See FIGURE 2** 

**STEP 5:** Place the WindJammer in the previously prepared locations, making sure it aligns with the top and side edges of the hatchback door. Apply light pressure to the exposed 3M double-sided tape flanges to temporarily hold the WindJammer in place. **See FIGURE 3** Carefully lift the hatchback door to ensure proper clearance at the highest open position.

**STEP 6:** When properly positioned, remove the remaining adhesive backing from the WindJammer by pulling on the free ends. Use firm pressure on all tape flanges to ensure proper adhesion to the vehicle. After installation, avoid washing vehicle for at least 12 hours.

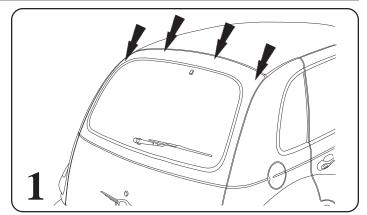

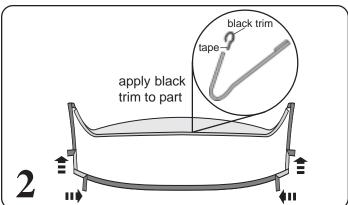

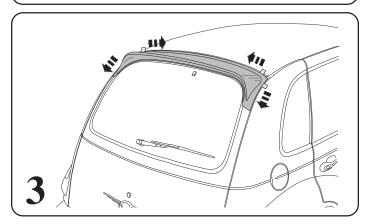

PATENT STATEMENT: It is Lund Industries, Inc.'s policy to protect its creative product designs and utility designs for sunvisors, cabspoilers, rooftop spoilers, hood protectors, grill inserts, etc. by all legal means available, including patents, shape/design trademarks, and brand/product name trademarks. Lund presently owns U. S. patents D273,672; D286,143; D288,309; D288,310; D291,295; D305,017; D308,041; 4,883,139; 4,883,303; 4,929,013; 5,018,779 and Canadian Industrial Design Registrations (RD) 52131 (1983), (RD) 54036 (1985), (RD) 54300 (1985), (RD) 54513 (1985), (RD) 64646 (1989), (RD) 64701 (1989), (RD) 66123 (1990) and Canadian Utility Registration 1,262,252. Other patents are pending. Lund actively enforces it patent and trademark rights and will take action against infringers to protect its interests. Lund, however, solicits and prefers trade cooperation in the advance of infringement.