
I - Sheet Number VV12 DIP Rev.A

## Side Window Deflector

## **Important Safety Information**




- CAUTION Before driving, ensure that the wind deflector is properly secured to vehicle.
- Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.Periodically check all components for tightness.
- Wash only with mild soap & dry with a clean cloth.

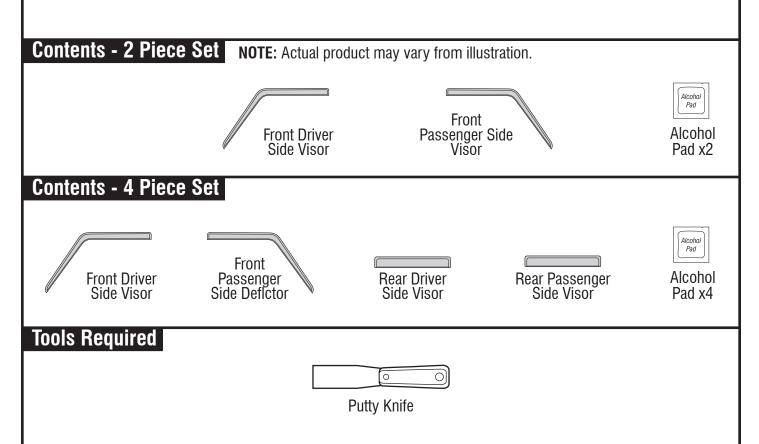

## Preparation Before Painting / Installation

- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash your vehicle to remove any debris and/or dirt from installation area.
- Dry the installation area with a clean towel.

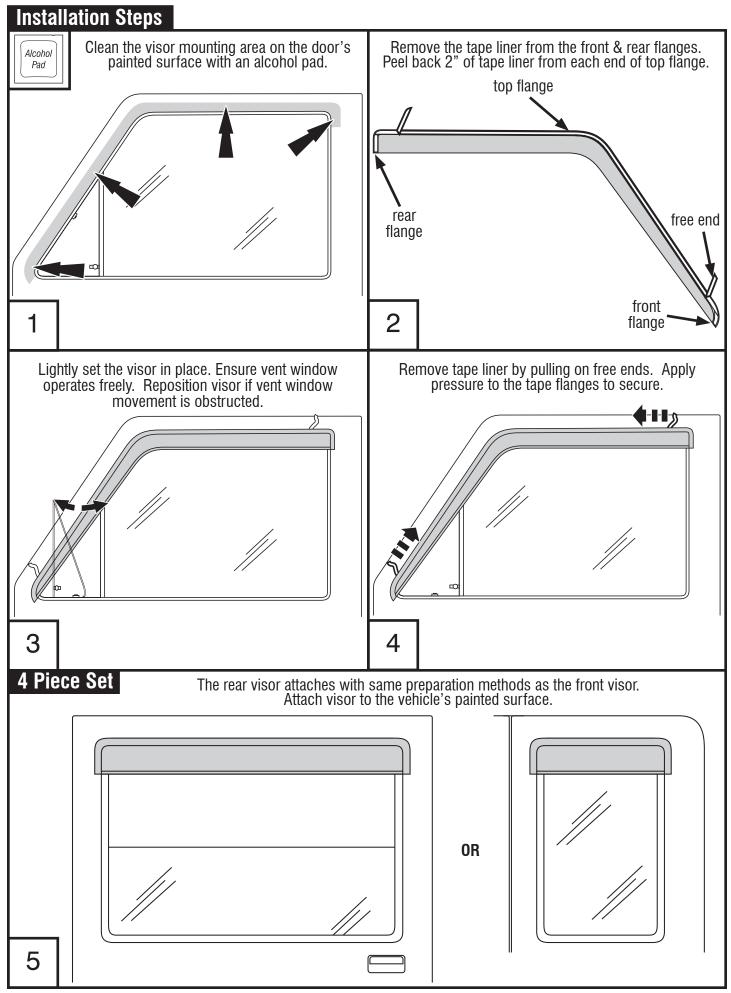

Page 2 of 2