

SUPPLEMENTAL FOR 96-C CHEVY/GMC FULL SIZE VAN


THESE INSTRUCTIONS NEED TO BE READ BEFORE DOING ANY OF THE INSTALLATION OF THE RUNNING BOARDS. THESE INSTRUCTIONS NEED TO BE FOLLOWED CAREFULLY TO INSURE NO DAMAGE OCCURS TO THE FIBERGLASS FENDER.

SECTION A

- Position the reinforcement plate so that it is tucked between the fender and the
 plastic liner. Using the two christmas tree fasteners to center the reinforcement
 plate. Line the bend up in reinforcement plate with inside edge of fender see back
 page.
- Now that you have this positioned where needed take two self drilling screws and fasten it to the inside of the wheel well.

NOTE: <u>DO NOT</u> over tighten any of the fasteners, <u>BE CAREFULL</u> when drilling holes.

- 3. After you have fastened the reinforcement plate to the wheel well, install the stoneguard like usual except for the following. CAREFULLY drill the holes in the stoneguard and the fiberglass fender with 13/64" drill bit. Now take one of the #14x3/4" stoneguard screws and fasten the stoneguard to the fiberglass wheel well lip thru top hole. Make sure not to over tighten.
- 4. Bottom two screws must go into reinforcement plate. After you have drilled the hole with the 13/64" bit, drill the hole out with a ½" drill bit, but only thru the stoneguard and the fiberglass wheel well lip not the reinforcement plate. Fasten also with the normal stoneguard screws making sure not over tighten.
- Now follow the instructions 1 thru 4 to do the passengers side. ILLUSTRATIONS ARE ON BACK.
- Long strap in package is used on drivers side center bracket.

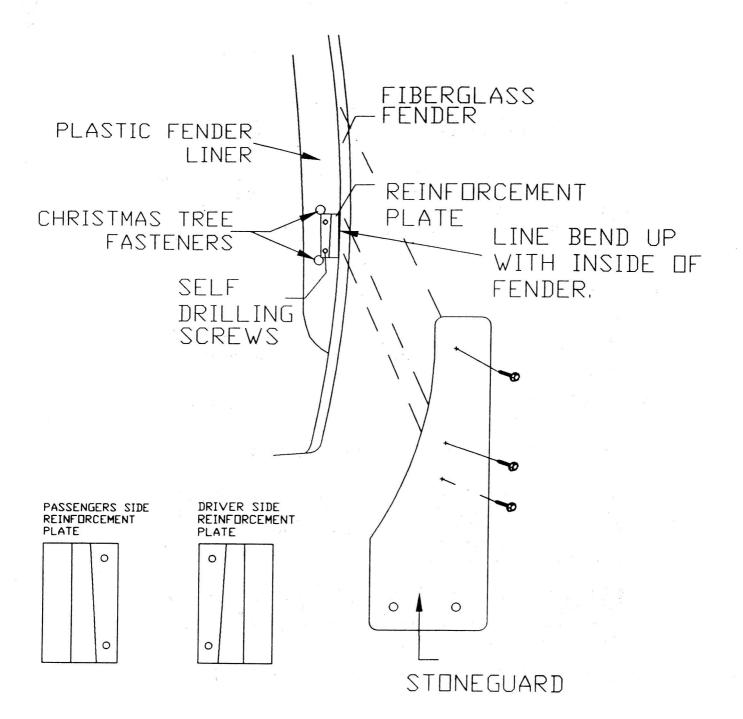

DRIVER SIDE SHOWN



Lund International
800-241-7219 • Visit us at lundinternational.com
© 2012 Lund International, Inc. All rights reserved.
Lund® and the Lund® logo are trademarks of Lund International, Inc.