I - Sheet Number VV13 DIP Rev.A


## Side Window Deflector

## **Important Safety Information**



- CAUTION Before driving, ensure that the wind deflector is properly secured to vehicle.
- Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.
- Wash only with mild soap & dry with a clean cloth.


**CAUTION: READ BEFORE USING SURFACE PREP -** Avoid contact with skin and wear appropriate gloves when handling this material. Use in well-ventilated area with sufficient ventilation to disperse vapors from promotor. Avoid prolonged breathing of vapors. If contact is made with material, flush area with large amounts of water. If irritation persists, get immediate medical attention. **USE SURFACE PREP ON RUBBER ONLY** 

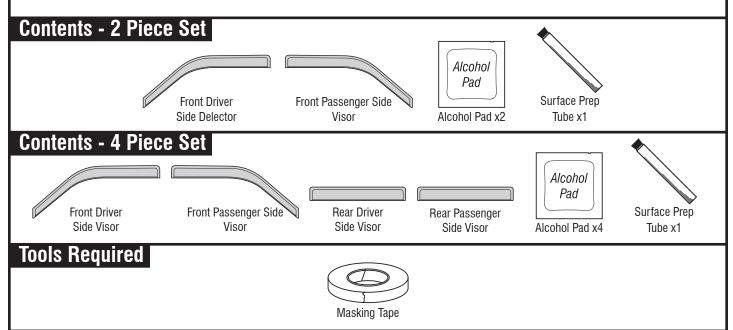


## **Preparation Before Painting / Installation**

- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash your vehicle to remove any debris and/or dirt from installation area.
- Dry the installation area with a clean towel.

## **Installation Steps NOTE:** Actual application may vary slightly from illustrations.

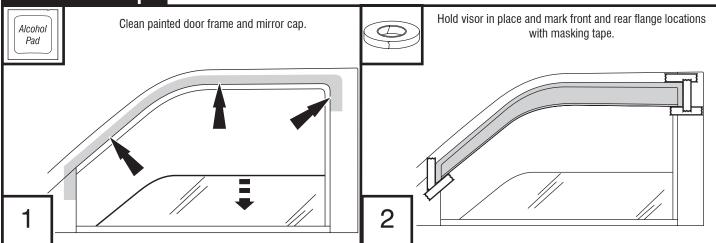

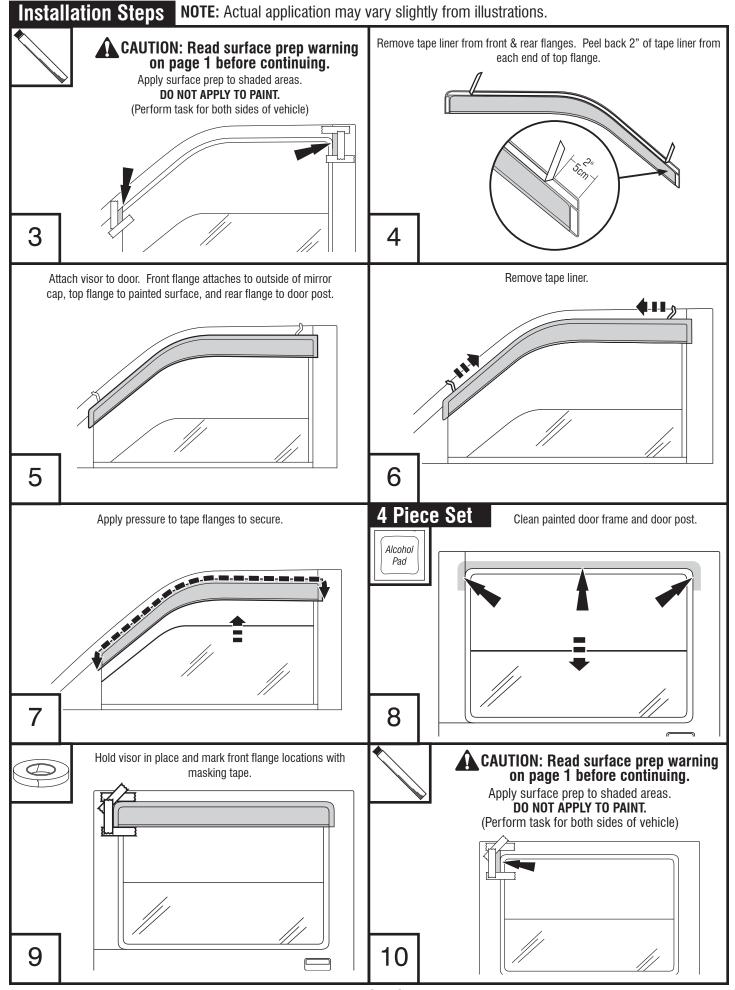

Page 2 of 3

