

## Bed Protection Installation Instructions


- Place bed protection on top of bed rail; adjust position for best appearance. See figure A.
- 2. Mark top of bed protection prior to drilling with 9/32" drill bit. See figure B for locations.
- Place and adhere foam spacer to bottom side of bed protection at approximate location shown in figure A and B.
- 4. Secure with 1/4" fasteners. See figure C.

## TOOLS NEEDED

ELECTRIC DRILL 1/2" DEEP WELL SOCKET AND RATCHET 19/32" DRILL BIT

## **BED PROTECTION PARTS LIST**

ONE LEFT BED PROTECTOR
ONE RIGHT BED PROTECTOR
ONE INSTRUCTION SHEET
SIX "CARRIAGE BOLTS AND NUTS
SIX PIECES OF FOAM SPACER

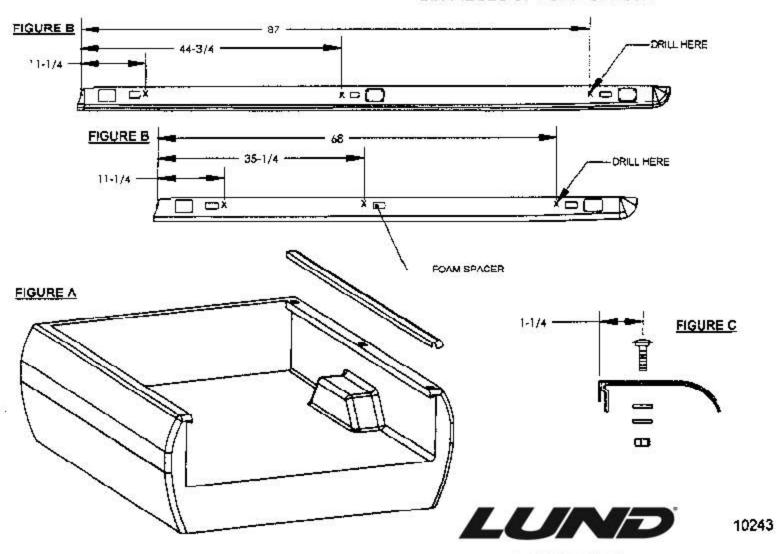

Lund International 800-241-7219 • Visit us at lundinternational.com

© 2012 Lund International, Inc. All rights reserved. Lund\* and the Lund\* logo are trademarks of Lund International, Inc.