


# **SNAPLESS TONNEAU INSTALLATION:**

Place tan lip of item **A** under the upper lip of item **C**.

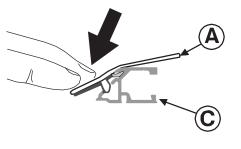


## STEP 2.

STEP 1.

Rotate item **A** retainer downward the tension of the cover will fully engage item **A** into item **C**.

#### NOTE:

Do this step on all three sides before proceeding to Step 3.

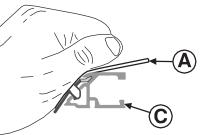

## STEP 3.

Using palm pressure, glide hand down all three sides to lock item **A** into item **C**.

To disengage cover, pull upward and out starting at a rear corner.

## **CARE:**

**Do not** use harsh detergents.

Use only soap and water for the cleaning of your cover.

Pressure car washes are okay as long as you hold the wand no closer than two feet from the cover

**Do not** apply any protectants to the cover.

**Do not** drive with your cover partially attached. This may cause damage to your truck and your cover.

**Always** remove bows when cover is not in use.

## **QUESTIONS:**

CALL: 1800-328-9514 TO REACH CUSTOMER SERVICE.