

Quick and Easy Installation Instructions

CONTENTS:

- (2) Aeroshades
- (2) alcohol pads
- (1) adhesive promoter
- (1) instruction sheet

IMPORTANT: Read all instructions carefully before beginning installation. The ideal installation temperature is between 65°-110° F.

• • • • • • • • Helpful Hint

A trial fit is recommended to ensure proper positioning, since installing and then removing the Aeroshade will degrade the adhesive performance of the tape.

STEP 1: Clean the window/trim of the vehicle where the Aeroshade will mount with the alcohol pad, then wipe dry with a clean, soft cloth.

STEP 2: If painting the Aeroshade, an acrylic-based paint is recommended per manufacturer's instructions.

STEP 3: Carefully apply adhesive promoter to the window trim where the Aeroshade will attach. See **FUGIRE 2**. Remove any excess adhesive promotor with a clean wet rag before continuing.


STEP 4: To reduce the risk of tape contamination due to improper positioning, expose only 2" of each tape length at one time by peeling back red tape liner.


STEP 5: Align the Aeroshade with the previously cleaned window/trim. Be sure the part is centered along the horizontal and vertical surfaces. Gently press the exposed areas of the tape against the side window/trim and verify position. See **FUGIRE 3**.


STEP 6: With the Aeroshade in its final position, remove the remainder of the tape liner by pulling on the free ends. Press firmly along the flanges of the Aeroshade to ensure proper adhesion of the tape to the window/trim.

Repeat **STEPS 1-6** for opposite side.

CLEANING: Aeroshades should be cleaned periodically with a mild liquid soap or plastic cleaner. Solvents or cleaners not intended for plastic may cause fading, fogging, or scratches to the surface and should not be used. A nonabrasive wax may be applied for increased protection.

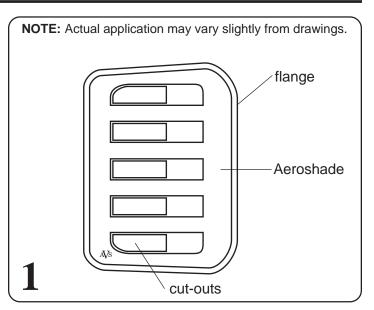

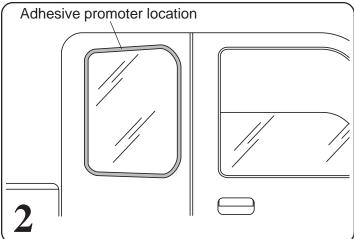

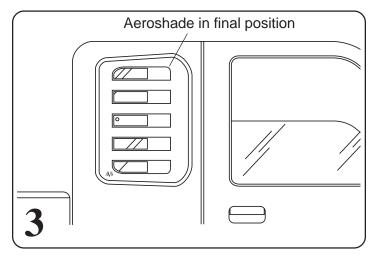



CONTENIDO:

- (2) Aeroshades
- (2) almohadillas con alcohol
- (1) hoja de instrucciones

IMPORTANTE: Lea todas las instrucciones cuidadosamente antes de comenzar la instalación. La temperatura ideal para instalación es entre 65°-110°F (18°-43°C).

• • • • • • • • Un consejo útil

Se recomienda probar previamente si la pieza encaja correctamente para asegurar su colocación adecuada puesto que retirarla una vez instalada degradará la adherencia de la cinta.

PASO 1: Utilice la almohadilla con alcohol para limpiar la ventanilla del vehículo donde se instalará el Aeroshade, luego seque con un paño limpio y suave.

PASO 2: Si se pinta el Aeroshade, las instrucciones del fabricante recomiendan una pintura acrílica.

PASO 3: Para reducir el riesgo de contaminación a la cinta adhesiva debido a colocación incorrecta, primero sólo exponga 2" (5 cm) de cada pedazo de cinta despegando el protector rojo.

PASO 4: Alinee el Aeroshade con la ventanilla limpia. Asegúrese de centralizar la pieza con las superficies horizontales y verticales. Suavemente presione las áreas expuestas de la cinta contra la ventanilla y verifique su colocación.

PASO 5: Con el Aeroshade en posición final, remueva el protector de cinta halándolo desde los extremos sueltos. Presione firmemente a lo largo de los rebordes del Aeroshade para asegurar buena adhesión de la cinta a la ventanilla.

Repita los PASOS 1-5 para el lado opuesto.

LIMPIEZA: Los Aeroshades deben limpiarse periódicamente con jabón líquido suave o con limpiador para plásticos. Solventes o limpiadores no aptos para uso en plástico podrían causar descolorimiento, nubosidad, o arañazos en la superficie y no deben usarse. Para mayor protección s e puede aplicar una cera no abrasiva.

