Inspection After Installation

1. After installation is complete, confirm proper operation and that all clamps are tightened.

Care and Cleaning

- 1. Wash only with mild soap & dry with a clean cloth.
- 2. Do not use automatic "brush style" car washes.
- 3. Do not use cleaning solvents of any kind.
- Pressure car washes are okay as long as you hold the wand no closer than two feet from the cover.
- 5. We recommend the same quality products normally used for vinyl tops to keep your cover clean. When using a protectant, be sure that it is water based.
- 6. Periodically check clamps for shifting due to road vibrations.
- 7. Do not use any part of this tonneau as a tie down.



Do not drive with the cover partially attached. This may cause damage to your truck and your cover.

Congratulations!

You have purchased one of the many quality Lund® branded products offered by Lund International, Inc. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.



Lund International, Lund Accessories Division
300 Horizon Drive
Suwanee, GA 30024
800-328-5863 • Fax 800-782-5448 • Visit us at lundinternational.com



© 2006 Lund International, Inc. All rights reserved. Lund ® and the Lund ® logo are trademarks of Lund International, Inc.



LUND

Genesis™ Snap / Seal & Peel Tonneau

For proper installation and best possible fit, please read all instructions BEFORE you begin.

For technical assistance or to obtain missing parts, please call Customer Relations at 1-800-328-5863.

NOTE: If installing on truck with bedliner, see step 10 before installing.

Contents



OR



(A) Front rail with cover attached


(A) Front rail with cover attached







B Driver Side Rail



D Bows

3X Short Box 4X Long Box



4X Supercrew



(H) Corner Pads

Tools Required

(E) Rear Rail



(F) Clamp Assembly





(G) Allen Wrench



Important Safety Information

▲ WARNING


- •Do not drive with the cover partially attached. This may cause damage to your truck and your cover.
- •Do not use any part of this tonneau as a tie down.
- •Periodically check clamps for shifting due to road vibrations.
- •Pressure car washes are okay as long as you hold the wand no closer than two feet from the cover.
- •Do not use cleaning solvents of any kind.
- •Do Not use automatic "brush style" car washes.

Preparation Before Installation


- · Wash the upper rail surfaces of the truck bed.
- Be sure to completely dry the upper surfaces of your truck bed before installing your rails.

PAGE 6 of 6

P/N 1703099 Installation Steps Rev.1

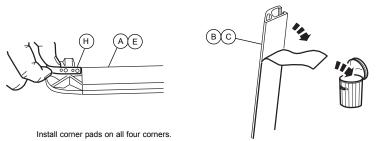


Remove and discard the protective paper liner from the underside of the tonneau rails.

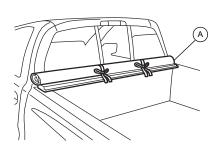



Place the front rail and cover assembly on the top of the truck bed next to the cab. The cover has tie straps to keep it from being damaged when bulk hauling.

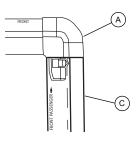



Connect the driver and passenger rails to the front rail. The arrow points to the front of the truck. Slide the rail over molded leg of the front rail corner. You will hear a click sound when rail is in the


With tailgate closed, install the rear rail onto the side rails.


2


3

PAGE 2 of 6

P/N 1703099 Installation Steps Rev.1 Start at corners and fasten cover to tonneau rails.

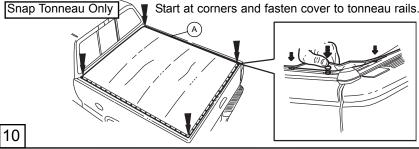





Place tan tip of the cover retainer under the

NOTE: It is recommended to complete this step on all three sides before proceeding to the next step.

Using palm pressure, glide hand down the length of each tonneau rail to lock the cover retainer into the tonneau rail.

To disengage cover, pull upward and out, starting at a corner end.


▲ CAUTION: USE SAFETY GLASSES WHEN CUTTING


11


liner at each

clamp location.





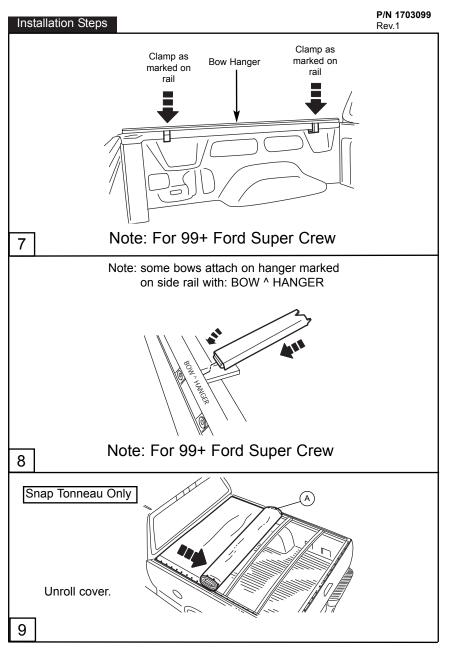

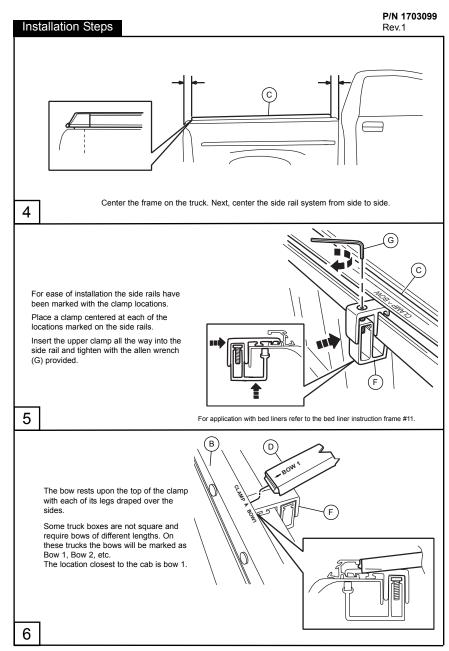

PAGE 4 of 6

PAGE 3 of 6