




NO DRILL HOOD PROTECTOR INSTALLATION INSTRUCTIONS

NOTE: These instructions are for the 2010-Current model years ONLY! See below for 2009 and prior years.

- Raise the hood and from underneath disconnect the metal hood lock rod attached to the hood lock mechanism. (1)
- 2 Remove the 10 bolts that hold the grill to the hood. 4 along the top edge and 3 on each of the side brackets.
- 3 Slowly lower the hood and carefully remove the grill by prying it away from the hood using the tape wrapped flat head screwdriver, or a plastic pry tool if available. (2)
- (4) Clean off and dirt that may be present on the hood and insert the 2 grommet nuts into the 2 holes in the hood that line up with the holes of the large mounting tabs of the hood protector.
- 6 Align the 2 holes in the hood protector to the holes in the hood with the grommet nuts and attach it with screws and washers
- 6 Carefully lower the hood and re-install the grill. Ensure that the hood protector tabs are in between the grill and the hood.
- Re-attach the hood with the previously removed 10 bolts on the backside of the grill. Re-attach the hood lock mechanism. Re-attach the plastic trim piece by sliding the top side clips in first, then snapping the remaining clips into place. (3)

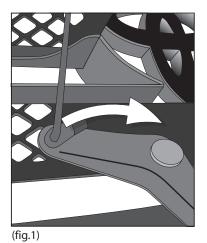

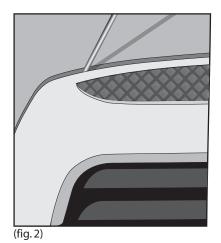

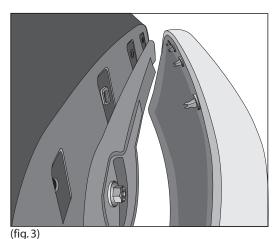

KIT CONTAINS:

2 SCREWS

2 WASHERS TOOLS NEEDED:

HOOD PROTECTOR


2 PLASTIC INSERTS

10mm NUT DRIVER FLAT SCREWDRIVER

MASKING TAPE

NOTE: These instructions are for 2009 and prior years.

- 1 Carefully pry off the long plastic trim piece on the grill to expose the 5 bolts underneath using a flat head screwdriver with the tip wrapped in masking tape. (4)
- With the trim piece removed remove the 5 bolts with a 10mm nut driver.
- 3 Raise the hood and from underneath disconnect the metal hood lock rod attached to the hood lock mechanism. (1)
- Remove the 10 remaining bolts that hold the grill to the hood. 4 along the top edge and 3 on each of the side brackets.
- Slowly lower the hood and carefully remove the grill by prying it away from the hood using the tape wrapped flat head screwdriver.

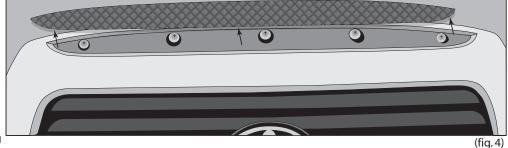

- (6) Clean off and dirt that may be present on the hood and insert the 2 grommet nuts into the 2 holes in the hood that line up with the holes of the large mounting tabs of the hood protector.
- Align the 2 holes in the hood protector to the holes in the hood with the grommet nuts and attach it with screws and washers
- **3** Carefully lower the hood and re-install the grill. Ensure that the hood protector tabs are in between the grill and the hood.
- **3** Re-attach the hood with the previously remove 5 bolts under the plastic trim piece and the 10 bolts on the backside of the grill. Re-attach the hood lock mechanism. Re-attach the plastic trim piece by sliding the top side clips in first, then snapping the remaining clips into place.



CLEANING: USE ONLY SOAPY WATER AND A SOFT CLOTH, NEVER USE PAPER TOWELS, PETROLEUM PRODUCTS OR SOLVENTS.