


Position tool box on top of pickup box in desired location. Use 3 carriage bolts thru bottom of tool box and top of pickup box. Position support legs, fasten thru floor with #14 x 3/4 sheet metal screw. Bolt into tool box with carriage bolts.

*Note to keep full use of pickup bed position legs flush with wheel tubs.

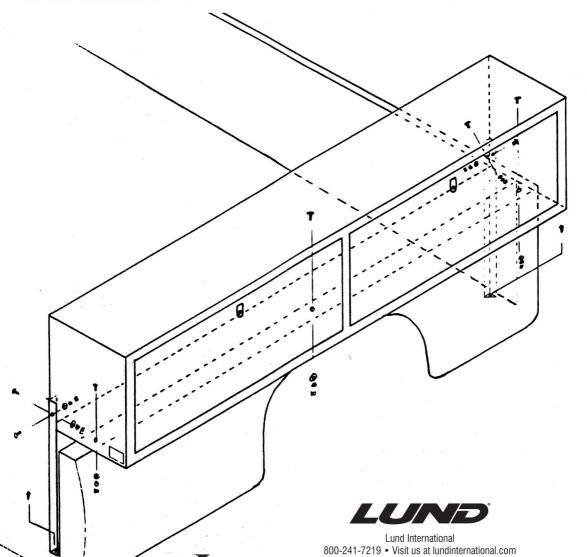

© 2012 Lund International, Inc. All rights reserved.

Lund® and the Lund® logo are trademarks of Lund International, Inc.

LUND