

# ASSEMBLY MANUAL

# RANGER SPLASH

1703075

## STEP 1

1

Be sure all of the parts are in the box:

- (1) Front Rail w/cover, corners and snaps
- (1) Rear Rail w/corners and snaps
- (2) Side Rails w/snaps
- (2) Bows
- (4) Small Brackets (w/two tappered ends)
- (4) Small Brackets (w/one tappered end)
- (8) Silver Spacers w/nuts and bolts
- (1) 5/16" Allen Wrench
- (4) Thumb Screws w/nuts
- (2) Extra Snaps
- (2) Extra Rubber Bumpers



FIG. 2



FIG. 3

# STEP 4


Insert the thumb screws into the corner pieces of the end rails as shown in FIGURE 3.

# STEP 5

Insert the end rail into the side rails as shown in FIG-URE 4. Tighten the thumb screws to fasten the side and rear rails together.

# STEP 2

Remove the paper backing from the side rails as shown in FIGURE 1. (VERY IMPORTANT: FAILURE TO REMOVE THE PAPER MAY CAUSE DAMAGE TO THE PICKUP'S BED SURFACE.)

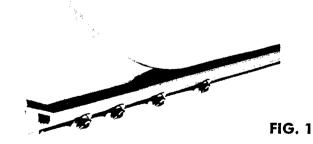

#### STEP 3

Lay the side rails on the pickup bed. (NOTE: THE RAILS ARE MARKED DRIVER AND PASSENGER SIDE.) Disassemble the spacer assemblies as shown in FIGURE 2. Insert 4 nuts from the spacer assemblies in each side rail and slide to match "BRACKET \* PLACEMENT" on the rails.

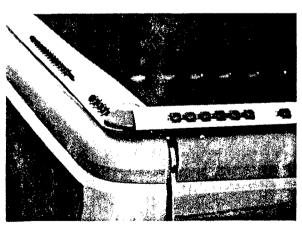


FIG. 4



# STEP 6

To insure proper installation, adjust the rear rail so it most closely resembles FIGURE 5.

FIG. 5

## STEP 7

Loosen the bolts on the brackets as shown in FIGURE 6. Attach the brackets to the bed where the side rails are




marked "BRACKET\* PLACEMENT." The small brackets w/two tappered ends attach at the front and rear marks. The other brackets attach at the two centermarks.

FIG. 6

# STEP 8

Position the spacers between the side rails and brackets, foam tape down. Insert the bolts through the brackets

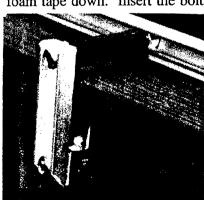

and spacers and into the nuts. Once you have started all the bolts, check to see that the rear rail is still in the proper position. Then tighten all of the bolts as shown in FIGURE 7.

FIG. 7

#### STEP 9

Slide the unnotched end of the bow over the head of the top bolt of one of the middle brackets. Drop the notched end of the bow over the head of the top bolt on the opposite side as shown in FIGURE 8.. Slide the lock located on the bottom side of the bow into place. Repeat the same process with the remaining bow.

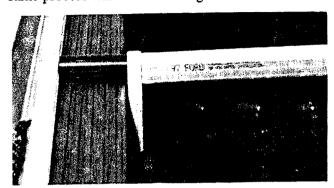


FIG. 8

# STEP 10

Unroll the cover from back to front. Insert the two remaining thumb screws into the corners as done in STEP 4. Insert the front rail into the side rails. (VERY IMPORTANT: SNAP THE TWO SNAPS AT ALL FOUR CORNERS FIRST.) Snap the sides then the rear last. Now your installation is complete. (NOTE: ANY WRINKLES IN THE COVER WILL BE GONE AFTER A FEW DAYS IN THE SUN.)

#### STEP 11

When using the tie down straps, roll the cover forward.



Then unsnap the tie downs from the front rail as shown in FIG-URE 9. Loop the strap over the cover, then snap to the front rail as shown in FIG-URE 10.

FIG. 9