



SUPPLEMENTAL INSTRUCTIONS 1995 Chevy • Astro • Safari Vans

- 1. Remove the three fasteners from the front wheel well so your stoneguard will fit flush with the wheel well. See picture #1.
- 2. Running board is notched at one end to accommodate for the plastic molded mud flap.

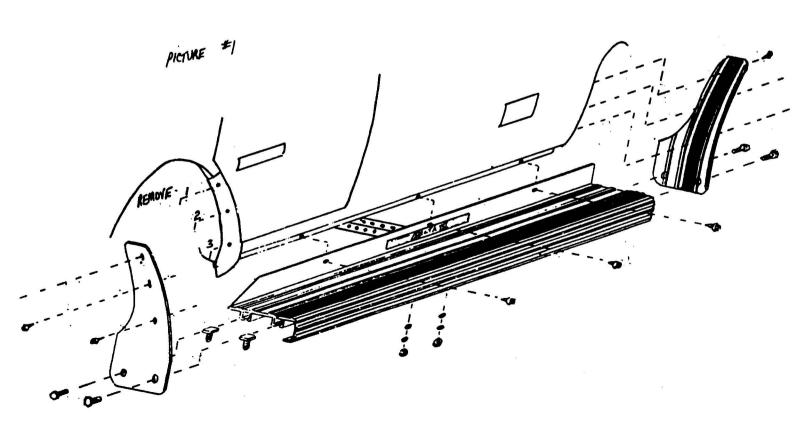

Before installing running board remove plastic inner wheel well liner from front wheel well.

- Now holding the bracket as shown in illustration, slide it forward until it is against the cladding. Clamp bracket to pinch weld.
- Now drill two 5/16" holes through pinch weld and bracket as shown in illustration. Bolt fast with 5/16" fasteners.
- Once bracket is fastened to pinch weld take either a grease pencil or tape and mark where bracket is positioned. Reinstall inner wheel well liner.
- 5. Now follow instructions for installing running boards making sure when you drill the holes to mount front stoneguard to the wheel well lip that you hit the bracket. You will need to drill 3/16" holes through the bracket for clearance when installing screws. Install two screws through this bracket.

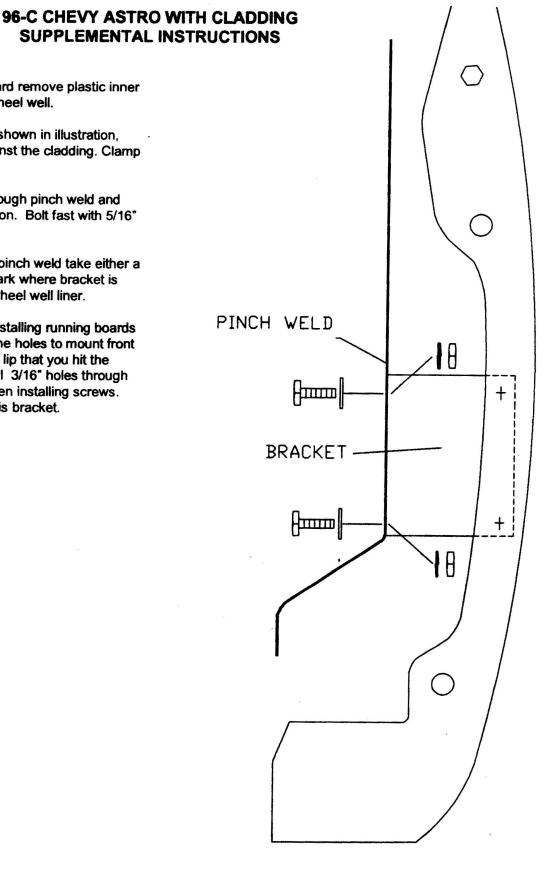



Lund International
800-241-7219 • Visit us at lundinternational.com
© 2012 Lund International, Inc. All rights reserved.
Lund® and the Lund® logo are trademarks of Lund International, Inc.