

## **Installation Steps, Floor Mats**

## Illustration A

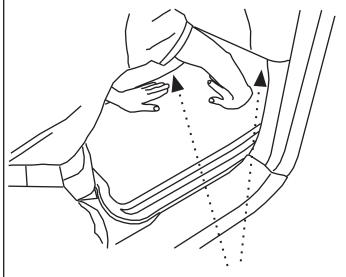

For Catch-All fronts: Align the part so that it is snug up against the center tunnel and front foot area.

## Illustration B

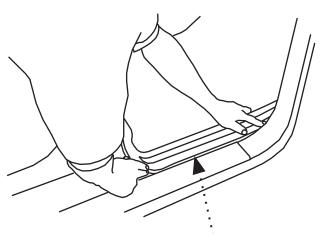

For Catch-All fronts: Make sure that the part is aligned evenly with the door sill.

1 Place the Catch-Alls in your vehicle and position for best fit (see illustrations "A" and "B").



Press floor mats into place, rubbing over areas with hook/loop pads. Driver side front mats attach to factory floor hooks.