




Please read instructions before beginning installation.

- Position bed protectors on truck for best appearance.
- Clean bed protector and bed where double face tape is to be applied. Apply tape to the front, center, and back of the protector.
- 3. Spacer is used on rear of protector to keep protector close to the outside of the bed. Position spacer flush with tailgate notch on rear of the bed protector. Drill through protector, spacer, and the bed, secure with 1/4 x 1 carriage bolts, nuts, and washers. Use three bolts per side.
- 4. Bed protectors may also be bolted through top as shown. Spacers and double face tape are not needed when bolting through top of the bed protectors.

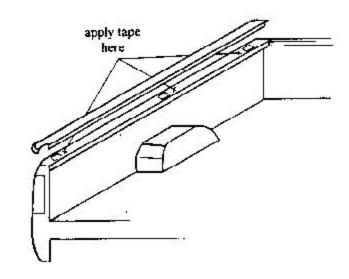



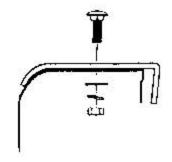



#10127

Lund International
800-241-7219 • Visit us at lundinternational.com
© 2012 Lund International, Inc. All rights reserved.
Lund* and the Lund* logo are trademarks of Lund International, Inc.